



# **BrainStem Reference Manual**

***Release 2.12.1***

**Acroname, Inc.**

**Feb 11, 2026**





<b>1</b>	<b>Devices</b>	<b>1</b>
1.1	USBHub3p	2
1.1.1	Quick Start Guide	2
1.1.2	Basic Example	3
1.1.3	Indicators and Connections	5
1.1.4	Programming Interface	6
1.1.5	USBHub3+ Module Entities	7
1.2	USBHub3c	24
1.2.1	Quick Start Guide	24
1.2.2	Basic Example	26
1.2.3	Indicators and Connections	27
1.2.4	Programming Interface	30
1.2.5	USBHub3c Module Entities	35
1.2.6	USBHub3c Software Features	59
1.3	USBHub2x4	77
1.3.1	Quick Start Guide	77
1.3.2	Basic Example	78
1.3.3	Indicators and Connections	81
1.3.4	Programming Interface	82
1.3.5	USBHub2x4 Module Entities	83
1.4	USB-C-Switch Pro	98
1.4.1	Quick Start Guide	98
1.4.2	Functionality	99
1.4.3	Indicators and Connections	104
1.4.4	Software Control	106
1.4.5	USB-C-Switch Pro Software Features	109
1.4.6	USB-C-Switch Pro Module Entities	115
1.4.7	USB-C-Switch Pro Cabling Guide	134
1.5	USB-C-Switch	138
1.5.1	Quick Start Guide	138
1.5.2	Basic Example	138
1.5.3	Indicators and Connections	141
1.5.4	Programming Interface	142
1.5.5	USB-C-Switch Module Entities	146
1.6	USBExt3c	159
1.6.1	Quick Start Guide	159
1.6.2	Functionality	160

1.6.3	Indicators and Connections . . . . .	164
1.6.4	USBExt3c Software Features . . . . .	166
1.6.5	USBExt3c Module Entities . . . . .	178
1.7	MTM Products . . . . .	201
1.7.1	MTM-Relay . . . . .	201
1.7.2	MTM-DAQ-2 . . . . .	213
1.7.3	MTM-PM-1 . . . . .	227
1.7.4	MTM-Load-1 . . . . .	242
1.7.5	MTM-IO-Serial . . . . .	257
1.7.6	MTM-EtherStem . . . . .	281
1.7.7	MTM-USBStem . . . . .	297
<b>2</b>	<b>Software</b>	<b>315</b>
2.1	HubTool . . . . .	315
2.1.1	What can it do? . . . . .	316
2.1.2	Which Acraname devices work with HubTool? . . . . .	316
2.1.3	Host system requirements . . . . .	317
2.1.4	Installation . . . . .	317
2.1.5	Usage . . . . .	317
2.1.6	Connecting devices . . . . .	318
2.1.7	Control devices on remote hosts . . . . .	319
2.1.8	Updating device firmware . . . . .	320
2.1.9	Device-specific interfaces . . . . .	320
2.2	BrainD . . . . .	418
2.2.1	Installation . . . . .	418
2.2.2	Quick Start Guide . . . . .	420
2.2.3	Usage . . . . .	422
2.2.4	Security . . . . .	424
2.2.5	Configuration . . . . .	425
2.2.6	Logging . . . . .	429
2.2.7	Platform Specific Considerations . . . . .	429
2.2.8	Functionality and Features . . . . .	431
2.2.9	Audio-Video Conferencing Solutions . . . . .	431
2.2.10	Test and Measurement Applications . . . . .	431
2.3	ControlRoom . . . . .	432
2.3.1	Installation . . . . .	432
2.3.2	Usage . . . . .	434
2.3.3	Advanced . . . . .	444
2.3.4	Features and Functions . . . . .	452
2.4	Q-Sys . . . . .	452
2.4.1	Installation . . . . .	453
2.4.2	Quick Start Guide . . . . .	453
2.4.3	Usage . . . . .	454
2.4.4	Features and Functions . . . . .	454
2.5	DFU Automator . . . . .	455
2.5.1	DFU Automator Features . . . . .	455
<b>3</b>	<b>API Reference</b>	<b>463</b>
3.1	BrainStem Entities . . . . .	464
3.1.1	Analog Entity . . . . .	464
3.1.2	App Entity . . . . .	465
3.1.3	Clock Entity . . . . .	466
3.1.4	Digital Entity . . . . .	468
3.1.5	Ethernet Entity . . . . .	470

3.1.6	Equalizer Entity	473
3.1.7	HDBaseT Entity	475
3.1.8	I <sup>2</sup> C Entity	476
3.1.9	Mux Entity	478
3.1.10	Pointer Entity	479
3.1.11	PoE Entity	481
3.1.12	Port Entity	482
3.1.13	Power Delivery Entity	491
3.1.14	Rail Entity	497
3.1.15	RCServo Entity	500
3.1.16	Relay Entity	502
3.1.17	Signal Entity	504
3.1.18	Store Entity	506
3.1.19	System Entity	508
3.1.20	Temperature Entity	516
3.1.21	Timer Entity	517
3.1.22	UART Entity	518
3.1.23	USB Entity	524
3.1.24	USB System Entity	531
3.2	Python API Reference	535
3.2.1	Getting (Quickly) Started	535
3.2.2	Acroname Modules	538
3.2.3	Package Structure	558
3.2.4	Definitions	560
3.2.5	Discovery	560
3.2.6	Entity	562
3.2.7	Link	566
3.2.8	Module	568
3.2.9	PDChannelLogger	572
3.2.10	Results	574
3.2.11	Version	575
3.2.12	Analog	578
3.2.13	App	582
3.2.14	Clock	583
3.2.15	Digital	586
3.2.16	Equalizer	589
3.2.17	Ethernet	590
3.2.18	HDBaseT	595
3.2.19	I <sup>2</sup> C	599
3.2.20	Mux	601
3.2.21	PoE	603
3.2.22	Pointer	610
3.2.23	Port	613
3.2.24	PowerDelivery	633
3.2.25	RCServo	647
3.2.26	Rail	648
3.2.27	Relay	656
3.2.28	Signal	657
3.2.29	Store	659
3.2.30	System	662
3.2.31	Temperature	675
3.2.32	Timer	676
3.2.33	UART	677
3.2.34	USB	682

	3.2.35	USBSystem	695
3.3		C++ API Reference	704
	3.3.1	Acroname Modules	704
	3.3.2	Entity Class	739
	3.3.3	Analog Class	744
	3.3.4	App Class	748
	3.3.5	Clock Class	749
	3.3.6	Digital Class	752
	3.3.7	Equalizer Class	754
	3.3.8	Ethernet Class	755
	3.3.9	HDBaseT Class	760
	3.3.10	I2C Class	762
	3.3.11	Mux Class	764
	3.3.12	PoE Class	766
	3.3.13	Pointer Class	771
	3.3.14	Port Class	774
	3.3.15	PowerDelivery Class	788
	3.3.16	RCServo Class	798
	3.3.17	Rail Class	799
	3.3.18	Relay Class	805
	3.3.19	Signal Class	806
	3.3.20	Store Class	808
	3.3.21	System Class	810
	3.3.22	Temperature Class	819
	3.3.23	Timer Class	820
	3.3.24	UART Class	821
	3.3.25	USB Class	825
	3.3.26	USBSystem Class	834
	3.3.27	Link Class	840
	3.3.28	Module Class	852
	3.3.29	PDChannelLogger	857
3.4		C API Reference	858
	3.4.1	aDefs.h	858
	3.4.2	aDiscovery.h	859
	3.4.3	Error Codes	863
	3.4.4	aFile.h	865
	3.4.5	aLink.h	869
	3.4.6	aMutex.h	872
	3.4.7	aPacket.h	874
	3.4.8	aProtocoldefs.h	876
	3.4.9	aStream.h	943
	3.4.10	aTime.h	954
	3.4.11	aUEI.h	955
	3.4.12	aVersion.h	957
	3.4.13	PortMapping.h	959
	3.4.14	bs_pd_packet.h	961
3.5		RESTful API Reference	963
	3.5.1	API Version v1	963
3.6		.NET API Reference	1154
	3.6.1	BrainStem2 CLI Types	1154
	3.6.2	Port Mapping	1156
	3.6.3	Module Class	1158
	3.6.4	Analog Class	1164
	3.6.5	App Class	1167

3.6.6	Clock Class	1169
3.6.7	Digital Class	1171
3.6.8	Equalizer Class	1174
3.6.9	Ethernet Class	1175
3.6.10	HDBaseT Class	1180
3.6.11	I2C Class	1183
3.6.12	Mux Class	1184
3.6.13	PoE Class	1187
3.6.14	Pointer Class	1191
3.6.15	Port Class	1194
3.6.16	PowerDelivery Class	1209
3.6.17	RCServo Class	1219
3.6.18	Rail Class	1220
3.6.19	Relay Class	1226
3.6.20	Signal Class	1227
3.6.21	Store Class	1229
3.6.22	System Class	1232
3.6.23	Temperature Class	1241
3.6.24	Timer Class	1242
3.6.25	UART Class	1243
3.6.26	USB Class	1247
3.6.27	USBSystem Class	1257
3.7	CCA API Reference	1263
3.7.1	Analog Entity	1263
3.7.2	App Entity	1268
3.7.3	Clock Entity	1269
3.7.4	Digital Entity	1272
3.7.5	Equalizer Entity	1276
3.7.6	Ethernet Entity	1277
3.7.7	HDBaseT Entity	1284
3.7.8	I2C Entity	1288
3.7.9	Mux Entity	1290
3.7.10	PoE Entity	1293
3.7.11	Pointer Entity	1300
3.7.12	Port Entity	1304
3.7.13	PowerDelivery Entity	1328
3.7.14	RCServo Entity	1342
3.7.15	Rail Entity	1344
3.7.16	Relay Entity	1353
3.7.17	Signal Entity	1354
3.7.18	Store Entity	1357
3.7.19	System Entity	1360
3.7.20	Temperature Entity	1375
3.7.21	Timer Entity	1376
3.7.22	UART Entity	1377
3.7.23	USB Entity	1383
3.7.24	USBSystem Entity	1398
3.7.25	Module Entity	1408
3.7.26	Link Entity	1410
3.7.27	PDChannelLogger	1413
3.7.28	PortMapping	1416
3.7.29	Version	1417
3.8	LabVIEW API Reference	1419
3.9	Q-Sys API Reference	1420

3.9.1	Product Plugins	1420
<b>4</b>	<b>BrainStem</b>	<b>1427</b>
4.1	What is BrainStem	1427
4.1.1	Scalable	1427
4.1.2	Usable	1428
4.1.3	Next Steps	1428
4.2	aEther	1428
4.2.1	Overview	1428
4.2.2	Communication Models	1428
4.3	Getting Started	1434
4.3.1	Do I need Drivers?	1434
4.3.2	Connecting to a BrainStem Device	1435
4.3.3	Launch HubTool	1436
4.3.4	Toggling the LED	1436
4.4	Firmware Management	1436
4.4.1	Updating Firmware via HubTool	1436
4.4.2	Updating Firmware via CLI	1442
4.4.3	Updating Software Licenses	1447
4.4.4	Updating Firmware without an Internet Connection	1449
4.4.5	Updating a Brainstem Module via the Brainstem Network.	1451
4.4.6	Recovering BrainStem Firmware via CLI	1454
4.4.7	Recovering MTM Module Firmware via CLI	1456
4.5	Terminology	1460
4.5.1	BrainStem® Network	1460
4.5.2	BrainStem® Bus	1461
4.5.3	Routing	1461
4.5.4	Module	1462
4.5.5	Host	1462
4.5.6	Entity	1462
4.5.7	Discovery	1462
4.6	USB Drivers	1462
4.6.1	Mac OS X	1463
4.6.2	Linux Ubuntu	1463
4.6.3	Windows 7 USB Driverless Installation	1463
4.7	Appendix	1464
4.7.1	Appendix I: BrainStem Universal Entity Interface (UEI)	1465
4.7.2	Appendix II: BrainStem Communication Protocol	1473
4.7.3	Appendix III: BrainStem Networking	1475
4.7.4	Appendix IV: Updater File Structure	1483
<b>Index</b>		<b>1487</b>

Here you can find software API documentation organized around specific Acroname devices. This documentation also includes specific behaviors, features, and configuration values that are unique to each device.

## 1.1 USBHub3p



The USBHub3+ gives engineers advanced flexibility and configurability over USB ports in testing and development applications for both USB 3.0 and USB 2.0 devices. The USBHub3+ hub architecture consists of two layers of internal hubs to achieve 8 fully controllable downstream ports.

To get up to speed with the USBHub3+ and quickly learn about its functionality follow the [quick start guide](#). Have a look at the [basic example](#) or dive into the [capabilities](#) of the USBHub3+ for a more in depth view.

---

### 1.1.1 Quick Start Guide

#### Power

- Using the provided universal power supply connect the barrel jack into the hub.
- Connect the other end into a 120/240V AC outlet.



## Data

- With the provided USB 3.0 A-B cable connect the A side to your host computer and the B side to the connection labeled “Up0”.

## Download

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>1</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>2</sup> for your particular operating system and architecture.

## Play

- Open HubTool
- On the bottom right side of the application select the USBHub3p device.

---

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the USBHub3p. For more information please take a look at our [Getting Started Guide](#)

## 1.1.2 Basic Example

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

static const uint8_t PORT = 5;

int main(int argc, const char * argv[]) {

    //Create an instance of the USBHub3p
    aUSBHub3p hub;

    //Connect to USBHub3p
    aErr err = hub.discoverAndConnect(USB);
    if(err == aErrNone) {
        printf("Connected\r\n");
    }
    else {
        printf("Unable to discover device\r\n");
        return 1;
    }

    //Disable PORT
    hub.usb.setPortEnable(PORT);
```

(continues on next page)

---

<sup>1</sup> <https://acroname.com/api>

<sup>2</sup> <https://acroname.com/hubtool>

(continued from previous page)



```
//////////  
//Do Stuff  
//////////  
  
//Enable PORT  
hub.usb.setPortDisable(PORT);  
  
//Disconnect  
hub.disconnect();  
  
return 0  
}
```

## Python

```
import brainstem  
from brainstem.result import Result  
import sys  
  
PORT = 5  
  
#Create an instance of the USBHub3p  
hub = brainstem.stem.USBHub3p()  
  
#Connect to USBHub3p  
result = hub.discoverAndConnect(brainstem.link.Spec.USB)  
  
if result == Result.NO_ERROR:  
    print("Connected\r\n");  
else:  
    print("Unable to discover device\r\n");  
    sys.exit(1)  
  
hub.usb.setPortEnable(PORT)  
  
#####  
#Do Stuff  
#####  
  
hub.usb.setPortDisable(PORT)  
  
#Close the connection  
hub.disconnect()
```

## 1.1.3 Indicators and Connections

### Connections

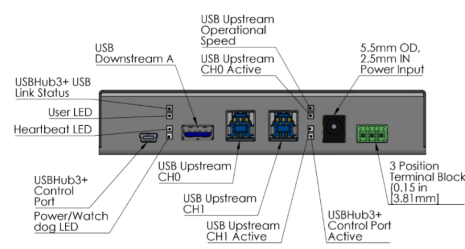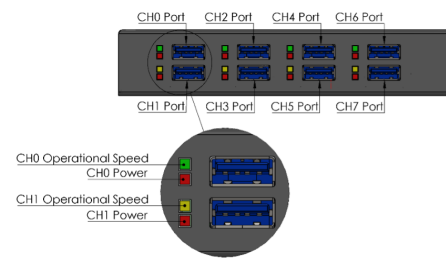

### LEDs

LED Name	Color	Description
Link Status LED	Yellow	On once a host device has enumerated the BrainStem controller
User LED	Blue	Can be manipulated through any of the available APIs
Heartbeat LED	Green	Indicates active BrainStem connection; pulses at a rate determined by the system heartbeat rate
Power/Watchdog LED	Red and flashing blue	Solid red indicates the system is powered. Flashing blue is indication the internal watchdog is running and the USBHub3+ firmware is healthy
Upstream Operational Speed LED	Yellow or green	Upstream enumeration speed to host: green for SuperSpeed; yellow for Hi-Speed or lower USB 2.0 speeds.
Upstream 0 LED	Green	Indicates an active connection on upstream port
Upstream 1 LED	Green	
Control Port LED	Yellow	
Downstream Operational Speed LED	Yellow or green	Downstream device enumeration speed: green for SuperSpeed; yellow for Hi-Speed or lower USB 2.0 speeds; off when no device is enumerated
Downstream Power LED	Red	LED is on when downstream Vbus is enabled

### 1.1.4 Programming Interface

The USBHub3+ is capable of many features. These features are organized into groups called *entities*. Through these entities we can access the vast features of the USBHub3+.

A complete list of all entities and functions can be found in the Module *Module Entities* page.

---

#### Software Control

Software control of the features of the USBHub3+ is done with the BrainStem API via a BrainStem link. BrainStem links are done over USB and can be established via upstream port 0 (Up0), upstream port 1 (Up1), or the Control Port. After one or more of these ports is connected to a host machine, a user can connect to it via software API:

```
stem.link.discoverAndConnect(USB)
```

When multiple Acroname devices are connected to a host, connecting to a specific hub can be done by providing the hub serial number. Further, all connected devices can be found using

```
brainstem.discover.findAllModules(USB) (Python)
Acroname::BrainStem::Link::sDiscover() (C++)
```

#### BrainStem Control Port

The USBHub3+ also has a dedicated control channel on the USB mini-B connector. This is a full-speed USB 2.0 connection for BrainStem interface only. No USB hub traffic can flow on this connection. When a cable is connected to the mini-B connector, the BrainStem link can only be established through the Control Port, independent of the selected upstream port. The USB 3.0 type-B connectors are then used only for USB hub traffic to connect downstream USB devices. When the Control Port is not used, the BrainStem link will share the active upstream USB connection. Using the Control Port provides the ability to completely disconnect both USB upstream host connections while maintaining software control of the hub.

#### Using Multiple Hosts with USBHub3+

The two upstream-facing host ports can be connected to two different host computers. The control port can be attached to no computer, one of the same computers attached to the upstream ports, or a third host computer. Due to limitations of USB specification, only one host computer can access downstream USB ports at any time. Through the BrainStem API, the upstream port used can be controlled, or the system can automatically select the upstream port (see USB Hub Upstream Mode). When automatically selecting the upstream port, the USBHub3+ will favor using Up0 if it is connected.

## Device Drivers

The USBHub3+ leverages operating system user space interfaces that do not require custom drivers for operation on modern operating systems.

Some older operating systems may require the installation of a BrainStem USB driver to enable software control. Installation details on installing USB drivers can be found within the BrainStem Development Kit under the “drivers” folder. For example, Windows 7 requires the supplied INF to communicate with BrainStem USB devices.

### 1.1.5 USBHub3+ Module Entities

#### Temperature

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Certain modules have a temperature measurement available. The temperature entity gives access to these measurements. Check your module datasheet to see if your module has a temperature entity.

---

#### System Temperature

The temperature of the USBHub3+ can be measured with:

```
stem.temperature[0].getValue(μC) \[cpp\] \[python\] \[.NET\] \[CCA\] \[REST\]
```

where temperature is in micro-degrees Celcius.

#### System

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

## Serial Number

Every USBHub3+ is assigned a unique serial number at the factory. This facilitates an arbitrary number of USBHub3+ devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) [cpp] [python] [NET] [CCA] [REST]
```

## Module Default Base Address

BrainStems are designed to be able to form a reactive, extensible network. All BrainStem modules come with a default network base address for identification on the BrainStem network bus. The default module base address for USBHub3+ is factory-set as 6, and can be accessed with.

```
stem.system.getModule(module) [cpp] [python] [NET] [CCA] [REST]
```

## Hardware Version

Get the module's hardware version information.

```
stem.system.getHardwareVersion(hardwareVersion) [cpp] [python] [NET] [CCA] [REST]
```

The hardware version is a 32-bit value that encodes hardware variant information. The format is:

Table 1: Hardware Version Bit Breakdown

Bits	Field	Description
24-31	Revision	Reserved (always 0)
16-23	Reserved	Reserved (always 0)
8-15	Variant	Hardware variant identifier
0-7	Reserved	Reserved (always 0)

Table 2: Hardware Variant Values

Value	Description
'2'	2 Hub Chip variant
'3'	3 Hub Chip variant

The hardware variant is determined by reading hardware strapping pins during initialization to identify the specific USB hub controller configuration.

## System Error Status Mapping

Error states for the device as a whole is bit-packed in a 32-bit word available from:

```
stem.system.getErrors() [cpp] [python] [NET] [CCA] [REST]
```

Calling this function will clear the current errors. If the error persists it will be set again.

Details about the system error status 32-bit word are as follows:

Bit	Port Error Status (channel) Result Bitwise Description
0	Thermal Protection Mode
1	Power Limit Exceeded
2:31	Reserved

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the USBHub3+ away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() [cpp] [python] [NET] [CCA] [REST]
```

Pressing the reset button two times within 5 seconds will return all settings to factory defaults: all ports' data (HS and SS) and power enabled, CDP mode, enumeration delay of 0, 4095mA current limit.

Savable Items	
Software Offset	I2C Rate
Router Address	Port Enumeration Delay
Boot Slot	Downstream Boost
Port Mode (SDP, CDP) – each port	Current Limit – per port
Upstream Boost	Port state (data and power)
Upstream Port	

## USB

### API Documentation: [cpp] [python] [NET] [CCA] [REST]

The USB Entity provides the software control interface for USB related features. This entity is supported by BrainStem products which have programmatically controlled USB features.

## USB Downstream Channel Control

Downstream USB channels can be manipulated through the `usb` entity command to enable and disable USB data and Vbus lines, measure current, measure Vbus voltage, boost data line signals, and measure temperature.

Manipulating Hi-Speed data, SuperSpeed data, and Vbus lines simultaneously for a single port can be done by calling the following methods with channel in [0-7] being the port index:

```
stem.usb.setPortEnable(channel) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPortDisable(channel) [cpp] [python] [NET] [CCA] [REST]
```

Manipulating Hi-Speed data and SuperSpeed data lines while not affecting the Vbus lines simultaneously for a single port can be done by calling the following method with channel [0-7]:

```
stem.usb.setDataEnable(channel) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setDataDisable(channel) [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB 2.0 Hi-Speed data lines for a single port can be done by calling the following method with channel [0-7]:

```
stem.usb.setHiSpeedDataEnable(channel) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setHiSpeedDataDisable(channel) [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB 3.1 SuperSpeed data lines for a single port can be done by calling the following method with channel [0-7]:

```
stem.usb.setSuperSpeedDataEnable(channel) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setSuperSpeedDataDisable(channel) [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB Vbus line for a single port can be done by calling the following method with channel [0-7]:

```
stem.usb.setPowerEnable(channel) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPowerDisable(channel) [cpp] [python] [NET] [CCA] [REST]
```

To affect multiple ports and lines simultaneously, see `usb.setHubMode()` later in this section.

## USB Downstream Measurements

The USB Vbus voltage, as well as the current consumed on Vbus, can be read for each channel by calling the following methods with channel [0-7], where the second variable passed into the method is the location for the measurement result:

```
stem.usb.getPortVoltage(channel, μV) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getPortCurrent(channel, μA) [cpp] [python] [NET] [CCA] [REST]
```



## USB Downstream Current Limiting

Current-limit trip point settings can be accessed for each port by calling the following methods with channel [0-7], where the second variable passed into the method is either the set value or the write location of the result:

```
stem.usb.getPortCurrentLimit(channel,  $\mu$ A) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPortCurrentLimit(channel,  $\mu$ A) [cpp] [python] [NET] [CCA] [REST]
```

The USBHub3+ current limit behavior follows the USB BC1.2 defined “trip off” behavior. When a downstream device consumes more current than the set current limit, the Vbus voltage will immediately turn off and latch off until the port is re-enabled. An overcurrent error flag is set in getPortState() bitfield. The voltage-current behavior is detailed in Figure 6.

## USB Downstream Enumeration Speed

The enumeration state and speed of each downstream port can be read with

```
stem.usb.getDownstreamDataSpeed [cpp] [python] [NET] [CCA] [REST]
```

Value	Hub Downstream Speed Descriptions
0	No device enumerated
1	Hi-Speed device enumerated
2	SuperSpeed device enumerated

## USB Downstream Operational Mode

The USB port operational mode controls the behavior of each downstream port’s charging behavior. Each port can be setup to support different modes in the USB Battery Charge Specification 1.2 (BC1.2). Standard Downstream Port (SDP) mode will cause BC1.2 compliant or older USB devices to consume 500mA or less. Configuring a port as a Charging Downstream Port (CDP) will cause the hub signal to downstream devices that devices may consume up to 5A, the maximum allowed by BC1.2. If there is no upstream USB host connected to the hub, downstream ports set to CDP will behave as Dedicated Charging Ports (DCP).

The actual current consumed by the device is controlled by the downstream device and not the USBHub3+. Devices which are not compliant with BC1.2 or the previous USB power specifications may draw more current than specified above.

The operational mode is set or read by calling the methods:

```
stem.usb.getPortMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPortMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

Value	Hub Port Mode Descriptions
0	Standard downstream port (SDP)
1	Charging downstream port (CDP)

**Note:** A system.save() and system.reset() is required before the new setting will take affect.

## USB Downstream Enumeration Delay

Once a USB device is detected by the USBHub3+ it is possible to delay its connection to an upstream host computer and subsequent enumeration on the USB bus. The enumeration delay can mitigate or eliminate host kernel instabilities by forcing devices to enumerate in slow succession, allowing a focus on validation of drivers and software. The enumeration delay is configured in milliseconds, representing the time delay between enabling each successive downstream port from 0 to 7. Enumeration delay is applied when the hub powers on or when a new upstream connection is made.

```
stem.usb.setEnumerationDelay(delay) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getEnumerationDelay(delay) [cpp] [python] [NET] [CCA] [REST]
```

## USB Boost Mode

Boost mode increases the drive strength of the USB 2.0 Hi-Speed data signals (SuperSpeed data and power signals are not changed). Boosting the data signal drive strength may help to overcome connectivity issues when using long cables or connecting through relays, “pogo” pins or other adverse conditions. This setting is applied after a `system.save()` call and reset or power cycle of the hub. The system setting is persistent until changed or the hub is hard reset. After a hard reset, the default value of 0% boost is restored. A hard reset is done by pressing the “Reset” button on the back of the hub while the hub is powered.

Boost mode can be applied to both the upstream and downstream USB ports with the follow methods:

```
stem.usb.getDownstreamBoostMode(setting) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setDownstreamBoostMode(setting) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getUpstreamBoostMode(setting) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setUpstreamBoostMode(setting) [cpp] [python] [NET] [CCA] [REST]
```

The setting parameter is an integer that correlates to the following:

Value	Hub Boost Mode Descriptions
0	Normal drive strength
1	4% increase in drive strength
2	8% increase in drive strength
3	12% increase in drive strength

## USB Hub Upstream Channels

The USBHub3+ is perfect for environments where multiple devices need to be shared or switched between two host computers using two host (upstream) connections via USB standard-B connectors. The upstream connection can be automatically detected or specifically selected using the following methods:

```
stem.usb.getUpstreamMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setUpstreamMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

The mode parameter can be defined as the following:

Value	Definitions	Hub Upstream Mode Descriptions
0	usbUpstreamModePort0	Force upstream port 0 to be selected
1	usbUpstreamModePort1	Force upstream port 1 to be selected
2	usbUpstreamModeAuto	Automatically detect upstream port
255	usbUpstreamModeNone	Disconnect both upstream ports

Predefined C++ macros for these can be found in `aProtocoldef.h`, and Python's built-in help interface.

The default operational mode is to auto detect which upstream USB port is selected. Automatic detection uses the presence of Vbus on the USB type-B upstream connector to determine presence of a host. If only one upstream port is connected to a host, it will be used for upstream USB. If both upstream ports are connected, the hub will use upstream port 0.

If the Hub Upstream Mode is set to disconnect both upstream ports (or the only active upstream port), the only path available to establish a BrainStem link to the USBHub3+ will be via a host connected to the BrainStem Control Port. See Figure 9 for more details.

## USB Hub Upstream State

The USBHub3+ can provide status information on which upstream port is actively selected as data path to the downstream ports:

```
stem.usb.getUpstreamState(mode) [cpp] [python] [NET] [CCA] [REST]
```

This command returns a 32-bit value which indicates:

Value	Definitions	Hub Upstream Mode Descriptions
0	usbUpstreamStatePort0	Upstream port 0 is actively selected
1	usbUpstreamStatePort1	Upstream port 1 is actively selected
2	usbUpstreamStateNone	No upstream port is selected

## USB Hub Operational Mode

In addition to targeting individual downstream USB ports, a bit-mapped hub mode interface is also available. This interface allows the reading or setting of all USB downstream ports in one functional call.

### Auto VBus Toggle

By default the USBHub3+ will toggle its downstream ports anytime the host connection is lost, changed or disconnected. Disabling (setting the bit) will cause the hub to not cycle downstream power on upstream changes. This behavior can be helpful for certain host controllers and devices. Enumeration delay will override this setting.

```
stem.usb.getHubMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setHubMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

Bit	Hub Operational Mode Word Definition
0	USB Ch 0 USB Hi-Speed Data Enabled

continues on next page

Table 3 – continued from previous page

Bit	Hub Operational Mode Word Definition
1	USB Ch 0 USB Vbus Enabled
2	USB Ch 1 USB Hi-Speed Data Enabled
3	USB Ch 1 USB Vbus Enabled
4	USB Ch 2 USB Hi-Speed Data Enabled
5	USB Ch 2 USB Vbus Enabled
6	USB Ch 3 USB Hi-Speed Data Enabled
7	USB Ch 3 USB Vbus Enabled
8	USB Ch 4 USB Hi-Speed Data Enabled
9	USB Ch 4 USB Vbus Enabled
10	USB Ch 5 USB Hi-Speed Data Enabled
11	USB Ch 5 USB Vbus Enabled
12	USB Ch 6 USB Hi-Speed Data Enabled
13	USB Ch 6 USB Vbus Enabled
14	USB Ch 7 USB Hi-Speed Data Enabled
15	USB Ch 7 USB Vbus Enabled
16	USB Ch 0 USB SuperSpeed Data Enabled
17	Reserved
18	USB Ch 1 USB SuperSpeed Data Enabled
19	Reserved
20	USB Ch 2 USB SuperSpeed Data Enabled
21	Reserved
22	USB Ch 3 USB SuperSpeed Data Enabled
23	Reserved
24	USB Ch 4 USB SuperSpeed Data Enabled
25	Reserved
26	USB Ch 5 USB Super Speed Data Enabled
27	Reserved
28	USB Ch 6 USB SuperSpeed Data Enabled
29	Reserved
30	USB Ch 7 USB SuperSpeed Data Enabled
31	Auto VBus Toggle Disable

## USB Port State

Each downstream port reports information regarding its operating state represented in bit-packed results from:

```
stem.usb.getPortState(state) [cpp] [python] [NET] [CCA] [REST]
```

where channel can be [0-7], and the value status is 32-bit word, defined as the following:

Bit	Port State: Result Bitwise Description
0	USB Vbus Enabled
1	USB2 Data Enabled
2	Reserved
3	USB3 Data Enabled
4:10	Reserved
11	USB2 Device Attached
12	USB3 Device Attached
13:18	Reserved
19	USB Error Flag
20	USB2 Boost Enabled
21:22	Reserved
23	Device Attached
24:31:00	Reserved

### USB Port Error Status Mapping

Error states for all downstream ports are bit-packed in 32-bit words available from:

```
stem.usb.getPortError(channel) [cpp] [python] [.NET] [CCA] [REST]
```

where channel is [0-7].

Errors can be cleared on each individual channel by calling the following method:

```
stem.usb.clearPortErrorStatus(channel) [cpp] [python] [.NET] [CCA] [REST]
```

Calling this command clears the port-related error bit flags (see Table 7) in the port error state. Global bits for hub errors cannot be cleared by this command.

Details about the port error status 32-bit word are as follows:

Bit	Port Error Status (channel) Result Bitwise Description
0	USB port current limit exceeded
1	USB port back-drive condition detected
2	Hub external power not present
3	Hub overtemperature condition
4	USB port short-circuit condition
5:31	Reserved

### Port

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Port Entity provides control over the most basic items related to a USB Port. This includes actions ranging from a complete port enable and disable to the individual interface control. Voltage and current measurements are also included for devices which support the Port Entity.

## Port Control

The USBHub3p has a Port Entity for every port on the device; however, not all ports have the same capabilities. These ports can be referenced by their instance (port[x]) index.

Port Label	Index (port[x])
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
Down-A	8
Up0	9
Up1	10
Control	11

One of the most powerful features of the USBHub3p is its ability to turn ports on and off which is available on Ports 0-7.

```
stem.hub.port[x].setEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB Vbus line for a single port can be done by calling the following method on Ports 0-7.

```
stem.hub.port[x].setPowerEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getPowerEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Manipulating Hi-Speed data and SuperSpeed data lines while not affecting the Vbus lines simultaneously for a single port can be done by calling the following method for Ports 0-7.

```
stem.hub.port[x].setDataEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB 2.0 Hi-Speed data lines for a single port can be done by calling the following for Ports 0-7.

```
stem.hub.port[x].setDataHSEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataHSEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB 3.1 SuperSpeed data lines for a single port can be done by calling the following method for Ports 0-7.

```
stem.hub.port[x].setDataSSEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataSSEnabled() [cpp] [python] [NET] [CCA] [REST]
```

## Voltage and Current Measurements

The USBHub3p provides Voltage and Current measurements for Vbus. These values can be acquired for all 8 ports through the following APIs

```
stem.hub.port[x].getVbusVoltage() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getVbusCurrent() [cpp] [python] [NET] [CCA] [REST]
```

## Power Modes

The ports of the USBHub3p are capable of providing power in multiple formats. The default is Charging Downstream Port (CDP), but that can be changed to things like: Standard Downstream Port (SDP), Charging Downstream Port (CDP) / Dedicated Charging Port (DCP). These modes can be set through:

```
stem.hub.port[x].setPowerMode() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getPowerMode() [cpp] [python] [NET] [CCA] [REST]
```

Power Mode	Value	Define
None	0	portPowerMode_none_Value
SDP	1	portPowerMode_sdp_Value
CDP/DCP	2	portPowerMode_cdp_dcp_Value

---

**Note:** The Power Modes can only be changed when the port power is disabled.

---

## Port Mode

As outlined in the “Port Control” section the USBHub3p can individually manipulate almost every pin on the connector; however, depending on your application that might require multiple function calls in order to configure the port how you want it. Port Mode on the other hand is a one stop shop that allows you to pick and choose which lines you want enabled or disabled through a single call. Additionally, it has a few other features tucked away inside of it.

```
stem.hub.port[x].setMode() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getMode() [cpp] [python] [NET] [CCA] [REST]
```

Port Mode Item	Bit	Value	Define
Power Enable	0	0/1	portPortMode_powerEnabled_Bit
HS 1 Enable	1	0/1	portPortMode_HS1Enabled_Bit
SS 1 Enable	3	0/1	portPortMode_SS1Enabled_Bit
Power Mode: Offset		16	portPortMode_portPowerMode_Offset
Power Mode: Mask		0x7	portPortMode_portPowerMode_Mask
Power Mode: None	16-18	0	portPortMode_portPowerMode_none_Value
Power Mode: SDP	16-18	1	portPortMode_portPowerMode_sdp_Value
Power Mode: CDP/DCP	16-18	2	portPortMode_cdp_dcp_Value

## Data Role

The data role describes the current configuration of the port in regards to its data direction. In most cases this evaluates to an Upstream Facing Port (UFP) or a Downstream Facing Port (DFP). Upstream in this case means the host side of the port and Downstream refers to the device side. The Data Role can be aquired through:

```
stem.hub.port[x].getDataRole() [cpp] [python] [NET] [CCA] [REST]
```

Data Role	Value	Define
Disabled	0	portDataRole_Disabled_Value
Upstream	1	portDataRole_Upstream_Value
Downstream	2	portDataRole_Downstream_Value
Control	3	portDataRole_Control_Value

## Port Limits and Modes

At the Port level the user has the ability to define current limit.

```
stem.hub.port[x].setCurrentLimit() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.hub.port[x].getCurrentLimit() [cpp] [python] [NET] [CCA] [REST]
```

## Downstream Data Speed

The USBHub3p can detect if a device has been enumerated. Additionally, it can detect at what speed a device has enumerated at.

```
stem.hub.port[x].getDataSpeed() [cpp] [python] [NET] [CCA] [REST]
```



Data Speed	Bit	Value	Define
1.5 Mbit/s	0	0/1	portDataSpeed_ls_1p5M_Bit
12 Mbit/s	1	0/1	portDataSpeed_fs_12M_Bit
480 Mbit/s	2	0/1	portDataSpeed_hs_480M_Bit
5 Gbit/s	3	0/1	portDataSpeed_ss_5G_Bit
10 Gbit/s	4	0/1	portDataSpeed_ss_10G_Bit
USB 2.0	6	0/1	portDataSpeed_Connected_2p0_Bit
USB 3.0	7	0/1	portDataSpeed_Connected_3p0_Bit

## USB System

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The USBSystem class provides high level control of the lower level *Port Entity*

## Upstream Control

The USBHub3p has the ability to designate one of the upstream ports (9-10) as the upstream connection. This is very useful for moving devices between hosts.

```
stem.hub.setUpstream() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
stem.hub.getUpstream() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Enumeration Delay

Once a USB device is detected by the USBHub3p it is possible to delay its connection to an upstream host computer and subsequent enumeration on the USB bus. The enumeration delay can mitigate or eliminate host kernel instabilities by forcing devices to enumerate in slow succession, allowing a focus on validation of drivers and software. The enumeration delay is configured in milliseconds, representing the time delay between enabling each successive port. Enumeration delay is applied when the hub powers on or when a new upstream connection is made.

```
stem.hub.setEnumerationDelay() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
stem.hub.getEnumerationDelay() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Data Behavior

The USBHub3p is capable of a few different behaviors for how it switches upstream port connections. It can auto switch based on port priority or have a fixed upstream port. The method in which these events are handled is referred to as data behavior.

List of Available Data Behaviors for USBHub3p

Behavior	Value	Define
Hard Coded	0	usbsystemDataBehavior_HardCoded
Reserved	1	usbsystemDataBehavior_Reserved
Port Priority	2	usbsystemDataBehavior_PortPriority

### Hard Coded (Default Configuration)

The Hard Coded data behavior is used to fix the Upstream port to a single port and not allow it to move except for a command through the [Set Upstream](#) API.

### Port Priority

The Port Priority data behavior prioritizes making the Upstream port the lowest numbered port on the USB-Hub3p that is capable of being an Upstream port.

### Relevant API's

```
stem.hub.setDataRoleBehavior() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getDataRoleBehavior() [cpp] [python] [NET] [CCA] [REST]
```

### Complete list of Supported Entities and Functions

Entity Class	Entity Option	Variable(s) Notes
App[0-3]	execute	
	return	
system[0]	getModel	
	getHardwareVersion	
	getModule	
	getRouter	
	setHBInterval	
	getHBInterval	
	setLED	
	getLED	
	setBootSlot	
	getBootSlot	
	getVersion	
	getSerialNumber	

continues on next page

Table 4 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
	save	
	reset	
	getInputVoltage	
	getInputCurrent	
	getModuleBaseAddress	
	getModuleSoftwareOffset	
	getRouterAddressSetting	
	getUptime	
	getMaximumTemperature	
	getName	
	setName	
	resetDeviceToFactoryDefaults	
timer[0-8]	getExpiration	
	setExpiration	
store[0-1]	getSlotState	
	loadSlot	
	unloadSlot	
	slotEnable	
	slotDisable	
	slotCapacity	
	slotSize	
Pointer[0-3]	getOffset	
	setOffset	
	getMode	
	setMode	
	getTransferStore	
	setTransferStore	
	initiateTransferToStore	
	initiateTransferFromStore	
	getChar	
	setChar	
	getShort	
	setShort	
	getInt	
	setInt	
temperature[0]	getTemperature	
usb[0]	setPortEnable	Channels 0-7
	setPortDisable	Channels 0-7
	setDataEnable	Channels 0-7
	setDataDisable	Channels 0-7
	setHiSpeedDataEnable	Channels 0-7
	setHiSpeedDataDisable	Channels 0-7
	setSuperSpeedDataEnable	Channels 0-7
	setSuperSpeedDataDisable	Channels 0-7
	setPowerEnable	Channels 0-7
	setPowerDisable	Channels 0-7
	getPortVoltage	Channels 0-7
	getPortCurrent	Channels 0-7
	getPortCurrentLimit	Channels 0-7
	setPortCurrentLimit	Channels 0-7

continues on next page

Table 4 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
port[0-7]	setPortMode	Channels 0-7
	getPortMode	Channels 0-7
	getDownstreamDataSpeed	Channels 0-7
	getHubMode	
	setHubMode	
	getPortState	Channels 0-7
	getPortError	
	getEnumerationDelay	
	setEnumerationDelay	
	clearPortErrorStatus	
	getUpstreamMode	
	setUpstreamMode	
	getUpstreamState	
	getUpstreamBoostMode	
	setUpstreamBoostMode	
	getDownstreamBoostMode	
	setDownstreamBoostMode	
	getEnabled	
	setEnabled	
	getDataEnabled	
	setDataEnabled	
	getDataHSEnabled	
	setDataHSEnabled	
	getDataSSEnabled	
	setDataSSEnabled	
	getPowerEnabled	
	setPowerEnabled	
	getHSBoost	
	setHSBoost	
	getMode	
	setMode	
	getCurrentLimit	
	setCurrentLimit	
	getVbusVoltage	
	getVbusCurrent	
	getState	
	getName	
	setName	
	getPowerMode	
	setPowerMode	
	getDataRole	
	getDataSpeed	
	getErrors	
port[8]	getHSBoost	
	setHSBoost	
	getName	
	setName	
	getPowerMode	
	setPowerMode	
	getDataRole	

continues on next page

Table 4 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
port[9-10]	getHSBoost	
	setHSBoost	
	getName	
	setName	
	getDataRole	
port[11]	getName	
	setName	
	getDataRole	
USBSystem [0]	getUpstream	
	setUpstream	
	setDataRoleBehavior	
	getDataRoleBehavior	
	getEnumerationDelay	
	setEnumerationDelay	

## 1.2 USBHub3c



The USBHub3c gives engineers advanced flexibility and configurability over USB ports in testing and development applications to validate, control, and test the limits of devices built on the Power Delivery (USB-PD) and USB specification.

To get up to speed with the USBHub3c and quickly learn about its functionality follow the [quick start guide](#). Have a look at the [basic example](#) or dive into the [functionality](#) of the USBHub3c for a more in depth view.

### 1.2.1 Quick Start Guide

#### 1. Download The Development Kit & HubTool

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>3</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>4</sup> for your particular operating system and architecture.


---

<sup>3</sup> <https://acroname.com/api>

<sup>4</sup> <https://acroname.com/hubtool>


## 2. Connect Power

- Using the provided Power Delivery (PD) brick/wallwort and the USBU 3.0 C-C cable make a connection between it and the Power-C port located on the back of the USBHub3c.
- Plug the PD Brick into a 120/240V AC outlet.

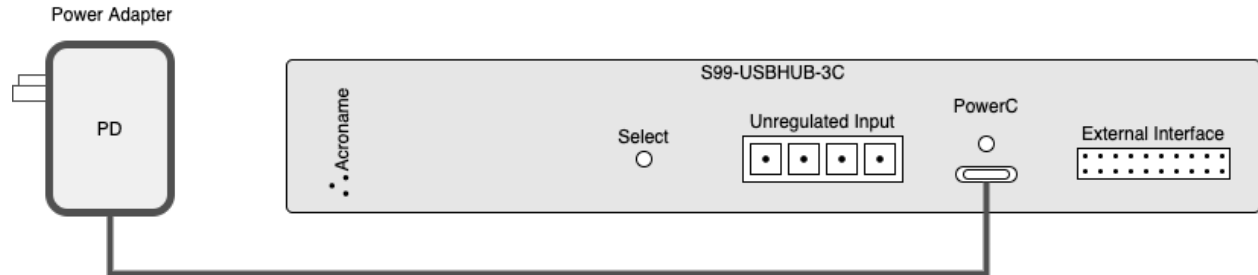

## 3. Connect Data

- With a second USB 3.0 Type-C cable make a connection between Port “0” and the your host computer.

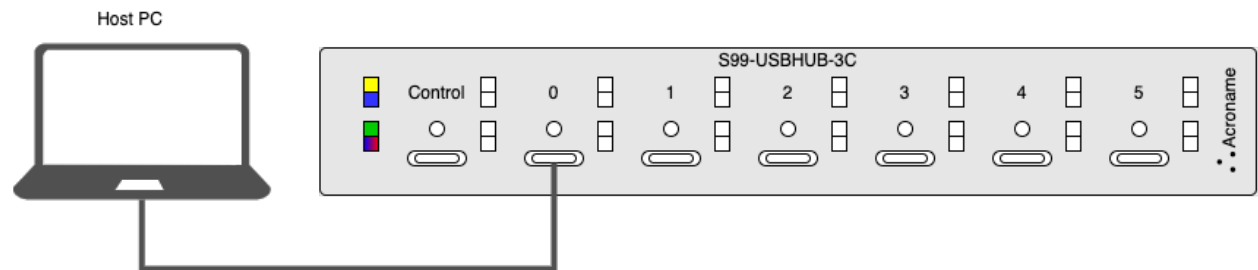

## 4. Play

- Open HubTool
- On the bottom right side of the application select the USBHub3c device.

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

Congratulations! You are now ready to start exploring the capabilities of the USBHub3c. For more information please take a look at our [Getting Started Guide](#)

## 1.2.2 Basic Example

This simple example shows briefly how instantiate, connect to, disable and re-enable a port on the USBHub3c. There are multiple examples shipped with the [BrainStem Development Kit \(BDK\)](#)<sup>5</sup> download.

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

static const uint8_t PORT = 5;

int main(int argc, const char * argv[]) {

    //Create an instance of the USBHub3c
    aUSBHub3c device;

    //Connect to USBHub3c
    aErr err = device.discoverAndConnect(USB);
    if(err == aErrNone) {
        printf("Connected\r\n");
    }
    else {
        printf("Unable to discover device\r\n");
        return 1;
    }

    //Disable PORT
    device.hub.port[PORT].setEnabled(0);

    ////////////
    //Do Stuff
    ////////////

    //Enable PORT
    device.hub.port[PORT].setEnabled(1);

    //Disconnect
    device.disconnect();

    return 0
}
```

Python

```
import brainstem
from brainstem.result import Result
import sys

PORT = 5

#Create an instance of the USBHub3c
device = brainstem.stem.USBHub3c()

#Connect to USBHub3c
result = device.discoverAndConnect(brainstem.link.Spec.USB)
```

(continues on next page)

---

<sup>5</sup> <https://acroname.com/api>



(continued from previous page)

```

if result == Result.NO_ERROR:
    print("Connected\r\n");
else:
    print("Unable to discover device\r\n");
    sys.exit(1)

# Disable Port
device.hub.port[PORT].setEnabled(0)

#####
# Do Stuff
#####


# Enable Port
device.hub.port[PORT].setEnabled(1)

#Close the connection
device.disconnect()

```


## 1.2.3 Indicators and Connections

### LEDs

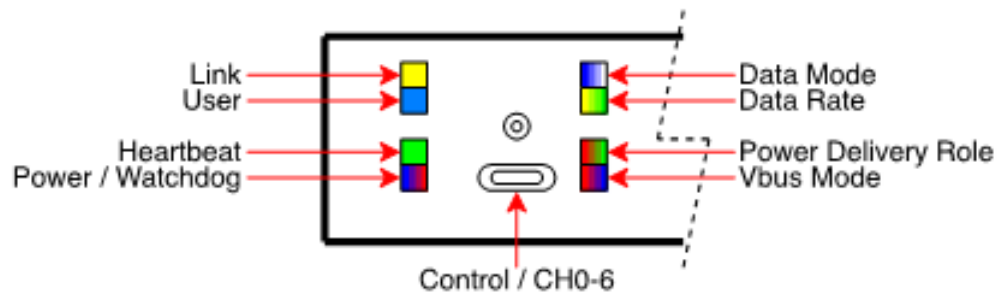


LED Name	Color	Description
Link Status LED	Yellow	On once a host device has enumerated the BrainStem controller
User LED	Blue	Can be manipulated through any of the available APIs
Heartbeat LED	Green	Indicates active BrainStem connection; pulses at a rate determined by the system heartbeat rate
Power/Watchdog LED	Red and flashing blue	Solid red indicates the system is powered. Flashing blue is indication the internal watchdog is running and the USBHub3c firmware is healthy
Data Mode	Green	Upstream Port
	Red	Downstream Port
	White	Control Port
Data Rate	Yellow	Downstream enumeration of USB 2.0 speeds.
	Green	Downstream enumeration of SuperSpeed (5Gbps)
	Blue	Downstream enumeration of SuperSpeed+ (10Gbps)
Power Role	Red	Connected: Port is Sourcing Power; Not Connected: Source Only
	Green	Connected: Port is Sinking Power; Not Connected: Sink Only
	Blue	Connected: N/A; Not Connected: Port is Dual Role Power Capable
Mode Mode	Red	SDP, CDP or DCP modes
	Blue	Power Delivery Mode
	Green	Quick Charge™ Mode
	White	Programable Power Supply Mode


Connections

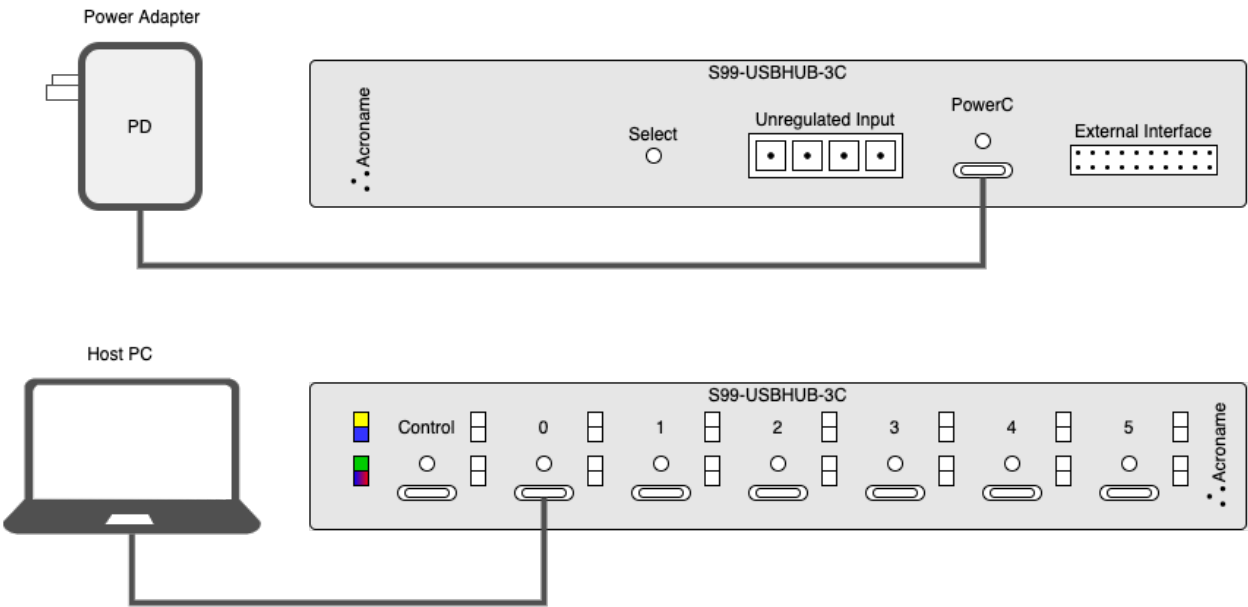

Separate Control Computer

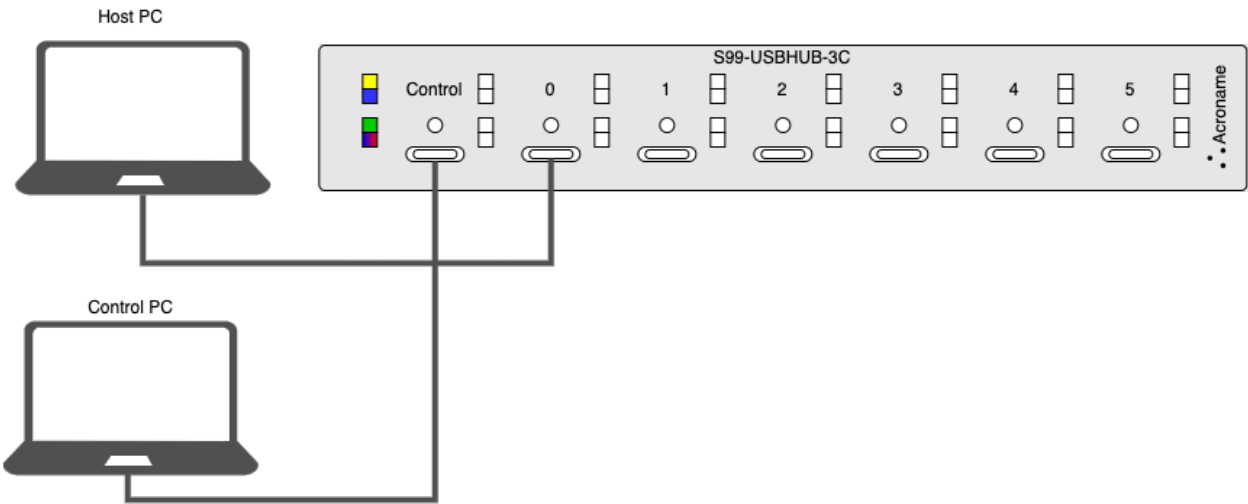

## External Connector

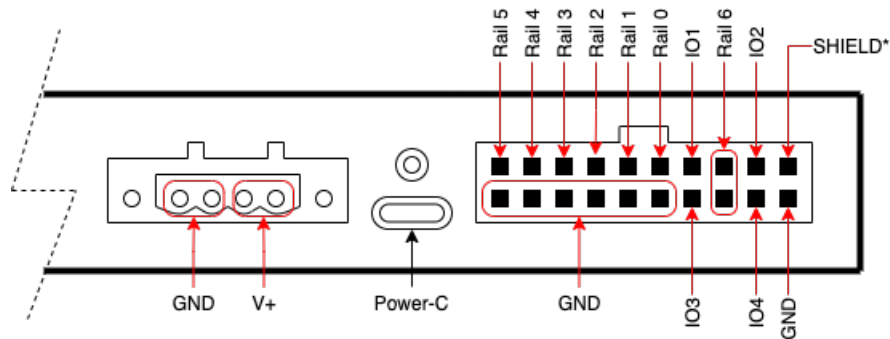

## 1.2.4 Programming Interface

### Overview

The USBHub3c consists of 6 USB Type-C ports connected to a USB 3.2 Gen 2x1 Hub, USB Power Delivery, and Qualcomm QuickCharge hardware. The software control of this device manipulates various capabilities of each of these ports. The USBHub3c is one of a family of Acroname devices, and shares some of its feature set and interface with other Acroname devices.

Acroname provides software APIs for working with the USBHub3c in a number of different languages. We strive to keep much of the syntax and structure of the API similar across these languages. The core of this common protocol, API software structure, and nomenclature we call BrainStem (for more information see [BrainStem](#)).

Whether C++ or Python or another language interface is the target, all of our APIs start with the concept of a connection to the USBHub3c device. This is usually represented by a class, an instance of which represents a connection to a specific USBHub3c. We call these classes “Modules” or “Module classes.” Each class then contains a set of subclass instances which represent interface functionality for a specific piece of hardware functionality. We call these sub objects “Entities.” The following code block represents the “Module” class definition for the USBHub3c.

### Module class

#### C++

```
class aUSBHub3c : public Acroname::BrainStem::Module
{
public:

    aUSBHub3c(const uint8_t module = aUSBHUB3P_MODULE,
              bool bAutoNetworking = true,
              const uint8_t model = aMODULE_TYPE_USBHub3c) :
        Acroname::BrainStem::Module(module, bAutoNetworking, model)
    {
        for(int x = 0; x < aUSBHUB3C_NUM_APPS; x++) {
            app[x].init(this, x);
        }
    }
};
```

(continues on next page)

(continued from previous page)

```

    }

    for(int x = 0; x < aUSBHUB3C_NUM_PD_PORTS; x++) {
        pd[x].init(this, x);
    }

    for(int x = 0; x < aUSBHUB3C_NUM_POINTERS; x++) {
        pointer[x].init(this, x);
    }

    store[aUSBHUB3C_STORE_INTERNAL_INDEX].init(this, storeInternalStore);
    store[aUSBHUB3C_STORE_RAM_INDEX].init(this, storeRAMStore);
    store[aUSBHUB3C_STORE_EEPROM_INDEX].init(this, storeEEPROMStore);

    system.init(this, 0);

    for(int x = 0; x < aUSBHUB3C_NUM_TEMPERATURES; x++) {
        temperature[x].init(this, x);
    }

    for(int x = 0; x < aUSBHUB3C_NUM_TIMERS; x++) {
        timer[x].init(this, x);
    }

    hub.init(this, 0);

    for(int x = 0; x < aUSBHUB3C_NUM_RAILS; x++) {
        rail[x].init(this, x);
    }
}

HubClass hub; /**< Hub Class */
Acroname::BrainStem::AppClass app[aUSBHUB3C_NUM_APPS]; /**< App Class */
Acroname::BrainStem::PointerClass pointer[aUSBHUB3C_NUM_POINTERS]; /**< Pointer
↪Class */
Acroname::BrainStem::PowerDeliveryClass pd[aUSBHUB3C_NUM_USB_PORTS]; /**< Power
↪Delivery Class */
Acroname::BrainStem::RailClass rail[aUSBHUB3C_NUM_RAILS]; /**< Rail Class */
Acroname::BrainStem::StoreClass store[aUSBHUB3C_NUM_STORES]; /**< Store Class */
Acroname::BrainStem::SystemClass system; /**< System Class */
Acroname::BrainStem::TemperatureClass temperature[aUSBHUB3C_NUM_TEMPERATURES]; /**
↪< Temperature Class */
Acroname::BrainStem::TimerClass timer[aUSBHUB3C_NUM_TIMERS]; /**< Timer Class */

/** Port ID */
typedef enum PORT_ID : uint8_t {
    kPORT_ID_0 = 0,
    kPORT_ID_1,
    kPORT_ID_2,
    kPORT_ID_3,
    kPORT_ID_4,
    kPORT_ID_5,
    kPORT_ID_CONTROL,
    kPORT_ID_POWER_C
} PORT_ID_t;
};

```

## Python

```

class USBHub3c(Module):

    BASE_ADDRESS = 6
    NUMBER_OF_STORES = 3
    NUMBER_OF_INTERNAL_SLOTS = 12
    NUMBER_OF_RAM_SLOTS = 1
    NUMBER_OF_TEMPERATURES = 3
    NUMBER_OF_TIMERS = 8
    NUMBER_OF_APPS = 4
    NUMBER_OF_POINTERS = 4
    NUMBER_OF_USB_PORTS = 8
    NUMBER_OF_RAILS = 7
    NUMBER_OF_POWER_DELIVERY_PORTS = 8
    STORE_INTERNAL_INDEX = 0
    STORE_RAM_INDEX = 1
    STORE_EEPROM_INDEX = 2

    def __init__(self, address=BASE_ADDRESS, enable_auto_networking=True, model=defs.
↳MODEL_USBHUB_3C):
        super(USBHub3c, self).__init__(address, enable_auto_networking, model)
        self.system = System(self, 0)
        self.app = [App(self, i) for i in range(0, USBHub3c.NUMBER_OF_APPS)]
        self.pointer = [Pointer(self, i) for i in range(0, USBHub3c.NUMBER_OF_
↳POINTERS)]
        self.store = [Store(self, Store.INTERNAL_STORE),
                        Store(self, Store.RAM_STORE),
                        Store(self, Store.EEPROM_STORE)]
        self.temperature = [Temperature(self, i) for i in range(0, USBHub3c.NUMBER_OF_
↳TEMPERATURES)]
        self.timer = [Timer(self, i) for i in range(0, USBHub3c.NUMBER_OF_TIMERS)]
        self.hub = USBHub3c.Hub(self, 0)
        self.rail = [Rail(self, i) for i in range(0, USBHub3c.NUMBER_OF_RAILS)]
        self.pd = [PowerDelivery(self, i) for i in range(0, USBHub3c.NUMBER_OF_POWER_
↳DELIVERY_PORTS)]

    def connect(self, serial_number, **kwargs):
        return super(USBHub3c, self).connect(Spec.USB, serial_number)

    class Hub(USBSystem):
        def __init__(self, module, index):
            super(USBHub3c.Hub, self).__init__(module, index)
            self.port = [Port(module, i) for i in range(0, USBHub3c.NUMBER_OF_USB_
↳PORTS)]

```

In the code example above notice that the member variables app, pointer, pd, rail, store, system, temperature, and timer are all instances of “entity” classes. Once the USBHub3c is instantiated and the device connected the hardware functionality can be controlled via the entity interface.

## C++

```

aUSBHub3c device;
device.discoverAndConnect(USB);
device.hub.port[0].setEnabled(1);

```

## Python

```
device = aUSBHub3c();
device.discoverAndConnect(brainstem.link.Spec.USB);
device.hub.port[0].setEnabled(True);
```

## Supported Entites

See the [Module Entities](#) section of the this document for a complete list of the entities supported by the USB-Hub3c.

## Ports

Each of the 6 regular Type-C ports of the USBHub3c implement separate and independently switched USB2/3 data lines, CC, Vconn and current-limited Vbus lines. USB power, data and SS data can be independently disconnected for advanced USB testing applications. Control of various aspects of USB for each of the port is effected through two entities combined into a **Hub** member and Power Delivery control is effected through the **Power Delivery** entity.

## USBHub3c Hub

There is a single “hub” instance within the module that controls the functionality primarily of the USBHub portion of the USBHub3c. It is made up of two separate entities. The [USB System](#) controls USB hub functionality as a whole, such as switching the upstream port setting enumeration delays and and controlling and monitoring multiple ports at a time. The [Port](#) entity provides fine grained control and monitoring of each port within the hub.

## USBHub3c Power Delivery

There is a [Power Delivery](#) entity for each port on the USBHub3c. The [Power Delivery](#) entity controls much of the Power Delivery functionality of each of the Type-C ports.

## USBHub3c System and Supporting entities

- [System](#): Device level functionality.
- [Rail](#): External rail controls supporting Loading on the Type-C ports.
- [Temperature](#): External rail controls supporting Loading on the Type-C ports.
- [Store](#): Access to non-volatile storage on the device.

## Connections

Each USBHub3c is uniquely addressable and controllable from a host PC via the selected upstream port (0 by default) or through a dedicated Control Port. Acroname’s BrainStem™ link is then established over the USB input and allows a connection to the on-board controller in the USBHub3c. USBHub3c can be controlled via a host running BrainStem APIs

The USBHub3c is capable of many features. These features are organized into groups called [entities](#). Through these entities we can access the vast features of the USBHub3c.

A complete list of all entities and functions can be found at the bottom of the [page](#)

## Establishing Software Control

Software control of the features of the USBHub3c is done with the BrainStem API via a BrainStem link. BrainStem links are done over USB and can be established via the currently selected upstream port (0-6) or the Control Port. After one or more of these ports is connected to a host machine, a user can connect to it via software API:


```
device.link.discoverAndConnect(USB)
```

When multiple Acroname devices are connected to a host, connecting to a specific hub can be done by providing the hub serial number. Further, all connected devices can be found using;

```
brainstem.discover.findAllModules(USB)` ` (Python)
Acroname::BrainStem::Link::sDiscover()` ` (C++)
```

## BrainStem Control Port

The USBHub3c also has a dedicated control channel on the Type C connector labeled “Control”. This is a full-speed USB 2.0 connection for BrainStem interface only. No USB hub traffic can flow on this connection. When a cable is connected to the Type C connector, the BrainStem link can only be established through the Control Port, independent of the selected upstream port. Ports 0-6 are then used only for USB hub traffic to connect upstream and downstream USB devices. When the Control Port is not used, the BrainStem link will share the active upstream USB connection. Using the Control Port provides the ability to completely disconnect USB upstream host connections while maintaining software control of the hub.

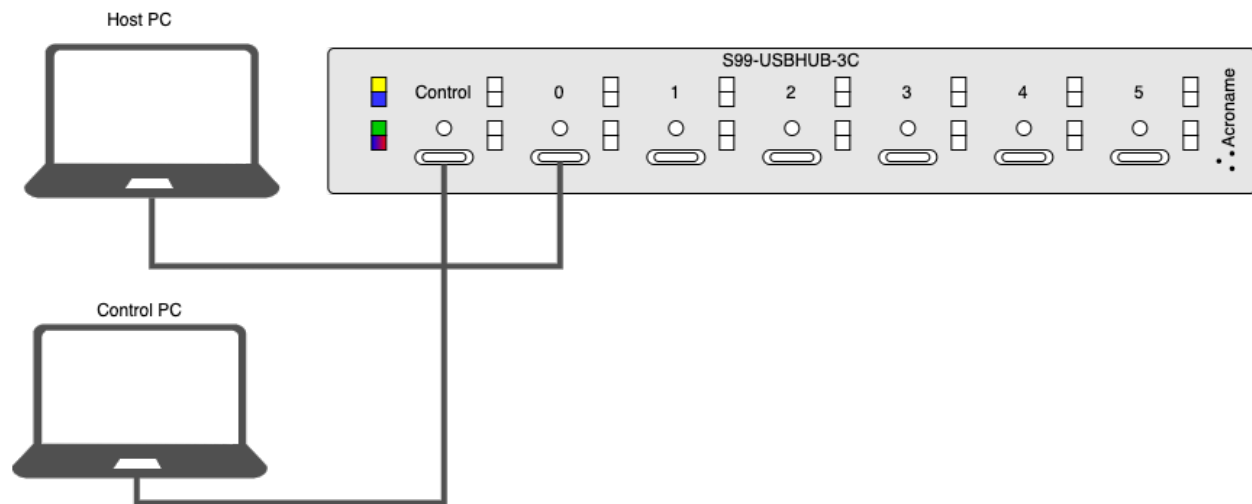

## Using Multiple Hosts with USBHub3c

The USBHub3c supports Acroname’s AnyPort™ technology. Any of the ports 0 - 6 can be selected as the hub’s upstream facing port. This functionality is accessed via the [USBSystem](#) entity. In order to seamlessly switch upstream ports, it is recommended that you use the device’s dedicated control port to connect to and control the USBHub3c.



## Device Drivers

The USBHub3c leverages common operating system drivers that do not require custom installations on modern operating systems.

Some older operating systems may require the installation of a BrainStem USB driver information files to enable software control. Installation details on installing USB drivers can be found within the BrainStem Development Kit under the “drivers” folder. For example, Windows 7 requires the supplied INF to communicate with BrainStem USB devices.

### 1.2.5 USBHub3c Module Entities

#### I2C

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write data on up to two I<sup>2</sup>C busses

---

#### I2C Control

The USBHub3c has the ability to send and receive I2C messages through the back expansion connector.

The I2C interface is controlled through the following APIs:

```
stem.i2c[x].read() \[cpp\] \[python\] \[NET\] \[CCA\]  
stem.i2c[x].write() \[cpp\] \[python\] \[NET\] \[CCA\]  
stem.i2c[x].setPullup() \[cpp\] \[python\] \[NET\] \[CCA\]  
stem.i2c[x].setSpeed() \[cpp\] \[python\] \[NET\] \[CCA\]  
stem.i2c[x].getSpeed() \[cpp\] \[python\] \[NET\] \[CCA\]
```

#### Port

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Port Entity provides control over the most basic items related to a USB Port. This includes actions ranging from a complete port enable and disable to the individual interface control. Voltage and current measurements are also included for devices which support the Port Entity.

---

## Port Control

The USBHub3c has a Port Entity for every Type C port on the device; however, not all ports have the same capabilities. These ports can be referenced by their instance (port[x]) index.

Port Label	Index (port[x])
0	0
1	1
2	2
3	3
4	4
5	5
Control	6
Power C	7

One of the most powerful features of the USBHub3c is its ability to turn ports on and off which is available on Ports 0-5.

```
stem.hub.port[x].setEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB Vbus line for a single port can be done by calling the following method on Ports 0-5.

```
stem.hub.port[x].setPowerEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getPowerEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Manipulating Hi-Speed data and SuperSpeed data lines while not affecting the Vbus lines simultaneously for a single port can be done by calling the following method for Ports 0-5.

```
stem.hub.port[x].setDataEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB 2.0 Hi-Speed data lines for a single port can be done by calling the following for Ports 0-5.

```
stem.hub.port[x].setDataHSEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataHSEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Even further granularity can be achieved through Hi-Speed 1 and Hi-Speed 2 control methods for Ports 0-5.

```
stem.hub.port[x].setDataHS1Enabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataHS1Enabled() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.hub.port[x].setDataHS2Enabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataHS2Enabled() [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB 3.1 SuperSpeed data lines for a single port can be done by calling the following method for Ports 0-5.

```
stem.hub.port[x].setDataSSEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataSSEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Just as with the Hi-Speed lines the USBHub3c also has granular control of the SuperSpeed 1 and SuperSpeed 2 lines.

```
stem.hub.port[x].setDataSS1Enabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataSS1Enabled() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.hub.port[x].setDataSS2Enabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataSS2Enabled() [cpp] [python] [NET] [CCA] [REST]
```

The CC lines can also be individually controlled.

```
stem.hub.port[x].setCCEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getCCEnabled() [cpp] [python] [NET] [CCA] [REST]
```

As you would expect at this point granular control is also provided.

```
stem.hub.port[x].setCC1Enabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getCC1Enabled() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.hub.port[x].setCC2Enabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getCC2Enabled() [cpp] [python] [NET] [CCA] [REST]
```

Finally we come to Vconn control; however, this one overlaps with CC control because Vconn is what the unused CC line becomes (if needed). i.e. if CC1 is used for orientation and/or PD communication then CC2 will become Vconn (Vconn2) if it is enabled. If you are unaware of which pin is being used for Vconn you can simply call:

```
stem.hub.port[x].setVconnEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getVconnEnabled() [cpp] [python] [NET] [CCA] [REST]
```

and the USBHub3c will take care of the guess work for you. If you are aware of which line is being used for Vconn you can use the granular control just as we have outlined above.

```
stem.hub.port[x].setVconn1Enabled() [cpp] [python] [NET]:[CCA] [REST]
stem.hub.port[x].getVconn1Enabled() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.hub.port[x].setVconn2Enabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getVconn2Enabled() [cpp] [python] [NET] [CCA] [REST]
```

## Voltage and Current Measurements

The USBHub3c provides Voltage and Current measurements for both the Vbus and Vconn lines. These values can be acquired for all 8 ports through the following APIs

```
stem.hub.port[x].getVbusVoltage() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getVbusCurrent() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.hub.port[x].getVconnVoltage() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getVconnCurrent() [cpp] [python] [NET] [CCA] [REST]
```

## Power Modes

The ports of the USBHub3c are capable of providing power in multiple formats. The default is Power Delivery (PD), but that can be changed to things like: Standard Downstream Port (SDP), Charging Downstream Port (CDP) / Dedicated Charging Port (DCP), or even Qualcomm Quick Charge (QC) 3 and 4. These modes can be set through:

```
stem.hub.port[x].setPowerMode() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getPowerMode() [cpp] [python] [NET] [CCA] [REST]
```

Power Mode	Value	Define
None	0	portPowerMode_none_Value
SDP	1	portPowerMode_sdp_Value
CDP/DCP	2	portPowerMode_cdp_dcp_Value
QC	3	portPowerMode_qc_Value
PD	4	portPowerMode_pd_Value
PS	5	portPowerMode_ps_Value
USB-C	6	portPowerMode_usbc_Value

---

**Note:** The Power Modes can only be changed when the port power is disabled.

---

## Port Mode

As outlined in the “Port Control” section the USBHub3c can individually manipulate almost every pin on the Type-C connector; however, depending on your application that might require multiple function calls in order to configure the port how you want it. Port Mode on the other hand is a one stop shop that allows you to pick and choose which lines you want enabled or disabled through a single call. Additionally, it has a few other features tucked away inside of it.

```
stem.hub.port[x].setMode() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getMode() [cpp] [python] [NET] [CCA] [REST]
```

Port Mode Item	Bit	Value	Define
Power Enable	0	0/1	portPortMode_powerEnabled_Bit
HS 1 Enable	1	0/1	portPortMode_HS1Enabled_Bit
HS 2 Enable	2	0/1	portPortMode_HS2Enabled_Bit
SS 1 Enable	3	0/1	portPortMode_SS1Enabled_Bit
SS 2 Enable	4	0/1	portPortMode_SS2Enabled_Bit
CC 1 Enable	5	0/1	portPortMode_CC1Enabled_Bit
CC 2 Enable	6	0/1	portPortMode_CC2Enabled_Bit
Vconn 1 Enable	7	0/1	portPortMode_Vconn1Enabled_Bit
Vconn 2 Enable	8	0/1	portPortMode_Vconn2Enabled_Bit
Power Mode: Offset		16	portPortMode_portPowerMode_Offset
Power Mode: Mask		0x7	portPortMode_portPowerMode_Mask
Power Mode: None	16-18	0	portPortMode_portPowerMode_none_Value
Power Mode: SDP	16-18	1	portPortMode_portPowerMode_sdp_Value
Power Mode: CDP/DCP	16-18	2	portPortMode_cdp_dcp_Value
Power Mode: QC	16-18	3	portPortMode_portPowerMode_qc_Value
Power Mode: PD	16-18	4	portPortMode_portPowerMode_pd_Value
Power Mode: PS	16-18	5	portPortMode_portPowerMode_ps_Value
Power Mode: USB-C	16-18	6	portPortMode_portPowerMode_usbc_Value

## Data Role

The data role describes the current configuration of the port in regards to its data direction. In most cases this evaluates to an Upstream Facing Port (UFP) or a Downstream Facing Port (DFP). Upstream in this case means the host side of the port and Downstream refers to the device side. The Data Role can be acquired through:

```
stem.hub.port[x].getDataRole() [cpp] [python] [NET] [CCA] [REST]
```

Data Role	Value	Define
Disabled	0	portDataRole_Disabled_Value
Upstream	1	portDataRole_Upstream_Value
Downstream	2	portDataRole_Downstream_Value
Control	3	portDataRole_Control_Value

## Port Limits and Modes

At the Port level the user has the ability to define current limit and/or a power limit.

```
stem.hub.port[x].setCurrentLimit() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getCurrentLimit() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.hub.port[x].setPowerLimit() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getPowerLimit() [cpp] [python] [NET] [CCA] [REST]
```

If either of these values are exceeded then the USBHub3c will then apply on of the following modes

```
stem.hub.port[x].setCurrentLimitMode() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getCurrentLimitMode() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.hub.port[x].setPowerLimitMode() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getPowerLimitMode() [cpp] [python] [NET] [CCA] [REST]
```

## Available Power

One of the unique features of the USBHub3c is its ability to manage input and output power. Because of smart charging technologies like PD we know exactly how much power we have access too. That input power must then be shared across all of the ports. The following function allows the user to request the amount of power that is currently allocated to the port in question.

```
stem.hub.port[x].getAvailablePower() [cpp] [python] [NET] [CCA] [REST]
```

## Accumulated Power

The USBHub3c is capable of monitoring the accumulated power (energy) it has sank or sourced on both the VBus and VConn lines of each port. This value is presented as mWh.

```
stem.hub.port[x].getVbusAccumulatedPower() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getVconnAccumulatedPower() [cpp] [python] [NET] [CCA] [REST]
```

The accumulated power is set to zero and the accumulation period is restarted with these commands.

```
stem.hub.port[x].resetVbusAccumulatedPower() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].resetVconnAccumulatedPower() [cpp] [python] [NET] [CCA] [REST]
```

## Downstream Data Speed

The USBHub3c can detect if a device has been enumerated. Additionally, it can detect at what speed a device has enumerated at.

```
stem.hub.port[x].getDataSpeed() [cpp] [python] [NET] [CCA] [REST]
```

Data Speed	Bit	Value	Define
1.5 Mbit/s	0	0/1	portDataSpeed_ls_1p5M_Bit
12 Mbit/s	1	0/1	portDataSpeed_fs_12M_Bit
480 Mbit/s	2	0/1	portDataSpeed_hs_480M_Bit
5 Gbit/s	3	0/1	portDataSpeed_ss_5G_Bit
10 Gbit/s	4	0/1	portDataSpeed_ss_10G_Bit
USB 2.0	6	0/1	portDataSpeed_Connected_2p0_Bit
USB 3.0	7	0/1	portDataSpeed_Connected_3p0_Bit

## Power Delivery

**API Documentation:** [cpp] [python] [.NET] [CCA] [REST]

Power Delivery or PD is a power specification which allows more charging options and device behaviors within the USB interface. This Entity will allow you to directly access the vast landscape of PD.

When the capabilities of a PD system are fully realized everything in the system is “smart”. That includes the device, the host and even the cable. All of these elements contain electronics that identify themselves and what they are capable of doing. Because of this complexity it is important to align on a few terms that will be used throughout this Entity.

**Partner** This refers to the side of the PD connection in question. The possible options for this parameter are.

- **Local** Indicates the context/perspective of the Acraname device you are communicating with through a BrainStem connection.
- **Remote** The context/perspective of anything other than the Acraname device.

Partner Type	Value	Define
Local	0	powerdeliveryPartnerLocal
Remote	1	powerdeliveryPartnerRemote

**Power Role** Indicates the direction of power. This value is typically used in the context of a “Partner”. i.e. The remote partner is sinking, which would mean the local partner is sourcing. The possible options for this context are:

- **Sink** Indicates that the partner is taking power in/from.
- **Source** Indicates that the partner is providing power out/to.

Power Roles are also used in the context of what a port is capable of doing.

- **Sink** Device is capable of consuming power.

- **Source** Device is capable of producing power.
- **Sink/Source** Device is capable of both consuming or producing power. Dual Role Port (DRP)

Power Role	Value	Define
Disabled	0	powerdeliveryPowerRoleDisabled
Source	1	powerdeliveryPowerRoleSource
Sink	2	powerdeliveryPowerRoleSink
Source/Sink	3	powerdeliveryPowerRoleSourceSink

### Power Data Objects (PDO)

- PDO's define what a device is capable of doing in the world of Power Delivery. PDO's are bit packed integers defined by the PD Specification which vary in meaning based on the type of PDO.

### Request Data Objects (RDO)

- RDO's are the final agreement after successful Power Delivery negotiations. This RDO is always sent by the sinking device and is the result of the sources advertised PDO's and the needs/requirements of the sinking device. Only one RDO exists per valid connection.

---

## Manipulating PDO's and RDO's

The Power Delivery specification defines a large number of Data Objects and the USBHub3c is capable of manipulating and modifying most of them in some fashion. The most common are PDO's and RDO's which were defined above. Direct manipulation is quite a complex process and is a feature of the Pro version only. It is highly recommended that users of these features first experiment with the Power Rule Editor within HubTool. Once you know the values you want to use manipulation can be done through:

```
stem.pd[x].setPowerDataObject() [cpp] [python] [NET] [CCA] [REST]
stem.pd[x].getPowerDataObject() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.pd[x].setRequestDataObject() [cpp] [python] [NET] [CCA] [REST]
stem.pd[x].getRequestDataObject() [cpp] [python] [NET] [CCA] [REST]
```

### Power Roles Preferred

Preferred Power Role	Value	Define
None	0	pdPowerRolePreferred_None
Source	1	pdPowerRolePreferred_Source
Sink	2	pdPowerRolePreferred_Sink



## Connection State

Connection State	Value	Define
None	0	pdConnectionState_None
Source	1	pdConnectionState_Source
Sink	2	pdConnectionState_Sink
Powered Cable	3	pdConnectionState_PoweredCable
Powered Cable with Sink	4	pdConnectionState_PoweredCableWithSink

## Requests

Given the nature of Power Delivery there are only so many things that are within the direct control of the local USBHub3c. Many of the items on the remote side of the USBHub3c are merely request. In other words items in this category not guaranteed to happen.

```
stem.pd[x].request() [cpp] [python] [NET] [CCA] [REST]
```

Request	Value	Define
Hard Reset	0	pdRequestHardReset
Soft Reset	1	pdRequestSoftReset
Data Reset	2	pdRequestDataReset
Power Role Swap	3	pdRequestPowerRoleSwap
Power Fast Role Swap	4	pdRequestPowerFastRoleSwap
Data Role Swap	5	pdRequestDataRoleSwap
Vconn Swap	6	pdRequestVconnSwap
Sink Go to Min	7	pdRequestSinkGoToMinimum
Remote Source PDOs	8	pdRequestRemoteSourcePowerDataObjects
Remote Sink PDOs	9	pdRequestRemoteSinkPowerDataObjects
Remote Source Extended Capabilities	10	pdRequestRemoteSourceExtendedCapabilities
Remote Sink Extended Capabilities	11	pdRequestRemoteSinkExtendedCapabilities
Status	12	pdRequestStatus
PPS Status	13	pdRequestPPSStatus
Battery Capabilities	14	pdRequestBatteryCapabilities
Battery Status	15	pdRequestBatteryStatus
Manufacturer Info Sop	16	pdRequestManufacturerInfoSop
Manufacturer Info Sopp	17	pdRequestManufacturerInfoSopp
Manufacturer Inof Soppp	18	pdRequestManufacturerInfoSoppp
Discover Identity Sop	19	pdRequestDiscoverIdentitySop
Discover Identity Sopp	20	pdRequestDiscoverIdentitySopp
Discover Identity Soppp	21	pdRequestDiscoverIdentitySoppp
Revision	22	pdRequestRevision
Source Info	23	pdRequestSourceInfo
Country Code	24	pdRequestCountryCode
Country Info	25	pdRequestCountryInfo

Errors return from this function call only indicate the success of sending the request and do not reflect the suc-

cess of the actual request. To find the status of the request you can investigate the outcome of the connection or check the most recent status of the PD stack.

```
stem.pd[x].requestStatus() [cpp] [python] [NET] [CCA] [REST]
```

## Cable Orientation

Although the Type C connector has no visible orientation the connector does have electrical orientation which directly correlates to the Communications Chanel (CC) strapping internal to the cable. The orientation be be obtained via:

```
stem.pd[x].getCableOrientation() [cpp] [python] [NET] [CCA] [REST]
```

Orientation	Value	Define
Invalid	0	pdCableOrientation_Invalid
CC1/A Side	1	pdCableOrientation_CC1
CC2/B Side	2	pdCableOrientation_CC2

## Cable Type

Cable Type	Value	Define
Invalid	0	pdCableType_Invalid
Passive	1	pdCableType_Passive
Active	2	pdCableType_Active

## Override

The USB C connector by default follows rules around maximum cable current and budgetted power. In some test applications, including ones with a Universal Orientation Cable, the port should ignore those rules which is why we have exposed override bits to allow for disabling of specific behavior. Below are the get/set routines for overrides and the bit definitions.

```
stem.pd[x].getOverride() [cpp] [python] [NET] [CCA] [REST]
stem.pd[x].setOverride() [cpp] [python] [NET] [CCA] [REST]
```

Name	Bit	Definition
Cable Current	0	overrides the cable current limiting to 3A unless it's an emarked cable
Port Power	1	Overrides the port power budgetting and just allows full power always
Auto Discovery	2	Overrides the auto discovery feature. With override true the hub will only establish a basic power connection and wont ask for additional vendor information.

## Rail

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Rail entity provides power control to connected devices on some modules. Check the module datasheet to determine if the module has this capability.

the Rail entity controls power provided to downstream devices, it has the ability to enable and disable power, can read voltage on the rail, and provides current consumption information on some modules. There are additional capabilities that certain modules provide which enhance basic power delivery through Kelvin sensing, or by bringing online separate power management functionality.

Certain modules may provide more than one power rail. These are independently controlled and can be accessed via the entity index.

## Rail Control

The USBHub3c has the ability to redirect power from ports 0-5 to an external connection. This applies to both sinking and sourcing and allows load testing of connected devices. Additionally there is a 5V rail that can be used as a trigger or even powering external devices.

Rail	Index: rail[x]
Port 0	0
Port 1	1
Port 2	2
Port 3	3
Port 4	4
Port 5	5
5 Volt	6

Rails are controlled through the following APIs:

```
stem.rail[x].setEnabled() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
stem.rail[x].getEnable() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## System

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

## Serial Number

Every USBHub3c is assigned a unique serial number at the factory. This facilitates an arbitrary number of USBHub3c devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Hardware Version

Get the module's hardware version information.

```
stem.system.getHardwareVersion(hardwareVersion) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

The hardware version is a 32-bit value that encodes hardware revision and variant information. The format is:

Table 5: Hardware Version Bit Breakdown

Bits	Field	Description
24-31	Revision	Hardware revision identifier
16-23	Reserved	Reserved (always 0)
8-15	Variant	Hardware variant identifier
0-7	Reserved	Reserved (always 0)

Table 6: Hardware Revision Values

Value	Description
'B'	Revision B
'C'	Revision C
'D'	Revision D
'E'	Revision E

Table 7: Hardware Variant Values

Value	Description
'P'	PRO
'L'	LAB

The hardware revision and variant are determined by reading hardware strapping pins during initialization to identify the specific board revision and model configuration.

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the USBHub3+ away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() [cpp] [python] [NET] [CCA] [REST]
```

## System Power

The USBHub3c is designed to accept power from either a Type-C PD port or from the unregulated power connector.

In the case of a Type-C PD source all power can be accounted for through Power Delivery (PD) negotiations. For instance, if a PD source advertises 100 Watts; that means we can provide 100 Watts of power to the connected sinking devices. The same can be said for a 60 Watt PD source. This value represents the maximum amount of power the USBHub3c can budget for all of its sinking devices. This value can be acquired through:

```
stem.system.getPowerLimit() [cpp] [python] [NET] [CCA] [REST]
```

It is possible that the limit of your PD source may not match that of what is being advertised by the function above. The contributing factors can be determined by checking the state of the power limit.

```
stem.system.getPowerLimitState() [cpp] [python] [NET] [CCA] [REST]
```

In the case of the unregulated power connector the power budgeting gets a bit more tricky because there is no way of knowing the supplies maximum power. To resolve this the user is allowed to define a power limit maximum that matches that of the connected power supply.

```
stem.system.setPowerLimitMax() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.getPowerLimitMax() [cpp] [python] [NET] [CCA] [REST]
```

---

**Note:** Failure to correctly configure this value can result in undefined behavior such as resets.

---

These values only apply when the input power source is that of the unregulated power connector.

```
stem.system.getInputPowerSource() [cpp] [python] [NET] [CCA] [REST]
```

## Power Budgeting and Behavior

As we alluded to in the System power section the USBHub3c has to be a bit clever about accounting for all input and output power. The method by which an input power source is selected and used is referred to as Input Power Behavior. It can be configured through

```
stem.system.setInputPowerBehavior() [cpp] [python] [NET] [CCA] [REST]
stem.system.getInputPowerBehavior() [cpp] [python] [NET] [CCA] [REST]
```

Some behaviors require additional configuration. In most cases this is a list of port numbers that define which ports should be prioritized for input power.

```
stem.system.setInputPowerBehaviorConfig() [cpp] [python] [NET] [CCA] [REST]
stem.system.getInputPowerBehaviorConfig() [cpp] [python] [NET] [CCA] [REST]
```

To determine which power source is currently active and providing power to the system, use:

```
stem.system.getInputPowerSource() [cpp] [python] [NET] [CCA] [REST]
```

This command returns the port index of the active input power source. Port indices 0-7 correspond to the USB-C ports (ports 0-7), while an index of 8 indicates the unregulated power connector (VUNREG) input.

## Voltage and Current Monitoring

The USBHub3c provides monitoring capabilities for the system's input voltage and current. These measurements allow users to track the power consumption and characteristics of the input power source.

## Input Voltage

The module's input voltage can be retrieved using:

```
stem.system.getInputVoltage() [cpp] [python] [NET] [CCA] [REST]
```

This command returns the input supply voltage of the USBHub3c in microvolts ( $\mu\text{V}$ ). The voltage corresponds to the active input power source, which can be determined using `getInputPowerSource()` (see *Power Budgeting and Behavior*).

## Input Current

The module's input current can be retrieved using:

```
stem.system.getInputCurrent() [cpp] [python] [NET] [CCA] [REST]
```

This command returns the input current being drawn from the power source in microamps ( $\mu\text{A}$ ). The current corresponds to the active input power source, which can be determined using `getInputPowerSource()` (see *Power Budgeting and Behavior*).

## Temperature

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Certain modules have a temperature measurement available. The temperature entity gives access to these measurements. Check your module datasheet to see if your module has a temperature entity.

---

## System Temperature

The temperature of the USBHub3c can be measured with:

```
stem.temperature[0].getValue( $\mu\text{C}$ ) [cpp] [python] [NET] [CCA] [REST]
```

where temperature is in micro-degrees Celcius.

## UART

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The UART entity is a class which allows a user to configure and control an arbitrary stream of serial data. These streams can represent a number of different transports, including a RS232 external interface, a virtual COM port, and onboard UART interfaces from system components. This entity allows each transport to be configured as either an endpoint, or as a passthrough between transports, similar to a switchboard of a telephone operator.

---

## Extron Control

The USBHub3c has the ability to be controlled through an RS232 interface on the external expansion connector of the USBHub3c. The USBHub3c also supports VCOM (Virtual COM port) channels for USB-based serial communication. For additional information about the serial protocol, reference *USBHub3c Serial Communication Feature*

## UART Entity Indices

The USBHub3c provides the following UART entity indices:

Table 8: UART Entity Indices

Index	Description
0	Hardware RS232 (External Expansion Connector)
1	VCOM_0 (Virtual COM port channel)

For additional information about the serial protocol, reference *USBHub3c Serial Communication Feature*

## UART APIs

The USBHub3c has four protocol values enumerated.

Value	Description
0	Disabled/Undefined
1	Extron Compatible Protocol
2	Brainstem Transport
6	Loopback

Uarts are controlled through the following APIs:

```
stem.uart[x].setEnabled() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]  
stem.uart[x].getEnable() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]  
stem.uart[x].setBaudRate() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]  
stem.uart[x].getBaudRate() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]  
stem.uart[x].setProtocol() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```



```
stem.uart[x].getProtocol() [cpp] [python] [NET] [CCA] [REST]
stem.uart[x].setLinkChannel() [cpp] [python] [NET] [CCA] [REST]
stem.uart[x].getLinkChannel() [cpp] [python] [NET] [CCA] [REST]
stem.uart[x].setStopBits() [cpp] [python] [NET] [CCA] [REST]
stem.uart[x].getStopBits() [cpp] [python] [NET] [CCA] [REST]
stem.uart[x].setParity() [cpp] [python] [NET] [CCA] [REST]
stem.uart[x].getParity() [cpp] [python] [NET] [CCA] [REST]
stem.uart[x].setDataBits() [cpp] [python] [NET] [CCA] [REST]
stem.uart[x].getDataBits() [cpp] [python] [NET] [CCA] [REST]
stem.uart[x].getCapableProtocols() [cpp] [python] [NET] [CCA] [REST]
stem.uart[x].getAvailableProtocols() [cpp] [python] [NET] [CCA] [REST]
```

## USB System

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The USBSystem class provides high level control of the lower level *Port Entity*

---

## Upstream Control

The USBHub3c has the unique ability to designate any of its full featured (0-5) ports as the upstream connection. This is very useful for moving devices between hosts or testing dual role port functionality.

```
stem.hub.setUpstream() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getUpstream() [cpp] [python] [NET] [CCA] [REST]
```

## Enumeration Delay

Once a USB device is detected by the USBHub3c it is possible to delay its connection to an upstream host computer and subsequent enumeration on the USB bus. The enumeration delay can mitigate or eliminate host kernel instabilities by forcing devices to enumerate in slow succession, allowing a focus on validation of drivers and software. The enumeration delay is configured in milliseconds, representing the time delay between enabling each successive port. Enumeration delay is applied when the hub powers on or when a new upstream connection is made.

```
stem.hub.setEnumerationDelay() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getEnumerationDelay() [cpp] [python] [NET] [CCA] [REST]
```

## Power Behavior

Ports 0-5 of the USBHub3c are all capable of sourcing 100 watts pending the system has access to that amount of power. In most cases 500 Watts is not available and therefore the system has to be clever about how it allocates power. The method in which power is allocated across these ports is called the power behavior and it can be configured through

```
stem.hub.setPowerBehavior() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getPowerBehavior() [cpp] [python] [NET] [CCA] [REST]
```

Some behaviors require additional configuration. In most cases this is a list of port numbers that define which ports should be prioritized for power allocation.

```
stem.hub.setPowerBehaviorConfig() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getPowerBehaviorConfig() [cpp] [python] [NET] [CCA] [REST]
```

## Data Behavior

Many devices are now capable of being Dual Role Ports (DRP) meaning that they can be both a device (downstream) and a host (upstream). These devices can request to become a host at anytime which may or may not contradict the users desired upstream setting. The method in which these events are handled is referred to as data behavior. Just as power behavior it can be configured with a similar set of APIs

List of Available Data Behaviors for USBHub3c

Behavior	Value	Define
Hard Coded	0	usbsystemDataBehavior_HardCoded
Reserved	1	usbsystemDataBehavior_Reserved
Port Priority	2	usbsystemDataBehavior_PortPriority

### Hard Coded (Default Configuration)

The Hard Coded data behavior is used to fix the Upstream port to a single port and not allow it to move except for a command through the [Set Upstream](#) API or via the *Serial Communication Feature*.

### Port Priority

The Port Priority data behavior prioritizes making the Upstream port the lowest numbered port on the front of the USBHub3c that is capable of being an Upstream port. This means a USB-C connection that's a sink or a USB PD connection that has described itself as USB Coms Capable and can act as a Host.

## Relevant API's

```
stem.hub.setDataRoleBehavior() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getDataRoleBehavior() [cpp] [python] [NET] [CCA] [REST]
```

Some behaviors require additional configuration. In most cases this is a list of port numbers that define which ports should be prioritised for power allocation.

```
stem.hub.setDataRoleBehaviorConfig() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getDataRoleBehaviorConfig() [cpp] [python] [NET] [CCA] [REST]
```

## High Level Control of the Port Entity

The USBSystem Entity and the *Port Entity* are capable of doing many of the same things its merely their perspective. The PortClass acts on individual elements where as the USBSystemClass acts on all of the ports. For instance if you wanted to enable all of the ports of the USBHub3c you would need to loop through each index and individually enable each port. With the USBSystem class you can do the exact same thing, but with a single API call with each bit representing a given port.

```
//USBSystem Entity method.
stem.hub.setEnabledList(0x3F); //0b0011 1111 bits 0-5 set high = ports 0-5

//Port Entity method.
for(int x = 0; x <= 5; x++) {
    stem.hub.port[x].setEnabled(true);
}
```

```
stem.hub.setEnabledList() [cpp] [python] [NET] [CCA] [REST]
stem.hub.setEnabledList() [cpp] [python] [NET] [CCA] [REST]
```

The same logic can also be applied to Data Role, Mode and State elements, but with slightly different interfaces depending on the size of the data.

```
stem.hub.setModeList() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getModeList() [cpp] [python] [NET] [CCA] [REST]
```

Data Role and State are slightly different in that there are only get calls for these functions.

```
stem.hub.getDataRoleList() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.hub.getStateList() [cpp] [python] [NET] [CCA] [REST]
```

## Legacy Support

Previous Acroname USB products made use of the *USB Entity* for measurements, configuration and control; however, the USBHub3c aims to organize these capabilities in a cleaner fashion through the use of the all new *Port* and *USBSystem* Entities.

In efforts to ease this transition we have added Legacy support to the USBHub3c by implementing limited USB Entity functionality. The following functions of the *USB Entity* will still behave as they did in previous Acroname USB products.

## Port

```
stem.usb.setPortEnable(channel) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPortDisable(channel) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getPortState(channel) [cpp] [python] [NET] [CCA] [REST]
```

Port State Item	Bit	Value
VBus is enabled	6	0/1
USB2A is enabled	4	0/1
USB2B is enabled	5	0/1
SuperSpeedA is enabled	7	0/1
SuperSpeedB is enabled	8	0/1
CC1 is enabled	12	0/1
CC2 is enabled	13	0/1

## Power

```
stem.usb.setPowerEnable(channel) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPowerDisable(channel) [cpp] [python] [NET] [CCA] [REST]
```

## Voltage

```
stem.usb.getPortVoltage(channel,  $\mu$ V) [cpp] [python] [NET] [CCA] [REST]
```

## Current

```
stem.usb.getPortCurrent(channel,  $\mu$ A) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getPortCurrentLimit(channel,  $\mu$ A) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPortCurrentLimit(channel,  $\mu$ A) [cpp] [python] [NET] [CCA] [REST]
```

## Data

```
stem.usb.setDataEnable(channel) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setDataDisable(channel) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setHiSpeedDataEnable(channel) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setHiSpeedDataDisable(channel) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setSuperSpeedDataEnable(channel) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setSuperSpeedDataDisable(channel) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setCC1Enable(channel, enable) [cpp] [python] [NET] [CCA] [REST]
stem.usb.getCC1Enable(channel, enable) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setCC2Enable(channel, enable) [cpp] [python] [NET] [CCA] [REST]
stem.usb.getCC2Enable(channel, enable) [cpp] [python] [NET] [CCA] [REST]
```

## Complete list of Supported Entities and Functions

Entity Class	Entity Option	Variable(s) Notes
store[0-2]	getSlotState	
	loadSlot	
	unloadSlot	
	slotEnable	
	slotDisable	
	getSlotCapacity	
	getSlotSize	
	setSlotLocked	
	getSlotLocked	
	getModule	
system[0]	getModuleBaseAddress	
	setRouter	
	getRouter	
	setHBInterval	
	getHBInterval	
	setLED	
	getLED	
	getVersion	
	getModel	
	getHardwareVersion	
	getSerialNumber	
	save	
	reset	
	logEvents	
	getUptime	
	getTemperature	
	getMinimumTemperature	
	getMaximumTemperature	
	getInputPowerSource	
	getInputVoltage	

continues on next page

Table 9 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
	getInputCurrent	
	getModuleHardwareOffset	
	getModuleSoftwareOffset	
	getRouterAddressSetting	
	routeToMe	
	getUnregulatedVoltage	
	getUnregulatedCurrent	
	getPowerLimit	
	getPowerLimitMax	
	setPowerLimitMax	
	getName	
	setName	
	resetDeviceToFactoryDefaults	
temperature[0-2]	getValue	
	getValueMax	
	getValueMin	
port[0-7]	getVbusVoltage	
	getVbusCurrent	
	getVconnVoltage	
	getVconnCurrent	
	getPowerEnabled	
	setPowerEnabled	
	getPowerMode	
	setPowerMode	
	getEnabled	
	setEnabled	
	getDataEnabled	
	setDataEnabled	
	getDataHSEnabled	
	setDataHSEnabled	
	getDataHS1Enabled	
	setDataHS1Enabled	
	getDataHS2Enabled	
	setDataHS2Enabled	
	getDataSSEnabled	
	setDataSSEnabled	
	getDataSS1Enabled	
	setDataSS1Enabled	
	getDataSS2Enabled	
	setDataSS2Enabled	
	getVconnEnabled	
	setVconnEnabled	
	getVconn1Enabled	
	setVconn1Enabled	
	getVconn2Enabled	
	setVconn2Enabled	
	getDataRole	
	getDataSpeed	
	getCCEnabled	
	setCCEnabled	

continues on next page

Table 9 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
	getCC1Enabled	
	setCC1Enabled	
	getCC2Enabled	
	setCC2Enabled	
	getCCBias	
	setCCBias	
	getMode	
	setMode	
	getState	
	getName	
	setName	
	getCurrentLimit	
	setCurrentLimit	
	getAllocatedPower	
	getAvailablePower	
	getPowerLimit	
	setPowerLimit	
	getVbusAccumulatedPower	
	resetVbusAccumulatedPower	
	getVconnAccumulatedPower	
	resetVconnAccumulatedPower	
	getHSBoost	
	setHSBoost	
	getDataHSRoutingBehavior	
	setDataHSRoutingBehavior	
	getDataSSRoutingBehavior	
	setDataSSRoutingBehavior	
USBSystem [0]	getUpstream	
	setUpstream	
	setDataRoleBehavior	
PowerDelivery [0-8]	getConnectionState	
	getNumberOfPowerDataObjects	
	setPowerDataObject	
	getPowerDataObject	
	resetPowerDataObjectToDefault	
	getPowerDataObjectList	
	setPowerDataObjectEnabled	
	getPowerDataObjectEnabled	
	getPowerDataObjectEnabledList	
	setRequestDataObject	
	getRequestDataObject	
	getPowerRole	
	setPowerRole	
	getPowerRolePreferred	
	setPowerRolePreferred	
	getCableVoltageMax	
	getCableCurrentMax	
	getCableSpeedMax	
	getCableType	

continues on next page

Table 9 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
UART[0-1]	getCableOrientation	
	setOverrides	
	getOverrides	
	request	
	setCurrentLimitBehavior	
	getCurrentLimitBehavior	
	getPeakCurrentConfiguration	
	setPeakCurrentConfiguration	
	getFastRoleSwapCurrent	
	setFastRoleSwapCurrent	
	resetEntityToFactoryDefaults	
	setEnabled	
	getEnabled	
	setBaudRate	
	getBaudRate	
	setProtocol	
	getProtocol	
	setLinkChannel	
	getLinkChannel	
	setStopBits	
	getStopBits	
	setParity	
	getParity	
	setDataBits	
	getDataBits	
	setFlowControl	
	getFlowControl	
	getCapableProtocols	
	getAvailableProtocols	
rail[0-6]	setEnabled	
i2c[0]	getEnabled	
	read	
	write	
	setPullup	
usb[0]	setSpeed	
	getSpeed	
	setPortEnable	Ports 0-5
	setPortDisable	Ports 0-5
	setDataEnable	Ports 0-5
	setDataDisable	Ports 0-5
	setHiSpeedDataEnable	Ports 0-5
	setHiSpeedDataDisable	Ports 0-5
	setSuperSpeedDataEnable	Ports 0-5
	setSuperSpeedDataDisable	Ports 0-5
	setPowerEnable	Ports 0-5
	setPowerDisable	Ports 0-5
	setCC1Enable	Ports 0-5
	getCC1Enable	Ports 0-5
	setCC2Enable	Ports 0-5
	getCC2Enable	Ports 0-5

continues on next page



Table 9 – continued from previous page


Entity Class	Entity Option	Variable(s) Notes
	getPortVoltage	Ports 0-5
	getPortCurrent	Ports 0-5
	getPortCurrentLimit	Ports 0-5
	setPortCurrentLimit	Ports 0-5

## 1.2.6 USBHub3c Software Features

**Note:** Some software features may require a license update or purchase from Acroname. See [Updating Software Licenses](#) for information on how to update your device's licenses.

### External Load Testing

The External Load software feature allows for load testing of devices connected to ports 0-5 by way of an external connector on the back of the hub. This connector allows you to wire the USBHub3c to programmable or resistive loads so that you can test if your device is sourcing power properly.

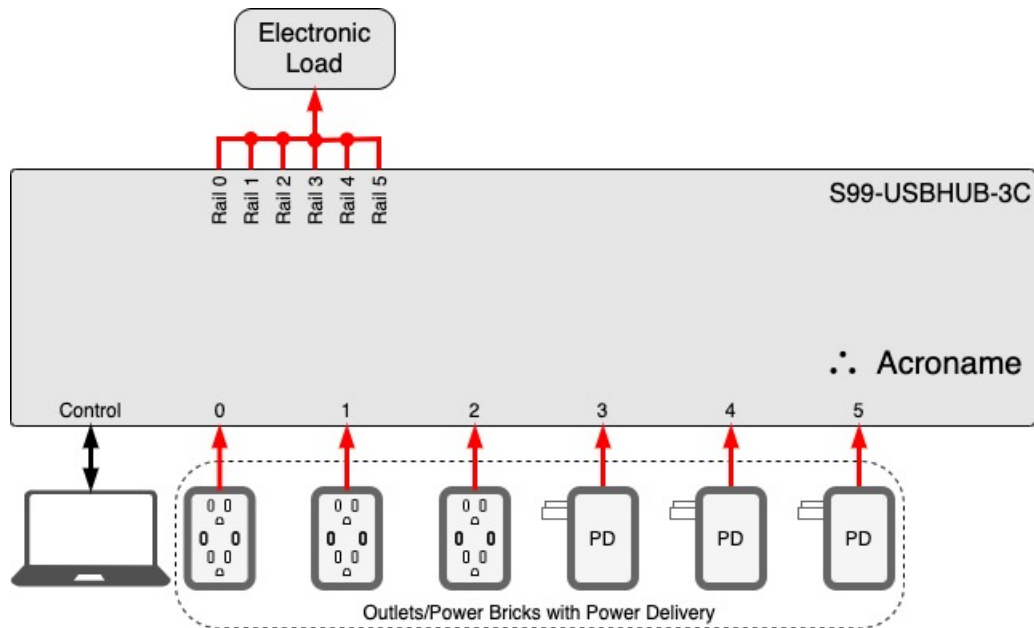

This software feature can be exploited through the *USBHub3c Rail Entity*.

Although the external load feature will work in any mode it is only recommended to be used when the USBHub3c is sinking.

**Example:****C++**

```
static const int TEST_PORT = 1;

aUSBHub3c stem;
stem.discoverAndConnect(USB);

// Check if we are sourcing power
uint8_t connectionState = 0;
stem.pd[TEST_PORT].getConnectionState(&connectionState);

// Ensure we are sinking
if (connectionState == powerdeliveryPowerRoleSink) {
    stem.rail[TEST_PORT].setEnabled(true);

    // Do Stuff
    int32_t voltage = 0;
    int32_t current = 0;
    stem.hub.port[TEST_PORT].getVbusVoltage(&voltage);
    stem.hub.port[TEST_PORT].getVbusCurrent(&current);
    // Do Stuff

    stem.rail[TEST_PORT].setEnabled(false);
}

stem.disconnect();
```

**Python**

```
TEST_PORT = 1;

stem = brainstem.stem.USBHub3c()
stem.discoverAndConnect(brainstem.link.Spec.USB);

# Check if we are sourcing power
connection_state_result = stem.pd[TEST_PORT].getConnectionState();

# Ensure we are sinking
if ((connection_state_result.value == _BS_C.powerdeliveryPowerRoleSink):
    stem.rail[TEST_PORT].setEnabled(true)

    # Do Stuff
    voltage_result = stem.hub.port[TEST_PORT].getVbusVoltage();
    current_result = stem.hub.port[TEST_PORT].getVbusCurrent();
    # Do Stuff

    stem.rail[TEST_PORT].setEnabled(false)

stem.disconnect()
```

## Relevant API's

```
stem.rail[x].setEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.rail[x].getEnable() [cpp] [python] [NET] [CCA] [REST]
```

## PD Builder

The PD Builder feature allows the user to modify all *Power Data Objects (PDO)* presented by the USBHub3c. This includes both sourcing and sinking PDOs of the USBHub3c.

### Use Cases

- Designing PDOs for you own device
- Exposing DUTs to PDOs
- Restricting DUTs from PDOs

### Editable Items

PDO Types	PDO Flags	PDO Limits
Fixed	Unchunked message support	Voltage
Variable	Dual role data	Current
Battery	USB communications possible	Power
APDO	External power	
	USB suspend	
	Dual role power	
	High capability	
	Fast role swap current	

## HubTool

HubTool allows the user to visually build a PDO without needing to know anything about the Power Delivery specification. Once created you can immediately apply it to the USBHub3c.

Port: 1 ⬇ ⬆ Power Type: Local Source Rules ⬇ ⬆

En	Rule	PDO Type	Min Voltage (mV)	Max Voltage (mV)	Power (mW)	Current (mA)	Raw	Set Rule	Set Default
<input checked="" type="checkbox"/>	1	Fixed	5000	5000		3000	0x3F01912C	Set	Reset
<input checked="" type="checkbox"/>	2	Fixed	9000	9000		3000	0x0002D12C	Set	Reset
<input checked="" type="checkbox"/>	3	Variable	3300	21000		5000	0x9A4109F4	Set	Reset
<input checked="" type="checkbox"/>	4	Battery	<input type="text" value="3400"/>	21000	100000		0x5A410990	Set	Reset
<input checked="" type="checkbox"/>	5	ADPO	3000	21000		5000	0xC1A41E64	Set	Reset
<input type="checkbox"/>	6	Fixed	0	0		0	0x00000000	Set	Reset
<input type="checkbox"/>	7	Fixed	0	0		0	0x00000000	Set	Reset

## Example

### C++

```
static const int TEST_PORT = 1;
static const uint32_t MY_CUSTOM_SOURCE_PDO = 0x0001912C;
static const uint32_t MY_CUSTOM_SINK_PDO = 0x0002D12C;

aUSBHub3c stem;
stem.discoverAndConnect(USB);

//Change local SOURCE PDO 1 to MY_CUSTOM_SOURCE_PDO
stem.pd[TEST_PORT].setPowerDataObject(powerdeliveryPowerRoleSource, 1, MY_CUSTOM_
↳SOURCE_PDO)

//Change local SINK PDO 1 to MY_CUSTOM_SINK_PDO
stem.pd[TEST_PORT].setPowerDataObject(powerdeliveryPowerRoleSink, 1, MY_CUSTOM_SINK_
↳PDO)

//Do Stuff

stem.disconnect();
```

### Python

```
TEST_PORT = 1;
MY_CUSTOM_SOURCE_PDO = 0x0001912C;
MY_CUSTOM_SINK_PDO = 0x0002D12C;

stem = brainstem.stem.USBHub3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

#Change local SOURCE PDO 1 to MY_CUSTOM_SOURCE_PDO
stem.pd[TEST_PORT].setPowerDataObject(powerdeliveryPowerRoleSource, 1, MY_CUSTOM_
↳SOURCE_PDO)

#Change local SINK PDO 1 to MY_CUSTOM_SINK_PDO
stem.pd[TEST_PORT].setPowerDataObject(powerdeliveryPowerRoleSink, 1, MY_CUSTOM_SINK_
↳PDO)

#Do Stuff

stem.disconnect();
```

## Relevant API's

```
stem.hub.pd[x].setPowerDataObject() [cpp] [python] [NET] [CCA] [REST]
stem.hub.pd[x].getPowerDataObject() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.hub.pd[x].setPowerDataObjectEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.pd[x].getPowerDataObjectEnabled() [cpp] [python] [NET] [CCA] [REST]
```

## PD Logging

The PD Logging feature allows you to monitor Power Delivery communication on all 8 ports of the USBHub3c.

### Use Cases

- Capture Power Delivery (PD) events across all USB-C ports
- Decode PD messages
- Export PD message logs to CSV
- Filter USB-PD traffic by message type.
- Clearly show PD message direction.
- Send arbitrary Vendor Defined Messages (VDMs)

### HubTool

With HubTool you can easily visualize the Power Delivery log.

The screenshot displays the HubTool application window. At the top, 'System Information' shows SN: 0x4F7A0C15, Model: 24, Firmware: 2.9.6, Module: 6, Voltage: 20.0 VDC, Current: 0.5 A, Temperature: 30 C, Hardware Offset: 0, Router: 6, and SW Offset: 0. Below this are tabs for Summary, Port 0, Port 2, Port 3, Port 4, Port 5, Control, Power C, IO Expander, Power, and PD Logging. The PD Logging tab is active, showing a table of logs with columns: Timestamp (S:uS), Port, Direction, Spec, SOP, Power Role, Data Role, ID, Packet Type, Msg Type, and Raw. The table contains 25 entries of PD messages. At the bottom, there are sections for 'Software Feature' (Rail Enable, QC Mode, PDO Editing, VBUS Validation, PD Logging all Enabled) and 'Device Type' (USBHub3c, USBHub3p).

	Timestamp (S:uS)	Port	Direction	Spec	SOP	Power Role	Data Role	ID	Packet Type	Msg Type	Raw
1	1429:635630	1	RX	V2.0	SOP	Source	DFP	0	Data	Source Capabilities	0x61 0x11 0x96 0x90 0x01 0x36
2	1429:645760	1	TX	V2.0	SOP	Sink	UFP	0	Data	Request	0x42 0x10 0x64 0x90 0x01 0x10
3	1429:654670	1	RX	V2.0	SOP	Source	DFP	1	Control	Accept	0x63 0x03
4	1429:680910	1	RX	V2.0	SOP	Source	DFP	2	Control	PS Ready	0x66 0x05
5	1429:690560	1	RX	V2.0	SOP	Source	DFP	3	Data	Vendor Defined	0x6F 0x17 0x01 0x80 0x00 0xFF
6	1429:701040	1	TX	V2.0	SOP	Sink	UFP	1	Data	Vendor Defined	0x4F 0x72 0x41 0x80 0x00 0xFF 0xFF 0x24 0xA...
7	1429:707240	1	RX	V2.0	SOP	Source	DFP	4	Data	Vendor Defined	0x6F 0x19 0x02 0x80 0x00 0xFF
8	1429:712110	1	TX	V2.0	SOP	Sink	UFP	2	Data	Vendor Defined	0x4F 0x24 0x42 0x80 0x00 0xFF 0x00 0x00 0xF...
9	1429:717770	1	RX	V2.0	SOP	Source	DFP	5	Data	Vendor Defined	0x6F 0x1B 0x02 0x80 0x00 0xFF
10	1429:724220	1	TX	V2.0	SOP	Sink	UFP	3	Data	Vendor Defined	0x4F 0x26 0x42 0x80 0x00 0xFF 0x00 0x00 0xF...
11	1429:948940	1	TX	V2.0	SOP	Sink	UFP	4	Control	VConn Swap	0x4B 0x08
12	1429:957240	1	RX	V2.0	SOP	Source	DFP	6	Control	Accept	0x63 0x0D
13	1430:18980	1	TX	V2.0	SOP	Sink	UFP	5	Control	PS Ready	0x46 0x0A
14	1430:72450	1	TX	V2.0	S...	Sink	UFP	0	Data	Vendor Defined	0x4F 0x10 0x01 0x80 0x00 0xFF
15	1430:158980	1	TX	V2.0	S...	Sink	UFP	1	Data	Vendor Defined	0x4F 0x12 0x01 0x80 0x00 0xFF
16	1430:168330	1	RX	V2.0	S...	Source	UFP	1	Data	Vendor Defined	0x4F 0x53 0x41 0x80 0x00 0xFF 0x11 0x07 0x00...
17	1430:262130	1	TX	V2.0	SOP	Sink	UFP	6	Control	DR Swap	0x49 0x0C
18	1430:269210	1	RX	V2.0	SOP	Source	DFP	7	Control	Accept	0x63 0x0F
19	1430:515440	1	TX	V2.0	SOP	Sink	DFP	7	Control	PR Swap	0x6A 0x0E
20	1430:523230	1	RX	V2.0	SOP	Source	UFP	0	Control	Accept	0x43 0x01
21	1430:625040	1	RX	V2.0	SOP	Sink	UFP	1	Control	PS Ready	0x46 0x02
22	1430:741540	1	TX	V2.0	SOP	Source	DFP	0	Control	PS Ready	0x66 0x01
23	1430:903350	1	TX	V2.0	SOP	Source	DFP	0	Data	Source Capabilities	0x61 0x51 0x2C 0x91 0x01 0x3E 0x2C 0xD1 0x02...
24	1430:915290	1	RX	V2.0	SOP	Sink	UFP	0	Data	Request	0x42 0x10 0x2C 0xB1 0x04 0x13
25	1430:919090	1	TX	V2.0	SOP	Source	DFP	1	Control	Accept	0x63 0x03

Software Feature: Rail Enable: Enabled  
 Software Feature: QC Mode: Enabled  
 Software Feature: PDO Editing: Enabled  
 Software Feature: VBUS Validation: Enabled  
 Software Feature: PD Logging: Enabled  
 USBHub3c: 0x4F7A0C15, Error: 7 CMD: stem.hub.port[x].setVoltageSetpoint

Device Type: | Serial Number:  
 USBHub3c 4F7A0C15  
 USBHub3p AF62130D

## Relevant API's


```
stem.pd[x].setUEIBytes() [cpp] [python] [NET] [CCA]
```

## Quick Charge™


The USBHub3c Quick Charge™ feature adds the ability to enable the Quick Charge™ port power mode on one or more ports. This enables fast charging on devices that support Quick Charge™.

Version	Voltage	Current	Power
QC1	0-6.3V	2A	10W
QC2	Class A: 5V, 9V, 12V Class B: 5V, 9V, 12V, 20V	1.67A, 2A, or 3A	18W
QC3	3.6-22V in 200mV steps	2.6A or 4.6A	36W
QC4	3.6-20V in 20mV steps 5V, 9V (PD compatible) 3-21V in 20mV steps (PD3 PPS mode)	2.6A or 4.6A 3A (PD modes)	100W

## HubTool - QC 2.0

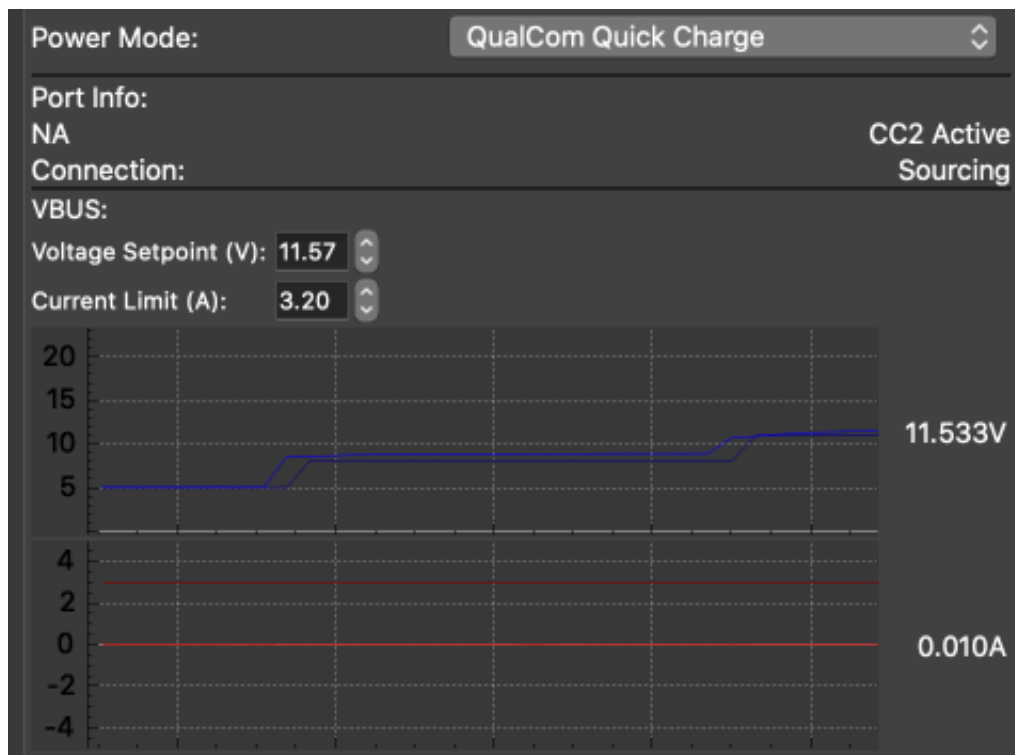

## HubTool - QC 3.0

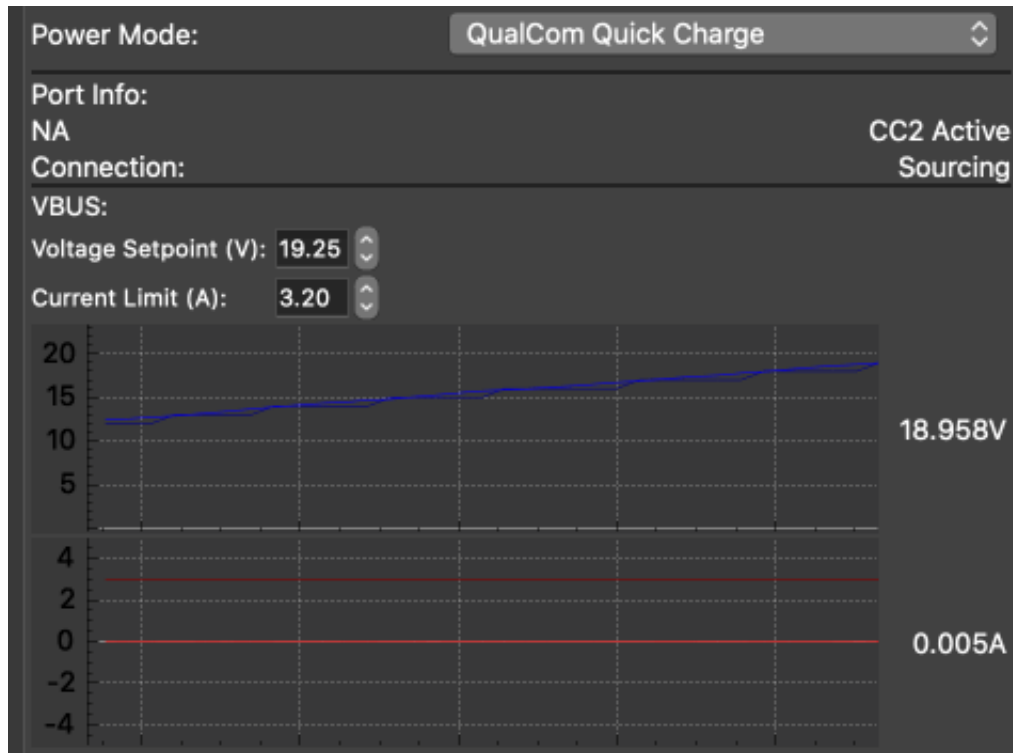

This software feature can be exploited through the *USBHub3c Port Entity*

## Example

### C++

```
static const int TEST_PORT = 1;

aUSBHub3c stem;
stem.discoverAndConnect(USB);

//Configure the Power mode: Quick Charge™
stem.hub.port[TEST_PORT].setPowerMode(portPowerMode_qc_Value);

//Do Stuff

stem.disconnect();
```

### Python

```
TEST_PORT = 1;

stem = brainstem.stem.USBHub3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

## Configure the Power mode: Quick Charge™
stem.hub.port[TEST_PORT].setPowerMode(_BS_C.portPowerMode_qc_Value);

#Do Stuff
```

(continues on next page)

(continued from previous page)

```
stem.disconnect()
```

## Relevant API's

```
stem.hub.port[x].setPowerMode() [cpp] [python] [NET] [CCA] [REST] stem.hub.  
port[x].getPowerMode() [cpp] [python] [NET] [CCA] [REST]
```

## VBus Validation

The VBus Validation software feature gives the user full control of current limit and voltage setpoint for ports 0-5. This feature can be used in two different applications; Within the Power Delivery specification or as a fully programmable power supply.

### Use Cases

- Over voltage testing
- Under voltage testing
- 6 channel bench top power supply

---

**Note:** This feature has the ability to damage your device. Acroname is not responsible for any damage incurred by using this feature.

---

This software feature can be exploited through the *USBHub3c Port Entity*


## VBus Validation - Power Delivery Mode

Using the VBus Validation feature within the power delivery mode allows the user to test if their device responds properly when a power source is behaving incorrectly or operating at the edge of specification.

It is important to remember that in this mode the USBHub3c 's power delivery engine also has access to these controls and therefore it is important to allow the USBHub3c and the device to finish negotiations before adjusting these values. Additionally, any PD events or errors can trigger re-negotiations which will replace any values the user has set.

This mode should only be used when the Power Delivery connection state is sourcing.



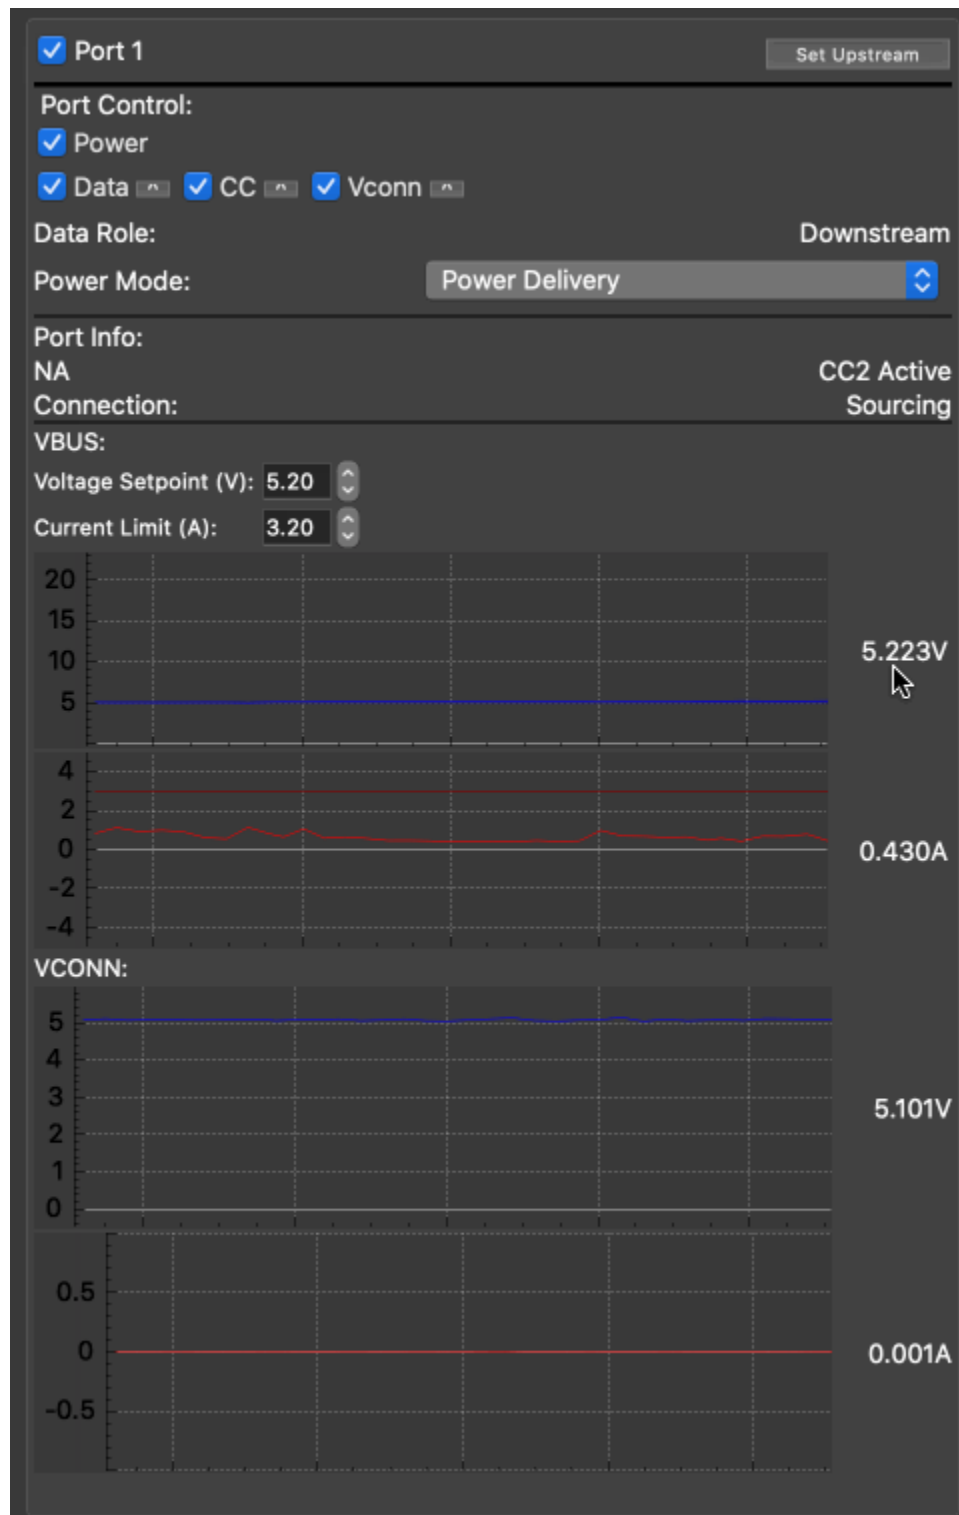

### Example

C++

```
static const int TEST_PORT = 1;
```

(continues on next page)

(continued from previous page)

```

aUSBHub3c stem;
stem.discoverAndConnect (USB);

//Configure the Power mode: Power Delivery (default)
stem.hub.port[TEST_PORT].setPowerMode(portPowerMode_pd_Value);

//Check if we are sourcing power
uint8_t connectionState = 0;
stem.pd[TEST_PORT].getConnectionState(&connectionState);

//Ensure we have an RDO from the remote.
//This ensures we have finished negotiating.
uint32_t rdo = 0;
stem.pd[TEST_PORT].getRequestDataObject(powerdeliveryPartnerRemote, &rdo);

if((connectionState == powerdeliveryPowerRoleSource) &&
    (rdo > 0))
{
    //Do Stuff
    //Set desired port voltage and limit.
    stem.hub.port[TEST_PORT].setVoltageSetpoint(5500000); //5.5VDC
    stem.hub.port[TEST_PORT].setCurrentLimit(500000); //500mA
    //Do Stuff
}

stem.disconnect()

```

## Python

```

TEST_PORT = 1;

stem = brainstem.stem.USBHub3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

#Configure the Power mode: Power Delivery (default)
stem.hub.port[TEST_PORT].setPowerMode(_BS_C.portPowerMode_pd_Value);

#Check if we are sourcing power
connection_state_result = stem.pd[TEST_PORT].getConnectionState();

#Ensure we have an RDO from the remote.
#This ensures we have finished negotiating.
rdo_result = stem.pd[TEST_PORT].getRequestDataObject(_BS_C.
    ↳powerdeliveryPartnerRemote);

if ((connection_state_result.value == _BS_C.powerdeliveryPowerRoleSource) and
    (rdo_result.value > 0)):


    #Do Stuff
    #Set desired port voltage and limit.
    stem.hub.port[TEST_PORT].setVoltageSetpoint(5500000); #5.5VDC
    stem.hub.port[TEST_PORT].setCurrentLimit(500000); #500mA
    #Do Stuff

stem.disconnect()

```

## VBus Validation - Programmable Power Supply Mode

In this mode the USBHub3c is transformed into a 6 channel programmable power supply capable of supplying 100 Watts per channel.

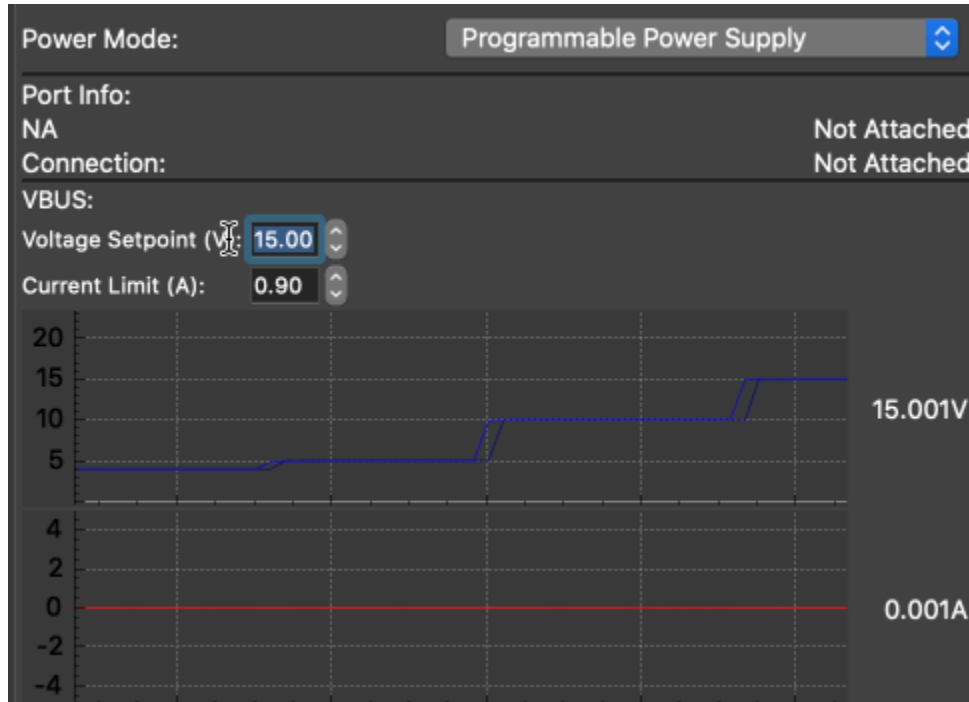

### Example

C++

```
static const int TEST_PORT = 1;

aUSBHub3c stem;
stem.discoverAndConnect(USB);

//Disable port while we configure
stem.hub.port[TEST_PORT].setEnabled(false);

//Configure the Power mode: Programmable Power Supply
stem.hub.port[TEST_PORT].setPowerMode(portPowerMode_ps_Value);

//Set desired port voltage and limit.
stem.hub.port[TEST_PORT].setVoltageSetpoint(5500000); //5.5VDC
stem.hub.port[TEST_PORT].setCurrentLimit(500000); //500mA

//enable the port when ready.
stem.hub.port[TEST_PORT].setEnabled(true);

//Do Stuff

//Return port to safe state.
stem.hub.port[TEST_PORT].setEnabled(false)

stem.disconnect()
```

## Python

```
TEST_PORT = 1;

stem = brainstem.stem.USBHub3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

#Disable port while we configure
stem.hub.port[TEST_PORT].setEnabled(false)

//Configure the Power mode: Programmable Power Supply
stem.hub.port[TEST_PORT].setPowerMode(_BS_C.portPowerMode_ps_Value);

#Set desired port voltage and limit.
stem.hub.port[TEST_PORT].setVoltageSetpoint(5500000)      #5.5VDC
stem.hub.port[TEST_PORT].setCurrentLimit(500000)          #500mA

#Enable the port when ready.
stem.hub.port[TEST_PORT].setEnabled(true)

#Do Stuff

#Return port to safe state.
stem.hub.port[TEST_PORT].setEnabled(false)

stem.disconnect()
```

## Relevant API's

```
stem.hub.port[x].setVoltageSetpoint() [cpp] [python] [NET] [CCA] [REST] stem.hub.
port[x].getVoltageSetpoint() [cpp] [python] [NET] [CCA] [REST]

stem.hub.port[x].setCurrentLimit() [cpp] [python] [NET] [CCA] [REST] stem.hub.
port[x].getCurrentLimit() [cpp] [python] [NET] [CCA] [REST]

stem.hub.port[x].setPowerMode() [cpp] [python] [NET] [CCA] [REST] stem.hub.
port[x].getPowerMode() [cpp] [python] [NET] [CCA] [REST]

stem.hub.pd[x].setRequestDataObject() [cpp] [python] [NET] [CCA] [REST] stem.hub.
pd[x].getRequestDataObject() [cpp] [python] [NET] [CCA] [REST]

stem.hub.pd[x].getConnectionState() [cpp] [python] [NET] [CCA] [REST]
```

## UART Serial Communication

The UART Serial Communication feature allows one to send commands to affect control and functionality of the USBHub3c.

### Use Cases

- Affecting USBHub3c control.
- Audio/Video applications.

## Configuration

The default configuration of the UART Serial Communication feature is:

- 8 Data bits
- No Parity
- No Flow Control
- 1 Stop bit
- 9600 Baudrate

This feature does have some configurability through the *USBHub3c UART Entity*

## Extron Compatible Serial Commands

The UART Serial Communication feature is capable of changing the USBHub3c upstream port, requesting the current status of the upstream/downstream connections, enable/disable of ports, and the USBHub3c part number/firmware version queries. This can be accomplished with a protocol that is compatible with Extron's Simple Instruction Set over RS232.

## Commands

The following is a list of all commands the USBHub3c supports with their arguments, descriptions, and expected responses.

Cmd	Arguments	Description	Expected Responses
!	None	Get current upstream port index	Chn #\r\n
# !	# Port	Change upstream port to # port number	Chn #\r\n
# ^	# Port	Change upstream port to # port number	Chn #\r\n
I	None	Get connection status	Chn # InACT\$\$\$\$\$\$ OutACT\$\$\$\$\$\$\r\n
N	None	Get part number	S99-USBHUB-3C-PRO\r\n S99-USBHUB-3C-LAB\r\n
Q	None	Get firmware version	<M>.<m>.<p>\r\n
# P	# Port	Get enable/disable status of # port number	Port #*0\r\n Port #*1\r\n
# * \$ P	# Port \$ Enable 0/1	Set \$ enable/disable of # port number	Port #*\$\r\n

## Error Codes

The following is a list of all error codes the USBHub3c supports with descriptions.

Code	Description
E01	invalid port number, check the port number and make sure it's valid.
E10	invalid command, verify that you formatted the command correctly.
E13	invalid value, verify that the value is within the acceptable range for this command.
E14	invalid configuration, verify the system is in a state it can accept this command.

## General Notes

All commands are ASCII strings.

\r is the ASCII character for carriage return.

\n is the ASCII character for new line.

## Examples

Extron Compatible Serial Commands:

Upstream Change

Change Upstream to Port 1

Tx: 1!

Rx: Chn 1\r\n

Port Status

Get Port status with Upstream set to port 1, an upstream device on port 1 and Downstream device on port 2

Tx: I

Rx: Chn 1 InACT010000 OutACT001000\r\n

Port Disable

Disable Port 3

Tx: 3\*0P

Rx: Port 3\*0\r\n

API Configurations:

C++

```
static const int TEST_SERIAL = 0;

aUSBHub3c stem;
stem.discoverAndConnect(USB);

// Enable the port
stem.uart[TEST_SERIAL].setEnabled(true);

// Change baudrate to 115200 from default 9600
stem.uart[TEST_SERIAL].setBaudRate(115200);
```

(continues on next page)

(continued from previous page)

```
// Change Protocol to Extron Compatible
// 0 - Disabled/Undefined
// 1 - Extron Compatible
// 2 - Brainstem Transport
// 6 - Loopback
stem.uart[TEST_SERIAL].setProtocol(1)

// Perform a system save so the changes persist
// through power cycles
stem.system.save();

stem.disconnect();
```

## Python

```
TEST_SERIAL = 0

stem = brainstem.stem.USBHub3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

# Enable the port
stem.uart[TEST_SERIAL].setEnabled(1)

# Change baudrate to 115200 from default 9600
stem.uart[TEST_SERIAL].setBaudRate(115200)

# Change Protocol to Extron Compatible
# 0 - Disabled/Undefined
# 1 - Extron Compatible
# 2 - Brainstem Transport
# 6 - Loopback
stem.uart[TEST_SERIAL].setProtocol(1)

# Perform a system save so the changes persist
# through power cycles
stem.system.save()

stem.disconnect()
```

## Loopback Protocol

```
# Configure UART[0] for loopback testing
# Data sent to the UART will be echoed back
TEST_SERIAL = 0

stem = brainstem.stem.USBHub3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

stem.uart[TEST_SERIAL].setEnabled(1)
stem.uart[TEST_SERIAL].setBaudRate(115200)
stem.uart[TEST_SERIAL].setProtocol(6) # Loopback protocol

# Now any data sent to UART[0] will be echoed back
stem.system.save()
stem.disconnect()
```

## VCOM to Hardware UART Link



```

# Link VCOM channel (UART[1]) to hardware RS232 (UART[0])
# This allows USB serial communication to be forwarded to RS232
stem = brainstem.stem.USBHub3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

# Enable both channels
stem.uart[0].setEnabled(1)    # Hardware RS232
stem.uart[1].setEnabled(1)    # VCOM channel

# Configure matching baud rates
stem.uart[0].setBaudRate(115200)
stem.uart[1].setBaudRate(115200)

# Link VCOM to hardware UART
stem.uart[0].setLinkChannel(1)
stem.uart[1].setLinkChannel(0)

# Data received on VCOM will now be forwarded to RS232,
# and data received on RS232 will be forwarded to VCOM
stem.system.save()
stem.disconnect()

```

### Loopback Protocol

```

// Configure UART[0] for loopback testing
// Data sent to the UART will be echoed back
static const int TEST_SERIAL = 0;

aUSBHub3c stem;
stem.discoverAndConnect(USB);

stem.uart[TEST_SERIAL].setEnabled(true);
stem.uart[TEST_SERIAL].setBaudRate(115200);
stem.uart[TEST_SERIAL].setProtocol(6); // Loopback protocol

// Now any data sent to UART[0] will be echoed back
stem.system.save();
stem.disconnect();

```

### VCOM to Hardware UART Link

```

// Link VCOM channel (UART[1]) to hardware RS232 (UART[0])
// This allows USB serial communication to be forwarded to RS232
aUSBHub3c stem;
stem.discoverAndConnect(USB);

// Enable both channels
stem.uart[0].setEnabled(true); // Hardware RS232
stem.uart[1].setEnabled(true); // VCOM channel

// Configure matching baud rates
stem.uart[0].setBaudRate(115200);
stem.uart[1].setBaudRate(115200);

// Link VCOM to hardware UART
stem.uart[1].setLinkChannel(0);
stem.uart[0].setLinkChannel(1);

```

(continues on next page)

(continued from previous page)

```
// Data received on VCOM will now be forwarded to RS232,  
// and data received on RS232 will be forwarded to VCOM  
stem.system.save();  
stem.disconnect();
```

## Relevant API's

```
stem.uart[x].setEnabled() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].getEnable() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].setBaudRate() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].getBaudRate() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].setProtocol() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].getProtocol() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].setLinkChannel() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].getLinkChannel() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].setStopBits() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].getStopBits() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].setParity() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].getParity() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].setDataBits() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].getDataBits() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].getCapableProtocols() [cpp] [python] [NET] [CCA] [REST]  
stem.uart[x].getAvailableProtocols() [cpp] [python] [NET] [CCA] [REST]
```

## 1.3 USBHub2x4



The USBHub2x4 gives engineers advanced flexibility and configurability over USB ports in testing and development applications. It can be used to enable/disable individual USB ports, measure current or voltage on downstream USB ports, set programmable current limits, set USB charging protocol behavior and otherwise automate USB port behaviors in development and testing.

To get up to speed with the USBHub2x4 and quickly learn about its functionality follow the [quick start guide](#). Have a look at the [basic example](#) or dive into the [Programming interface](#) of the USBHub2x4 for a more in depth view.

### 1.3.1 Quick Start Guide

#### 1. Download The Development Kit

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>6</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>7</sup> for your particular operating system and architecture.

<sup>6</sup> <https://acroname.com/api>

<sup>7</sup> <https://acroname.com/hubtool>

## 2. Connect Power

- Using the provided universal power supply connect the barrel jack into the hub.
- Connect the other end into a 120/240V AC outlet.

## 3. Connect Data

- With the provided USB 3.0 A-MiniB cable connect the A side to your host computer and the MiniB side to the connection labeled “Up0”.

## 4. Run System

- Open HubTool
- On the bottom right side of the application select the USBHub2x4 device.

---

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the USBHub2x4. For more information please take a look at our [Getting Started Guide](#)

## 1.3.2 Basic Example

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

int main(int argc, const char * argv[]) {

    //Create an instance of a USBHub2x4 module.
    aUSBHub2x4 hub;

    //Connect to the hardware.
    err = hub.discoverAndConnect(USB);
    if (err != aErrNone) {
        printf("Error %d encountered connecting to BrainStem module\n", err);
        return 1;
    } else { printf("Connected to BrainStem module.\n"); }

    //Basic initialization (Get everything turned off).
    hub.usb.setPortDisable(0);
    hub.usb.setPortDisable(1);
    hub.usb.setPortDisable(2);
    hub.usb.setPortDisable(3);

    ////////////
    //Do Stuff: other test initialization
    ////////////
```

(continues on next page)

(continued from previous page)

```

//Ready for testing
//Enable Port(s)
hub.usb.setPortEnable(0);
hub.usb.setPortDisable(1);
hub.usb.setPortDisable(2);
hub.usb.setPortDisable(3);

//////////
//Do Stuff on Port 0
//////////

hub.usb.setPortDisable(0);
hub.usb.setPortEnable(1);
hub.usb.setPortDisable(2);
hub.usb.setPortDisable(3);

//////////
//Do Stuff on Port 1
//////////

hub.usb.setPortDisable(0);
hub.usb.setPortDisable(1);
hub.usb.setPortEnable(2);
hub.usb.setPortDisable(3);

//////////
//Do Stuff on Port 2
//////////

hub.usb.setPortDisable(0);
hub.usb.setPortDisable(1);
hub.usb.setPortEnable(2);
hub.usb.setPortDisable(3);

//////////
//Do Stuff on Port 3
//////////

//Finished with testing.
//De-initialize.
hub.usb.setPortDisable(0);
hub.usb.setPortDisable(1);
hub.usb.setPortDisable(2);
hub.usb.setPortDisable(3);

//Disconnect
hub.disconnect();
}

```

## Python

```

import brainstem
#for easy access to error constants
from brainstem.result import Result
import time
import sys

```

(continues on next page)

(continued from previous page)

```

# Create an instance of a USBHub2x4 module.
hub = brainstem.stem.USBHub2x4()

# Locate and connect to the first object you find on USB
result = hub.discoverAndConnect(brainstem.link.Spec.USB)
if result != Result.NO_ERROR:
    print ("Error %d encountered connecting to BrainStem Module.\n" % result)
else:
    print ("Connected to BrainStem module.\n")

#Basic initialization (Get everything turned off).
hub.usb.setPortDisable(0)
hub.usb.setPortDisable(1)
hub.usb.setPortDisable(2)
hub.usb.setPortDisable(3)

#####
##Do Stuff other test initialization
#####

##Ready for testing
##Enable Port(s)
hub.usb.setPortEnable(0)
hub.usb.setPortDisable(1)
hub.usb.setPortDisable(2)
hub.usb.setPortDisable(3)

#####
##Do Stuff on Port 0
#####

hub.usb.setPortDisable(0)
hub.usb.setPortEnable(1)
hub.usb.setPortDisable(2)
hub.usb.setPortDisable(3)

#####
##Do Stuff on Port 1
#####

hub.usb.setPortDisable(0)
hub.usb.setPortDisable(1)
hub.usb.setPortEnable(2)
hub.usb.setPortDisable(3)

#####
##Do Stuff on Port 2
#####

hub.usb.setPortDisable(0)
hub.usb.setPortDisable(1)
hub.usb.setPortDisable(2)
hub.usb.setPortEnable(3)

#####

```

(continues on next page)

(continued from previous page)

```

##Do Stuff on Port 3
#####


##Finished with testing.
##De-initialize.
hub.usb.setPortDisable(0)
hub.usb.setPortDisable(1)
hub.usb.setPortDisable(2)
hub.usb.setPortDisable(3)

# Disconnect from device.
hub.disconnect();
print("Disconnected from BrainStem module. \n")

```

### 1.3.3 Indicators and Connections

#### LEDs and Connections

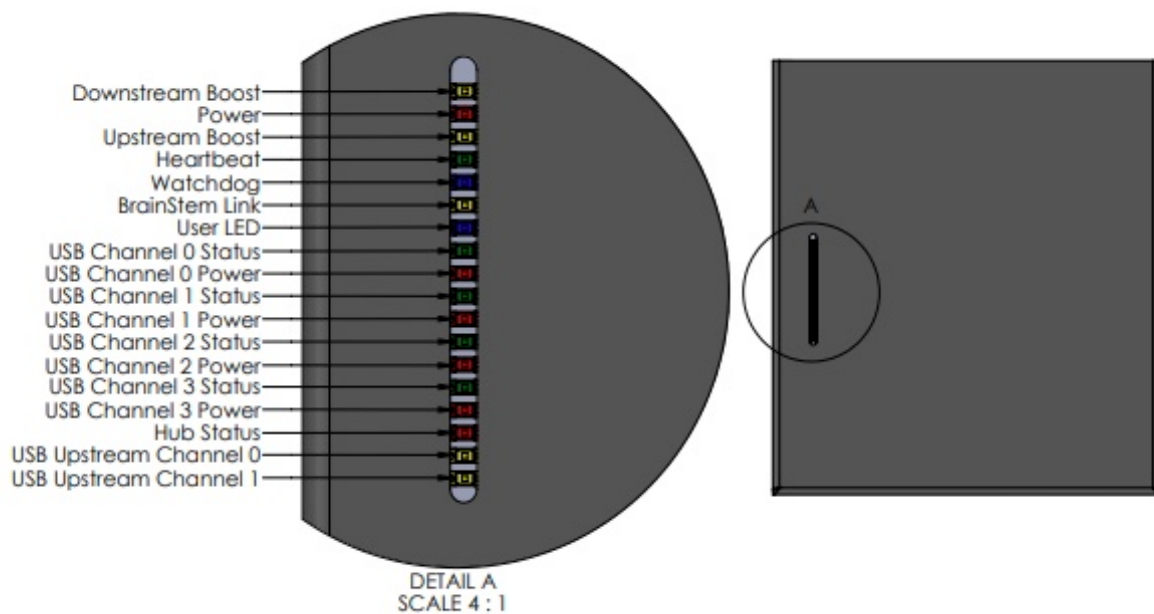

LED Name	Color	Description
Downstream Boost	Yellow	Indicated the Downstream Data Boost is enabled through the USB Entity API
Power	Red	Shows that a 3.3V voltage regulation system is up and running properly.
Upstream Boost	Yellow	Indicated the Upstream Data Boost is enabled through the USB Entity API
Heartbeat	Green	Communication is occurring with the BrainStem module
Watchdog	Blue	Indication the internal watchdog is running and the connection with the Host is healthy
BrainStem Link	Yellow	The BrainStem USB interface is created on a host computer
User LED	Blue	A software controllable indicator accessed via the System BrainStem Entity. See the System Entity API Reference Page.
USB Channel 0:3 Status	Green	Indicates whether the downstream device has enumerated on the host computer
USB Channel 0:3 Power	Red	Indicates an error on USB power (Vbus) such as overcurrent
Hub Status	Red	The USB hub communicates with a host computer.
USB Upstream Channel 0	Yellow	Indicated Upstream 0 has been selected
USB Upstream Channel 1	Yellow	Indicated Upstream 1 has been selected

### 1.3.4 Programming Interface

The USBHub2x4 is capable of many features. These features are organized into groups called [entities](#). Through these entities we can access the vast features of the USBHub2x4.

A complete list of all entities and functions can be found in the [Module Entities](#) page.

---

#### Software Control

Software control of the features of the USBHub2x4 is done with the BrainStem API via a BrainStem link. BrainStem links are done over USB and can be established via upstream port 0 (Up0) and upstream port 1 (Up1). After one or more of these ports is connected to a host machine, a user can connect to it via software API:

```
stem.link.discoverAndConnect(USB)
```

When multiple Acroname devices are connected to a host, connecting to a specific hub can be done by providing the hub serial number. Further, all connected devices can be found using

```
brainstem.discover.findAllModules(USB) (Python)
Acroname::BrainStem::Link::sDiscover() (C++)
```



## Using Multiple Hosts with USBHub2x4

The two upstream-facing host ports can be connected to two different host computers. Due to limitations of USB specification, only one host computer can access downstream USB ports at any time. Through the BrainStem API, the upstream port used can be controlled, or the system can automatically select the upstream port (see USB Hub Upstream Mode). When automatically selecting the upstream port, the USBHub2x4 will default to using Up0 if it is connected.

## Device Drivers

The USBHub2x4 leverages operating system user space interfaces that do not require custom drivers for operation on modern operating systems.

Some older operating systems may require the installation of a BrainStem USB driver to enable software control. Installation details on installing USB drivers can be found within the BrainStem Development Kit under the “drivers” folder. For example, Windows 7 requires the supplied INF to communicate with BrainStem USB devices.

## 1.3.5 USBHub2x4 Module Entities

### System

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

### Serial Number

Every USBHub2x4 is assigned a unique serial number at the factory. This facilitates an arbitrary number of USBHub2x4 devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

### Module Default Base Address

BrainStems are designed to be able to form a reactive, extensible network. All BrainStem modules come with a default network base address for identification on the BrainStem network bus. The default module base address for USBHub2x4 is factory-set as 6, and can be accessed with.

```
stem.system.getModule(module) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the USBHub2x4 away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() [cpp] [python] [NET] [CCA] [REST]
```

Pressing the reset button two times within 5 seconds will return all settings to factory defaults: all ports' data and power enabled, CDP mode, enumeration delay of 0, 2500mA current limit.

Savable Items	
Software Offset	I2C Rate
Router Address	Port Enumeration Delay
Boot Slot	Downstream Boost
Port Mode (SDP, CDP) - each port	Current Limit - per port
Upstream Boost	Port state (data and power)

## Temperature

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Certain modules have a temperature measurement available. The temperature entity gives access to these measurements. Check your module datasheet to see if your module has a temperature entity.

---

## System Temperature

The temperature of the USBHub2x4 can be measured with:

```
stem.temperature[0].getValue(μC) [cpp] [python] [NET] [CCA] [REST]
```

where temperature is in micro-degrees Celcius.

## USB

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The USB Entity provides the software control interface for USB related features. This entity is supported by BrainStem products which have programmatically controlled USB features.

### Downstream Channel Control

Downstream USB channels can be manipulated through the usb entity command to enable and disable USB data and Vbus lines, measure current, measure Vbus voltage, boost data line signals, and measure temperature.

Manipulating Hi-Speed data and Vbus lines simultaneously for a single port can be done by calling the following methods with channel in [0-3] being the port index:

```
stem.usb.setPortEnable(channel) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.usb.setPortDisable(channel) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

Manipulating Hi-Speed data while not affecting the Vbus lines simultaneously for a single port can be done by calling the following methods with channel [0-3]. The following methods provide equivalent functionality; the two methods are offered for compatibility with other products.

```
stem.usb.setDataEnable(channel) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.usb.setDataDisable(channel) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.usb.setHiSpeedDataEnable(channel) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.usb.setHiSpeedDataDisable(channel) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

Manipulating just the USB Vbus line for a single port can be done by calling the following method with channel [0-3]:

```
stem.usb.setPowerEnable(channel) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.usb.setPowerDisable(channel) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

To affect multiple ports and lines simultaneously, see `usb.setHubMode()` later in this section.

Note that transitions between power and data enables states where power is enabled and only data is changing, require the USBHub2x4 to toggle Vbus power. This appears as a port cycle event and the USBHub2x4 hardware will cycle Vbus even if the Vbus/Power setting is enabled.

### Downstream Measurements

The USB Vbus voltage, as well as the current consumed on Vbus, can be read for each channel by calling the following methods with channel [0-3], where the second variable passed into the method is the location for the measurement result:

```
stem.usb.getPortVoltage(channel, μV) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.usb.getPortCurrent(channel, μA) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Downstream Current Limiting

Current-limit trip point settings can be accessed for each port by calling the following methods with channel [0-3], where the second variable passed into the method is either the set value or the write location of the result:

```
stem.usb.getPortCurrentLimit(channel,  $\mu$ A) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPortCurrentLimit(channel,  $\mu$ A) [cpp] [python] [NET] [CCA] [REST]
```

The current-limiting behavior follows the USB BC1.2 specification which allows for many different behaviors. The USBHub2x4 has two stages of current-limiting. When a downstream device consumes current higher than the programmed current limit, the hub will enter a “constant current” mode and is indicated in the `getPortState()` bitfield with the constant current bit. In the constant current mode, the Vbus voltage will be reduced to attempt maintain a constant current at the set current limit. The time and amount of voltage reduction and maximum allowed current draw depends on the current limit set point.

As the Vbus voltage is reduced, if the device continues to increase its current draw (reduce it’s effective resistance), the USBHub2x4 will “trip off” by disabling the Vbus and high-speed data lines. This state is indicated with the error bit in the `getPortState()` bitfield. The Channel X Power error LED will also illuminate when this error occurs. See the [LED Indicators](#).

## Downstream Enumeration Speed

The enumeration state and speed of each downstream port can be read with

```
stem.usb.getDownstreamDataSpeed [cpp] [python] [NET] [CCA] [REST]
```

Value	Hub Downstream Speed Descriptions
0	No device enumerated
1	Hi-Speed device enumerated

## Downstream Operational Mode

The USB port operational mode controls the behavior of each downstream port’s charging behavior. Each port can be setup to support different modes in the USB Battery Charge Specification 1.2 (BC1.2). Standard Downstream Port (SDP) mode will cause BC1.2 compliant or older USB devices to consume 500mA or less. Configuring a port as a Charging Downstream Port (CDP) will cause the hub signal to downstream devices that devices may consume up to 5A, the maximum allowed by BC1.2. If there is no upstream USB host connected to the hub, downstream ports set to CDP will behave as Dedicated Charging Ports (DCP).

The actual current consumed by the device is controlled by the downstream device and not the USBHub2x4. Devices which are not compliant with BC1.2 or the previous USB power specifications may draw more current than specified above.

The operational mode is set or read by calling the methods:

```
stem.usb.getPortMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPortMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

Value	Hub Port Mode Descriptions
0	Standard downstream port (SDP)
1	Charging downstream port (CDP)

**Note:** A `system.save()` and `system.reset()` is required before the new setting will take affect.

### Downstream Enumeration Delay

Once a USB device is detected by the USBHub2x4 it is possible to delay its connection to an upstream host computer and subsequent enumeration on the USB bus. The enumeration delay can mitigate or eliminate host kernel instabilities by forcing devices to enumerate in slow succession, allowing a focus on validation of drivers and software. The enumeration delay is configured in milliseconds, representing the time delay between enabling each successive downstream port from 0 to 3. Enumeration delay is applied when the hub powers on or when a new upstream connection is made.

```
stem.usb.setEnumerationDelay(delay) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getEnumerationDelay(delay) [cpp] [python] [NET] [CCA] [REST]
```

### Hub Operational Mode

In addition to targeting individual downstream USB ports, a bit-mapped hub mode interface is also available. This interface allows the reading or setting of all USB downstream ports in one functional call.

#### Auto Vbus Toggle

By default the USBHub2x4 will toggle its downstream ports anytime the host connection is lost, changed or disconnected. Disabling (setting the bit) will cause the hub to not cycle downstream power on upstream changes. This behavior can be helpful for certain host controllers and devices. Enumeration delay will override this setting.

```
stem.usb.getHubMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setHubMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

This command returns a 32-bit value which indicates:

Bit	Hub Operational Mode Bitwise Description
0	USB Channel 0 USB Hi-Speed Data Enabled
1	USB Channel 0 USB Vbus Enabled
2	USB Channel 1 USB Hi-Speed Data Enabled
3	USB Channel 1 USB Vbus Enabled
4	USB Channel 2 USB Hi-Speed Data Enabled
5	USB Channel 2 USB Vbus Enabled
6	USB Channel 3 USB Hi-Speed Data Enabled
7	USB Channel 3 USB Vbus Enabled
8:31	Reserved

## Hub Upstream Channels

The USBHub2x4 is perfect for environments where multiple devices need to be shared or switched between two host computers using two host (upstream) connections via USB standard-B connectors. The upstream connection can be automatically detected or specifically selected using the following methods:

```
stem.usb.getUpstreamMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setUpstreamMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

The mode parameter can be defined as the following:

Value	Hub Upstream Mode Descriptions
0	Force upstream port 0 to be selected
1	Force upstream port 1 to be selected
2	Automatically detect upstream port

Predefined C++ macros for these can be found in `aProtocoldef.h`, and Python's built-in help interface.

The default operational mode is to auto detect which upstream USB port is selected. Automatic detection uses the presence of Vbus on the USB type-B upstream connector to determine presence of a host. If only one upstream port is connected to a host, it will be used for upstream USB. If both upstream ports are connected, the hub will use upstream port 0.

If the Hub Upstream Mode is set to disconnect both upstream ports (or the only active upstream port), the only path available to establish a BrainStem link to the USBHub2x4 will be via a host connected to the BrainStem Control Port.

## Hub Upstream State

The USBHub2x4 can provide status information on which upstream port is actively selected as data path to the downstream ports:

```
stem.usb.getUpstreamState(mode) [cpp] [python] [NET] [CCA] [REST]
```

Value	Definitions	Hub Upstream Mode Descriptions
0	<code>usbUpstreamStatePort0</code>	Upstream port 0 is actively selected
1	<code>usbUpstreamStatePort1</code>	Upstream port 1 is actively selected
2	<code>usbUpstreamStateNone</code>	No upstream port is selected

## Port State

Each downstream port reports information regarding its operating state represented in bit-packed results from:

```
stem.usb.getPortState(state) [cpp] [python] [NET] [CCA] [REST]
```

where channel can be [0-3], and the value status is 32-bit word, defined as the following:

Bit	Port State: Result Bitwise Description
0	USB Vbus Enabled
1	USB2 Data Enabled
2:18	Reserved
19	USB Error Flag
20	USB2 Boost Enabled
21:22	Reserved
23	Device Attached
24	Constant Current Mode
25:31	Reserved

### Port Error Status Mapping

Error states for all downstream ports are bit-packed in 32-bit words available from:

```
stem.usb.getPortError(channel) [cpp] [python] [NET] [CCA] [REST]
```

where channel is [0-3].

Errors can be cleared on each individual channel by calling the following method:

```
stem.usb.clearPortErrorStatus(channel) [cpp] [python] [NET] [CCA] [REST]
```

Calling this command clears the port-related error bit flags in the port error state. Global bits for hub errors cannot be cleared by this command.

Details about the port error status 32-bit word are as follows:

Bit	Port Error Status Bitwise Description
0	USB port current limit exceeded
1	USB port back-drive condition detected
2	Reserved
3	Hub over temperature condition
4	VBus Discharge error
5:31	Reserved

### Boost Mode

Boost mode increases the drive strength of the USB 2.0 Hi-Speed data signals (power signals are not changed). Boosting the data signal drive strength may help to overcome connectivity issues when using long cables or connecting through relays, “pogo” pins or other adverse conditions. This setting is applied after a `system.save()` call and reset or power cycle of the hub. The system setting is persistent until changed or the hub is hard reset. After a hard reset, the default value of 0% boost is restored. A hard reset is done by pressing the “Reset” button on the back of the hub while the hub is powered.

Boost mode can be applied to both the upstream and downstream USB ports with the follow methods:

```
stem.usb.getDownstreamBoostMode(setting) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setDownstreamBoostMode(setting) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getUpstreamBoostMode(setting) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setUpstreamBoostMode(setting) [cpp] [python] [NET] [CCA] [REST]
```

The setting parameter is an integer that correlates to the following:

Value	Hub Boost Mode Descriptions
0	Normal drive strength
1	4% increase in drive strength
2	8% increase in drive strength
3	12% increase in drive strength

## Port

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Port Entity provides control over the most basic items related to a USB Port. This includes actions ranging from a complete port enable and disable to the individual interface control. Voltage and current measurements are also included for devices which support the Port Entity.

---

## Port Control

The USBHub2x4 has a Port Entity for every port on the device; however, not all ports have the same capabilities. These ports can be referenced by their instance (port[x]) index.

Port Label	Index (port[x])
0	0
1	1
2	2
3	3
Up0	4
Up1	5

One of the most powerful features of the USBHub2x4 is its ability to turn ports on and off which is available on Ports 0-3.

```
stem.hub.port[x].setEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB Vbus line for a single port can be done by calling the following method on Ports 0-3.

```
stem.hub.port[x].setPowerEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getPowerEnabled() [cpp] [python] [NET] [CCA] [REST]
```



Manipulating data lines while not affecting the Vbus lines simultaneously for a single port can be done by calling the following method for Ports 0-3. (For USBHub2x4 the only data lines happen to be USB 2.0 Hi-Speed)

```
stem.hub.port[x].setDataEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataEnabled() [cpp] [python] [NET] [CCA] [REST]
```

Manipulating just the USB 2.0 Hi-Speed data lines for a single port can be done by calling the following for Ports 0-3.

```
stem.hub.port[x].setDataHSEnabled() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getDataHSEnabled() [cpp] [python] [NET] [CCA] [REST]
```

## Voltage and Current Measurements

The USBHub2x4 provides Voltage and Current measurements for Vbus. These values can be acquired for all 4 ports through the following APIs

```
stem.hub.port[x].getVbusVoltage() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getVbusCurrent() [cpp] [python] [NET] [CCA] [REST]
```

## Power Modes

The ports of the USBHub2x4 are capable of providing power in multiple formats. The default is Charging Downstream Port (CDP), but that can be changed to things like: Standard Downstream Port (SDP), Charging Downstream Port (CDP) / Dedicated Charging Port (DCP). These modes can be set through:

```
stem.hub.port[x].setPowerMode() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getPowerMode() [cpp] [python] [NET] [CCA] [REST]
```

Power Mode	Value	Define
None	0	portPowerMode_none_Value
SDP	1	portPowerMode_sdp_Value
CDP/DCP	2	portPowerMode_cdp_dcp_Value

**Warning:** The USBHub2x4 does not have a dedicated control port, therefore all control is done through the upstream. If you change upstreams while controlling it, the control connection will be lost and the new host will have to take over.

## Port Mode

As outlined in the “Port Control” section the USBHub2x4 can individually manipulate almost every pin on the connector; however, depending on your application that might require multiple function calls in order to configure the port how you want it. Port Mode on the other hand is a one stop shop that allows you to pick and choose which lines you want enabled or disabled through a single call. Additionally, it has a few other features tucked away inside of it.

```
stem.hub.port[x].setMode() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getMode() [cpp] [python] [NET] [CCA] [REST]
```

Port Mode Item	Bit	Value	Define
Power Enable	0	0/1	portPortMode_powerEnabled_Bit
HS 1 Enable	1	0/1	portPortMode_HS1Enabled_Bit
Power Mode: Offset		16	portPortMode_portPowerMode_Offset
Power Mode: Mask		0x7	portPortMode_portPowerMode_Mask
Power Mode: None	16-18	0	portPortMode_portPowerMode_none_Value
Power Mode: SDP	16-18	1	portPortMode_portPowerMode_sdp_Value
Power Mode: CDP/DCP	16-18	2	portPortMode_cdp_dcp_Value

## Data Role

The data role describes the current configuration of the port in regards to its data direction. In most cases this evaluates to an Upstream Facing Port (UFP) or a Downstream Facing Port (DFP). Upstream in this case means the host side of the port and Downstream refers to the device side. The Data Role can be acquired through:

```
stem.hub.port[x].getDataRole() [cpp] [python] [NET] [CCA] [REST]
```

Data Role	Value	Define
Disabled	0	portDataRole_Disabled_Value
Upstream	1	portDataRole_Upstream_Value
Downstream	2	portDataRole_Downstream_Value
Control	3	portDataRole_Control_Value

## Port Limits and Modes

At the Port level the user has the ability to define current limit.

```
stem.hub.port[x].setCurrentLimit() [cpp] [python] [NET] [CCA] [REST]
stem.hub.port[x].getCurrentLimit() [cpp] [python] [NET] [CCA] [REST]
```

## Downstream Data Speed

The USBHub2x4 can detect if a device has been enumerated. Additionally, it can detect at what speed a device has enumerated at.

```
stem.hub.port[x].getDataSpeed() [cpp] [python] [NET] [CCA] [REST]
```

Data Speed	Bit	Value	Define
1.5 Mbit/s	0	0/1	portDataSpeed_ls_1p5M_Bit
12 Mbit/s	1	0/1	portDataSpeed_fs_12M_Bit
480 Mbit/s	2	0/1	portDataSpeed_hs_480M_Bit
5 Gbit/s	3	0/1	portDataSpeed_ss_5G_Bit
10 Gbit/s	4	0/1	portDataSpeed_ss_10G_Bit
USB 2.0	6	0/1	portDataSpeed_Connected_2p0_Bit
USB 3.0	7	0/1	portDataSpeed_Connected_3p0_Bit

## USB System

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The USBSystem class provides high level control of the lower level *Port Entity*

## Upstream Control

The USBHub2x4 has the ability to designate one of the upstream ports (4-5) as the upstream connection. This is very useful for moving devices between hosts.

```
stem.hub.setUpstream() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getUpstream() [cpp] [python] [NET] [CCA] [REST]
```

---

**Note:** The Power Modes can only be changed when the port power is disabled.

---

## Enumeration Delay

Once a USB device is detected by the USBHub2x4 it is possible to delay its connection to an upstream host computer and subsequent enumeration on the USB bus. The enumeration delay can mitigate or eliminate host kernel instabilities by forcing devices to enumerate in slow succession, allowing a focus on validation of drivers and software. The enumeration delay is configured in milliseconds, representing the time delay between enabling each successive port. Enumeration delay is applied when the hub powers on or when a new upstream connection is made.

```
stem.hub.setEnumerationDelay() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getEnumerationDelay() [cpp] [python] [NET] [CCA] [REST]
```

## Data Behavior

The USBHub2x4 is capable of a few different behaviors for how it switches upstream port connections. It can auto switch based on port priority or have a fixed upstream port. The method in which these events are handled is referred to as data behavior.

List of Available Data Behaviors for USBHub2x4

Behavior	Value	Define
Hard Coded	0	usbsystemDataBehavior_HardCoded
Reserved	1	usbsystemDataBehavior_Reserved
Port Priority	2	usbsystemDataBehavior_PortPriority

### Hard Coded (Default Configuration)

The Hard Coded data behavior is used to fix the Upstream port to a single port and not allow it to move except for a command through the [Set Upstream](#) API.

### Port Priority

The Port Priority data behavior prioritizes making the Upstream port the lowest numbered port on the USB-Hub2x4 that is capable of being an Upstream port.

## Relevant API's

```
stem.hub.setDataRoleBehavior() [cpp] [python] [NET] [CCA] [REST]
stem.hub.getDataRoleBehavior() [cpp] [python] [NET] [CCA] [REST]
```

## Complete list of Supported Entities and Functions

Entity Class	Entity Option	Non Standard Value
App[0-3]	execute	
	return	
Pointer[0-3]	getOffset	
	setOffset	
	getMode	
	setMode	
	getTransferStore	
	setTransferStore	
	initiateTransferToStore	
	initiateTransferFromStore	
	getChar	
	setChar	
	getShort	
	setShort	
	getInt	
	setInt	
store[0-1]	getSlotState	
	loadSlot	
	unloadSlot	
	slotEnable	
	slotDisable	
	slotCapacity	
system[0]	slotSize	
	getModel	
	getHardwareVersion	
	getModule	
	getRouter	
	setHBInterval	
	getHBInterval	
	setLED	
	getLED	
	setBootSlot	
	getBootSlot	
	getVersion	
	getSerialNumber	
	save	
	reset	
	getInputVoltage	
	getModuleBaseAddress	
	getModuleSoftwareOffset	
	getRouterAddressSetting	
	getName	
	setName	
	resetDeviceToFactoryDefaults	
timer[0-8]	getExpiration	
	setExpiration	
temperature[0]	getTemperature	
usb[0]	setPortEnable	Channels 0-3

continues on next page

Table 10 – continued from previous page

Entity Class	Entity Option	Non Standard Value
	setPortDisable	Channels 0-3
	setDataEnable	Channels 0-3
	setDataDisable	Channels 0-3
	setHiSpeedDataEnable	Channels 0-3
	setHiSpeedDataDisable	Channels 0-3
	setPowerEnable	Channels 0-3
	setPowerDisable	Channels 0-3
	getPortVoltage	Channels 0-3
	getPortCurrent	Channels 0-3
	getPortCurrentLimit	Channels 0-3
	setPortCurrentLimit	Channels 0-3
	setPortMode	Channels 0-3
	getPortMode	Channels 0-3
	getDownstreamDataSpeed	Channels 0-3
	getHubMode	
	setHubMode	
	getPortState	Channels 0-3
	getPortError	
	getEnumerationDelay	
	setEnumerationDelay	
	clearPortErrorStatus	
	getUpstreamMode	
	setUpstreamMode	
	getUpstreamState	
	getUpstreamBoostMode	
	setUpstreamBoostMode	
	getDownstreamBoostMode	
	setDownstreamBoostMode	
port[0-3]	getEnabled	
	setEnabled	
	getDataEnabled	
	setDataEnabled	
	getDataHSEnabled	
	setDataHSEnabled	
	getPowerEnabled	
	setPowerEnabled	
	getHSBoost	
	setHSBoost	
	getMode	
	setMode	
	getCurrentLimit	
	setCurrentLimit	
	getVbusVoltage	
	getVbusCurrent	
	getState	
	getName	
	setName	
	getPowerMode	
	setPowerMode	
	getDataRole	

continues on next page

Table 10 – continued from previous page

Entity Class	Entity Option	Non Standard Value
port[4-5]	getDataSpeed	
	getErrors	
	getHSBoost	
	setHSBoost	
	getName	
USBSystem [0]	setName	
	getDataRole	
	getUpstream	
	setUpstream	
	setDataRoleBehavior	
	getDataRoleBehavior	
	getEnumerationDelay	
	setEnumerationDelay	

## 1.4 USB-C-Switch Pro

### 1.4.1 Quick Start Guide

#### 1. Install Required Software

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>8</sup> for your operating system and architecture.
- Download [HubTool](#)<sup>9</sup> for your operating system and architecture.

#### 2. Connect the Hardware

- Using standard USB-C cables, connect the **Common** and **Control** ports of the USB-C-Switch Pro to the host computer.
- Connect DC power supply (optional)
- Connect devices to any of **Mux Ports 0-3** using standard USB-C cables, or - for testing both sides of a port - use one of the included **Acroname Universal Orientation Cables (UOCs)**.
  - If using standard cables or a **C67 UOC**, you may need to **flip the Switch-side of the cable** to establish a connection.
  - The **C70 UOC** works in either orientation.

---

**Note:** Two UOC cable types are available:

- **C70:** for devices with **independent HS sides**
- **C67:** for devices with **shorted HS sides A and B**

See [Which universal orientation cable should I use?](#)<sup>10</sup> for details.

---

#### 3. Launch HubTool

- Open **HubTool**.
- In the lower-right corner of the application window, select the USB-C-Switch Pro device from the device list.

---

**Note:** On **Linux**, run the script named “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before communicating with BrainStem devices.

---

Congratulations! You’re now ready to explore the capabilities of USB-C-Switch Pro. For more information, see the [Getting Started Guide](#).

---

<sup>8</sup> <https://acroname.com/api>

<sup>9</sup> <https://acroname.com/hubtool>

<sup>10</sup> <https://acroname.com/blog/which-universal-orientation-cable-should-i-use>



## 1.4.2 Functionality

### Overview

The USB-C-Switch Pro has 6 USB-C ports: 1 Common port, 4 Mux Ports, and a dedicated Control Port. Software control manages signal routing and other port-level features. Each USB-C-Switch Pro is addressable and controllable from a host system via USB (Control Port), net (TCP/IP), I<sup>2</sup>C, or RS-232. Once connected, a BrainStem® link is established to the onboard controller, enabling software control through the BrainStem API. This API provides full access to all module functionality from a host system.

### USB Ports

The Common and Mux ports of the USB-C-Switch Pro implement separate, independently-switched USB HS and SS data, CC,  $V_{\text{CONN}}$  and current-limited  $V_{\text{BUS}}$  lines. USB power, HS data and SS data can be independently disconnected for advanced USB testing applications. The USB-C-Switch Pro has a dedicated control channel on the Type C connector labeled “Control”. This is a high-speed USB 2.0 connection for BrainStem interface and power delivery only. No other USB traffic can flow on this connection.

Port-level features are controlled by the *USB Entity*, while Mux port channel selection, port priority, and split mode are controlled by the *Mux Entity*.

Port	Index
Mux 0-3	0-3
Common	4
Control	5

### Cable Orientation

A key feature of USB-C is its reversible connector, allowing insertion in either orientation. In a standard USB-C cable, only one of the CC lines and one HS pair are wired through. Orientation is defined by the male plug, which connects only one of the receptacle’s two CC (Configuration Channel) pins through the cable. The connected device detects which CC pin is active and routes signals accordingly.


**Note:** In normal operation, standard USB cables on the Mux and Common sides of the Switch need to be in the same orientation so you may need to flip one of the cables to enable the connection.

### Cable Flip

In normal operation, the USB-C-Switch Pro connects signals directly from the Common port to the active Mux port — side A to A and side B to B. The switch can also invert this mapping programmatically, rerouting CC,  $V_{\text{CONN}}$ , SBU, and USB 2/3 data lines so that side A of the Common port connects to side B of the Mux port (and vice versa). This “cable flip” operation mimics physically reversing the connection between Common and Mux ports.

When used with an Acroname Universal Orientation Cable (UOC), cable flip enables automated testing of both sides of a USB port.

Depicted below are example block diagrams of the flip feature when connecting a host through a standard full-featured, non-marked cable to a direct-connected downstream device. USB SS, HS and SBU lines are also routed, but omitted from the diagram for clarity.

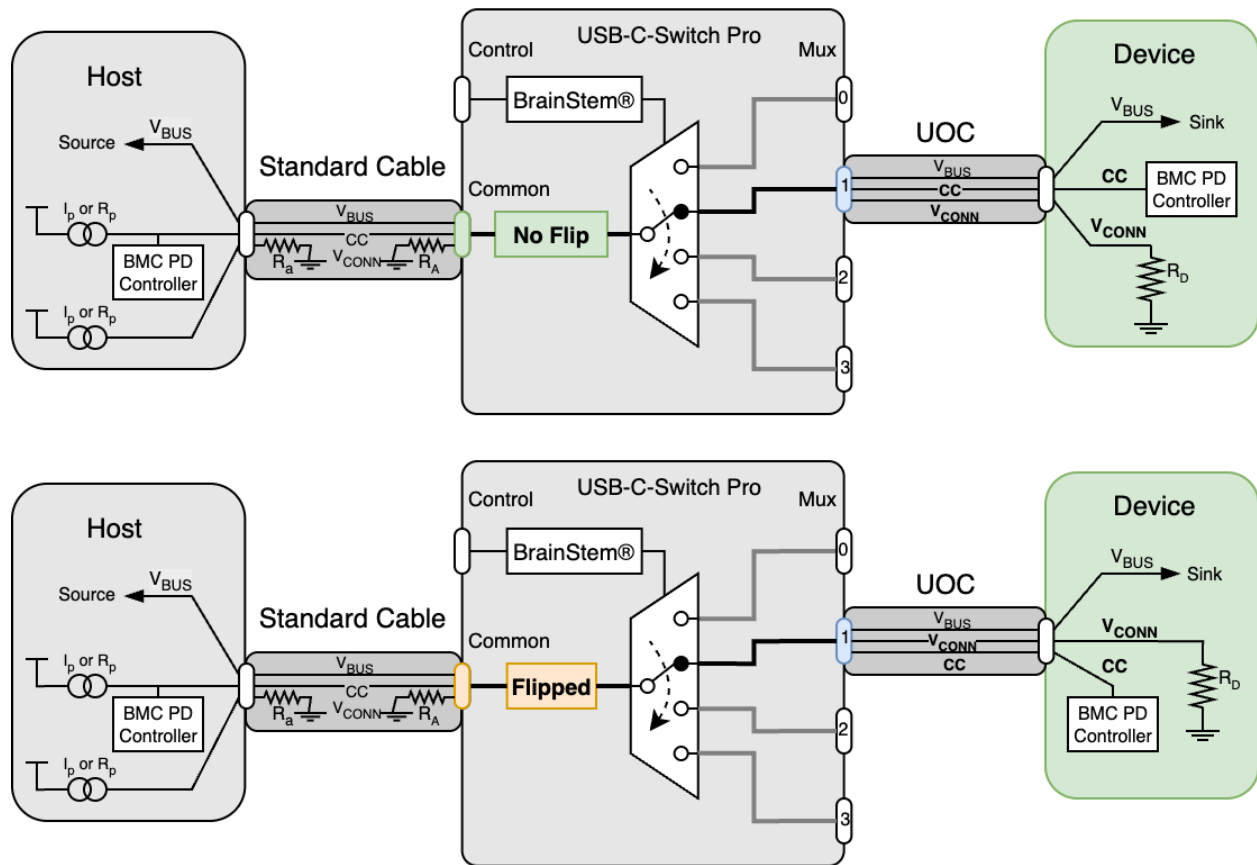

The UOC should be connected to the device under test and either the Common port or Mux port, depending on whether the DUTs or testers are being multiplexed.

### UOC Selection

Device USB-C ports either **short** sides A and B USB 2.0 (HS) data lines or use a **mux** to keep the two sides electrically independent. Choose the UOC that matches your DUT port.

Two UOC cable types are included:

- **C70:** routes both CC lines and **two HS pairs**, for devices with **muxed** USB 2.0 sides
- **C67:** routes both CC lines and **one HS pair**, for devices with **shorted** USB 2.0 sides


When using C67, it may be necessary to flip the cable at the Switch end to establish a USB 2 connection.

## Alt-Mode Configurations

For Alt-modes, the pin mappings and directions may affect connectivity and functionality. In many cases, the connected devices will simply negotiate through the switch. However, when using DisplayPort Alt Mode, USB4, or ThunderBolt 3, some functional groups need to be assigned a specific direction.

In HubTool:


- If device VBUS is not active, toggle cable flip or check cable orientations
- Under Alt Mode, select the corresponding configuration depending on whether the host is on the Common or Mux port and the protocol used. For 2-lane DP and USB4 / TB, it may be necessary to try the inverted and non-inverted option.

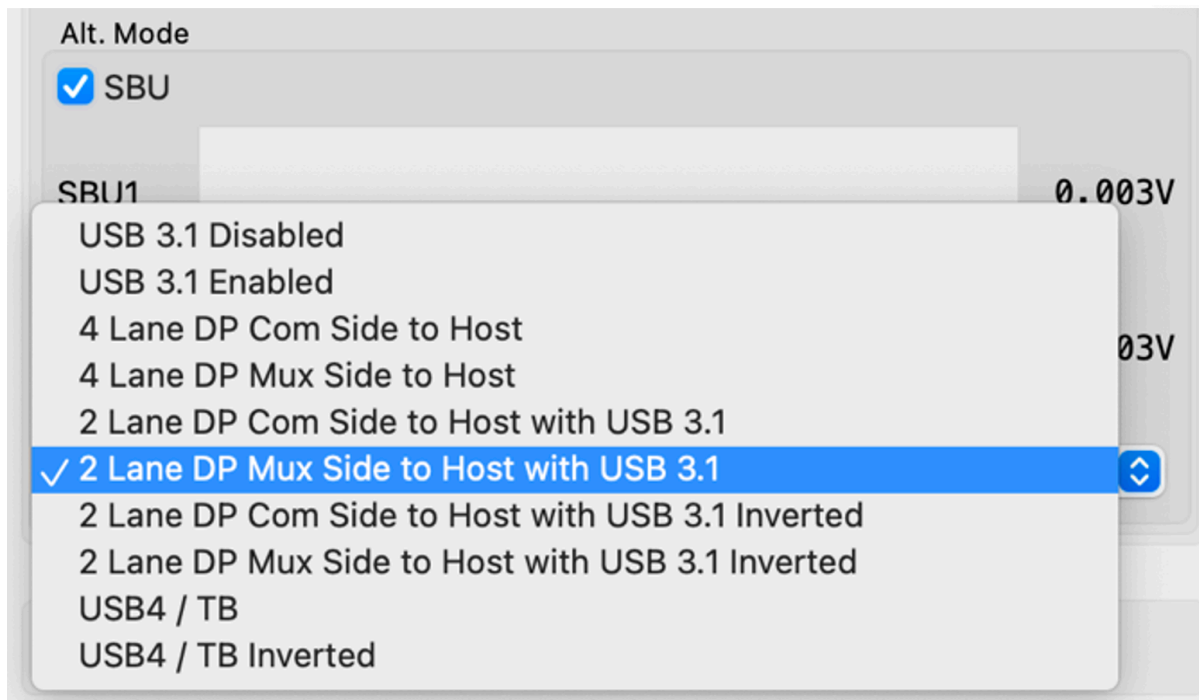

*Alt-mode configuration menu in HubTool*

## Keep-Alive Charging (KAC)

It is common to use battery powered devices on either side of the USB-C-Switch Pro. When these devices are not in the active path, the device may go into low-power or sleep mode, or its battery may discharge. The USB-C-Switch Pro has the unique feature of Keep-Alive Charging (KAC) for the Mux channel connections. KAC is only active when USB-C-Switch Pro is connected to its external DC power supply.

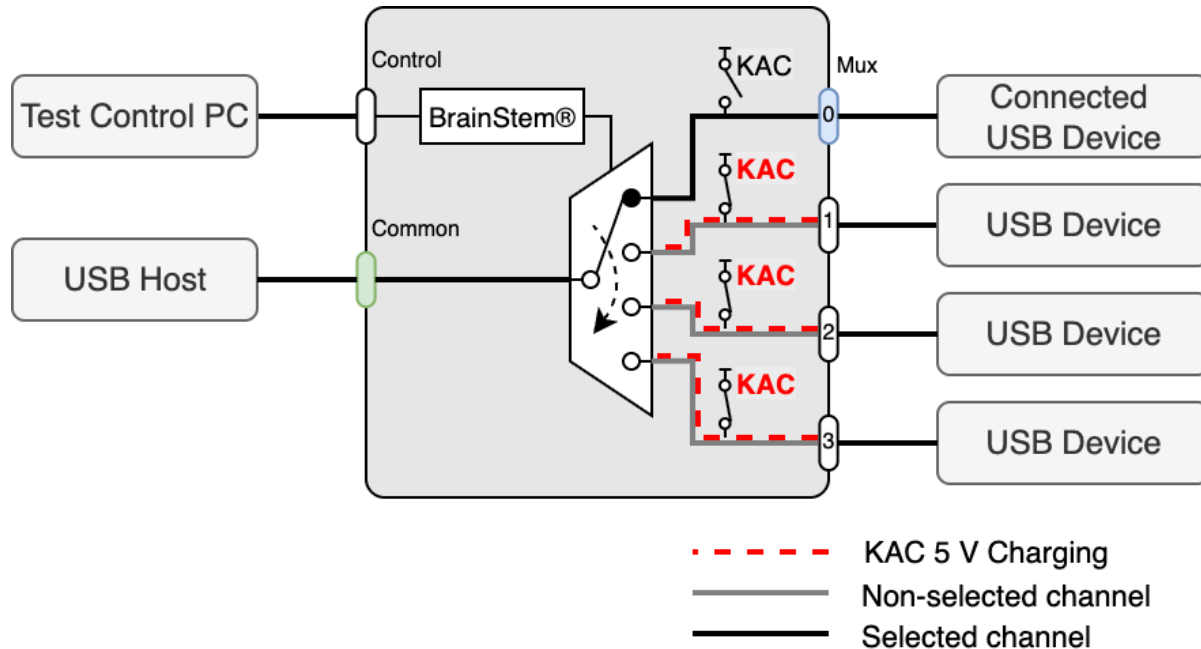

When KAC is enabled on an inactive Mux port, the port's  $V_{BUS}$  connects to the KAC circuit to provide 5 V 500 mA. The KAC circuit does not provide USB power-delivery (USB-PD), USB battery charge specification (BC1.2) or QuickCharge® to the selected ports. The KAC circuit has thermal and overcurrent protection and will stop providing power if limits are exceeded. KAC must be disabled and re-enabled to restore charging. KAC is automatically disabled when mux split mode is enabled.


## Mux Split Mode

The default behavior of the USB-C-Switch Pro is to act as a port selector, where all USB-C lines are connected between the common port and one selected mux channel. In some cases, it is desirable to split the connections in a USB-C cable and route them to different mux paths.

Split mode gives control over individual signal groups, allowing each group to be connect to a mux channel.  $V_{BUS}$  can be connected to any combination of mux channels or disabled on the mux channels.

Common application include:

- Providing a data connection between a USB device the host machine while connecting  $V_{BUS}$  charging from a device-specific charger on a different port.
- Splitting USB HS and SS lines to provide two independent device connections to a single host port.

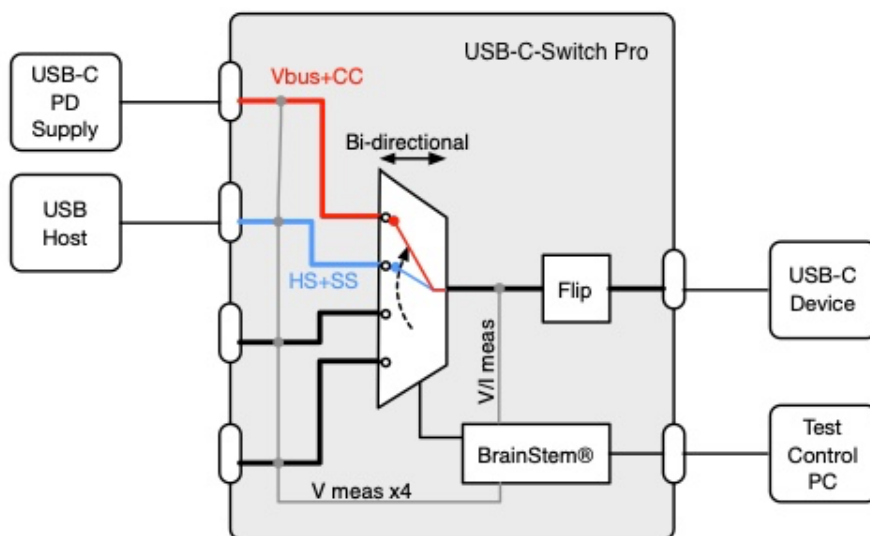

Signal groups under Split control assignment are:

- $V_{BUS}$
- SS(TX 1/2 +/-, RX 1/2 +/-)
- HS (D+/-),
- CC1, CC2, SBU1, and SBU2

When split mode is enabled,  $V_{BUS}$  can be assigned to multiple Mux ports simultaneously, which is useful for powering multiple devices. However, Acroname recommends that  $V_{BUS}$  be assigned to only one mux channel. Caution should be used with multi-point  $V_{BUS}$  assignments as it is possible to apply a  $V_{BUS}$  voltage to a device that has not negotiated for high  $V_{BUS}$  voltages which could damage connected devices.

When split mode is enabled, USB-C-Switch Pro will automatically disable the Keep-Alive-Charging (KAC) feature.

**Warning:** Split mode can create connections and configurations not possible or compliant with standard USB equipment. Using this feature could cause unexpected voltages to be applied to devices which may damage connected equipment

## Ethernet Control

The USB-C-Switch Pro can be managed over Ethernet using the HubTool application, BrainStem API, REST interface, or built-in web interface. Connections are made through the Ethernet jack using TCP/IP sockets and are supported on the local link segment only.

By default, the USB-C-Switch Pro acts as a DHCP client and will receive an IP address from a DHCP server. If no server is detected, the USB-C-Switch Pro falls back to a static IP address of **192.168.44.42**. In static mode, the host computer interface IP must be set to an address in the **192.168.44.x** range. The DHCP client is limited to hosts on the local link and does not operate across network bridges or gateways.


The USB-C-Switch Pro responds to ICMP “ping” requests including broadcast pings. The BrainStem API interface performs a discovery process prior to establishing communication by sending a UDP multicast request on port 9888. The USB-C-Switch Pro responds with a message to UDP port 9889. The USB-C-Switch Pro listens for socket connections on TCP port 8000. The Rest interface uses TCP on ports 9005 and 9006

Host firewall rules must allow:

- Outgoing UDP multicast on port 9888
- Incoming UDP responses on port 9889
- Outgoing TCP connections to port 8000
- Incoming / Outgoing TCP connections on ports 9005 and 9006


### 1.4.3 Indicators and Connections

#### Front Panel

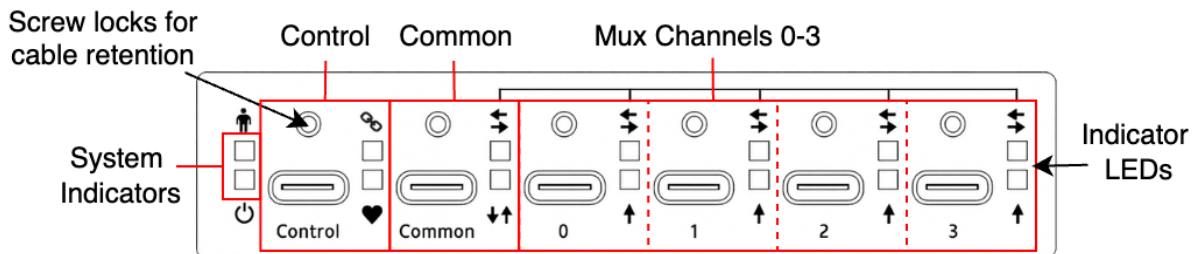

The USB-C-Switch front panel contains all USB ports: Control, Common, and Mux 0-3, along with port and system LED indicators. The control port supports USB Type C power at 5 V, 3 A.

#### Rear Panel

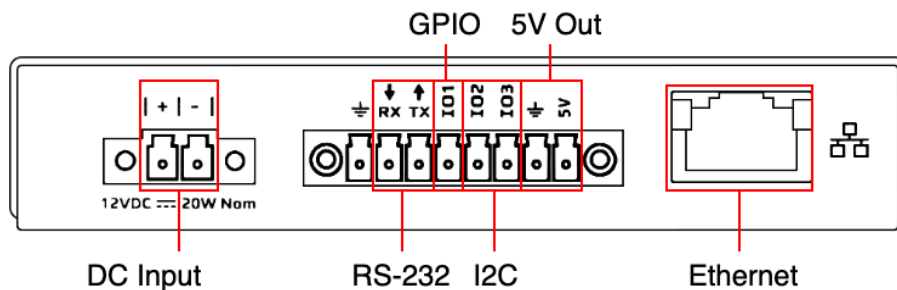

The rear panel contains the Input Power Connector, Ethernet port, and the Expansion Connector.

#### Input Power Connector

Power for the USB-C-Switch Pro can be provided by the  $V_{BUS}$  line on the control port or by external power on the rear panel connection,  $V_{INPUT}$ . A Euro-style 2-pin terminal block (“Euroblock”) is used for the external power connection, with pin spacing of 3.81 mm (0.150”).

## Expansion Connector

The USB-C-Switch expansion connector is Euro-style 8-pin terminal block (“Euroblock”) with pin spacing of 3.50 mm (0.138”). This interface provides additional mechanisms for expandability and test scenarios. Rail 0 is a software-controlled current-limited fixed 5 V source (disabled by default). IO1 is a general-purpose input and output that can also be configured as a selector to cycle through Mux channels.

Table 11: Expansion connector pinout

Connection Name	Pin Number	Description
GND	1	Ground
RX	2	RS-232 Serial Receive (data to USBCSwitchPro)
TX	3	RS-232 Serial Transmit (data from USBCSwitch-Pro)
IO1	4	General Purpose Input//Selector
IO2	5	I <sup>2</sup> C SDA
IO3	6	I <sup>2</sup> C SCL
GND	7	Ground
5V (Rail 0)	8	Current-limited 5 V source

## LED Indicators

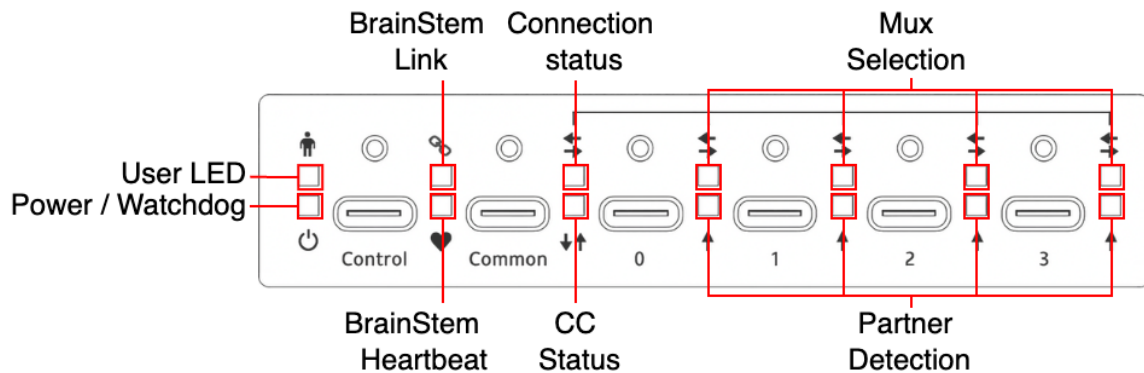























Table 12: LED Indicators and Function

Type	Icon	LED Name	Color	Description
System	 Person	User LED	 Blue	User-controllable LED
	 Power Icon.	Power/Watchdog	 Red /  Magenta	Alternating Red and Magenta when powered
Control	 Chain Links	BrainStem Link	 Yellow	Link present
	 Heart	BrainStem Heartbeat	 Green	Blink when Heartbeat received
Common	 Left/Right Arrow	Connection Status: Solid = connected	 Green	Unflipped
			 Yellow	Flipped
	 Up/Down Arrow	Partner detection	 Green	V <sub>BUS</sub> present or PD negotiated
Mux Ports	 Left/Right Arrow	Mux selection: Solid = enabled Blinking = disabled	 Blue	Channel selected
			 Yellow	Split mode
	 Up Arrow	Partner Detection	 Green	V <sub>BUS</sub> present or PD negotiated
Ethernet	Left	Ethernet Activity	 Green	Blinks with Ethernet activity
	Right	BrainStem Link	 Amber	BrainStem connection established

## Power

The USB-C-Switch Pro can either be bus-powered via the Control Port, or through the 12 V DC input using the included power adapter.

## Unit Reset

The USBC-Switch Pro can be reset to factory default settings using the reset button on bottom of the unit. Pressing the reset button once will restart the USBC-Switch Pro as if it had been power cycled. To restore factory default settings, press twice within 5 seconds.

### 1.4.4 Software Control

The USB-C-Switch Pro is part of a family of Acroname devices that share interface conventions and capabilities.

Acroname provides multi-language APIs for interacting with the USB-C-Switch Pro, with consistent syntax and structure across supported languages. The underlying protocol and API design is called BrainStem® (see [BrainStem](#)).

The API represents the the connection to a USB-C-Switch Pro as a Module class, an instance of which represents the connection to a specific USB-C-Switch Pro. This class provides access to hardware functions through a set of sub-objects called Entities, each representing a specific interface or capability of the device. Once instantiated and connected, the USB-C-Switch Pro can be controlled through its entity interfaces.

A complete list of all entities and functions can be found in the [Module Entities](#) page.



**Example: Discovery and Connection****C++**

```

#include <iostream>
#include "BrainStem2/BrainStem-all.h"

int main(int argc, const char * argv[]) {

    // Locate and connect to the first Acroname object you find
    aUSBCSwitchPro cswitch;
    auto err = cswitch.discoverAndConnect(USB);          // Over USB
    // auto err = cswitch.discoverAndConnect(TCPIP); // Over TCP/IP
    if (err != aErrNone) {
        printf("Error %d encountered connecting to BrainStem module\n", err);
        return 1;
    } else { printf("Connected to BrainStem module.\n"); }

    //Prep USBCSwitchPro for testing
    cswitch.usb.setPortDisable(0);
    cswitch.mux.setEnable(false);
    cswitch.mux.setChannel(0);

    ////////////
    //Do Stuff: other test initialization
    ////////////

    //Ready for testing
    //Enable Port AND Mux
    cswitch.usb.setPortEnable(0);
    cswitch.mux.setEnable(true);

    ////////////
    //Do Stuff on Mux Channel 0
    ////////////

    cswitch.mux.setChannel(1);

    ////////////
    //Do Stuff on Mux Channel 1
    ////////////

    cswitch.mux.setChannel(2);

    ////////////
    //Do Stuff on Mux Channel 2
    ////////////

    cswitch.mux.setChannel(3);

    ////////////
    //Do Stuff on Mux Channel 3
    ////////////

    //Finished with testing.
    //De-initialize.
    cswitch.usb.setPortDisable(0);

```

(continues on next page)

(continued from previous page)

```

cswitch.mux.setEnabled(false);

//Disconnect
cswitch.disconnect();
}

```

## Python

```

import brainstem
# For easy access to error constants
from brainstem.result import Result
from time import sleep
import sys

# Create an instance of a USBCSwitchPro module.
cswitch = brainstem.stem.USBCSwitchPro()

# Locate and connect to the first object you find
result = cswitch.discoverAndConnect(brainstem.link.Spec.USB) # Over USB

# result = cswitch.discoverAndConnect(brainstem.link.Spec.TCPIP) # Over TCP/IP

if result != Result.NO_ERROR:
    print ("Error %d encountered connecting to BrainStem Module.\n" % (result))
    sys.exit(1)
else:
    print ("Connected to BrainStem module.\n")

##Prep USBCSwitchPro for testing
cswitch.usb.setPortDisable(0)
cswitch.mux.setEnabled(False)
cswitch.mux.setChannel(0)

#####
## Do Stuff: other test initialization
#####

##Ready for testing
##Enable Port AND Mux
cswitch.usb.setPortEnable(0)
cswitch.mux.setEnabled(True)

#####
##Do Stuff on Mux Channel 0
#####

cswitch.mux.setChannel(1)

#####
##Do Stuff on Mux Channel 1
#####

cswitch.mux.setChannel(2)

#####
##Do Stuff on Mux Channel 2

```

(continues on next page)

(continued from previous page)

```
#####
cswitch.mux.setChannel(3)

#####
##Do Stuff on Mux Channel 3
#####

#Finished with testing.
#De-initialize.
cswitch.usb.setPortDisable(0)
cswitch.mux.setEnable(False)

# Disconnect from device.
cswitch.disconnect()
```

## Device Drivers

The USB-C-Switch Pro leverages common operating system drivers that do not require custom installations on modern operating systems.

Some older operating systems may require the installation of a BrainStem USB driver information files to enable software control. Installation details on installing USB drivers can be found within the BrainStem Development Kit under the “drivers” folder. For example, Windows 7 requires the supplied INF to communicate with BrainStem USB devices.

### 1.4.5 USB-C-Switch Pro Software Features

To enable a newly-licensed software feature, it is necessary to *update the firmware* of the USB-C-Switch Pro even if you are at on the current version.

## PD Logging

The PD Logging feature allows you to monitor USB-PD communication between devices on the Common and Mux ports of the USB-C-Switch Pro, enabling message logging, decoding, and injection.

### Features

- Capture and decode PD events
- Export message logs to CSV
- Filter traffic by message type
- Clearly show message direction

### Applications

- Device debugging and bringup
- USB PD device testing

## HubTool

With HubTool you can easily visualize the Power Delivery log.

**System Information**

SN:	0x4F7A0C15	Voltage:	20.0 VDC	Hardware Offset:	0
Model:	24	Current:	0.5 A	Router:	6
Firmware:	2.9.6	Temperature:	30 C	SW Offset:	0
Module:	6				

Buttons: Save, Reset, LED

Tabs: Summary, Port 0, Port 2, Port 3, Port 4, Port 5, Control, Power C, IO Expander, Power, PD Logging

Buttons: Start, Stop, Export

Checkboxes: Port 0, Port 1, Port 2, Port 3, Port 4, Port 5, Control, Power C

	Timestamp (SuS)	Port	Direction	Spec	SOP	Power Role	Data Role	ID	Packet Type	Msg Type	Raw
1	1429:635630	1	RX	V2.0	SOP	Source	DFP	0	Data	Source Capabilities	0x61 0x11 0x96 0x90 0x01 0x36
2	1429:645760	1	TX	V2.0	SOP	Sink	UFP	0	Data	Request	0x42 0x10 0x64 0x90 0x01 0x10
3	1429:654670	1	RX	V2.0	SOP	Source	DFP	1	Control	Accept	0x63 0x03
4	1429:680910	1	RX	V2.0	SOP	Source	DFP	2	Control	PS Ready	0x66 0x05
5	1429:690560	1	RX	V2.0	SOP	Source	DFP	3	Data	Vendor Defined	0x6F 0x17 0x01 0x80 0x00 0xFF
6	1429:701040	1	TX	V2.0	SOP	Sink	UFP	1	Data	Vendor Defined	0x4F 0x72 0x41 0x80 0x00 0xFF 0xFF 0x24 0xA...
7	1429:707240	1	RX	V2.0	SOP	Source	DFP	4	Data	Vendor Defined	0x6F 0x19 0x02 0x80 0x00 0xFF
8	1429:712110	1	TX	V2.0	SOP	Sink	UFP	2	Data	Vendor Defined	0x4F 0x24 0x42 0x80 0x00 0xFF 0x00 0x00 0xF...
9	1429:717770	1	RX	V2.0	SOP	Source	DFP	5	Data	Vendor Defined	0x6F 0x1B 0x02 0x80 0x00 0xFF
10	1429:724220	1	TX	V2.0	SOP	Sink	UFP	3	Data	Vendor Defined	0x4F 0x26 0x42 0x80 0x00 0xFF 0x00 0x00 0xF...
11	1429:948940	1	TX	V2.0	SOP	Sink	UFP	4	Control	VConn Swap	0x4B 0x08
12	1429:957240	1	RX	V2.0	SOP	Source	DFP	6	Control	Accept	0x63 0x0D
13	1430:18980	1	TX	V2.0	SOP	Sink	UFP	5	Control	PS Ready	0x46 0x0A
14	1430:72450	1	TX	V2.0	S...	Sink	UFP	0	Data	Vendor Defined	0x4F 0x10 0x01 0x80 0x00 0xFF
15	1430:158980	1	TX	V2.0	S...	Sink	UFP	1	Data	Vendor Defined	0x4F 0x12 0x01 0x80 0x00 0xFF
16	1430:168330	1	RX	V2.0	S...	Source	UFP	1	Data	Vendor Defined	0x4F 0x53 0x41 0x80 0x00 0xFF 0x11 0x07 0x00...
17	1430:262130	1	TX	V2.0	SOP	Sink	UFP	6	Control	DR Swap	0x49 0x0C
18	1430:269210	1	RX	V2.0	SOP	Source	DFP	7	Control	Accept	0x63 0x0F
19	1430:515440	1	TX	V2.0	SOP	Sink	DFP	7	Control	PR Swap	0x6A 0x0E
20	1430:523230	1	RX	V2.0	SOP	Source	UFP	0	Control	Accept	0x43 0x01
21	1430:625040	1	RX	V2.0	SOP	Sink	UFP	1	Control	PS Ready	0x46 0x02
22	1430:741540	1	TX	V2.0	SOP	Source	DFP	0	Control	PS Ready	0x66 0x01
23	1430:903350	1	TX	V2.0	SOP	Source	DFP	0	Data	Source Capabilities	0x61 0x51 0x2C 0x91 0x01 0x3E 0x2C 0xD1 0x02...
24	1430:915290	1	RX	V2.0	SOP	Sink	UFP	0	Data	Request	0x42 0x10 0x2C 0xB1 0x04 0x13
25	1430:919090	1	TX	V2.0	SOP	Source	DFP	1	Control	Accept	0x63 0x03

Software Feature: Rail Enable: Enabled  
 Software Feature: QC Mode: Enabled  
 Software Feature: PDO Editing: Enabled  
 Software Feature: VBUS Validation: Enabled  
 Software Feature: PD Logging: Enabled  
 USBHub3c: 0x4F7A0C15, Error: 7 CMD: stem.hub.port[x].setVoltageSetpoint

Device Type: | Serial Number:  
 USBHub3c 4F7A0C15  
 USBHub3p AF62130D

## Relevant APIs

```
stem.pd[x].setUEIBytes() [cpp][python]
```

## RS232 Serial Communication

The RS232 Serial Communication feature allows one to send commands to control and configure USB-C-Switch Pro.

### Use Cases

- Affecting USB-C-Switch Pro control.
- Audio/Video applications.

## Configuration

The default configuration of the RS232 Serial Communication feature is:

8 Data bits  
No Parity  
No Flow Control  
1 Stop bit  
9600 Baudrate

This feature does have some configurability through the USB-C-Switch Pro *UART Entity*

## Extron Compatible Serial Commands

Using a protocol compatible with Extron's *Simple Instruction Set* over RS232, the RS232 Serial Communication feature can:

- Select / Enable / Disable Mux ports
- Query the USB-C-Switch Pro part number and firmware version.

## Commands

The following is a list of all commands the USB-C-Switch Pro supports with their arguments, descriptions, and expected responses. For USB-C-Switch Pro, "Upstream Port" refers to the Mux port index independent of the port direction.

Cmd	Arguments	Description	Expected Responses
!	None	Get current mux port index	Chn #\r\n
# !	# Port	Change mux port to # port number	Chn #\r\n
# ^	# Port	Change mux port to # port number	Chn #\r\n
N	None	Get part number	S105-USB-C-SWITCH-PRO\r\n
Q	None	Get firmware version	<M>.<m>.<p>\r\n
# P	# Port	Get enable/disable status of # port number	Port #*0\r\n Port #*1\r\n
# * \$ P	# Port \$ Enable 0/1	Set \$ enable/disable of # port number	Port #*\$\r\n

## Error Codes

The following is a list of all error codes the USB-C-Switch Pro supports with descriptions.

Code	Description
E01	invalid port number, check the port number and make sure it's valid.
E10	invalid command, verify that you formatted the command correctly.
E13	invalid value, verify that the value is within the acceptable range for this command.
E14	invalid configuration, verify the system is in a state it can accept this command.

## General Notes

All commands are ASCII strings.

\r is the ASCII character for carriage return.

\n is the ASCII character for new line.

## Examples

Extron Compatible Serial Commands:

Mux Port Selection

Select Mux Port 1

Tx: 1!

Rx: Chn 1\r\n

Port Disable

Disable Port 3

Tx: 3\*0P

Rx: Port 3\*0\r\n

API Configurations:

C++

```
static const int TEST_SERIAL = 0;

aUSBCSwitchPro stem;
stem.discoverAndConnect(USB);

// Enable the port
stem.uart[TEST_SERIAL].setEnabled(true);
```

(continues on next page)

(continued from previous page)

```
// Change baudrate to 115200 from default 9600
stem.uart[TEST_SERIAL].setBaudRate(115200);

// Change Protocol to Extron Compatible
// 0 - Disabled/Undefined
// 1 - Extron Compatible
// 2 - Brainstem Transport
// 6 - Loopback
stem.uart[TEST_SERIAL].setProtocol(1)

// Perform a system save so the changes persist
// through power cycles
stem.system.save();

stem.disconnect();
```

## Python

```
TEST_SERIAL = 0

stem = brainstem.stem.USBCSwitchPro()
stem.discoverAndConnect(brainstem.link.Spec.USB)

# Enable the port
stem.uart[TEST_SERIAL].setEnabled(1)

# Change baudrate to 115200 from default 9600
stem.uart[TEST_SERIAL].setBaudRate(115200)

# Change Protocol to Extron Compatible
# 0 - Disabled/Undefined
# 1 - Extron Compatible
# 2 - Brainstem Transport
# 6 - Loopback
stem.uart[TEST_SERIAL].setProtocol(1)

# Perform a system save so the changes persist
# through power cycles
stem.system.save()

stem.disconnect()
```

## Loopback Protocol

```
# Configure UART[0] for loopback testing
# Data sent to the UART will be echoed back
TEST_SERIAL = 0

stem = brainstem.stem.USBCSwitchPro()
stem.discoverAndConnect(brainstem.link.Spec.USB)

stem.uart[TEST_SERIAL].setEnabled(1)
stem.uart[TEST_SERIAL].setBaudRate(115200)
stem.uart[TEST_SERIAL].setProtocol(6) # Loopback protocol
```

(continues on next page)

(continued from previous page)

```
# Now any data sent to UART[0] will be echoed back
stem.system.save()
stem.disconnect()
```

### VCOM to Hardware UART Link

```
# Link VCOM channel (UART[1]) to hardware RS232 (UART[0])
# This allows USB serial communication to be forwarded to RS232
stem = brainstem.stem.USBCSwitchPro()
stem.discoverAndConnect(brainstem.link.Spec.USB)

# Enable both channels
stem.uart[0].setEnabled(1)    # Hardware RS232
stem.uart[1].setEnabled(1)    # VCOM channel

# Configure matching baud rates
stem.uart[0].setBaudRate(115200)
stem.uart[1].setBaudRate(115200)

# Link VCOM to hardware UART
stem.uart[0].setLinkChannel(1)
stem.uart[1].setLinkChannel(0)

# Data received on VCOM will now be forwarded to RS232,
# and data received on RS232 will be forwarded to VCOM
stem.system.save()
stem.disconnect()
```

### Loopback Protocol

```
// Configure UART[0] for loopback testing
// Data sent to the UART will be echoed back
static const int TEST_SERIAL = 0;

aUSBCSwitchPro stem;
stem.discoverAndConnect(USB);

stem.uart[TEST_SERIAL].setEnabled(true);
stem.uart[TEST_SERIAL].setBaudRate(115200);
stem.uart[TEST_SERIAL].setProtocol(6); // Loopback protocol

// Now any data sent to UART[0] will be echoed back
stem.system.save();
stem.disconnect();
```

### VCOM to Hardware UART Link

```
// Link VCOM channel (UART[1]) to hardware RS232 (UART[0])
// This allows USB serial communication to be forwarded to RS232
aUSBCSwitchPro stem;
stem.discoverAndConnect(USB);

// Enable both channels
stem.uart[0].setEnabled(true); // Hardware RS232
stem.uart[1].setEnabled(true); // VCOM channel
```

(continues on next page)



(continued from previous page)

```
// Configure matching baud rates
stem.uart[0].setBaudRate(115200);
stem.uart[1].setBaudRate(115200);

// Link VCOM to hardware UART
stem.uart[0].setLinkChannel(1);
stem.uart[1].setLinkChannel(0);

// Data received on VCOM will now be forwarded to RS232,
// and data received on RS232 will be forwarded to VCOM
stem.system.save();
stem.disconnect();
```

## Relevant API's

```
stem.uart[x].setEnabled() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getEnabled() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setBaudRate() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getBaudRate() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setProtocol() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getProtocol() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setLinkChannel() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getLinkChannel() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setStopBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getStopBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setParity() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getParity() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setDataBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getDataBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getCapableProtocols() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getAvailableProtocols() [cpp] [python] [NET] [LabVIEW]
```

## 1.4.6 USB-C-Switch Pro Module Entities

### Ethernet Entity

**API Documentation:** [cpp] [python] [.NET] [CCA] [REST]

The Ethernet Entity provides control over network configuration and monitoring for devices with Ethernet connectivity. This includes IP address management, network configuration modes, and interface settings.

### Ethernet Enable/Disable (Get/Set)

```
ethernet . getEnabled <= (unsigned char) enabled  
ethernet . setEnabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the Ethernet interface. When enabled, the Ethernet interface is active and can be used for network communication.

### Network Configuration (Get/Set)

```
ethernet . getNetworkConfiguration <= (unsigned char) configuration  
ethernet . setNetworkConfiguration => (unsigned char) configuration
```

Returns or sets the network configuration mode for the Ethernet interface. This controls whether the interface uses DHCP or static IP configuration.

Table 13: Network Configuration Options

Value	Name	Description
0	None	No network configuration
1	Static	Static IP configuration
2	DHCP	DHCP automatic configuration

### Static IPv4 Address (Get/Set)

```
ethernet . getStaticIPv4Address <= (unsigned char[]) address  
ethernet . setStaticIPv4Address => (unsigned char[]) address
```

Returns or sets the static IPv4 address for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the IP address (e.g., [192, 168, 1, 100] for “192.168.1.100”).

### Static IPv4 Netmask (Get/Set)

```
ethernet . getStaticIPv4Netmask <= (unsigned char[]) netmask  
ethernet . setStaticIPv4Netmask => (unsigned char[]) netmask
```

Returns or sets the static IPv4 netmask for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the netmask (e.g., [255, 255, 255, 0] for “255.255.255.0”).

### Static IPv4 Gateway (Get/Set)

```
ethernet . getStaticIPv4Gateway <= (unsigned char[]) gateway
ethernet . setStaticIPv4Gateway => (unsigned char[]) gateway
```

Returns or sets the static IPv4 gateway address for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the gateway address (e.g., [192, 168, 1, 1] for “192.168.1.1”).

### IPv4 Address (Get)

```
ethernet . getIPv4Address <= (unsigned char[]) address
```

Returns the current IPv4 address of the Ethernet interface as a 4-byte array. This reflects the actual address being used, whether obtained via DHCP or set statically. Each byte represents one octet of the IP address.

### IPv4 Netmask (Get)

```
ethernet . getIPv4Netmask <= (unsigned char[]) netmask
```

Returns the current IPv4 netmask of the Ethernet interface as a 4-byte array. This reflects the actual netmask being used, whether obtained via DHCP or set statically. Each byte represents one octet of the netmask.

### IPv4 Gateway (Get)

```
ethernet . getIPv4Gateway <= (unsigned char[]) gateway
```

Returns the current IPv4 gateway address of the Ethernet interface as a 4-byte array. This reflects the actual gateway being used, whether obtained via DHCP or set statically. Each byte represents one octet of the gateway address.

### Static IPv4 DNS Address (Get/Set)

```
ethernet . getStaticIPv4DNSAddress <= (unsigned char[]) dns
ethernet . setStaticIPv4DNSAddress => (unsigned char[]) dns
```

Returns or sets the static IPv4 DNS server address for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the DNS address.

### IPv4 DNS Address (Get)

```
ethernet . getIPv4DNSAddress <= (unsigned char[]) dns
```

Returns the current IPv4 DNS server address of the Ethernet interface as a 4-byte array. This reflects the actual DNS server being used, whether obtained via DHCP or set statically. Each byte represents one octet of the DNS address.

### Hostname (Get/Set)

```
ethernet . getHostname <= (unsigned char[]) hostname  
ethernet . setHostname => (unsigned char[]) hostname
```

Returns or sets the hostname for the Ethernet interface. The hostname is used for network identification and can be up to 63 characters long.

### MAC Address (Get)

```
ethernet . getMACAddress <= (unsigned char[]) mac
```

Returns the MAC address of the Ethernet interface. This is a unique hardware identifier for the network interface.

### Interface Port (Get/Set)

```
ethernet . getInterfacePort (unsigned char) service <= (unsigned short) port  
ethernet . setInterfacePort => (unsigned char) service, (unsigned short) port
```

Returns or sets the interface port for specific services on the Ethernet interface. The service parameter specifies which service to configure, and the port parameter sets the port number for that service.

Table 14: Interface Port Services

Name	Value	Description
RestServer_HTTP	0	HTTP REST API server
RestServer_HTTPS	1	HTTPS REST API server
BrainStem_TCP	2	BrainStem TCP communication
Brain-Stem_DiscoveryRequest	3	BrainStem discovery request port
Brain-Stem_DiscoveryReply	4	BrainStem discovery reply port

## Examples

### C++

```
// Enable Ethernet interface
ethernet.setEnabled(1);

// Set static IP configuration
ethernet.setNetworkConfiguration(1); // Static mode
unsigned char ip[4] = {192, 168, 1, 100};
unsigned char netmask[4] = {255, 255, 255, 0};
unsigned char gateway[4] = {192, 168, 1, 1};
ethernet.setStaticIPv4Address(ip, 4);
ethernet.setStaticIPv4Netmask(netmask, 4);
ethernet.setStaticIPv4Gateway(gateway, 4);

// Get current IP address
unsigned char current_ip[4];
ethernet.getIPv4Address(current_ip, 4);

// Set hostname
ethernet.setHostname("brainstem-device");
```

### Python

```
# Enable Ethernet interface
stem.ethernet.setEnabled(1)

# Set static IP configuration
stem.ethernet.setNetworkConfiguration(1) # Static mode
ip = [192, 168, 1, 100]
netmask = [255, 255, 255, 0]
gateway = [192, 168, 1, 1]
stem.ethernet.setStaticIPv4Address(ip)
stem.ethernet.setStaticIPv4Netmask(netmask)
stem.ethernet.setStaticIPv4Gateway(gateway)

# Get current IP address
current_ip = stem.ethernet.getIPv4Address()
print(current_ip.value)

# Set hostname
stem.ethernet.setHostname("brainstem-device")
```

## I<sup>2</sup>C Entity

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write data on up to two I<sup>2</sup>C busses

#### Read

```
i2c [ index ] . read => (unsigned char) address, (unsigned char) length <= (unsigned_
↳char*) data
```

Reads up to 26 bytes from the I<sup>2</sup>C bus given by the index. The parameters are the I<sup>2</sup>C address of the device on the bus, and the number of bytes to read. The result is the data that was read or an error.

#### Write

```
i2c [ index ] . write => (unsigned char) address, (unsigned char) length, (unsigned_
↳char*) data <= (unsigned char) result
```

Writes up to 26 bytes to the I<sup>2</sup>C bus given by the index. The parameters are the I<sup>2</sup>C address of the device on the bus, the number of bytes to write, and the data to write. The result is the result error condition or none.

#### Set Pullup

```
i2c [ index ] . setPullup => (unsigned char) bool
```

Sets software controlled pullup state on modules which have software controllable pullups. This setting is saved when a call to `system.save` is made so that Pullup settings on bus 0 can persist.

#### Speed (Get/Set)

```
i2c [ index ] . getSpeed <= (unsigned char) speed
i2c [ index ] . setSpeed => (unsigned char) speed
```

Returns or sets the I2C bus communication speed. The speed setting controls the clock frequency for I2C transactions on the specified bus.

Table 15: I2C Speed Options

Value	Name	Description
0	Default	Default I2C speed (typically 100 kHz)
1	100Khz	Standard I2C speed (100 kHz)
2	400Khz	Fast I2C speed (400 kHz)
3	1000Khz	Fast Plus I2C speed (1 MHz)

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success.
char buff[2];
stem.i2c[0].read(0x42, 0x02, buff); // reads two from device with address 0x42.
char wrbuff[] = {0xBE, 0xEF};
stem.i2c[0].write(0x42, 0x02, wrbuff); // writes 0xBEEF to the device with address_
↳0x42
stem.i2c[0].setPullup(true); //enables pullup on bus 0
stem.i2c[0].setSpeed(1); // sets I2C speed to 100 kHz (i2cSpeed_100Khz)
stem.i2c[0].setSpeed(2); // sets I2C speed to 400 kHz (i2cSpeed_400Khz)
stem.i2c[0].setSpeed(3); // sets I2C speed to 1 MHz (i2cSpeed_1000Khz)
unsigned char speed;
stem.i2c[0].getSpeed(&speed); // gets current I2C speed
```

### Python

The length parameter for I<sup>2</sup>C write is not used in python.

```
result = stem.i2c[0].read(0x42, 0x02) # reads two bytes from the i2c bus. The value_
↳is given in result.value
print result.value
err = stem.i2c[0].write(0x42, b'\xbe\xef') # writes b'\xbe\xef' to the i2c bus.
print err
err = stem.i2c[0].setPullup(True)
print err
err = stem.i2c[0].setSpeed(1) # sets I2C speed to 100 kHz (i2cSpeed_100Khz)
print err
speed = stem.i2c[0].getSpeed() # gets current I2C speed
print speed.value
```

## Mux Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

A MUX is a multiplexer that takes one or more similar inputs (bus, connection, or signal) and allows switching to one or more outputs. An analogy would be the switchboard of a telephone operator. Calls (inputs) come in and by re-connecting the input to an output, the operator (multiplexer) can direct that input to one or more outputs.

One possible output is to not connect the input to anything which essentially disables that input's connection to anything. Not every MUX has multiple inputs.

Some mux entities can simply be a single input that can be enabled (connected to a single output) or disabled (not connected to anything).

## Mux Channel

The mux entity primarily selects one active mux port to connect to the common port using the channel option:

```
stem.mux.setChannel(channel) [cpp] [python] [NET] [LabVIEW]
```

```
stem.mux.getChannel(channel) [cpp] [python] [NET] [LabVIEW]
```

where (channel) is an index 0-3.

## Mux Configuration

Default configuration of the mux is to switch all enabled USB-C lines to a single mux channel. If desired, the switch can split the USB-C functional groups and route them to selected mux ports. This feature is referred to as “split mode”. Default and split mode can be enabled with:

```
stem.mux.getConfiguration(config) [cpp] [python] [NET] [LabVIEW]
```

```
stem.mux.setConfiguration(config) [cpp] [python] [NET] [LabVIEW]
```

where (config) is 0 for default, 1 for Split Mode.

## Split Mode

After enabling split mode the USB-C functional groups can be individually assigned to separate mux channels with:

```
stem.mux.getSplitMode(splitMode) [cpp] [python] [NET] [LabVIEW]
```

```
stem.mux.setSplitMode(splitMode) [cpp] [python] [NET] [LabVIEW]
```

where (splitMode) is a 32-bit word, defined below. Each bit pair is a 2-bit binary number from 0-3 representing the mux port to which to route the functional signal group.  $V_{BUS}$  and CC use 4-bits to define which mux ports are connected to the common port  $V_{BUS}$ /CC lines.



Bit	Mux Split Mode Bit Map
0:1	SBU1
2:3	SBU2
4	CC1 enable CH0
5	CC1 enable CH1
6	CC1 enable CH2
7	CC1 enable CH3
8	CC2 enable CH0
9	CC2 enable CH1
10	CC2 enable CH2
11	CC2 enable CH3
12:13	HS Data
14:15	Reserved
16:17	SS Data
18:19	Reserved
20	V <sub>BUS</sub> enable CH0
21	V <sub>BUS</sub> enable CH1
22	V <sub>BUS</sub> enable CH2
23	V <sub>BUS</sub> enable CH3
24:31	Reserved

## Port Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Port Entity provides control over the most basic items related to a USB Port. This includes actions ranging from a complete port enable and disable to the individual interface control. Voltage and current measurements are also included for devices which support the Port Entity.

- Cable flip
- Alt mode configuration
- Error clearing
- Connect mode
- SBU enable/disable

Ports are referenced by their instance index `port[x]` as shown below.

Port Label	Index (port[x])
Mux 0-3	0-3
Control	4
Common	5

**Data and Power Control (Common Port)**

```
stem.hub.port[x].setEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getEnabled() [cpp] [python] [NET] [LabVIEW]
```

Enable or disable the entire port, including both data and power lines.

```
stem.hub.port[x].setPowerEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getPowerEnabled() [cpp] [python] [NET] [LabVIEW]
```

Enable or disable  $V_{\text{BUS}}$  power only (independent of data path).

```
stem.hub.port[x].setDataEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getDataEnabled() [cpp] [python] [NET] [LabVIEW]
```

Enable or disable USB data lines (both USB 2.0 Hi-Speed and USB 3.x SuperSpeed) without affecting  $V_{\text{BUS}}$ .

```
stem.hub.port[x].setDataHSEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getDataHSEnabled() [cpp] [python] [NET] [LabVIEW]
```

Enable or disable only the USB 2.0 Hi-Speed data lines.

```
stem.hub.port[x].setDataSSEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getDataSSEnabled() [cpp] [python] [NET] [LabVIEW]
```

Enable or disable only the USB 3.x SuperSpeed lanes.

```
stem.hub.port[x].setCCEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getCCEnabled() [cpp] [python] [NET] [LabVIEW]
```

Enable or disable both CC lines simultaneously.

```
stem.hub.port[x].setCC1Enabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getCC1Enabled() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.port[x].setCC2Enabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getCC2Enabled() [cpp] [python] [NET] [LabVIEW]
```

Enable or disable individual CC1 / CC2 pins.

## Electrical Measurements (Common, Mux, and Control Ports)

### Voltage ( $\mu\text{V}$ )

```
stem.hub.port[x].getVbusVoltage() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getVconnVoltage() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getSBU1Voltage() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getSBU2Voltage() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getCC1Voltage() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getCC2Voltage() [cpp] [python] [NET] [LabVIEW]
```

### Current ( $\mu\text{A}$ )

```
stem.hub.port[x].getVbusCurrent() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getVconnCurrent() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getCC1Current() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getCC2Current() [cpp] [python] [NET] [LabVIEW]
```

---

**Note:** SBU1 / SBU2 expose **voltage** only.

---

### Port Mode

```
stem.hub.port[x].setMode() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getMode() [cpp] [python] [NET] [LabVIEW]
```

Port Mode provides a higher-level shortcut that bundles these controls into a single bit-mapped configuration, allowing you to enable or disable groups of lines and set routing behaviors in one operation.

Bit	Port Mode Bit Map
0	Reserved
1	Reserved
2	Keep Alive Charging Enable
3	Reserved
4	HS Data enable
5	Reserved
6	V <sub>BUS</sub> enable
7	SS Data enable
8:11	Reserved
12	CC1 enable
13	CC2 enable
14	SBU enable
15	CC Flip enable
16	Super-Speed Flip enable
17	SBU Flip enable
18	Hi-Speed Flip enable
19:31	Reserved

## Accumulated Power

```
stem.hub.port[x].getVbusAccumulatedPower() [cpp] [python] [NET] [LabVIEW]  
stem.hub.port[x].getVconnAccumulatedPower() [cpp] [python] [NET] [LabVIEW]
```

Reads total accumulated energy (mWh) sourced or sunk on V<sub>BUS</sub> and V<sub>CONN</sub>.

```
stem.hub.port[x].resetVbusAccumulatedPower() [cpp] [python] [NET] [LabVIEW]  
stem.hub.port[x].resetVconnAccumulatedPower() [cpp] [python] [NET] [LabVIEW]
```

Resets accumulated energy and measurement interval.

## Power Delivery Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Power Delivery or PD is a power specification which allows more charging options and device behaviors within the USB interface. This Entity will allow you to directly access the vast landscape of PD.

When the capabilities of a PD system are fully realized everything in the system is “smart”. That includes the device, the host and even the cable. All of these elements contain electronics that identify themselves and what they are capable of doing. Because of this complexity it is important to align on a few terms that will be used throughout this Entity.

**Partner** This refers to the side of the PD connection in question. The possible options for this parameter are.

- **Local** Indicates the context/perspective of the Acroname device you are communicating with through a BrainStem connection.
- **Remote** The context/perspective of anything other than the Acroname device.

Partner Type	Value	Define
Local	0	powerdeliveryPartnerLocal
Remote	1	powerdeliveryPartnerRemote

**Power Role** Indicates the direction of power. This value is typically used in the context of a “Partner”. i.e. The remote partner is sinking, which would mean the local partner is sourcing. The possible options for this context are:

- **Sink** Indicates that the partner is taking power in/from.
- **Source** Indicates that the partner is providing power out/to.

Power Roles are also used in the context of what a port is capable of doing.

- **Sink** Device is capable of consuming power.
- **Source** Device is capable of producing power.
- **Sink/Source** Device is capable of both consuming or producing power. Dual Role Port (DRP)

Power Role	Value	Define
Disabled	0	powerdeliveryPowerRoleDisabled
Source	1	powerdeliveryPowerRoleSource
Sink	2	powerdeliveryPowerRoleSink
Source/Sink	3	powerdeliveryPowerRoleSourceSink

### Power Data Objects (PDO)

- PDO's define what a device is capable of doing in the world of Power Delivery. PDO's are bit packed integers defined by the PD Specification which vary in meaning based on the type of PDO.

### Request Data Objects (RDO)

- RDO's are the final agreement after successful Power Delivery negotiations. This RDO is always sent by the sinking device and is the result of the sources advertised PDO's and the needs/requirements of the sinking device. Only one RDO exists per valid connection.

## PD Logging and Events

The USB-C-Switch Pro supports Power Delivery (PD) logging and event monitoring on the Common port (port 4). This allows you to monitor and capture PD communication for debugging and analysis purposes.

## PD Logging Enable/Disable

PD logging is enabled or disabled for the Common port using the streaming interface. When enabled, PD packets and events are streamed as notifications.

## PD Log Packet (Streaming)

When PD logging is enabled, PD packets are streamed as notifications. Each packet contains the PD message data, direction, timestamp, and other metadata.

The PD log packet streaming uses option code `powerdeliveryLogPacket` (46) and provides real-time access to PD communication packets.

## PD Log Event (Streaming)

PD events are streamed as notifications when they occur. Events include connection/disconnection, resets, VBUS/VCONN state changes, and other PD protocol events.

The PD log event streaming uses option code `powerdeliveryLogEvent` (47). Available event types include:

Table 16: PD Event Types

Value	Event Type
0	None
1	Packet
2	Connect
3	Disconnect
4	Cable Reset Received
5	Cable Reset Sent
6	Hard Reset Received
7	Hard Reset Sent
8	Message Transmit Failed
9	Message Transmit Discarded
10	PD Function Disabled
11	VBUS Enabled
12	VBUS Disabled
13	VCONN Enabled
14	VCONN Disabled
15	Rp1A5 (Source Atomic Message Sequences)
16	Rp3A0 (Source Atomic Message Sequences)
17	BIST Enter
18	BIST Exit

For more information on using PD logging, see the [PD Logging software feature](#).

## Rail

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Rail entity provides power control to connected devices on some modules. Check the module datasheet to determine if the module has this capability.

the Rail entity controls power provided to downstream devices, it has the ability to enable and disable power, can read voltage on the rail, and provides current consumption information on some modules. There are additional capabilities that certain modules provide which enhance basic power delivery through Kelvin sensing, or by bringing online separate power management functionality.

Certain modules may provide more than one power rail. These are independently controlled and can be accessed via the entity index.

---

## Rail Control

The USB-C-Switch Pro provides a fixed 5V power output rail that can be enabled or disabled. The rail provides voltage and current monitoring capabilities for the external power output.

### Rail Enable/Disable

The rail can be enabled or disabled using the following APIs:

```
stem.rail[0].setEnabled() \[cpp\] \[python\] \[.NET\] \[LabVIEW\]  
stem.rail[0].getEnable() \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
```

## Voltage and Current Monitoring

The rail provides real-time voltage and current measurements:

```
stem.rail[0].getVoltage( $\mu$ V) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]  
stem.rail[0].getCurrent( $\mu$ A) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]  
stem.rail[0].getPower(mW) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
```

where voltage is in microvolts ( $\mu$ V), current is in microamperes ( $\mu$ A), and power is in milliwatts (mW).

The USB-C-Switch Pro has one rail (index 0) that provides a fixed 5V output with monitoring capabilities.

## System Entity

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

## Serial Number

Every USB-C-Switch Pro is assigned a unique serial number at the factory. This facilitates an arbitrary number of USB-C-Switch Pro devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the USB-C-Switch Pro away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. Use the following command to save changes to system settings before reboot:

```
stem.system.save() \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

Table 17: Saved Parameters

Entity	Parameters
Ethernet Entity	Network Configuration (DHCP/Static) Static IP Address Static IP Netmask Static IP Gateway Static IP DNS BrainD Port
Mux Entity	Enable Channel Configuration (Normal/Split Mode) Split Mode Settings
Port Entity	Name
Rail Entity	Enable
System Entity	Module Software Offset Address Router Address Name LED Brightness
UART Entity	Enable Baud Rate Protocol
USB System Entity	Selector Mode



## Temperature

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Certain modules have a temperature measurement available. The temperature entity gives access to these measurements. Check your module datasheet to see if your module has a temperature entity.

---

## System Temperature

The temperature of the USB-C-Switch Pro can be measured with:

```
stem.temperature[x].getValue(μC) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
```

```
stem.temperature[x].getValueMin(μC) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
```

```
stem.temperature[x].getValueMax(μC) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
```

where temperature is in micro-degrees Celsius.

The USB-C-Switch Pro has 5 temperature sensors: - Indices 0-3: Channel temperature sensors (channel 0, 1, 2, 3) - Index 4: Common temperature sensor

## UART Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The UART entity is a class which allows a user to configure and control an arbitrary stream of serial data. These streams can represent a number of different transports, including a RS232 external interface, a virtual COM port, and onboard UART interfaces from system components. This entity allows each transport to be configured as either an endpoint, or as a passthrough between transports, similar to a switchboard of a telephone operator.

---

## UART Control

USB-C-Switch Pro has the ability to be controlled via RS-232 on the RX and TX pins of the Expansion Connector. The USB-C-Switch Pro also supports VCOM (Virtual COM port) channels for USB-based serial communication. For additional information about the serial protocol, reference *USB-C-Switch Pro Serial Communication Feature*

## UART Entity Indices

The USB-C-Switch Pro provides the following UART entity indices:

Table 18: UART Entity Indices

Index	Description
0	Hardware RS232 (Expansion Connector)
1	VCOM_0 (Virtual COM port channel)

## UART Protocols

USB-C-Switch Pro has four protocol values enumerated.

Value	Description
0	Disabled/Undefined
1	Extron Compatible Protocol
2	Brainstem Transport
6	Loopback

## UART APIs

UARTs are controlled through the *following APIs*:

```
stem.uart[x].setEnabled() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getEnable() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setBaudRate() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getBaudRate() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setProtocol() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getProtocol() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setLinkChannel() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getLinkChannel() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setStopBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getStopBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setParity() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getParity() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setDataBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getDataBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setFlowControl() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getFlowControl() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getCapableProtocols() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getAvailableProtocols() [cpp] [python] [NET] [LabVIEW]
```

## USB Entity

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The USB Entity provides the software control interface for USB related features. This entity is supported by BrainStem products which have programmatically controlled USB features.

### Alt. Mode Configuration

The USB-C-Switch Pro provides an intermediary receiver and amplifier on the HS and SS data lines. Alt-modes such as DisplayPort require different directional uses of the SS data lines. As such, it is required to define the alt-mode and direction of the connection. These modes are responsible for setting the direction of the SS data lines and related SBU lines.

```
stem.usb.getAltModeConfig(0, configuration) \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

```
stem.usb.setAltModeConfig(0, configuration) \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

where configuration is an integer value defined below. Details of the pin mapping and data direction are also depicted below.

Index	Alt Mode Configuration
0	SS Redrivers Disabled
1	USB 3.2 Enabled (No DisplayPort)
2	4-Lane DisplayPort Host on Common Port
3	4-Lane DisplayPort Host on Mux Port
4	2-Lane DisplayPort with USB 3.2 – Host on Common Port
5	2-Lane DisplayPort with USB 3.2 – Host on Mux Port
6	2-Lane DisplayPort Host on Common Port with USB 3.2 Inverted
7	2-Lane DisplayPort Host on Mux Port with USB 3.2 Inverted
8	USB4 / TB Enabled
9	USB4 / TB Inverted

### Cable Flip

In normal operation, USB-C-Switch Pro connects signals on side A of the Common port to side A of the active Mux port. USB-C-Switch Pro can flip this mapping programmatically, rerouting CC/V<sub>CONN</sub>, SBU, and USB data so that side A of the Common Port connects to side B of the Mux ports.

```
stem.usb.getCableFlip(setting) \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

```
stem.usb.setCableFlip(setting) \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

where the parameter (setting) is an interger value of 0 or 1, where 0 is normal and 1 is full cable flip.

Individual functional groups of the USB connection can be flipped using the portMode option.

## Port Operational State

The portState option provide an interface to the state of the common port and internals of the USB-C-Switch Pro system.

```
stem.usb.getPortState(0, state) [cpp] [python] [NET] [LabVIEW]
```

where (state) is a 32-bit word, defined below.

Bit	Port State Bit Map
0	Vbus enable
1	HS Side A Data enable
2	HS Side B Data enable
3	SBU enable
4	SS Lane 1 Data enable
5	SS Lane 2 Data enable
6	CC1 enable
7	CC2 enable
13:8	Reserved
14	CC Flip enable
15	Super-Speed Flip enable
16	SBU Flip enable
17	High-Speed Flip enable
19:18	Daughter-Card status
23:20	Reserved
24	KAC enable
31:25	Reserved

## SBU Manipulation

```
stem.usb.setSBUEnable(0, enabled) [cpp] [python] [NET] [LabVIEW]
```

```
stem.usb.getSBUEnable(0, enabled) [cpp] [python] [NET] [LabVIEW]
```

where (enable) is a Boolean vale of 0 or 1.

### 1.4.7 USB-C-Switch Pro Cabling Guide

- If you are not specifically testing both orientations of a USB-C port, **use standard USB-C cables** rather than UOCs (see below).
- Use a standard USB-C cable to connect the **test runner or Control PC** to the **Control Port**.
- The total length of the **Common–Mux path** (Common cable + Mux cable) should be below the nominal limits for the highest USB speed in use:

USB Speed	Approximate Maximum Total Cable Length (Common + Mux)
USB 2.0	5 m
USB 5Gbps	2–3 m
USB 20Gbps	1 m
USB 40Gbps	0.8–1 m

- For USB4 40Gbps and Thunderbolt links, Acroname recommends using **0.3 m 80 Gbps-rated cables**.


### Orientation Matching

In normal operation, a USB-C cable can be plugged in either orientation; hosts and devices then negotiate the orientation and remap pins internally. Standard USB-C cables pass **CC** and **USB2 D+/D-** signals only from **one side** of the connector.


Because the USB-C-Switch Pro joins two cables mid-connection (Common-to-Mux), the **orientations of the two cables must match** for CC and USB2 to pass through.

If cable orientations do not match:

- CC communication fails: **no USB-PD negotiation**
- USB2 D+/D- are blocked: **no USB 2.0 or HS signaling**

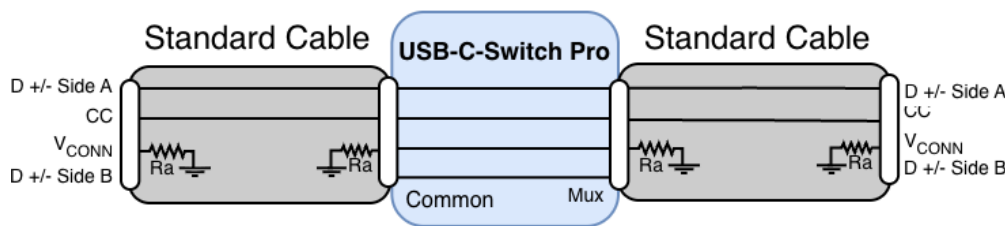

*Standard cables, orientation matched (all signals pass).*

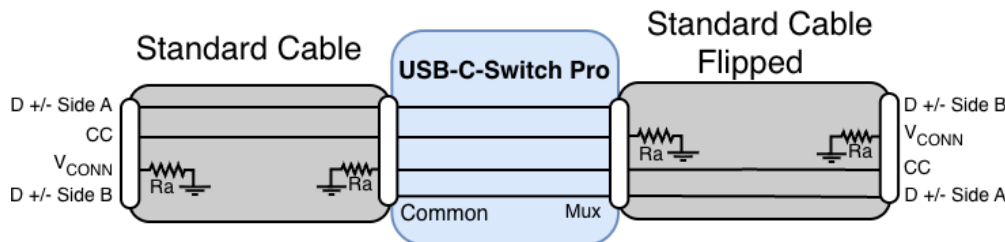


*Standard cables, orientation flipped (CC and HS blocked).*

In all cases — including with UOCs — these signals pass through in both orientations:  $V_{BUS}$ , SS lanes, SBU, and GND. (Omitted from the diagrams for clarity).

### Port Testing: UOCs

Acroname Universal Orientation Cables (UOCs) are nonstandard USB-C cables designed to automate testing of both sides of a USB-C receptacle when used with the USB-C-Switch Pro. These cables pass  $V_{CONN}$  and CC signals without the standard  $R_a$  termination.

- Each **Port Under Test (PUT)** connects through a UOC.
- The **testing device** connects using a standard cable.
- The PUT may be connected to either the **Common port** or a **Mux port**, depending on the test flow.

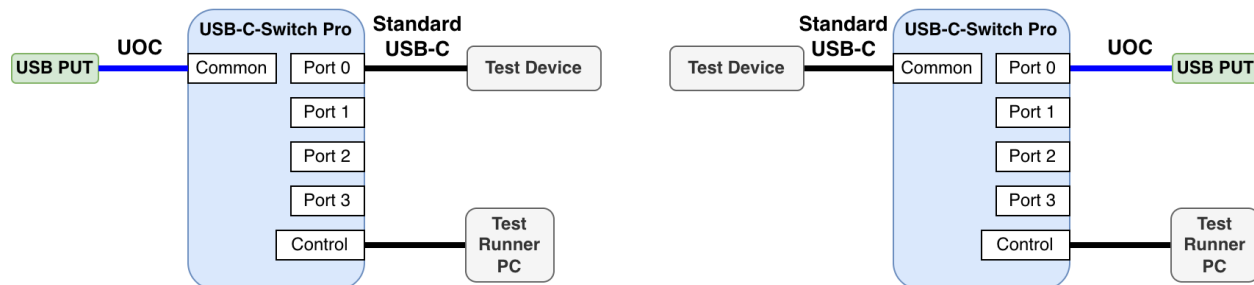


Connect the UOC to the Port Under Test (PUT)

## UOC Selection

Device USB-C ports either **short** sides A and B USB 2.0 (HS) data lines or use a **mux** to keep the two sides electrically independent. Choose the UOC that matches your DUT port.

Two UOC cable types are included:

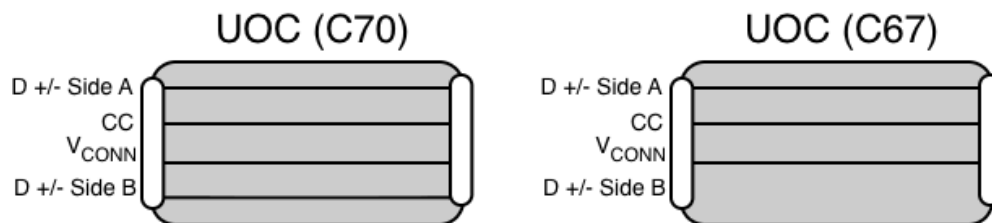


- **C70** — for muxed USB2 ports - Routes **both CC lines** and **two independent HS pairs** (for devices with independent A/B HS pins).
- **C67** — for shorted USB2 ports - Routes **both CC lines** and **one shared HS pair** (for devices that short HS A to B).

If C70 is used on a port that shorts HS A/B, the second HS pair in the cable acts as an antenna, leading to poor signal quality. Connecting C67 to a port with Muxed HS sides results in no USB 2.0 connection in one of the cable flip orientations.

## UOC Connection Examples


### Multiple PUTs, one testing device

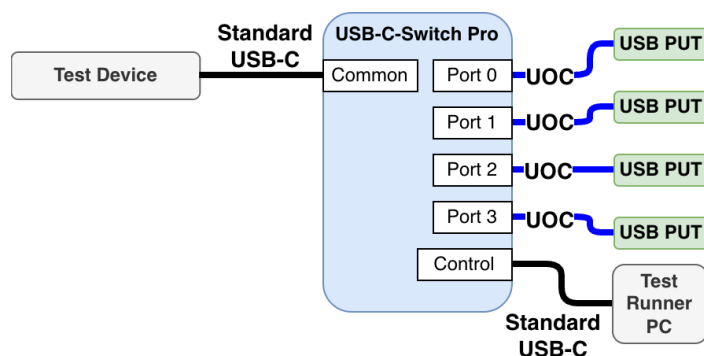

To test **multiple DUT ports** (or multiple DUTs) against a **single tester**:

- Connect each PUT to a **Mux port** using the correct UOC.
- Connect the testing device to the **Common port** using a standard cable.
- Connect the test runner to the **Control port**.

### One PUT, multiple testing devices

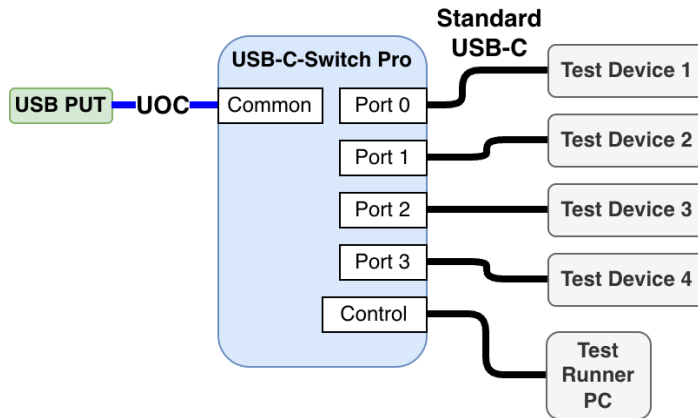

To test **one PUT** against **multiple testers**:

- Connect the PUT via UOC to the **Common port**.
- Connect each tester to the **Mux ports** with standard cables.
- Connect the test runner to the **Control port**.

Any attached DUT or testing device may connect to the USB-C-Switch Pro Control Port and act as the test runner.

## 1.5 USB-C-Switch

### 1.5.1 Quick Start Guide

#### 1. Download The Development Kit

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>11</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>12</sup> for your particular operating system and architecture.

#### 2. Connect Device(s)

- Using standard USB-C cables, connect the Common and Control Ports of the USB-C-Switch Pro to the host.
- Connect devices to any of Mux Ports 0-3 with standard USB-C cables or one of the included Acroname Universal Orientation Cables (UOCs).
  - If using standard cables, you may need to *flip the Switch side of the device cable* to get it to connect.
  - UOCs will work in either orientation. UOC's come in two types: use the C70 cable if your device has independent HS sides and use C67 for when HS sides A and B are shorted. See [Which universal orientation cable should I use?](#)<sup>13</sup>

#### 3. Run System

- Open HubTool
- On the bottom right side of the application select the USB-C-Switch device.

---

**Note:** *Linux users will need run the script labeled "udev.sh" located in the "BrainStem\_linux\_Driverless" folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the USB-C-Switch. For more information please take a look at our [Getting Started Guide](#)

### 1.5.2 Basic Example

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

int main(int argc, const char * argv[]) {

    // Connect to the hardware.
    aUSBCSwitch cswitch;
    auto err = cswitch.discoverAndConnect(USB);
```

(continues on next page)

---

<sup>11</sup> <https://acroname.com/api>

<sup>12</sup> <https://acroname.com/hubtool>

<sup>13</sup> <https://acroname.com/blog/which-universal-orientation-cable-should-i-use>



(continued from previous page)

```

if (err != aErrNone) {
    printf("Error %d encountered connecting to BrainStem module\n", err);
    return 1;

} else { printf("Connected to BrainStem module.\n"); }

//Prep USBSwitch for testing
cswitch.usb.setPortDisable(0);
cswitch.mux.setEnable(false);
cswitch.mux.setChannel(0);

//////////
//Do Stuff: other test initialization
//////////

//Ready for testing
//Enable Port AND Mux
cswitch.usb.setPortEnable(0);
cswitch.mux.setEnable(true);

//////////
//Do Stuff on Mux Channel 0
//////////

cswitch.mux.setChannel(1);

//////////
//Do Stuff on Mux Channel 1
//////////

cswitch.mux.setChannel(2);

//////////
//Do Stuff on Mux Channel 2
//////////

cswitch.mux.setChannel(3);

//////////
//Do Stuff on Mux Channel 3
//////////

//Finished with testing.
//De-initialize.
cswitch.usb.setPortDisable(0);
cswitch.mux.setEnable(false);

//Disconnect
cswitch.disconnect();
}

```

## Python

```

import brainstem
# For easy access to error constants
from brainstem.result import Result

```

(continues on next page)

(continued from previous page)

```

from time import sleep
import sys

# Create an instance of a USBSwitch module.
cswitch = brainstem.stem.USBSwitch()

# Locate and connect to the first object you find on USB
result = cswitch.discoverAndConnect(brainstem.link.Spec.USB)
if result != Result.NO_ERROR:
    print ("Error %d encountered connecting to BrainStem Module.\n" % (result))
    sys.exit(1)
else:
    print ("Connected to BrainStem module.\n")

##Prep USBSwitch for testing
cswitch.usb.setPortDisable(0)
cswitch.mux.setEnable(False)
cswitch.mux.setChannel(0)

#####
## Do Stuff: other test initialization
#####

##Ready for testing
##Enable Port AND Mux
cswitch.usb.setPortEnable(0)
cswitch.mux.setEnable(True)

#####
##Do Stuff on Mux Channel 0
#####

cswitch.mux.setChannel(1)

#####
##Do Stuff on Mux Channel 1
#####

cswitch.mux.setChannel(2)

#####
##Do Stuff on Mux Channel 2
#####

cswitch.mux.setChannel(3)

#####
##Do Stuff on Mux Channel 3
#####

#Finished with testing.
#De-initialize.
cswitch.usb.setPortDisable(0)
cswitch.mux.setEnable(False)

```


(continues on next page)

(continued from previous page)


```
# Disconnect from device.
cswitch.disconnect()
```

### 1.5.3 Indicators and Connections

#### USB Channels

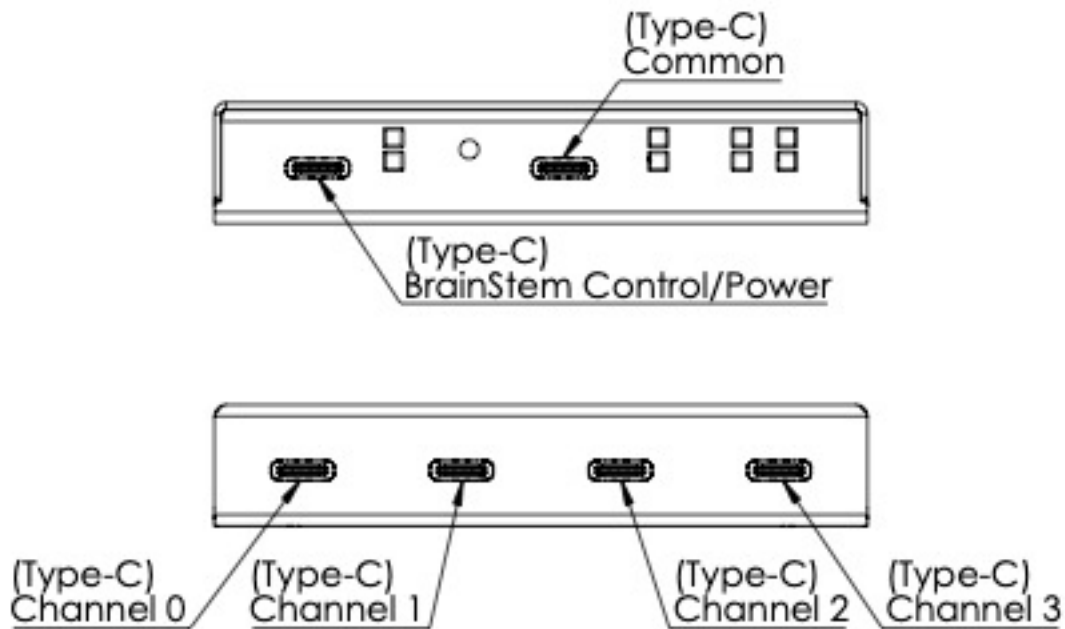

#### LED Indicators

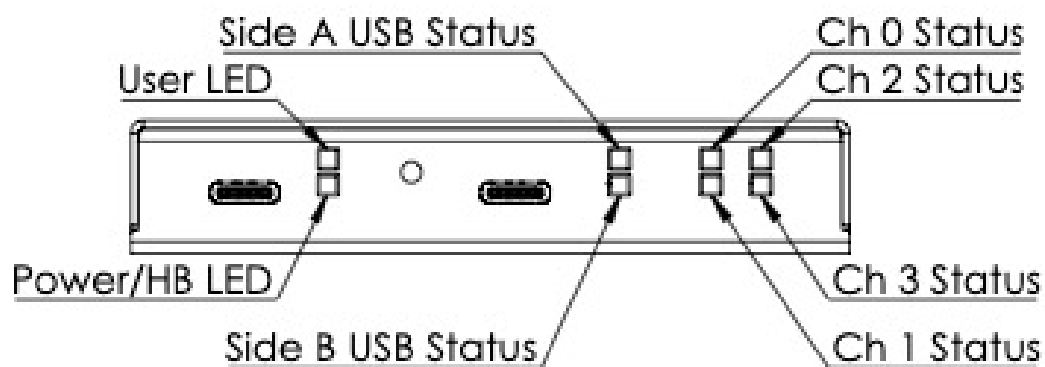

LED Name	Color	Description
User	Blue	Can be manipulated through the available APIs
Power/ Heartbeat	Red/Green	Red indicates system is powered. Flashing green is the heartbeat which indicates an active software connection. Pulses at a rate determined by the system heartbeat rate to indicate an active BrainStem link.
Side A USB Status	Green/Yellow/Grey	Un-flipped/Flipped/CC1 Disabled
Side B USB Status	Green/Yellow/Grey	Un-flipped/Flipped/CC2 Disabled
Channel 0 Status	Blue	Indicates Mux Channel selection. Disabled when Split mode is enabled.
Channel 1 Status	Blue	Indicates Mux Channel selection. Disabled when Split mode is enabled.
Channel 2 Status	Blue	Indicates Mux Channel selection. Disabled when Split mode is enabled.
Channel 3 Status	Blue	Indicates Mux Channel selection. Disabled when Split mode is enabled.

### 1.5.4 Programming Interface

Generally, the Passive model is best for emulating off-the-shelf cables and for eye-diagram validation.

The Redriver model is optimal for general connectivity or longer connections. It includes a programmable, linear, equalizing redriver which allows USB signal tuning to compensate for insertion and cabling losses.

The USB-C-Switch contains many features. These features are organized into groups called *entities*. Through these entities we can access the vast features of the USB-C-Switch.

A complete list of all entities and functions can be found in the [Module Entities](#) page.

---

#### Software Control

Software control of the features of the USB-C-Switch is done with the BrainStem API via a BrainStem link. BrainStem links are done over USB and can be established via the Control Port. After this port is connected to a host machine, a user can connect to it via software API:

```
stem.link.discoverAndConnect(USB)
```

When multiple Acroname devices are connected to a host, connecting to a specific hub can be done by providing the hub serial number. Further, all connected devices can be found using


```
brainstem.discover.findAllModules(USB) (Python)
Acroname::BrainStem::Link::sDiscover() (C++)
```

## Cable Flip

A key feature of the USB-C connector is its symmetric design allowing for insertion in either orientation. This makes the USB-C connector user-friendly yet complicates the development of devices using the USB-C standard. The orientation is defined by the cable or downstream device in the system; more specifically, by components inside of the USB-C male plug of a connection. The USB-C specification makes determining connector orientation a responsibility of the active devices in the system.

With an Acroname UOC cable, the USB-C-Switch enables the unique ability to affect a cable orientation flip. When this orientation flip occurs, it will appear to connected devices that the orientation of their connection has reversed. Most USB-C devices with a female socket will include at least one set of muxes in order to route signal to the correct side of the socket based on the orientation of the cable. When testing such a system it is import to test both orientations to ensure that these internal muxes are functioning. The USB-C-Switch allows flipping of USB-C cable connections to be programmatically automated.

Depicted below are the flip and no-flip setting for full-featured cable and device

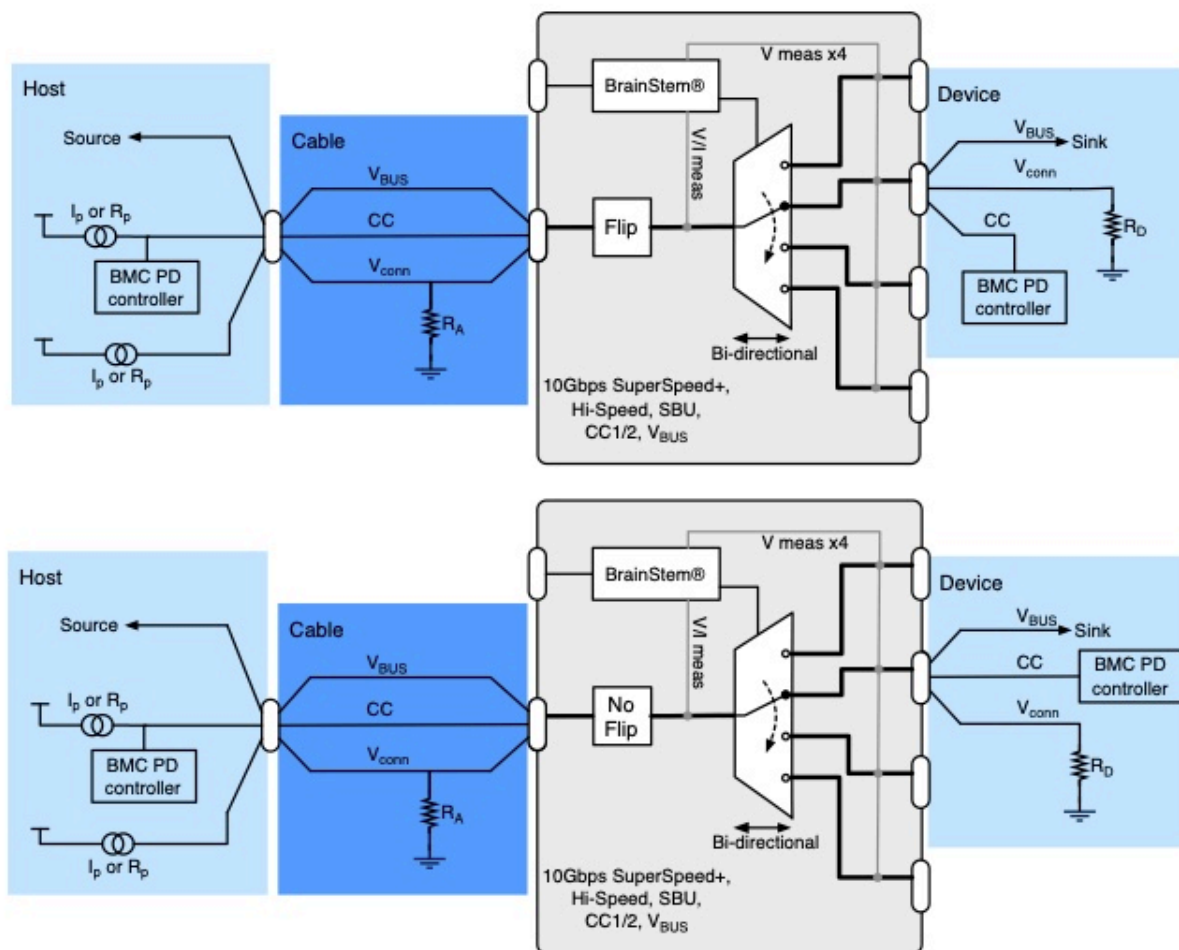


A UOC should be used on either the common port or mux port to enable automated cable flips. The UOC should be connected to the device under test.

When not using the cable flip feature, any standard USB-C cable can be used on both sides of the USB-C-Switch. The orientation of the cables need to be matched in order to facilitate a connection through the switch.

## Keep-Alive Charging (KAC)

It is common to use battery powered devices on either side of the USB-C-Switch. When these devices are not in the active path, either on the common or mux side, the device battery may discharge. The USB-C-Switch has the unique feature of Keep-Alive Charging (KAC) for the mux channel connections.

Below is a diagram for the USB-C-Switch KAC capability:

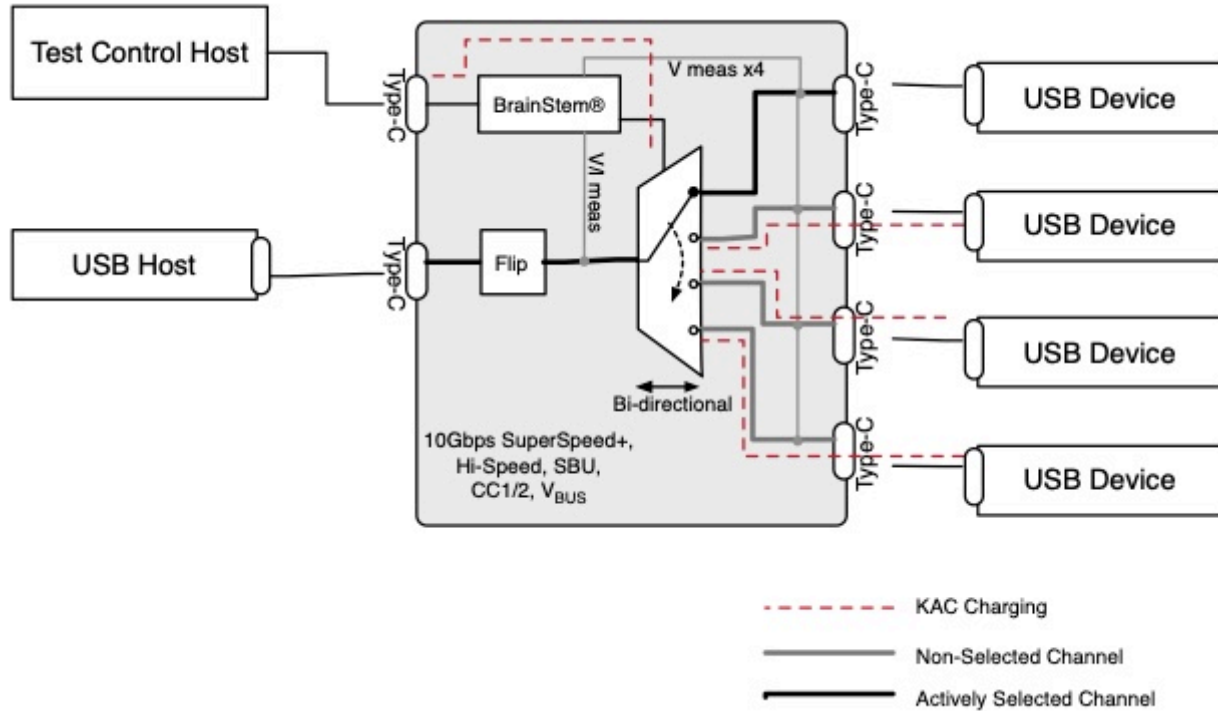

When KAC is enabled, the KAC circuit connects power from the control port VBUS to all non-selected mux channel VBUS lines. KAC power is applied only to inactive mux channels and is not applied to the actively selected mux channel since the actively selected channel has a power path to the common port. KAC is automatically disabled when mux split mode is enabled.

## Mux Modes

### Default Mode

The default behavior of the USB-C-Switch is to act as a port selector, where all USB-C lines are connected between the common port and one selected mux channel.

## Channel Priority Mode


In channel priority mode, the USB-C-Switch automatically selects the lowest-numbered mux port where VBUS is detected, enabling simple automatic host selection. Note that this will only work with USB A-to-C cables, since VBUS is not immediately available on USB-C to USB-C connections.

## Split Mode

In some cases, it is desirable to split the connections in a USB-C cable and route them to different mux paths. A common application is to be able connect a USB device to a host machine for USB data while connecting VBUS charging from a device specific charger.

Split mode gives control over individual signal groups, allowing each group to be connect to a mux channel. VBUS can be connected to any combination of mux channels or disabled on the mux channels. Signal groups under Split control assignment are: VBUS, SSA (TX1+/-, RX1+/-), SSB (TX2+/-, RX2+/-), HSA (D+/-, Side A), HSB (D+/-, Side B), CC1, CC2, SBU1, and SBU2.

A basic example of the USB-C-Switch Mux split mode is depicted.

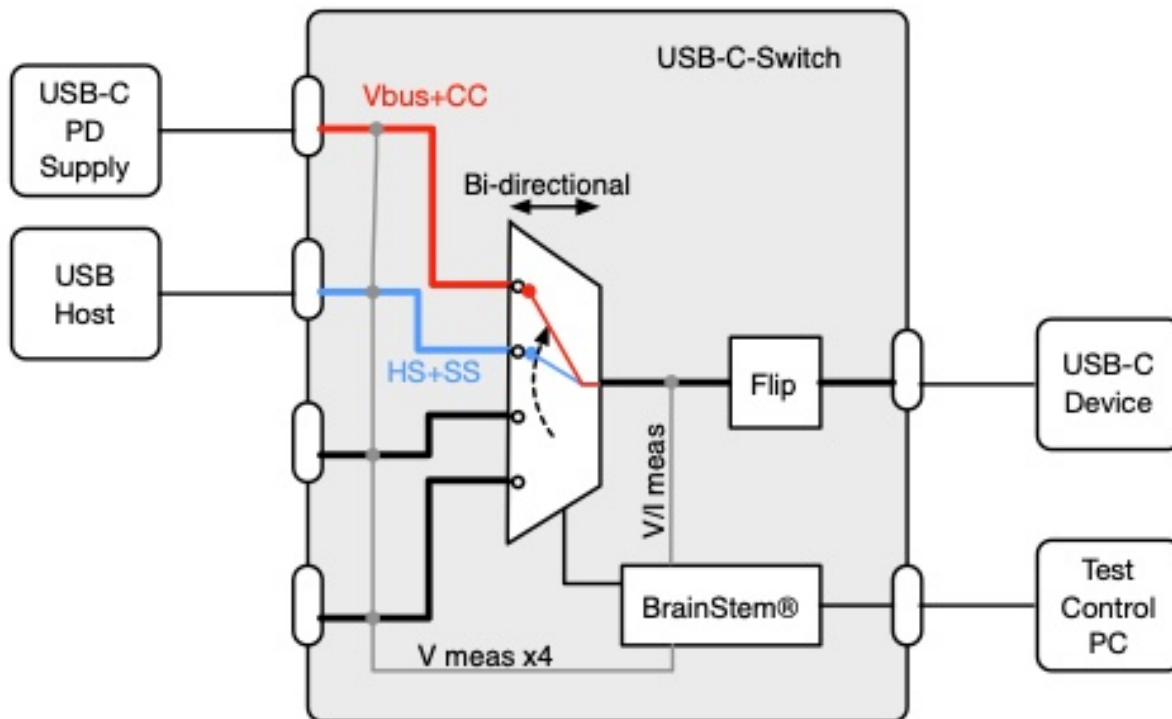

When split mode is enabled, USB-C-Switch will automatically disable the Keep-Alive-Charging (KAC) feature.

## Device Drivers

The USB-C-Switch leverages operating system user space interfaces that do not require custom drivers for operation on all modern operating systems including Windows, Linux and MacOS X. With a connection between a host PC and the USB-C control port, the host PC will recognize a USB full-speed device named “USBCSwitch”.

Legacy operating systems like Windows 7 may require the installation of a BrainStem USB driver. Installation details on installing USB drivers can be found within the BrainStem Development Kit under the “drivers” folder.

## 1.5.5 USB-C-Switch Module Entities

### Equalizer

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Equalizer entity provides a concise interface for controlling equalizer and filter settings for receivers (inputs) and transmitters (outputs). Products supporting Equalizer are capable of applying frequency dependent gain to their signals. This can allow for compensation for signal loss and degradation due to cable quality, cable length and the number of connections. It can also act as a filter implemented in hardware or firmware. Products may implement one or more equalizers; each can be configured using the Equalizer index. Allowed index values are specified in the product data sheet.

---

**Note:** The Equalizer Entity is only functional on the Redriver Version of the USB-C-Switch.

---

### Equalizer Mapping and Entities

The redriver model of the switch provides two equalizer entities. They provide programmatic control over linear equalizers and amplifiers (aka: redrivers) connected to the HS and SS sata lines. These equalizer entities split the configuration between receiver-side and transmitter-side settings allowing for compensation of signal integrity loss due to cable quality, length, and insertion losses. However, some of the settings can have combined effects between receiver and transmitter modes. The two equalizer entities are indexed to their respective data lines as defined below:

Index	Equalizer Entity Mapping
0	USB2 High Speed
1	USB3 SuperSpeed

The transmitter is responsible for driving and selectively amplifying the signals traveling out the redriver hardware after any receiver-side equalization. Each equalizer entity has transmitter options of:

```
stem.equalizer[x].setTransmitterConfig(config) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.equalizer[x].getTransmitterConfig(config) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

The receiver attempts to compensate for distortion of the incoming signal. Each equalizer entity has receiver options such as:

```
stem.equalizer[x].setReceiverConfig(chan, config) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```



```
stem.equalizer[x].getReceiverConfig(chan, config) [cpp] [python] [NET] [CCA] [REST]
```

where (chan) paramters are defined below:

Value	Receiver Channel
0	Applies setting to both common and mux sides
1	Applies settings to mux side
2	Applies settings to common side

### High Speed Redriver Configuration

Due to the half-duplex nature of the USB2 data lines, there is only one receiver and transmitter setting for both the common and mux ports. In addition, since the transmitter and receiver are tightly coupled, the linear gain achieved by transmitter setting varies with the equalizer receiver configuration. Approximate gains for example configurations are shown in the specifications table.

```
stem.equalizer[0].setTransmitterConfig(config) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.equalizer[0].getTransmitterConfig(config) [cpp] [python] [NET] [CCA] [REST]
```

The HS Equalizer entity transmitter option controls the gain applied to HS signals only; USB Low Speed (LS) and Full Speed (FS) signals are unaffected and uncompensated. This option changes the DC boost applied to HS signals which can help achieve sharper rising edges. The allowed values are shown below:

Value	High Speed Transmitter Configuration
0	40mV DC Boost
1	60mV DC Boost
2	80mV DC Boost
3	0mV DC Boost (disabled)

The chan parameter of the HS equalier receiver option can only be 0 because the HS data lines are half-duplex. All other values will result in an error return.

The HS equalizer receiver option configurations control the sensitivity of the redriver to incoming HS signals. The effect of this change in sensitivity can be considered a variable AC boost turned to the specific HS signal applied. Setting the HS equalizer to Level 0 will disable the HS redriver regardless of the HS entity transmitter configuration. The available options are shown below:

```
stem.equalizer[0].setReceiverConfig(0,config) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.equalizer[0].getReceiverConfig(0,config) [cpp] [python] [NET] [CCA] [REST]
```

Value	High Speed Receiver Equalization
0	Level 1
1	Level 2
2	Level 0 (disabled)

## Super Speed Redriver Configuration

The SS equalizer option controls various transmitter gains for each side of the full-duplex SS data lines. Each configuration combines the transmitter gain and approximate peak-to-peak voltage for both the common and mux side transmitters. The available options are shown below.

```
stem.equalizer[1].setTransmitterConfig(config) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.equalizer[1].getTransmitterConfig(config) [cpp] [python] [NET] [CCA] [REST]
```

Value	Mux Side	Com Side	Range
0	1db	0db	900mVpp
1	0db	1db	900mVpp
2	1db	1db	900mVpp
3	0db	0db	900mVpp
4	0db	0db	1100mVpp
5	1db	0db	1100mVpp
6	0db	1db	1100mVpp
7	2db	2db	1100mVpp
8	0db	0db	1300mVpp

The SS equalizers receiver option controls the receiver gain. The actual receiver gain is dependent on the alt-mode configuration and the port data direction (mux to common vs common to mux). There are independent receiver gain settings for the common and mux ports of the switch. Gains across settings, direction, and frequency is shown here:

```
stem.equalizer[1].setReceiverConfig(0,config) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.equalizer[1].getReceiverConfig(0,config) [cpp] [python] [NET] [CCA] [REST]
```

Value	SS Recieve Gain Lever
0-15	Increasing levels of gain

## Mux

### API Documentation: [cpp] [python] [.NET] [CCA] [REST]

A MUX is a multiplexer that takes one or more similar inputs (bus, connection, or signal) and allows switching to one or more outputs. An analogy would be the switchboard of a telephone operator. Calls (inputs) come in and by re-connecting the input to an output, the operator (multiplexer) can direct that input to one or more outputs.

One possible output is to not connect the input to anything which essentially disables that input's connection to anything. Not every MUX has multiple inputs.

Some mux entities can simply be a single input that can be enabled (connected to a single output) or disabled (not connected to anything).

---

## Mux Channel

The mux entity primarily selects one active mux port to connect to the common port using the channel option:

```
stem.mux.setChannel(channel) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.mux.getChannel(channel) [cpp] [python] [NET] [CCA] [REST]
```

where (channel) is an index 0-3.

## Mux Configuration

Default configuration of the mux is to switch all enabled USB-C lines to a single mux channel. If desired, the switch can split the USB-C functional group and route them to selected mux ports. This feature is referred to as “split mode”. The switch can also auto select the lowest Mux channel that currently has VBUS present which is called “port priority”. Default, split mode, or port priority can be enabled with:

```
stem.mux.getConfiguration(config) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.mux.setConfiguration(config) [cpp] [python] [NET] [CCA] [REST]
```

where (config) is 0 for default, 1 for Split Mode, and 2 for Port Priority Mode.

## Split Mode

After enabling split mode the USB-C functional groups can be individually assigned to separate mux channels with:

```
stem.mux.getSplitMode(splitMode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.mux.setSplitMode(splitMode) [cpp] [python] [NET] [CCA] [REST]
```

where (splitMode) is a 32-bit word, defined below. Each bit pair is a 2-bit binary number from 0-3 representing the mux port to which to route the functional signal group. Vbus and CC use 4-bits to define which mux ports are connected to the common port Vbus/CC lines.

Bit	Mux Split Mode Bit Map
0:1	SBU1
2:3	SBU2
4	CC1 enable CH0
5	CC1 enable CH1
6	CC1 enable CH2
7	CC1 enable CH3
8	CC2 enable CH0
9	CC2 enable CH1
10	CC2 enable CH2
11	CC2 enable CH3
12:13	HS Side A Data
14:15	HS Side B Data
16:17	SS Lane 1 Data
18:19	SS Lane 2 Data
20	Vbus enable CH0
21	Vbus enable CH1
22	Vbus enable CH2
23	Vbus enable CH3
24:31	Reserved

---

**Note:** The split mode interface changed in 2.10.0, ensure your firmware and software are up to date.

---

## System

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

## Serial Number

Every USB-C-Switch is assigned a unique serial number at the factory. This facilitates an arbitrary number of USB-C-Switch devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Hardware Version

Get the module's hardware version information.

```
stem.system.getHardwareVersion(hardwareVersion) [cpp] [python] [NET] [CCA] [REST]
```

The hardware version is a 32-bit value that encodes hardware revision and variant information. The format is:

Table 19: Hardware Version Bit Fields

Bits	Field	Description
24-31	Revision	Hardware revision identifier
16-23	Reserved	Reserved (always 0)
8-15	Variant	Hardware variant identifier
0-7	Reserved	Reserved (always 0)

Table 20: Hardware Revision Values

Value	Description
'B'	Revision B
'C'	Revision C
'D'	Revision D

Table 21: Hardware Variant Values

Value	Description
'P'	Passive
'R'	Basic Redriver
'S'	Redriver with SBU measurements
'I'	Redriver and Isolator with SBU Measurements

The hardware revision is determined by reading hardware strapping pins during initialization. The daughtercard variant is detected by reading the daughtercard type and available features (SBU ADC, USB2 isolator) to identify the specific daughtercard configuration.

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the USB-C-Switch away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() [cpp] [python] [NET] [CCA] [REST]
```

Saved Configurations	
USB Mode (usb)	Equalizer Configuration (equalizer)
Mux Split Mode (mux)	Mux Enable (mux)
Mux Configuration (mux)	Mux Port (mux)

## USB

**API Documentation:** [cpp] [python] [.NET] [CCA] [REST]

The USB Entity provides the software control interface for USB related features. This entity is supported by BrainStem products which have programmatically controlled USB features.

---

### Alt. Mode Configuration (Redriver Only)

The redriver model USB-C-Switch provides an intermediary receiver and amplifier on the HS and SS data lines. Various alt-modes such as DisplayPort require different directional uses of the SS data lines. As such, it is required to define the alt-mode and direction of the connection. These modes are responsible for setting the direction of the SS data lines and related SBU lines.

```
stem.usb.getAltModeConfig(0, configuration) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setAltModeConfig(0, configuration) [cpp] [python] [NET] [CCA] [REST]
```

where configuration is an integer value defined below. Details of the pin mapping and data direction are also depicted below.

Index	Alt Mode Configuration
0	USB 3.1 Disabled
1	USB 3.1 Enabled
2	4 Lane DisplayPort Host on Common Port
3	4 Lane DisplayPort Host on Mux Port
4	2 Lane DisplayPort with USB 3.1 – Host on Common Port
5	2 Lane DisplayPort with USB 3.1 – Host on Mux Port
6	2 Lane DisplayPort Host on Common Port with USB 3.1 Inverted
7	2 Lane DisplayPort Host on Mux Port with USB 3.1 Inverted

Common Port Pin								Mux Port Pin Normal	Mux Port Pin Flipped
Redriver Config	USB 3.1	4 Lane DisplayPort Host on Common	4 Lane DisplayPort Host on Mux	2 Lane DisplayPort Host on Mux with USB3.1	2 Lane DisplayPort Host on Common with USB3.1	2 Lane DisplayPort Host on Common with USB 3.1 Inverted	2 Lane DisplayPort Host on Mux with USB 3.1 Inverted	Color Key	
								USB HS	
								USB SS	
								DisplayPort (alt-mode)	
A2	←	→	←	←	→	→	←	B11	A11
A3	←	→	←	←	→	→	←	B10	A10
A10	→	→	←	←	→	→	←	B3	A3
A11	→	→	←	←	→	→	←	B2	A2
B2	←	→	←	←	←	→	→	A11	B11
B3	←	→	←	←	←	→	→	A10	B10
B10	→	→	←	→	→	←	←	A3	B3
B11	→	→	←	→	→	←	←	A2	B2
A8	↔	↔	↔	↔	↔	↔	↔	B8	A8
B8	↔	↔	↔	↔	↔	↔	↔	A8	B8

## Cable Flip

The USB-C-Switch can simulate a cable flip by electrically switching the CC/VCONN and SBU lines between side-A and side-B of the USB-C female sockets. USB data lines are also swapped accordingly. This flip can be done with:

```
stem.usb.getCableFlip(setting) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setCableFlip(setting) [cpp] [python] [NET] [CCA] [REST]
```

where the parameter (setting) is an interger value of 0 or 1, where 0 is normal and 1 is full cable flip.

Individual functional groups of the USB connection can be flipped using the portMode option.

## CC Manipulation

The automatic orientation detection and connection functionality is interfaced with:

```
stem.usb.setConnectMode(0, mode) [cpp] [python] [NET] [CCA] [REST]
```

where (mode) is a Boolean value of 0 or 1.

Manipulating the CC lines is done by calling:

```
stem.usb.setCC1Enable(0, enabled) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setCC2Enable(0, enabled) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getCC1Enable(0, enabled) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getCC2Enable(0, enable) [cpp] [python] [NET] [CCA] [REST]
```

where (enable) is a Boolean value of 0 or 1.

CC line current and voltage can be measured with:

```
stem.usb.getCC1Voltage(0,  $\mu$ V) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getCC2Voltage(0,  $\mu$ V) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getCC1Current(0,  $\mu$ A) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getCC2Current(0,  $\mu$ A) [cpp] [python] [NET] [CCA] [REST]
```

where positive current is power transfer from the common port to the mux port.

## Channel Control

The usb entity provides a mechanism to control and monitor all USB functionality on the common port. Individual parts of the USB connection can be manipulated through the usb entity. For example, enable/disable USB data and Vbus lines, measure current and voltage on Vbus, VCONN, and CC. The USB-C-Switch has one usb entity class. It uses the mux entity to select one of the 4 mux channels to which to connect the enabled USB signals.

The usb entity splits the USB connection into tree going from most generic to most specific with usb entity options at each level. Higher levels of the tree can be used to cause simultaneous changes on the lower levels. The tree structure is port(Vbus, data(HS, SS), USB-C(CC1, CC2, SBU)).

The usb.setPortEnable/Disable entity option allows for manipulating all parts of the USB connection (HS data, SS data, both CC and SBU lines, and Vbus lines) simultaneously.

```
stem.usb.setPortEnable(channel) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPortDisable(channel) [cpp] [python] [NET] [CCA] [REST]
```

Where channel is always 0 for the USB-C-Switch. Further examples of the usb entity will always show the channel option as 0.

Manipulating USB data lines (HS and SS) simultaneously is done by calling:

```
stem.usb.setDataEnable(0) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setDataDisable(0) [cpp] [python] [NET] [CCA] [REST]
```

Manipulating HS or SS data lines is done by calling:

```
stem.usb.setHiSpeedDataEnable(0 [cpp] [python] [NET] [CCA] [REST]
```



```
stem.usb.setHiSpeedDataDisable(0) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setSuperSpeedDataEnable(0) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setSuperSpeedDataDisable(0) [cpp] [python] [NET] [CCA] [REST]
```

Manipulating Vbus lines are done by calling:

```
stem.usb.setPowerEnable(0) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setPowerDisable(0) [cpp] [python] [NET] [CCA] [REST]
```

## Port Manipulation

Vbus voltage and current through the switch's Vbus lines can be measured with:

```
stem.usb.getPortVoltage(0,  $\mu$ V) [cpp] [python] [NET] [CCA] [REST]
stem.usb.getPortCurrent(0,  $\mu$ A) [cpp] [python] [NET] [CCA] [REST]
```

where positive current is power transfer from the common port to the mux port.

## Port Mode

The portMode option provides a bitmapped setting for granular control of the individual connections. The portMode option is the desired mode of the port. The companion option, portState, is used to provide the current state of the port.

```
stem.usb.getPortMode(0, mode) [cpp] [python] [NET] [CCA] [REST]
stem.usb.setPortMode(0, mode) [cpp] [python] [NET] [CCA] [REST]
```

where (mode) is a 32-bit word, defined below.

Bit	Port Mode Bit Map
0	Reserved
1	Reserved
2	Keep Alive Charging Enable
3	Reserved
4	HS Side A Data enable
5	HS Side B Data enable
6	Vbus enable
7	SS Lane 1 Data enable
8	SS Lane 2 Data enable
9:10	Reserved
11	Auto Connect enable
12	CC1 enable
13	CC2 enable
14	SBU enable
15	CC Flip enable
16	Super-Speed Flip enable
17	SBU Flip enable
18	Hi-Speed Flip enable
19	CC1 Current Injection enable
20	CC2 Current Injection enable
21:31	Reserved

## Port Operational State

The portState option provide an interface to the state of the common port and internals of the USB-C-Switch system.

```
stem.usb.getPortState(0, state) [cpp] [python] [NET] [CCA] [REST]
```

where (state) is a 32-bit word, defined below.

Bit	Port State Bit Map
0	Vbus enable
1	HS Side A Data enable
2	HS Side B Data enable
3	SBU enable
4	SS Lane 1 Data enable
5	SS Lane 2 Data enable
6	CC1 enable
7	CC2 enable
13:8	Reserved
14	CC Flip enable
15	Super-Speed Flip enable
16	SBU Flip enable
17	High-Speed Flip enable
19:18	Daughter-Card status
25:20	Reserved
26	CC1 Current Injection
27	CC2 Current Injection
28	CC1 Pulse detect
29	CC2 Pulse detect
30	CC1 Logic state
31	CC2 Logic state

## SBU Manipulation

```
stem.usb.setSBUEnable(0, enabled) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getSBUEnable(0, enabled) [cpp] [python] [NET] [CCA] [REST]
```

where (enable) is a Boolean vale of 0 or 1.

## Complete List of Supported Entities and Functions

Entity Class	Entity Option	Variable(s) Notes
App[0-3]	execute	
	return	
Pointer[0-3]	getOffset	
	setOffset	
	getMode	
	setMode	

continues on next page

Table 22 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
	getTransferStore	
	setTransferStore	
	initiateTransferToStore	
	initiateTransferFromStore	
	getChar	
	setChar	
	getShort	
	setShort	
	getInt	
	setInt	
store[0-1]	getSlotState	
	loadSlot	
	unloadSlot	
	slotEnable	
	slotDisable	
	slotCapacity	
system[0]	slotSize	
	getModel	
	getHardwareVersion	
	getModule	
	getRouter	
	setHBInterval	
	getHBInterval	
	setLED	
	getLED	
	setBootSlot	
	getBootSlot	
	getVersion	
	getSerialNumber	
	save	
	reset	
	getInputVoltage	
	getModuleBaseAddress	
	getModuleSoftwareOffset	
	getRouterAddressSetting	
	getUptime	
	getName	
	setName	
	resetDeviceToFactoryDefaults	
timer[0-8]	getExpiration	
	setExpiration	
usb[0]	setPortEnable	
	setPortDisable	
	setDataEnable	
	setDataDisable	
	setHiSpeedDataEnable	
	setHiSpeedDataDisable	
	setSuperSpeedDataEnable	
	setSuperSpeedDataDisable	
	setPowerEnable	

continues on next page

Table 22 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
	setPowerDisable	
	getPortVoltage	
	getPortCurrent	
	getPortMode	
	setPortMode	
	getPortState	
	setCableFlip	
	getCableFlip	
	setConnectMode	
	getConnectMode	
	setCC1Enable	
	getCC1Enable	
	setCC2Enable	
	getCC2Enable	
	getCC1Voltage	
	getCC2Voltage	
	getCC1Current	
	getCC2Current	
	setSBUEnable	
	getSBUEnable	
mux[0]	setEnabled	
	getEnable	
	setChannel	
	getChannel	
	getConfiguration	
	setConfiguration	
	getSplitMode	
	setSplitMode	
	getVoltage	Channels 0-3
	setReceiverConfig	
equalizer[0-1]	getReceiverConfig	
	setTransmitterConfig	
	getTransmitterConfig	


## 1.6 USBExt3c

### 1.6.1 Quick Start Guide

#### 1. Download The Development Kit

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>14</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>15</sup> for your particular operating system and architecture.

#### 2. Connect Devices

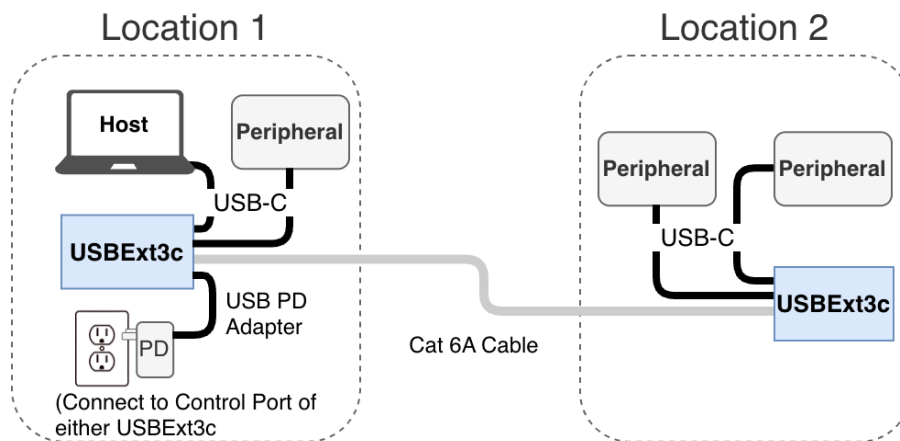

#### Extension Setup

- Position devices at the desired locations. Devices are identical and can be placed on either end of the extension.
- Connect their HDBaseT-USB3 ports with a Cat6A cable (not included in the kit).

#### Power Connection<sup>16</sup>

- Connect the included 100 W USB-PD power adapter to any available<sup>17</sup> USB port on either USBExt3c. The other extender and attached devices will be powered over the extension link.

#### Host and Peripheral Connections

- Connect the host device to *Port 0* or *Port 1* via included USB-C cable.
  - The USBExt3c will automatically detect when a host-capable device has connected and set the corresponding port to be Upstream-Facing.
- Connect peripherals to other available ports 0 or 1 on either end of the extension link via USB-C .
- Confirm that peripherals are visible to the host computer.

<sup>14</sup> <https://acroname.com/api>

<sup>15</sup> <https://acroname.com/hubtool>

<sup>16</sup> Several alternate power configurations are supported, including bus power and powering both devices. see [Flexible Power Routing](#).

<sup>17</sup> If controlling the extender pair via a control port, keep the desired control port available by powering the extender pair through other ports.

### 3. Connect with HubTool

- Open HubTool on the host computer.
- On the bottom right side of the application, select the USBExt3c device to connect.
- Once the connection is established, the second USBExt3c device will also appear on the bottom right .

---

**Note:** *Linux users will need to run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the USBExt3c. For more information please take a look at our [Getting Started Guide](#)

## 1.6.2 Functionality

### Feature Descriptions

Each USBExt3c is addressable and controllable from a host system via USB-C Control Port, Ethernet (TCP/IP), RS-232, or via a second USBExt3c over the HDBaseT-USB3 Link. Once connected, a BrainStem link is established to the onboard controller, enabling software control through the BrainStem API. This API provides full access to all module functionality from a host system.

### USB Ports

The two full-featured ports (0 and 1) can be configured as upstream-facing host ports or downstream-facing device ports. The ports implement separate, independently switched USB HS and SS data, CC,  $V_{\text{CONN}}$  and current-limited  $V_{\text{BUS}}$  lines, supporting advanced USB testing applications.

The dedicated USB-C control port is a high-speed USB 2.0 connection for BrainStem interface and device power only. No other USB traffic can flow on this connection. Port-level features are controlled by the [Port Entity](#)


Port	Index
0	0
1	1
Control	2

### Automatic Host Port Switching Behavior

By default, any time a host-capable device is connected to any port on either end of the extension, it will become the host. This enables simple host switching for BYOD/M conference rooms: a laptop can temporarily take control of room AV equipment to host a meeting. When the laptop disconnects, the dedicated room PC becomes the host and regains control of the peripherals.

## Programmatic Host Switching


For static installations or when a controller is managing host selection, port roles can also be assigned directly. For each USBExt3, the upstream-facing port role can be assigned to either port or to the HDBaseT-USB3 extension link.

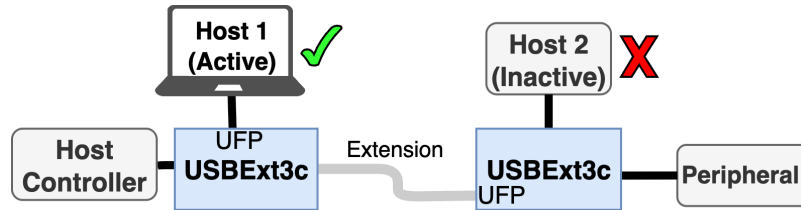

*Programmatic host selection by assigning UFP port roles*


## Flexible Power Routing

The USBExt3c accepts power through any USB-C port and will operate with as little as 5 V (900 mA) for data-only extension, allowing bus-powered applications. For example, the host-side USBExt3c could be bus-powered by the host, while the device-side extender receives 5 V 900 mA from a power adapter connected to the control port.

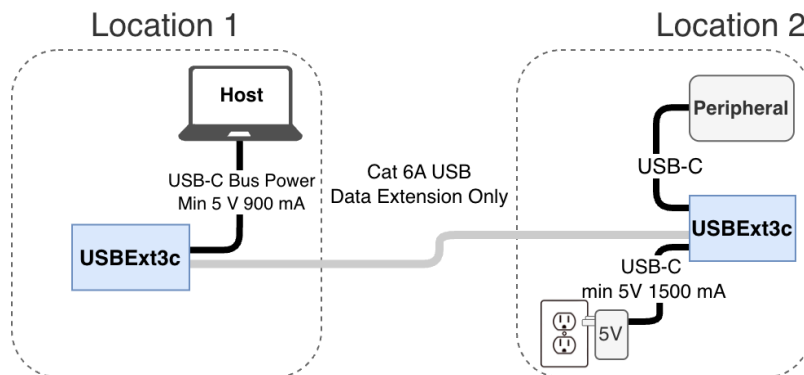


*Minimal local power configuration*

To power a pair of USBExt3c from a single power source (with PoE power provided to the second USBExt3c), the power supply must provide between 45 W and 100 W. When a single 100 W supply is connected to one USBExt3c, up to 60 W is available to devices on the second USBExt3c. For maximum device power, connect a 100 W USB-PD supply to each USBExt3c to provide 90 W shared per extender.

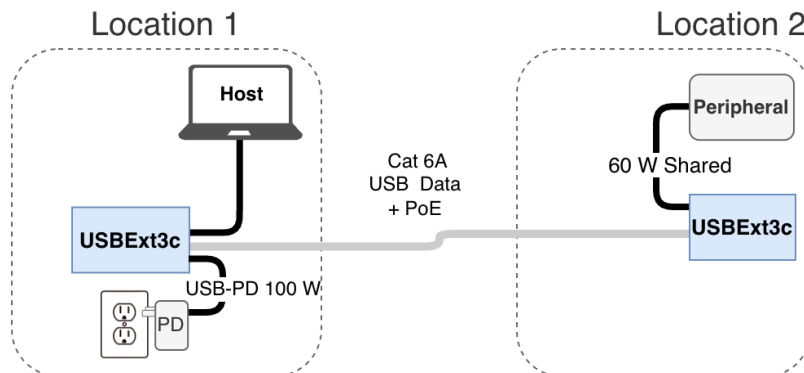

### Power extension

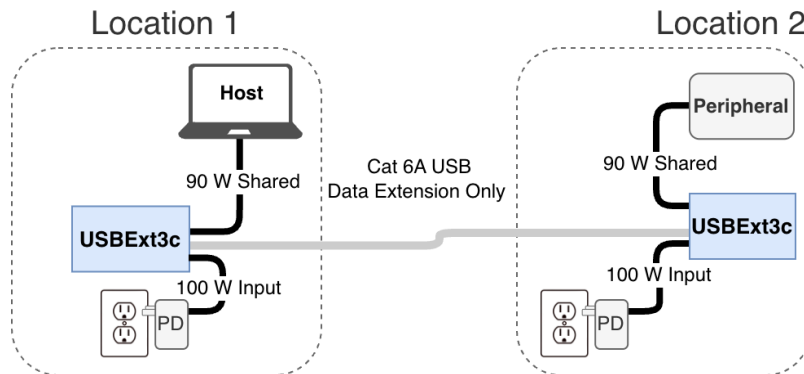

*Maximum device power is available when both USBExt3c extenders are powered*

## RS-232 Extension

By default, the RS-232 ports are set to extend signals in Oversampled Mode where the RX and TX lines are sampled at 1.5 MHz and reconstructed on the other end. This allows host and clients to negotiate data rates independent of the extension. It is recommended to limit data rates to 150 k baud (1/10 of Fs).

## Ethernet Control

The USBExt3c can be managed over Ethernet using the HubTool application, BrainStem API, REST interface, or built-in web interface. Connections are made through the Ethernet jack using TCP/IP sockets and are supported on the local link segment only. For most setups, we recommend a direct Ethernet link between the host test machine and the USBExt3c.

When using a pair of USBExt3c connected by HDBaseT-USB3, only one Ethernet connection is required; the second device is available through Brainstem networking over the extension link.

By default, the USBExt3c acts as a DHCP client and will receive an IP address from a DHCP server. If no server is detected, the USBExt3c falls back to a static IP address of **192.168.44.42**. In static mode, the host computer interface IP must be set to an address in the **192.168.44.x** range. The DHCP client is limited to hosts on the local link and does not operate across network bridges or gateways.

The USBExt3c responds to ICMP “ping” requests including broadcast pings. The brainstem API interface performs a discovery process prior to establishing communication by sending a UDP multicast request on port 9888. The USBExt3c responds with a message to UDP port 9889. The USBExt3c listens for socket connections on TCP port 8000.

Host firewall rules must allow:

- Outgoing UDP multicast on port 9888
- Incoming UDP responses on port 9889
- Outgoing TCP connections to port 8000
- Incoming / Outgoing TCP connections on ports 9005 and 9006



## HDBaseT-USB3 Configuration

The HDBaseT-USB3 port provides simultaneous extension of USB SuperSpeed, High-speed, RS232, and GPIO / frame sync data over Cat6A cable, along with bidirectional PoE++ Power. The HDBaseT-USB3 link direction normally operates in Automatic mode but can be manually configured for optimizing fixed installations.

Detailed HDBaseT-USB3 link parameters from either extender in the pair can be viewed in HubTool or accessed through the BrainStem API, including:

- Index (local or remote)
- State (Device present, Link role and status)
- Serial Number
- VS6320 Firmware Version
- Cable Length (m)
- Mean Squared Error ( $\mu$ B)
- Retransmission rate (# messages between retransmission, 0 = no errors)
- Link Utilization ( $\mu$ %)
- Encoding state (e.g. PAM 8)

## PoE++ Configuration

The PoE++ system will automatically manage power extension based on power sources and loads on either end of the extension. However, for testing, diagnostics, and advanced applications, low-level control and monitoring is provided, including:

### Control:

- Set Power Mode (PSE / PD / Auto / Off)
- Set Sourcing Class Signature for pairs 1-2 and 3-4

### Monitoring:


- Power State (PD / PSE / Off)
- Requested Class (Class requested from PD to PSE)

For pairs 1-2 or 3-4:

- Sourcing Class (PoE class PD is trying to source)
- Discovered Class (negotiated class)
- Detection Status (valid connection, short, open, Hi Z, Lo Z)
- Voltage ( $\mu$ V)
- Current ( $\mu$ A)
- Resistance ( $m\Omega$ )
- Capacitance ( $\mu$ F)
- Power (mW)
- Accumulated Power (mWh)


### 1.6.3 Indicators and Connections

#### Front Panel

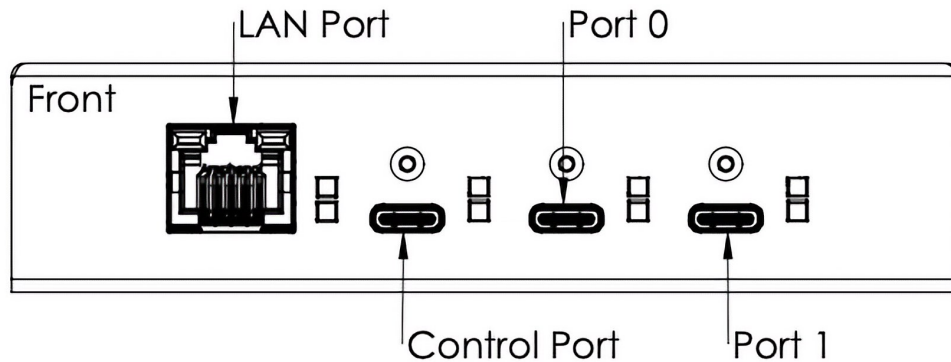

The front of the USBExt3c contains three USB-C receptacles (Control, Port 0, and Port 1) and one Ethernet port. The Control and Ethernet ports are dedicated for control communication between a computer and the USBExt3c. Port 0 and Port 1 connectors are full-featured hub ports.

#### Rear Panel

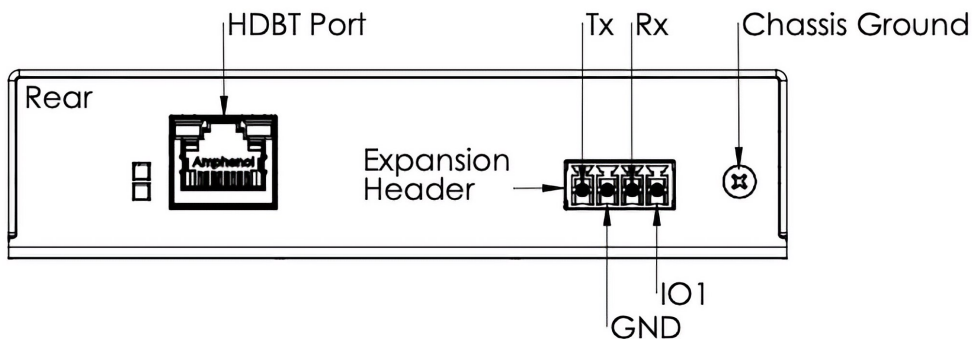

The back of the USBExt3c contains an HDBaseT-USB3 port and a 4-pin expansion connector for RS-232, frame sync, and GPIO. Chassis ground is accessed through a grounding screw.

#### Expansion Connector

The USBExt3c expansion connector is a 4-pin, 1-row, shrouded male header block with 3.81mm pitch. This interface provides additional mechanisms for expandability and testing scenarios.

Table 23: Expansion connector pinout

Connection Name	Pin Number	Description
TX	1	RS-232 Serial Transmit (data from USBExt3c)
GND	2	Ground
RX	3	RS-232 Serial Receive (data to USBExt3c)
IO1	4	General Purpose Input / Selector

## LED Indicators

Both the front and back panels of the USBExt3c have status LEDs to communicate device status and behavior. The names and meanings of these LEDs are explained in the image and table below.

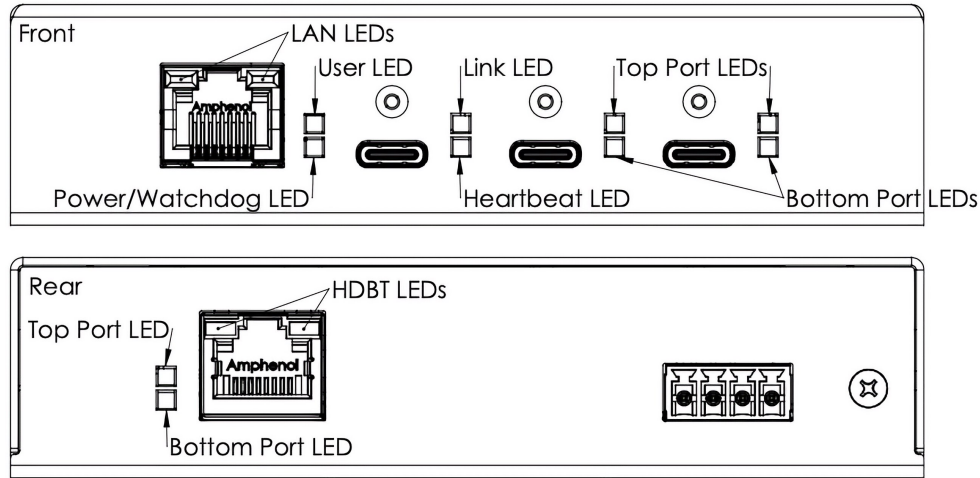


Table 24: LED Indicators and Function

Type	Icon	LED Name	Color	Description
System	Person	User LED	Blue	User-controllable LED
	Power Icon	Power / Watchdog	Red / Magenta	Alternating Red and Magenta when powered
Control	Chain Links	BrainStem Link	Yellow	Link present
	Heart	BrainStem Heartbeat	Green	Blink when Heartbeat received
HDBaseT	None	HDBaseT-USB3 LEDs	Green Amber	Solid Green: USB 3 link exists Solid Amber: HDBaseT-USB3 link exists Both flash during VS6320 firmware update
Port Status: USB-C and HD-BaseT-USB3	None	USB Enumeration Speed (Top LED)	Yellow	USB 2.0 Hi-Speed up to 480 Mbps
			Green	SuperSpeed 5 Gbps
		UFP/DFP (Bottom LED)	Blue	SuperSpeed+ 10 Gbps
			Magenta	Upstream (UFP) port
Ethernet	None	Ethernet Activity	Red	Downstream (DFP) port
			Green Amber	Green LED is solid when a link exists Amber LED blinks during activity

## 1.6.4 USBExt3c Software Features

To enable a newly-licensed software feature, it is necessary to *update the firmware* of the USBExt3c even if you are at on the current version.

### PD Builder

The PD Builder feature allows the user to modify all *Power Data Objects (PDO)* presented by the USBExt3c. This includes both sourcing and sinking PDOs of the USBExt3c.

#### Use Cases

- Designing PDOs for you own device
- Exposing DUTs to PDOs
- Restricting DUTs from PDOs

#### Editable Items

PDO Types	PDO Flags	PDO Limits
Fixed	Unchuncked message support	Voltage
Variable	Dual role data	Current
Battery	USB communications possible	Power
APDO	External power	
	USB suspend	
	Dual role power	
	High capability	
	Fast role-swap current	

### HubTool

HubTool allows the user to visually build a PDO without needing to know anything about the Power Delivery specification. Once created you can immediately apply it to the USBExt3c.

Port: 1 ⌵ Power Type: Local Source Rules ⌵

En	Rule	PDO Type	Min Voltage (mV)	Max Voltage (mV)	Power (mW)	Current (mA)	Raw	Set Rule	Set Default
<input checked="" type="checkbox"/>	1	Fixed	5000	5000		3000	0x3F01912C	Set	Reset
<input checked="" type="checkbox"/>	2	Fixed	9000	9000		3000	0x0002D12C	Set	Reset
<input checked="" type="checkbox"/>	3	Variable	3300	21000		5000	0x9A4109F4	Set	Reset
<input checked="" type="checkbox"/>	4	Battery	<input type="text" value="3400"/>	21000	100000		0x5A410990	Set	Reset
<input checked="" type="checkbox"/>	5	ADPO	3000	21000		5000	0xC1A41E64	Set	Reset
<input type="checkbox"/>	6	Fixed	0	0		0	0x00000000	Set	Reset
<input type="checkbox"/>	7	Fixed	0	0		0	0x00000000	Set	Reset

## Example

### C++

```
static const int TEST_PORT = 1;
static const uint32_t MY_CUSTOM_SOURCE_PDO = 0x0001912C;
static const uint32_t MY_CUSTOM_SINK_PDO = 0x0002D12C;

aUSBExt3c stem;
stem.discoverAndConnect(USB);

//Change local SOURCE PDO 1 to MY_CUSTOM_SOURCE_PDO
stem.pd[TEST_PORT].setPowerDataObject(powerdeliveryPowerRoleSource, 1, MY_CUSTOM_
↳SOURCE_PDO)

//Change local SINK PDO 1 to MY_CUSTOM_SINK_PDO
stem.pd[TEST_PORT].setPowerDataObject(powerdeliveryPowerRoleSink, 1, MY_CUSTOM_SINK_
↳PDO)

//Do Stuff

stem.disconnect()
```

### Python

```
TEST_PORT = 1;
MY_CUSTOM_SOURCE_PDO = 0x0001912C;
MY_CUSTOM_SINK_PDO = 0x0002D12C;

stem = brainstem.stem.USBExt3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

#Change local SOURCE PDO 1 to MY_CUSTOM_SOURCE_PDO
stem.pd[TEST_PORT].setPowerDataObject(powerdeliveryPowerRoleSource, 1, MY_CUSTOM_
↳SOURCE_PDO)

#Change local SINK PDO 1 to MY_CUSTOM_SINK_PDO
stem.pd[TEST_PORT].setPowerDataObject(powerdeliveryPowerRoleSink, 1, MY_CUSTOM_SINK_
↳PDO)

#Do Stuff

stem.disconnect()
```

## Relevant API's

```
stem.hub.pd[x].setPowerDataObject() [cpp] [python] [NET] [LabVIEW]
stem.hub.pd[x].getPowerDataObject() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.pd[x].setPowerDataObjectEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.pd[x].getPowerDataObjectEnabled() [cpp] [python] [NET] [LabVIEW]
```

## PD Logging

The PD Logging feature allows you to monitor Power Delivery communication on ports 0,1, and Control of the USBExt3c.

### Use Cases

- Capture Power Delivery (PD) events across all USB-C ports
- Decode PD messages
- Export PD message logs to CSV
- Filter USB-PD traffic by message type.
- Clearly show PD message direction.
- Send arbitrary Vendor Defined Messages (VDMs)

## HubTool

With HubTool you can easily visualize the Power Delivery log.

The screenshot displays the HubTool application window. At the top, 'System Information' shows details for device 0x4F7A0C15, including SN, Model (24), Firmware (2.9.6), Module (6), Voltage (20.0 VDC), Current (0.5 A), Temperature (30 C), Hardware Offset (0), Router (6), and SW Offset (0). Below this is a row of tabs for different system components: Summary, Port 0, Port 2, Port 3, Port 4, Port 5, Control, Power C, IO Expander, Power, and PD Logging. The 'PD Logging' tab is selected, showing a 'Start' button, a 'Stop' button, and an 'Export' button. Below these are checkboxes for selecting which components to log: Port 0, Port 1, Port 2, Port 3, Port 4, Port 5, Control, and Power C. The main area contains a table of PD log entries with columns: Timestamp (S:uS), Port, Direction, Spec, SOP, Power Role, Data Role, ID, Packet Type, Msg Type, and Raw. The table lists 25 entries, showing various PD messages like Source Capabilities, Request, Accept, PS Ready, Vendor Defined, and DR Swap. At the bottom, there is a section for 'Software Feature' (Rail Enable, QC Mode, PDO Editing, VBUS Validation, PD Logging) and a 'Device Type' / 'Serial Number' section showing USBHub3c 4F7A0C15 and USBHub3p AF62130D.

	Timestamp (S:uS)	Port	Direction	Spec	SOP	Power Role	Data Role	ID	Packet Type	Msg Type	Raw
1	1429:635630	1	RX	V2.0	SOP	Source	DFP	0	Data	Source Capabilities	0x61 0x11 0x96 0x90 0x01 0x36
2	1429:645760	1	TX	V2.0	SOP	Sink	UFP	0	Data	Request	0x42 0x10 0x64 0x90 0x01 0x10
3	1429:654670	1	RX	V2.0	SOP	Source	DFP	1	Control	Accept	0x63 0x03
4	1429:680910	1	RX	V2.0	SOP	Source	DFP	2	Control	PS Ready	0x66 0x05
5	1429:690560	1	RX	V2.0	SOP	Source	DFP	3	Data	Vendor Defined	0x6F 0x17 0x01 0x80 0x00 0xFF
6	1429:701040	1	TX	V2.0	SOP	Sink	UFP	1	Data	Vendor Defined	0x4F 0x72 0x41 0x80 0x00 0xFF 0xFF 0x24 0xA...
7	1429:707240	1	RX	V2.0	SOP	Source	DFP	4	Data	Vendor Defined	0x6F 0x19 0x02 0x80 0x00 0xFF
8	1429:712110	1	TX	V2.0	SOP	Sink	UFP	2	Data	Vendor Defined	0x4F 0x24 0x42 0x80 0x00 0xFF 0x00 0x00 0xF...
9	1429:717770	1	RX	V2.0	SOP	Source	DFP	5	Data	Vendor Defined	0x6F 0x1B 0x02 0x80 0x00 0xFF
10	1429:724220	1	TX	V2.0	SOP	Sink	UFP	3	Data	Vendor Defined	0x4F 0x26 0x42 0x80 0x00 0xFF 0x00 0x00 0xF...
11	1429:948940	1	TX	V2.0	SOP	Sink	UFP	4	Control	VConn Swap	0x4B 0x08
12	1429:957240	1	RX	V2.0	SOP	Source	DFP	6	Control	Accept	0x63 0x0D
13	1430:18980	1	TX	V2.0	SOP	Sink	UFP	5	Control	PS Ready	0x46 0x0A
14	1430:72450	1	TX	V2.0	S...	Sink	UFP	0	Data	Vendor Defined	0x4F 0x10 0x01 0x80 0x00 0xFF
15	1430:158980	1	TX	V2.0	S...	Sink	UFP	1	Data	Vendor Defined	0x4F 0x12 0x01 0x80 0x00 0xFF
16	1430:168330	1	RX	V2.0	S...	Source	UFP	1	Data	Vendor Defined	0x4F 0x53 0x41 0x80 0x00 0xFF 0x11 0x07 0x00...
17	1430:262130	1	TX	V2.0	SOP	Sink	UFP	6	Control	DR Swap	0x49 0x0C
18	1430:269210	1	RX	V2.0	SOP	Source	DFP	7	Control	Accept	0x63 0x0F
19	1430:515440	1	TX	V2.0	SOP	Sink	DFP	7	Control	PR Swap	0x6A 0x0E
20	1430:523230	1	RX	V2.0	SOP	Source	UFP	0	Control	Accept	0x43 0x01
21	1430:625040	1	RX	V2.0	SOP	Sink	UFP	1	Control	PS Ready	0x46 0x02
22	1430:741540	1	TX	V2.0	SOP	Source	DFP	0	Control	PS Ready	0x66 0x01
23	1430:903350	1	TX	V2.0	SOP	Source	DFP	0	Data	Source Capabilities	0x61 0x51 0x2C 0x91 0x01 0x3E 0x2C 0xD1 0x02...
24	1430:915290	1	RX	V2.0	SOP	Sink	UFP	0	Data	Request	0x42 0x10 0x2C 0xB1 0x04 0x13
25	1430:919090	1	TX	V2.0	SOP	Source	DFP	1	Control	Accept	0x63 0x03

Software Feature: Rail Enable: Enabled  
Software Feature: QC Mode: Enabled  
Software Feature: PDO Editing: Enabled  
Software Feature: VBUS Validation: Enabled  
Software Feature: PD Logging: Enabled  
USBHub3c: 0x4F7A0C15, Error: 7 CMD: stem.hub.port[x].setVoltageSetpoint

Device Type: | Serial Number:  
USBHub3c 4F7A0C15  
USBHub3p AF62130D

## Relevant API's

```
stem.pd[x].setUEIBytes() [cpp] [python]
```

## VBus Validation

The VBus Validation software feature gives the user full control of current limit and voltage setpoint for ports 0,1, and Control. This feature can be used in two different applications; Within the Power Delivery specification or as a fully programmable power supply.

### Use Cases

- Over-voltage testing
- Under-voltage testing
- 3-channel bench top power supply

---

**Note:** This feature has the ability to damage your device. Acroname is not responsible for any damage incurred by using this feature.

---


This software feature can be exploited through the *USBExt3c Port Entity*

## VBus Validation - Power Delivery Mode

Using the VBus Validation feature within the power delivery mode allows the user to test if their device responds properly when a power source is behaving incorrectly or operating at the edge of specification.

It is important to remember that in this mode the USBExt3c 's power delivery engine also has access to these controls and therefore it is important to allow the USBExt3c and the device to finish negotiations before adjusting these values. Additionally, any PD events or errors can trigger re-negotiations which will replace any values the user has set.

This mode should only be used when the Power Delivery connection state is sourcing.

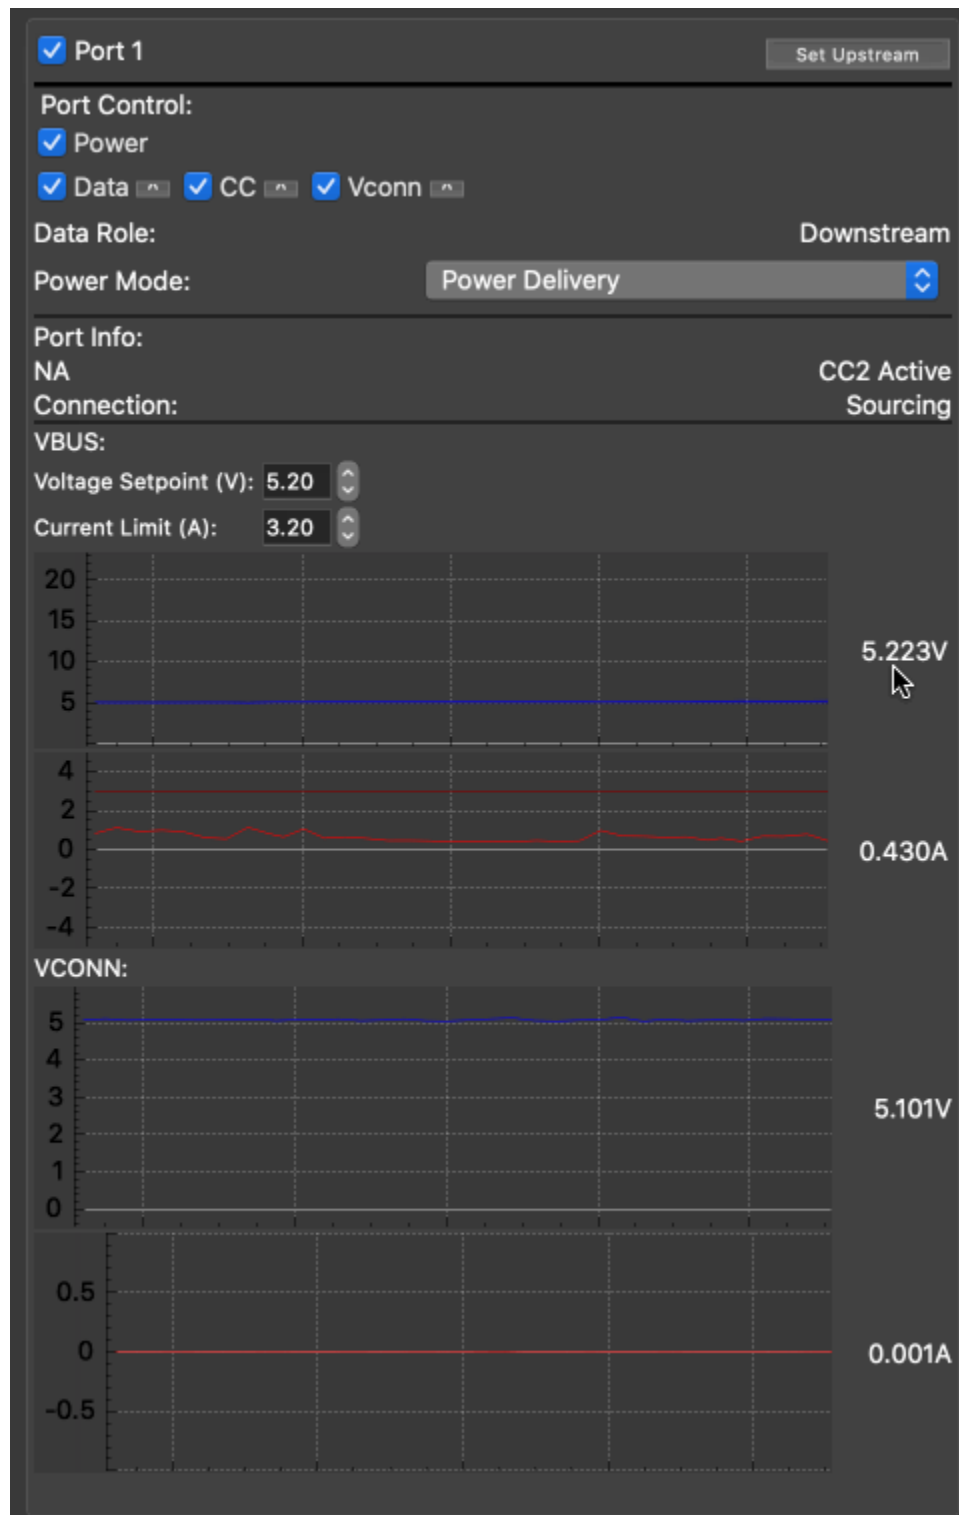

### Example

C++

```
static const int TEST_PORT = 1;
```

(continues on next page)



(continued from previous page)

```

aUSBExt3c stem;
stem.discoverAndConnect(USB);

//Configure the Power mode: Power Delivery (default)
stem.hub.port[TEST_PORT].setPowerMode(portPowerMode_pd_Value);

//Check if we are sourcing power
uint8_t connectionState = 0;
stem.pd[TEST_PORT].getConnectionState(&connectionState);

//Ensure we have an RDO from the remote.
//This ensures we have finished negotiating.
uint32_t rdo = 0;
stem.pd[TEST_PORT].getRequestDataObject(powerdeliveryPartnerRemote, &rdo);

if((connectionState == powerdeliveryPowerRoleSource) &&
    (rdo > 0))
{
    //Do Stuff
    //Set desired port voltage and limit.
    stem.hub.port[TEST_PORT].setVoltageSetpoint(5500000); //5.5VDC
    stem.hub.port[TEST_PORT].setCurrentLimit(500000); //500mA
    //Do Stuff
}

stem.disconnect()

```

## Python

```

TEST_PORT = 1;

stem = brainstem.stem.USBExt3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

#Configure the Power mode: Power Delivery (default)
stem.hub.port[TEST_PORT].setPowerMode(_BS_C.portPowerMode_pd_Value);

#Check if we are sourcing power
connection_state_result = stem.pd[TEST_PORT].getConnectionState();

#Ensure we have an RDO from the remote.
#This ensures we have finished negotiating.
rdo_result = stem.pd[TEST_PORT].getRequestDataObject(_BS_C.
    powerdeliveryPartnerRemote);

if ((connection_state_result.value == _BS_C.powerdeliveryPowerRoleSource) and
    (rdo_result.value > 0)):


    #Do Stuff
    #Set desired port voltage and limit.
    stem.hub.port[TEST_PORT].setVoltageSetpoint(5500000); #5.5VDC
    stem.hub.port[TEST_PORT].setCurrentLimit(500000); #500mA
    #Do Stuff

stem.disconnect()

```

## VBus Validation - Programmable Power Supply Mode

In this mode the USBExt3c is transformed into a 6 channel programmable power supply capable of supplying 100 Watts per channel.

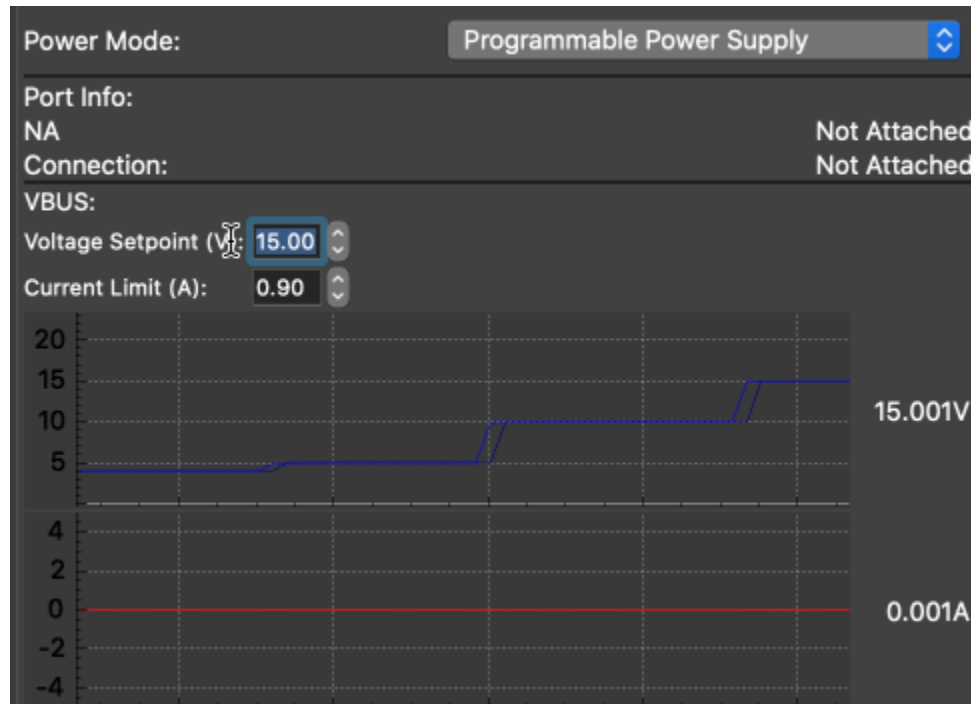

### Example

C++

```
static const int TEST_PORT = 1;

aUSBHub3c stem;
stem.discoverAndConnect(USB);

//Disable port while we configure
stem.hub.port[TEST_PORT].setEnabled(false);

//Configure the Power mode: Programmable Power Supply
stem.hub.port[TEST_PORT].setPowerMode(portPowerMode_ps_Value);

//Set desired port voltage and limit.
stem.hub.port[TEST_PORT].setVoltageSetpoint(5500000); //5.5VDC
stem.hub.port[TEST_PORT].setCurrentLimit(500000); //500mA

//enable the port when ready.
stem.hub.port[TEST_PORT].setEnabled(true);

//Do Stuff

//Return port to safe state.
stem.hub.port[TEST_PORT].setEnabled(false)

stem.disconnect()
```

## Python

```

TEST_PORT = 1;

stem = brainstem.stem.USBHub3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

#Disable port while we configure
stem.hub.port[TEST_PORT].setEnabled(false)

//Configure the Power mode: Programmable Power Supply
stem.hub.port[TEST_PORT].setPowerMode(_BS_C.portPowerMode_ps_Value);

#Set desired port voltage and limit.
stem.hub.port[TEST_PORT].setVoltageSetpoint(5500000)      #5.5VDC
stem.hub.port[TEST_PORT].setCurrentLimit(500000)          #500mA

#Enable the port when ready.
stem.hub.port[TEST_PORT].setEnabled(true)

#Do Stuff

#Return port to safe state.
stem.hub.port[TEST_PORT].setEnabled(false)

stem.disconnect()

```

## Relevant API's

```

stem.hub.port[x].setVoltageSetpoint() [cpp] [python] [NET] [LabVIEW] stem.hub.
port[x].getVoltageSetpoint() [cpp] [python] [NET] [LabVIEW]

stem.hub.port[x].setCurrentLimit() [cpp] [python] [NET] [LabVIEW] stem.hub.
port[x].getCurrentLimit() [cpp] [python] [NET] [LabVIEW]

stem.hub.port[x].setPowerMode() [cpp] [python] [NET] [LabVIEW] stem.hub.port[x].
getPowerMode() [cpp] [python] [NET] [LabVIEW]

stem.hub.pd[x].setRequestDataObject() [cpp] [python] [NET] [LabVIEW] stem.hub.
pd[x].getRequestDataObject() [cpp] [python] [NET] [LabVIEW]

stem.hub.pd[x].setConnectionState() [cpp] [python] [NET] [LabVIEW] stem.hub.
pd[x].getConnectionState() [cpp] [python] [NET] [LabVIEW]

```

## RS232 Serial Communication

The RS232 Serial Communication feature allows one to send commands to control and configure USBExt3c.

### Use Cases

- Affecting USBExt3c control.
- Audio/Video applications.

## Configuration

The default configuration of the RS232 Serial Communication feature is:

- 8 Data bits
- No Parity
- No Flow Control
- 1 Stop bit
- 9600 Baudrate

This feature does have some configurability through the *USBExt3c UART Entity*

## Extron Compatible Serial Commands

The RS232 Serial Communication feature is capable of changing the USBExt3c upstream port, requesting the current status of the upstream/downstream connections, enable/disable of ports, and the USBExt3c part number/firmware version queries. This can be accomplished with a protocol that is compatible with Extron's \$Simple Instruction Set\$ over RS232.

## Commands

The following is a list of all commands the USBExt3c supports with their arguments, descriptions, and expected responses.

## Error Codes

The following is a list of all error codes the USBExt3c supports with descriptions.

Code	Description
E01	invalid port number, check the port number and make sure it's valid.
E10	invalid command, verify that you formatted the command correctly.
E13	invalid value, verify that the value is within the acceptable range for this command.
E14	invalid configuration, verify the system is in a state it can accept this command.

## General Notes

- All commands are ASCII strings.
- \r is the ASCII character for carriage return.
- \n is the ASCII character for new line.

## Examples

Extron Compatible Serial Commands:

Upstream Change

Change Upstream to Port 1

Tx: 1!

Rx: Chn 1\r\n

Port Status

Get Port status with Upstream set to port 1, an upstream device on port 1 and Downstream device on port 2

Tx: I

Rx: Chn 1 InACT010000 OutACT001000\r\n

Port Disable

Disable Port 3

Tx: 3\*0P

Rx: Port 3\*0\r\n

API Configurations:

C++

```
static const int TEST_SERIAL = 0;

aUSBExt3c stem;
stem.discoverAndConnect(USB);

// Enable the port
stem.uart[TEST_SERIAL].setEnabled(true);

// Change baudrate to 115200 from default 9600
stem.uart[TEST_SERIAL].setBaudRate(115200);

// Change Protocol to Extron Compatible
// 0 - Disabled/Undefined
// 1 - Extron Compatible
// 2 - Brainstem Transport
// 6 - Loopback
stem.uart[TEST_SERIAL].setProtocol(1)

// Perform a system save so the changes persist
```

(continues on next page)

(continued from previous page)

```
// through power cycles
stem.system.save();

stem.disconnect();
```

## Python

```
TEST_SERIAL = 0

stem = brainstem.stem.USBxt3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

# Enable the port
stem.uart[TEST_SERIAL].setEnabled(1)

# Change baudrate to 115200 from default 9600
stem.uart[TEST_SERIAL].setBaudRate(115200)

# Change Protocol to Extron Compatible
# 0 - Disabled/Undefined
# 1 - Extron Compatible
# 2 - Brainstem Transport
# 6 - Loopback
stem.uart[TEST_SERIAL].setProtocol(1)

# Perform a system save so the changes persist
# through power cycles
stem.system.save()

stem.disconnect()
```

## Loopback Protocol

```
# Configure UART[0] for loopback testing
# Data sent to the UART will be echoed back
TEST_SERIAL = 0

stem = brainstem.stem.USBxt3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

stem.uart[TEST_SERIAL].setEnabled(1)
stem.uart[TEST_SERIAL].setBaudRate(115200)
stem.uart[TEST_SERIAL].setProtocol(6) # Loopback protocol

# Now any data sent to UART[0] will be echoed back
stem.system.save()
stem.disconnect()
```

## VCOM to Hardware UART Link

```
# Link VCOM channel (UART[4]) to hardware RS232 (UART[0])
# This allows USB serial communication to be forwarded to RS232
stem = brainstem.stem.USBxt3c()
stem.discoverAndConnect(brainstem.link.Spec.USB)

# Enable both channels
```

(continues on next page)

(continued from previous page)

```

stem.uart[0].setEnabled(1)    # Hardware RS232
stem.uart[4].setEnabled(1)    # VCOM_0 channel

# Configure matching baud rates
stem.uart[0].setBaudRate(115200)
stem.uart[4].setBaudRate(115200)

# Link VCOM to hardware UART
stem.uart[0].setLinkChannel(4)
stem.uart[4].setLinkChannel(0)

# Data received on VCOM will now be forwarded to RS232,
# and data received on RS232 will be forwarded to VCOM
stem.system.save()
stem.disconnect()

```

### Loopback Protocol

```

// Configure UART[0] for loopback testing
// Data sent to the UART will be echoed back
static const int TEST_SERIAL = 0;

aUSBExt3c stem;
stem.discoverAndConnect(USB);

stem.uart[TEST_SERIAL].setEnabled(true);
stem.uart[TEST_SERIAL].setBaudRate(115200);
stem.uart[TEST_SERIAL].setProtocol(6); // Loopback protocol

// Now any data sent to UART[0] will be echoed back
stem.system.save();
stem.disconnect();

```

### VCOM to Hardware UART Link

```

// Link VCOM channel (UART[4]) to hardware RS232 (UART[0])
// This allows USB serial communication to be forwarded to RS232
aUSBExt3c stem;
stem.discoverAndConnect(USB);

// Enable both channels
stem.uart[0].setEnabled(true); // Hardware RS232
stem.uart[4].setEnabled(true); // VCOM_0 channel

// Configure matching baud rates
stem.uart[0].setBaudRate(115200);
stem.uart[4].setBaudRate(115200);

// Link VCOM to hardware UART
stem.uart[0].setLinkChannel(4);
stem.uart[4].setLinkChannel(0);

// Data received on VCOM will now be forwarded to RS232,
// and data received on RS232 will be forwarded to VCOM
stem.system.save();
stem.disconnect()

```

## Relevant API's

```
stem.uart[x].setEnabled() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getEnabled() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setBaudRate() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getBaudRate() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setProtocol() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getProtocol() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setLinkChannel() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getLinkChannel() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setStopBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getStopBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setParity() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getParity() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setDataBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getDataBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getCapableProtocols() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getAvailableProtocols() [cpp] [python] [NET] [LabVIEW]
```

## 1.6.5 USBExt3c Module Entities

### Ethernet Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Ethernet Entity provides control over network configuration and monitoring for devices with Ethernet connectivity. This includes IP address management, network configuration modes, and interface settings.

### Ethernet Enable/Disable (Get/Set)

```
ethernet . getEnabled <= (unsigned char) enabled
ethernet . setEnabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the Ethernet interface. When enabled, the Ethernet interface is active and can be used for network communication.

### Network Configuration (Get/Set)

```
ethernet . getNetworkConfiguration <= (unsigned char) configuration
ethernet . setNetworkConfiguration => (unsigned char) configuration
```

Returns or sets the network configuration mode for the Ethernet interface. This controls whether the interface uses DHCP or static IP configuration.



Table 25: Network Configuration Options

Value	Name	Description
0	None	No network configuration
1	Static	Static IP configuration
2	DHCP	DHCP automatic configuration

### Static IPv4 Address (Get/Set)

```
ethernet . getStaticIPv4Address <= (unsigned char[]) address
ethernet . setStaticIPv4Address => (unsigned char[]) address
```

Returns or sets the static IPv4 address for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the IP address (e.g., [192, 168, 1, 100] for “192.168.1.100”).

### Static IPv4 Netmask (Get/Set)

```
ethernet . getStaticIPv4Netmask <= (unsigned char[]) netmask
ethernet . setStaticIPv4Netmask => (unsigned char[]) netmask
```

Returns or sets the static IPv4 netmask for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the netmask (e.g., [255, 255, 255, 0] for “255.255.255.0”).

### Static IPv4 Gateway (Get/Set)

```
ethernet . getStaticIPv4Gateway <= (unsigned char[]) gateway
ethernet . setStaticIPv4Gateway => (unsigned char[]) gateway
```

Returns or sets the static IPv4 gateway address for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the gateway address (e.g., [192, 168, 1, 1] for “192.168.1.1”).

### IPv4 Address (Get)

```
ethernet . getIPv4Address <= (unsigned char[]) address
```

Returns the current IPv4 address of the Ethernet interface as a 4-byte array. This reflects the actual address being used, whether obtained via DHCP or set statically. Each byte represents one octet of the IP address.

### IPv4 Netmask (Get)

```
ethernet . getIPv4Netmask <= (unsigned char[]) netmask
```

Returns the current IPv4 netmask of the Ethernet interface as a 4-byte array. This reflects the actual netmask being used, whether obtained via DHCP or set statically. Each byte represents one octet of the netmask.

### IPv4 Gateway (Get)

```
ethernet . getIPv4Gateway <= (unsigned char[]) gateway
```

Returns the current IPv4 gateway address of the Ethernet interface as a 4-byte array. This reflects the actual gateway being used, whether obtained via DHCP or set statically. Each byte represents one octet of the gateway address.

### Static IPv4 DNS Address (Get/Set)

```
ethernet . getStaticIPv4DNSAddress <= (unsigned char[]) dns  
ethernet . setStaticIPv4DNSAddress => (unsigned char[]) dns
```

Returns or sets the static IPv4 DNS server address for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the DNS address.

### IPv4 DNS Address (Get)

```
ethernet . getIPv4DNSAddress <= (unsigned char[]) dns
```

Returns the current IPv4 DNS server address of the Ethernet interface as a 4-byte array. This reflects the actual DNS server being used, whether obtained via DHCP or set statically. Each byte represents one octet of the DNS address.

### Hostname (Get/Set)

```
ethernet . getHostname <= (unsigned char[]) hostname  
ethernet . setHostname => (unsigned char[]) hostname
```

Returns or sets the hostname for the Ethernet interface. The hostname is used for network identification and can be up to 63 characters long.

## MAC Address (Get)

```
ethernet . getMACAddress <= (unsigned char[]) mac
```

Returns the MAC address of the Ethernet interface. This is a unique hardware identifier for the network interface.

## Interface Port (Get/Set)

```
ethernet . getInterfacePort (unsigned char) service <= (unsigned short) port
ethernet . setInterfacePort => (unsigned char) service, (unsigned short) port
```

Returns or sets the interface port for specific services on the Ethernet interface. The service parameter specifies which service to configure, and the port parameter sets the port number for that service.

Table 26: Interface Port Services

Name	Value	Description
RestServer_HTTP	0	HTTP REST API server
RestServer_HTTPS	1	HTTPS REST API server
BrainStem_TCP	2	BrainStem TCP communication
Brain-Stem_DiscoveryRequest	3	BrainStem discovery request port
Brain-Stem_DiscoveryReply	4	BrainStem discovery reply port

## Examples

### C++

```
// Enable Ethernet interface
ethernet.setEnabled(1);

// Set static IP configuration
ethernet.setNetworkConfiguration(1); // Static mode
unsigned char ip[4] = {192, 168, 1, 100};
unsigned char netmask[4] = {255, 255, 255, 0};
unsigned char gateway[4] = {192, 168, 1, 1};
ethernet.setStaticIPv4Address(ip, 4);
ethernet.setStaticIPv4Netmask(netmask, 4);
ethernet.setStaticIPv4Gateway(gateway, 4);

// Get current IP address
unsigned char current_ip[4];
ethernet.getIPv4Address(current_ip, 4);

// Set hostname
ethernet.setHostname("brainstem-device");
```

### Python

```
# Enable Ethernet interface
stem.ethernet.setEnabled(1)

# Set static IP configuration
stem.ethernet.setNetworkConfiguration(1) # Static mode
ip = [192, 168, 1, 100]
netmask = [255, 255, 255, 0]
gateway = [192, 168, 1, 1]
stem.ethernet.setStaticIPv4Address(ip)
stem.ethernet.setStaticIPv4Netmask(netmask)
stem.ethernet.setStaticIPv4Gateway(gateway)

# Get current IP address
current_ip = stem.ethernet.getIPv4Address()
print(current_ip.value)

# Set hostname
stem.ethernet.setHostname("brainstem-device")
```

## HDBaseT Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The **HDBaseT** entity provides link telemetry, remote-end USB topology discovery, and role control for the HDBaseT-USB3 link.

---

### Identification

`stem.system.getSerialNumber()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Fills a caller-provided buffer with up to 6 bytes and reports the actual length unloaded.

`stem.hdbaset.getFirmwareVersion()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Returns a packed 32-bit value (Major: Bits 24-31; Minor: Bits 16-23; Patch: Bits 8-15; Build: Bits 0-7)

### Link Status and Health

`stem.hdbaset.getState()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Returns a packed integer describing current link state.

`stem.hdbaset.getCableLength()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Perceived cable length in  $\mu\text{m}$ .

`stem.hdbaset.getMSEA()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

`stem.hdbaset.getMSEB()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Mean Squared Error for channel A or B in  $\mu\text{dB}$ .

`stem.hdbaset.getRetransmissionRate()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Number of successful messages between retransmission; 0 = no errors, otherwise higher is better.

`stem.hdbaset.getLinkUtilization()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Link utilization in milli-percent (1000 = saturation).

`stem.hdbaset.getEncodingState()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Encoding state (e.g. PAM 8).

## Remote USB Topology (Device Trees)

```
stem.hdbaset.getUSB2DeviceTree() [cpp] [python] [.NET] [LabVIEW]
stem.hdbaset.getUSB3DeviceTree() [cpp] [python] [.NET] [LabVIEW]
```

These calls return bytes describing the USB2/USB3 device trees at the HDBaseT endpoint.

## Link Role Control

```
stem.hdbaset.getLinkRole() [cpp] [python] [.NET] [LabVIEW]
stem.hdbaset.setLinkRole() [cpp] [python] [.NET] [LabVIEW]
```

Role values are product/firmware specific (e.g., *Auto Detect*, *Leader*, *Follower*).

When in *Auto Detect*, the active role can be read using `getState()`.

## Legacy Support

Previous Acroname USB products made use of the *USB Entity* for measurements, configuration and control; however, the USBExt3c aims to organize these capabilities in a cleaner fashion through the use of the all new *Port* and *USBSysstem* Entities.

In efforts to ease this transition we have added Legacy support to the USBExt3c by implementing limited USB Entity functionally. The following functions of the *USB Entity* will still behave as they did in previous Acroname USB products.

## Port

```
stem.usb.setPortEnable(channel) [cpp] [python] [.NET] [LabVIEW]
stem.usb.setPortDisable(channel) [cpp] [python] [.NET] [LabVIEW]
stem.usb.getPortState(channel) [cpp] [python] [.NET] [LabVIEW]
```

Port State Item	Bit	Value
VBus is enabled	6	0/1
USB2A is enabled	4	0/1
USB2B is enabled	5	0/1
SuperSpeedA is enabled	7	0/1
SuperSpeedB is enabled	8	0/1
CC1 is enabled	12	0/1
CC2 is enabled	13	0/1

## Power

```
stem.usb.setPowerEnable(channel) [cpp] [python] [NET] [LabVIEW]
stem.usb.setPowerDisable(channel) [cpp] [python] [NET] [LabVIEW]
```

## Voltage

```
stem.usb.getPortVoltage(channel,  $\mu$ V) [cpp] [python] [NET] [LabVIEW]
```

## Current

```
stem.usb.getPortCurrent(channel,  $\mu$ A) [cpp] [python] [NET] [LabVIEW]
stem.usb.getPortCurrentLimit(channel,  $\mu$ A) [cpp] [python] [NET] [LabVIEW]
stem.usb.setPortCurrentLimit(channel,  $\mu$ A) [cpp] [python] [NET] [LabVIEW]
```

## Data

```
stem.usb.setDataEnable(channel) [cpp] [python] [NET] [LabVIEW]
stem.usb.setDataDisable(channel) [cpp] [python] [NET] [LabVIEW]
stem.usb.setHiSpeedDataEnable(channel) [cpp] [python] [NET] [LabVIEW]
stem.usb.setHiSpeedDataDisable(channel) [cpp] [python] [NET] [LabVIEW]
stem.usb.setSuperSpeedDataEnable(channel) [cpp] [python] [NET] [LabVIEW]
stem.usb.setSuperSpeedDataDisable(channel) [cpp] [python] [NET] [LabVIEW]
stem.usb.setCC1Enable(channel, enable) [cpp] [python] [NET] [LabVIEW]
stem.usb.getCC1Enable(channel, enable) [cpp] [python] [NET] [LabVIEW]
stem.usb.setCC2Enable(channel, enable) [cpp] [python] [NET] [LabVIEW]
stem.usb.getCC2Enable(channel, enable) [cpp] [python] [NET] [LabVIEW]
```

## PoE Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The **PoE** entity provides Power over Ethernet control and telemetry on supported products. Use this entity to enable/disable PoE pairs, select power modes, inspect negotiated classes, and read per-pair electrical measurements and accumulated power.

- *pair* = 0 = wire pair 1/2
- *pair* = 1 = wire pair 3/4

## Pair Enable/Disable

```
stem.poe.getPairEnabled(pair) [cpp] [python] [.NET] [LabVIEW]
stem.poe.setPairEnabled(pair, enable) [cpp] [python] [.NET] [LabVIEW]
```

1 = Enabled, 0 = Disabled.

## Power Mode and Power State

```
stem.poe.getPowerMode() [cpp] [python] [.NET] [LabVIEW]
stem.poe.setPowerMode(value) [cpp] [python] [.NET] [LabVIEW]
stem.poe.getPowerState() [cpp] [python] [.NET] [LabVIEW]
```

Power Mode (commanded): PD, PSE, Auto, Off.  
Power State (actual): PD, PSE, Off.

## Classification and Detection

```
stem.poe.getPairSourcingClass(pair) [cpp] [python] [.NET] [LabVIEW]
stem.poe.setPairSourcingClass(pair, value) [cpp] [python] [.NET] [LabVIEW]
```

Sourcing class: The PoE class offered by the device when acting as a PSE.

```
stem.poe.getPairRequestedClass(pair) [cpp] [python] [.NET] [LabVIEW]
```

Requested class: The PoE class requested by the device when acting as a PD.

```
stem.poe.getPairDiscoveredClass(pair) [cpp] [python] [.NET] [LabVIEW]
```

Discovered class (PSE/PD): The negotiated PoE class result.

```
stem.poe.getPairDetectionStatus(pair) [cpp] [python] [.NET] [LabVIEW]
```

Current per-pair detection status.

Table 27: Detection status values

Unknown
Short circuit
Open circuit
Low resistance
High resistance
Valid
Switch Failure

## Electrical Measurements (per pair)

```
stem.poe.getPairVoltage(pair) [cpp] [python] [.NET] [LabVIEW]
```

Voltage:  $\mu\text{V}$

```
stem.poe.getPairCurrent(pair) [cpp] [python] [.NET] [LabVIEW]
```

Current:  $\mu\text{A}$

```
stem.poe.getPairResistance(pair) [cpp] [python] [.NET] [LabVIEW]
```

Resistance:  $\text{m}\Omega$

```
stem.poe.getPairCapacitance(pair) [cpp] [python] [.NET] [LabVIEW]
```

Capacitance: nF

```
stem.poe.getPairPower(pair) [cpp] [python] [.NET] [LabVIEW]
```

Power: mW (approx. Voltage \* Current for the pair)

### Total Power (instantaneous)

```
stem.poe.getTotalPower() [cpp] [python] [.NET] [LabVIEW]
```

Returns the sum of both pairs' instantaneous power (mW).

### Accumulated Power (energy counters)

```
stem.poe.getPairAccumulatedPower(pair) [cpp] [python] [.NET] [LabVIEW]
```

```
stem.poe.setPairAccumulatedPower(pair, power) [cpp] [python] [.NET] [LabVIEW]
```

```
stem.poe.getTotalAccumulatedPower() [cpp] [python] [.NET] [LabVIEW]
```

```
stem.poe.setTotalAccumulatedPower(power) [cpp] [python] [.NET] [LabVIEW]
```

\* All values are in mWh

\* Setting total or pair accumulated power resets the corresponding accumulator.

## Port Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Port Entity provides control over the most basic items related to a USB Port. This includes actions ranging from a complete port enable and disable to the individual interface control. Voltage and current measurements are also included for devices which support the Port Entity.

---

## Port Control

USBExt3c has a Port Entity for every Type C port on the device; however, not all ports have the same capabilities. These ports can be referenced by their instance (port[x]) index.

Port Label	Index (port[x])
0	0
1	1
Control	2

One of the most powerful features of USBExt3c is its ability to turn Ports 0 and 1 entirely on and off.

```
stem.hub.port[x].setEnabled() [cpp] [python] [.NET] [LabVIEW]
```

```
stem.hub.port[x].getEnabled() [cpp] [python] [.NET] [LabVIEW]
```

USB  $V_{BUS}$  vsn be enabled or disabled per-port on ports 0, 1, and control.



```
stem.hub.port[x].setPowerEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getPowerEnabled() [cpp] [python] [NET] [LabVIEW]
```

Data lines (Hi-Speed data and SuperSpeed) can be enabled together per-port while not affecting  $V_{BUS}$  lines (ports 0 and 1).

```
stem.hub.port[x].setDataEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getDataEnabled() [cpp] [python] [NET] [LabVIEW]
```

USB 2.0 Hi-Speed data lines can be independently enabled / disabled per-port (ports 0 and 1).

```
stem.hub.port[x].setDataHSEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getDataHSEnabled() [cpp] [python] [NET] [LabVIEW]
```

Further granularity can be achieved by independently controlling Hi-Speed 1 and Hi-Speed 2 lines (Ports 0 and 1).

```
stem.hub.port[x].setDataHS1Enabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getDataHS1Enabled() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.port[x].setDataHS2Enabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getDataHS2Enabled() [cpp] [python] [NET] [LabVIEW]
```

USB SuperSpeed data lines can be independently enabled / disabled per-port (ports 0 and 1).

```
stem.hub.port[x].setDataSSEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getDataSSEnabled() [cpp] [python] [NET] [LabVIEW]
```

Just as with the Hi-Speed lines, USBExt3c also has granular control of the SuperSpeed 1 and SuperSpeed 2 lines.

```
stem.hub.port[x].setDataSS1Enabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getDataSS1Enabled() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.port[x].setDataSS2Enabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getDataSS2Enabled() [cpp] [python] [NET] [LabVIEW]
```

CC lines can be enabled and disabled on all USB ports.

```
stem.hub.port[x].setCCEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getCCEnabled() [cpp] [python] [NET] [LabVIEW]
```

CC1 and CC@ can be controlled independently.

```
stem.hub.port[x].setCC1Enabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getCC1Enabled() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.port[x].setCC2Enabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getCC2Enabled() [cpp] [python] [NET] [LabVIEW]
```

Finally we come to  $V_{\text{CONN}}$  control; however, this one overlaps with CC control because  $V_{\text{CONN}}$  is what the unused CC line becomes (if needed). i.e. if CC1 is used for orientation and/or PD communication then CC2 will become  $V_{\text{CONN}}$  ( $V_{\text{CONN}}$  2) if it is enabled. If you are unaware of which pin is being used for  $V_{\text{CONN}}$  you can simply call:

```
stem.hub.port[x].setVconnEnabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getVconnEnabled() [cpp] [python] [NET] [LabVIEW]
```

and USBExt3c will take care of the guess work for you. If you are aware of which line is being used for  $V_{\text{CONN}}$  you can use the granular control just as we have outlined above.

```
stem.hub.port[x].setVconn1Enabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getVconn1Enabled() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.port[x].setVconn2Enabled() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getVconn2Enabled() [cpp] [python] [NET] [LabVIEW]
```

## Voltage and Current Measurements

USBExt3c provides Voltage and Current measurements for both the  $V_{\text{BUS}}$  and  $V_{\text{CONN}}$  lines. These values can be acquired for all ports through the following APIs

```
stem.hub.port[x].getVbusVoltage() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getVbusCurrent() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.port[x].getVconnVoltage() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getVconnCurrent() [cpp] [python] [NET] [LabVIEW]
```

## Power Modes

The USB-C ports of USBExt3c are capable of providing power in multiple formats. The default is Power Delivery (PD), but that can be changed to: Standard Downstream Port (SDP), Charging Downstream Port (CDP) / Dedicated Charging Port (DCP), or even Qualcomm Quick Charge (QC) 3 and 4. These modes can be set through:

```
stem.hub.port[x].setPowerMode() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getPowerMode() [cpp] [python] [NET] [LabVIEW]
```

Power Mode	Value	Define
None	0	portPowerMode_none_Value
SDP	1	portPowerMode_sdp_Value
CDP/DCP	2	portPowerMode_cdp_dcp_Value
QC	3	portPowerMode_qc_Value
PD	4	portPowerMode_pd_Value
PS	5	portPowerMode_ps_Value
USB-C	6	portPowerMode_usbc_Value

---

**Note:** The Power Modes can only be changed when the port power is disabled.

---

## Port Mode

As outlined in the “Port Control” section USBExt3c can individually manipulate almost every pin on the Type-C connector; however, depending on your application that might require multiple function calls in order to configure the port how you want it. Port Mode on the other hand is a one stop shop that allows you to pick and choose which lines you want enabled or disabled through a single call. Additionally, it has a few other features tucked away inside of it.

```
stem.hub.port[x].setMode() [cpp] [python] [NET] [LabVIEW]
stem.hub.port[x].getMode() [cpp] [python] [NET] [LabVIEW]
```

Port Mode Item	Bit	Value	Define
Power Enable	0	0/1	portPortMode_powerEnabled_Bit
HS 1 Enable	1	0/1	portPortMode_HS1Enabled_Bit
HS 2 Enable	2	0/1	portPortMode_HS2Enabled_Bit
SS 1 Enable	3	0/1	portPortMode_SS1Enabled_Bit
SS 2 Enable	4	0/1	portPortMode_SS2Enabled_Bit
CC 1 Enable	5	0/1	portPortMode_CC1Enabled_Bit
CC 2 Enable	6	0/1	portPortMode_CC2Enabled_Bit
Vconn 1 Enable	7	0/1	portPortMode_Vconn1Enabled_Bit
Vconn 2 Enable	8	0/1	portPortMode_Vconn2Enabled_Bit
Power Mode: Offset		16	portPortMode_portPowerMode_Offset
Power Mode: Mask		0x7	portPortMode_portPowerMode_Mask
Power Mode: None	16-18	0	portPortMode_portPowerMode_none_Value
Power Mode: SDP	16-18	1	portPortMode_portPowerMode_sdp_Value
Power Mode: CDP/DCP	16-18	2	portPortMode_cdp_dcp_Value
Power Mode: QC	16-18	3	portPortMode_portPowerMode_qc_Value
Power Mode: PD	16-18	4	portPortMode_portPowerMode_pd_Value
Power Mode: PS	16-18	5	portPortMode_portPowerMode_ps_Value
Power Mode: USB-C	16-18	6	portPortMode_portPowerMode_usbc_Value

## Data Role

The data role describes the current configuration of the port in regards to its data direction. In most cases this evaluates to an Upstream Facing Port (UFP) or a Downstream Facing Port (DFP). Upstream in this case means the host side of the port and Downstream refers to the device side. The Data Role can be acquired through:

```
stem.hub.port[x].getDataRole() [cpp] [python] [NET] [LabVIEW]
```

Data Role	Value	Define
Disabled	0	portDataRole_Disabled_Value
Upstream	1	portDataRole_Upstream_Value
Downstream	2	portDataRole_Downstream_Value
Control	3	portDataRole_Control_Value

## Port Limits and Modes

At the Port level the user has the ability to define current limit and/or a power limit.

```
stem.hub.port[x].setCurrentLimit() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.port[x].getCurrentLimit() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.port[x].setPowerLimit() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.port[x].getPowerLimit() [cpp] [python] [NET] [LabVIEW]
```

If either of these values are exceeded then USBExt3c will then apply on of the following modes

```
stem.hub.port[x].setCurrentLimitMode() [cpp] [python] [NET] [LabVIEW]  
stem.hub.port[x].getCurrentLimitMode() [cpp] [python] [NET] [LabVIEW]
```

```
stem.hub.port[x].setPowerLimitMode() [cpp] [python] [NET] [LabVIEW]  
stem.hub.port[x].getPowerLimitMode() [cpp] [python] [NET] [LabVIEW]
```

### Available Power

One of the unique features of USBExt3c is its ability to manage input and output power. Because of smart charging technologies like PD we know exactly how much power we have access too. That input power must then be shared across all of the ports. The following function allows the user to request the amount of power that is currently allocated to the port in question.

```
stem.hub.port[x].getAvailablePower() [cpp] [python] [NET] [LabVIEW]
```

### Accumulated Power

USBExt3c is capable of monitoring the accumulated power (energy) it has sank or sourced on both the  $V_{BUS}$  and  $V_{CONN}$  lines of each port. This value is presented as mWh.

```
stem.hub.port[x].getVbusAccumulatedPower() [cpp] [python] [NET] [LabVIEW]  
stem.hub.port[x].getVconnAccumulatedPower() [cpp] [python] [NET] [LabVIEW]
```

The accumulated power is set to zero and the accumulation period is restarted with these commands.

```
stem.hub.port[x].resetVbusAccumulatedPower() [cpp] [python] [NET] [LabVIEW]  
stem.hub.port[x].resetVconnAccumulatedPower() [cpp] [python] [NET] [LabVIEW]
```

### Downstream Data Speed

The USBExt3c can detect if a device has been enumerated. Additionally, it can detect at what speed a device has enumerated at.

```
stem.hub.port[x].getDataSpeed() [cpp] [python] [NET] [CCA] [REST]
```

Data Speed	Bit	Value	Define
1.5 Mbit/s	0	0/1	portDataSpeed_ls_1p5M_Bit
12 Mbit/s	1	0/1	portDataSpeed_fs_12M_Bit
480 Mbit/s	2	0/1	portDataSpeed_hs_480M_Bit
5 Gbit/s	3	0/1	portDataSpeed_ss_5G_Bit
10 Gbit/s	4	0/1	portDataSpeed_ss_10G_Bit
USB 2.0	6	0/1	portDataSpeed_Connected_2p0_Bit
USB 3.0	7	0/1	portDataSpeed_Connected_3p0_Bit

## Power Delivery Entity

---

### Manipulating PDO's and RDO's

The Power Delivery specification defines a large number of Data Objects and the USBExt3c is capable of manipulating and modifying most of them in some fashion. The most common are PDO's and RDO's which were defined above. Direct manipulation is quite a complex process and is a feature of the Pro version only. It is highly recommended that users of these features first experiment with the Power Rule Editor within HubTool. Once you know the values you want to use manipulation can be done through:

```
stem.pd[x].setPowerDataObject() [cpp] [python] [NET] [LabVIEW]
stem.pd[x].getPowerDataObject() [cpp] [python] [NET] [LabVIEW]
```

```
stem.pd[x].setRequestDataObject() [cpp] [python] [NET] [LabVIEW]
stem.pd[x].getRequestDataObject() [cpp] [python] [NET] [LabVIEW]
```

### Power Roles Preferred

Preferred Power Role	Value	Define
None	0	pdPowerRolePreferred_None
Source	1	pdPowerRolePreferred_Source
Sink	2	pdPowerRolePreferred_Sink

### Connection State

Connection State	Value	Define
None	0	pdConnectionState_None
Source	1	pdConnectionState_Source
Sink	2	pdConnectionState_Sink
Powered Cable	3	pdConnectionState_PoweredCable
Powered Cable with Sink	4	pdConnectionState_PoweredCableWithSink

## Requests

Given the nature of Power Delivery there are only so many things that are within the direct control of the local USBExt3c. Many of the items on the remote side of the USBExt3c are merely request. In other words items in this category not guaranteed to happen.

```
stem.pd[x].request() [cpp] [python] [NET] [LabVIEW]
```

Request	Value	Define
Hard Reset	0	pdRequestHardReset
Soft Reset	1	pdRequestSoftReset
Data Reset	2	pdRequestDataReset
Power Role Swap	3	pdRequestPowerRoleSwap
Power Fast Role Swap	4	pdRequestPowerFastRoleSwap
Data Role Swap	5	pdRequestDataRoleSwap
Vconn Swap	6	pdRequestVconnSwap
Sink Go to Min	7	pdRequestSinkGoToMinimum
Remote Source PDOs	8	pdRequestRemoteSourcePowerDataObjects
Remote Sink PDOs	9	pdRequestRemoteSinkPowerDataObjects
Remote Source Extended Capabilities	10	pdRequestRemoteSourceExtendedCapabilities
Remote Sink Extended Capabilities	11	pdRequestRemoteSinkExtendedCapabilities
Status	12	pdRequestStatus
PPS Status	13	pdRequestPPSStatus
Battery Capabilities	14	pdRequestBatteryCapabilities
Battery Status	15	pdRequestBatteryStatus
Manufacturer Info Sop	16	pdRequestManufacturerInfoSop
Manufacturer Info Sopp	17	pdRequestManufacturerInfoSopp
Manufacturer Inof Soppp	18	pdRequestManufacturerInfoSoppp
Discover Identity Sop	19	pdRequestDiscoverIdentitySop
Discover Identity Sopp	20	pdRequestDiscoverIdentitySopp
Discover Identity Soppp	21	pdRequestDiscoverIdentitySoppp
Revision	22	pdRequestRevision
Source Info	23	pdRequestSourceInfo
Country Code	24	pdRequestCountryCode
Country Info	25	pdRequestCountryInfo

Errors return from this function call only indicate the success of sending the request and do not reflect the success of the actual request. To find the status of the request you can investigate the outcome of the connection or check the most recent status of the PD stack.

```
stem.pd[x].requestStatus() [cpp] [python] [NET] [LabVIEW]
```

## Cable Orientation

Although the Type C connector has no visible orientation the connector does have electrical orientation which directly correlates to the Communications Chanel (CC) strapping internal to the cable. The orientation be be obtained via:

```
stem.pd[x].getCableOrientation() [cpp] [python] [NET] [LabVIEW]
```

Orientation	Value	Define
Invalid	0	pdCableOrientation_Invalid
CC1/A Side	1	pdCableOrientation_CC1
CC2/B Side	2	pdCableOrientation_CC2

## Cable Type

Cable Type	Value	Define
Invalid	0	pdCableType_Invalid
Passive	1	pdCableType_Passive
Active	2	pdCableType_Active

## Override

The USB C connector by default follows rules around maximum cable current and budgetted power. In some test applications, including ones with a Universal Orientation Cable, the port should ignore those rules which is why we have exposed override bits to allow for disabling of specific behavior. Below are the get/set routines for overrides and the bit definitions.

```
stem.pd[x].getOverride() [cpp] [python] [NET] [LabVIEW]
stem.pd[x].setOverride() [cpp] [python] [NET] [LabVIEW]
```

Name	Bit	Definition
Cable Current	0	overrides the cable current limiting to 3A unless it's an emarked cable
Port Power	1	Overrides the port power budgetting and just allows full power always
Auto Discovery	2	Overrides the auto discovery feature. With override true the hub will only establish a basic power connection and wont ask for additional vendor information.



## System Entity

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

## Serial Number

Every USBExt3c is assigned a unique serial number at the factory. This facilitates an arbitrary number of USBExt3c devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber() \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the USBExt3c away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. Use the following command to save changes to system settings before reboot:

```
stem.system.save() \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

## System Power

The USBExt3c is designed to accept power from either a Type-C PD port or over PoE.

This value represents the maximum amount of power the USBExt3c can budget for all of its sinking devices. This value can be acquired through:

```
stem.system.getPowerLimit() \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

It is possible that the limit of your PD source may not match that of what is being advertised by the function above. The contributing factors can be determined by checking the state of the power limit.

```
stem.system.getPowerLimitState() \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

```
stem.system.getInputPowerSource() \[cpp\] \[python\] \[NET\] \[LabVIEW\]
```

## Power Budgeting and Behavior

As we alluded to in the System power section the USBExt3c has to be a bit clever about accounting for all input and output power. The method by which an input power source is selected and used is referred to as Input Power Behavior. It can be configured through

```
stem.system.setInputPowerBehavior() [cpp] [python] [NET] [LabVIEW]
stem.system.getInputPowerBehavior() [cpp] [python] [NET] [LabVIEW]
```

Some behaviors require additional configuration. In most cases this is a list of port numbers that define which ports should be prioritized for input power.

```
stem.system.setInputPowerBehaviorConfig() [cpp] [python] [NET] [LabVIEW]
stem.system.getInputPowerBehaviorConfig() [cpp] [python] [NET] [LabVIEW]
```

## Temperature

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Certain modules have a temperature measurement available. The temperature entity gives access to these measurements. Check your module datasheet to see if your module has a temperature entity.

---

## System Temperature

The temperature of the USBExt3c can be measured with:

```
stem.temperature[0].getValue(μC) [cpp] [python] [.NET] [LabVIEW]
```

```
stem.temperature[0].getValueMin(μC) [cpp] [python] [.NET] [LabVIEW]
```

```
stem.temperature[0].getValueMax(μC) [cpp] [python] [.NET] [LabVIEW]
```

where temperature is in micro-degrees Celcius.

## UART

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The UART entity is a class which allows a user to configure and control an arbitrary stream of serial data. These streams can represent a number of different transports, including a RS232 external interface, a virtual COM port, and onboard UART interfaces from system components. This entity allows each transport to be configured as either an endpoint, or as a passthrough between transports, similar to a switchboard of a telephone operator.

---

## UART Control

By default, USBExt3c extends RS-232 connections on the expansion connector. However, USBExt3c also has the ability to be controlled via RS-232. The USBExt3c also supports VCOM (Virtual COM port) channels for USB-based serial communication, with three VCOM channels available. For additional information about the serial protocol, reference *USBExt3c Serial Communication Feature*

## UART Entity Indices

The USBExt3c provides the following UART entity indices:

Table 28: UART Entity Indices

Index	Description
0	Hardware RS232 (External Expansion Connector)
3	Internal Extender Channel (TA)
4	VCOM_0 (Virtual COM port channel)
5	VCOM_1 (Virtual COM port channel)
6	VCOM_2 (Virtual COM port channel)

**Note:** Indices 1-2 are reserved for internal use. User applications typically use indices 0, 3, 4, 5, and 6.

## UART Protocols

USBExt3c has four protocol values enumerated.

Value	Description
0	Disabled/Undefined
1	Extron Compatible Protocol
2	Brainstem Transport
6	Loopback

## UART APIs

UARTs are controlled through the *following APIs*:

```
stem.uart[x].setEnabled() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getEnable() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setBaudRate() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getBaudRate() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setProtocol() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getProtocol() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setLinkChannel() [cpp] [python] [NET] [LabVIEW]
```

```
stem.uart[x].getLinkChannel() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setStopBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getStopBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setParity() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getParity() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setDataBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getDataBits() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].setFlowControl() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getFlowControl() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getCapableProtocols() [cpp] [python] [NET] [LabVIEW]
stem.uart[x].getAvailableProtocols() [cpp] [python] [NET] [LabVIEW]
```

## USB System

---

### Upstream Control

The USBExt3c has the unique ability to designate either of its full featured hub ports (0,1) or the HDBaseT-USB3 link as the upstream connection. This is very useful for moving devices between hosts or testing dual-role port functionality.

```
stem.hub.setUpstream() [cpp] [python] [NET] [LabVIEW]
stem.hub.getUpstream() [cpp] [python] [NET] [LabVIEW]
```

### Enumeration Delay

Once a USB device is detected by the USBExt3c it is possible to delay its connection to an upstream host computer and subsequent enumeration on the USB bus. The enumeration delay can mitigate or eliminate host kernel instabilities by forcing devices to enumerate in slow succession, allowing a focus on validation of drivers and software. The enumeration delay is configured in milliseconds, representing the time delay between enabling each successive port. Enumeration delay is applied when the hub powers on or when a new upstream connection is made.

```
stem.hub.setEnumerationDelay() [cpp] [python] [NET] [LabVIEW]
stem.hub.getEnumerationDelay() [cpp] [python] [NET] [LabVIEW]
```

## Power Behavior

Ports 0,1, and control of the USBExt3c are each capable of sourcing 60 watts based on available system power. The method in which power is allocated across these ports is called the power behavior and it can be configured through

```
stem.hub.setPowerBehavior() [cpp] [python] [NET] [LabVIEW]
stem.hub.getPowerBehavior() [cpp] [python] [NET] [LabVIEW]
```

Some behaviors require additional configuration. In most cases this is a list of port numbers that define which ports should be prioritized for power allocation.

```
stem.hub.setPowerBehaviorConfig() [cpp] [python] [NET] [LabVIEW]
stem.hub.getPowerBehaviorConfig() [cpp] [python] [NET] [LabVIEW]
```

## Data Behavior

Many devices are now capable of being Dual-Role Ports (DRP) meaning that they can be both a device (downstream) and a host (upstream). These devices can request to become a host at anytime which may or may not contradict the users desired upstream setting. The method in which these events are handled is referred to as data behavior. Just as power behavior it can be configured with a similar set of APIs

Table 29: List of Available Data Behaviors for USBExt3c

Behavior	Value	Define
Hard Coded	0	usbsystemDataBehavior_HardCoded
Reserved	1	usbsystemDataBehavior_Reserved
Port Priority	2	usbsystemDataBehavior_PortPriority

### Hard Coded

The Hard-Coded data behavior is used to fix the Upstream port to a single port and not allow it to move except for a command through the *Set Upstream* API or via the *Serial Communication Feature*.

### Newest Connection (default)

The newest connection data behavior assigns the Upstream port role to the port with the most recently connected host-capable device. This means a USB-C connection that's a sink or a USB PD connection that has described itself as USB Coms Capable and can act as a Host.

## Relevant API's

```
stem.hub.setDataRoleBehavior() [cpp] [python] [NET] [LabVIEW]
stem.hub.getDataRoleBehavior() [cpp] [python] [NET] [LabVIEW]
```

Some behaviors require additional configuration. In most cases this is a list of port numbers that define which ports should be prioritised for power allocation.

```
stem.hub.setDataRoleBehaviorConfig() [cpp] [python] [NET] [LabVIEW]
stem.hub.getDataRoleBehaviorConfig() [cpp] [python] [NET] [LabVIEW]
```

## High-Level Control of the Port Entity

The USBSystem Entity and the *Port Entity* are capable of doing many of the same things its merely their perspective. The PortClass acts on individual elements where as the USBSystemClass acts on all of the ports. For instance if you wanted to enable all of the ports of the USBExt3c you would need to loop through each index and individually enable each port. With the USBSystem class you can do the exact same thing, but with a single API call with each bit representing a given port.

```
//USBSystem Entity method.
stem.hub.setEnabledList(0x03); //0b0000 0011 bits 0-1 set high = ports 0-1

//Port Entity method.
for(int x = 0; x <= 1; x++) {
    stem.hub.port[x].setEnabled(true);
}
```

```
stem.hub.setEnabledList() [cpp] [python] [NET] [LabVIEW]
stem.hub.setEnabledList() [cpp] [python] [NET] [LabVIEW]
```

The same logic can also be applied to Data Role, Mode, and State elements, but with slightly different interfaces depending on the size of the data.

```
stem.hub.setModeList() [cpp] [python] [NET] [LabVIEW]
stem.hub.getModeList() [cpp] [python] [NET] [LabVIEW]
```

Data Role and State are slightly different in that there are only get calls for these functions:

```
stem.hub.getDataRoleList() [cpp] [python] [NET] [LabVIEW]

stem.hub.getStateList() [cpp] [python] [NET] [LabVIEW]
```

## 1.7 MTM Products

Manufacturing Test Module (MTM) Series instrumentation from Acroname is the platform you need to free your production testers from the burdens of validation test equipment. Mix and match modules to create a complete tester within a fixture frame, eliminating benchtop and rack equipment - all without sacrificing the robustness and reusability you demand from your equipment. And when you are ready to scale your production line, MTM enables rapid replication of inexpensive testers that are repeatable. So mass-production testers behave the same way as the ramp station.

### 1.7.1 MTM-Relay



As part of Acroname's MTM series, the MTM-Relay module is a key component to automated manufacturing test systems requiring switching of industrial control voltages. The MTM-Relay module features four software-controlled solid-state relays (SSR). Each relay can handle up to 60V and 6ADC/RMS. The powerful BrainStem API allows simple networking of multiple modules into one system, and can report each channel's voltage.

The module also provides four digital (3.3V) GPIO to support module integration and provide additional capability, as necessary.

To get up to speed with the MTM Relay and quickly learn about its functionality follow the [quick start guide](#).

Have a look at the [basic example](#) or dive into the [Programming interface](#) of the MTM Relay for a more in depth view.

## Quick Start Guide

### 1. Download The Development Kit

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>18</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>19</sup> for your particular operating system and architecture.

### 2. Connect to Device

- Utilize the MTM Relay by either connecting to the:
  - Onboard USB connection
  - Card edge USB input
  - Through other MTM modules on the local BrainStem bus.

### 3. Run System

- Open HubTool
- On the bottom right side of the application select the MTM Relay device.

---

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the MTM Relay. For more information please take a look at our [Getting Started Guide](#)

## Basic Example

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

int main(int argc, const char * argv[]) {

    //Create an instance of a MTM-RELAY module.
    aMTMRelay mtm;

    //Connect to the hardware.
    err = mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
    if (err != aErrNone) {
        printf("Error %d encountered connecting to BrainStem module\n", err);
    }
```

(continues on next page)

---

<sup>18</sup> <https://acroname.com/api>

<sup>19</sup> <https://acroname.com/hubtool>



(continued from previous page)

```

    return 1;

} else { printf("Connected to BrainStem module.\n"); }

//Basic initialization (Get LEDs turned off).
mtm.system.setLED(0);

//Ready for testing
//Enable LED
mtm.system.setLED(1);

//Turn LED off
mtm.system.setLED(0);

//Disconnect
mtm.disconnect();
}

```

## Python

```

import brainstem
#for easy access to error constants
from brainstem.result import Result
import time
import sys

# Create an instance of a MTM-RELAY module.
mtm = brainstem.stem.MTMRelay();

# Locate and connect to the first object you find on MTM
result = hub.mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
if result != Result.NO_ERROR:
    print ("Error %d encountered connecting to BrainStem Module.\n" % result)
else:
    print ("Connected to BrainStem module.\n")

#Basic initialization (Get everything turned off).
mtm.system.setLED(0)

##Ready for testing
##Enable LED
mtm.system.setLED(1)

##Finished with testing.
##Turn off LED
mtm.system.setLED(0)

# Disconnect from device.
mtm.disconnect();
print("Disconnected from BrainStem module. \n")

```

## Indicators and Connections

### LEDs

The MTM Relay board has a number of LED indicators to assist with MTM system development, debugging, and monitoring. These LEDs are shown in the diagrams below.

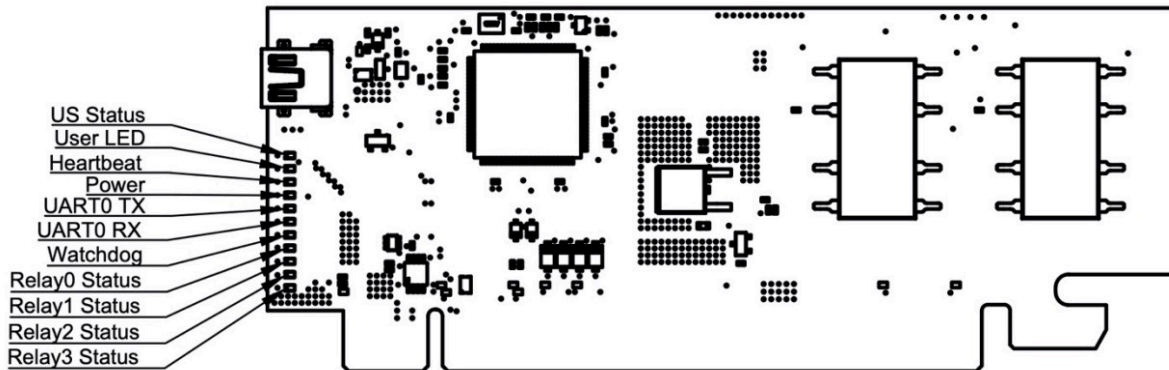


Figure 3: MTM-Relay LED Indicators

### Programming Interface

The MTM-Relay is capable of many features. These features are organized into groups called *entities*. Through these entities we can access the vast features of the MTM-Relay.

A complete list of all entities and functions can be found in the [Module Entities](#) page.

---

### Software Control

A BrainStem link can be established that will give the user access to the resources available on the MTM-Relay. The module can then be controlled via a host running BrainStem APIs or operated independently by running locally embedded, user-defined programs based on Acroname's BrainStem Reflex language in the RTOS. A BrainStem link to the MTM-Relay can be established via one of three (3) interfaces: the onboard USB connection, the card-edge USB connection, or through another MTM module using the BrainStem protocol (more on this interface below). For the USB connection options, once the MTM-Relay is attached to a host machine, a user can connect to it via software API:

```
stem.discoverAndConnect(linkType, serialNumber)
```

The MTM-Relay can also work within a network of other Brainstem modules, such as in a test fixture, to give access to the capabilities of all networked modules. On the MTM platform, networked modules communicate using the Brainstem protocol, which is transmitted over I2C. Each MTM-Relay is uniquely addressable via hardware or software to avoid communication conflicts on the I2C bus.

## Upstream USB Connectivity Options

The MTM-Relay supports upstream USB connections (to communicate to a host PC) via the mini-B connector, or through pins B14 and B15 of the PCIe edge connector. The module defaults to using the edge connector and will switch to the miniB connector if 5V is present on Vbus at the mini-B connector.

## MTM-RELAY Module Entities

### Digital

#### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write or manipulate a digital pin. Digital I/O capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of digital entities and details for their capacities will be described in that module's datasheet.

### Set/Get Configurations

Gets or Sets the digital pin configuration. Some digital entities may be single purpose functionality or can be configured for multiple behaviors depending on the hardware. Digital entities that are capable of different operating configurations can be explicitly set to operate in a desired configuration mode when possible. Defaults for most digital entities are typically as inputs, but will vary by module hardware.

```
stem.digital[index].setConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

The mode parameter is an integer that correlates to the following:

Value	Configuration
0	Input
1	Output
4	Hi Impedance (Hi-Z)
5	Input with Pull Down

### Set/Get State

Gets or Sets the digital I/O Value. For gets the digital input state will be reported in a boolean fashion. Voltage threshold tolerance details for the target module will be described in the datasheet. For sets the digital output state will be asserted logic high or logic low. Voltage threshold details for the target module will be described in the datasheet.

```
stem.digital[index].setState(level) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getState(level) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

If a digital pin is configured in Hi-Z mode its internal circuitry has been disconnected to create a high impedance. There are no functions that can act on this configuration

Digital	Input	Output	HighZ	RCServo	Signal
DIO0	Yes	Yes	Yes	None	None
DIO 1	Yes	Yes	Yes	None	None
DIO 2	Yes	Yes	Yes	None	None
DIO 3	Yes	Yes	Yes	None	None

## I2C

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write data on up to two I<sup>2</sup>C busses

---

### Read/Write Data

BrainStem modules may have the ability to read, write data on up to 2 I2C bus's. The MTM-RELAY includes access to a single I2C bus operating at a set 1Mbit/s rate.

---

**Note:** *The 1Mbit/s bus, while user-accessible, is also used for BrainStem network communication so there may be other, non-user-initiated traffic when other BrainStem modules are linked.*

---

```
stem.i2c[index].read(address, length) \[cpp\] \[python\] \[NET\] \[CCA\]
```

```
stem.i2c[index].write(address, length) \[cpp\] \[python\] \[NET\] \[CCA\]
```

The maximum data size for individual read and write operations on an I2C bus through the BrainStem API is 20 bytes. Sending more than 20 bytes of information must be done as an iterated sequence.

### Pullup

Each I2C bus also includes 330Ω pull-up resistors on the SDA and SCL lines, disabled by default. When using the MTM-RELAY in a linked system (communicating over the 1Mbit/s bus), only a single set of pull-ups along the bus should be enabled in order for the I2C bus to work properly (if more than one set is enabled, the lines cannot be pulled low for communication). Similarly, when using a single MTM device to communicate with an external device over the I2C bus, either the internal pull-ups can be enabled, or external hardware pull-ups added.

```
stem.i2c[index].setPullup(bEnable) \[cpp\] \[python\] \[NET\] \[CCA\]
```

## Relay

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Relay entity is a simple class which allows the enabling and disabling of a specified relay.

### Get/Set Enable

The MTM-Relay has four (4) optically isolated solid-state relays controlled by the relay entity. Each relay is controllable via software and capable of 60V and 6A continuous current load.

Enables the relay channel for the specified index.

```
stem.relay[index].setEnabled() \[cpp\] \[python\] \[.NET\] \[CCA\] \[REST\]
```

```
stem.relay[index].getEnabled() \[cpp\] \[python\] \[.NET\] \[CCA\] \[REST\]
```

### Get Voltage

Returns the voltage of the specified index.

```
stem.relay[index].getVoltage() \[cpp\] \[python\] \[.NET\] \[CCA\] \[REST\]
```

## Store

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module has one or more stores. Stores are the BrainStem equivalent of a filesystem. Stores are broken up into a number of slots, each of which can be thought of as a file. A Store generally represents a specific type of storage. Flash or internal, RAM, or SD if the BrainStem includes an SD slot. The most common usage of slots and stores is for the storage of reflex code that will run on the BrainStem module. Additionally Bulk capture of Analog data can write to a slot within a store. Slots within the internal store can be set up as boot slots by setting the appropriate slot number in the system configuration. See the :doc:`System <system>` entity for more information about setting a boot slot.

The number and type of stores is Model specific. Details about the number of slots per store, and available stores can be found in the data sheets for specific models.

There are a number of commands for manipulating stores, which are detailed below. Many of the store commands are only accessible from host API's and UI applications, however commands relating to enabling reflex files in slots are accessible from the reflex language.

Every BrainStem module includes several Store entities and onboard memory slots.

The MTM-RELAY has store slots [0-1].

Store Slot	Storage Type
0	RAM
1	Internal

### Get Slot State

For slots which hold reflexes, this read only command returns whether the slot is currently enabled or not. 1 is enabled 0 is disabled. This command can be called from a reflex.

```
stem.store[index].getSlotState(slot) [cpp] [python] [NET] [CCA] [REST]
```

### Load/Unload Slot

This command writes a data buffer into a slot for the given store. It is only available from host side API's.

```
stem.store[index].loadSlot(slot, data, _=None) [cpp] [python] [NET] [CCA]
```

This command reads the slot in the given store into the byte buffer. The length will never be more than the max buffer size given, but may be less if the slot contents were shorter than max buffer length.

```
stem.store[index].unloadSlot(slot) [cpp] [python] [NET] [CCA]
```

### Enable/Disable Slot

This command enables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotEnable(slot) [cpp] [python] [NET] [CCA]
```

This command disables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotDisable(slot) [cpp] [python] [NET] [CCA]
```

### Slot Capacity

This command gets the maximum capacity of the given slot for the store. This command is accessible from the reflex language.

```
stem.store[index].slotCapacity(slot) [cpp] [python] [NET] [CCA]
```

### Slot Size

This command gets the current size of the data in the given slot for the store. This can be the size in bytes of the reflex byte code file, or the data size for a bulk capture.

```
stem.store[index].slotSize(slot) [cpp] [python] [NET] [CCA]
```

## System

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

## Serial Number

Every MTM-RELAY is assigned a unique serial number at the factory. This facilitates an arbitrary number of MTM-RELAY devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Module Default Base Address

BrainStems are designed to be able to form a reactive, extensible network. All BrainStem modules come with a default network base address for identification on the BrainStem network bus. The default module base address for MTM-RELAY is factory-set as 6, and can be accessed with.

```
stem.system.getModule(module) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the MTM-RELAY away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

Saved Configurations	
Module Software Offset	I2C Rate
Router Address	I2C Pullup State
Heartbeat Rate	Boot Slot

## Reset

Reset the system.

```
stem.system.reset() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set LED

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

```
stem.system.getLED(value) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setLED(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Boot Slot

Get the store slot which is mapped when the module boots. Set a store slot to be mapped when the module boots.

The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

```
stem.system.getBootSlot() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setBootSlot(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get Input Voltage

Get the module's input voltage.

```
stem.system.getInputVoltage() [cpp] [python] [NET] [CCA] [REST]
```



## Get Version

Get the modules firmware version number.

The version number is packed into the return value. Utility functions in the Version module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

```
stem.system.getVersion() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Module Software Offset

Set the software address offset.

The module software offset is added to the base module address, and potentially a hardware offset to determine the final calculated address the module uses on the BrainStem network. You must save and reset the module for this change to become effective.

```
stem.system.getModuleSoftwareOffset() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setModuleSoftwareOffset(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set HB Interval

Get the delay between heartbeat packets. Set the delay between heartbeat packets.

For link modules, these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments. Increments valid values are 1-255; default is 10 (256 milliseconds).

```
stem.system.getHBInterval() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setHBInterval(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Router

Get the router address the module uses to communicate with the host. Set the router address the module uses to communicate with the host.

```
stem.system.getRouter() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setRouter(value) [cpp] [python] [NET] [CCA] [REST]
```

### Get Router Address Setting

Get the router address setting saved in the module. This setting may be different from the effective router if the router has been set and saved but no reset has been made.

```
stem.system.getRouterAddressSetting() [cpp] [python] [NET] [CCA] [REST]
```

### Get Module

Get the address the module uses on the BrainStem network.

```
stem.system.getModule() [cpp] [python] [NET] [CCA] [REST]
```

### Get Model

Get the module's model enumeration.

A subset of the possible model enumerations is defined in aProtocolDefs.h under "BrainStem model codes". Other codes are be used by Acroname for proprietary module types.

```
stem.system.getModel() [cpp] [python] [NET] [CCA] [REST]
```

### Route to Me

Enables/Disables the route to me function.

This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

```
stem.system.routeToMe(value) [cpp] [python] [NET] [CCA] [REST]
```

### Complete list of Supported Entities and Functions


Entity Class	Entity Option	Variable(s) Notes
digital[0-3]	setConfiguration	
	getConfiguration	
	setState	
	getState	
i2c[0]	write	
	read	
relay[0-3]	setEnabled	
	getEnable	

continues on next page

Table 30 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
store[0-1]	getVoltage	
	getSlotState	
	loadSlot	
	unloadSlot	
	slotEnable	
	slotDisable	
	slotCapacity	
system[0]	slotSize	
	save	
	reset	
	setLED	
	getLED	
	setBootSlot	
	getBootSlot	
	getInputVoltage	
	getVersion	
	getModuleBaseAddress	
	getModuleSoftwareOffset	
	setModuleSoftwareOffset	
	getModuleHardwareOffset	
	setHBInterval	
	getHBInterval	
	getRouterAddressSetting	
	getModule	
	getSerialNumber	
	setRouter	
	getRouter	
	getModel	
	routeToMe	

## 1.7.2 MTM-DAQ-2

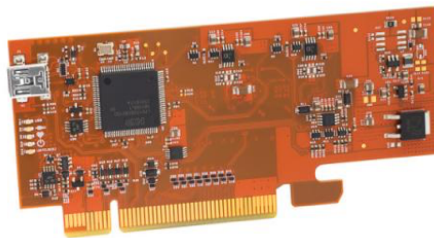

The MTM-DAQ-2 module, part of Acroname's Manufacturing Test Module (MTM) instrumentation series, is a modular, software-controlled analog data acquisition (DAQ) module, designed for precision measurements of analog voltages in manufacturing or R&D test.

The MTM-DAQ-2 has 14 channels of differential bi-polar analog inputs with individually adjustable ranges.

Precision voltage measurements can be made through the powerful and cross-platform BrainStem API.

The MTM-DAQ-2 is optimized specifically for precision analog measurement of voltages for sensor and current-sense (through shunt resistors) applications in high-throughput manufacturing test environments.

To get up to speed with the MTM DAQ-2 and quickly learn about its functionality follow the [quick start guide](#). Have a look at the [basic example](#) or dive into the [Programming interface](#) of the MTM Power Module for a more in depth view.

## Quick Start Guide

### 1. Download The Development Kit

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>20</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>21</sup> for your particular operating system and architecture.

### 2. Connect to Device

- Utilize the MTM DAQ-2 by either connecting to the:
  - Onboard USB connection
  - Card edge USB input
  - Through other MTM modules on the local BrainStem bus.

### 3. Run System

- Open HubTool
- On the bottom right side of the application select the MTM DAQ-2 device.

---

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the MTM Relay. For more information please take a look at our [Getting Started Guide](#)

## Basic Example

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

int main(int argc, const char * argv[]) {

    //Create an instance of a MTM-DAQ-2 module.
    aMTMDAQ2 mtm;

    //Connect to the hardware.
    err = mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
    if (err != aErrNone) {
```

(continues on next page)

---

<sup>20</sup> <https://acroname.com/api>

<sup>21</sup> <https://acroname.com/hubtool>

(continued from previous page)

```

    printf("Error %d encountered connecting to BrainStem module\n", err);
    return 1;

} else { printf("Connected to BrainStem module.\n"); }

//Basic initialization (Get LEDs turned off).
mtm.system.setLED(0);

//Ready for testing
//Enable LED
mtm.system.setLED(1);

//Turn LED off
mtm.system.setLED(0);

//Disconnect
mtm.disconnect();
}

```

## Python

```

import brainstem
#for easy access to error constants
from brainstem.result import Result
import time
import sys

# Create an instance of a MTM-DAQ-2 module.
mtm = brainstem.stem.MTMDAQ2();

# Locate and connect to the first object you find on MTM
result = hub.mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
if result != Result.NO_ERROR:
    print ("Error %d encountered connecting to BrainStem Module.\n" % result)
else:
    print ("Connected to BrainStem module.\n")

#Basic initialization (Get everything turned off).
mtm.system.setLED(0)

##Ready for testing
##Enable LED
mtm.system.setLED(1)

##Finished with testing.
##Turn off LED
mtm.system.setLED(0)


# Disconnect from device.
mtm.disconnect();
print("Disconnected from BrainStem module. \n")

```

## Indicators and Connections

### LEDs

The MTM-DAQ-2 board has five LED indicators to assist with MTM system development, debugging, and monitoring. These LEDs are shown in the diagrams below

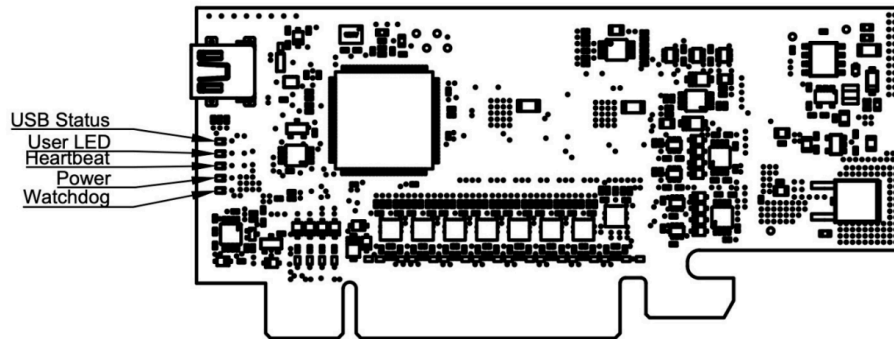

### Programming Interface

The MTM-DAQ-2 is capable of many features. These features are organized into groups called *entities*. Through these entities we can access the vast features of the MTM-DAQ-2.

A complete list of all entities and functions can be found in the *Module Entities* page.

---

### Software Control

A BrainStem link can be established that will give the user access to the resources available on the MTM-DAQ-2. The module can then be controlled via a host running BrainStem APIs or operated independently by running locally embedded, user-defined programs based on Acroname's BrainStem Reflex language in the RTOS. A BrainStem link to the MTM-DAQ-2 can be established via one of three (3) interfaces: the onboard USB connection, the card-edge USB connection, or through another MTM module using the BrainStem protocol (more on this interface below). For the USB connection options, once the MTM-DAQ-2 is attached to a host machine, a user can connect to it via software API:

```
stem.discoverAndConnect(linkType, serialNumber)
```

The MTM-DAQ-2 can also work within a network of other Brainstem modules, such as in a test fixture, to give access to the capabilities of all networked modules. On the MTM platform, networked modules communicate using the Brainstem protocol, which is transmitted over I2C. Each MTM-DAQ-2 is uniquely addressable via hardware or software to avoid communication conflicts on the I2C bus.

## Upstream USB Connectivity Options

The MTM-DAQ-2 supports upstream USB connections (to communicate to a host PC) via the mini-B connector, or through pins B14 and B15 of the PCIe edge connector. The module defaults to using the edge connector and will switch to the miniB connector if 5V is present on Vbus at the mini-B connector.

## MTM-DAQ-2 Module Entities

### System

#### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

### Serial Number

Every MTM-DAQ-2 is assigned a unique serial number at the factory. This facilitates an arbitrary number of MTM-DAQ-2 devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) \[cpp\] \[python\] \[.NET\] \[CCA\] \[REST\]
```

### Module Default Base Address

BrainStems are designed to be able to form a reactive, extensible network. All BrainStem modules come with a default network base address for identification on the BrainStem network bus. The default module base address for MTM-DAQ-2 is factory-set as 6, and can be accessed with.

```
stem.system.getModule(module) \[cpp\] \[python\] \[.NET\] \[CCA\] \[REST\]
```

### Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the MTM-DAQ-2 away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() \[cpp\] \[python\] \[.NET\] \[CCA\] \[REST\]
```

Saved Configurations	
Module Software Offset	I2C Rate
Router Address	I2C Pullup State
Heartbeat Rate	Boot Slot

## Reset

Reset the system.

```
stem.system.reset() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set LED

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

```
stem.system.getLED(value) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setLED(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Boot Slot

Get the store slot which is mapped when the module boots. Set a store slot to be mapped when the module boots.

The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

```
stem.system.getBootSlot() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setBootSlot(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get Input Voltage

Get the module's input voltage.

```
stem.system.getInputVoltage() [cpp] [python] [NET] [CCA] [REST]
```

## Get Version

Get the modules firmware version number.

The version number is packed into the return value. Utility functions in the Version module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

```
stem.system.getVersion() [cpp] [python] [NET] [CCA] [REST]
```



### Get/Set Module Software Offset

Set the software address offset.

The module software offset is added to the base module address, and potentially a hardware offset to determine the final calculated address the module uses on the BrainStem network. You must save and reset the module for this change to become effective.

```
stem.system.getModuleSoftwareOffset() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setModuleSoftwareOffset(value) [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set HB Interval

Get the delay between heartbeat packets. Set the delay between heartbeat packets.

For link modules, these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments. Increments valid values are 1-255; default is 10 (256 milliseconds).

```
stem.system.getHBInterval() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setHBInterval(value) [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set Router

Get the router address the module uses to communicate with the host. Set the router address the module uses to communicate with the host.

```
stem.system.getRouter() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setRouter(value) [cpp] [python] [NET] [CCA] [REST]
```

### Get Router Address Setting

Get the router address setting saved in the module. This setting may be different from the effective router if the router has been set and saved but no reset has been made.

```
stem.system.getRouterAddressSetting() [cpp] [python] [NET] [CCA] [REST]
```

## Get Module

Get the address the module uses on the BrainStem network.

```
stem.system.getModule() [cpp] [python] [NET] [CCA] [REST]
```

## Get Model

Get the module's model enumeration.

A subset of the possible model enumerations is defined in aProtocolDefs.h under "BrainStem model codes". Other codes are be used by Acroname for proprietary module types.

```
stem.system.getModel() [cpp] [python] [NET] [CCA] [REST]
```

## Route to Me

Enables/Disables the route to me function.

This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

```
stem.system.routeToMe(value) [cpp] [python] [NET] [CCA] [REST]
```

## Store

### API Documentation: [cpp] [python] [.NET] [CCA] [REST]

Every BrainStem module has one or more stores. Stores are the BrainStem equivalent of a filesystem. Stores are broken up into a number of slots, each of which can be thought of as a file. A Store generally represents a specific type of storage. Flash or internal, RAM, or SD if the BrainStem includes an SD slot. The most common usage of slots and stores is for the storage of reflex code that will run on the BrainStem module. Additionally Bulk capture of Analog data can write to a slot within a store. Slots within the internal store can be set up as boot slots by setting the appropriate slot number in the system configuration. See the :doc:`System <system>` entity for more information about setting a boot slot.

The number and type of stores is Model specific. Details about the number of slots per store, and available stores can be found in the data sheets for specific models.

There are a number of commands for manipulating stores, which are detailed below. Many of the store commands are only accessible from host API's and UI applications, however commands relating to enabling reflex files in slots are accessible from the reflex language.

---

Every BrainStem module includes several Store entities and onboard memory slots.

The MTM-DAQ-2 has store slots [0-1].

Store Index	Storage Type	Number of Slots
0	Internal	12
1	RAM	1

### Get Slot State

For slots which hold reflexes, this read only command returns whether the slot is currently enabled or not. 1 is enabled 0 is disabled. This command can be called from a reflex.

```
stem.store[index].getSlotState(slot) [cpp] [python] [NET] [CCA] [REST]
```

### Load/Unload Slot

This command writes a data buffer into a slot for the given store. It is only available from host side API's.

```
stem.store[index].loadSlot(slot, data, _=None) [cpp] [python] [NET] [CCA]
```

This command reads the slot in the given store into the byte buffer. The length will never be more than the max buffer size given, but may be less if the slot contents were shorter than max buffer length.

```
stem.store[index].unloadSlot(slot) [cpp] [python] [NET] [CCA]
```

### Enable/Disable Slot

This command enables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotEnable(slot) [cpp] [python] [NET] [CCA]
```

This command disables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotDisable(slot) [cpp] [python] [NET] [CCA]
```

### Slot Capacity

This command gets the maximum capacity of the given slot for the store. This command is accessible from the reflex language.

```
stem.store[index].slotCapacity(slot) [cpp] [python] [NET] [CCA]
```

## Slot Size

This command gets the current size of the data in the given slot for the store. This can be the size in bytes of the reflex byte code file, or the data size for a bulk capture.

```
stem.store[index].slotSize(slot) [cpp] [python] [NET] [CCA]
```

## Digital

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write or manipulate a digital pin. Digital I/O capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of digital entities and details for their capacities will be described in that module's datasheet.

---

## Set/Get Configurations

Gets or Sets the digital pin configuration. Some digital entities may be single purpose functionality or can be configured for multiple behaviors depending on the hardware. Digital entities that are capable of different operating configurations can be explicitly set to operate in a desired configuration mode when possible. Defaults for most digital entities are typically as inputs, but will vary by module hardware.

```
stem.digital[index].setConfiguration(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.digital[index].getConfiguration(mode) [cpp] [python] [NET] [CCA] [REST]
```

The mode parameter is an integer that correlates to the following:

Digital	Input	Output	HighZ	RCServo	Signal
DIO 0	Yes	Yes	Yes	.	.
DIO 1	Yes	Yes	Yes	.	.
DIO 2	Yes	Yes	Yes	.	.
DIO 3	Yes	Yes	Yes	.	.

## Set/Get State

Gets or Sets the digital I/O Value. For gets the digital input state will be reported in a boolean fashion. Voltage threshold tolerance details for the target module will be described in the datasheet. For sets the digital output state will be asserted logic high or logic low. Voltage threshold details for the target module will be described in the datasheet.

```
stem.digital[index].setState(level) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.digital[index].getState(level) [cpp] [python] [NET] [CCA] [REST]
```

If a digital pin is configured in Hi-Z mode its internal circuitry has been disconnected to create a high impedance. There are no functions that can act on this configuration

Value	Configuration
0	Input with Pullup
1	Output
4	Hi Impedance (Hi-Z)
5	Input with Pull Down

## Analog

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read an analog voltage (ADC) and convert this into a discrete digitized value or output a voltage value based on a desired discrete value (DAC). Analog voltage capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of analog entities and details for their capacities will be described in that module's datasheet.

## Set/Get Range

The MTM-DAQ-2 has sixteen (16) analog inputs (ADC) and two (2) analog outputs (DAC) all controlled by the analog entity. Each analog is controllable via software and is independently current-limited for both source and sink currents. The analog inputs are connected to a 16-bit ADC, and return a voltage value in microvolts. The full ranges are in the table below.

Analog	Input	Input	Input	Input	Input	Output	Output	Output
0-13	(+/-) 10.24V	(+/-) 5.12V	(+/-) 2.56V	(+/-) 1.28V	(+/-) 0.64V	.	.	.
14-15	.	.	.	(+/-) 1.28V	(+/-) 0.64V	.	.	.
16-17	.	.	.	.	.	(+/-) 10.24V	(+/-) 4.096V	(+/-) 2.048V

```
stem.analog[index].setRange(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.analog[index].getRange(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Get/Set Enable [16, 17]

These outputs default to having their outputs disabled, so `setEnabled(1)` must be called before their voltage will be present on their respective pins.

```
stem.analog[index].setEnabled(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].setEnabled(mode) [cpp] [python] [NET] [CCA] [REST]
```

## Get Voltage/Value

A BrainStem's A2D reading will always return a 16 bit value. If the module hardware does not have full 16 bit wide analog to digital conversion capabilities, the measurement will get propagated up to 16 bits wide.

For example, if a 12-bit A2D engine exists in the target module's hardware, the reading will get promoted in the firmware layer by shifting up 4 bits to fill out the 16 bit value ( $0x0FFF \ll 4 = 0xFFF0$ ) in the module's firmware. This approach allows more portable API code to be generated independent of the target hardware.

`setValue` and `setVoltage` is only applicable for Analog[16, 17]:

```
stem.analog[index].setValue() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].getValue() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].setVoltage(microvolts) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].getVoltage() [cpp] [python] [NET] [CCA] [REST]
```

## I2C

### API Documentation: [cpp] [python] [.NET] [CCA] [REST]

BrainStem modules may have the ability to read, write data on up to two I<sup>2</sup>C busses

---

## Read/Write Data

BrainStem modules may have the ability to read, write data on up to 2 I2C bus's. The MTM-DAQ-2 includes access to a single I2C bus operating at a set 1Mbit/s rate.

---

**Note:** *The 1Mbit/s bus, while user-accessible, is also used for BrainStem network communication so there may be other, non-user-initiated traffic when other BrainStem modules are linked.*

---

```
stem.i2c[index].read(address,length) [cpp] [python] [NET] [CCA]
```

```
stem.i2c[index].write(address,length) [cpp] [python] [NET] [CCA]
```

The maximum data size for individual read and write operations on an I2C bus through the BrainStem API is 20 bytes. Sending more than 20 bytes of information must be done as an iterated sequence.

## Pullup

Each I2C bus also includes 330Ω pull-up resistors on the SDA and SCL lines, disabled by default. When using the MTM-DAQ-2 in a linked system (communicating over the 1Mbit/s bus), only a single set of pull-ups along the bus should be enabled in order for the I2C bus to work properly (if more than one set is enabled, the lines cannot be pulled low for communication). Similarly, when using a single MTM device to communicate with an external device over the I2C bus, either the internal pull-ups can be enabled, or external hardware pull-ups added.

```
stem.i2c[index].setPullup(bEnable) [cpp] [python] [NET] [CCA]
```

## Complete list of Supported Entities and Functions

Entity Class	Entity Option	Variable(s) Notes
digital[0-1]	setConfiguration	
	getConfiguration	
	setState	
	getState	
i2c[0]	write	
	read	
analog[0-15]	getVoltage	
	getValue	
	setRange	
	getRange	
analog[16-17]	setVoltage	
	getVoltage	
	setValue	
	getValue	
	setRange	
	getRange	
	setEnabled	
	getEnable	
store[0-1]	getSlotState	
	loadSlot	
	unloadSlot	
	slotEnable	
	slotDisable	
	slotCapacity	
system[0]	slotSize	
	save	
	reset	
	setLED	
	getLED	
	setBootSlot	
	getBootSlot	

continues on next page

Table 31 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
	getInputVoltage	
	getVersion	
	getModuleBaseAddress	
	getModuleSoftwareOffset	
	setModuleSoftwareOffset	
	getModuleHardwareOffset	
	setHBInterval	
	getHBInterval	
	getRouterAddressSetting	
	getModule	
	getSerialNumber	
	setRouter	
	getRouter	
	getModel	
	routeToMe	



### 1.7.3 MTM-PM-1



The MTM-PM-1, part of Acroname's Manufacturing Test Module (MTM) system, is a modular power supply designed for powering devices during manufacturing or R&D testing. The MTM-PM-1 is a one-channel software controlled, voltage and current limiting power supply. While it can provide stable, consistent and robust power to a wide range of devices, it is optimized for devices using LiPo or similar batteries; in particular, it excels at powering devices needing stable power under large transient loads, such as cellular radios (GSM, UMTS, LTE, CDMA, etc.). Accurate voltage, temperature and current measurements can be made through the powerful and cross platform BrainStem API.

To get up to speed with the MTM Power Module and quickly learn about its functionality follow the [quick start guide](#). Have a look at the [basic example](#) or dive into the [Programming interface](#) of the MTM Power Module for a more in depth view.

## Quick Start Guide

### 1. Download The Development Kit

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>22</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>23</sup> for your particular operating system and architecture.

### 2. Connect to Device

- Utilize the MTM Power Module by either connecting to the:
  - Onboard USB connection
  - Card edge USB input
  - Through other MTM modules on the local BrainStem bus.

### 3. Run System

- Open HubTool
- On the bottom right side of the application select the MTM Power Module device.

---

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the MTM Relay. For more information please take a look at our [Getting Started Guide](#)

## Basic Example

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

int main(int argc, const char * argv[]) {

    //Create an instance of a MTM-PM-1 module.
    aMTMPM1 mtm;

    //Connect to the hardware.
    err = mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
    if (err != aErrNone) {
        printf("Error %d encountered connecting to BrainStem module\n", err);
        return 1;
    } else { printf("Connected to BrainStem module.\n"); }
```

(continues on next page)

---

<sup>22</sup> <https://acroname.com/api>

<sup>23</sup> <https://acroname.com/hubtool>

(continued from previous page)

```

//Basic initialization (Get LEDs turned off).
mtm.system.setLED(0);

//Ready for testing
//Enable LED
mtm.system.setLED(1);

//Turn LED off
mtm.system.setLED(0);

//Disconnect
mtm.disconnect();
}

```

## Python

```

import brainstem
#for easy access to error constants
from brainstem.result import Result
import time
import sys

# Create an instance of a MTM-PM-1 module.
mtm = brainstem.stem.MTMPM1();

# Locate and connect to the first object you find on MTM
result = hub.mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
if result != Result.NO_ERROR:
    print ("Error %d encountered connecting to BrainStem Module.\n" % result)
else:
    print ("Connected to BrainStem module.\n")

#Basic initialization (Get everything turned off).
mtm.system.setLED(0)

##Ready for testing
##Enable LED
mtm.system.setLED(1)

##Finished with testing.
##Turn off LED
mtm.system.setLED(0)


# Disconnect from device.
mtm.disconnect();
print("Disconnected from BrainStem module. \n")

```

## Indicators and Connections

### LEDs

The MTM-PM-1 board has a number of LED indicators to assist with MTM system development, debugging, and monitoring. These LEDs are shown in the diagrams below.

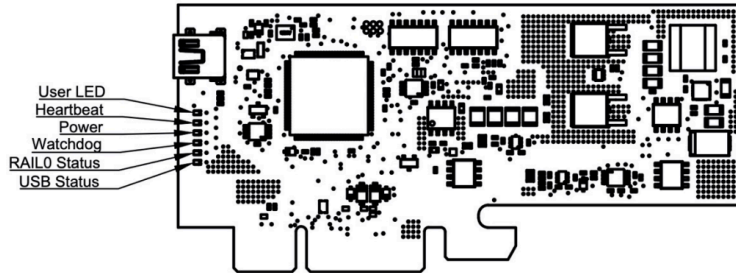

### Programming Interface

The MTM-PM-1 is capable of many features. These features are organized into groups called *entities*. Through these entities we can access the vast features of the MTM-PM-1.

A complete list of all entities and functions can be found in the [Module Entities](#) page.

---

### Software Control

A BrainStem link can be established that will give the user access to the resources available on the MTM-PM-1. The module can then be controlled via a host running BrainStem APIs or operated independently by running locally embedded, user-defined programs based on Acroname's BrainStem Reflex language in the RTOS. A BrainStem link to the MTM-PM-1 can be established via one of three (3) interfaces: the onboard USB connection, the card-edge USB connection, or through another MTM module using the BrainStem protocol (more on this interface below). For the USB connection options, once the MTM-PM-1 is attached to a host machine, a user can connect to it via software API:

```
stem.discoverAndConnect(linkType, serialNumber)
```

The MTM-PM-1 can also work within a network of other Brainstem modules, such as in a test fixture, to give access to the capabilities of all networked modules. On the MTM platform, networked modules communicate using the Brainstem protocol, which is transmitted over I2C. Each MTM-PM-1 is uniquely addressable via hardware or software to avoid communication conflicts on the I2C bus.

## Upstream USB Connectivity Options

The MTM-PM-1 supports upstream USB connections (to communicate to a host PC) via the mini-B connector, or through pins B14 and B15 of the PCIe edge connector. The module defaults to using the edge connector and will switch to the miniB connector if 5V is present on Vbus at the mini-B connector.

## MTM-PM-1 Module Entities

### Digital

#### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write or manipulate a digital pin. Digital I/O capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of digital entities and details for their capacities will be described in that module's datasheet.

### Set/Get Configurations

Gets or Sets the digital pin configuration. Some digital entities may be single purpose functionality or can be configured for multiple behaviors depending on the hardware. Digital entities that are capable of different operating configurations can be explicitly set to operate in a desired configuration mode when possible. Defaults for most digital entities are typically as inputs, but will vary by module hardware.

```
stem.digital[index].setConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

The mode parameter is an integer that correlates to the following:

Value	Configuration
0	Input
1	Output
4	Hi Impedance (Hi-Z)
5	Input with Pull Down

### Set/Get State

Gets or Sets the digital I/O Value. For gets the digital input state will be reported in a boolean fashion. Voltage threshold tolerance details for the target module will be described in the datasheet. For sets the digital output state will be asserted logic high or logic low. Voltage threshold details for the target module will be described in the datasheet.

```
stem.digital[index].setState(level) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getState(level) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

If a digital pin is configured in Hi-Z mode its internal circuitry has been disconnected to create a high impedance. There are no functions that can act on this configuration

Digital	Input	Output	HighZ	RCServo	Signal
DIO 0	Yes	Yes	Yes	.	.
DIO 1	Yes	Yes	Yes	.	.

## I2C

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write data on up to two I<sup>2</sup>C busses

---

### Read/Write Data

BrainStem modules may have the ability to read, write data on up to 2 I2C bus's. The MTM-PM-1 includes access to a single I2C bus operating at a set 1Mbit/s rate.

---

**Note:** *The 1Mbit/s bus, while user-accessible, is also used for BrainStem network communication so there may be other, non-user-initiated traffic when other BrainStem modules are linked.*

---

```
stem.i2c[index].read(address,length) \[cpp\] \[python\] \[NET\] \[CCA\]
```

```
stem.i2c[index].write(address,length) \[cpp\] \[python\] \[NET\] \[CCA\]
```

The maximum data size for individual read and write operations on an I2C bus through the BrainStem API is 20 bytes. Sending more than 20 bytes of information must be done as an iterated sequence.

### Pullup

Each I2C bus also includes 330Ω pull-up resistors on the SDA and SCL lines, disabled by default. When using the MTM-PM-1 in a linked system (communicating over the 1Mbit/s bus), only a single set of pull-ups along the bus should be enabled in order for the I2C bus to work properly (if more than one set is enabled, the lines cannot be pulled low for communication). Similarly, when using a single MTM device to communicate with an external device over the I2C bus, either the internal pull-ups can be enabled, or external hardware pull-ups added.

```
stem.i2c[index].setPullup(bEnable) \[cpp\] \[python\] \[NET\] \[CCA\]
```

## Rail

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Rail entity provides power control to connected devices on some modules. Check the module datasheet to determine if the module has this capability.

the Rail entity controls power provided to downstream devices, it has the ability to enable and disable power, can read voltage on the rail, and provides current consumption information on some modules. There are additional capabilities that certain modules provide which enhance basic power delivery through Kelvin sensing, or by bringing online separate power management functionality.

Certain modules may provide more than one power rail. These are independently controlled and can be accessed via the entity index.

Rails on the MTM-PM-1 module are powerful (no pun intended); they allow other devices and peripherals to consume power from the MTM-PM-1 module in a precisely controlled fashion. Two (2) different rails are available for use: a software-adjustable voltage rail (rail), and input voltage pass-through rail (rail1). These rails are accessed through an array of BrainStem rail class entities. The MTM-PM-1 module implements a subset of the BrainStem rail class for each of these rails.

## Enable

All three rails can be switched on or off through using the API

```
stem.rail[index].setEnabled(state) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Rail Operational Mode

RAIL can be configured to use two different regulation stages: linear (LDO) or switch-mode power supply (SMPS)

```
stem.rail[index].setOperationalMode(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.rail[index].getOperationalMode(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

Mode	Operational Mode Description
0	railOperationalModeAuto (default)
1	railOperationalModeLinear
3	railOperationalModeSwitcherLinear

## Rail Operational State

Auto configuration chooses the switch-mode power supply if an input voltage greater than 7.25V is applied, and the linear regulator otherwise. The API can be used to read the actual operational state

```
stem.rail[index].getOperationalState() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

Bits	Operational State Field Description	Rails
0	Initializing (railOperationalState_Initializing)	rail[0-1]
1	Enabled (railOperationalState_Enabled)	rail[0-1]
2	Fault (railOperationalState_Fault)	rail[0-1]
3-15	Reserved	.
8-15	Hardware Configuration (railOperationalState_HardwareConfiguration)	rail0
16-17	Reserved	.
18	Overcurrent Fault “OC” (railOperationalStateOverCurrentFault)	rail1
19-20	Reserved	.
21	Overtemperature Fault “OT” (railOperationalStateOverTemperatureFault)	rail0
22-31	Reserved	.

## Rail Temperature

The printed circuit board (PCB) temperature can be monitored at the 5.0V rail (RAIL) linear regulation stage. Reading this value is possible through the API

```
stem.rail[index].getTemperature() [cpp] [python] [NET] [CCA] [REST]
```

Temperature monitoring is also used internally to prevent the power regulation stage from overheating and self-preserving the power stage. If an overtemperature condition occurs, then the MTM-IO-Serial module will disable the linear regulator until safe operating temperatures are reached.

## Rail Voltage Setting

RAIL always uses linear regulators to generate an adjustable voltage. They can be set or read using the API

```
stem.rail[index].setVoltageSetpoint(microvolts) [cpp] [python] [NET] [CCA] [REST]
```

## Rail and Rail1 Current Limits

The current limit for each rail can be configured in software from 0A to 3A

```
stem.rail[index].setCurrentLimit(microamps) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.rail[index].getCurrentLimit(microamps) [cpp] [python] [NET] [CCA] [REST]
```

### **Note that the behavior following an overcurrent event differs between rails:**

- rail will simply reduce the output voltage to drive the specified current. No fault bits will be set in software.
- rail1 will be turned off by the hardware if the output current goes above the set limit. The rail1 Fault and Overcurrent Fault bits will be set and must be cleared before re-enabling the rail.



## Rail and Rail1 Current and Voltage

The API command to measure what the current and voltages are

```
stem.rail[index].getCurrent(microamps) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.rail[index].getVoltage(microamps) [cpp] [python] [NET] [CCA] [REST]
```

## Rail Kelvin Sensing

Remote sensing can be applied to compensate for line loss in a system often found in high transient load applications. The MTM-PM-1 provides a “3-wire” interface to provide feedback to the MTM-PM-1 power supply to adjust appropriately and dynamically

```
stem.rail[index].setKelvinSensingEnable(bEnable) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.rail[index].getKelvinSensingEnable(bEnable) [cpp] [python] [NET] [CCA] [REST]
```

**bEnable parameter is an integer that correlates to the following:**

- 0: kelvinSensingOff
- 1: kelvinSensingOn

Determine whether kelvin sensing is enabled or disabled. Kelvin sensing can be disabled if the power stage incurs a fault on the rail power stage.

```
stem.rail[index].getKelvinSensingState(state) [cpp] [python] [NET] [CCA] [REST]
```

## Store

**API Documentation:** [cpp] [python] [NET] [CCA] [REST]

Every BrainStem module has one or more stores. Stores are the BrainStem equivalent of a filesystem. Stores are broken up into a number of slots, each of which can be thought of as a file. A Store generally represents a specific type of storage. Flash or internal, RAM, or SD if the BrainStem includes an SD slot. The most common usage of slots and stores is for the storage of reflex code that will run on the BrainStem module. Additionally Bulk capture of Analog data can write to a slot within a store. Slots within the internal store can be set up as boot slots by setting the appropriate slot number in the system configuration. See the :doc:`System <system>` entity for more information about setting a boot slot.

The number and type of stores is Model specific. Details about the number of slots per store, and available stores can be found in the data sheets for specific models.

There are a number of commands for manipulating stores, which are detailed below. Many of the store commands are only accessible from host API's and UI applications, however commands relating to enabling reflex files in slots are accessible from the reflex language.

---

Every BrainStem module includes several Store entities and onboard memory slots.

The MTM-PM-1 has store slots [0-1].

Store Slot	Storage Type
0	RAM
1	Internal

### Get Slot State

For slots which hold reflexes, this read only command returns whether the slot is currently enabled or not. 1 is enabled 0 is disabled. This command can be called from a reflex.

```
stem.store[index].getSlotState(slot) [cpp] [python] [NET] [CCA] [REST]
```

### Load/Unload Slot

This command writes a data buffer into a slot for the given store. It is only available from host side API's.

```
stem.store[index].loadSlot(slot, data, _=None) [cpp] [python] [NET] [CCA]
```

This command reads the slot in the given store into the byte buffer. The length will never be more than the max buffer size given, but may be less if the slot contents were shorter than max buffer length.

```
stem.store[index].unloadSlot(slot) [cpp] [python] [NET] [CCA]
```

### Enable/Disable Slot

This command enables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotEnable(slot) [cpp] [python] [NET] [CCA]
```

This command disables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotDisable(slot) [cpp] [python] [NET] [CCA]
```

### Slot Capacity

This command gets the maximum capacity of the given slot for the store. This command is accessible from the reflex language.

```
stem.store[index].slotCapacity(slot) [cpp] [python] [NET] [CCA]
```

## Slot Size

This command gets the current size of the data in the given slot for the store. This can be the size in bytes of the reflex byte code file, or the data size for a bulk capture.

```
stem.store[index].slotSize(slot) [cpp] [python] [NET] [CCA]
```

## System

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

## Serial Number

Every MTM-PM-1 is assigned a unique serial number at the factory. This facilitates an arbitrary number of MTM-PM-1 devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) [cpp] [python] [NET] [CCA] [REST]
```

## Module Default Base Address

BrainStems are designed to be able to form a reactive, extensible network. All BrainStem modules come with a default network base address for identification on the BrainStem network bus. The default module base address for MTM-PM-1 is factory-set as 6, and can be accessed with.

```
stem.system.getModule(module) [cpp] [python] [NET] [CCA] [REST]
```

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the MTM-PM-1 away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() [cpp] [python] [NET] [CCA] [REST]
```

Saved Configurations	
Module Software Offset	I2C Rate
Router Address	I2C Pullup State
Heartbeat Rate	Boot Slot

## Reset

Reset the system.

```
stem.system.reset() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set LED

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

```
stem.system.getLED(value) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setLED(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Boot Slot

Get the store slot which is mapped when the module boots. Set a store slot to be mapped when the module boots.

The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

```
stem.system.getBootSlot() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setBootSlot(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get Input Voltage

Get the module's input voltage.

```
stem.system.getInputVoltage() [cpp] [python] [NET] [CCA] [REST]
```

## Get Version

Get the modules firmware version number.

The version number is packed into the return value. Utility functions in the Version module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

```
stem.system.getVersion() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Module Software Offset

Set the software address offset.

The module software offset is added to the base module address, and potentially a hardware offset to determine the final calculated address the module uses on the BrainStem network. You must save and reset the module for this change to become effective.

```
stem.system.getModuleSoftwareOffset() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setModuleSoftwareOffset(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set HB Interval

Get the delay between heartbeat packets. Set the delay between heartbeat packets.

For link modules, these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments. Increments valid values are 1-255; default is 10 (256 milliseconds).

```
stem.system.getHBInterval() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setHBInterval(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Router

Get the router address the module uses to communicate with the host. Set the router address the module uses to communicate with the host.

```
stem.system.getRouter() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setRouter(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get Router Address Setting

Get the router address setting saved in the module. This setting may be different from the effective router if the router has been set and saved but no reset has been made.

```
stem.system.getRouterAddressSetting() [cpp] [python] [NET] [CCA] [REST]
```

## Get Module

Get the address the module uses on the BrainStem network.

```
stem.system.getModule() [cpp] [python] [NET] [CCA] [REST]
```

## Get Model

Get the module's model enumeration.

A subset of the possible model enumerations is defined in aProtocolDefs.h under "BrainStem model codes". Other codes are be used by Acroname for proprietary module types.

```
stem.system.getModel() [cpp] [python] [NET] [CCA] [REST]
```

## Route to Me

Enables/Disables the route to me function.

This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

```
stem.system.routeToMe(value) [cpp] [python] [NET] [CCA] [REST]
```

## Temperature

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Certain modules have a temperature measurement available. The temperature entity gives access to these measurements. Check your module datasheet to see if your module has a temperature entity.

## System Temperature

The temperature of the MTM-PM-1 can be measured with:

```
stem.temperature[0].getValue(μC) \[cpp\] \[python\] \[.NET\] \[CCA\] \[REST\]
```

where temperature is in micro-degrees Celcius.

### Complete list of Supported Entities and Functions

Entity Class	Entity Option	Variable(s) Notes
digital[0-1]	setConfiguration	
	getConfiguration	
	setState	
	getState	
i2c[0]	write	
	read	
rail[0-1]	setEnabled	
	setCurrentLimit	
	getCurrent	
	getCurrentLimit	
rail[0]	getVoltage	
	setVoltage	
	setOperationalMode	
	getOperationalMode	
	getOperationalState	
	getTemperature	
	getKelvinSensingEnable	
	setKelvinSensingEnable	
store[0-1]	getKelvinSensingState	
	getSlotState	
	loadSlot	
	unloadSlot	
	slotEnable	
	slotDisable	
	slotCapacity	
	slotSize	
system[0]	save	

continues on next page

Table 32 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
	reset	
	setLED	
	getLED	
	setSleep	
	setBootSlot	
	getBootSlot	
	getInputVoltage	
	getVersion	
	getModuleBaseAddress	
	getModuleSoftwareOffset	
	setModuleSoftwareOffset	
	getModuleHardwareOffset	
	setHBInterval	
	getHBInterval	
	getRouterAddressSetting	
	getModule	
	getSerialNumber	
	setRouter	
	getRouter	
	getModel	
	routeToMe	
temperature[0]	getTemperature	

### 1.7.4 MTM-Load-1



The MTM-Load-1, part of Acroname's Manufacturing Test Module (MTM) system, is a single-channel software-controlled electronic load for automated functional testing in production or validation test environments.

With its ultra-small footprint, MTM-Load-1 is the load you need for lean, miniaturized production testing. MTM-Load-1 is ideal for load-testing of battery chargers, amplifiers, USB power outputs or motor driver circuits.



Each MTM-Load-1 can dissipate a DC load of 50W continuous power up to 30V or 10A and features constant-current operation. Multiple MTM-Load-1 modules can be used in parallel for higher demand load applications.

To get up to speed with the MTM Load and quickly learn about its functionality follow the [quick start guide](#). Have a look at the [basic example](#) or dive into the [Programming interface](#) of the MTM Power Module for a more in depth view.

## Quick Start Guide

### 1. Download The Development Kit

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>24</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>25</sup> for your particular operating system and architecture.

### 2. Connect to Device

- Utilize the MTM Load by either connecting to the:
  - Onboard USB connection
  - Card edge USB input
  - Through other MTM modules on the local BrainStem bus.

### 3. Run System

- Open HubTool
- On the bottom right side of the application select the MTM Load device.

---

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the MTM Load. For more information please take a look at our [Getting Started Guide](#)

## Basic Example

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

int main(int argc, const char * argv[]) {

    //Create an instance of a MTM-LOAD module.
    aMTMLoad mtm;
```

(continues on next page)

---

<sup>24</sup> <https://acroname.com/api>

<sup>25</sup> <https://acroname.com/hubtool>

(continued from previous page)

```

//Connect to the hardware.
err = mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
if (err != aErrNone) {
    printf("Error %d encountered connecting to BrainStem module\n", err);
    return 1;

} else { printf("Connected to BrainStem module.\n"); }

//Basic initialization (Get LEDs turned off).
mtm.system.setLED(0);

//Ready for testing
//Enable LED
mtm.system.setLED(1);

//Turn LED off
mtm.system.setLED(0);

//Disconnect
mtm.disconnect();
}

```

## Python

```

import brainstem
#for easy access to error constants
from brainstem.result import Result
import time
import sys

# Create an instance of a MTM-LOAD module.
mtm = brainstem.stem.MTMLoad1();

# Locate and connect to the first object you find on MTM
result = hub.mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
if result != Result.NO_ERROR:
    print ("Error %d encountered connecting to BrainStem Module.\n" % result)
else:
    print ("Connected to BrainStem module.\n")

#Basic initialization (Get everything turned off).
mtm.system.setLED(0)

##Ready for testing
##Enable LED
mtm.system.setLED(1)

##Finished with testing.
##Turn off LED
mtm.system.setLED(0)


# Disconnect from device.
mtm.disconnect();
print("Disconnected from BrainStem module. \n")

```

## Indicators and Connections

### LEDs

The MTM-Load-1 board has five LED indicators to assist with MTM system development, debugging, and monitoring. These LEDs are shown in the diagrams below.

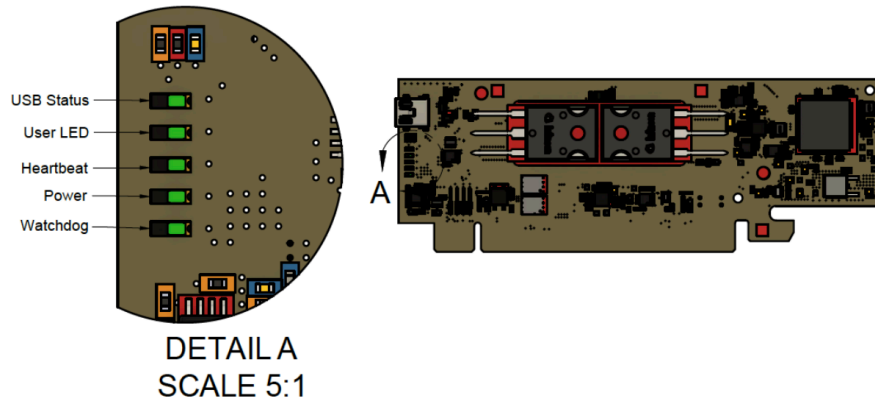

### Programming Interface

The MTM-Load is capable of many features. These features are organized into groups called *entities*. Through these entities we can access the vast features of the MTM-Load.

A complete list of all entities and functions can be found in the [Module Entities](#) page.

### Software Control

A BrainStem link can be established that will give the user access to the resources available on the MTM-Load. The module can then be controlled via a host running BrainStem APIs or operated independently by running locally embedded, user-defined programs based on Acroname's BrainStem Reflex language in the RTOS. A BrainStem link to the MTM-Load can be established via one of three (3) interfaces: the onboard USB connection, the card-edge USB connection, or through another MTM module using the BrainStem protocol (more on this interface below). For the USB connection options, once the MTM-Load is attached to a host machine, a user can connect to it via software API:

```
stem.discoverAndConnect(linkType, serialNumber, modelNumber)
```

The MTM-Load can also work within a network of other Brainstem modules, such as in a test fixture, to give access to the capabilities of all networked modules. On the MTM platform, networked modules communicate using the Brainstem protocol, which is transmitted over I2C. Each MTM-Load is uniquely addressable via hardware or software to avoid communication conflicts on the I2C bus.

## Upstream USB Connectivity Options

The MTM-Load supports upstream USB connections (to communicate to a host PC) via the mini-B connector, or through pins B14 and B15 of the PCIe edge connector. The module defaults to using the edge connector and will switch to the miniB connector if 5V is present on Vbus at the mini-B connector.

## MTM-LOAD-1 Module Entities

### Digital

#### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write or manipulate a digital pin. Digital I/O capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of digital entities and details for their capacities will be described in that module's datasheet.

---

### Set/Get Configurations

Gets or Sets the digital pin configuration. Some digital entities may be single purpose functionality or can be configured for multiple behaviors depending on the hardware. Digital entities that are capable of different operating configurations can be explicitly set to operate in a desired configuration mode when possible. Defaults for most digital entities are typically as inputs, but will vary by module hardware.

```
stem.digital[index].setConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

The mode parameter is an integer that correlates to the following:

Value	Configuration
0	Input
1	Output
4	HiZ

### Set/Get State

Gets or Sets the digital I/O Value. For gets the digital input state will be reported in a boolean fashion. Voltage threshold tolerance details for the target module will be described in the datasheet. For sets the digital output state will be asserted logic high or logic low. Voltage threshold details for the target module will be described in the datasheet.

```
stem.digital[index].setState(level) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getState(level) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

If a digital pin is configured in Hi-Z mode its internal circuitry has been disconnected to create a high impedance. There are no functions that can act on this configuration

Digital	Input	Output	Hi-Z	RCServo	Signal
DIO0	Yes	Yes	Yes	.	.
DIO1	Yes	Yes	Yes	.	.
DIO2	Yes	Yes	Yes	.	.
DIO3	Yes	Yes	Yes	.	.

## I2C

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write data on up to two I<sup>2</sup>C busses

### Read/Write Data

BrainStem modules may have the ability to read, write data on up to 2 I2C bus's. The MTM-LOAD includes access to a single I2C bus operating at a set 1Mbit/s rate.

**Note:** *The 1Mbit/s bus, while user-accessible, is also used for BrainStem network communication so there may be other, non-user-initiated traffic when other BrainStem modules are linked.*

```
stem.i2c[index].read(address,length) \[cpp\] \[python\] \[NET\] \[CCA\]
```

```
stem.i2c[index].write(address,length) \[cpp\] \[python\] \[NET\] \[CCA\]
```

The maximum data size for individual read and write operations on an I2C bus through the BrainStem API is 20 bytes. Sending more than 20 bytes of information must be done as an iterated sequence.

### Pullup

Each I2C bus also includes 330Ω pull-up resistors on the SDA and SCL lines, disabled by default. When using the MTM-LOAD in a linked system (communicating over the 1Mbit/s bus), only a single set of pull-ups along the bus should be enabled in order for the I2C bus to work properly (if more than one set is enabled, the lines cannot be pulled low for communication). Similarly, when using a single MTM device to communicate with an external device over the I2C bus, either the internal pull-ups can be enabled, or external hardware pull-ups added.

```
stem.i2c[index].setPullup(bEnable) \[cpp\] \[python\] \[NET\] \[CCA\]
```

## Rail

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Rail entity provides power control to connected devices on some modules. Check the module datasheet to determine if the module has this capability.

the Rail entity controls power provided to downstream devices, it has the ability to enable and disable power, can read voltage on the rail, and provides current consumption information on some modules. There are additional capabilities that certain modules provide which enhance basic power delivery through Kelvin sensing, or by bringing online separate power management functionality.

Certain modules may provide more than one power rail. These are independently controlled and can be accessed via the entity index.

---

Rail 0 on the MTM-Load-1 module is powerful (no pun intended); it allows other devices and peripherals to provide power to the MTM-Load-1 module where it is precisely loaded. The rail is a software-adjustable constant current sink. This rail is accessed through a BrainStem rail class entity. The MTM-Load-1 module implements a subset of the BrainStem rail class for the load rail.

## Enable

All three rails can be switched on or off through using the API

```
stem.rail[index].setEnabled(state) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Rail Operational Mode

RAIL can be configured to use two different regulation stages: linear (LDO) or switch-mode power supply (SMPS)

```
stem.rail[index].setOperationalMode(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.rail[index].getOperationalMode(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

Value	Define
Hardware Mode - Bits [0-3]	
0	railOperationalModeAuto_Value
1	railOperationalModeLinear_Value
2	railOperationalModeSwitcher_Value
3	railOperationalModeSwitcherLinear_Value
Operational Mode - Bits [4-7]	
0	railOperationalConstantCurrent_Value

## Operational State

Auto configuration chooses the switch-mode power supply if an input voltage greater than 7.25V is applied, and the linear regulator otherwise. The API can be used to read the actual operational state

```
stem.rail[index].getOperationalState(state) [cpp] [python] [NET] [CCA] [REST]
```

Bits	RAIL Operational State Description
0	Initializing (railOperationalState_Initializing)
1	Enabled (railOperationalState_Enabled)
2	Fault (railOperationalState_Fault)
3-15	Reserved
8-15	Hardware Configuration (railOperationalState_HardwareConfiguration)
16	Overvoltage Fault "OV" (railOperationalStateOverVoltageFault)
17	Undervoltage Fault "UV" (railOperationalStateUnderVoltageFault)
18	Overcurrent Fault "OC" (railOperationalStateOverCurrentFault)
19	Overpower Fault "OP" (railOperationalStateOverPowerFault)
20	Reverse Polarity Fault "RV" (railOperationalStateReversePolarityFault)
21	Overtemperature Fault "OT" (railOperationalStateOverTemperatureFault)
22-23	Reserved
24-31	Operating Mode (railOperationalStateOperatingMode)

## Rail Temperature

The printed circuit board (PCB) temperature can be monitored at the 5.0V rail (RAIL0) linear regulation stage. Reading this value is possible through the API

```
stem.rail[index].getTemperature() [cpp] [python] [NET] [CCA] [REST]
```

Temperature monitoring is also used internally to prevent the power regulation stage from overheating and self-preserving the power stage. If an overtemperature condition occurs, then the MTM-IO-Serial module will disable the linear regulator until safe operating temperatures are reached.

## Rail Current Setting

The current setpoint for the rail can be configured in software from 0A to 10A. Setting values outside the allowable range will return an error (aErrRange 13). The rail will attempt to maintain the specified current through all input voltage variations once the rail is enabled with the operational mode set to constant current.

```
stem.rail[index].setCurrentSetpoint(microvolts) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.rail[index].getCurrentSetpoint(microvolts) [cpp] [python] [NET] [CCA] [REST]
```

## Rail Current Limit

The current limit for the rail can be configured in software from 0A to 12A. The rail will operate normally if the measured current is below the specified current. If the limit is crossed, the load will automatically disable the rail and set the corresponding overcurrent fault bit in the Operational State variable. If the current limit is below the current setpoint the rail will still disable itself when the current limit is exceeded

```
stem.rail[index].setCurrentLimit (microamps) [cpp] [python] [NET] [CCA] [REST]
```

## Rail Voltage Min/Max Setting

The voltage limits for the rail can be configured in software from -0.7V to 35V. The rail will operate normally between the minimum and maximum voltage limits. If the upper or lower limit is crossed, the load will automatically disable the rail and set the corresponding over/under voltage fault bit in the Operational State variable.

```
stem.rail[index].setVoltageMinLimit (microvolts) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.rail[index].setVoltageMaxLimit (microvolts) [cpp] [python] [NET] [CCA] [REST]
```

## Rail Power Limit Setting

The power limit for the rail can be configured in software from 0W to 150W. The rail will operate normally below this limit. If the limit is crossed, the load will automatically disable the rail and set the corresponding overpower fault bit in the Operational State variable.

```
stem.rail[index].setPowerLimit (milliwatts) [cpp] [python] [NET] [CCA] [REST]
```

## Store

### API Documentation: *[cpp] [python] [.NET] [CCA] [REST]*

Every BrainStem module has one or more stores. Stores are the BrainStem equivalent of a filesystem. Stores are broken up into a number of slots, each of which can be thought of as a file. A Store generally represents a specific type of storage. Flash or internal, RAM, or SD if the BrainStem includes an SD slot. The most common usage of slots and stores is for the storage of reflex code that will run on the BrainStem module. Additionally Bulk capture of Analog data can write to a slot within a store. Slots within the internal store can be set up as boot slots by setting the appropriate slot number in the system configuration. See the :doc:`System <system>` entity for more information about setting a boot slot.

The number and type of stores is Model specific. Details about the number of slots per store, and available stores can be found in the data sheets for specific models.

There are a number of commands for manipulating stores, which are detailed below. Many of the store commands are only accessible from host API's and UI applications, however commands relating to enabling reflex files in slots are accessible from the reflex language.

---

Every BrainStem module includes several Store entities and onboard memory slots.

The MTM-LOAD has store slots [0-1].



Store Slot	Storage Type
0	RAM
1	Internal

### Get Slot State

For slots which hold reflexes, this read only command returns whether the slot is currently enabled or not. 1 is enabled 0 is disabled. This command can be called from a reflex.

```
stem.store[index].getSlotState(slot) [cpp] [python] [NET] [CCA] [REST]
```

### Load/Unload Slot

This command writes a data buffer into a slot for the given store. It is only available from host side API's.

```
stem.store[index].loadSlot(slot, data, _=None) [cpp] [python] [NET] [CCA]
```

This command reads the slot in the given store into the byte buffer. The length will never be more than the max buffer size given, but may be less if the slot contents were shorter than max buffer length.

```
stem.store[index].unloadSlot(slot) [cpp] [python] [NET] [CCA]
```

### Enable/Disable Slot

This command enables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotEnable(slot) [cpp] [python] [NET] [CCA]
```

This command disables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotDisable(slot) [cpp] [python] [NET] [CCA]
```

### Slot Capacity

This command gets the maximum capacity of the given slot for the store. This command is accessible from the reflex language.

```
stem.store[index].slotCapacity(slot) [cpp] [python] [NET] [CCA]
```

## Slot Size

This command gets the current size of the data in the given slot for the store. This can be the size in bytes of the reflex byte code file, or the data size for a bulk capture.

```
stem.store[index].slotSize(slot) [cpp] [python] [NET] [CCA]
```

## System

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

## Serial Number

Every MTM-LOAD is assigned a unique serial number at the factory. This facilitates an arbitrary number of MTM-LOAD devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) [cpp] [python] [NET] [CCA] [REST]
```

## Module Default Base Address

BrainStems are designed to be able to form a reactive, extensible network. All BrainStem modules come with a default network base address for identification on the BrainStem network bus. The default module base address for MTM-LOAD is factory-set as 6, and can be accessed with.

```
stem.system.getModule(module) [cpp] [python] [NET] [CCA] [REST]
```

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the MTM-LOAD away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() [cpp] [python] [NET] [CCA] [REST]
```

Saved Configurations	
Module Software Offset	I2C Rate
Router Address	I2C Pullup State
Heartbeat Rate	Boot Slot

## Reset

Reset the system.

```
stem.system.reset() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set LED

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

```
stem.system.getLED(value) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setLED(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Boot Slot

Get the store slot which is mapped when the module boots. Set a store slot to be mapped when the module boots.

The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

```
stem.system.getBootSlot() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setBootSlot(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get Input Voltage

Get the module's input voltage.

```
stem.system.getInputVoltage() [cpp] [python] [NET] [CCA] [REST]
```

## Get Version

Get the modules firmware version number.

The version number is packed into the return value. Utility functions in the Version module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

```
stem.system.getVersion() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Module Software Offset

Set the software address offset.

The module software offset is added to the base module address, and potentially a hardware offset to determine the final calculated address the module uses on the BrainStem network. You must save and reset the module for this change to become effective.

```
stem.system.getModuleSoftwareOffset() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setModuleSoftwareOffset(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set HB Interval

Get the delay between heartbeat packets. Set the delay between heartbeat packets.

For link modules, these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments. Increments valid values are 1-255; default is 10 (256 milliseconds).

```
stem.system.getHBInterval() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setHBInterval(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Router

Get the router address the module uses to communicate with the host. Set the router address the module uses to communicate with the host.

```
stem.system.getRouter() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setRouter(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get Router Address Setting

Get the router address setting saved in the module. This setting may be different from the effective router if the router has been set and saved but no reset has been made.

```
stem.system.getRouterAddressSetting() [cpp] [python] [NET] [CCA] [REST]
```

## Get Module

Get the address the module uses on the BrainStem network.

```
stem.system.getModule() [cpp] [python] [NET] [CCA] [REST]
```

## Get Model

Get the module's model enumeration.

A subset of the possible model enumerations is defined in aProtocolDefs.h under "BrainStem model codes". Other codes are be used by Acroname for proprietary module types.

```
stem.system.getModel() [cpp] [python] [NET] [CCA] [REST]
```

## Route to Me

Enables/Disables the route to me function.

This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

```
stem.system.routeToMe(value) [cpp] [python] [NET] [CCA] [REST]
```

## Complete list of Supported Entities and Functions

Entity Class	Entity Option	Variable(s) Notes
digital[0-3]	setConfiguration	
	getConfiguration	
	setState	
	getState	
i2c[0]	write	
	read	
rail[0]	setPullup	Disabled by default.
	setCurrent	
	getCurrent	
	getCurrentSetpoint	
	setCurrentLimit	
	getCurrentLimit	
	getTemperature	
	setEnabled	
	getEnable	
	setVoltage	
	getOperationalState	
	getVoltageSetpoint	
	setVoltageMinLimit	
	getVoltageMinLimit	
	setVoltageMaxLimit	
	getVoltageMaxLimit	
	setPower	
	getPower	
	getPowerSetpoint	
	setPowerLimit	
	getPowerLimit	
	setResistance	
	getResistance	
	getResistanceSetpoint	
	setOperationalMode	
	getOperationalMode	
	getOperationalState	
	clearFaults	
store[0-1]	getSlotState	
	loadSlot	
	unloadSlot	
	slotEnable	
	slotDisable	
	slotCapacity	
system[0]	slotSize	
	Reset	
	save	
	setLED	
	getLED	
	setBootSlot	
	getBootSlot	

continues on next page

Table 33 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
	getInputVoltage	
	getVersion	
	getModuleBaseAddress	
	getModuleSoftwareOffset	
	setModuleSoftwareOffset	
	setHBInterval	
	getHBInterval	
	getRouterAddressSetting	
	getModule	
	getSerialNumber	
	setRouter	
	getRouter	
	getModel	

### 1.7.5 MTM-IO-Serial



As part of Acroname's MTM series, the MTM-IO-Serial module is a key component to manufacturing test systems for electronic devices using a standard USB 2.0 interface, serial UARTs and one or more interface voltages. The MTM-IO-Serial module features a software controlled USB hub (USB 2.0 high-speed) with four controllable channels. Each channel has switched data and 500mA current-limited power lines. With dedicated USB downstream and upstream channels, MTM-IO-Serial modules can scale with simple PCB daisy-chaining; only one cable needed to connect up to 100 devices.

The module also provides four high speed serial UART interfaces which require no specialized driver or kernel extensions.

To get up to speed with the MTM IO-Serial and quickly learn about its functionality follow the [quick start guide](#). Have a look at the [basic example](#) or dive into the [Programming interface](#) of the MTM Power Module for a more in depth view.

## Quick Start Guide

### 1. Download The Development Kit

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>26</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>27</sup> for your particular operating system and architecture.

### 2. Connect to Device

- Utilize the MTM IO Serial by either connecting to the:
  - Onboard USB connection
  - Card edge USB input
  - Through other MTM modules on the local BrainStem bus.

### 3. Run System

- Open HubTool
- On the bottom right side of the application select the MTM IO Serial device.

---

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the MTM IO Serial. For more information please take a look at our [Getting Started Guide](#)

## Basic Example

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

int main(int argc, const char * argv[]) {

    //Create an instance of a MTM-IO-SERIAL module.
    aMTMIOSerial mtm;

    //Connect to the hardware.
    err = mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
    if (err != aErrNone) {
        printf("Error %d encountered connecting to BrainStem module\n", err);
        return 1;
    } else { printf("Connected to BrainStem module.\n"); }
```

(continues on next page)

---

<sup>26</sup> <https://acroname.com/api>

<sup>27</sup> <https://acroname.com/hubtool>



(continued from previous page)

```

//Basic initialization (Get LEDs turned off).
mtm.system.setLED(0);

//Ready for testing
//Enable LED
mtm.system.setLED(1);

//Turn LED off
mtm.system.setLED(0);

//Disconnect
mtm.disconnect();
}

```

## Python

```

import brainstem
#for easy access to error constants
from brainstem.result import Result
import time
import sys

# Create an instance of a MTM-IO-SERIAL module.
mtm = brainstem.stem.MTMIOSerial();

# Locate and connect to the first object you find on MTM
result = hub.mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
if result != Result.NO_ERROR:
    print ("Error %d encountered connecting to BrainStem Module.\n" % result)
else:
    print ("Connected to BrainStem module.\n")

#Basic initialization (Get everything turned off).
mtm.system.setLED(0)

##Ready for testing
##Enable LED
mtm.system.setLED(1)

##Finished with testing.
##Turn off LED
mtm.system.setLED(0)


# Disconnect from device.
mtm.disconnect();
print("Disconnected from BrainStem module. \n")

```

## Indicators and Connections

### LEDs

The MTM-IO-Serial board has a number of LED indicators to assist with MTM system development, debugging, and monitoring. These LEDs are shown in the diagrams below.

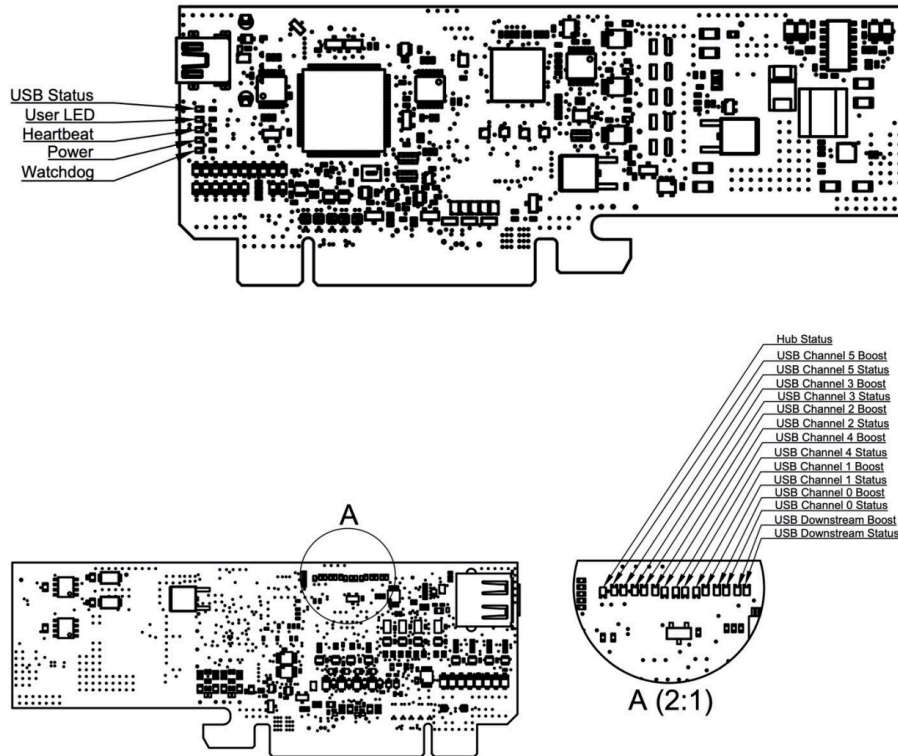

### Programming Interface

The MTM-IO-Serial is capable of many features. These features are organized into groups called *entities*. Through these entities we can access the vast features of the MTM-IO-Serial.

A complete list of all entities and functions can be found in the [Module Entities](#) page.

### Software Control

A BrainStem link can be established that will give the user access to the resources available on the MTM-IO-Serial. The module can then be controlled via a host running BrainStem APIs or operated independently by running locally embedded, user-defined programs based on Acroname's BrainStem Reflex language in the RTOS. A BrainStem link to the MTM-IO-Serial can be established via one of three (3) interfaces: the onboard USB connection, the card-edge USB connection, or through another MTM module using the BrainStem protocol (more on this interface below). For the USB connection options, once the MTM-IO-Serial is attached to a host machine, a user can connect to it via software API:

```
stem.discoverAndConnect(linkType, serialNumber)
```

The MTM-IO-Serial can also work within a network of other Brainstem modules, such as in a test fixture, to give access to the capabilities of all networked modules. On the MTM platform, networked modules communicate using the Brainstem protocol, which is transmitted over I2C. Each MTM-IO-Serial is uniquely addressable via hardware or software to avoid communication conflicts on the I2C bus.

## Upstream USB Connectivity Options

The MTM-IO-Serial supports upstream USB connections (to communicate to a host PC) via the mini-B connector, or through pins B14 and B15 of the PCIe edge connector. The module defaults to using the edge connector and will switch to the miniB connector if 5V is present on Vbus at the mini-B connector.

## MTM-IO-SERIAL Module Entities

### Digital

#### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write or manipulate a digital pin. Digital I/O capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of digital entities and details for their capacities will be described in that module's datasheet.

---

## Set/Get Configurations

Gets or Sets the digital pin configuration. Some digital entities may be single purpose functionality or can be configured for multiple behaviors depending on the hardware. Digital entities that are capable of different operating configurations can be explicitly set to operate in a desired configuration mode when possible. Defaults for most digital entities are typically as inputs, but will vary by module hardware.

```
stem.digital[index].setConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

The mode parameter is an integer that correlates to the following:

Value	Configuration
0	Input
1	Output
2	RC Servo Input
3	RC Servo Output
6	Signal Output
7	Signal Input

## Set/Get State

Gets or Sets the digital I/O Value. For gets the digital input state will be reported in a boolean fashion. Voltage threshold tolerance details for the target module will be described in the datasheet. For sets the digital output state will be asserted logic high or logic low. Voltage threshold details for the target module will be described in the datasheet.

```
stem.digital[index].setState(level) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.digital[index].getState(level) [cpp] [python] [NET] [CCA] [REST]
```

## RCServo

### API Documentation: *[cpp] [python] [.NET] [CCA] [REST]*

The RCServo entity provides a pulsed signal based on the RC servo standard. This consist of a period lasting 20ms with a high pulse between 1-2ms. The time high corresponds to a specific position determined by the servo being used. For example if you are using a 90 degree servo a 1.5ms pulse will correspond to the 45 degrees. 1ms and 2ms pulses will correspond to 0 and 90 degree positions respectively.

The RCServo entity is an overload to the [Digital Entity](#) and therefor requires proper configuration of the Digital entity before the RCServo entity can be enabled.

---

The MTM-IO-SERIAL board is equipped with 4 RC servo inputs and 4 RC servo outputs. The RC Servo entity is an overload of the Digital Entity and thus requires proper configuration before this entity can be enabled.

With the RC servo entity, digital output pins generate pulsed signal based on the RC Servo standard consisting of a period lasting 20ms and high pulse time between 1-2ms. The high time corresponds to a specific position determined by the specific servo being used. RC servo inputs, measure this high time and return the corresponding position for a servo.

## Set Configuration

The table below aligns the Digital entities and the RCServo entities for configurations

digital[0]	servo[0]	Pin 0	RCServo Input
digital[1]	servo[1]	Pin 1	RCServo Input
digital[2]	servo[2]	Pin 2	RCServo Input
digital[3]	servo[3]	Pin 3	RCServo Input
digital[4]	servo[4]	Pin 4	RCServo Output
digital[5]	servo[5]	Pin 5	RCServo Output
digital[6]	servo[6]	Pin 6	RCServo Output
digital[7]	servo[7]	Pin 7	RCServo Output

```
stem.digital[index].setConfiguration(digitalConfigurationSignalInput) [cpp]
[python] [NET] [CCA] [REST]
```

## Get/Set Enable

This functions gets/sets the RCServo function for a given pin (pending, it has been properly configured in the digital entity). At a firmware level this enables/disables the timers.

```
stem.servo[index].setEnabled(bEnable) [cpp] [python] [NET] [CCA] [REST]
stem.servo[index].getEnable() [cpp] [python] [NET] [CCA] GET /api/v1/brainstem/
(serial_num)/servo/(index)/enable
```

## Get/Set Position

This functions gets/sets the RCServo position. For outputs this will return the currently set position; however, for inputs it will return the value seen at the pin pending the pulse is valid. If the pulse or period are invalid a zero will be returned along with the error code aErrRange. Only index 4-7.

```
stem.servo[index].setPosition(position) [cpp] [python] [NET] [CCA] [REST]
stem.servo[index].getPosition() [cpp] [python] [NET] [CCA] GET /api/v1/brainstem/
(serial_num)/servo/(index)/position
```

## Get/Set Reverse

This functions gets/sets the reverse (invert) option in the RCServo Class. Only index 4-7.

```
stem.servo[index].setReverse(reverse) [cpp] [python] [NET] [CCA] [REST]
stem.servo[index].getReverse() [cpp] [python] [NET] [CCA] GET /api/v1/brainstem/
(serial_num)/servo/(index)/reverse
```

## I2C

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write data on up to two I<sup>2</sup>C busses

---

### Read/Write Data

BrainStem modules may have the ability to read, write data on up to 2 I2C bus's. The MTM-IO-SERIAL includes access to a single I2C bus operating at a set 1Mbit/s rate.

---

**Note:** *The 1Mbit/s bus, while user-accessible, is also used for BrainStem network communication so there may be other, non-user-initiated traffic when other BrainStem modules are linked.*

---

```
stem.i2c[index].read(address,length) \[cpp\] \[python\] \[NET\] \[CCA\]
```

```
stem.i2c[index].write(address,length) \[cpp\] \[python\] \[NET\] \[CCA\]
```

The maximum data size for individual read and write operations on an I2C bus through the BrainStem API is 20 bytes. Sending more than 20 bytes of information must be done as an iterated sequence.

### Pullup

Each I2C bus also includes 330Ω pull-up resistors on the SDA and SCL lines, disabled by default. When using the MTM-IO-SERIAL in a linked system (communicating over the 1Mbit/s bus), only a single set of pull-ups along the bus should be enabled in order for the I2C bus to work properly (if more than one set is enabled, the lines cannot be pulled low for communication). Similarly, when using a single MTM device to communicate with an external device over the I2C bus, either the internal pull-ups can be enabled, or external hardware pull-ups added.

```
stem.i2c[index].setPullup(bEnable) \[cpp\] \[python\] \[NET\] \[CCA\]
```

## USB

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The USB Entity provides the software control interface for USB related features. This entity is supported by BrainStem products which have programmatically controlled USB features.

---

The usb entity manages the software-controllable downstream USB 2.0 channels of the MTM-IO-Serial (there are also two non-software-controllable USB channels on the module, one through the edge connector and the other through the onboard type-A connector, which are always on), as well as the upstream USB connection mode. All downstream USB ports are configured as SDP (Standard Data Port).

## Downstream

Each of the four software-controllable USB channels (ports 0-3) can be individually manipulated using the usb entity. The API individually controls port power, data, or both together

### Power

```
stem.usb.setPowerEnable(port) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPowerDisable(port) [cpp] [python] [NET] [CCA] [REST]
```

### Data

```
stem.usb.setDataEnable(port) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setDataDisable(port) [cpp] [python] [NET] [CCA] [REST]
```

### Port

```
stem.usb.setPortEnable(port) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setPortDisable(port) [cpp] [python] [NET] [CCA] [REST]
```

## Upstream Mode

The MTM-IO-Serial has two (2) upstream USB connection options: through the edge connector or via the mini-B connector on the board itself. The upstream mode can be set or read using the usb entity

```
stem.usb.setUpstreamMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getUpstreamMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

The mode parameter is an integer that correlates to the following:

Mode	Result
0	Edge Connector
1	Mini-B Connector
2	Auto

Auto configuration chooses the upstream connection based on the presence or absence of VBUS power at the mini-B connector; if VBUS is present, the mini-B connector is used, otherwise the edge connector is used.

## Upstream State

Gets the upstream switch state for the USB upstream ports. Returns none if no ports are plugged in, port 0 if the mode is set correctly and a cable is plugged into port 0, and port 1 if the mode is set correctly and a cable is plugged into port 1

```
stem.usb.getUpstreamState() [cpp] [python] [NET] [CCA] [REST]
```

## Hub Mode

In addition to targeting individual downstream USB ports, a bit-mapped hub state interface is also available. This interface allows the reading or setting of all USB downstream ports in one functional call

```
stem.usb.setHubMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.getHubMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

Bit	Hub Operational Mode Result Bitwise Description
0	USB Channel 0 USB Hi Speed Data Enabled
1	USB Channel 0 USB VBUS Enabled
2	USB Channel 1 USB Hi Speed Data Enabled
3	USB Channel 1 USB VBUS Enabled
4	USB Channel 2 USB Hi Speed Data Enabled
5	USB Channel 2 USB VBUS Enabled
6	USB Channel 3 USB Hi Speed Data Enabled
7	USB Channel 3 USB VBUS Enabled
8:31	Reserved

## Port State

Each downstream port reports information regarding its operating state represented in bit-packed results from

```
stem.usb.getPortState(mode) [cpp] [python] [NET] [CCA] [REST]
```

where channel can be [0-3], and the value status is 32-bit word, defined as the following:

Bit	Port State Result Bitwise Description
0	USB VBUS Enabled
1	USB2 Data Enabled
2:18	Reserved
19	USB Error Flag
20	USB2 Boost Enabled
21:31	Reserved



## Hi-Speed Data

Enables or Disables Hi Speed data only for given downstream channel. This call enables or disables the usb data (+) and data (-) lines for the given channel.

```
stem.usb.setHiSpeedDataEnable(port) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.usb.setHiSpeedDataDisable(port) [cpp] [python] [NET] [CCA] [REST]
```

## Hub and Port Error Status

Errors can be cleared on each individual channel (0, 1, 2 or 3) by calling the following method:

```
stem.usb.getPortError(channel) [cpp] [python] [NET] [CCA] [REST]
```

Details about the hub error status 32-bit word are as follows:

Bit	Hub Error Status Result Bitwise Description
0	USB CH0 overcurrent limit exceeded[1]
1	USB CH0 VBUS back drive[2]
2	USB CH0 hub power system failure
3	USB CH0 VBUS discharge[3]
4:7	Reserved
8	USB CH1 overcurrent limit exceeded4
9	USB CH1 VBUS back drive5
10	USB CH1 hub power system failure
11	USB CH1 VBUS discharge6
12:15	Reserved
16	USB CH2 overcurrent limit exceeded4
17	USB CH2 VBUS back drive5
18	USB CH2 hub power system failure
19	USB CH2 VBUS discharge6
20:23	Reserved
24	USB CH3 overcurrent limit exceeded
25	USB CH3 VBUS back drive5
26	USB CH3 hub power system failure
27	USB CH3 VBUS discharge6
28:31:00	Reserved
[1] Current limit value is defined by API settings section on USB Downstream Channels.	
[2] VBUS exceeds 5.150V for longer than 5ms.	
[3] VBUS discharge circuitry is activated. At the end of the 200ms the hub will confirm that VBUS was discharged if the VBUS voltage is not below 0.750V.	

To clear a Port error status

```
stem.usb.clearPortErrorStatus(channel) [cpp] [python] [NET] [CCA] [REST]
```

## UART

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The UART entity is a class which allows a user to configure and control an arbitrary stream of serial data. These streams can represent a number of different transports, including a RS232 external interface, a virtual COM port, and onboard UART interfaces from system components. This entity allows each transport to be configured as either an endpoint, or as a passthrough between transports, similar to a switchboard of a telephone operator.


UART entities provide a mechanism to enable and disable UART data lines. All the UARTs that are passed down from the MTM-IO-Serial module can be turned on/off through software control. If a voltage is applied that is higher than the current rail voltage setpoint, each UART transmit line is current limited to 20mA sinking. Therefore, only a small amount of current will flow into the device, preventing any damage to the MTM-IO-SERIAL module's hardware

### Get/Set Enable

This command enables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.uart[index].setEnabled(bEnable) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.uart[index].getEnable() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

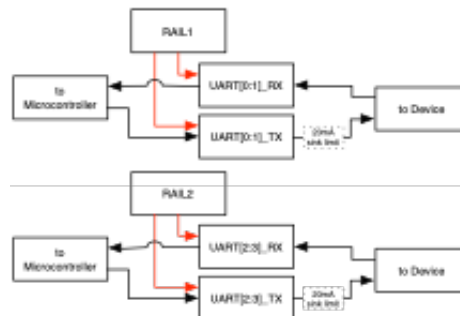

## Rail

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Rail entity provides power control to connected devices on some modules. Check the module datasheet to determine if the module has this capability.

the Rail entity controls power provided to downstream devices, it has the ability to enable and disable power, can read voltage on the rail, and provides current consumption information on some modules. There are additional capabilities that certain modules provide which enhance basic power delivery through Kelvin sensing, or by bringing online separate power management functionality.

Certain modules may provide more than one power rail. These are independently controlled and can be accessed via the entity index.

Rails allow other devices and peripherals to consume power from the MTM-IO-SERIAL module in a controlled fashion. Three (3) different rails are available for use in a variety of application: a single fixed 5.0V rail (RAIL0)

and 2 adjustable voltage rails (RAIL1, RAIL2). These rails are accessed through an array of BrainStem rail class entities. The MTM-IO-SERIAL module implements a subset of the BrainStem rail class for each of these rails. The implemented rail entity options for each entity index are summarized below.

## Enable

All three rails can be switched on or off through using the API

```
stem.rail[index].setEnabled(state) [cpp] [python] [NET] [CCA] [REST]
```

## Rail0 Operational Mode

RAIL0 can be configured to use two different regulation stages: linear (LDO) or switch-mode power supply (SMPS)

```
stem.rail[index].setOperationalMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.rail[index].getOperationalMode(mode) [cpp] [python] [NET] [CCA] [REST]
```

Mode	Result
0	Auto
1	Linear
2	Switcher

## Operational State

Auto configuration chooses the switch-mode power supply if an input voltage greater than 7.25V is applied, and the linear regulator otherwise. The API can be used to read the actual operational state

```
stem.rail[index].getOperationalState(state) [cpp] [python] [NET] [CCA] [REST]
```

State	Result
0	Linear
1	Switcher

## Rail0 Temperature

The printed circuit board (PCB) temperature can be monitored at the 5.0V rail (RAIL0) linear regulation stage. Reading this value is possible through the API

```
stem.rail[index].getTemperature() [cpp] [python] [NET] [CCA] [REST]
```

Temperature monitoring is also used internally to prevent the power regulation stage from overheating and self-preserving the power stage. If an overtemperature condition occurs, then the MTM-IO-Serial module will disable the linear regulator until safe operating temperatures are reached.

## Rail1 and Rail2 Voltage Setting

RAIL1 and RAIL2 always use linear regulators to generate their adjustable voltages. They can be set or read using the API

```
stem.rail[index].setVoltageSetpoint(microvolts) [cpp] [python] [NET] [CCA] [REST]
stem.rail[index].getVoltageSetpoint(microvolts) [cpp] [python] [NET] [CCA] [REST]
```

## Rail Voltage

Getting the rail voltage from any of the rails can be used by implementing

```
stem.rail[index].getVoltage(microvolts) [cpp] [python] [NET] [CCA] [REST]
```

## Rail Protection

Each rail is current limited in hardware to 100mA and will operate in constant-current mode upon reaching 100mA. Extended operation in constant-current mode is discouraged and may result in thermal shutdown of the rail.

Each rail is automatically disconnected when an overvoltage condition is detected and automatically reconnected if the overvoltage condition ceases. Overvoltage detection is implemented in hardware and based on the rail's voltage setpoint.

## Signal

**API Documentation:** [cpp] [python] [.NET] [CCA] [REST]

SignalClass. Interface to digital pins configured to produce square wave signals. This class is designed to allow for square waves at various frequencies and duty cycles. Control is defined by specifying the wave period as (T3Time) and the active portion of the cycle as (T2Time). See the entity overview section of the reference for more detail regarding the timing.

Signal entity to Digital entity mapping varies from device to device. Please refer to the datasheet.

---

The MTM-IO-SERIAL board has 5 Signal Input and 4 Signal outputs. The Signal entity allows you to generate square waves by supplying a period and a time high value. The Signal inputs can also be used as counters. The Signal entity is an overload of the Digital entity and must first be properly configured before it can be enabled.

## Set Configurations

The configurations for the signal inputs are found in the table below.

```
stem.digital[index].setConfiguration(digitalConfigurationSignalInput) [cpp]
[python] [NET] [CCA] [REST]
```

Pin	Input	Output	Rail	Hi-Z	Servo	Signal
DIO 0	Yes	Yes	1	No	Input	Input
DIO 1	Yes	Yes	1	No	Input	Input / Out- put
DIO 2	Yes	Yes	1	No	Input	Input / Out- put
DIO 3	Yes	Yes	1	No	Input	Input / Out- put
DIO 4	Yes	Yes	2	No	Output	Input / Out- put
DIO 5	Yes	Yes	2	No	Output	.
DIO 6	Yes	Yes	2	No	Output	.
DIO 7	Yes	Yes	2	No	Output	.

---

### Get/Set Enable

```
stem.signal[index].setEnabled(bEnable) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.signal[index].getEnable() [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set T3 Time

The T3 time defines the period of the waveform in nano seconds.

```
stem.signal[index].setT3Time(period) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.signal[index].getT3Time() [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set T2 Time

The T2 time defines the high period of the waveform in nano seconds.

```
stem.signal[index].setT2Time(timeHigh) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.signal[index].getT2Time() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Invert

Inverts the meaning of the T2 time. When inverted the T2 time will represent the time in nano seconds that the waveform is low.

```
stem.signal[index].setInvert() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.signal[index].getInvert() [cpp] [python] [NET] [CCA] [REST]
```

## Store

### API Documentation: [cpp] [python] [NET] [CCA] [REST]

Every BrainStem module has one or more stores. Stores are the BrainStem equivalent of a filesystem. Stores are broken up into a number of slots, each of which can be thought of as a file. A Store generally represents a specific type of storage. Flash or internal, RAM, or SD if the BrainStem includes an SD slot. The most common usage of slots and stores is for the storage of reflex code that will run on the BrainStem module. Additionally Bulk capture of Analog data can write to a slot within a store. Slots within the internal store can be set up as boot slots by setting the appropriate slot number in the system configuration. See the :doc:`System <system>` entity for more information about setting a boot slot.

The number and type of stores is Model specific. Details about the number of slots per store, and available stores can be found in the data sheets for specific models.

There are a number of commands for manipulating stores, which are detailed below. Many of the store commands are only accessible from host API's and UI applications, however commands relating to enabling reflex files in slots are accessible from the reflex language.

---

Every BrainStem module includes several Store entities and onboard memory slots.

The MTM-IO-SERIAL has store slots [0-1].

Store Slot	Storage Type
0	RAM
1	Internal

## Get Slot State

For slots which hold reflexes, this read only command returns whether the slot is currently enabled or not. 1 is enabled 0 is disabled. This command can be called from a reflex.

```
stem.store[index].getSlotState(slot) [cpp] [python] [NET] [CCA] [REST]
```

### Load/Unload Slot

This command writes a data buffer into a slot for the given store. It is only available from host side API's.

```
stem.store[index].loadSlot(slot, data, _=None) [cpp] [python] [NET] [CCA]
```

This command reads the slot in the given store into the byte buffer. The length will never be more than the max buffer size given, but may be less if the slot contents were shorter than max buffer length.

```
stem.store[index].unloadSlot(slot) [cpp] [python] [NET] [CCA]
```

### Enable/Disable Slot

This command enables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotEnable(slot) [cpp] [python] [NET] [CCA]
```

This command disables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotDisable(slot) [cpp] [python] [NET] [CCA]
```

### Slot Capacity

This command gets the maximum capacity of the given slot for the store. This command is accessible from the reflex language.

```
stem.store[index].slotCapacity(slot) [cpp] [python] [NET] [CCA]
```

### Slot Size

This command gets the current size of the data in the given slot for the store. This can be the size in bytes of the reflex byte code file, or the data size for a bulk capture.

```
stem.store[index].slotSize(slot) [cpp] [python] [NET] [CCA]
```

## System

### API Documentation: [cpp] [python] [.NET] [CCA] [REST]

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---



## Serial Number

Every MTM-IO-SERIAL is assigned a unique serial number at the factory. This facilitates an arbitrary number of MTM-IO-SERIAL devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) [cpp] [python] [NET] [CCA] [REST]
```

## Module Default Base Address

BrainStems are designed to be able to form a reactive, extensible network. All BrainStem modules come with a default network base address for identification on the BrainStem network bus. The default module base address for MTM-IO-SERIAL is factory-set as 6, and can be accessed with.

```
stem.system.getModule(module) [cpp] [python] [NET] [CCA] [REST]
```

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the MTM-IO-SERIAL away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() [cpp] [python] [NET] [CCA] [REST]
```

Saved Configurations	
Module Software Offset	I2C Rate
Router Address	I2C Pullup State
Heartbeat Rate	Boot Slot

## Reset

Reset the system.

```
stem.system.reset() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set LED

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

```
stem.system.getLED(value) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setLED(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Boot Slot

Get the store slot which is mapped when the module boots. Set a store slot to be mapped when the module boots.

The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

```
stem.system.getBootSlot() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setBootSlot(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get Input Voltage

Get the module's input voltage.

```
stem.system.getInputVoltage() [cpp] [python] [NET] [CCA] [REST]
```

## Get Version

Get the modules firmware version number.

The version number is packed into the return value. Utility functions in the Version module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

```
stem.system.getVersion() [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set Module Software Offset

Set the software address offset.

The module software offset is added to the base module address, and potentially a hardware offset to determine the final calculated address the module uses on the BrainStem network. You must save and reset the module for this change to become effective.

```
stem.system.getModuleSoftwareOffset() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setModuleSoftwareOffset(value) [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set HB Interval

Get the delay between heartbeat packets. Set the delay between heartbeat packets.

For link modules, these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments. Increments valid values are 1-255; default is 10 (256 milliseconds).

```
stem.system.getHBInterval() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setHBInterval(value) [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set Router

Get the router address the module uses to communicate with the host. Set the router address the module uses to communicate with the host.

```
stem.system.getRouter() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setRouter(value) [cpp] [python] [NET] [CCA] [REST]
```

### Get Router Address Setting

Get the router address setting saved in the module. This setting may be different from the effective router if the router has been set and saved but no reset has been made.

```
stem.system.getRouterAddressSetting() [cpp] [python] [NET] [CCA] [REST]
```

## Get Module

Get the address the module uses on the BrainStem network.

```
stem.system.getModule() [cpp] [python] [NET] [CCA] [REST]
```

## Get Model

Get the module's model enumeration.

A subset of the possible model enumerations is defined in aProtocolDefs.h under "BrainStem model codes". Other codes are be used by Acroname for proprietary module types.

```
stem.system.getModel() [cpp] [python] [NET] [CCA] [REST]
```

## Route to Me

Enables/Disables the route to me function.

This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

```
stem.system.routeToMe(value) [cpp] [python] [NET] [CCA] [REST]
```

## Complete list of Supported Entities and Functions

Entity Class	Entity Option	Variable(s) Notes
digital[0-7]	setConfiguration	
	getConfiguration	
	setState	
	getState	
rcservo[0-7]	setEnabled	
	getEnable	
	setPosition	Index 4-7 only
	getPosition	
	setReverse	Index 4-7 only
	getReverse	
i2c[0]	write	
	read	
usb[0]	setPortEnable	
	setPortDisable	
	setDataEnable	
	setDataDisable	
	setHiSpeedDataEnable	

continues on next page

Table 34 – continued from previous page


Entity Class	Entity Option	Variable(s) Notes
	setHiSpeedDataDisable	
	setPowerEnable	
	setPowerDisable	
	getPortError	
	clearPortErrorStatus	
	getSystemTemperature	In microcelsius
	setUpstreamMode	
	getUpstreamMode	
	getUpstreamState	
	getDownstreamDataSpeed	
	getHubMode	
	setHubMode	
	getPortState	
UART[0-3]	setEnabled	
	getEnable	
rail[0]	setEnabled	
	getEnable	
	getTemperature	In microcelsius
	setOperationalMode	
	getOperationalMode	
	getOperationalState	
	getVoltage	In microvolts
rail[1-2]	setEnabled	
	getEnable	
	setVoltageSetpoint	In microvolts
	getVoltageSetpoint	In microvolts
	getVoltage	In microvolts
signal[0-5]	setEnabled	
	getEnable	
	setInvert	
	getInvert	
	setT3Time	
	getT3Time	
	setT2Time	
	getT2Time	
store[0-1]	getSlotState	
	loadSlot	
	unloadSlot	
	slotEnable	
	slotDisable	
	slotCapacity	
	slotSize	
system[0]	save	
	reset	
	setLED	
	getLED	
	setSleep	
	setBootSlot	
	getBootSlot	

continues on next page

Table 34 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
	getInputVoltage	
	getVersion	
	getModuleBaseAddress	
	getModuleSoftwareOffset	
	setModuleSoftwareOffset	
	getModuleHardwareOffset	
	setHBInterval	
	getHBInterval	
	getRouterAddressSetting	
	getModule	
	getSerialNumber	
	setRouter	
	getRouter	
	getModel	
	routeToMe	
port[0-3]	getEnabled	
	setEnabled	
	getDataEnabled	
	setDataEnabled	
	getDataHSEnabled	
	setDataHSEnabled	
	getPowerEnabled	
	setPowerEnabled	
	getName	
	setName	
	getDataRole	
	getErrors	
port[4]	getDataRole	
USBSysstem [0]	getUpstream	
	setUpstream	
	setDataRoleBehavior	
	getDataRoleBehavior	

## 1.7.6 MTM-EtherStem

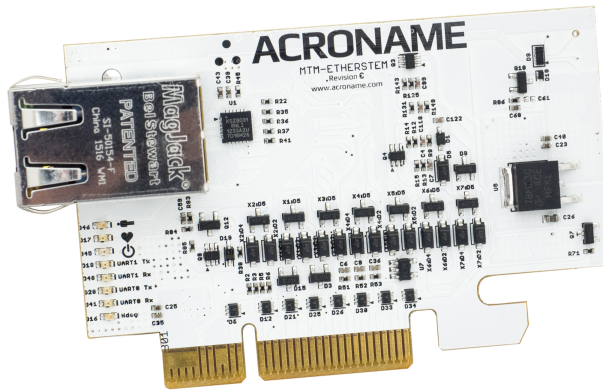

The MTM EtherStem is a BrainStem link module and part of Acroname's Manufacturing Test Module (MTM) system. It allows a TCP/IP based Ethernet connection to a host PC which may be used for test direction, control and data collection. It may also be used to load reflex programs to MTM or BrainStem modules for PC-free operation.

This module provides a TCP/IP Ethernet link to a host PC or network for test automation control and data collection. Using this link and the BrainStem API, any host based application can interact with a device under test, other MTM module(s), test station hardware and custom peripherals, as well as log and store data from a test.

To get up to speed with the MTM EtherStem and quickly learn about its functionality follow the [quick start guide](#). Have a look at the [basic example](#) or dive into the [Programming interface](#) of the MTM Power Module for a more in depth view.

### Quick Start Guide

#### 1. Download The Development Kit

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>28</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>29</sup> for your particular operating system and architecture.

<sup>28</sup> <https://acroname.com/api>

<sup>29</sup> <https://acroname.com/hubtool>

## 2. Connect to Device

- Utilize the MTM EtherStem by either connecting to the:
  - Onboard USB connection
  - Card edge USB input
  - Through other MTM modules on the local BrainStem bus.

## 3. Run System

- Open HubTool
- On the bottom right side of the application select the MTM EtherStem device.

---

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the MTM EtherStem. For more information please take a look at our [Getting Started Guide](#)

## Basic Example

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

int main(int argc, const char * argv[]) {

    //Create an instance of a MTM-ETHERSTEM module.
    aMTMEtherStem mtm;

    //Connect to the hardware.
    err = mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
    if (err != aErrNone) {
        printf("Error %d encountered connecting to BrainStem module\n", err);
        return 1;
    } else { printf("Connected to BrainStem module.\n"); }

    //Basic initialization (Get LEDs turned off).
    mtm.system.setLED(0);

    //Ready for testing
    //Enable LED
    mtm.system.setLED(1);

    //Turn LED off
    mtm.system.setLED(0);

    //Disconnect
    mtm.disconnect();
}
```



## Python

```

import brainstem
#for easy access to error constants
from brainstem.result import Result
import time
import sys

# Create an instance of a MTM-ETHERSTEM module.
mtm = brainstem.stem.MTMEtherStem();

# Locate and connect to the first object you find on MTM
result = hub.mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
if result != Result.NO_ERROR:
    print ("Error %d encountered connecting to BrainStem Module.\n" % result)
else:
    print ("Connected to BrainStem module.\n")

#Basic initialization (Get everything turned off).
mtm.system.setLED(0)

##Ready for testing
##Enable LED
mtm.system.setLED(1)

##Finished with testing.
##Turn off LED
mtm.system.setLED(0)


# Disconnect from device.
mtm.disconnect();
print("Disconnected from BrainStem module. \n")

```

## Indicators and Connections

## LEDs

The MTM-EtherStem board has a number of LED indicators to assist with MTM system development, debugging, and monitoring. These LEDs are shown in the diagrams below

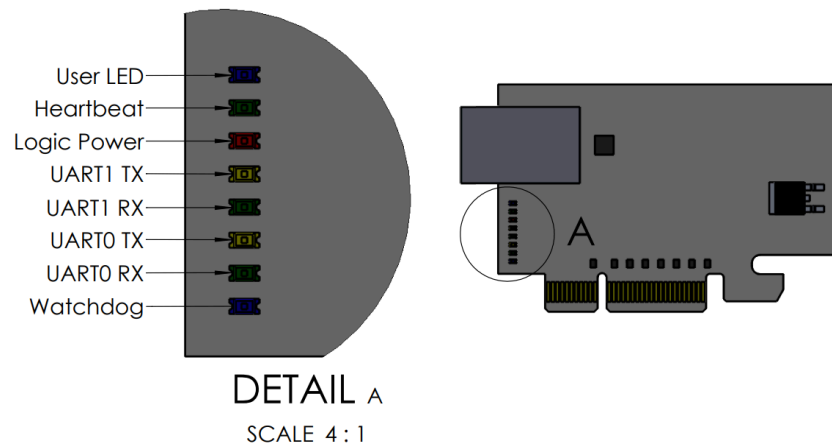

## Programming Interface

The MTM-USBetherStem is capable of many features. These features are organized into groups called *entities*. Through these entities we can access the vast features of the MTM-USBetherStem.

A complete list of all entities and functions can be found in the [Module Entities](#) page.

---

## Software Control

A BrainStem link can be established that will give the user access to the resources available on the MTM-USBetherStem. The module can then be controlled via a host running BrainStem APIs or operated independently by running locally embedded, user-defined programs based on Acroname's BrainStem Reflex language in the RTOS. A BrainStem link to the MTM-USBetherStem can be established via one of three (3) interfaces: the onboard USB connection, the card-edge USB connection, or through another MTM module using the BrainStem protocol (more on this interface below). For the USB connection options, once the MTM-USBetherStem is attached to a host machine, a user can connect to it via software API:

```
stem.discoverAndConnect(linkType, serialNumber)
```

The MTM-USBetherStem can also work within a network of other Brainstem modules, such as in a test fixture, to give access to the capabilities of all networked modules. On the MTM platform, networked modules communicate using the Brainstem protocol, which is transmitted over I2C. Each MTM-USBetherStem is uniquely addressable via hardware or software to avoid communication conflicts on the I2C bus.

## Link and TCP/IP Settings

The MTM-USBetherStem supports host computer connections over its Ethernet jack via TCP/IP sockets. The MTM-USBetherStem is designed to interact on the local network segment only. Typical setup is a direct Ethernet connection between a host test machine and the MTM-EtherStem. The host can run a DHCP server to provide an IP address to the module or, without a DHCP server, the MTM-USBetherStem will fall back to a static IP address of 192.168.44.42/24 when it does not receive a response to DHCP requests. In the fallback IP configuration, manually configuring the host machine interface to communicate on this subnet will enable communication to the module.

The module features a limited DHCP client which will not function across a network bridge or other gateway mechanism. The MTM-USBetherStem will respond to ICMP "ping" requests including broadcast requests. The brainstem API interface performs a discovery process prior to establishing communication with the MTM-EtherStem. Brainstem discovery over IP is accomplished using a UDP multicast request on port 9888, and a response on the stem to the host UDP port 9889. The MTM-USBetherStem listens for socket connections on TCP port 8000. Firewall rules will need to be configured allowing the outgoing multicast request on 9888 and incoming response on 9889, as well as outgoing socket TCP connections to port 8000.

## MTM-ETHERSTEM Module Entities

### Digital

#### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write or manipulate a digital pin. Digital I/O capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of digital entities and details for their capacities will be described in that module's datasheet.

### Set/Get Configurations

Gets or Sets the digital pin configuration. Some digital entities may be single purpose functionality or can be configured for multiple behaviors depending on the hardware. Digital entities that are capable of different operating configurations can be explicitly set to operate in a desired configuration mode when possible. Defaults for most digital entities are typically as inputs, but will vary by module hardware.

```
stem.digital[index].setConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

The mode parameter is an integer that correlates to the following:

Value	Configuration
0	Input
1	Output
2	RC Servo Input
3	RC Servo Output
4	Hi Impedance (Hi-Z)
5	Input with Pull Down

### Set/Get State

Gets or Sets the digital I/O Value. For gets the digital input state will be reported in a boolean fashion. Voltage threshold tolerance details for the target module will be described in the datasheet. For sets the digital output state will be asserted logic high or logic low. Voltage threshold details for the target module will be described in the datasheet.

```
stem.digital[index].setState(level) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getState(level) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

If a digital pin is configured in Hi-Z mode its internal circuitry has been disconnected to create a high impedance. There are no functions that can act on this configuration

Pin	Input	Output	Hi-Z	RCServo
DIO 0	Yes	Yes	Yes	Input
DIO 1	Yes	Yes	Yes	Input
DIO 2	Yes	Yes	Yes	Input
DIO 3	Yes	Yes	Yes	Input
DIO 4	Yes	Yes	Yes	Output
DIO 5	Yes	Yes	Yes	Output
DIO 6	Yes	Yes	Yes	Output
DIO 7	Yes	Yes	Yes	Output
DIO 8	Yes	Yes	Yes	.
DIO 9	Yes	Yes	Yes	.
DIO 10	Yes	Yes	Yes	.
DIO 11	Yes	Yes	Yes	.
DIO 12	Yes	Yes	Yes	.
DIO 13	Yes	Yes	Yes	.
DIO 14	Yes	Yes	Yes	.

## RCServo

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The RCServo entity provides a pulsed signal based on the RC servo standard. This consist of a period lasting 20ms with a high pulse between 1-2ms. The time high corresponds to a specific position determined by the servo being used. For example if you are using a 90 degree servo a 1.5ms pulse will correspond to the 45 degrees. 1ms and 2ms pulses will correspond to 0 and 90 degree positions respectively.

The RCServo entity is an overload to the [Digital Entity](#) and therefor requires proper configuration of the Digital entity before the RCServo entity can be enabled.

The MTM-ETHERSTEM board is equipped with 4 RC servo inputs and 4 RC servo outputs. The RC Servo entity is an overload of the Digital Entity and thus requires proper configuration before this entity can be enabled.

With the RC servo entity, digital output pins generate pulsed signal based on the RC Servo standard consisting of a period lasting 20ms and high pulse time between 1-2ms. The high time corresponds to a specific position determined by the specific servo being used. RC servo inputs, measure this high time and return the corresponding position for a servo.

## Get/Set Enable

This functions gets/sets the RCServo function for a given pin (pending, it has been properly configured in the digital entity). At a firmware level this enables/disables the timers.

```
stem.servo[index].setEnabled(bEnable) [cpp] [python] [NET] [CCA] [REST]
stem.servo[index].getEnable() [cpp] [python] [NET] [CCA] GET /api/v1/brainstem/
(serial_num)/servo/(index)/enable
```

## Get/Set Position

This functions gets/sets the RCServo position. For outputs this will return the currently set position; however, for inputs it will return the value seen at the pin pending the pulse is valid. If the pulse or period are invalid a zero will be returned along with the error code aErrRange. Only index 4-7.

```
stem.servo[index].setPosition(position) [cpp] [python] [NET] [CCA] [REST]
stem.servo[index].getPosition() [cpp] [python] [NET] [CCA] GET /api/v1/brainstem/
(serial_num)/servo/(index)/position
```

## Get/Set Reverse

This functions gets/sets the reverse (invert) option in the RCServo Class. Only index 4-7.

```
stem.servo[index].setReverse(reverse) [cpp] [python] [NET] [CCA] [REST]
stem.servo[index].getReverse() [cpp] [python] [NET] [CCA] GET /api/v1/brainstem/
(serial_num)/servo/(index)/reverse
```

## I2C

### API Documentation: [cpp] [python] [.NET] [CCA] [REST]

BrainStem modules may have the ability to read, write data on up to two I<sup>2</sup>C busses

---

## Read/Write Data

BrainStem modules may have the ability to read, write data on up to 2 I2C bus's. The MTM-ETHERSTEM includes access to a single I2C bus operating at a set 1Mbit/s rate.

---

**Note:** *The 1Mbit/s bus, while user-accessible, is also used for BrainStem network communication so there may be other, non-user-initiated traffic when other BrainStem modules are linked.*

---

```
stem.i2c[index].read(address,length) [cpp] [python] [NET] [CCA]
stem.i2c[index].write(address,length) [cpp] [python] [NET] [CCA]
```

The maximum data size for individual read and write operations on an I2C bus through the BrainStem API is 20 bytes. Sending more than 20 bytes of information must be done as an iterated sequence.

## Pullup

Each I2C bus also includes 330Ω pull-up resistors on the SDA and SCL lines, disabled by default. When using the MTM-ETHERSTEM in a linked system (communicating over the 1Mbit/s bus), only a single set of pull-ups along the bus should be enabled in order for the I2C bus to work properly (if more than one set is enabled, the lines cannot be pulled low for communication). Similarly, when using a single MTM device to communicate with an external device over the I2C bus, either the internal pull-ups can be enabled, or external hardware pull-ups added.

```
stem.i2c[index].setPullup(bEnable) [cpp] [python] [NET] [CCA]
```

## Analog

### API Documentation: [cpp] [python] [.NET] [CCA] [REST]

BrainStem modules may have the ability to read an analog voltage (ADC) and convert this into a discrete digitized value or output a voltage value based on a desired discrete value (DAC). Analog voltage capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of analog entities and details for their capacities will be described in that module's datasheet.

---

## Initiate Bulk Capture

The system can capture any number of samples up the size of the RAM\_STORE slot 0 (8191). The capture is then triggered with

```
stem.analog[index].initiateBulkCapture() [cpp] [python] [NET] [CCA] [REST]
```

Results of the capture are stored in the RAM\_STORE slot 0. Results are always stored in ADC counts as two little-endian byte pairs with the second byte the most significant. Computing a sample value from the Store read out is:

## Get/Set Bulk Capture Sample Rate and Number of Samples

The MTM-EtherStem's ADC's are also capable of being captured in bulk based on a user defined sample rate. For additional information on sample rate settings. Configuring and triggering the bulk capture is accomplished by setting the number of samples and the sample rate, then triggering the capture.

To set the number of samples and the sample rate

```
stem.analog[index].setBulkCaptureSampleRate() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].getBulkCaptureSampleRate() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].setBulkCaptureNumberOfSamples() [cpp] [python] [NET] [CCA]  
[REST]
```

```
stem.analog[index].getBulkCaptureNumberOfSamples() [cpp] [python] [NET] [CCA]  
[REST]
```

## Get Bulk Capture State

```
stem.analog[index].getBulkCaptureState() [cpp] [python] [NET] [CCA] [REST]
```

## Get Voltage/Value

A BrainStem's A2D reading will always return a 16 bit value. If the module hardware does not have full 16 bit wide analog to digital conversion capabilities, the measurement will get propagated up to 16 bits wide.

For example, if a 12-bit A2D engine exists in the target module's hardware, the reading will get promoted in the firmware layer by shifting up 4 bits to fill out the 16 bit value ( $0x0FFF \ll 4 = 0xFFF0$ ) in the module's firmware. This approach allows more portable API code to be generated independent of the target hardware.

setValue and setVoltage is only applicable for Analog[3]:

```
stem.analog[index].setValue() [cpp] [python] [NET] [CCA] [REST]
stem.analog[index].getValue() [cpp] [python] [NET] [CCA] [REST]
stem.analog[index].setVoltage(microvolts) [cpp] [python] [NET] [CCA] [REST]
stem.analog[index].getVoltage() [cpp] [python] [NET] [CCA] [REST]
```

## Signal

### API Documentation: [cpp] [python] [NET] [CCA] [REST]

SignalClass. Interface to digital pins configured to produce square wave signals. This class is designed to allow for square waves at various frequencies and duty cycles. Control is defined by specifying the wave period as (T3Time) and the active portion of the cycle as (T2Time). See the entity overview section of the reference for more detail regarding the timing.

Signal entity to Digital entity mapping varies from device to device. Please refer to the datasheet.

---

The MTM-ETHERSTEM board has 5 Signal Input and 4 Signal outputs. The Signal entity allows you to generate square waves by supplying a period and a time high value. The Signal inputs can also be used as counters. The Signal entity is an overload of the Digital entity and must first be properly configured before it can be enabled.

## Set Configurations

Digital IO Pin Configurations, configure the correct digital pin as a Signal input:

```
stem.digital[index].setConfiguration(digitalConfigurationSignalInput) [cpp]
[python] [NET] [CCA] [REST]
```

### Get/Set Enable

```
stem.signal[index].setEnabled(bEnable) [cpp] [python] [NET] [CCA] [REST]
stem.signal[index].getEnable() [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set T3 Time

The T3 time defines the period of the waveform in nano seconds.

```
stem.signal[index].setT3Time(period) [cpp] [python] [NET] [CCA] [REST]
stem.signal[index].getT3Time() [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set T2 Time

The T2 time defines the high period of the waveform in nano seconds.

```
stem.signal[index].setT2Time(timeHigh) [cpp] [python] [NET] [CCA] [REST]
stem.signal[index].getT2Time() [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set Invert

Inverts the meaning of the T2 time. When inverted the T2 time will represent the time in nano seconds that the waveform is low.

```
stem.signal[index].setInvert() [cpp] [python] [NET] [CCA] [REST]
stem.signal[index].getInvert() [cpp] [python] [NET] [CCA] [REST]
```

### Store

#### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module has one or more stores. Stores are the BrainStem equivalent of a filesystem. Stores are broken up into a number of slots, each of which can be thought of as a file. A Store generally represents a specific type of storage. Flash or internal, RAM, or SD if the BrainStem includes an SD slot. The most common usage of slots and stores is for the storage of reflex code that will run on the BrainStem module. Additionally Bulk capture of Analog data can write to a slot within a store. Slots within the internal store can be set up as boot slots by setting the appropriate slot number in the system configuration. See the `:doc:`System <system>`` entity for more information about setting a boot slot.

The number and type of stores is Model specific. Details about the number of slots per store, and available stores can be found in the data sheets for specific models.

There are a number of commands for manipulating stores, which are detailed below. Many of the store commands are only accessible from host API's and UI applications, however commands relating to enabling reflex files in slots are accessible from the reflex language.

---

Every BrainStem module includes several Store entities and onboard memory slots.

The MTM-ETHERSTEM has store slots [0-2].



Store Slot	Storage Type	Available Slots
0	RAM	12
1	Internal	1
2	SD	0-255

### Get Slot State

For slots which hold reflexes, this read only command returns whether the slot is currently enabled or not. 1 is enabled 0 is disabled. This command can be called from a reflex.

```
stem.store[index].getSlotState(slot) [cpp] [python] [NET] [CCA] [REST]
```

### Load/Unload Slot

This command writes a data buffer into a slot for the given store. It is only available from host side API's.

```
stem.store[index].loadSlot(slot, data, _=None) [cpp] [python] [NET] [CCA]
```

This command reads the slot in the given store into the byte buffer. The length will never be more than the max buffer size given, but may be less if the slot contents were shorter than max buffer length.

```
stem.store[index].unloadSlot(slot) [cpp] [python] [NET] [CCA]
```

### Enable/Disable Slot

This command enables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotEnable(slot) [cpp] [python] [NET] [CCA]
```

This command disables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotDisable(slot) [cpp] [python] [NET] [CCA]
```

### Slot Capacity

This command gets the maximum capacity of the given slot for the store. This command is accessible from the reflex language.

```
stem.store[index].slotCapacity(slot) [cpp] [python] [NET] [CCA]
```

## Slot Size

This command gets the current size of the data in the given slot for the store. This can be the size in bytes of the reflex byte code file, or the data size for a bulk capture.

```
stem.store[index].slotSize(slot) [cpp] [python] [NET] [CCA]
```

## System

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

## Serial Number

Every MTM-ETHERSTEM is assigned a unique serial number at the factory. This facilitates an arbitrary number of MTM-ETHERSTEM devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) [cpp] [python] [NET] [CCA] [REST]
```

## Module Default Base Address

BrainStems are designed to be able to form a reactive, extensible network. All BrainStem modules come with a default network base address for identification on the BrainStem network bus. The default module base address for MTM-ETHERSTEM is factory-set as 6, and can be accessed with.

```
stem.system.getModule(module) [cpp] [python] [NET] [CCA] [REST]
```

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the MTM-ETHERSTEM away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() [cpp] [python] [NET] [CCA] [REST]
```

Saved Configurations	
Module Software Offset	I2C Rate
Router Address	I2C Pullup State
Heartbeat Rate	Boot Slot

## Reset

Reset the system.

```
stem.system.reset() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set LED

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

```
stem.system.getLED(value) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setLED(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Boot Slot

Get the store slot which is mapped when the module boots. Set a store slot to be mapped when the module boots.

The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

```
stem.system.getBootSlot() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setBootSlot(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get Input Voltage

Get the module's input voltage.

```
stem.system.getInputVoltage() [cpp] [python] [NET] [CCA] [REST]
```

## Get Version

Get the modules firmware version number.

The version number is packed into the return value. Utility functions in the Version module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

```
stem.system.getVersion() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Module Software Offset

Set the software address offset.

The module software offset is added to the base module address, and potentially a hardware offset to determine the final calculated address the module uses on the BrainStem network. You must save and reset the module for this change to become effective.

```
stem.system.getModuleSoftwareOffset() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setModuleSoftwareOffset(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set HB Interval

Get the delay between heartbeat packets. Set the delay between heartbeat packets.

For link modules, these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments. Increments valid values are 1-255; default is 10 (256 milliseconds).

```
stem.system.getHBInterval() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setHBInterval(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Router

Get the router address the module uses to communicate with the host. Set the router address the module uses to communicate with the host.

```
stem.system.getRouter() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setRouter(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get Router Address Setting

Get the router address setting saved in the module. This setting may be different from the effective router if the router has been set and saved but no reset has been made.

```
stem.system.getRouterAddressSetting() [cpp] [python] [NET] [CCA] [REST]
```

## Get Module

Get the address the module uses on the BrainStem network.

```
stem.system.getModule() [cpp] [python] [NET] [CCA] [REST]
```

## Get Model

Get the module's model enumeration.

A subset of the possible model enumerations is defined in aProtocolDefs.h under "BrainStem model codes". Other codes are be used by Acroname for proprietary module types.

```
stem.system.getModel() [cpp] [python] [NET] [CCA] [REST]
```

## Route to Me

Enables/Disables the route to me function.

This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

```
stem.system.routeToMe(value) [cpp] [python] [NET] [CCA] [REST]
```

## Complete list of Supported Entities and Functions


Entity Class	Entity Option	Variable(s)	Notes
digital[0-14]	setConfiguration		
	getConfiguration		
	setState		
	getState		
rcservo[0-7]	setEnable		
	getEnable		
	setPosition	Index 4-7 only	
	getPosition		
	setReverse	Index 4-7 only	
	getReverse		
i2c[0-1]	write		
	read		
analog[0-2]	getValue		
	getVoltage		
	setBulkCaptureSampleRate		
	getBulkCaptureSampleRate		
	setBulkCaptureNumberOfSamples		
	getBulkCaptureNumberOfSamples		
	initiateBulkCapture		
	getBulkCaptureState		
analog[3]	setValue		
	setVoltage		
signal[0-5]	setEnable		
	getEnable		
	setInvert		
	getInvert		
	setT3Time		
	getT3Time		
	setT2Time		
	getT2Time		
store[0-2]	getSlotState		
	loadSlot		
	unloadSlot		
	slotEnable		
	slotDisable		
	slotCapacity		
	slotSize		
system[0]	save		
	reset		
	setLED		
	getLED		
	setBootSlot		
	getBootSlot		
	getInputVoltage		
	getVersion		
	getModuleBaseAddress		
	getModuleSoftwareOffset		
	setModuleSoftwareOffset		

continues on next page

Table 35 – continued from previous page

Entity Class	Entity Option	Variable(s) Notes
	getModuleHardwareOffset	
	setHBInterval	
	getHBInterval	
	getRouterAddressSetting	
	getModule	
	getSerialNumber	
	setRouter	
	getRouter	
	getModel	
	routeToMe	

### 1.7.7 MTM-USBStem

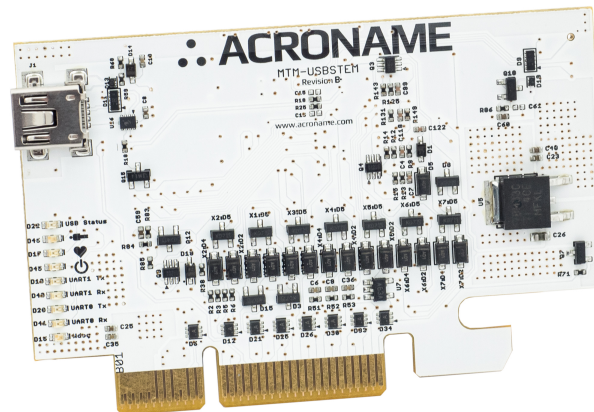

The MTM-USBStem is a BrainStem link module and part of Acroname's Manufacturing Test Module (MTM) system. It allows a USB connection to a host PC which may be used for test direction, control and data collection. It may also be used to load reflex programs to MTM or BrainStem modules for PC-free operation.

With the upstream USB connection on its industry-standard edge connector, the MTM-USBStem is designed to allow even complex and dense test stations to connect to a PC, using just one cable and daisy-chaining as many MTM modules as needed. This makes for rapid and error free station bring-up.

To get up to speed with the MTM USBStem and quickly learn about its functionality follow the [quick start guide](#). Have a look at the [basic example](#) or dive into the [Programming interface](#) of the MTM Power Module for a more in depth view.

## Quick Start Guide

### 1. Download The Development Kit

- Download the [BrainStem Development Kit \(BDK\)](#)<sup>30</sup> for your particular operating system and architecture.
- Download [HubTool](#)<sup>31</sup> for your particular operating system and architecture.

### 2. Connect to Device

- Utilize the MTM USBStem by either connecting to the:
  - Onboard USB connection
  - Card edge USB input
  - Through other MTM modules on the local BrainStem bus.

### 3. Run System

- Open HubTool
- On the bottom right side of the application select the MTM USBStem device.

---

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

Congratulations! You are now ready to start exploring the capabilities of the MTM USBStem. For more information please take a look at our [Getting Started Guide](#)

## Basic Example

C++

```
#include <iostream>
#include "BrainStem2/BrainStem-all.h"

int main(int argc, const char * argv[]) {

    //Create an instance of a MTM-USBSTEM module.
    aMTMUSBStem mtm;

    //Connect to the hardware.
    err = mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
    if (err != aErrNone) {
        printf("Error %d encountered connecting to BrainStem module\n", err);
        return 1;
    } else { printf("Connected to BrainStem module.\n"); }
```

(continues on next page)

---

<sup>30</sup> <https://acroname.com/api>

<sup>31</sup> <https://acroname.com/hubtool>



(continued from previous page)

```

//Basic initialization (Get LEDs turned off).
mtm.system.setLED(0);

//Ready for testing
//Enable LED
mtm.system.setLED(1);

//Turn LED off
mtm.system.setLED(0);

//Disconnect
mtm.disconnect();
}

```

## Python

```

import brainstem
#for easy access to error constants
from brainstem.result import Result
import time
import sys

# Create an instance of a MTM-USBSTEM module.
mtm = brainstem.stem.MTMUSBStem();

# Locate and connect to the first object you find on MTM
result = hub.mtm.discoverAndConnect(linkType, serialNumber, modelNumber)
if result != Result.NO_ERROR:
    print ("Error %d encountered connecting to BrainStem Module.\n" % result)
else:
    print ("Connected to BrainStem module.\n")

#Basic initialization (Get everything turned off).
mtm.system.setLED(0)

##Ready for testing
##Enable LED
mtm.system.setLED(1)

##Finished with testing.
##Turn off LED
mtm.system.setLED(0)


# Disconnect from device.
mtm.disconnect();
print("Disconnected from BrainStem module. \n")

```

## Indicators and Connections

### LEDs

The MTM-USBStem board has a number of LED indicators to assist with MTM system development, debugging, and monitoring. These LEDs are shown in the diagrams below

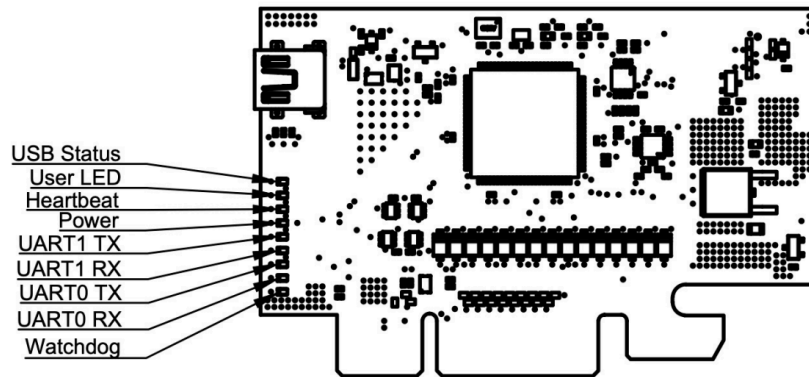

### Programming Interface

The MTM-USBStem is capable of many features. These features are organized into groups called *entities*. Through these entities we can access the vast features of the MTM-USBStem.

A complete list of all entities and functions can be found in the [Module Entities](#) page.

---

### Software Control

A BrainStem link can be established that will give the user access to the resources available on the MTM-USBStem. The module can then be controlled via a host running BrainStem APIs or operated independently by running locally embedded, user-defined programs based on Acroname's BrainStem Reflex language in the RTOS. A BrainStem link to the MTM-USBStem can be established via one of three (3) interfaces: the onboard USB connection, the card-edge USB connection, or through another MTM module using the BrainStem protocol (more on this interface below). For the USB connection options, once the MTM-USBStem is attached to a host machine, a user can connect to it via software API:

```
stem.discoverAndConnect(linkType, serialNumber)
```

The MTM-USBStem can also work within a network of other Brainstem modules, such as in a test fixture, to give access to the capabilities of all networked modules. On the MTM platform, networked modules communicate using the Brainstem protocol, which is transmitted over I2C. Each MTM-USBStem is uniquely addressable via hardware or software to avoid communication conflicts on the I2C bus.

## Upstream USB Connectivity Options

The MTM-USBStem supports upstream USB connections (to communicate to a host PC) via the mini-B connector, or through pins B14 and B15 of the PCIe edge connector. The module defaults to using the edge connector and will switch to the miniB connector if 5V is present on Vbus at the mini-B connector.

## MTM-USBSTEM Module Entities

### Digital

#### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write or manipulate a digital pin. Digital I/O capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of digital entities and details for their capacities will be described in that module's datasheet.

### Set/Get Configurations

Gets or Sets the digital pin configuration. Some digital entities may be single purpose functionality or can be configured for multiple behaviors depending on the hardware. Digital entities that are capable of different operating configurations can be explicitly set to operate in a desired configuration mode when possible. Defaults for most digital entities are typically as inputs, but will vary by module hardware.

```
stem.digital[index].setConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getConfiguration(mode) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

The mode parameter is an integer that correlates to the following:

Value	Configuration
0	Input
1	Output
2	RC Servo Input
3	RC Servo Output
4	Hi Impedance (Hi-Z)
5	Input with Pull Down
6	Signal Output
7	Signal Input

### Set/Get State

Gets or Sets the digital I/O Value. For gets the digital input state will be reported in a boolean fashion. Voltage threshold tolerance details for the target module will be described in the datasheet. For sets the digital output state will be asserted logic high or logic low. Voltage threshold details for the target module will be described in the datasheet.

```
stem.digital[index].setState(level) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

```
stem.digital[index].getState(level) [cpp] [python] [NET] [CCA] [REST]
```

If a digital pin is configured in Hi-Z mode its internal circuitry has been disconnected to create a high impedance. There are no functions that can act on this configuration.

Pin	Input	Output	Hi-Z	RCServo	Signal
DIO 0	Yes	Yes	Yes	Input	.
DIO 1	Yes	Yes	Yes	Input	.
DIO 2	Yes	Yes	Yes	Input	.
DIO 3	Yes	Yes	Yes	Input	.
DIO 4	Yes	Yes	Yes	Output	Input
DIO 5	Yes	Yes	Yes	Output	Input / Output
DIO 6	Yes	Yes	Yes	Output	Input / Output
DIO 7	Yes	Yes	Yes	Output	Input / Output
DIO 8	Yes	Yes	Yes	.	Input / Output
DIO 9	Yes	Yes	Yes	.	.
DIO 10	Yes	Yes	Yes	.	.
DIO 11	Yes	Yes	Yes	.	.
DIO 12	Yes	Yes	Yes	.	.
DIO 13	Yes	Yes	Yes	.	.
DIO 14	Yes	Yes	Yes	.	.

## RCServo

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The RCServo entity provides a pulsed signal based on the RC servo standard. This consist of a period lasting 20ms with a high pulse between 1-2ms. The time high corresponds to a specific position determined by the servo being used. For example if you are using a 90 degree servo a 1.5ms pulse will correspond to the 45 degrees. 1ms and 2ms pulses will correspond to 0 and 90 degree positions respectively.

The RCServo entity is an overload to the [Digital Entity](#) and therefor requires proper configuration of the Digital entity before the RCServo entity can be enabled.

The MTM-USBSTEM board is equipped with 4 RC servo inputs and 4 RC servo outputs. The RC Servo entity is an overload of the Digital Entity and thus requires proper configuration before this entity can be enabled.

With the RC servo entity, digital output pins generate pulsed signal based on the RC Servo standard consisting of a period lasting 20ms and high pulse time between 1-2ms. The high time corresponds to a specific position determined by the specific servo being used. RC servo inputs, measure this high time and return the corresponding position for a servo.

### Get/Set Enable

This functions gets/sets the RCServo function for a given pin (pending, it has been properly configured in the digital entity). At a firmware level this enables/disables the timers.

```
stem.servo[index].setEnabled(bEnable) [cpp] [python] [NET] [CCA] \[REST\]
```

```
stem.servo[index].getEnable() [cpp] [python] [NET] [CCA] GET /api/v1/brainstem/\(serial\_num\)/servo/\(index\)/enable
```

### Get/Set Position

This functions gets/sets the RCServo position. For outputs this will return the currently set position; however, for inputs it will return the value seen at the pin pending the pulse is valid. If the pulse or period are invalid a zero will be returned along with the error code aErrRange. Only index 4-7.

```
stem.servo[index].setPosition(position) [cpp] [python] [NET] [CCA] \[REST\]
```

```
stem.servo[index].getPosition() [cpp] [python] [NET] [CCA] GET /api/v1/brainstem/\(serial\_num\)/servo/\(index\)/position
```

### Get/Set Reverse

This functions gets/sets the reverse (invert) option in the RCServo Class. Only index 4-7.

```
stem.servo[index].setReverse(reverse) [cpp] [python] [NET] [CCA] \[REST\]
```

```
stem.servo[index].getReverse() [cpp] [python] [NET] [CCA] GET /api/v1/brainstem/\(serial\_num\)/servo/\(index\)/reverse
```

## I2C

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write data on up to two I<sup>2</sup>C busses

---

### Read/Write Data

BrainStem modules may have the ability to read, write data on up to 2 I2C bus's. The MTM-USBSTEM includes access to a single I2C bus operating at a set 1Mbit/s rate.

---

**Note:** *The 1Mbit/s bus, while user-accessible, is also used for BrainStem network communication so there may be other, non-user-initiated traffic when other BrainStem modules are linked.*

---

```
stem.i2c[index].read(address,length) \[cpp\] \[python\] \[NET\] \[CCA\]
```

```
stem.i2c[index].write(address,length) \[cpp\] \[python\] \[NET\] \[CCA\]
```

The maximum data size for individual read and write operations on an I2C bus through the BrainStem API is 20 bytes. Sending more than 20 bytes of information must be done as an iterated sequence.

### Pullup

Each I2C bus also includes 330Ω pull-up resistors on the SDA and SCL lines, disabled by default. When using the MTM-USBSTEM in a linked system (communicating over the 1Mbit/s bus), only a single set of pull-ups along the bus should be enabled in order for the I2C bus to work properly (if more than one set is enabled, the lines cannot be pulled low for communication). Similarly, when using a single MTM device to communicate with an external device over the I2C bus, either the internal pull-ups can be enabled, or external hardware pull-ups added.

```
stem.i2c[index].setPullup(bEnable) \[cpp\] \[python\] \[NET\] \[CCA\]
```

## Analog

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read an analog voltage (ADC) and convert this into a discrete digitized value or output a voltage value based on a desired discrete value (DAC). Analog voltage capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of analog entities and details for their capacities will be described in that module's datasheet.

---

## Initiate Bulk Capture

The system can capture any number of samples up the size of the RAM\_STORE slot 0 (8191). The capture is then triggered with

```
stem.analog[index].initiateBulkCapture() [cpp] [python] [NET] [CCA] [REST]
```

Results of the capture are stored in the RAM\_STORE slot 0. Results are always stored in ADC counts as two little-endian byte pairs with the second byte the most significant.

## Get/Set Bulk Capture Sample Rate and Number of Samples

The MTM-EtherStem's ADC's are also capable of being captured in bulk based on a user defined sample rate. For additional information on sample rate settings. Configuring and triggering the bulk capture is accomplished by setting the number of samples and the sample rate, then triggering the capture.

To set the number of samples and the sample rate use:

```
stem.analog[index].setBulkCaptureSampleRate() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].getBulkCaptureSampleRate() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].setBulkCaptureNumberOfSamples() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].getBulkCaptureNumberOfSamples() [cpp] [python] [NET] [CCA] [REST]
```

## Get Bulk Capture State

```
stem.analog[index].getBulkCaptureState() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Value and Voltage

A BrainStem's A2D reading will always return a 16 bit value. If the module hardware does not have full 16 bit wide analog to digital conversion capabilities, the measurement will get propagated up to 16 bits wide.

For example, if a 12-bit A2D engine exists in the target module's hardware, the reading will get promoted in the firmware layer by shifting up 4 bits to fill out the 16 bit value ( $0x0FFF \ll 4 = 0xFFFF0$ ) in the module's firmware. This approach allows more portable API code to be generated independent of the target hardware.

setValue and setVoltage is only applicable for Analog[3]:

```
stem.analog[index].setValue() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].getValue() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].setVoltage(microvolts) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.analog[index].getVoltage() [cpp] [python] [NET] [CCA] [REST]
```

## Signal

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

SignalClass. Interface to digital pins configured to produce square wave signals. This class is designed to allow for square waves at various frequencies and duty cycles. Control is defined by specifying the wave period as (T3Time) and the active portion of the cycle as (T2Time). See the entity overview section of the reference for more detail regarding the timing.

Signal entity to Digital entity mapping varies from device to device. Please refer to the datasheet.

---

The MTM-USBSTEM board has 5 Signal Input and 4 Signal outputs. The Signal entity allows you to generate square waves by supplying a period and a time high value. The Signal inputs can also be used as counters. The Signal entity is an overload of the Digital entity and must first be properly configured before it can be enabled.

## Set Configurations

Digital IO Pin Configurations, configure the correct digital pin as a Signal input:

```
stem.digital[index].setConfiguration(digitalConfigurationSignalInput) \[cpp\]  
\[python\] \[NET\] \[CCA\] \[REST\]
```

## Get/Set Enable

```
stem.signal[index].setEnabled(bEnable) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]  
stem.signal[index].getEnable() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Get/Set T3 Time

The T3 time defines the period of the waveform in nano seconds.

```
stem.signal[index].setT3Time(period) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]  
stem.signal[index].getT3Time() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```

## Get/Set T2 Time

The T2 time defines the high period of the waveform in nano seconds.

```
stem.signal[index].setT2Time(timeHigh) \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]  
stem.signal[index].getT2Time() \[cpp\] \[python\] \[NET\] \[CCA\] \[REST\]
```



## Get/Set Invert

Inverts the meaning of the T2 time. When inverted the T2 time will represent the time in nano seconds that the waveform is low.

```
stem.signal[index].setInvert() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.signal[index].getInvert() [cpp] [python] [NET] [CCA] [REST]
```

## Store

### API Documentation: [cpp] [python] [.NET] [CCA] [REST]

Every BrainStem module has one or more stores. Stores are the BrainStem equivalent of a filesystem. Stores are broken up into a number of slots, each of which can be thought of as a file. A Store generally represents a specific type of storage. Flash or internal, RAM, or SD if the BrainStem includes an SD slot. The most common usage of slots and stores is for the storage of reflex code that will run on the BrainStem module. Additionally Bulk capture of Analog data can write to a slot within a store. Slots within the internal store can be set up as boot slots by setting the appropriate slot number in the system configuration. See the :doc:`System <system>` entity for more information about setting a boot slot.

The number and type of stores is Model specific. Details about the number of slots per store, and available stores can be found in the data sheets for specific models.

There are a number of commands for manipulating stores, which are detailed below. Many of the store commands are only accessible from host API's and UI applications, however commands relating to enabling reflex files in slots are accessible from the reflex language.

---

Every BrainStem module includes several Store entities and onboard memory slots.

The MTM-USBSTEM has store slots [0-2].

Store Slot	Storage Type	Available Slots
0	RAM	12
1	Internal	1
2	SD	0-255

## Get Slot State

For slots which hold reflexes, this read only command returns whether the slot is currently enabled or not. 1 is enabled 0 is disabled. This command can be called from a reflex.

```
stem.store[index].getSlotState(slot) [cpp] [python] [NET] [CCA] [REST]
```

## Load/Unload Slot

This command writes a data buffer into a slot for the given store. It is only available from host side API's.

```
stem.store[index].loadSlot(slot, data, _=None) [cpp] [python] [NET] [CCA]
```

This command reads the slot in the given store into the byte buffer. The length will never be more than the max buffer size given, but may be less if the slot contents were shorter than max buffer length.

```
stem.store[index].unloadSlot(slot) [cpp] [python] [NET] [CCA]
```

## Enable/Disable Slot

This command enables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotEnable(slot) [cpp] [python] [NET] [CCA]
```

This command disables the reflex file in the given store and slot. This command is accessible from the reflex language.

```
stem.store[index].slotDisable(slot) [cpp] [python] [NET] [CCA]
```

## Slot Capacity

This command gets the maximum capacity of the given slot for the store. This command is accessible from the reflex language.

```
stem.store[index].slotCapacity(slot) [cpp] [python] [NET] [CCA]
```

## Slot Size

This command gets the current size of the data in the given slot for the store. This can be the size in bytes of the reflex byte code file, or the data size for a bulk capture.

```
stem.store[index].slotSize(slot) [cpp] [python] [NET] [CCA]
```

## System

### API Documentation: [cpp] [python] [.NET] [CCA] [REST]

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

---

## Serial Number

Every MTM-USBSTEM is assigned a unique serial number at the factory. This facilitates an arbitrary number of MTM-USBSTEM devices attached to a host computer. The following method call can retrieve the unique serial number for each device.

```
stem.system.getSerialNumber(serialNumber) [cpp] [python] [NET] [CCA] [REST]
```

## Module Default Base Address

BrainStems are designed to be able to form a reactive, extensible network. All BrainStem modules come with a default network base address for identification on the BrainStem network bus. The default module base address for MTM-USBSTEM is factory-set as 6, and can be accessed with.

```
stem.system.getModule(module) [cpp] [python] [NET] [CCA] [REST]
```

## Saved Settings

Some entities can be configured and saved to non-volatile memory. This allows a user to modify the startup and operational behavior for the MTM-USBSTEM away from the factory default settings. Saving system settings preserves the settings as the new default. Most changes to system settings require a save and reboot before taking effect. For example, upstream and downstream USB Boost settings will not take effect unless a system save operation is completed, followed by a reset or power cycle. Use the following command to save changes to system settings before reboot:

```
stem.system.save() [cpp] [python] [NET] [CCA] [REST]
```

Saved Configurations	
Module Software Offset	I2C Rate
Router Address	I2C Pullup State
Heartbeat Rate	Boot Slot

## Reset

Reset the system.

```
stem.system.reset() [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set LED

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

```
stem.system.getLED(value) [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setLED(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get/Set Boot Slot

Get the store slot which is mapped when the module boots. Set a store slot to be mapped when the module boots.

The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

```
stem.system.getBootSlot() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setBootSlot(value) [cpp] [python] [NET] [CCA] [REST]
```

## Get Input Voltage

Get the module's input voltage.

```
stem.system.getInputVoltage() [cpp] [python] [NET] [CCA] [REST]
```

## Get Version

Get the modules firmware version number.

The version number is packed into the return value. Utility functions in the Version module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

```
stem.system.getVersion() [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set Module Software Offset

Set the software address offset.

The module software offset is added to the base module address, and potentially a hardware offset to determine the final calculated address the module uses on the BrainStem network. You must save and reset the module for this change to become effective.

```
stem.system.getModuleSoftwareOffset() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setModuleSoftwareOffset(value) [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set HB Interval

Get the delay between heartbeat packets. Set the delay between heartbeat packets.

For link modules, these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments. Increments valid values are 1-255; default is 10 (256 milliseconds).

```
stem.system.getHBInterval() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setHBInterval(value) [cpp] [python] [NET] [CCA] [REST]
```

### Get/Set Router

Get the router address the module uses to communicate with the host. Set the router address the module uses to communicate with the host.

```
stem.system.getRouter() [cpp] [python] [NET] [CCA] [REST]
```

```
stem.system.setRouter(value) [cpp] [python] [NET] [CCA] [REST]
```

### Get Router Address Setting

Get the router address setting saved in the module. This setting may be different from the effective router if the router has been set and saved but no reset has been made.

```
stem.system.getRouterAddressSetting() [cpp] [python] [NET] [CCA] [REST]
```

## Get Module

Get the address the module uses on the BrainStem network.

```
stem.system.getModule() [cpp] [python] [NET] [CCA] [REST]
```

## Get Model

Get the module's model enumeration.

A subset of the possible model enumerations is defined in aProtocolDefs.h under "BrainStem model codes". Other codes are be used by Acroname for proprietary module types.

```
stem.system.getModel() [cpp] [python] [NET] [CCA] [REST]
```

## Route to Me

Enables/Disables the route to me function.

This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

```
stem.system.routeToMe(value) [cpp] [python] [NET] [CCA] [REST]
```

## Complete list of Supported Entities and Functions

Entity Class	Entity Option	Variable(s) Notes
digital[0-14]	setConfiguration	
	getConfiguration	
	setState	
	getState	
rcservo[0-7]	setEnabled	
	getEnable	
	setPosition	Index 4-7 only
	getPosition	
	setReverse	Index 4-7 only
	getReverse	
i2c[0-1]	write	
	read	
analog[0-2]	getValue	
	getVoltage	
	setBulkCaptureSampleRate	
	getBulkCaptureSampleRate	
	setBulkCaptureNumberOfSamples	

continues on next page

Table 36 – continued from previous page


Entity Class	Entity Option	Variable(s) Notes
	getBulkCaptureNumberOfSamples	
	initiateBulkCapture	
	getBulkCaptureState	
analog[3]	setValue	
	setVoltage	
signal[0-5]	setEnabled	
	getEnable	
	setInvert	
	getInvert	
	setT3Time	
	getT3Time	
	setT2Time	
	getT2Time	
store[0-2]	getSlotState	
	loadSlot	
	unloadSlot	
	slotEnable	
	slotDisable	
	slotCapacity	
	slotSize	
system[0]	save	
	reset	
	setLED	
	getLED	
	setBootSlot	
	getBootSlot	
	getInputVoltage	
	getVersion	
	getModuleBaseAddress	
	getModuleSoftwareOffset	
	setModuleSoftwareOffset	
	getModuleHardwareOffset	
	setHBInterval	
	getHBInterval	
	getRouterAddressSetting	
	getModule	
	getSerialNumber	
	setRouter	
	getRouter	
	getModel	
	routeToMe	





Here you can find software developed by Acroname.

## 2.1 HubTool

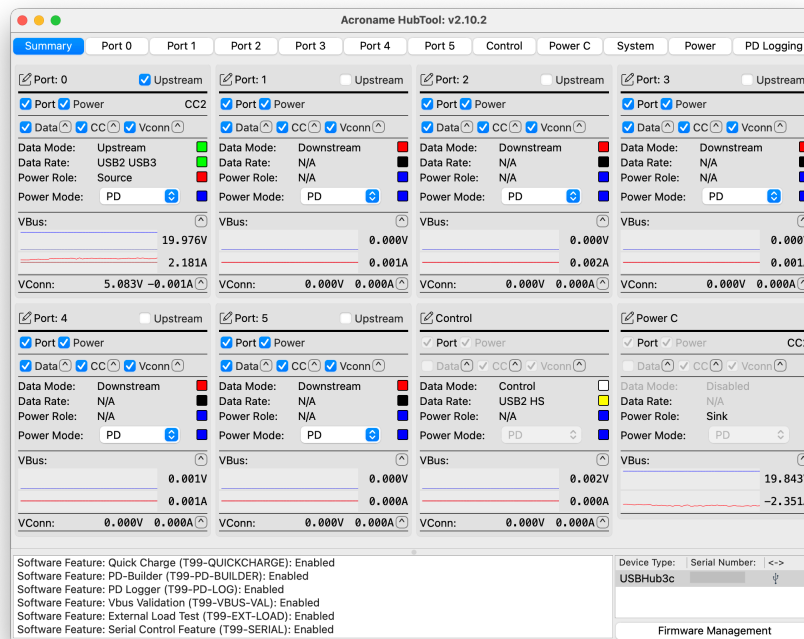

HubTool is a utility that lets users view detailed information and control settings of Acroname devices. Users can operate HubTool either on the USB host computer or a computer linked to the Acroname device's Control, ethernet, or RS-232 ports (if available).

### 2.1.1 What can it do?

HubTool provides a simple GUI to:

- Enable and disable ports (virtually plug and unplug)
  - Selectively toggle port data and power connections such as USB 3, USB 2, and  $V_{BUS}$  independently
- View connection speed
- Visualize per-port current and voltage
- Select automatic and manual upstream host port switching
- Set PD power rules (USBHub3c, USBExt3c) and port power modes
- Control Acroname devices over the local network

### 2.1.2 Which Acroname devices work with HubTool?

USB hubs and switches <sup>32</sup>	USBExt3c <sup>33</sup>
	USBHub3c <sup>34</sup>
	USBHub3p <sup>35</sup>
	USBHub2x4 <sup>36</sup>
	USB-C-Switch Pro <sup>37</sup>
	USB-C-Switch <sup>38</sup>
MTM manufacturing test modules <sup>39</sup>	MTM-Load-1 <sup>40</sup>
	MTM-DAQ-2 <sup>41</sup>
	MTM-PM-1 <sup>42</sup>
	MTM-IO-Serial <sup>43</sup>
	MTM-Relay <sup>44</sup>
	MTM-EtherStem <sup>45</sup>
	MTM-USBStem <sup>46</sup>

---

<sup>32</sup> [https://acroname.com/store-grid/field\\_category/programmable-usb](https://acroname.com/store-grid/field_category/programmable-usb)

<sup>33</sup> <https://acroname.com/store/491>

<sup>34</sup> <https://acroname.com/store/programmable-industrial-power-delivery-hub-s99-usbhub-3c-pro>

<sup>35</sup> <https://acroname.com/store/programmable-industrial-hub-s79-usbhub-3p>

<sup>36</sup> <https://acroname.com/store/industrial-intelligent-4-port-hub-s77-usbhub-2x4>

<sup>37</sup> <https://acroname.com/store/s105-usbc-switch-pro>

<sup>38</sup> <https://acroname.com/store/programmable-industrial-switch-s85-rdvr-usbcsw>

<sup>39</sup> <https://acroname.com/manufacturing-test-modules-mtm>

<sup>40</sup> <https://acroname.com/store/s96-mtm-load-1>

<sup>41</sup> <https://acroname.com/store/s92-mtm-daq-2>

<sup>42</sup> <https://acroname.com/products/ACRONAME-MTM-1-CHANNEL-POWER-MODULE>

<sup>43</sup> <https://acroname.com/products/ACRONAME-MTM-IO-SERIAL-SOFTWARE-CONTROLLED-USB-HUB>

<sup>44</sup> <https://acroname.com/store/s78-mtm-relay>

<sup>45</sup> <https://acroname.com/store/s67-mtm-etherstem>

<sup>46</sup> <https://acroname.com/store/s69-mtm-usbstem>

### 2.1.3 Host system requirements

HubTool binaries are available for these platforms:

- Windows 10 and higher
- Intel and Apple Silicon Macs running macOS 10.15 or higher
- Linux:
  - x86\_64 Ubuntu LTS 16.04, 18.04, 20.04, 22.04, 24.04 - Required dependencies: *apt install xcb\**
  - x86\_64 Red Hat 8 - Required dependencies: *dnf install qt5-qtbase-gui*
  - x86\_64 Red Hat 9 - Required dependencies: *dnf install qt6-qtbase-gui*
  - arm64v8 Ubuntu LTS 16.04, 18.04, 20.04, 22.04, 24.04 - Required dependencies: *apt install xcb\**
  - i686 Ubuntu LTS 16.04 - Required dependencies: *apt install xcb\**

### 2.1.4 Installation

1. Download [HubTool](#)<sup>47</sup> and [BrainStem Development Kit \(BDK\)](#)<sup>48</sup>
2. Open the .dmg / .zip / .tgz
3. Move the contents to a folder, or move just the HubTool application to your preferred location.

---

**Note:** *Linux users will need run the script labeled “udev.sh” located in the “BrainStem\_linux\_Driverless” folder before they will be able communicate with a BrainStem device.*

---

### 2.1.5 Usage

Click on the HubTool app to launch it. The lower right panel shows any Acroname devices that are connected. The lower left panel is the console. On launch, HubTool writes default settings to the console.



*Startup messages in HubTool Console*

---


<sup>47</sup> <https://acroname.com/hubtool>

<sup>48</sup> <https://acroname.com/api>

Table 1: *Startup messages*


Console message	Meaning
BrainStem I2C discovery: Disabled	Discover Acroname devices connected to a USB-connected MTM module's I2C bus
USB discovery: Enabled	Discover local USB-connected Acroname devices
BrainStem aEther discovery: Enabled	Discover Acroname devices connected through other applications (e.g. BrainD), local only by default
TCP/IP discovery: Disabled	Discover MTM-EtherStem modules connected to the host by ethernet
Port Mapping: Enabled	Get USB descriptors for each downstream device, E.G. vendor ID, serial number

Discovery methods (USB, aEther, TCP/IP, and Brainstem I2C) are enabled and disabled using the Discovery menubar dropdown. Port mapping is enabled in the options menu. Both settings reset to default values with every launch of HubTool.

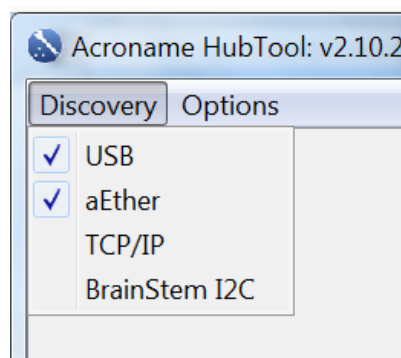*Discovery menu*


## 2.1.6 Connecting devices

When an Acroname device is connected, the device type, serial number, and an icon indicating the connection type will appear in the lower right pane. If the device is connected by USB to the local host, the USB icon will appear (🔌). If the device is connected to a remote host, the aEther icon will be shown instead (🌐). Click on the device serial number to view the [device interface](#). Right-click to bring up a contextual menu to *disconnect*, *set sample rate*, and perform a *factory reset*.

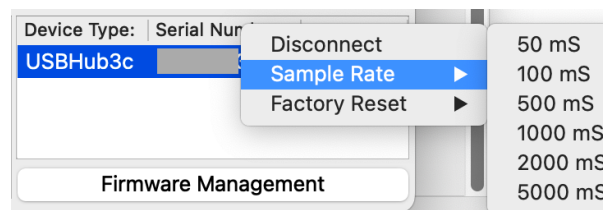*Device context menu*

## 2.1.7 Control devices on remote hosts


HubTool can also view and control shared Acroname devices connected to other hosts on the same network (WiFi or ethernet). To enable remote control of devices, follow these steps:

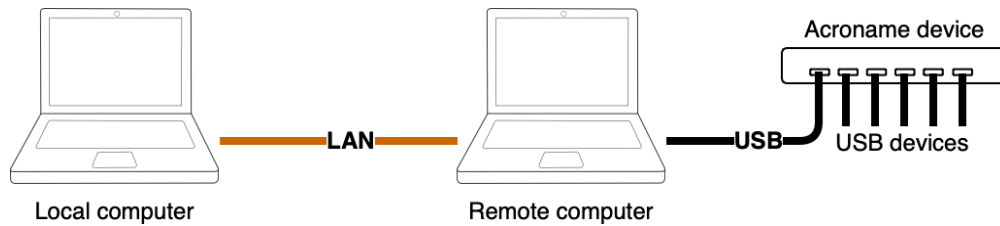

### *Controlling remote devices over the local network*

On the remote host:


- Connect the device via USB
- Launch HubTool
- Click the device serial number to connect
- Enable aEther and deselect “Local only” in Options > aEther Config

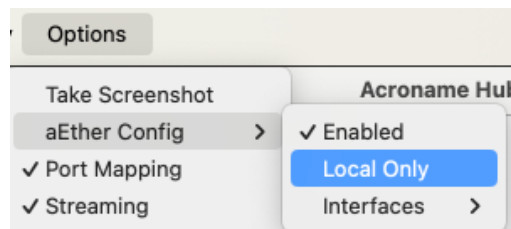

On the local host:

- Launch HubTool
- Enable aEther and deselect “Local only” in Options > aEther Config

The serial number of the remote device and the aEther icon should appear in the local host's device list. Click to view the remote device's interface.

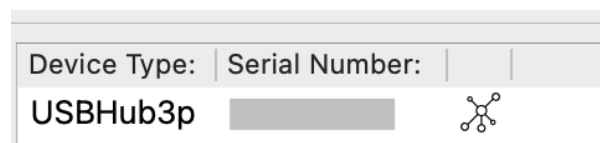

### *aEther-connected remote device*

## 2.1.8 Updating device firmware

Discover					
Model String	Serial Number	Current	Target	Update	Update Status
USBCSwitch		2.10.1	▼ 2.10.2	Update	Update to: 2.10.2
USBHub3p		2.10.2	▼ 2.10.2	Update	Up to Date (Updating again will check for purchased Software Features.)
USBHub3c		2.10.2	<div> <div>✓ 2.10.2</div> <div>2.10.1</div> <div>2.10.0</div> <div>2.9.29</div> </div>	Update	Up to Date (Updating again will check for purchased Software Features.)

### *Firmware update panel*

To update the firmware of a connected Acroname device, in the lower-right panel, click “Firmware Management” to bring up the firmware update panel. A list of connected devices with serial number, currently installed firmware version, target version, and an update button should appear. Select target firmware version, and click *update* to update the firmware. If the device isn’t visible, check that it is connected and click *discover*.


Firmware update is required to enable newly purchased software add-on features, even if the installed version is current.

See the [Firmware Management](#) documentation for more information on updating device firmware.

## 2.1.9 Device-specific interfaces

Each Acroname product has a distinct interface in HubTool. Select your product below:

## USBExt3c

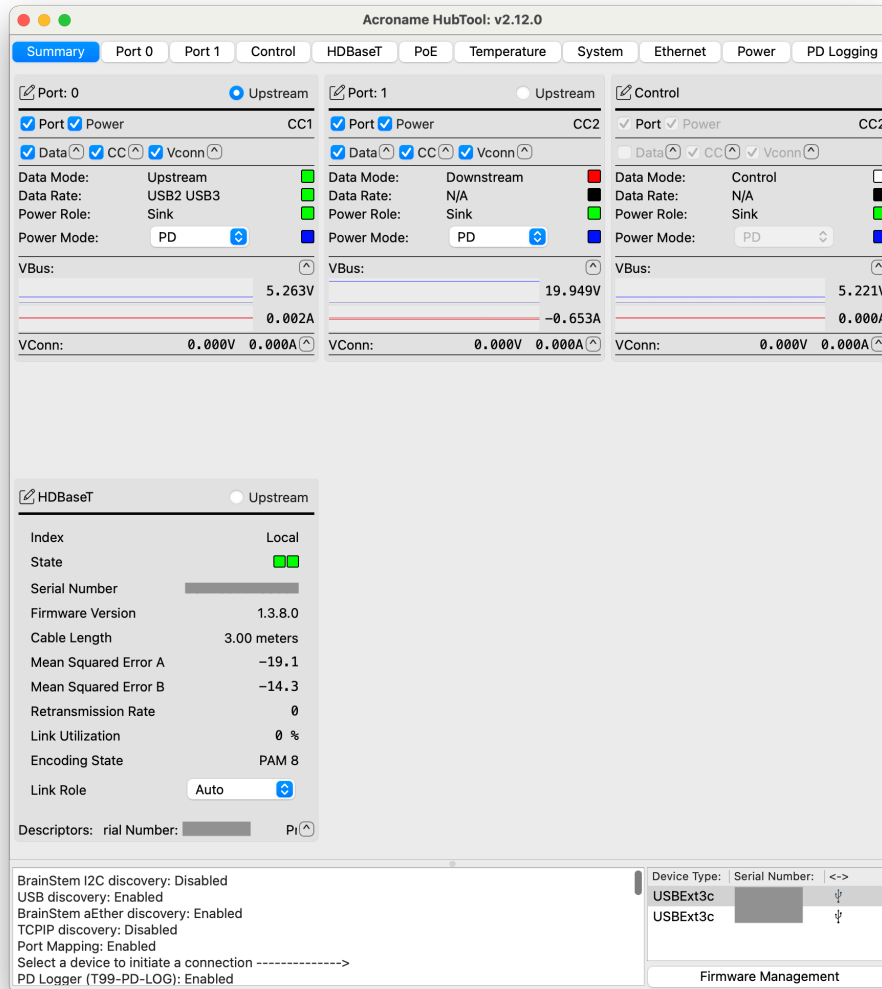

<sup>49</sup> HubTool interface

for USBExt3c

USBExt3c<sup>50</sup> is a two-port, software-managed USB Hub and extender that supports:


- USB 3.2 Gen 1 (5 Gbps) and USB 2.0 extension up to 100 m over Cat 6A cable (HDBaseT-USB3)
- Local USB links up to 10 Gbps (USB 3.2 Gen 2)
- Bidirectional PoE++ power extension
- Automatic host switching from either end of the extension

HubTool presents a unified dashboard to control and view the state of USBExt3c.

<sup>49</sup> <https://acroname.com/store/s152>

<sup>50</sup> <https://acroname.com/store/s152>

Add-on software features

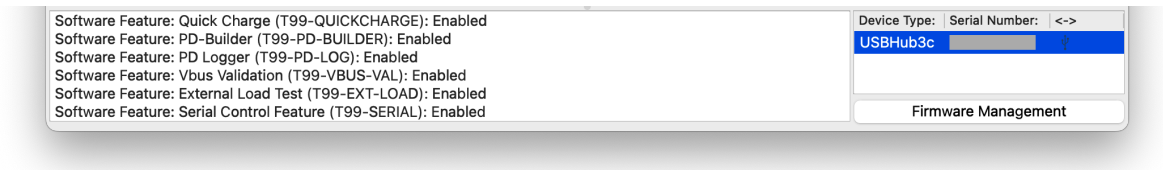

Add-on features listed in HubTool console after selecting the USBExt3c on the right


USBExt3c supports add-on software features, which can be purchased to enable new capabilities. When a USBExt3c is selected in HubTool, the console will list the available add-on software features and show their enabled / disabled status on the device.

Table 2: Add-on licensed software features

Feature	Capability
PD builder <sup>51</sup>	Edit Power Data Objects (PDOs) on each port to emulate any USB-PD configuration
PD log-ger <sup>52</sup>	Log USB-PD communications on all ports
VBus vali-dation <sup>53</sup>	Override normal $V_{BUS}$ voltage set points and current limits. Used in testing a device's response to incorrect $V_{BUS}$ voltages after USB-PD negotiation.
Serial con-trol <sup>54</sup>	Enable RS-232 serial control of the USBExt3c

Licenses for additional features are available for purchase<sup>55</sup>. After purchase, update the hub firmware to enable the new features.

Dashboard tabs



HubTool USBExt3c dashboard tab view


After selecting USBExt3c, HubTool will launch the device dashboard in summary view. Buttons along the top of the window represent tabs for:

<sup>51</sup> <https://acroname.com/store/t99-pd-builder>  
<sup>52</sup> <https://acroname.com/store/t99-pd-log>  
<sup>53</sup> <https://acroname.com/store/t99-vbus-val>  
<sup>54</sup> <https://acroname.com/store/t99-ext-load>  
<sup>55</sup> [https://acroname.com/store-grid/field\\_category/Software-Licenses](https://acroname.com/store-grid/field_category/Software-Licenses)




Summary Tab

The summary tab displays simplified interface panels for ports 0, 1, Control, and the HDBaseT-USB3 interface.

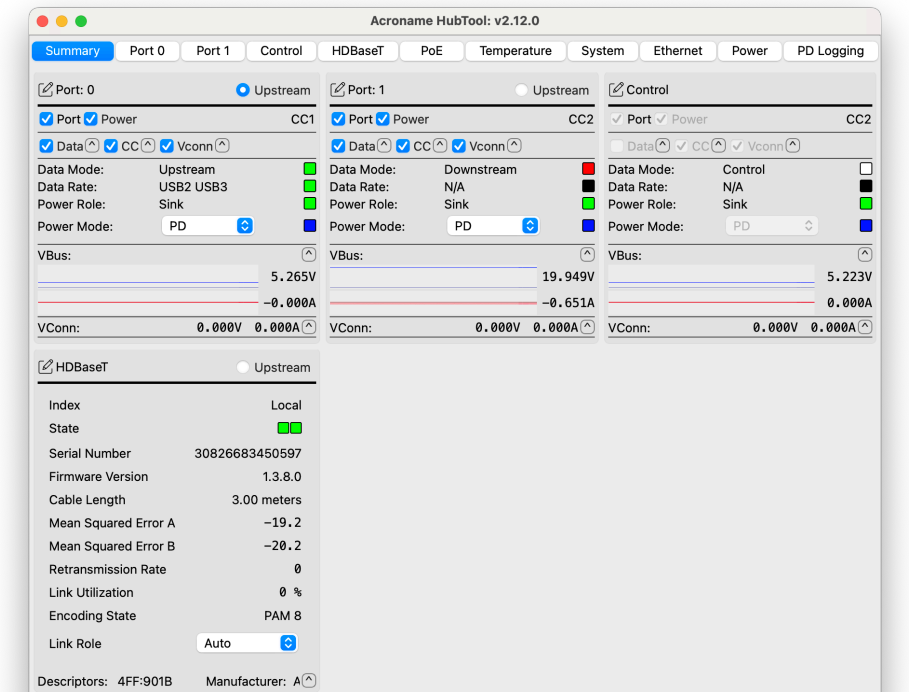


Summary tab view

Each port interface panel shows a consolidated view of the corresponding *port* and *HDBaseT* tabs.

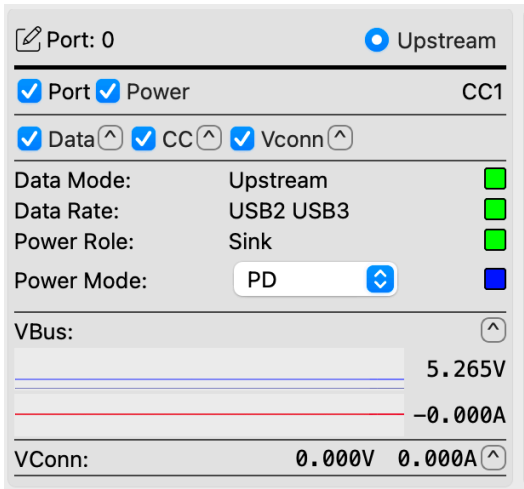


Port panel in summary view

## Port Tabs

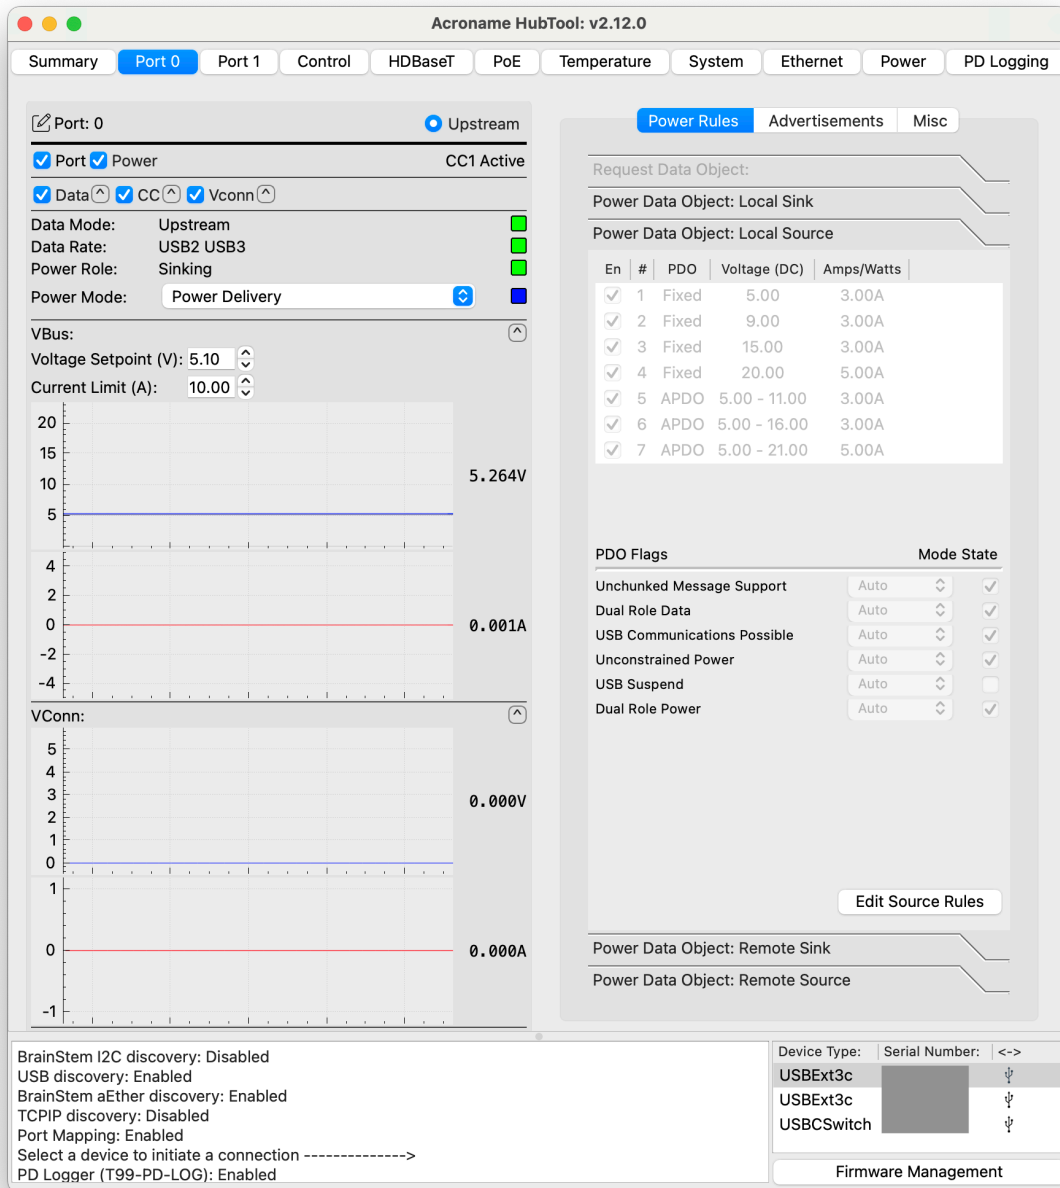


The *port tabs* (0, 1, and Control) show a more detailed view of each port. The left side of the port tab contains *Power and data settings*. The right side of the port tab views contains sub tabs for USB PD *Power rules*, *Advertisements*, and *Miscellaneous messages and settings*.

## Port Tab: Power and Data Settings

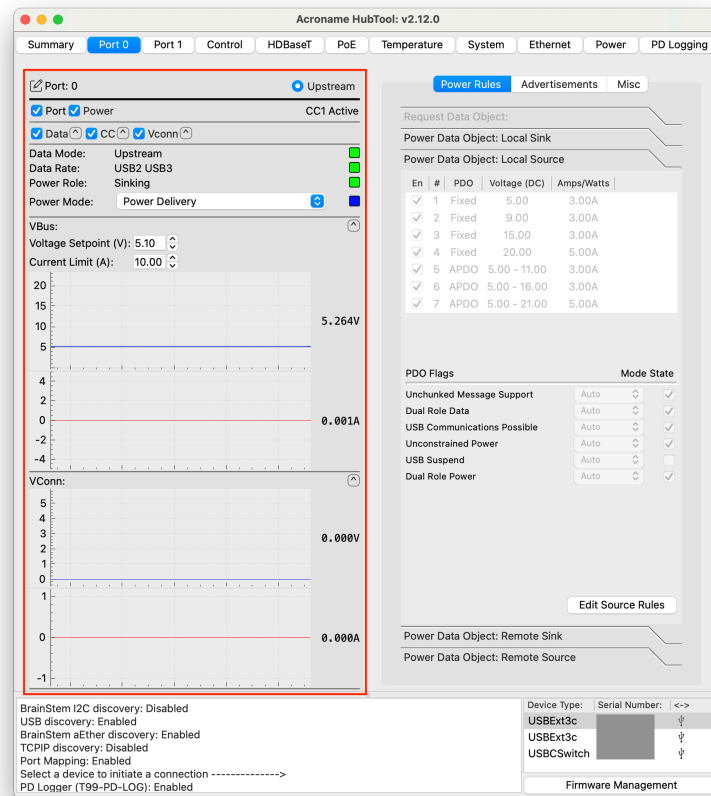

### Port tab view - power and data settings

The left side of each port tab view contains power and data settings for the port. At the top are the *port name* and *upstream toggle*.

**Port name** (editable ) - friendly port name used by HubTool and ControlRoom)

**Upstream toggle** - indicates and selects which port is in upstream mode and able to connect to a host. Note that the Control port can not be set to upstream.

### Power and data toggles


Below the port name are the power and data toggles. Click the carats () to expand the view. Clicking the Data carat again cycles through views.



Table 3: Power and data toggles

Toggle name		Enables and disables
Port		Port data and power
Power		$V_{BUS}$
Data		All data
1x	HS	USB 2 (High Speed) pins.
	SS	USB 3 (SuperSpeed) pins
2x	HSA, HSB	HS pins side A and B
	SSA, SSB	SS pins side A and B
3x	HS Routing:	
	Follow CC	Normal operation
	Side 1	Force Side A
	Side 2	Force Side B
	Shorted	HS data on both sides
	SS Routing:	
	Follow CC	Normal operation
	Side 1	Force Side A
	Side 2	Force Side B
CC		Both CC pins
	CC1, CC2	CC pins individually
Vconn		$V_{CONN}$ pins
	Vconn1, Vconn2	$V_{CONN}$ pins individually

### Data and power status, power mode

Below the toggles are *data mode*, *data rate*, and *power role* status indicators, followed by the *power mode* menu. The virtual LED color corresponds to the color of the real LED indicators on the USBExt3c front panel.






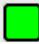








Data Mode:	Upstream	
Data Rate:	USB2 USB3 SuperSpeed+	
Power Role:	Sourcing	
Power Mode:	Power Delivery 	

Table 4: Data and power status





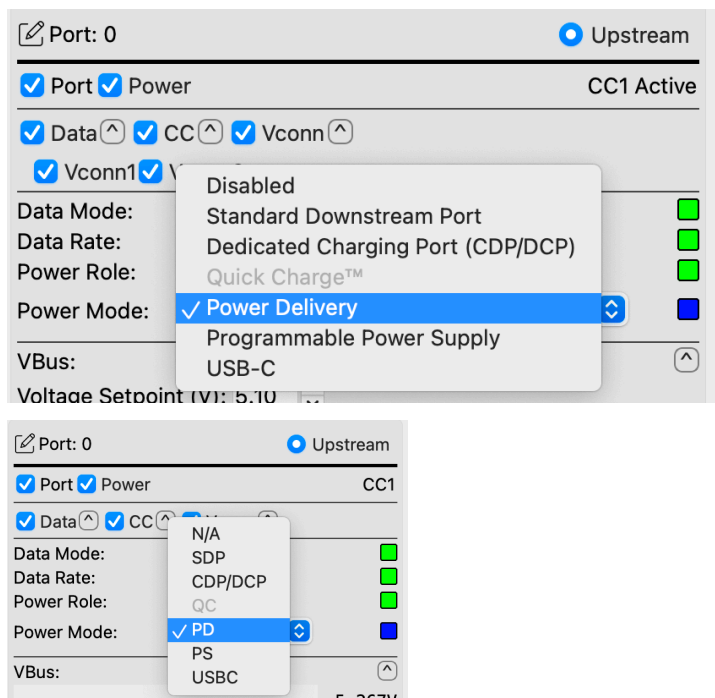


Name	Options	Virtual LED color
Data mode	Upstream (to host)	 Green
	Downstream	 Red
	Control port	 White
Data rate (highest speed)	USB 2	 Yellow
	USB 3 (5 Gb/s)	 Green
	USB 3 SuperSpeed+ (10 Gb/s)	 Blue
Power role	Sinking (receives power)	 Green
	Sourcing (provides power)	 Red

Port power mode is selected from a dropdown menu. In the summary view, the modes are abbreviated.



Power mode selection in port view (left) and summary view (right)

Table 5: Power modes

Summary abbreviation	Power mode	Definition	Virtual LED
N/A	Disabled	Power off	 Black
SDP	Standard Downstream Port	5 V, 900 mA	 Red
CDP/DCP	Dedicated Charging Port (CDP/DCP)	5 V, 3 A	 Red
QC	Quick Charge™	Qualcomm® Quick Charge™ 2.0 and 3.0 fast charging, requires Quick Charge feature license 3 A	 Green
PD	Power Delivery	USB-PD revision 2.0 and 3.2 compliant PD fixed voltage 5 - 20 V up to 5 A, USB PD-PPS and QC 4+ variable voltage up to 5 - 21 V, 5 A	 Blue
PS	Programmable Power Supply	Manually set 2.8 V – 21 V and 0 A – 5 A, requires VBus validation feature license	 White
USBC	USB-C	5 V, 3 A	 Magenta

In USB-C and PD modes,  $V_{BUS}$  is only enabled after strapping resistors are detected on the CC lines, while SDP, CDP/DCP, PS, and QC modes provide  $V_{BUS}$  continuously. In CDP and SDP modes, the port acts as a source if downward facing, and a sink if upward facing.

### $V_{BUS}$ voltage and current control

(Requires VBus validation add-on<sup>56</sup>)

Power Mode:

Programmable Power Supply

VBus:

Voltage Setpoint (V): 11.90

Current Limit (A): 1.25

*Manually set VBus voltage and current*

When **Programmable Power Supply (PS)** mode is enabled,  $V_{BUS}$  voltage setpoint and current limit can be set directly, transforming the port into a programmable power supply capable of supplying up to 100 Watts. These are saveable settings (System tab / Save) that persist through reset.

<sup>56</sup> [https://acroname.com/reference/devices/usbhub3c/software\\_features/vbus\\_validation.html](https://acroname.com/reference/devices/usbhub3c/software_features/vbus_validation.html)

In **Power Delivery (PD)** mode, the user-set values override the negotiated values. However, PD negotiations are still active and PD events or errors can trigger re-negotiation, which will replace the user-set values. These values should only be changed when the power role is set to *sourcing*.


In **USB-C, SDP, CDP/DCP** modes, VBus settings revert to 5 V and default current on port connect or disconnect.

Setting	Value
Voltage setpoint	2.8 V – 21 V
Current limit	0 A – 5 A

**Warning:** Can damage attached equipment!

### Voltage and current display


Shows a graph of the VBus and VConn voltage and current of the port.

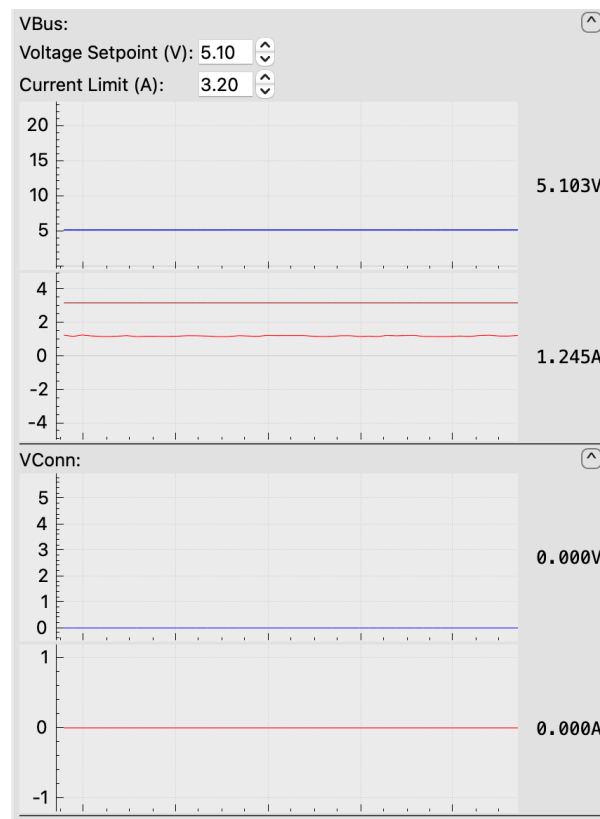

#### *VBus and VConn panel view*

Clicking on the port graph pops up the Port Plots window with a larger rolling strip chart showing all ports. Click the carat (⏏) to expand each port chart. If *PD logging* is enabled, PD messages will be marked in yellow.

#### *Port Plots window*

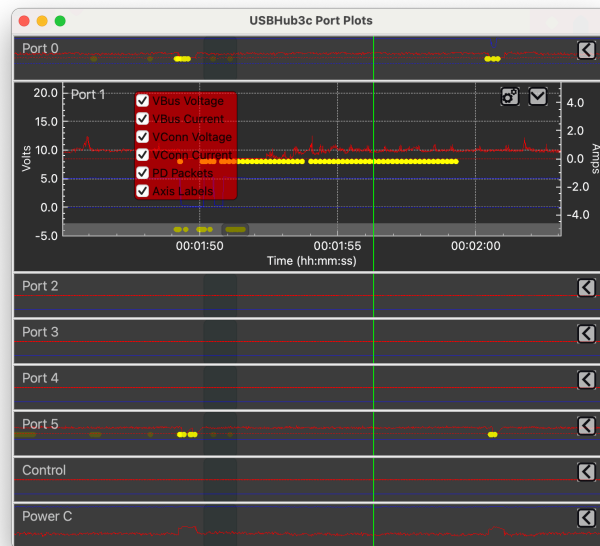

**Left vertical axis** – voltage (V)

**Right vertical axis** – current (A)

**Horizontal axis** – time (s)

By default, the plot will be scrolling. To stop scrolling, drag the dark gray scroll bar to the left. To enable scroll-to-zoom, click the desired axis.

## Device descriptors

If Options > Port Mapping is selected, when a device is attached to a downstream port, its descriptors will scroll at the bottom of the port panel. Click the carat (⤴) to expand:

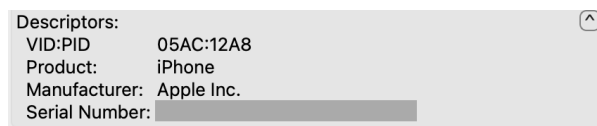



Table 6: *Descriptor table*

Descriptor	Content
VID:PID	16-bit vendor ID and 16-bit product ID
Product	Product name string
Manufacturer	Manufacturer name string
Product serial number	Product serial number
ATT	Indicates device is attached



## Port Tab: Power rules

The right side of the port tab views contains sub-tabs for USB-PD power rules, advertisements, and miscellaneous messages and settings. The power rules section presents a set of vertical tabs on the right side of the port view:

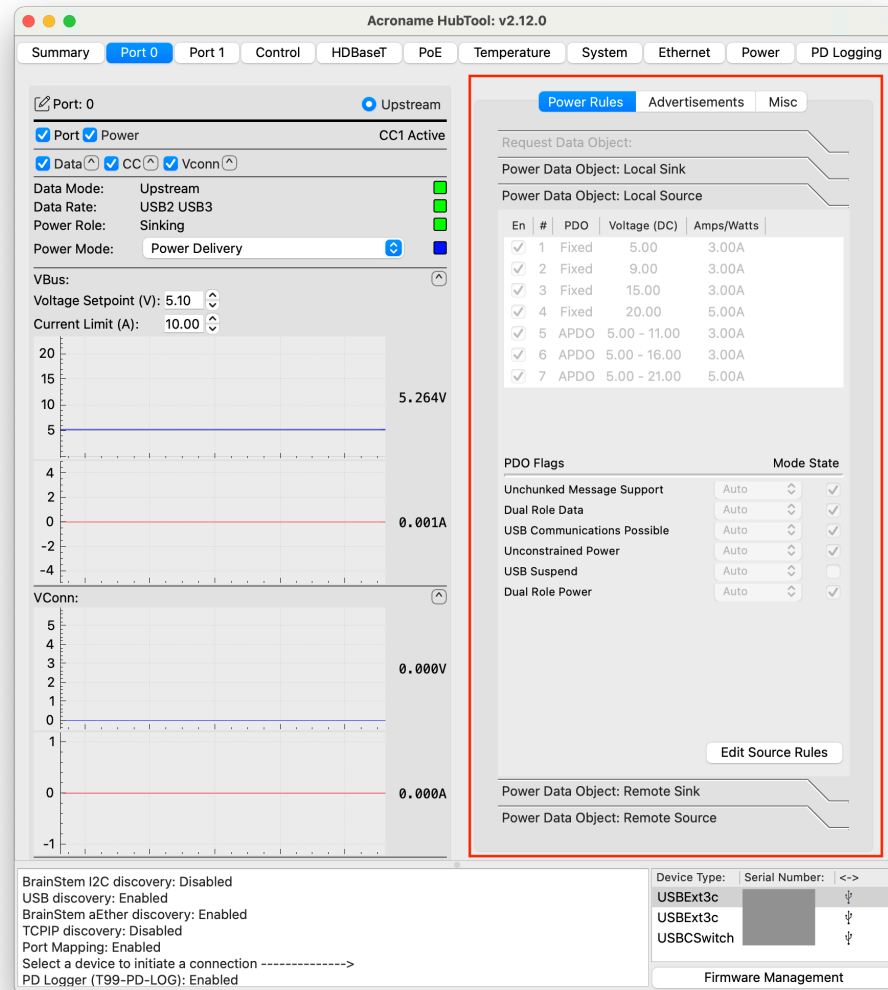

### Power rules vertical tabs

The vertical tabs are:

- *Request Data Object*
- *Power Data Object: Local Sink*
- *Power Data Object: Local Source*
- *Power Data Object: Remote Sink*
- *Power Data Object: Remote Source*

**Request Data Object: Local [Source or Sink]**

A Request Data Object (RDO) tells the host about the sink's capabilities and selects one of the Power Data Objects (PDOs) offered by the source by specifying the PDO's index (1-7).

When the port is configured as a sink:

- Tab label shows "Local Sink"
- Panel displays the RDO sent from the hub (sink) to the source device

When the port is configured as a source:

- Tab label shows "Local Source"
- Panel displays the RDO received by the hub (source) from the sinking device (informational only)

RDO Information	State
Unchunked Message Support	<input type="checkbox"/>
USB Suspend	<input type="checkbox"/>
No USB Communications Possible	<input checked="" type="checkbox"/>
Capability Mismatch	<input type="checkbox"/>
Giveback	<input type="checkbox"/>
Maximum Operate Current	3000mA
Operating Current	3000mA
Object Position (index)	1
Raw	0x1204B12C

Power Data Object: Local Sink

Device Type: Serial Number: <->

Request Data Object: Local Sink

RDO Information	State
Unchunked Message Support	<input checked="" type="checkbox"/>
USB Suspend	<input checked="" type="checkbox"/>
No USB Communications Possible	<input checked="" type="checkbox"/>
Capability Mismatch	<input type="checkbox"/>
Giveback	<input type="checkbox"/>
Maximum Operate Current	1500mA
Operating Current	1500mA
Object Position (index)	1
Raw	0x13825896

Power Data Object: Local Sink  
 Power Data Object: Local Source  
 Power Data Object: Remote Sink  
 Power Data Object: Remote Source -Active- Rule: 1

*RDO local source (left) and local sink (right) views*

Table 7: Request Data Object tab options

RDO Information	Meaning
Unchunked message support	Checked = unchunked mode; supports larger data payloads Unchecked = legacy “chunked” mode; leave unchecked for maximum compatibility
USB suspend	Checked = OK for host to suspend device when in USB suspend mode Unchecked = host should not suspend device in USB suspend mode
No USB communications possible	Device can not communicate over USB
Capability mismatch	Source PDO modes are not sufficient for device to operate at full capability
Giveback	Device can go to a lower power state if needed
Maximum operate current	Maximum current the sinking device is capable of drawing
Operating current	Nominal operating current of the sinking device
Object position (index)	Index of PDO requested, range 1-7
Raw	The RDO message expressed as 32-bit hexadecimal value

## Power Data Object: Local Sink

This tab shows the settings for the port's local sink Power Data Object (PDO). This is how the port tells a remote source about its capabilities and how much power it can accept. If the port is not operating as a sink, these settings have no effect. At the top of the panel is a table of PDO modes that the port can accept as a sink.

Table 8: PDO mode list column headings

Heading	Meaning
En	Enabled; index 1 is always enabled
#	Index of PDO mode (1 – 7)
PDO	PDO type (fixed, battery, variable, APDO)
Voltage (DC)	PDO voltage (range if variable)
Amps / Watts	PDO maximum amperage or wattage

Power Rules

Advertisements

Misc

Request Data Object: Local Sink

Power Data Object: Local Sink

En	#	PDO	Voltage (DC)	Amps/Watts
<input checked="" type="checkbox"/>	1	Fixed	5.00	3.00A
<input checked="" type="checkbox"/>	2	Battery	3.30 - 21.00	100.00W
<input checked="" type="checkbox"/>	3	Variable	3.30 - 21.00	5.00A
<input checked="" type="checkbox"/>	4	APDO	3.30 - 21.00	5.00A
<input type="checkbox"/>	5	Fixed	0.00	0.00A
<input type="checkbox"/>	6	Fixed	0.00	0.00A
<input type="checkbox"/>	7	Fixed	0.00	0.00A

PDO Flags

Mode State

Dual Role Data	Auto	<input checked="" type="checkbox"/>
USB Communications Possible	Auto	<input checked="" type="checkbox"/>
Unconstrained Power	Auto	<input type="checkbox"/>
Higher Capability	Auto	<input checked="" type="checkbox"/>
Dual Role Power	Auto	<input checked="" type="checkbox"/>

Edit Sink Rules

Power Data Object: Local Source

Power Data Object: Remote Sink

Power Data Object: Remote Source -Active- Rule: 1

Local Sink PDO list and flags

Table 9: *PDO flags*

PDO flag	Mode	State	Meaning
Dual Role Data USB Communications Possible	En- able, Dis- able, Auto	Checker if flag is en- abled	Can be host or peripheral Supports USB data
Unconstrained Power Higher Capability Dual Role Power			AC powered or large battery Sink needs more than 5 V for full functionality Can source or sink power

**Edit sink rules button** (requires PD Builder license)

Pops up *Power Rule Editor*.

### Power Data Object: Local Source

This tab shows the settings for the port's local source Power Data Object (PDO). If the port is not operating as a source, these settings have no effect. At the top is a table of PDO modes that the port can provide as a source. If active, the PDO rule index is listed in the tab title.

Table 10: *PDO mode list column headings*

Heading	Meaning
En	Enabled; index 1 is always enabled
#	Index of PDO mode (1 – 7)
PDO	PDO type (fixed, battery, variable, APDO)
Voltage (DC)	PDO voltage (range if variable)
Amps / Watts	PDO maximum amperage or wattage

Power Rules   Advertisements   Misc

Request Data Object: Local Source

Power Data Object: Local Sink

Power Data Object: Local Source -Active- Rule: 4

En	#	PDO	Voltage (DC)	Amps/Watts
<input checked="" type="checkbox"/>	1	Fixed	5.00	3.00A
<input checked="" type="checkbox"/>	2	Fixed	9.00	3.00A
<input checked="" type="checkbox"/>	3	Fixed	15.00	3.00A
<input checked="" type="checkbox"/>	4	Fixed	20.00	5.00A
<input checked="" type="checkbox"/>	5	APDO	5.00 - 11.00	3.00A
<input checked="" type="checkbox"/>	6	APDO	5.00 - 16.00	3.00A
<input checked="" type="checkbox"/>	7	APDO	5.00 - 21.00	5.00A

PDO Flags

	Mode	State
Unchunked Message Support	Auto	<input checked="" type="checkbox"/>
Dual Role Data	Auto	<input checked="" type="checkbox"/>
USB Communications Possible	Auto	<input checked="" type="checkbox"/>
Unconstrained Power	Auto	<input checked="" type="checkbox"/>
USB Suspend	Auto	<input type="checkbox"/>
Dual Role Power	Auto	<input checked="" type="checkbox"/>

RDO

	State
Maximum Operate Current	4700mA
Operating Current	3750mA
Object Position (index)	4
Raw	0x4785DDD6

Edit Source Rules

Power Data Object: Remote Sink

Power Data Object: Remote Source

Local source PDO list and flags

Table 11: PDO flags

PDO flag	Mode	State	Meaning
Unchunked Message Support	En-able, Dis-able, Auto	Checked if flag is en-abled	Checked = unchunked mode; supports larger data payloads Unchecked = legacy “chunked” mode; leave unchecked for maximum compatibility
Dual Role Data			Can be host or peripheral
USB Communications Possible			Supports USB data
Unconstrained Power			AC powered or large battery
USB Suspend			Checked = OK for host to suspend device when in USB suspend mode Unchecked = host should not suspend device in USB suspend mode
Dual Role Power			Can source or sink power

**Edit source rule button** (requires PD Builder license)

Pops up *Power Rule Editor*.

## Power Data Object: Remote Sink

This tab shows the power sink settings for the remote device's Power Data Object (PDO). Since these settings are controlled by the remote device, this tab is informational only. At the top is a list of PDO modes that the remote device can accept as a sink.

Table 12: *PDO mode list column headings*

Heading	Meaning
En	Enabled; index 1 is always enabled
#	Index of PDO mode (1 – 7)
PDO	PDO type (fixed, battery, variable, APDO)
Voltage (DC)	PDO voltage (range if variable)
Amps / Watts	PDO maximum amperage or wattage

The screenshot shows the 'Power Rules' tab with the following content:

- Power Rules** (selected), Advertisements, Misc
- Request Data Object: Local Source
- Power Data Object: Local Sink
- Power Data Object: Local Source -Active- Rule: 4
- Power Data Object: Remote Sink
 

#	PDO	Voltage (DC)	Amps/Watts
1	Fixed	5.00	3.00A
2	Variable	4.75 - 21.00	4.70A
- PDO Flags**

PDO Flags	State
Dual Role Data	<input checked="" type="checkbox"/>
USB Communications Possible	<input checked="" type="checkbox"/>
Unconstrained Power	<input type="checkbox"/>
Higher Capability	<input type="checkbox"/>
Dual Role Power	<input checked="" type="checkbox"/>
- Request Minimum Request Update
- Power Data Object: Remote Source

*Remote sink PDO list and flags*

Table 13: *PDO flags (informational only)*

PDO flag	State	Meaning
Dual Role Data	Checked if flag is enabled	Can be host or peripheral
USB Communications Possible		Supports USB data
Unconstrained Power		AC powered or large battery
Higher Capability		Sink needs more than 5 V for full functionality
Dual Role Power		Can source or sink power

**Request minimum, Request update buttons**

[Not implemented]

---

**Power Data Object: Remote Source**

This tab shows settings for the remote device's Power Data Object (PDO) and its Request Data Object if active. Since the PDO settings are controlled by the remote device, the PDO mode list and flags are informational only. At the top is a list of PDO modes that the remote device can provide as a source. If the remote device is acting as a source, the active PDO rule index is listed in the tab title.



Power Rules

Advertisements

Misc

Request Data Object: Local Source

Power Data Object: Local Sink

Power Data Object: Local Source -Active- Rule: 1

Power Data Object: Remote Sink

Power Data Object: Remote Source

#	PDO	Voltage (DC)	Amps/Watts
1	Fixed	5.00	1.50A

PDO Flags

State

Unchunked Message Support

Dual Role Data

USB Communications Possible

Unconstrained Power

USB Suspend

Dual Role Power

☒

☒

☒

☐

☐

☒

Request Update

Power Rules
Advertisements
Misc

Request Data Object: Local Sink  
Power Data Object: Local Sink  
Power Data Object: Local Source  
Power Data Object: Remote Sink  
Power Data Object: Remote Source -Active- Rule: 1

#	PDO	Voltage (DC)	Amps/Watts
1	Fixed	5.00	1.50A

PDO Flags

Unchunked Message Support

Dual Role Data

USB Communications Possible

Unconstrained Power

USB Suspend

Dual Role Power

State

☒
☒
☒
☐
☐
☒

RDO Control

Maximum Operate Current

Operating Current

Object Position (index)

Raw

State

1500mA

1500mA

1

0x13825896

Request Update

Remote source PDO list, flags and RDO control

Table 14: PDO mode list column headings

Heading	Meaning
En	Enabled; index 1 is always enabled
#	Index of PDO mode (1 – 7)
PDO	PDO type (fixed, battery, variable, APDO)
Voltage (DC)	PDO voltage (range if variable)
Amps / Watts	PDO maximum amperage or wattage

Table 15: Remote source PDO flags (informational only)

PDO flag	State	Meaning
Unchunked Message Support	Checked if flag is enabled	Checked = unchunked mode; supports larger data payloads Unchecked = legacy “chunked” mode; leave unchecked for maximum compatibility
Dual Role Data		Can be host or peripheral
USB Communications Possible		Supports USB data
Unconstrained Power		AC powered or large battery
USB Suspend		Checked = OK for host to suspend device when in USB suspend mode Unchecked = host should not suspend device in USB suspend mode
Dual Role Power		Can source or sink power

**RDO control**

When the hub port is acting as a sink, some sink RDO settings can be controlled directly from the bottom of the Remote Source tab. These settings mirror the fields in the *Request Data Object: Local Sink* tab.

Table 16: Remote source RDO control settings


RDO Information	Meaning
Maximum operate current	Maximum current the sinking device is capable of drawing
Operating current	Nominal operating current of the sinking device
Object position (index)	Index of PDO requested, range 1-7
Raw	The RDO message expressed as 32-bit hexadecimal value

**Request update button**

[Not implemented]

**Power rule editor (requires PD builder add-on feature<sup>57</sup> )**

<sup>57</sup> <https://acroname.com/store/t99-pd-builder>

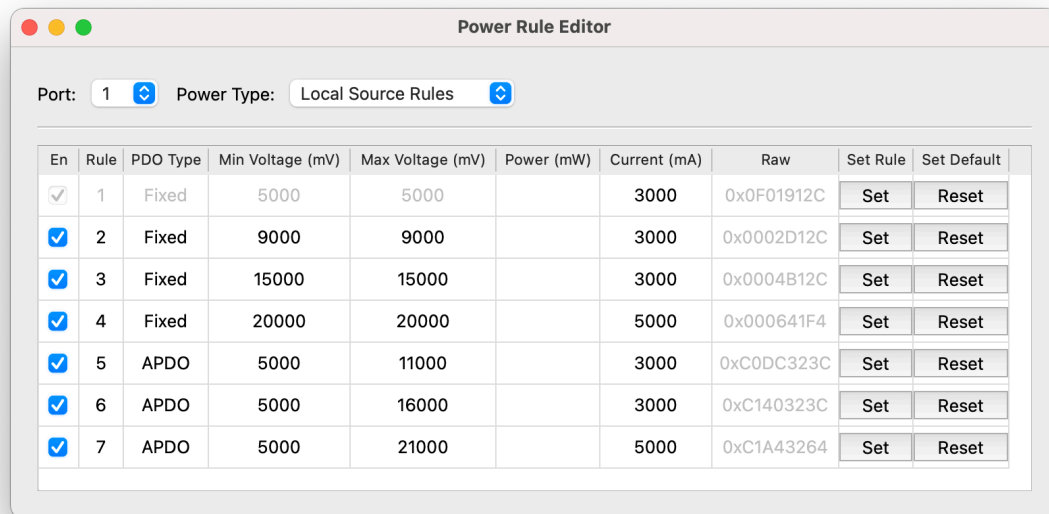

The power rule editor sets sink and source power rules for each port.


Table 17: *Power rule editor headings*

Heading	Meaning
En	Enabled; index 1 is always enabled
Rule	Index of PDO mode (1 – 7)
PDO	PDO type (fixed, battery, variable, APDO)
Min Voltage (mV)	Min PDO voltage
Max Voltage (mV)	Max PDO voltage
Power (mW)	Max PDO power
Current (mA)	Max PDO current
Raw	Raw bytes of PDO message
Set rule	Set rule after changes
Set default	Return rule to default

Table 18: *PDO Types*

PDO type	Definition
Fixed	Fixed supply voltage of 5 V, 9 V, 15 V, 20 V, current limit 0 A – 5 A. Source must have at least one fixed PDO at 5 V
Variable	Represents a poorly regulated supply. The voltage must stay between the minimum and maximum voltage; minimum voltage must be $\geq 80\%$ of maximum voltage
Battery	Batteries can be connected to VBus directly as a source. Specifies maximum and minimum voltage (in 50 mV steps) and maximum power (in 250 mW steps)
APDO	Programmatically controllable source. Voltage range set in 20 mV steps, up to 3.3V – 21V. Current limit 0 A – 5 A

## Port Tab: Advertisements

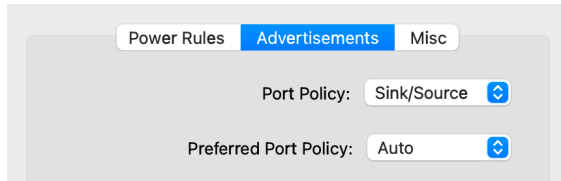

Power Rules   **Advertisements**   Misc

Port Policy: Sink/Source

Preferred Port Policy: Auto

### *Power role advertisements subtab*

USB-PD advertisements tell connected devices the power policy of the port and its preferred policy.

#### Port policy

- **None** - no power
- **Source** - provides source
- **Sink** - receives power
- **Sink / Source** - can provide or receive power according to the *Preferred port policy*

**Preferred port policy** (Only has an effect if port policy is set to *Sink / Source*)

- **None** - no power
- **Source** - provides power
- **Sink** - receives power
- **Follow data** - provides power if downstream-facing, receives power if upstream-facing
- **Auto** - negotiate with the connected device

**Port Tab: Misc**

Power Rules   Advertisements   **Misc**

**Cable Information:**

Voltage Maximum:	N/A
Current Maximum:	N/A
Speed Maximum:	N/A
Type:	N/A
Orientation:	CC1

**Send Request:**

Hard Reset

Send

**Overrides:**

- ☐ Cable Current
- ☐ Port Power Limit
- ☐ Auto Discovery

*Misc subtab*

The Misc subtab contains *Cable information*, *Send request*, and *Overrides*

**Cable information**

Power Rules   Advertisements   **Misc**

**Cable Information:**

Voltage Maximum:	50 VDC
Current Maximum:	5 A
Speed Maximum:	USB 3.2 / USB 4 Gen 2
Type:	Passive (E-marked)
Orientation:	CC1

**Send Request:**

Manufacturer Info Soppp

Send

*Cable information panel with e-mark data*

Displays power and data capacity for e-marked cables connected to the hub and a device.

- Hub port must be providing  $V_{\text{CONN}}$  ( $V_{\text{CONN}}$  strip chart showing 5 V)

- If  $V_{\text{CONN}}$  strip chart shows 0 V, send “VConn Swap” message to swap whether the hub or device is providing  $V_{\text{CONN}}$

To read e-mark without a device, connect both ends of the cable to ports of USBExt3c, with one port set as *sink* or *auto* and the other set to *source* or *auto*. View the cable info panel on the source port.

## Send Request

This control sends USB PD requests to the connected device to initiate a connection sequence. There is no guarantee that the request will succeed, and many of these request messages will be unsupported by the connected device.

Send request	Definition
Hard Reset	Reinitialize PD communications and cycle $V_{\text{BUS}}$
Soft Reset	Reinitialize PD communications, but maintains power connection
Data Reset	Cycle USB data connection [unimplemented]
Power Role Swap	Exchange source and sink power roles
Power Fast Role Swap	Fast exchange source and sink power roles
Data Role Swap	Swap upstream and downstream ask roles
VCONN Swap	Swap whether the hub or device is supplying $V_{\text{CONN}}$
Sink Go To Min	Sink goes to minimum power draw
Request Remote Source PDOs	Get PDO from remote source
Request Remote Sink PDOs	Get PDO from remote sink
Request Remote Extended Source Caps	Get extended source capabilities
Request Remote Extended Sink Caps	Get extended sink capabilities
Status	Get status
PPS Status	Get PPS status
Battery Capabilities	Get battery capabilities (Design cap, last full cap)
Battery Status	Get Battery status (state of charge, charging status)
Manufacturer Info Sop	Get device manufacture info
Manufacturer Info Sopp	Get cable manufacturer info (nearest $V_{\text{CONN}}$ sourcing port)
Manufacturer Info Soppp	Get cable manufacturer info (opposite from $V_{\text{CONN}}$ sourcing port)
Discover Identity Sop	Device type and capabilities
Discover Identity Sopp	Cable type and capabilities ( $V_{\text{CONN}}$ end)
Discover Identity Soppp	Cable type and capabilities (not $V_{\text{CONN}}$ end)
Revision	USB PD revision and version numbers for connected device
Source Info	Source port power capability
Country Codes	Country of origin
Country Info	Country of origin

## Overrides

**Cable current** – overrides the 3 A current limit for cables that don't specify 5 A via e-mark

**Port power limit** – overrides port power budgeting and allows full power output up to 105 W per port

**Warning:** Can exceed power supply current limit and brown out the hub, triggering a reset

**Auto discovery** – overrides the auto discovery feature. When enabled, the hub will only establish a basic power connection and not request vendor information. Used for legacy compatibility and debugging.

## HDBaseT Tab

The HDBaseT tab shows the status of the HDBaseT-USB3 connection. The top panel shows data from the local extender on the left and the remote extender on the right.

- Index (local or remote)
- State (Device present, Link role and status)
- Serial Number (of the VS6320)
- VS6320 Firmware Version
- Cable Length (m)
- Mean Squared Error A/B ( $\mu$ dB)
- Retransmission rate (# messages between retransmission, 0 = no errors)
- Link Utilization ( $\mu$ %)
- Encoding state (e.g. PAM 8)
- Link role (Auto, Leader, Follower)

Below that is a strip chart that can plot:

- Mean square error (A or B, local, or remote)
- Link Utilization % (local or remote)
- Retransmission rate (local or remote)

**Autoscroll** - toggles scrolling and the time value (sec) sets the visible buffer size.

**Logging** - enables storing data beyond the autoscroll duration.

**Update** - sets the plot update time in mS. Low values make the plot scroll more smoothly.

**Axis Control** - selects the axis to zoom when scrolling with the mouse wheel (Time, Mean squared error, Link utilization, or Transmission rate)


**Generate Plot** - opens a new plot window

**Save CSV** -saves the current buffer to one CSV per channel selected





## PoE Tab

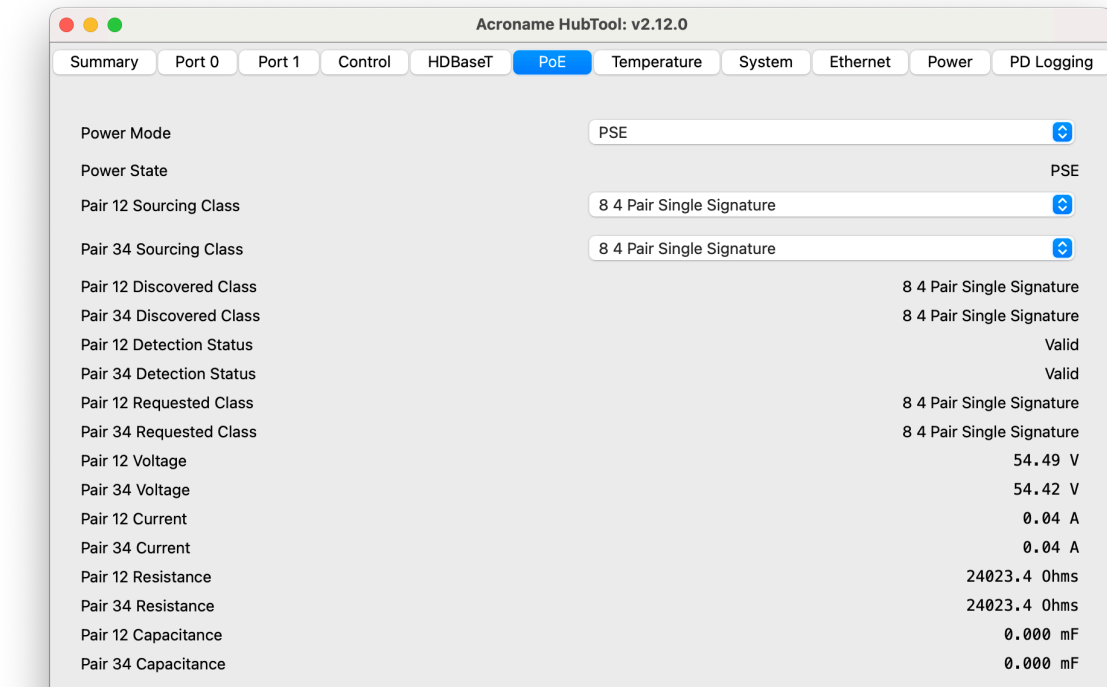

The **PoE** tab shows the status of the **Power over Ethernet** system on the extension link. The PoE controller automatically manages power distribution between endpoints based on available sources and connected loads. For testing, diagnostics, and advanced applications, **manual control and monitoring** are available.


### Power Mode / State

- **Power Mode** — sets the device role: **PSE (source)**, **PD (sink)**, **Auto (default)**, or **Off**
- **Power State** — reports the current operating mode (**PSE**, **PD**, or **Off**)

### Per-Pair Values (Pairs 1–2 and 3–4)


- **Sourcing Class** — sets the PoE source class signature
- **Discovered Class** — shows the negotiated class after detection
- **Detection Status** — indicates connection condition (**valid**, **short**, **open**, **Hi-Z**, **Lo-Z**, **switch failure**, or **unknown**)
- **Requested Class** — class requested from the **PD** to the **PSE**
- **Voltage (V)**
- **Current (A)**
- **Resistance (mΩ)**
- **Capacitance (μF)**

Temperature Tab

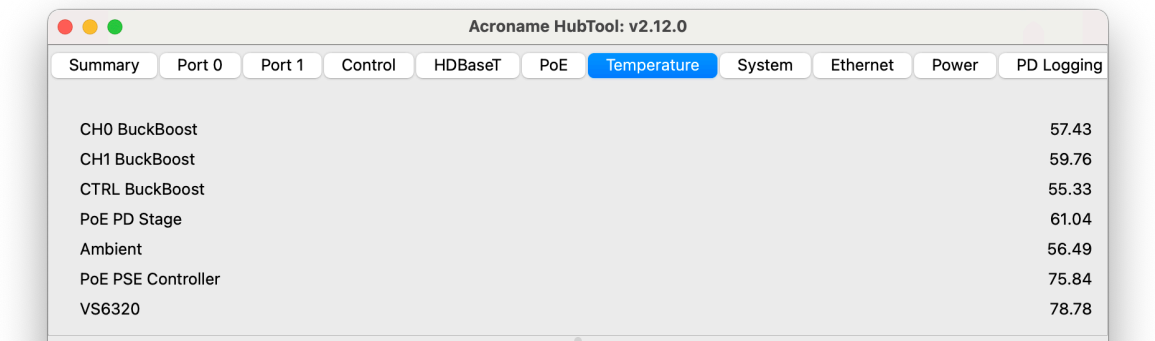

The Temperature tab shows temperature readings in Celsius for internal parts of the USBExt3c.

System Tab

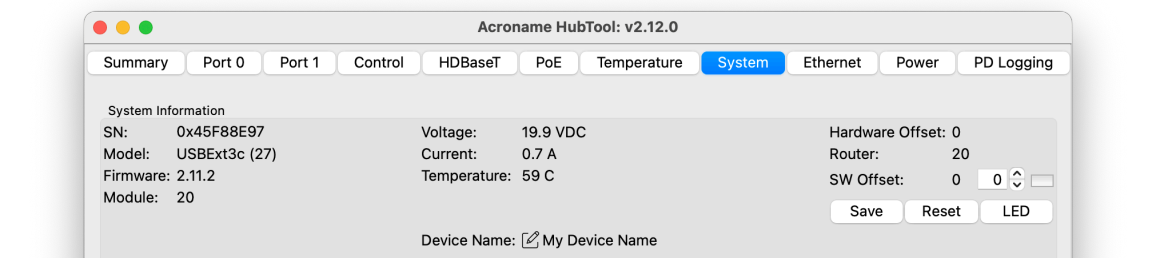

*HubTool USBExt3c system tab*

The system tab contains information and settings for the USBExt3c.

System information

Heading	Meaning
SN	USBExt3c serial number
Model	Model name and number, e.g. USBExt3c (27)
Firmware	Currently installed firmware version
Module	Address of the module on the Brainstem network
Voltage	Voltage at the input power source port
Current	Input current at the input power source port
Temperature	System temperature
Hardware offset	Increments Brainstem module address by a hardware setting - fixed to 0 in USBExt3c
Router	Address of the routing Brainstem module
Software offset	Increment the module address. Click the button to send to the device, Save and Reset to apply
Save	Store select changed settings
Reset	Soft reset of the Extender
LED	Toggles blue User LED (person icon next to the control port), used for debugging and to identify the extender

## Ethernet Tab

The screenshot shows the 'Ethernet' tab in the Acroname HubTool v2.12.0 application. The interface includes a top navigation bar with tabs for Summary, Port 0, Port 1, Control, HDBaseT, PoE, Temperature, System, Ethernet (selected), Power, and PD Logging. The main content area is titled 'Network Mode:' and features a 'Static' button with a dropdown arrow. Below this, there are input fields for IPv4 Address (192.168.44.42), IPv4 Netmask (255.255.255.0), IPv4 Gateway (192.168.44.43), and IPv4 DNS (208.67.222.222). A 'Set' button is located to the right of the DNS field. At the bottom, there are input fields for Mac Address (04:E6:62:00:00:9A), Hostname (usbext3c-45f88e9), and REST Server Port (0).

The Ethernet tab shows network settings for the Ethernet connection. For most setups, we recommend a direct Ethernet link between the host test machine and the USBExt3c.

When using a pair of USBExt3c connected by HDBaseT-USB3, only one Ethernet connection is required; the second device is available through Brainstem networking over the extension link.

By default, the USBExt3c acts as a DHCP client and will receive an IP address from a DHCP server. If no server is detected, the USBExt3c falls back to a static IP address of 192.168.44.42. In static mode, the host computer interface IP must be set to an address in the 192.168.44.x range. The DHCP client is limited to hosts on the local link and does not operate across network bridges or gateways.

Host firewall rules must allow:

- Outgoing UDP multicast on port 9888
- Incoming UDP responses on port 9889
- Outgoing TCP connections to port 8000
- Incoming / Outgoing TCP connections on ports 9005 and 9006

**Network Mode** - How the IP address is set:

- None - no network
- DHCP (default) - receive IP from DHCP server
- Static, defaults to 192.168.44.42

**IPv4 Address** - e.g. 192.168.44.42

**IPv4 Netmask** - 255.255.255.0

**IPv4 Gateway** - host computer IP


**IPv4 DNS** - defaults to 208.67.222.222

**Mac Address** - unique to the specific USBExt3c

**Hostname** - defaults to "usbext3c-[first 7 digits of hub serial]"

**REST Server port** - REST port on host

## Power Tab

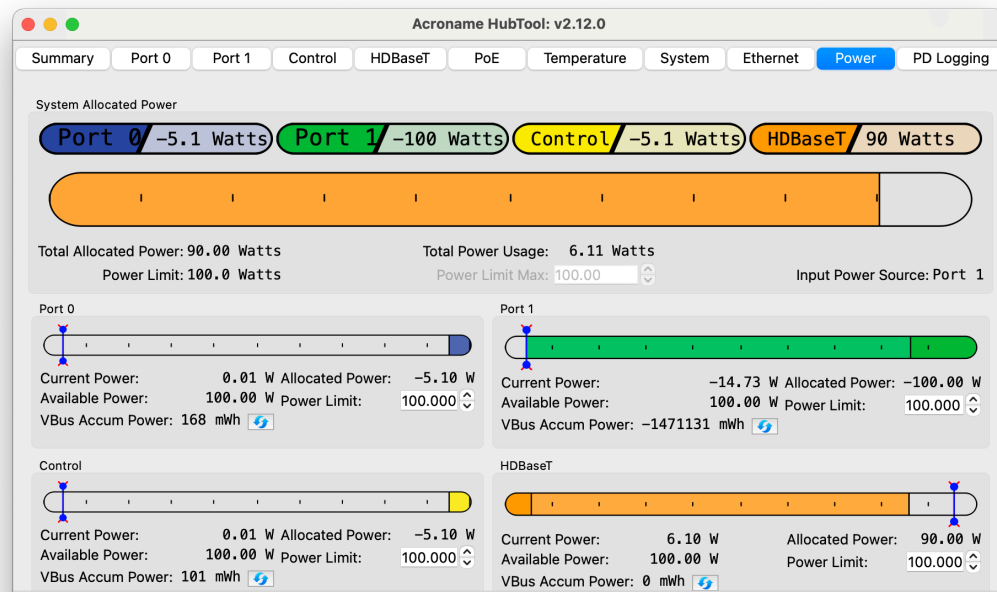


*HubTool USBHub3c Power tab*

The power tab shows the allocation and actual flow of power through the hub ports and PoE link.

## System allocated power panel

Across the top of this panel are the allocated currents for each port. Positive currents represent that the port is a power source, negative currents are for sinks.

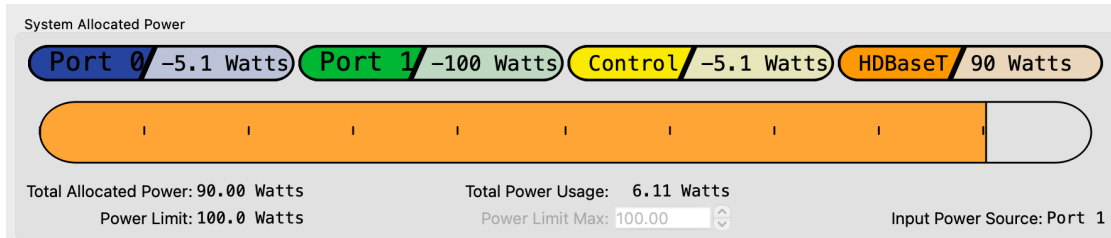

### System allocated power panel

Below the row of ports is a visualization of the stackup of allocated currents.

**Total allocated power** - sum of the allocated source power


**Power limit** - maximum power that can be allocated across all ports. Determined by input power minus nominal losses, e.g. 90 W for 100 W supply

**Total power usage** - sum of actual power being sourced

**Power limit max** - set power limit for DC input when unregulated power is provided to the DC port

**Input power source** - input port with the highest power capability

## Port power panel

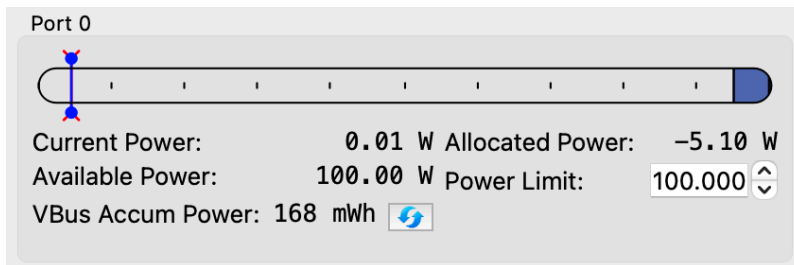

### Port power panel

**Current power** - actual port power output (positive) or input (negative)


**Available power** - maximum power that could be allocated to the port, not to exceed *Power limit*

**VBus accum power** - total energy sunk or sourced on  $V_{BUS}$  since reset

**Allocated power** - power allocated to the port, not to exceed *Power limit*

**Power limit** - power limit for the port, max 105 W

## PD Logging Tab (Add-on feature)

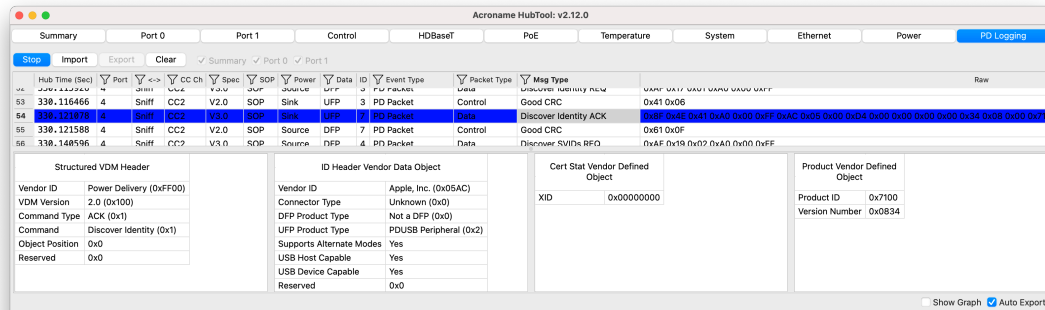

### PD logging tab view

**PD logging**<sup>58</sup> is a software add-on feature enabling capture, logging, and decoding of USB PD communications on all USB-C ports of the hub, including power negotiations and timing. At the top of the panel are logging controls and port selection toggles.

**Stop** - stops logging


**Import** - imports a CSV log file

**Export** - exports a CSV log file (stop logging before export)

**Clear** - clears the PD log


**Port toggles** - select which ports to monitor (can only change toggles when logging is stopped)

**Show graph** - when checked, clicking on an event pops up the *Port Plot* graph window and highlights the corresponding PD packet. Clicking on a yellow PD message in the port plot highlights the corresponding message in the log

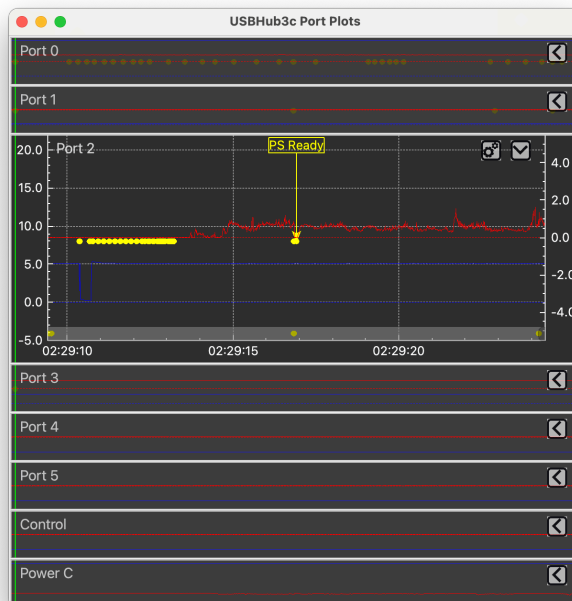

<sup>58</sup> <https://acroname.com/store/t99-pd-log>

*Graph view with highlighted PD packet*

Below these controls is the PD packet log. The left axis is the row number, which resets when the log is cleared. Columns can be filtered by clicking the filter icon () on the column headings:

Hub Time (Sec)	Port	<->	Spec	SOP	Power	Data	ID	Event Type	Packet Type	Msg Type	Raw
----------------	------	-----	------	-----	-------	------	----	------------	-------------	----------	-----

*PD packet log headings*

**Time** - clicking on this heading cycles among time references:

- Hub time (s) - time since the hub powered on
- App time (hh:mm:ss) - time since the HubTool App was launched
- System time (yyyy.MM.dd hh:mm:ss:zzzz) - date and time

**Port** - ports 0,1, Control (2)

<-> - message direction - *RX*, *TX*, or '-' (none)

**Spec** - USB PD version

**SOP\*** - "Start Of Packet"

- SOP - for messages between source and sink
- SOP' - for messages to the cable connector closest to the downstream-facing port (DFP)
- SOP" - for messages to the cable connector closest to the upstream-facing port (UFP)

**Power** - *sink*, *source*, *none*

**Data** - *UFP*, *DFP*, '-'

**ID** - message ID, (0 – 7), increments with each new message. Acknowledgements should match message ID

**Event type** - description of the event

**Packet type**

- Control - short messages that typically require no data exchange
- Data - messages contain data objects that are transmitted between devices
- Extended - data messages with larger data payloads


**Message type** - description of message

**Raw** - raw PD message (hexadecimal)

Each tab except *Summary* can be dragged out of the main hubtool window into its own window to allow simultaneous viewing of multiple tabs.



USBHub3c

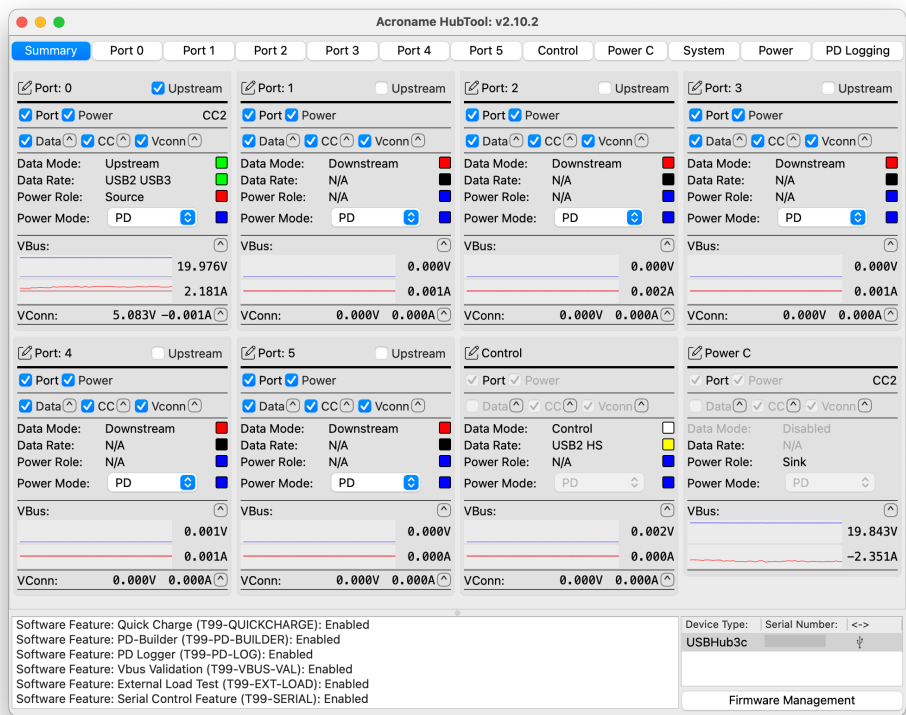

59 HubTool interface

for USBHub3c

USBHub3c<sup>60</sup> is an industrial USB-C hub featuring 6 full-featured 10 Gbps USB 3.2 data ports, one USB 2.0 control port, and a dedicated PD power input port. Each data port can provide up to 100 W of power and can act as a downstream-facing or upstream-facing port.

HubTool presents a unified dashboard to control and view the state of USBHub3c.

Add-on software features



Add-on features listed in HubTool console after selecting the USBHub3c on the right

USBHub3c supports add-on software features, which can be purchased to enable new capabilities. When a USBHub3c is selected in HubTool, the console will list the available add-on software features and show their enabled / disabled status on the device.

<sup>59</sup> <https://acroname.com/store/programmable-industrial-power-delivery-hub-s99-usbhub-3c-pro>


<sup>60</sup> <https://acroname.com/store/programmable-industrial-power-delivery-hub-s99-usbhub-3c-pro>

Table 19: Add-on licensed software features

Feature	Capability
Quick charge <sup>61</sup>	Support Qualcomm Quick Charge® 2 and 3 on ports 0 - 5 (Pro model only)
PD builder <sup>62</sup>	Edit Power Data Objects (PDOs) on each port to emulate any USB-PD configuration
PD logger <sup>63</sup>	Log USB-PD communications on all ports
VBus validation <sup>64</sup>	Override normal VBus voltage set points and current limits. Used in testing a device's response to incorrect VBus voltages after USB-PD negotiation.
External load test <sup>65</sup>	Test VBus sinking with external programmable or resistive electronic loads. Use with <a href="#">External Load Expansion Accessory</a> <sup>66</sup>
Serial control <sup>67</sup>	Enable RS-232 serial control of the hub via the <a href="#">serial expansion accessory</a> <sup>68</sup>

Licenses for additional features are [available for purchase](#)<sup>69</sup>. After purchase, [update the hub firmware](#) to enable the new features.

## Dashboard tabs



### HubTool USBHub3c dashboard tab view

After selecting USBHub3c, HubTool will launch the device dashboard in summary view. Buttons along the top of the window represent tabs for:

## Summary Tab

The summary tab displays simplified interface panels for Ports 0-5, Control port, and Power C port (power input on rear panel).

### Summary tab view

Each port interface panel shows a consolidated view of the corresponding [port tab](#).

### Port panel in summary view

<sup>61</sup> <https://acroname.com/store/t99-quickcharge>

<sup>62</sup> <https://acroname.com/store/t99-pd-builder>

<sup>63</sup> <https://acroname.com/store/t99-pd-log>

<sup>64</sup> <https://acroname.com/store/t99-vbus-val>



<sup>65</sup> <https://acroname.com/store/t99-ext-load>

<sup>66</sup> <https://acroname.com/store/s101-load-exp>


<sup>67</sup> <https://acroname.com/store/t99-ext-load>

<sup>68</sup> <https://acroname.com/store/s103-serial-exp>

<sup>69</sup> [https://acroname.com/store-grid/field\\_category/Software-Licenses](https://acroname.com/store-grid/field_category/Software-Licenses)

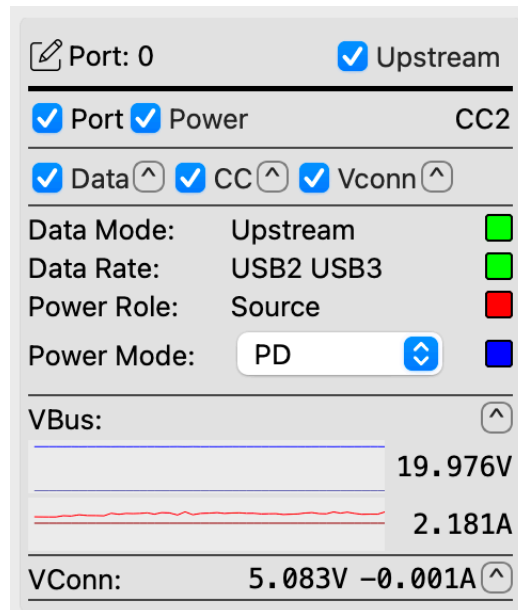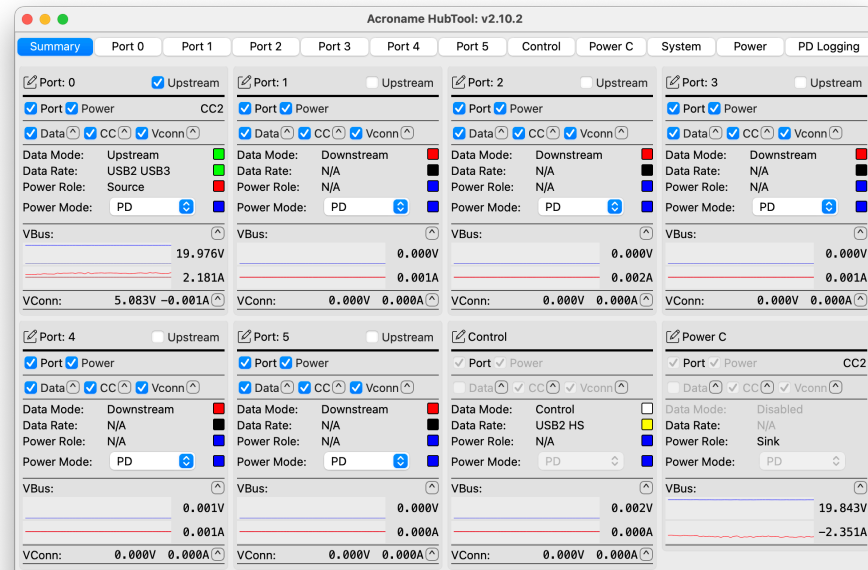

## Port Tabs

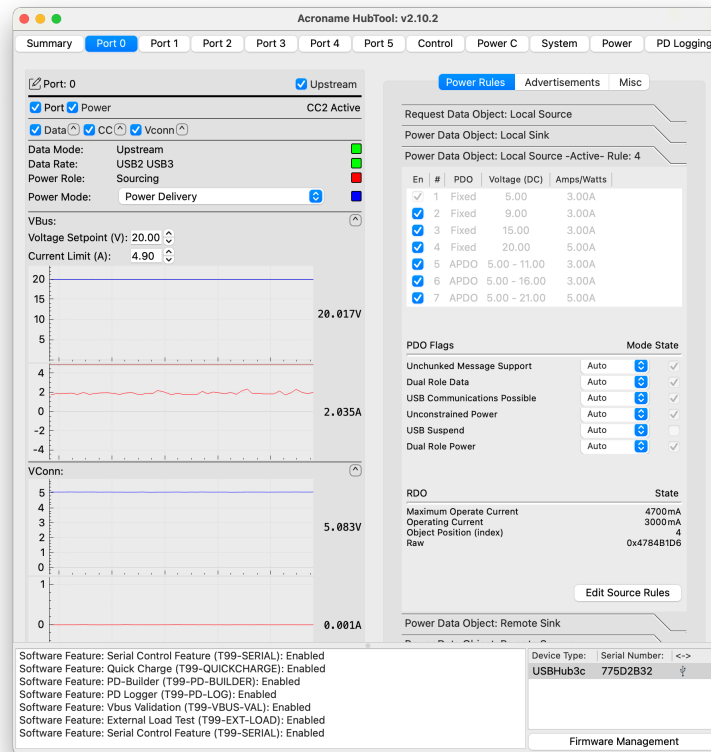


The port tabs show a more detailed view of each port. Control and Power C ports have specialized functions and some options are unavailable. The left side of the port tab contains *Power and data settings*. The right side of the port tab views contains sub tabs for USB-PD *Power rules*, *Advertisements*, and *Miscellaneous messages and settings*.


### Port Tab: Power and Data Settings

#### Port tab view - power and data settings

The left side of each port tab view contains power and data settings for the port. At the top are the *port name* and *upstream toggle*.

**Port name** (editable  - friendly port name used by HubTool and ControlRoom)

**Upstream toggle** - indicates and selects which port is in upstream mode and able to connect to a host

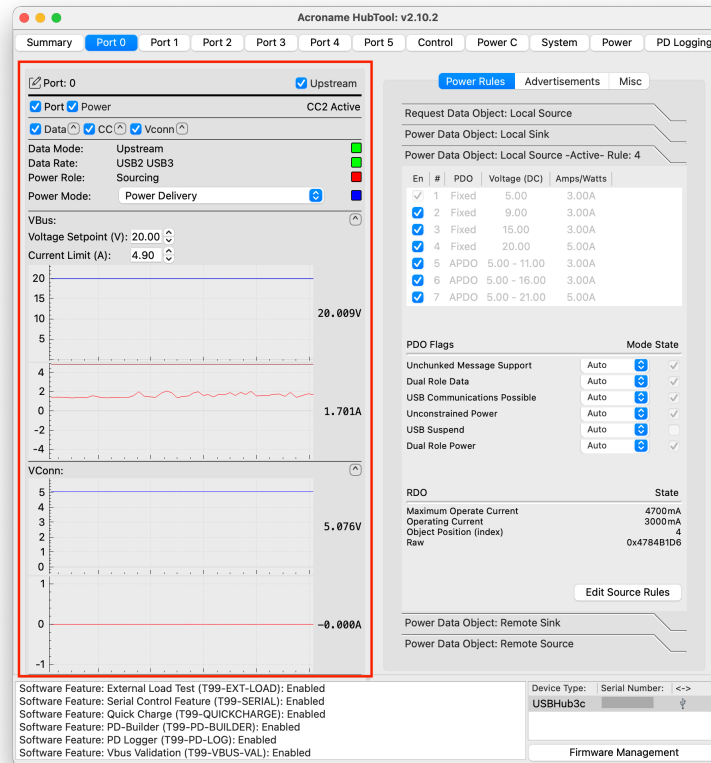






## Power and data toggles

Below the port name are the power and data toggles. Click the carats (⤴) to expand the view. Clicking the Data carat again cycles through views.



Table 20: Power and data toggles

Toggle name		Enables and disables
Port		Port data and power
Power		VBus
Data		All data
1x 	HS	USB 2 (High Speed) pins
	SS	USB 3 (SuperSpeed) pins
2x 	HSA, HSB	HS pins side A and B
	SSA, SSB	SS pins side A and B
3x 	HS Routing:	
	Follow CC	Normal operation
	Side 1	Force Side A
	Side 2	Force Side B
	Shorted	HS data on both sides
	SS Routing:	
	Follow CC	Normal operation
	Side 1	Force Side A
	Side 2	Force Side B
CC		Both CC pins
	CC1, CC2	CC pins individually
Vconn		Vconn pins
	Vconn1, Vconn2	Vconn pins individually

### Data and power status, power mode

Below the toggles are *data mode*, *data rate*, and *power role* status indicators, followed by the *power mode* menu. The virtual LED color corresponds to the color of the real LED indicators on the USBHub3c front panel.















Data Mode:	Upstream	
Data Rate:	USB2 USB3 SuperSpeed+	
Power Role:	Sourcing	
Power Mode:	Power Delivery 	

Table 21: Data and power status





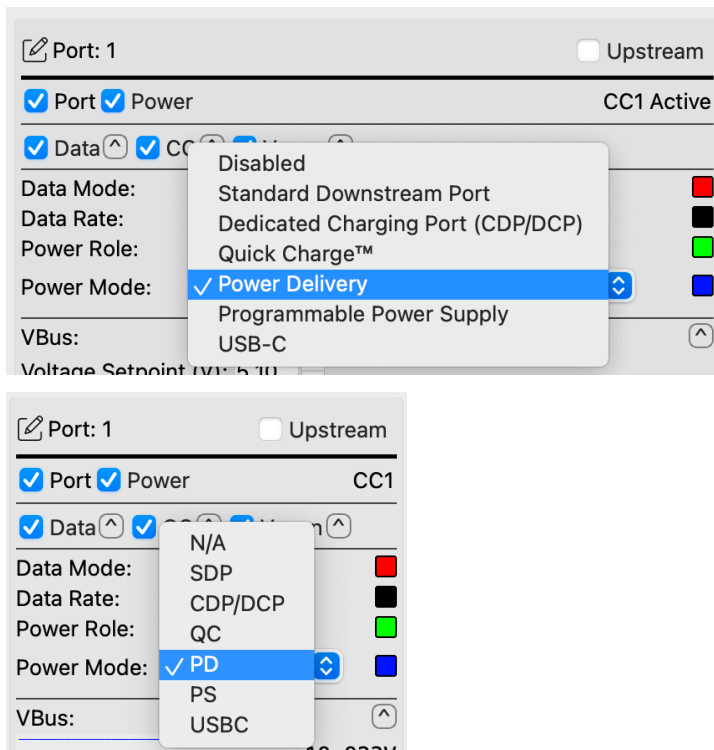


Name	Options	Virtual LED color
Data mode	Upstream (to host)	 Green
	Downstream	 Red
	Control port	 White
Data rate (highest speed)	USB 2	 Yellow
	USB 3 (5 Gb/s)	 Green
	USB 3 SuperSpeed+ (10 Gb/s)	 Blue
Power role	Sinking (receives power)	 Green
	Sourcing (provides power)	 Red

Port power mode is selected from a dropdown menu. In the summary view, the modes are abbreviated.



Power mode selection in port view (left) and summary view (right)

Table 22: Power modes

Summary abbreviation	Power mode	Definition	Virtual LED
N/A	Disabled	Power off	 Black
SDP	Standard Downstream Port	5 V, 900 mA	 Red
CDP/D	Dedicated Charging Port (CDP/DCP)	5 V, 3 A	 Red
QC	Quick Charge™	Qualcomm® Quick Charge™ 2.0 and 3.0 fast charging, requires Quick Charge feature license 3 A	 Green
PD	Power Delivery	USB-PD revision 2.0 and 3.2 compliant PD fixed voltage 5 - 20 V up to 5 A, USB PD-PPS and QC 4+ variable voltage up to 5 - 21 V, 5 A	 Blue
PS	Programmable Power Supply	Manually set 2.8 V – 21 V and 0 A – 5 A, requires VBus validation feature license	 White
USBC	USB-C	5 V, 3 A	 Purple

In USB-C and PD modes, the VBus is only enabled after strapping resistors are detected on the CC lines, while SDP, CDP/DCP, PS, and QC modes provide VBus continuously. In CDP and SDP modes, the port acts as a source if downward facing, and a sink if upward facing.

### VBus voltage and current control

(Requires [VBus validation add-on<sup>70</sup>](https://acroname.com/reference/devices/usbhub3c/software_features/vbus_validation.html))

Power Mode:

Programmable Power Supply

VBus:

Voltage Setpoint (V):
11.90

Current Limit (A):
1.25

*Manually set VBus voltage and current*

When **Programmable Power Supply (PS)** mode is enabled, VBus voltage setpoint and current limit can be set directly, transforming the port into a programmable power supply capable of supplying up to 100 Watts. These are saveable settings (System tab / Save) that persist through reset.

<sup>70</sup> [https://acroname.com/reference/devices/usbhub3c/software\\_features/vbus\\_validation.html](https://acroname.com/reference/devices/usbhub3c/software_features/vbus_validation.html)



In **Power Delivery (PD)** mode, the user-set values override the negotiated values. However, PD negotiations are still active and PD events or errors can trigger re-negotiation, which will replace the user-set values. These values should only be changed when the power role is set to *sourcing*.


In **USB-C, SDP, CDP/DCP** modes, VBus settings revert to 5 V and default current on port connect or disconnect.

Setting	Value
Voltage setpoint	2.8 V – 21 V
Current limit	0 A – 5 A

**Warning:** Can damage attached equipment!

### Voltage and current display


Shows a graph of the VBus and VConn voltage and current of the port.

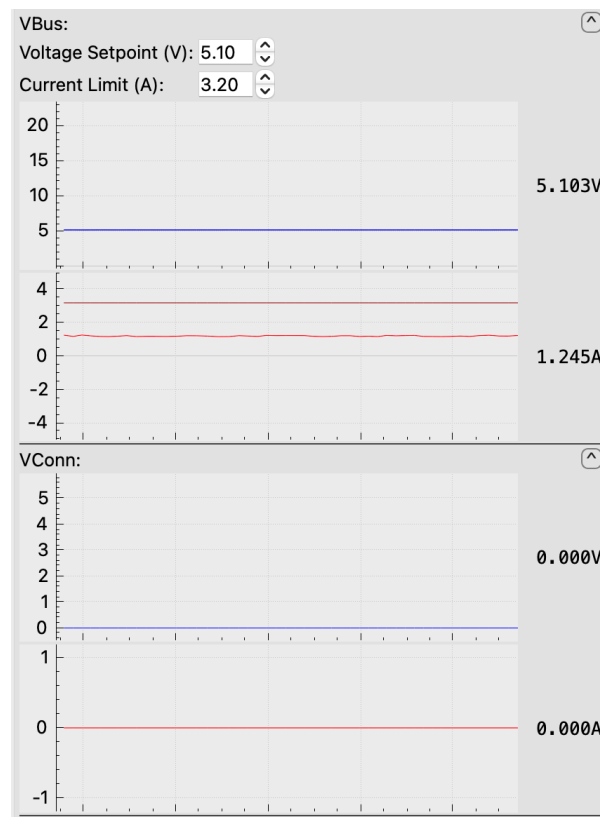

#### *VBus and VConn panel view*

Clicking on the port graph pops up the Port Plots window with a larger rolling strip chart showing all ports. Click the carat (⏏) to expand each port chart. If *PD logging* is enabled, PD messages will be marked in yellow.

#### *Port Plots window*

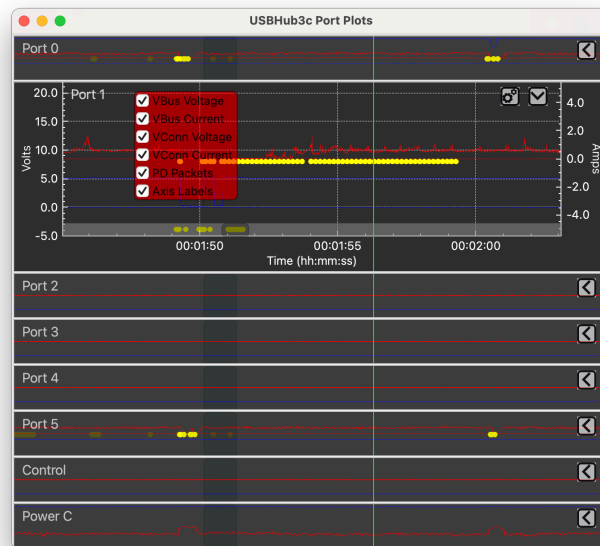

**Left vertical axis** – voltage (V)

**Right vertical axis** – current (A)

**Horizontal axis** – time (s)

By default, the plot will be scrolling. To stop scrolling, drag the dark gray scroll bar to the left. To enable scroll-to-zoom, click the desired axis.

## Device descriptors

If Options > Port Mapping is selected, when a device is attached to a downstream port, its descriptors will scroll at the bottom of the port panel. Click the carat (⤴) to expand:


Descriptors: ⤴	
VID:PID	05AC:12A8
Product:	iPhone
Manufacturer:	Apple Inc.
Serial Number:	

Table 23: *Descriptor table*

Descriptor	Content
VID:PID	16-bit vendor ID and 16-bit product ID
Product	Product name string
Manufacturer	Manufacturer name string
Product serial number	Product serial number
ATT	Indicates device is attached

## Port Tab: Power Rules

The right side of the port tab views contains sub-tabs for USB-PD power rules, advertisements, and miscellaneous messages and settings. The power rules section presents a set of vertical tabs on the right side of the port view:

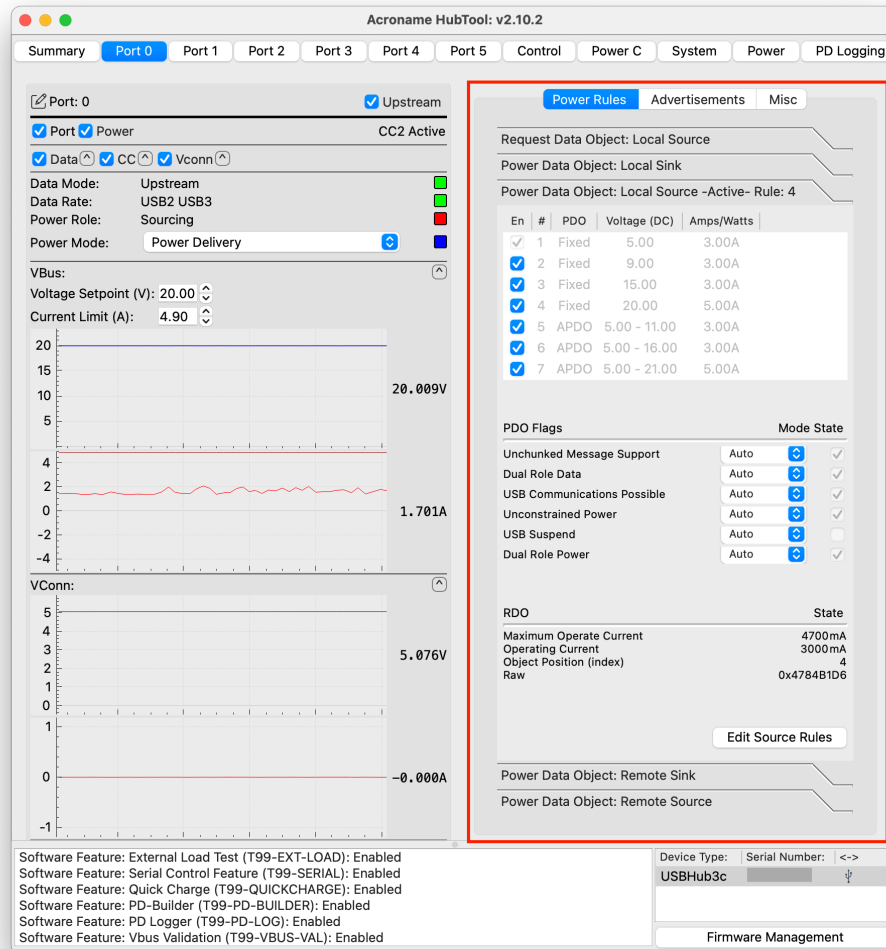

### Power rules vertical tabs

The vertical tabs are:

- [Request Data Object](#)
- [Power Data Object: Local Sink](#)
- [Power Data Object: Local Source](#)
- [Power Data Object: Remote Sink](#)
- [Power Data Object: Remote Source](#)

**Request Data Object: Local [Source or Sink]**

A Request Data Object (RDO) tells the host about the sink's capabilities and selects one of the Power Data Objects (PDOs) offered by the source by specifying the PDO's index (1-7).

When the port is configured as a sink:

- Tab label shows "Local Sink"
- Panel displays the RDO sent from the hub (sink) to the source device

When the port is configured as a source:

- Tab label shows "Local Source"
- Panel displays the RDO received by the hub (source) from the sinking device (informational only)

The screenshot shows a software window with three tabs: "Power Rules" (selected), "Advertisements", and "Misc". The main panel is titled "Request Data Object: Local Source". It contains a table with two columns: "RDO Information" and "State".

RDO Information	State
Unchunked Message Support	<input type="checkbox"/>
USB Suspend	<input type="checkbox"/>
No USB Communications Possible	<input checked="" type="checkbox"/>
Capability Mismatch	<input type="checkbox"/>
Giveback	<input type="checkbox"/>
Maximum Operate Current	3000mA
Operating Current	3000mA
Object Position (index)	1
Raw	0x1204B12C

At the bottom of the window, there is a section titled "Power Data Object: Local Sink" with fields for "Device Type:", "Serial Number:", and a "<->" button.

Power Rules   Advertisements   Misc

Request Data Object: Local Sink

RDO Information	State
Unchunked Message Support	<input checked="" type="checkbox"/>
USB Suspend	<input checked="" type="checkbox"/>
No USB Communications Possible	<input checked="" type="checkbox"/>
Capability Mismatch	<input type="checkbox"/>
Giveback	<input type="checkbox"/>
Maximum Operate Current	1500mA
Operating Current	1500mA
Object Position (index)	1
Raw	0x13825896

Power Data Object: Local Sink

Power Data Object: Local Source

Power Data Object: Remote Sink

Power Data Object: Remote Source -Active- Rule: 1

*RDO local source (left) and local sink (right) views*

Table 24: *Request Data Object tab options*

RDO Information	Meaning
Unchunked message support	Checked = unchunked mode; supports larger data payloads Unchecked = legacy “chunked” mode; leave unchecked for maximum compatibility
USB suspend	Checked = OK for host to suspend device when in USB suspend mode Unchecked = host should not suspend device in USB suspend mode
No USB communications possible	Device can not communicate over USB
Capability mismatch	Source PDO modes are not sufficient for device to operate at full capability
Giveback	Device can go to a lower power state if needed
Maximum operate current	Maximum current the sinking device is capable of drawing
Operating current	Nominal operating current of the sinking device
Object position (index)	Index of PDO requested, range 1-7
Raw	The RDO message expressed as 32-bit hexadecimal value

## Power Data Object: Local Sink

This tab shows the settings for the port's local sink Power Data Object (PDO). This is how the port tells a remote source about its capabilities and how much power it can accept. If the port is not operating as a sink, these settings have no effect. At the top of the panel is a table of PDO modes that the port can accept as a sink.

Table 25: *PDO mode list column headings*

Heading	Meaning
En	Enabled; index 1 is always enabled
#	Index of PDO mode (1 – 7)
PDO	PDO type (fixed, battery, variable, APDO)
Voltage (DC)	PDO voltage (range if variable)
Amps / Watts	PDO maximum amperage or wattage

Power Rules

Advertisements

Misc

Request Data Object: Local Sink

Power Data Object: Local Sink

En	#	PDO	Voltage (DC)	Amps/Watts
<input checked="" type="checkbox"/>	1	Fixed	5.00	3.00A
<input checked="" type="checkbox"/>	2	Battery	3.30 - 21.00	100.00W
<input checked="" type="checkbox"/>	3	Variable	3.30 - 21.00	5.00A
<input checked="" type="checkbox"/>	4	APDO	3.30 - 21.00	5.00A
<input type="checkbox"/>	5	Fixed	0.00	0.00A
<input type="checkbox"/>	6	Fixed	0.00	0.00A
<input type="checkbox"/>	7	Fixed	0.00	0.00A

PDO Flags

Mode State

Dual Role Data	Auto	<input checked="" type="checkbox"/>
USB Communications Possible	Auto	<input checked="" type="checkbox"/>
Unconstrained Power	Auto	<input type="checkbox"/>
Higher Capability	Auto	<input checked="" type="checkbox"/>
Dual Role Power	Auto	<input checked="" type="checkbox"/>

Edit Sink Rules

Power Data Object: Local Source

Power Data Object: Remote Sink

Power Data Object: Remote Source -Active- Rule: 1

*Local Sink PDO list and flags*

Table 26: *PDO flags*

PDO flag	Mode	State	Meaning
Dual Role Data USB Communications Possible	En- able, Dis- able, Auto	Checker if flag is en- abled	Can be host or peripheral Supports USB data
Unconstrained Power Higher Capability Dual Role Power			AC powered or large battery Sink needs more than 5 V for full functionality Can source or sink power

**Edit sink rules button** (requires PD Builder license)

Pops up [Power Rule Editor](#).

### Power Data Object: Local Source

This tab shows the settings for the port's local source Power Data Object (PDO). If the port is not operating as a source, these settings have no effect. At the top is a table of PDO modes that the port can provide as a source. If active, the PDO rule index is listed in the tab title.

Table 27: *PDO mode list column headings*

Heading	Meaning
En	Enabled; index 1 is always enabled
#	Index of PDO mode (1 – 7)
PDO	PDO type (fixed, battery, variable, APDO)
Voltage (DC)	PDO voltage (range if variable)
Amps / Watts	PDO maximum amperage or wattage

Power Rules    Advertisements    Misc

Request Data Object: Local Source

Power Data Object: Local Sink

Power Data Object: Local Source -Active- Rule: 4

En	#	PDO	Voltage (DC)	Amps/Watts
<input checked="" type="checkbox"/>	1	Fixed	5.00	3.00A
<input checked="" type="checkbox"/>	2	Fixed	9.00	3.00A
<input checked="" type="checkbox"/>	3	Fixed	15.00	3.00A
<input checked="" type="checkbox"/>	4	Fixed	20.00	5.00A
<input checked="" type="checkbox"/>	5	APDO	5.00 - 11.00	3.00A
<input checked="" type="checkbox"/>	6	APDO	5.00 - 16.00	3.00A
<input checked="" type="checkbox"/>	7	APDO	5.00 - 21.00	5.00A

PDO Flags

	Mode	State
Unchunked Message Support	Auto	<input checked="" type="checkbox"/>
Dual Role Data	Auto	<input checked="" type="checkbox"/>
USB Communications Possible	Auto	<input checked="" type="checkbox"/>
Unconstrained Power	Auto	<input checked="" type="checkbox"/>
USB Suspend	Auto	<input type="checkbox"/>
Dual Role Power	Auto	<input checked="" type="checkbox"/>

RDO

	State
Maximum Operate Current	4700mA
Operating Current	3750mA
Object Position (index)	4
Raw	0x4785DDD6

Edit Source Rules

Power Data Object: Remote Sink

Power Data Object: Remote Source

Local source PDO list and flags

Table 28: PDO flags

PDO flag	Mode	State	Meaning
Unchunked Message Support	En-able, Dis-able, Auto	Checked if flag is en-abled	Checked = unchunked mode; supports larger data payloads Unchecked = legacy “chunked” mode; leave unchecked for maximum compatibility
Dual Role Data			Can be host or peripheral
USB Communications Possible			Supports USB data
Unconstrained Power			AC powered or large battery
USB Suspend			Checked = OK for host to suspend device when in USB suspend mode Unchecked = host should not suspend device in USB suspend mode
Dual Role Power			Can source or sink power

**Edit source rule button** (requires PD Builder license)

Pops up *Power Rule Editor*.



## Power Data Object: Remote Sink

This tab shows the power sink settings for the remote device's Power Data Object (PDO). Since these settings are controlled by the remote device, this tab is informational only. At the top is a list of PDO modes that the remote device can accept as a sink.

Table 29: *PDO mode list column headings*

Heading	Meaning
En	Enabled; index 1 is always enabled
#	Index of PDO mode (1 – 7)
PDO	PDO type (fixed, battery, variable, APDO)
Voltage (DC)	PDO voltage (range if variable)
Amps / Watts	PDO maximum amperage or wattage

Power Rules
Advertisements
Misc

Request Data Object: Local Source
Power Data Object: Local Sink
Power Data Object: Local Source -Active- Rule: 4
Power Data Object: Remote Sink

#	PDO	Voltage (DC)	Amps/Watts
1	Fixed	5.00	3.00A
2	Variable	4.75 - 21.00	4.70A

PDO Flags

Dual Role Data
USB Communications Possible
Unconstrained Power
Higher Capability
Dual Role Power

State
☒
☒
☐
☐
☒

Request Minimum
Request Update

Power Data Object: Remote Source

*Remote sink PDO list and flags*

Table 30: *PDO flags (informational only)*

PDO flag	State	Meaning
Dual Role Data	Checked if flag is enabled	Can be host or peripheral
USB Communications Possible		Supports USB data
Unconstrained Power		AC powered or large battery
Higher Capability		Sink needs more than 5 V for full functionality
Dual Role Power		Can source or sink power

**Request minimum, Request update buttons**

[Not implemented]

---

**Power Data Object: Remote Source**

This tab shows settings for the remote device's Power Data Object (PDO) and its Request Data Object if active. Since the PDO settings are controlled by the remote device, the PDO mode list and flags are informational only. At the top is a list of PDO modes that the remote device can provide as a source. If the remote device is acting as a source, the active PDO rule index is listed in the tab title.

Power RulesAdvertisementsMisc

Request Data Object: Local Source

Power Data Object: Local Sink

Power Data Object: Local Source -Active- Rule: 1

Power Data Object: Remote Sink

Power Data Object: Remote Source

#	PDO	Voltage (DC)	Amps/Watts
1	Fixed	5.00	1.50A

PDO Flags

State

Unchunked Message Support

Dual Role Data

USB Communications Possible

Unconstrained Power

USB Suspend

Dual Role Power

☒

☒

☒

☐

☐

☒

Request Update

Power Rules
Advertisements
Misc

Request Data Object: Local Sink  
Power Data Object: Local Sink  
Power Data Object: Local Source  
Power Data Object: Remote Sink  
Power Data Object: Remote Source -Active- Rule: 1

#	PDO	Voltage (DC)	Amps/Watts
1	Fixed	5.00	1.50A

PDO Flags

Unchunked Message Support

Dual Role Data

USB Communications Possible

Unconstrained Power

USB Suspend

Dual Role Power

State

☒
☒
☒
☐
☐
☒

RDO Control

Maximum Operate Current

Operating Current

Object Position (index)

Raw

State

1500mA

1500mA

1

0x13825896

Request Update

Remote source PDO list, flags and RDO control

Table 31: PDO mode list column headings

Heading	Meaning
En	Enabled; index 1 is always enabled
#	Index of PDO mode (1 – 7)
PDO	PDO type (fixed, battery, variable, APDO)
Voltage (DC)	PDO voltage (range if variable)
Amps / Watts	PDO maximum amperage or wattage

Table 32: Remote source PDO flags (informational only)

PDO flag	State	Meaning
Unchunked Message Support	Checked if flag is enabled	Checked = unchunked mode; supports larger data payloads Unchecked = legacy “chunked” mode; leave unchecked for maximum compatibility
Dual Role Data		Can be host or peripheral
USB Communications Possible		Supports USB data
Unconstrained Power		AC powered or large battery
USB Suspend		Checked = OK for host to suspend device when in USB suspend mode Unchecked = host should not suspend device in USB suspend mode
Dual Role Power		Can source or sink power

**RDO control**

When the hub port is acting as a sink, some sink RDO settings can be controlled directly from the bottom of the Remote Source tab. These settings mirror the fields in the *Request Data Object: Local Sink* tab.

Table 33: Remote source RDO control settings


RDO Information	Meaning
Maximum operate current	Maximum current the sinking device is capable of drawing
Operating current	Nominal operating current of the sinking device
Object position (index)	Index of PDO requested, range 1-7
Raw	The RDO message expressed as 32-bit hexadecimal value

**Request update button**

[Not implemented]

**Power rule editor (requires PD builder add-on feature<sup>Page 375, 71</sup> )**

<sup>71</sup> <https://acroname.com/store/t99-pd-builder>

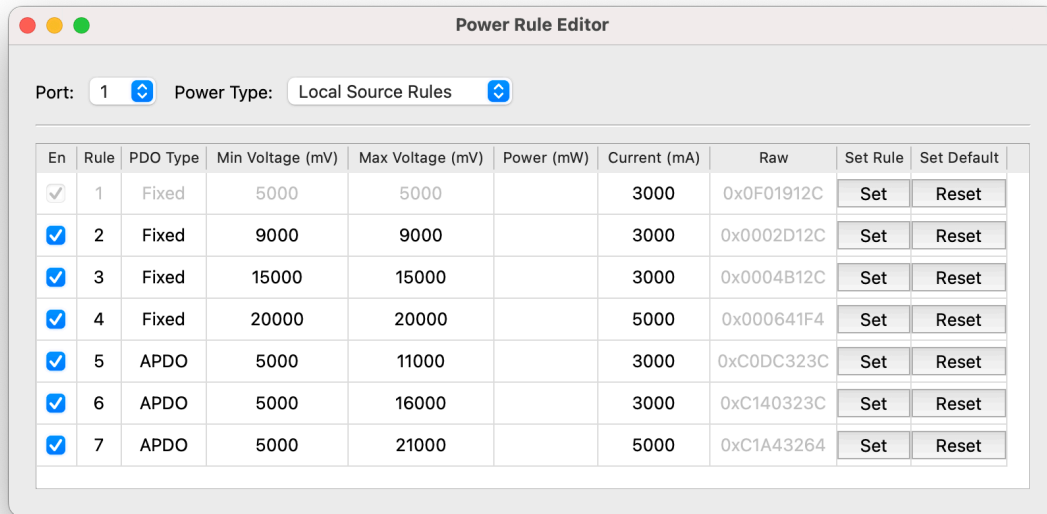

The power rule editor sets sink and source power rules for each port.


Table 34: *Power rule editor headings*

Heading	Meaning
En	Enabled; index 1 is always enabled
Rule	Index of PDO mode (1 – 7)
PDO	PDO type (fixed, battery, variable, APDO)
Min Voltage (mV)	Min PDO voltage
Max Voltage (mV)	Max PDO voltage
Power (mW)	Max PDO power
Current (mA)	Max PDO current
Raw	Raw bytes of PDO message
Set rule	Set rule after changes
Set default	Return rule to default

Table 35: *PDO Types*

PDO type	Definition
Fixed	Fixed supply voltage of 5 V, 9 V, 15 V, 20 V, current limit 0 A – 5 A. Source must have at least one fixed PDO at 5 V
Variable	Represents a poorly regulated supply. The voltage must stay between the minimum and maximum voltage; minimum voltage must be $\geq 80\%$ of maximum voltage
Battery	Batteries can be connected to VBus directly as a source. Specifies maximum and minimum voltage (in 50 mV steps) and maximum power (in 250 mW steps)
APDO	Programmatically controllable source. Voltage range set in 20 mV steps, up to 3.3V – 21V. Current limit 0 A – 5 A

## Port Tab: Advertisements

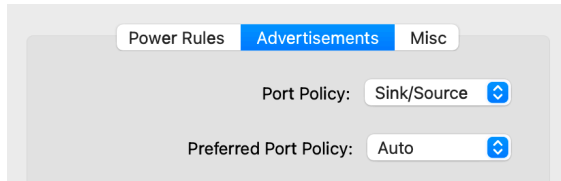

### *Power role advertisements subtab*

USB-PD advertisements tell connected devices the power policy of the port and its preferred policy.

#### Port policy

- **None** - no power
- **Source** - provides source
- **Sink** - receives power
- **Sink / Source** - can provide or receive power according to the *Preferred port policy*

**Preferred port policy** (Only has an effect if port policy is set to *Sink / Source*)

- **None** - no power
- **Source** - provides power
- **Sink** - receives power
- **Follow data** - provides power if downstream-facing, receives power if upstream-facing
- **Auto** - negotiate with the connected device

## Port Tab: Misc

Power Rules   Advertisements   **Misc**

**Cable Information:**

Voltage Maximum:	N/A
Current Maximum:	N/A
Speed Maximum:	N/A
Type:	N/A
Orientation:	CC1

**Send Request:**

Hard Reset

Send

**Overrides:**

- ☐ Cable Current
- ☐ Port Power Limit
- ☐ Auto Discovery

### *Misc subtab*

The Misc subtab contains *Cable information*, *Send request*, and *Overrides*

## Cable information

Power Rules   Advertisements   **Misc**

**Cable Information:**

Voltage Maximum:	50 VDC
Current Maximum:	5 A
Speed Maximum:	USB 3.2 / USB 4 Gen 2
Type:	Passive (E-marked)
Orientation:	CC1

**Send Request:**

Manufacturer Info Soppp

Send

### *Cable information panel with e-mark data*

Displays power and data capacity for e-marked cables connected to the hub and a device.

- Hub port must be providing VConn (VConn strip chart showing 5 V)



- If VConn strip chart shows 0 V, send “VConn Swap” message to swap whether the hub or device is providing VConn

To read e-mark without a device, connect both ends of the cable to ports of USBHub3c, with one port set as *sink* or *auto* and the other set to *source* or *auto*. View the cable info panel on the source port.

## Send Request

This control sends USB PD requests to the connected device to initiate a connection sequence. There is no guarantee that the request will succeed, and many of these request messages will be unsupported by the connected device.

Send request	Definition
Hard Reset	Reinitialize PD communications and cycle VBus
Soft Reset	Reinitialize PD communications, but maintains power connection
Data Reset	Cycle USB data connection [unimplemented]
Power Role Swap	Exchange source and sink power roles
Power Fast Role Swap	Fast exchange source and sink power roles
Data Role Swap	Swap upstream and downstream ask roles
VCONN Swap	Swap whether the hub or device is supplying VConn
Sink Go To Min	Sink goes to minimum power draw
Request Remote Source PDOs	Get PDO from remote source
Request Remote Sink PDOs	Get PDO from remote sink
Request Remote Extended Source Caps	Get extended source capabilities
Request Remote Extended Sink Caps	Get extended sink capabilities
Status	Get status
PPS Status	Get PPS status
Battery Capabilities	Get battery capabilities (Design cap, last full cap)
Battery Status	Get Battery status (state of charge, charging status)
Manufacturer Info Sop	Get device manufacture info
Manufacturer Info Sopp	Get cable manufacturer info (nearest VConn sourcing port)
Manufacturer Info Soppp	Get cable manufacturer info (opposite from VConn sourcing port)
Discover Identity Sop	Device type and capabilities
Discover Identity Sopp	Cable type and capabilities (Vconn end)
Discover Identity Soppp	Cable type and capabilities (not VConn end)
Revision	USB PD revision and version numbers for connected device
Source Info	Source port power capability
Country Codes	Country of origin
Country Info	Country of origin

## Overrides


**Cable current** – overrides the 3 A current limit for cables that don't specify 5 A via e-mark

**Port power limit** – overrides port power budgeting and allows full power output up to 105 W per port

**Warning:** Can exceed power supply current limit and brown out the hub, triggering a reset

**Auto discovery** – overrides the auto discovery feature. When enabled, the hub will only establish a basic power connection and not request vendor information. Used for legacy compatibility and debugging.

## System Tab

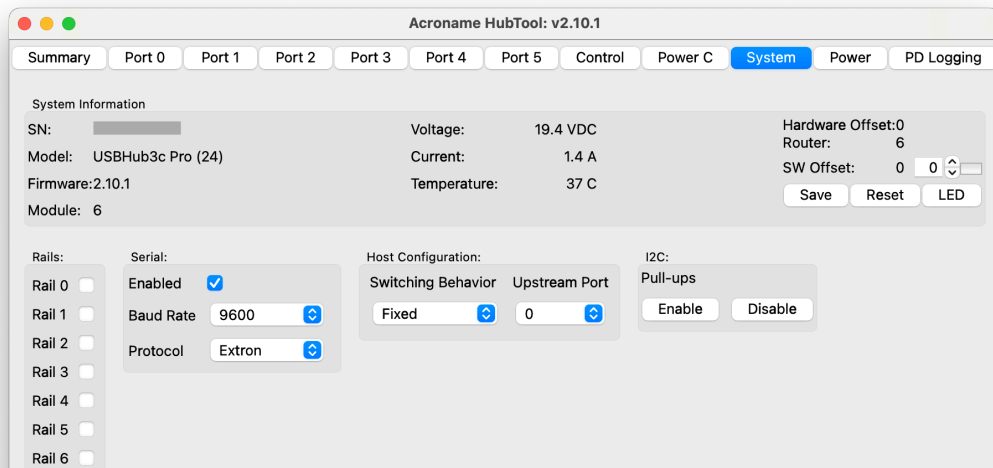

### *HubTool USBHub3c system tab*

The system tab contains information and settings for the hub.

## System information

Heading	Meaning
SN	Hub serial number
Model	Hub model name and number, e.g. USBHub3c Pro (24)
Firmware	Currently installed firmware version
Module	Address of the module on the Brainstem network
Voltage	Voltage at the input power source port
Current	Input current at the input power source port
Temperature	System temperature
Hardware off-set	Increments Brainstem module address by a hardware setting - fixed to 0 in USBHub3c
Router	Address of the routing Brainstem module
Software offset	Increment the module address. Requires Save and Reset
Save	Store select changed settings
Reset	Soft reset of the hub
LED	Toggles blue user LED on front panel, used debugging and to identify the hub

## Rails

Requires [External Load<sup>72</sup>](#) add-on feature. Array of toggles to enable VBus rails 0 – 6 on the 20-pin expansion connector. Rails 0 - 5 represent ports 0 – 5. Rail 6 is an additional 5 V rail for triggering or powering external devices. Default = off

## Serial

Requires RS232 [Serial Control Feature<sup>73</sup>](#) feature. Use [Serial RS232 Expansion Connector Accessory<sup>74</sup>](#) to break out the serial pins.

- Enabled (toggle)
- Baud rate (1200 – 115200 bps)
- Protocol (*Undefined, Extron, BrainStem*)

<sup>72</sup> <https://acroname.com/store/t99-ext-load>

<sup>73</sup> <https://acroname.com/store/t99-serial>

<sup>74</sup> <https://acroname.com/store/s103-serial-exp>

## Host configuration

### Switching behavior

- Fixed (default)
- Port priority - sets lowest-numbered port that is connected to a host-capable device to upstream mode


### Upstream port

Shows current upstream port. Select Port 0 – 5 to connect to host - default = 0

## I2C

Enables and disables pullups on the I2C bus - IO3 (SDA) and IO4 (SCL) on the expansion connector

## Power Tab

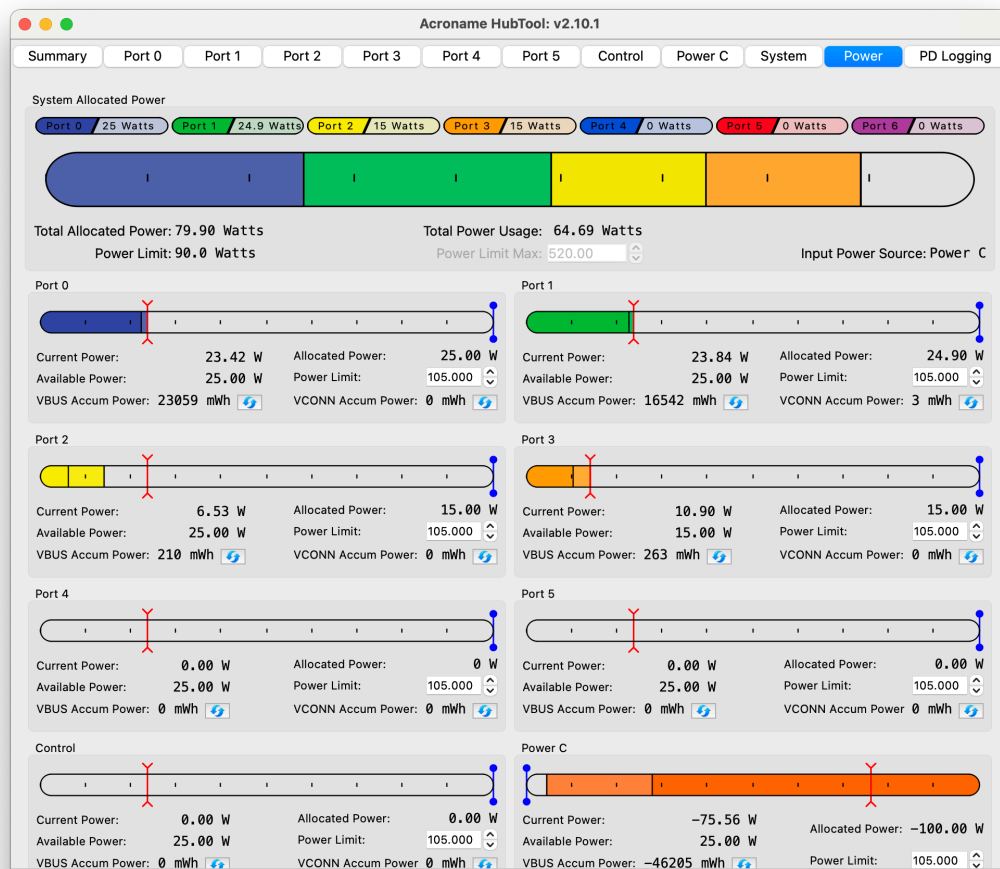


### HubTool USBHub3c Power tab

The power tab shows the allocation and actual flow of power through the hub.

## System allocated power panel

Across the top of this panel are the allocated currents of each port. Positive currents represent that the port is a power source, negative currents are for sinks.

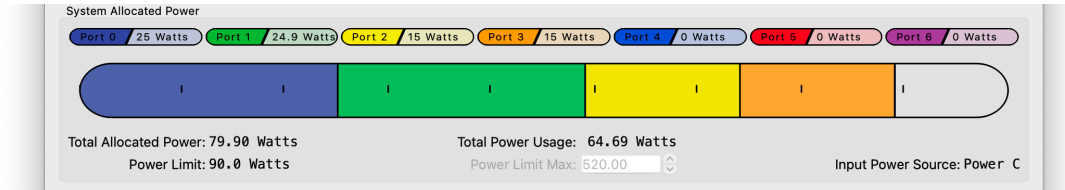

### System allocated power panel

Below the row of ports is a visualization of the stackup of allocated currents.

**Total allocated power** - sum of the allocated source power


**Power limit** - maximum power that can be allocated across all ports. Determined by input power minus nominal losses, e.g. 90 W for 100 W supply

**Total power usage** - sum of actual power being sourced

**Power limit max** - set power limit for DC input when unregulated power is provided to the DC port

**Input power source** - input port with the highest power capability

## Port power panel

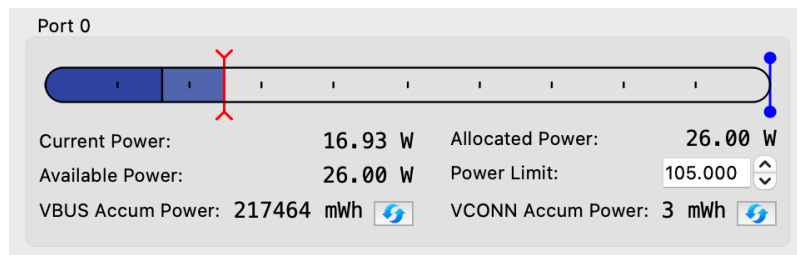

### Port power panel

**Current power** - actual port power output (positive) or input (negative)

**Available power** - maximum power that could be allocated to the port, not to exceed *Power limit*

**VBUS accum power** - total energy sunk or sourced on VBus since reset

**Allocated power** - power allocated to the port, not to exceed *Power limit*

**Power limit** - power limit for the port, max 105 W

**VConn accum power** - total energy sunk or sourced on VConn since reset

## PD Logging Tab (Add-on feature)

	Hub Time (Sec)	Port	TX/RX	Spec	SOP	Power	Data	ID	Event Type	Packet Type	Msg Type	Value
47	11145.482557	2	-	-	-	-	-	-	Rp 3A	-	-	
48	11145.528672	2	-	-	-	-	-	-	Rp 1.5A	-	-	
49	11145.549837	2	TX	V3.0	SOP	Source	DFP	7	PD Packet	Control	Get Source Info	0xB7 0x0F
50	11145.588353	2	-	-	-	-	-	-	Rp 3A	-	-	
51	11145.631715	2	-	-	-	-	-	-	Rp 1.5A	-	-	
52	11145.653669	2	TX	V3.0	SOP	Source	DFP	0	PD Packet	Control	Get Status	0xB2 0x01
53	11145.661734	2	RX	V3.0	SOP	Sink	UFP	3	PD Packet	Extended	Status	0x82 0x86 0x00
54	11145.663672	2	-	-	-	-	-	-	Rp 3A	-	-	
55	11145.766971	2	-	-	-	-	-	-	Rp 1.5A	-	-	
56	11145.790333	2	TX	V3.0	SOP	Source	DFP	1	PD Packet	Extended	Get Manufacturer Info	0xA6 0x83 0x00
57	11145.824871	2	-	-	-	-	-	-	Rp 3A	-	-	
58	11145.829320	2	-	-	-	-	-	-	Rp 1.5A	-	-	
59	11145.851615	2	TX	V3.0	SOP	Source	DFP	2	PD Packet	Data	Vendor Defined	0xAF 0x15 0x01
60	11145.858941	2	RX	V3.0	SOP	Sink	UFP	4	PD Packet	Data	Vendor Defined	0x8F 0x48 0x40
61	11145.861406	2	-	-	-	-	-	-	Rp 3A	-	-	
62	11145.865149	2	-	-	-	-	-	-	Rp 3A	-	-	
63	11145.870225	2	-	-	-	-	-	-	Rp 1.5A	-	-	
64	11145.889852	2	TX	V3.0	SOP	Source	DFP	3	PD Packet	Data	Vendor Defined	0xAF 0x17 0x02
65	11145.895155	2	RX	V3.0	SOP	Sink	UFP	5	PD Packet	Data	Vendor Defined	0x8F 0x2A 0x40
66	11145.895800	2	-	-	-	-	-	-	Rp 3A	-	-	
67	11145.899409	2	-	-	-	-	-	-	Rp 3A	-	-	
68	11145.904641	2	-	-	-	-	-	-	Rp 1.5A	-	-	
69	11145.923927	2	TX	V3.0	SOP	Source	DFP	4	PD Packet	Data	Vendor Defined	0xAF 0x19 0x03
70	11145.928094	2	-	-	-	-	-	-	Rp 3A	-	-	
71	11145.929104	2	RX	V3.0	SOP	Sink	UFP	6	PD Packet	Data	Vendor Defined	0x8F 0x2C 0x40
72	11145.932033	2	-	-	-	-	-	-	Rp 3A	-	-	
73	11149.544223	2	RX	V3.0	SOP	Sink	UFP	7	PD Packet	Data	Request	0x82 0x1E 0x2C
74	11149.547846	2	TX	V3.0	SOP	Source	DFP	5	PD Packet	Control	Accept	0xA3 0x0B
75	11149.627622	2	TX	V3.0	SOP	Source	DFP	6	PD Packet	Control	PS Ready	0xA6 0x0D

*PD logging tab view*

**PD logging<sup>75</sup>** is a software add-on feature enabling capture, logging, and decoding of USB PD communications on all USB-C ports of the hub, including power negotiations and timing. At the top of the panel are logging controls and port selection toggles.

**Stop** - stops logging

**Import** - imports a CSV log file


**Export** - exports a CSV log file (stop logging before export)

**Clear** - clears the PD log

**Port toggles** - select which ports to monitor (can only change toggles when logging is stopped)

**Show graph** - when checked, clicking on an event pops up the *Port Plot* graph window and highlights the corresponding PD packet. Clicking on a yellow PD message in the port plot highlights the corresponding message in the log

<sup>75</sup> <https://acroname.com/store/t99-pd-log>

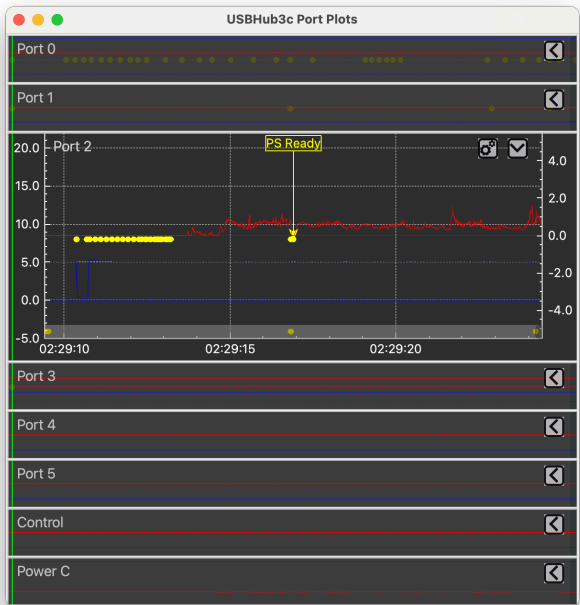

Graph view with highlighted PD packet

Below these controls is the PD packet log. The left axis is the row number, which resets when the log is cleared. Columns can be filtered by clicking the filter icon (🔍) on the column headings:

Hub Time (Sec)	Port	<->	Spec	SOP	Power	Data	ID	Event Type	Packet Type	Msg Type	Raw
----------------	------	-----	------	-----	-------	------	----	------------	-------------	----------	-----

PD packet log headings

**Time** - clicking on this heading cycles among time references:

- Hub time (s) - time since the hub powered on
- App time (hh:mm:ss) - time since the HubTool App was launched
- System time (yyyy.MM.dd hh:mm:ss:zzzz) - date and time

**Port** - ports 0-5, Control, or Power C

**<->** - message direction - *RX*, *TX*, or '-' (none)

**Spec** - USB PD version

**SOP\*** - "Start Of Packet"

- SOP - for messages between source and sink
- SOP' - for messages to the cable connector closest to the downstream-facing port (DFP)
- SOP" - for messages to the cable connector closest to the upstream-facing port (UFP)

**Power** - *sink*, *source*, *none*

**Data** - *UFP*, *DFP*, '-'

**ID** - message ID, (0 – 7), increments with each new message. Acknowledgements should match message ID

**Event type** - description of the event


**Packet type**

- Control - short messages that typically require no data exchange
- Data - messages contain data objects that are transmitted between devices
- Extended - data messages with larger data payloads

**Message type** - description of message

**Raw** - raw PD message (hexadecimal)

## USBHub3p

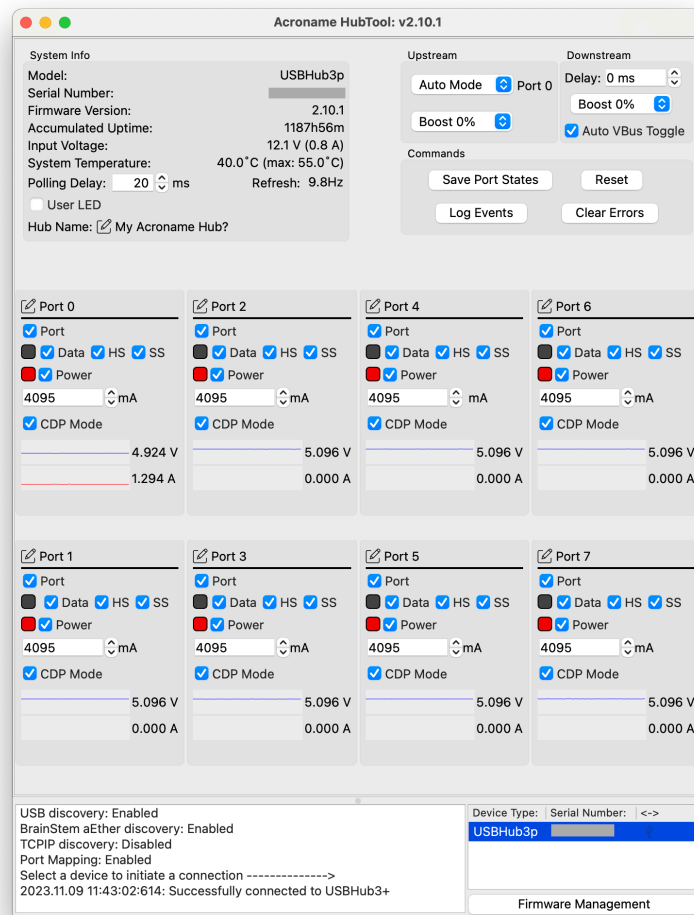


The [USBHub3p](https://acroname.com/store/programmable-industrial-hub-s79-usbhub-3p)<sup>76</sup> is a programmable USB hub with 8 full-featured 5 Gbps USB-A ports and 1 downlink port for daisy chaining. Two upstream ports allow automatic or manual host switching.

HubTool presents a unified dashboard to control and view state of USBHub3p.

<sup>76</sup> <https://acroname.com/store/programmable-industrial-hub-s79-usbhub-3p>



## General system information

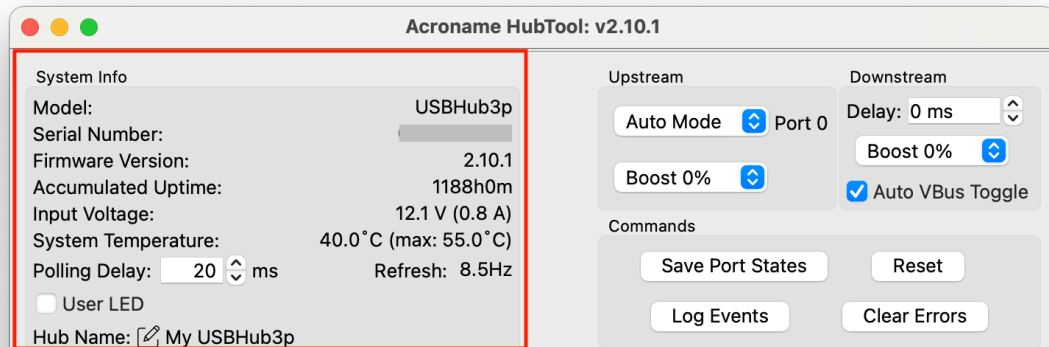

### *USBHub3p general system information*

The upper-left panel shows **general system information** for the hub:

#### **Serial number**

#### **Firmware version**

#### **Accumulated uptime**

The total time the system has been powered on since leaving the factory

#### **Input voltage (V)**

#### **System temperature (°C)**

#### **Polling delay (ms)**

Sets how long to wait after receiving all information from the hub to poll again. A setting of 0 will start a new set of requests immediately. Polling takes 50-150 ms.

#### **Refresh (Hz)**

The measured refresh rate, which is the inverse of the polling delay plus the time to receive the data

#### **User LED toggle**

Toggles a blue LED located on the USBHub3p back panel - used for debugging and to identify the hub

#### **Hub name**

Editable friendly name for the hub - used by HubTool and ControlRoom

## Port settings and commands


### *USBHub3p port settings and commands*

The upper-right panel shows **port settings** and **commands**:

#### *Upstream (host) port settings:*

##### **Host select:**

- Auto mode (Port 0 if both ports connected)

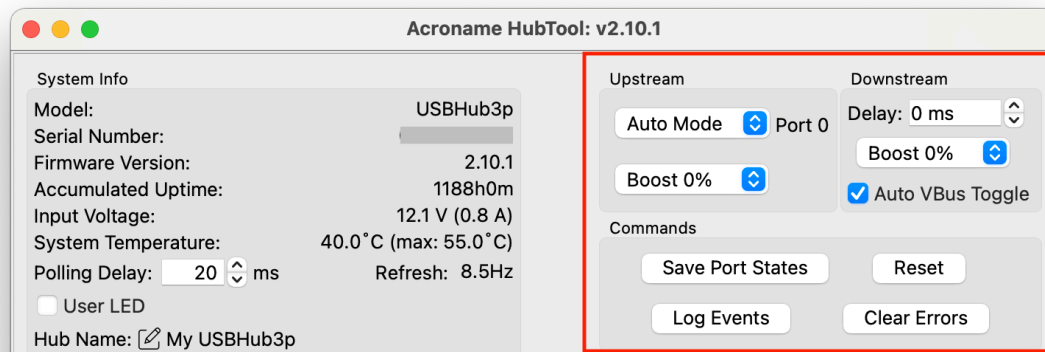

- Port 0 only
- Port 1 only
- None (do not connect to either host port)

Note that the Control port (mini USB, located on USBHub3p back panel) is always accessible

### Boost

Amplifies the upstream USB signal up to 12 percent to improve marginal connections - default = 0

### Downstream port settings:

#### Delay (ms)

Delays the enumeration of all downstream ports when power is enabled. Useful if devices are slow to power on and don't respond to enumeration in time - default = 0

#### Boost

Amplifies the downstream USB signals up to 12 percent to improve marginal connections - default = 0

#### Auto VBus toggle

Toggles downstream port VBus when the upstream connection changes - default = on

### Commands

#### Save port states

Saves the settings of all ports to the hub's internal memory so that they will persist through power cycling and reset. Saved states: **Host select, Boost, Delay, Power and data toggles, Current limit, CDP mode toggle**

#### Reset

Resets the hub - VBus toggles and hub returns to previously saved state

#### Log Events


Displays the last 150 log events in the console

#### Clear errors

Clears internal error bits

## Port view

Each of 8 full-featured downstream ports on the front panel of USBHub3p has its own interface panel in HubTool.

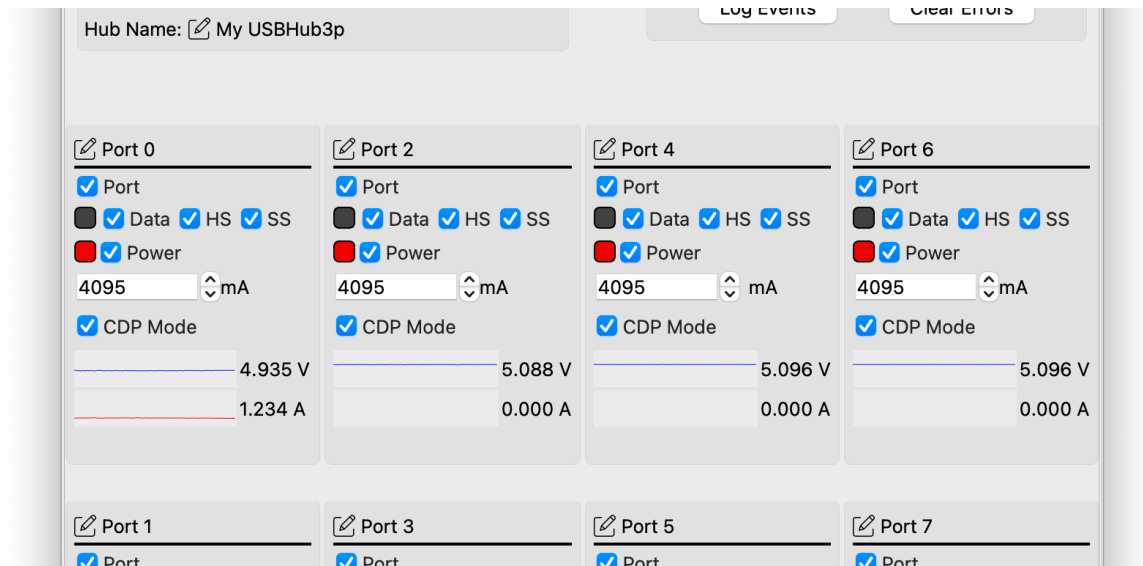

### Downstream port view

#### Port name

Editable “friendly” name for the port that is displayed in HubTool and ControlRoom interfaces

#### Power and data toggles

Toggle name	Enables and disables
Port	Entire port
Data	All Data
HS	USB 2 (High Speed) pins
SS	USB 3 (Super Speed) pins
Power	VBus

#### Virtual LEDs

These indicate the data and power status of the port and match the real LEDs on the front panel of the hub.

Attribute	Status	LED color
Data rate	USB 2	Yellow
	USB 3	Green
	USB 2, USB 3	Green
VBus	Powered	Red
	Off	Black

#### Current limit

Maximum current that the hub will supply - default = 4095 mA

### CDP mode toggle

Enables Charging Downstream Port modes (default = on). The port will signal the attached device to draw up to a maximum current based on this table:


Table 36: *Port power modes*

CDP mode toggle	Condition	Port mode	Maximum current (device limited)*
On	Host present and USB 2 data lines enabled	CDP	1500 mA
	No host present and USB 2 data lines enabled	DCP (Device Charging Port) mode	5000 mA
Off	No host or no USB 2 data lines connected	SDP (Standard Downstream Port)	100 mA
	Host present and USB 2 data lines enabled		500 mA

\* The hub limits current to **current limit**, up to a maximum of 4000 mA

### Voltage and current display

Shows a graph of the port's bus voltage and current. Clicking on the port graph pops up a window with a larger rolling chart of the last 32 seconds.

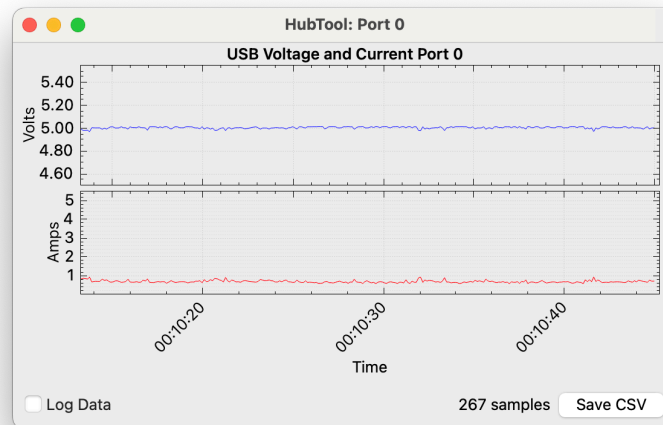

### *Voltage and current strip chart and logging*

Decreasing polling delay will increase the number of samples used in the chart. Selecting the “Log Data” toggle switches the chart from rolling to expanding mode. Clicking “Save CSV” saves the data of the graph view in a .CSV file.

Table 37: Example .CSV file output

Time (s)	Port 0 Voltage (V)	Port 0 Current (A)
6375.647	5.104	0.000
6375.838	5.104	0.000
6376.035	5.104	0.000
6376.238	5.104	0.000
6376.432	5.096	0.000
...		

## Device descriptors

If Options > Port Mapping is selected, when a device is attached to a downstream port, its descriptors will scroll at the bottom of the port panel. Click the carat ( ^ ) to expand:

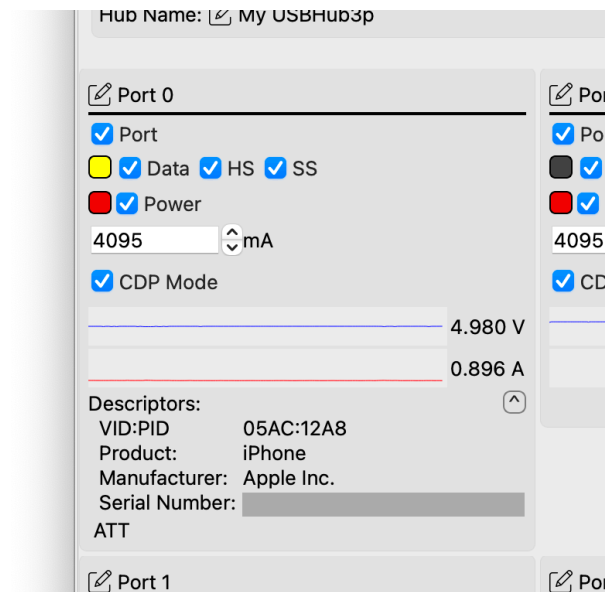


Table 38: Descriptor table

Descriptor	Content
VID:PID	16-bit vendor ID and 16-bit product ID
Product	Product name string
Manufacturer	Manufacturer name string
Product serial number	Product serial number
ATT	Indicates device is attached

## USBHub2x4



The [USBHub2x4<sup>77</sup>](https://acroname.com/store/industrial-intelligent-4-port-hub-s77-usbhub-2x4) is a 4-port software-programmable 480Mbps (USB 2.0) hub designed for demanding environments where advanced control and monitoring of USB ports is required. Two upstream ports allow automatic or manual host switching.

HubTool presents a unified dashboard to control and view state of USBHub2x4.

### General system information

#### *USBHub2x4 general system information*

The upper-left panel shows **general system information** for the hub:

**Serial number**

**Firmware version**


**Accumulated uptime**

The total time the system has been powered on since leaving the factory - *unsupported in USBHub2x4*

**Input voltage (V)**

**System temperature (°C)**

<sup>77</sup> <https://acroname.com/store/industrial-intelligent-4-port-hub-s77-usbhub-2x4>

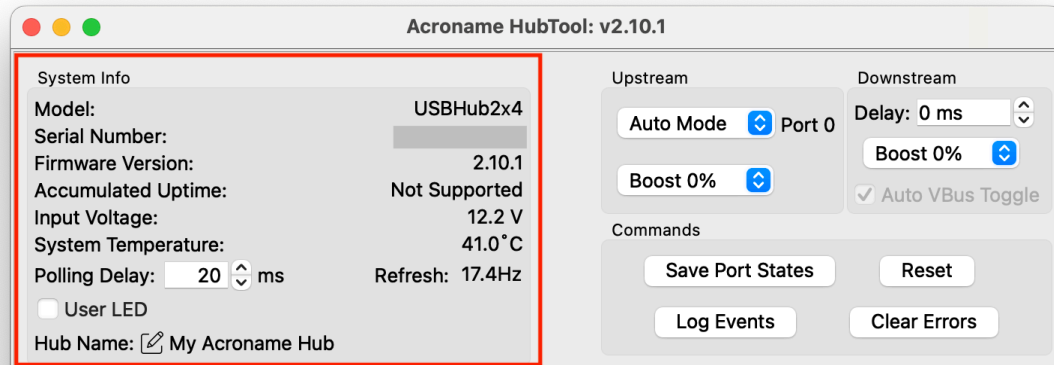

### Polling delay (ms)

Sets how long to wait after receiving all information from the hub to poll again. A setting of 0 will start a new set of requests immediately. Polling takes 50-150 ms.

### Refresh (Hz)

The measured refresh rate, which is the inverse of the polling delay plus the time to receive the data


### User LED toggle

Toggles a blue LED (7th from the top) visible through the slot in the cover of USBHub2x4 - used for debugging and to identify the hub.

### Hub name

Editable friendly name for the hub - used by HubTool and ControlRoom

## Port settings and commands

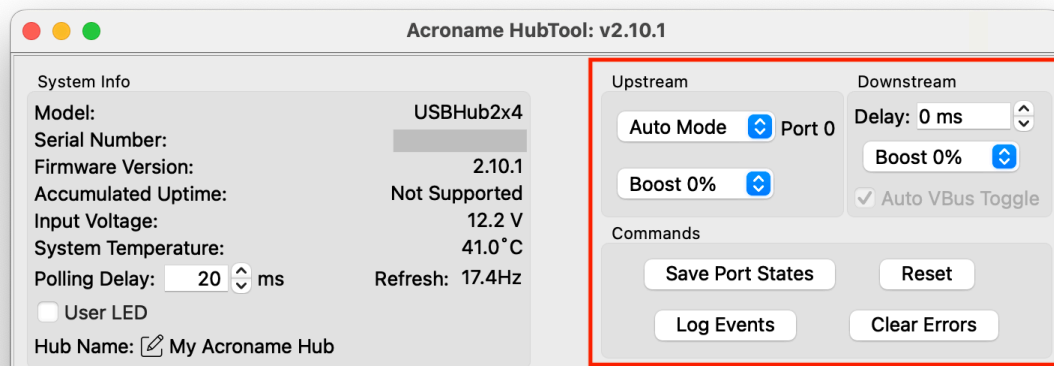

### USBHub2x4 port settings and commands

The upper-right panel shows **port settings** and **commands**:

*Upstream (host) port settings:*

#### Host select:

- Auto mode (Port 0 if both ports connected, defaults to auto after power cycle)
- Port 0 only

- Port 1 only
- None (do not connect to either host port - *no effect in USBHub2x4*)

#### **Boost**

Amplifies the upstream USB signal up to 12 percent to improve marginal connections - default = 0

*Downstream port settings:*

#### **Delay (ms)**

Delays the enumeration of all downstream ports when power is enabled. Useful if devices are slow to power on and don't respond to enumeration in time - default = 0

#### **Boost**

Amplifies the downstream USB signals up to 12 percent to improve marginal connections - default = 0

#### **Auto VBus toggle**

Toggles downstream port VBus when the upstream connection changes - *always on for USBHub2x4*

*Commands*

#### **Save port states**

Saves the settings of all ports to the hub's internal memory so that they will persist through power cycling and reset. Saved states: **Boost, Delay, Power and data toggles, Current limit, CDP mode toggle**

#### **Reset**

Resets the hub - VBus toggles and hub returns to previously saved state

#### **Log Events**

Displays the last 150 log events in the console

#### **Clear errors**

Clears internal error bits

### **Port view**

Each of 4 USB 2.0 downstream ports on the front panel of USBHub2x4 has its own interface panel in HubTool. A second row of 4 more ports are grayed out and unavailable with USBHub2x4.


*Downstream port view*

#### **Port name**

Editable "friendly" name for the port that is displayed in HubTool and ControlRoom interfaces

#### **Power and data toggles**



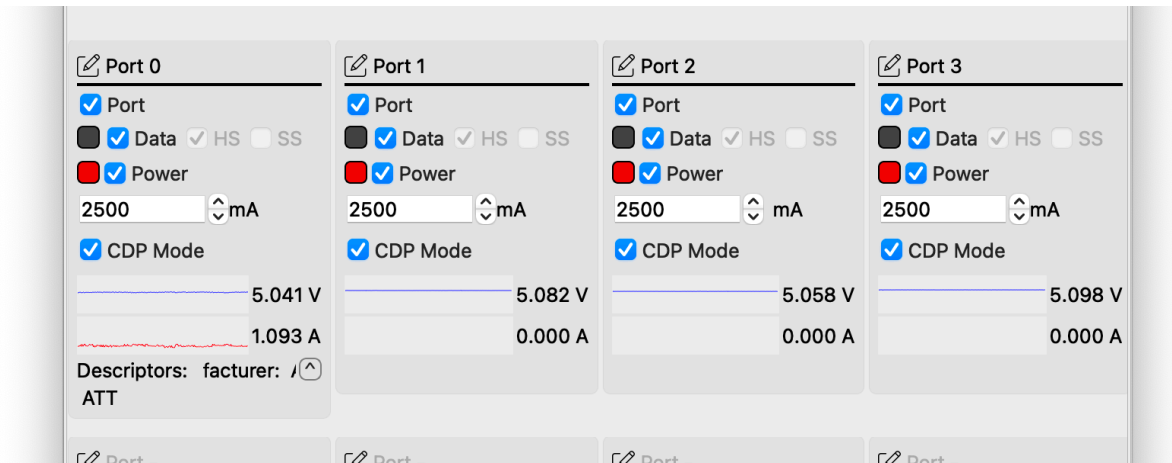

Toggle name	Enables and disables
Port	Entire port
Data	All Data
HS (grayed out, checked)	USB 2 (High Speed) pins - <i>always enabled</i>
SS (grayed out, unchecked)	USB 3 (Super Speed) pins - <i>not available on USBHub2x4</i>
Power	VBus

### Current limit

Maximum current that the hub will supply - default = 2500 mA

### CDP mode toggle

Enables Charging Downstream Port modes (default = on). The port will signal the attached device to draw up to a maximum current based on this table:


Table 39: *Port power modes*

CDP mode toggle	Condition	Port mode	Maximum current (device limited)*
On	Host present and USB 2 data lines enabled	CDP (Charging Downstream Port)	1500 mA
Off	No host or no USB 2 data lines connected	SDP (Standard Downstream Port)	100 mA
	Host present and USB 2 data lines enabled		500 mA

\* The hub limits current to **current limit**, up to a maximum of 2500 mA

### Voltage and current display

Shows a graph of the port's bus voltage and current. Clicking on the port graph pops up a window with a larger rolling chart of the last 32 seconds.

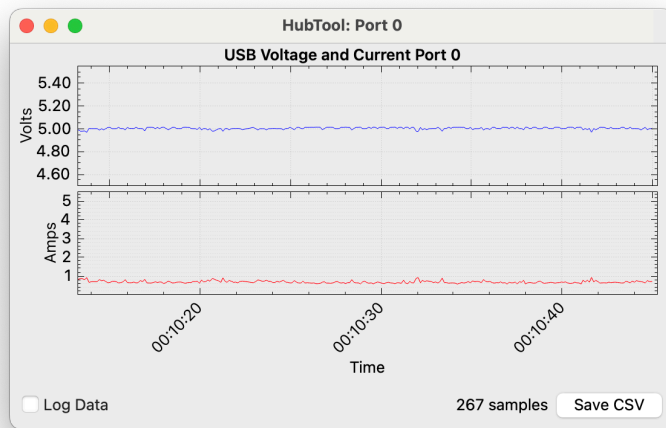

### *Voltage and current strip chart and logging*

Decreasing polling delay will increase the number of samples used in the chart. Selecting the “Log Data” toggle switches the chart from rolling to expanding mode. Clicking “Save CSV” saves the data of the graph view in a .CSV file.

Table 40: *Example .CSV file output*

Time (s)	Port 0 Voltage (V)	Port 0 Current (A)
6375.647	5.104	0.000
6375.838	5.104	0.000
6376.035	5.104	0.000
6376.238	5.104	0.000
6376.432	5.096	0.000
...		

### Device descriptors

If Options > Port Mapping is selected, when a device is attached to a downstream port, its descriptors will scroll at the bottom of the port panel. Click the carat (⤴) to expand:


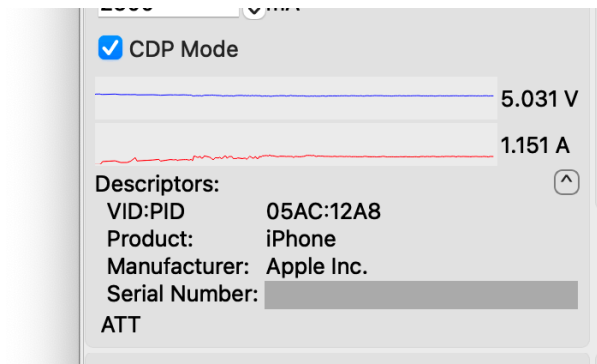


Table 41: *Descriptor table*

Descriptor	Content
VID:PID	16-bit vendor ID and 16-bit product ID
Product	Product name string
Manufacturer	Manufacturer name string
Product serial number	Product serial number
ATT	Indicates device is attached

## USB-C-Switch Pro

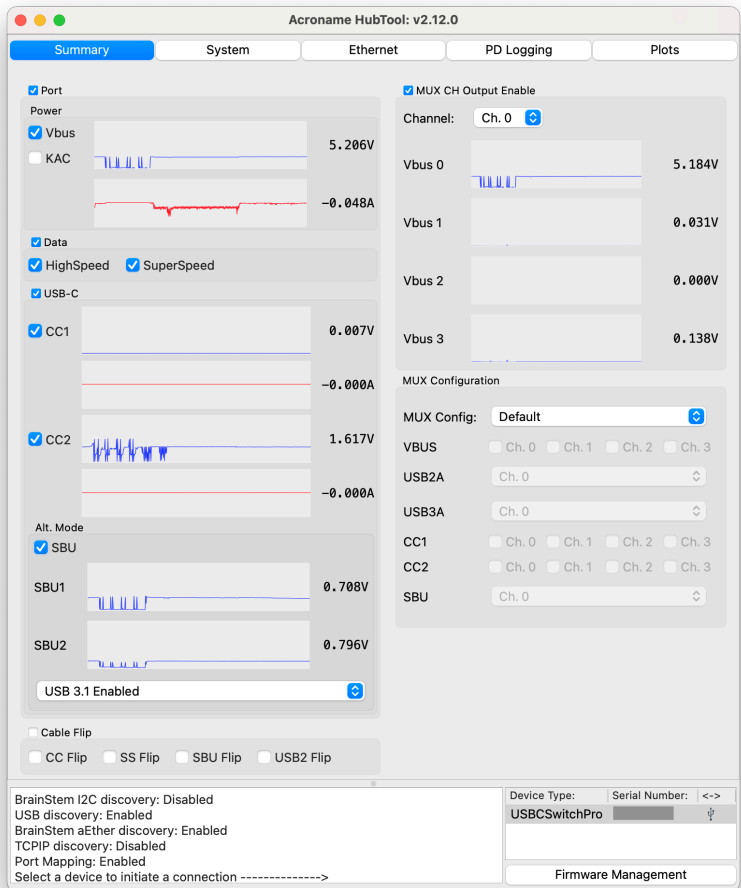

<sup>78</sup> HubTool interface for

### USB-C-Switch-Pro

Acroname's **USB-C-Switch Pro**<sup>79</sup> is a managed USB4 1:4 / 4:1 port selector and multiplexer switch supporting 240 W USB Power Delivery Extended Power Range (USB PD EPR) and 8K@120 Hz DisplayPort Alt mode video pass through.

The USB-C-Switch Pro is not a hub — it directly connects and redrives signals from the common port to one of four mux channels or from one mux port to the common port, appearing **like a cable** to the connected

<sup>78</sup> <https://acroname.com/store/s105-usbc-switch-pro>

<sup>79</sup> <https://acroname.com/store/s105-usbc-switch-pro>

devices. Data link, power negotiations, and power between USB devices are managed by the attached devices themselves.

When combined with an Acroname [Universal Orientation Cable](#)<sup>80</sup>, the USB-C-Switch Pro can emulate a cable flip, allowing tests of all the connections on a port without the need to manually flip the cable.

HubTool presents a unified dashboard to control and view the state of USB-C-Switch Pro.

## Connections

Port	Connects to
Control, Ethernet, or RS-232	Control computer running HubTool
Common	Common host or Common device
Ports 0 – 3	Switched devices Switched hosts
DC Power	Optional DC power supply

## Add-on software features


USB-C-Switch Pro supports add-on software features, which can be purchased to enable new capabilities. When a USB-C-Switch Pro is selected in HubTool, the console will list the available add-on software features and show their enabled / disabled status on the device.

Table 42: Add-on licensed software features

Feature	Capability
<a href="#">PD logger</a> <sup>81</sup>	Log USB-PD communications on all ports
<a href="#">Serial control</a> <sup>82</sup>	Enable RS-232 serial control of the Switch

Licenses for additional features are [available for purchase](#)<sup>83</sup>. After purchase, [update the hub firmware](#) to enable the new features.

## Dashboard tabs



### HubTool USB-C-Switch Pro dashboard tab view

After selecting USB-C-Switch Pro, HubTool will launch the device dashboard in summary view. Buttons along the top of the window represent tabs for:

<sup>80</sup> <https://acroname.com/store/c46-usbc-uoc>

<sup>81</sup> <https://acroname.com/store/t99-pd-log>


<sup>82</sup> <https://acroname.com/store/t99-serial>

<sup>83</sup> [https://acroname.com/store-grid/field\\_category/Software-Licenses](https://acroname.com/store-grid/field_category/Software-Licenses)

## Summary Tab

The Summary Tab is the primary interface to the USB-C switch, with Common and Mux Port controls and status.


### Common Port controls

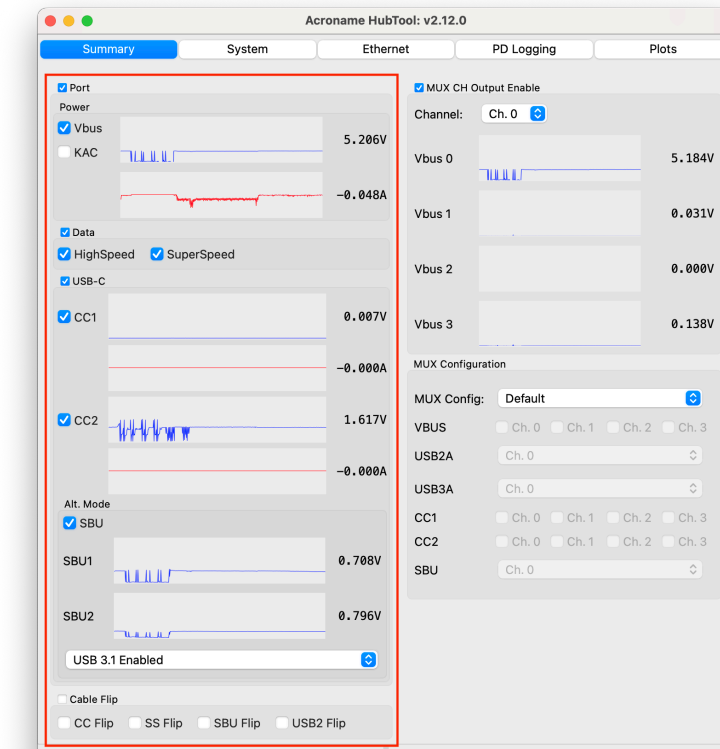

The left side of the Summary tab shows controls and attributes related to the Common Port:

- Enabling and disabling individual lines
- Viewing voltage and current on  $V_{BUS}$ , CC1, CC2, SBU1, SBU2
- Keep-alive charging
- Alt mode
- Cable flip

## Power

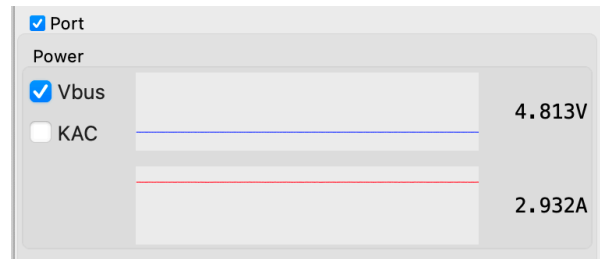

- **Port toggle** – enables and disables all lines connecting the Common port to the selected mux channel
- **Vbus toggle** – enables and disables  $V_{BUS}$  lines
- **KAC toggle** – enables Keep-alive charging (KAC)  
Keep-alive charging helps keep battery-powered devices on the non-selected mux ports charged. When enabled, the KAC circuit connects power from the control port  $V_{BUS}$  to all non-selected mux channel  $V_{BUS}$  lines. See the [API reference](#) for more detail
- **VBus voltage and current plots** – shows voltage and current for  $V_{BUS}$


## Data line toggles




- **Data toggle** – enables and disables all USB data lines
- **HighSpeed, SuperSpeed toggles** – enable and disable USB 2 (HighSpeed) and USB 3+ (SuperSpeed) data lines

## CC

- **USB-C toggle** – enables and disables CC and SBU lines
- **CC toggles** – enable and disables CC1 and CC2 lines independently
- **CC1 and CC2 voltage and current plots** – shows voltage and current for CC1 and CC2

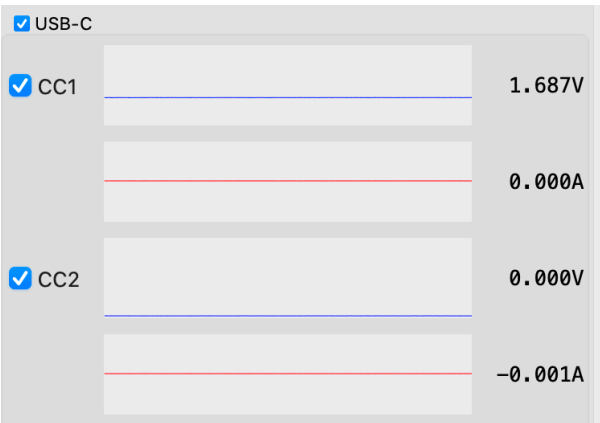


Alt mode

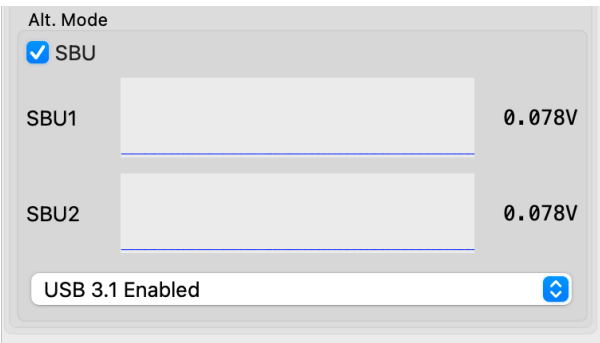

- **SBU toggle** – enables and disables SBU lines. Used for Alternate Mode discovery, negotiation, and configuration data exchange
- **SBU1 and SBU2 voltage and current plots** – shows voltage and current for SBU1 and SBU2
- **DisplayPort alt mode configuration menu**

Alt Mode Configuration
USB 3.1 Disabled – no SS lines connected
USB 3.1 Enabled – SS lines connected
4-Lane DisplayPort – no USB 3.1 – Host on Common Port
4-Lane DisplayPort – no USB 3.1 – Host on Mux Port
2-Lane DisplayPort + USB 3.1 – Host on Common Port
2-Lane DisplayPort + USB 3.1 – Host on Mux Port
2-Lane DisplayPort + USB 3.1 Inverted – Host on Common Port
2-Lane DisplayPort + USB 3.1 Inverted – Host on Mux Port
USB4 / Thunderbolt 3
USB4 / Thunderbolt 3 Inverted

USB4 / ThunderBolt 3 and DisplayPort Alt modes use the SS lines, but change their direction. Since each redriver line can operate in only one direction at a time, the

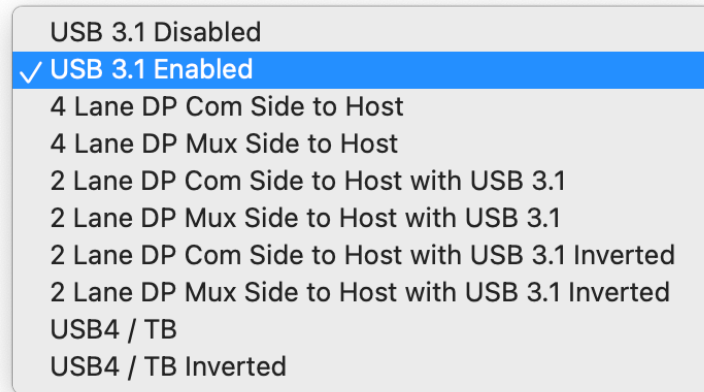

redriver direction needs to be set to match the mode being used by the host and device.

- If device  $V_{BUS}$  is not active, toggle cable flip or check cable orientations
- In the Alt Mode menu, select the corresponding configuration depending on whether the host is on the Common or Mux port and the protocol used. For 2-lane DP and USB4/ TB, it may be necessary to try the inverted and non-inverted option

See the :ref: *API reference <csp-alt-mode-configuration>* for more detail.

### Cable flip




- **Cable flip toggle** – switches USB data,  $V_{CONN}$ , and SBU lines from side A to side B as if the cable had been flipped. When using standard USB-C cables with USB-C-Switch Pro, one cable orientation will work, the other will need to be flipped physically, or by using the toggle.
- **CC, SS, SBU, USB2 flip toggles** – individually flip each connection type

To enable automated cable flips for testing, use one [Universal Orientation Cable](https://acroname.com/store/c44-usb-uoc)<sup>84</sup> for either the host or mux connection, and one standard cable for the other connection.

<sup>84</sup> <https://acroname.com/store/c44-usb-uoc>



## Mux Port controls

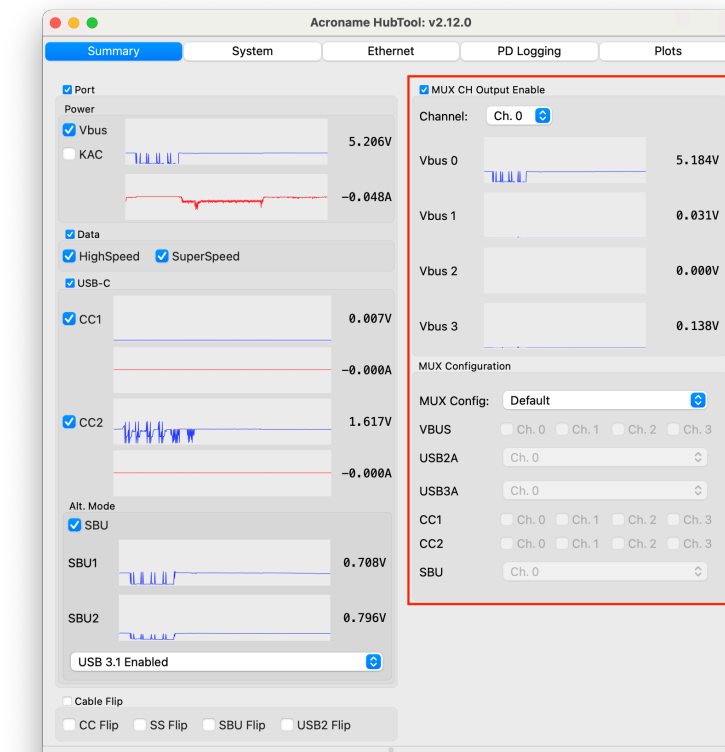

The right side of HubTool shows controls and attributes related to the mux ports:


### Mux channel control

- **Mux channel output enable** – toggles the output of all mux ports
- **Mux channel selector** – designates one mux port to connect to the Common port. Unavailable in Channel priority and Split configuration
- **VBus voltage plots** – shows  $V_{BUS}$  voltage for each mux port

### Mux configuration

- **Default** – switches all enabled USB-C lines to the single mux port designated by the channel selector
- **Channel priority** – auto-selects the lowest-numbered mux port that has  $V_{BUS}$  present. Allows simple automatic host selection
- **Split** – allows each signal type to be independently connected to a mux port.  $V_{BUS}$  and CC lines can be assigned to any combination of ports, while USB 2, USB3, and SBU can be assigned to a single mux port. See the [Mux API reference](#) for more detail

## System Tab

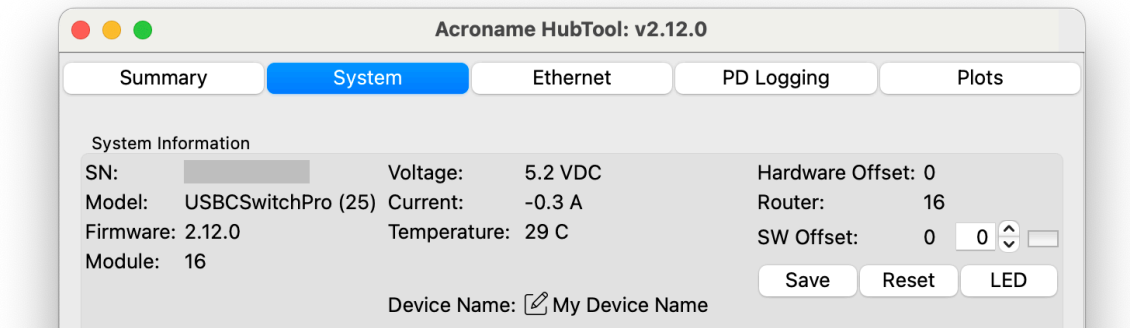


The System Information tab contains information and settings for the switch.

Heading	Meaning
SN	Switch serial number
Model	Switch model name and number, e.g. USBCSwitchPro (25)
Firmware	Currently installed firmware version
Module	Address of the module on the Brainstem network
Voltage	Voltage at the input power source port
Current	Input current at the Control port
Temperature	System temperature
Hardware offset	Increments Brainstem module address by a hardware setting - fixed to 0 in USB-C-Switch Pro
Router	Address of the routing Brainstem module
Software offset	Increment the module address by the selected amount. Click the button to send to the device, Save and Reset to apply
Save	Store select changed settings
Reset	Soft reset of the switch
LED	Toggles blue User LED (person icon next to the control port), used for debugging and to identify the switch

## Ethernet Tab

The Ethernet tab shows network settings for the Ethernet connection. For most setups, we recommend a direct Ethernet link between the host test machine and the USBExt3c. By default, the USB-C-Switch Pro acts as a DHCP client and will receive an IP address from a DHCP server. If no server is detected, the USB-C-Switch Pro falls back to a static IP address of 192.168.44.42. In static mode, the host computer interface IP must be set to an address in the 192.168.44.x range. The DHCP client is limited to hosts on the local link and does not operate across network bridges or gateways.

Host firewall rules must allow:

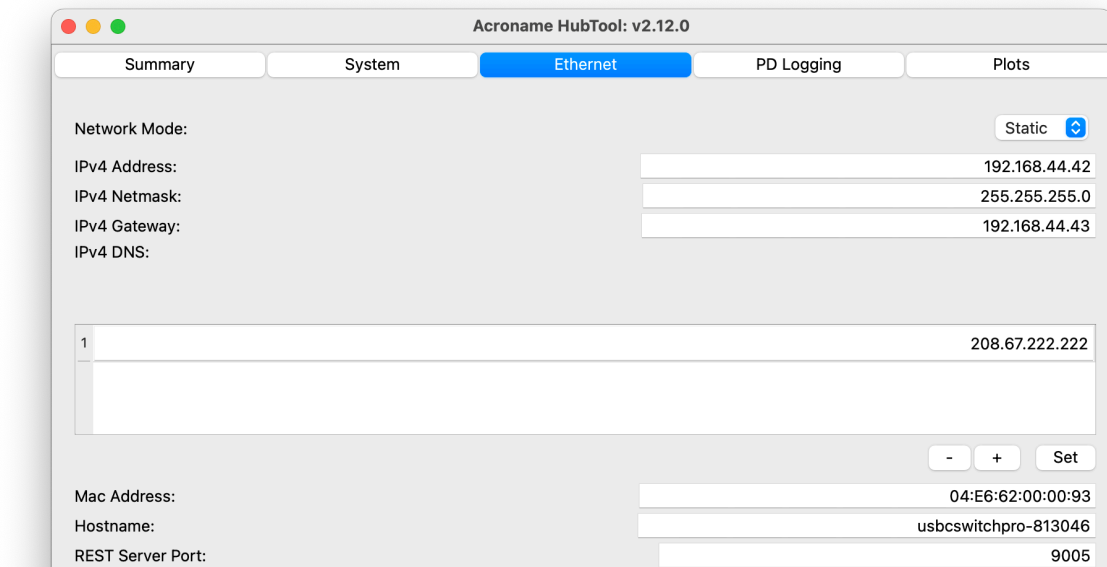

- Outgoing UDP multicast on port 9888
- Incoming UDP responses on port 9889
- Outgoing TCP connections to port 8000
- Incoming / Outgoing TCP connections on ports 9005 and 9006

**Network Mode** - How the IP address is set:

- None - no network
- DHCP (default) - receive IP from DHCP server
- Static, defaults to 192.168.44.42

**IPv4 Address** - e.g. 192.168.44.42

**IPv4 Netmask** - 255.255.255.0

**IPv4 Gateway** - host computer IP

**IPv4 DNS** - defaults to 208.67.222.222


**Mac Address** - unique to the specific Switch

**Hostname** - defaults to "usbcs witchpro-[first 7 digits of hub serial]"

**REST Server port** - REST port on host

## PD logging Tab

USB-C-Switch Pro has the ability to sniff and log USB-PD negotiations.

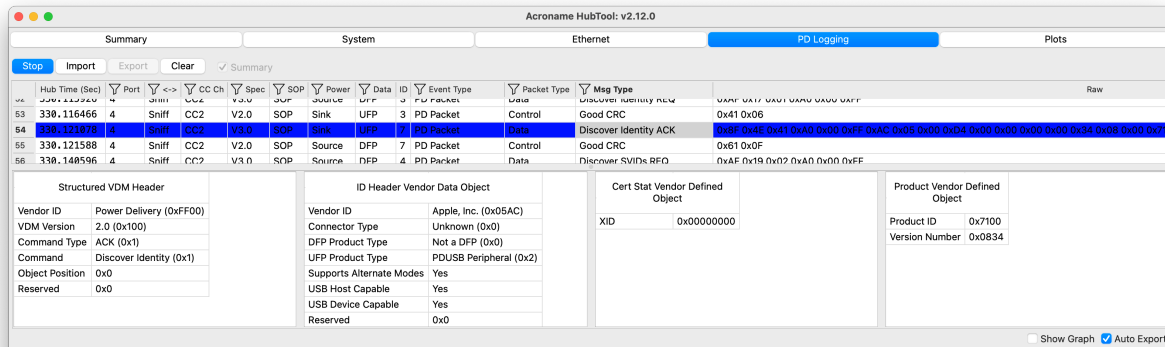

### PD logging tab view

**PD logging**<sup>85</sup> is a software add-on feature enabling capture, logging, and decoding of USB PD communications on all USB-C ports of the hub, including power negotiations and timing. At the top of the panel are logging controls and port selection toggles.

**Stop** - stops logging

**Import** - imports a CSV log file

**Export** - exports a CSV log file (stop logging before export)

**Clear** - clears the PD log

Below these controls is the PD packet log. The left axis is the row number, which resets when the log is cleared. Columns can be filtered by clicking the filter icon (🔍) on the column headings:

Hub Time (Sec)	Port	CC Ch	Spec	SOP	Power	Data	ID	Event Type	Packet Type	Msg Type	Raw
----------------	------	-------	------	-----	-------	------	----	------------	-------------	----------	-----

### PD packet log headings

**Time** - clicking on this heading cycles among time references:

- Hub time (s) - time since the hub powered on
- App time (hh:mm:ss) - time since the HubTool App was launched
- System time (yyyy.MM.dd hh:mm:ss:zzzz) - date and time

**Port** - Mux ports (0-3), Common (4)

**<->** - message direction - *RX*, *TX*, or '-' (none)

**Spec** - USB PD version

**SOP\*** - "Start Of Packet"

- SOP - for messages between source and sink
- SOP' - for messages to the cable connector closest to the downstream-facing port (DFP)
- SOP" - for messages to the cable connector closest to the upstream-facing port (UFP)

<sup>85</sup> <https://acroname.com/store/t99-pd-log>

**Power** - *sink, source, none*

**Data** - *UFP, DFP, '-'*

**ID** - message ID, (0 – 7), increments with each new message. Acknowledgements should match message ID

**Event type** - description of the event

**Packet type**


- Control - short messages that typically require no data exchange
- Data - messages contain data objects that are transmitted between devices
- Extended - data messages with larger data payloads

**Message type** - description of message

**Raw** - raw PD message (hexadecimal)

Below the packet log:


**Show Graph toggle** - when checked, clicking on an event highlights the corresponding PD packet. Clicking on a yellow PD message in the plot highlights the corresponding message in the log

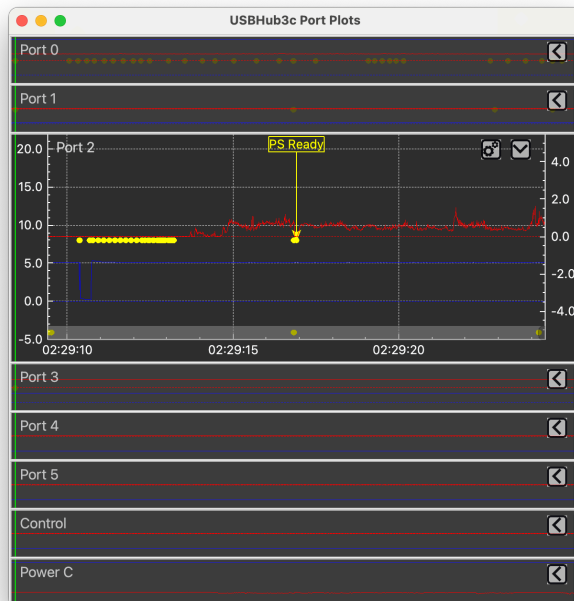

*Graph view with highlighted PD packet*

**Auto Export toggle** - when checked, logs are stored automatically. Destination is visible on mouseover.

## Plots Tab

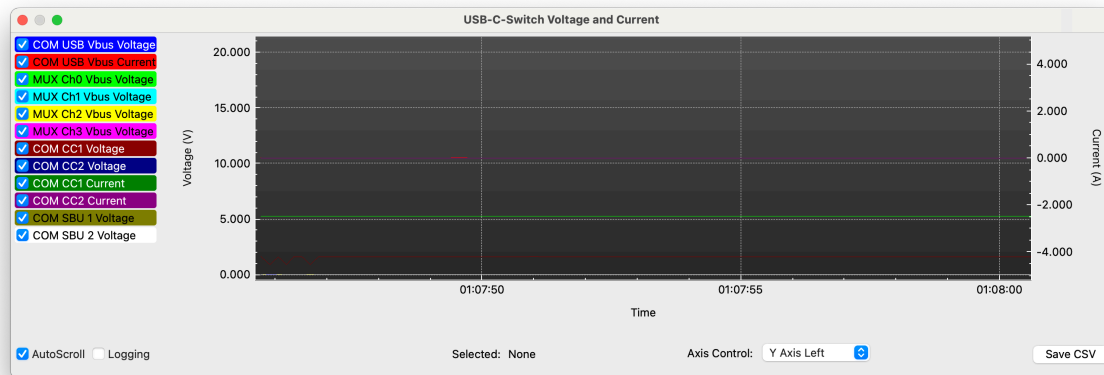

The **Plots** tab displays real-time voltage and current measurements for the **Common** and **Mux** ports, with controls for viewing, logging, and exporting data.

### Plot traces

#### Common Ports

- $V_{\text{BUS}}$  — Voltage, Current
- CC1 / CC2 — Voltage, Current
- SBU1 / SBU2 — Voltage

#### Mux Channels (0–3)


- $V_{\text{BUS}}$  — Voltage

### Controls

- **Trace Select Toggles** — show or hide individual traces
- **Autoscroll** — keeps the right edge of the plot aligned to “now”; the buffer length defines the visible time window
- **Logging** — records data beyond the visible plot window for later review or export
- **Axis Control** — selects which axis (Voltage, Current, or Time) responds to zoom or drag actions
- **Save CSV** — exports each visible trace as a separate CSV file; if logging is disabled, only current visible buffer is saved

Each tab except *Summary* can be dragged out of the main hubtool window into its own window to allow simultaneous viewing of multiple tabs.

USB-C-Switch

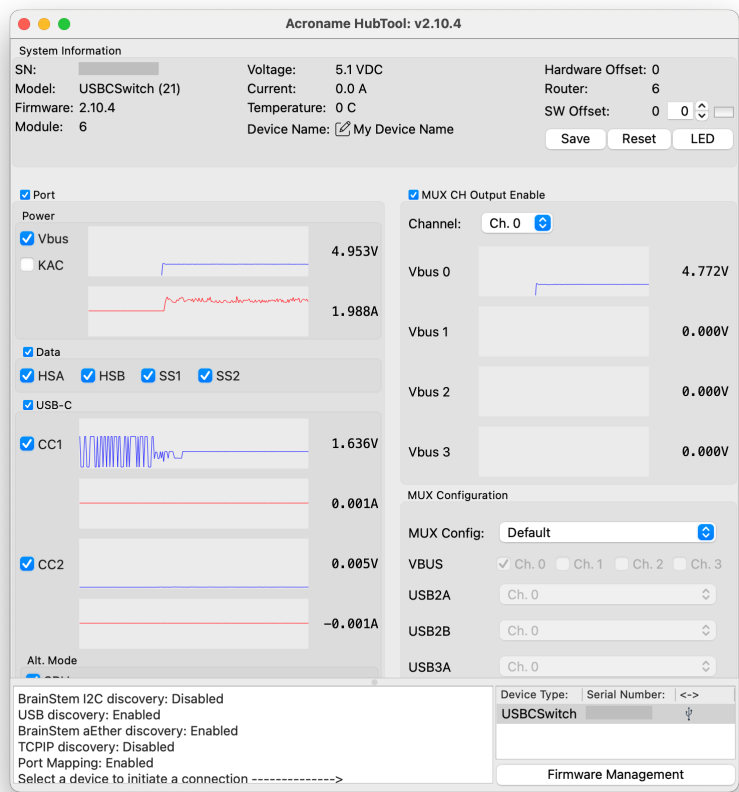

<sup>86</sup> HubTool interface for

USB-C-Switch

Acroname’s **USB-C-Switch**<sup>87</sup> is an industrial USB-C switch able to connect one of up to four devices to a host, or one device to one of up to four hosts. It is not a hub – the selected ports form a bidirectional connection and appear “like a cable” to connected devices, even supporting USB alt modes like DisplayPort.

When combined with an Acroname **Universal Orientation Cable**<sup>88</sup>, the USB-C-Switch can emulate a cable flip, allowing tests of all the connections on a port without the need to manually flip the cable.

HubTool presents a unified dashboard to control and view the state of USB-C-Switch.

Connections


Port	Connects to		
Control	Control computer running HubTool		
Common	Common host	or	Common device
Ports 0 – 3	Switched devices		Switched hosts

<sup>86</sup> <https://acroname.com/store/programmable-industrial-switch-s85-rdvr-usbcsw>

<sup>87</sup> <https://acroname.com/store/programmable-industrial-switch-s85-rdvr-usbcsw>

<sup>88</sup> <https://acroname.com/store/c67-usbc-uoc>

## System information

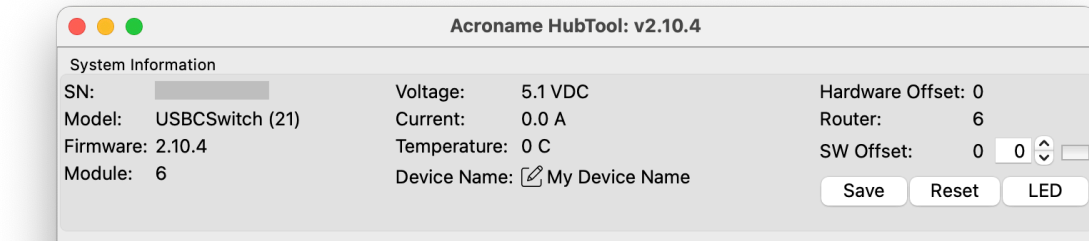

The System Information panel contains information and settings for the switch.

Heading	Meaning
SN	Switch serial number
Model	Switch model name and number, e.g. USBCSwitch (21)
Firmware	Currently installed firmware version
Module	Address of the module on the Brainstem network
Voltage	Voltage at the input power source port
Current	Input current at the Control port
Temperature	System temperature
Hardware off-set	Increments Brainstem module address by a hardware setting - fixed to 0 in USB-C-Switch
Router	Address of the routing Brainstem module
Software off-set	Increment the module address. Requires Save and Reset
Save	Store select changed settings
Reset	Soft reset of the switch
LED	Toggles blue user LED next to the control port, used for debugging and to identify the switch

## Common Port controls

The left side of HubTool shows controls and attributes related to:

- Enabling and disabling individual lines
- Viewing voltage and current on VBus, CC1, CC2, SBU1, SBU2
- Keep-alive charging
- Alt mode
- Cable flip
- Equalization (redriver version only)



Acroname HubTool: v2.10.4

System Information

SN: 0x6B10667F      Voltage: 5.1 VDC      Hardware Offset: 0  
Model: USBCSwitch (21)      Current: 0.0 A      Router: 6  
Firmware: 2.10.4      Temperature: 0 C      SW Offset: 0 0 0  
Module: 6      Device Name: My Device Name

Save    Reset    LED

---

☒ Port

Power

☒ Vbus      4.813V  
☐ KAC      2.932A

☒ Data

☒ HSA    ☒ HSB    ☒ SS1    ☒ SS2

☒ USB-C

☒ CC1      1.687V  
            0.000A

☒ CC2      0.000V  
            -0.001A

Alt. Mode

☒ SBU

SBU1      0.078V  
SBU2      0.078V

USB 3.1 Enabled

Cable Flip

☐ CC Flip    ☐ SS Flip    ☐ SBU Flip    ☐ USB2 Flip

Equalizer

USB 2.0

Transmitter Config    Receiver Config

40mV    Level 1

USB 3.0

Transmitter Config

Mux +1db, Common +0db @ 900mV

Receiver Config: Com    Receiver Config: Mux

Level 1    Level 1

---

☒ MUX CH Output Enable

Channel: Ch. 0

Vbus 0      4.652V  
Vbus 1      0.000V  
Vbus 2      0.000V  
Vbus 3      0.000V

MUX Configuration


MUX Config: Default

VBUS    ☒ Ch. 0    ☐ Ch. 1    ☐ Ch. 2    ☐ Ch. 3

USB2A    Ch. 0  
USB2B    Ch. 0  
USB3A    Ch. 0  
USB3B    Ch. 0


CC1    ☒ Ch. 0    ☐ Ch. 1    ☐ Ch. 2    ☐ Ch. 3  
CC2    ☒ Ch. 0    ☐ Ch. 1    ☐ Ch. 2    ☐ Ch. 3  
SBU    Ch. 0

## Power

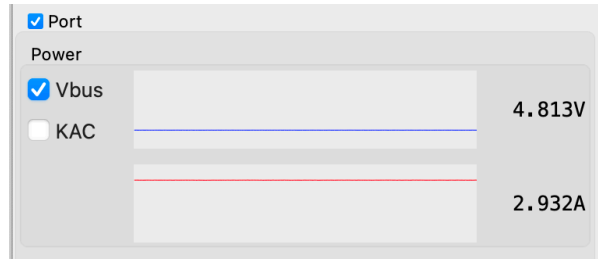

- **Port toggle** – enables and disables all lines connecting the Common port to the selected mux channel
- **VBus toggle** – enables and disables VBus lines
- **KAC toggle** – enables Keep-alive charging (KAC)  
Keep-alive charging helps keep battery-powered devices on the non-selected mux ports charged. When enabled, the KAC circuit connects power from the control port VBus to all non-selected mux channel VBus lines. See the *API reference <cs-kac>* for more detail
- **VBus voltage and current plots** – shows voltage and current for VBus. Click to pop up the *Voltage and Current plot window*


## Data line toggles




- **Data toggle** – enables and disables all USB data lines
- **HSA, HSB, SSA, SSB toggles** – enable and disable USB 2 (HS) and USB 3 (SS) data lines on side A or side B independently

## CC


- **USB-C toggle** – enables and disables CC and SBU lines
- **CC toggles** – enable and disables CC1 and CC2 lines independently
- **CC1 and CC2 voltage and current plots** – shows voltage and current for CC1 and CC2. Click to pop up the *Voltage and Current plot window*

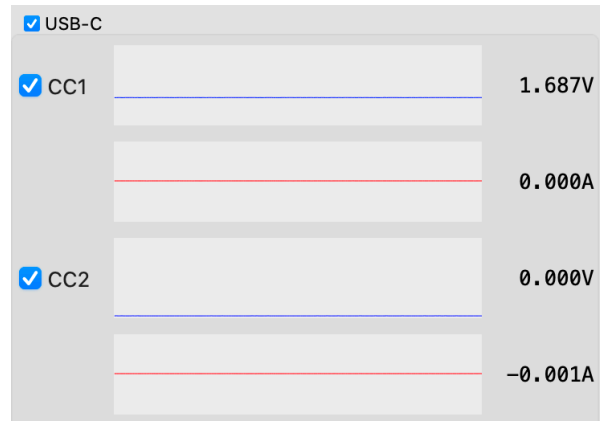

### Alt mode

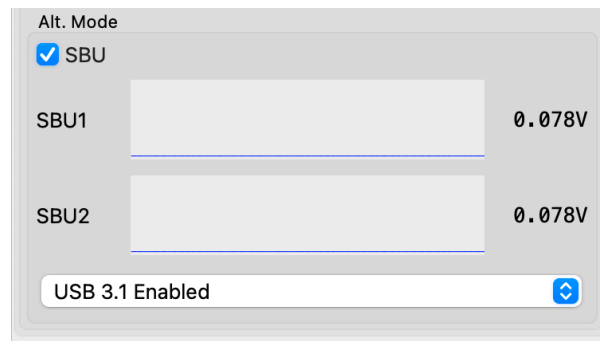

- **SBU toggle** – enables and disables SBU lines. Used for Alternate Mode discovery, negotiation, and configuration data exchange
- **SBU1 and SBU2 voltage and current plots (redriver model only)** – shows voltage and current for SBU1 and SBU2. Click to pop up the [Voltage and Current plot window](#)
- **DisplayPort alt mode configuration menu (redriver model only)**

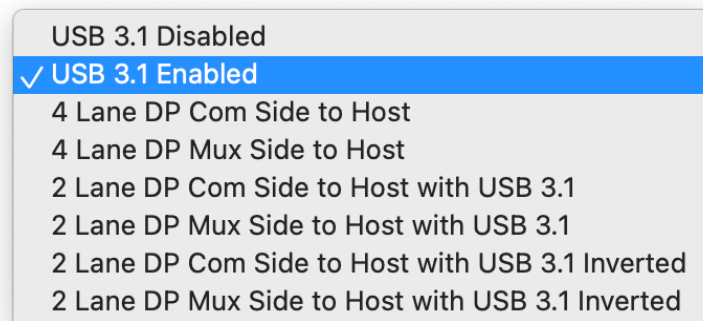

Alt Mode Configuration
USB 3.1 Disabled – no SS lines connected
USB 3.1 Enabled – SS lines connected
4-Lane DisplayPort – no USB 3.1 – Host on Common Port
4-Lane DisplayPort – no USB 3.1 – Host on Mux Port
2-Lane DisplayPort + USB 3.1 -- Host on Common Port
2-Lane DisplayPort + USB 3.1 -- Host on Mux Port
2-Lane DisplayPort + USB 3.1 Inverted – Host on Common Port
2-Lane DisplayPort + USB 3.1 Inverted – Host on Mux Port

DisplayPort Alt modes use the SS lines for DisplayPort data, but change their direction. Since each redriver line can operate in only one direction at a time, the redriver direction needs to be set to match the mode being used by the host and display. See the :ref: *API reference <cs-alt-mode-configuration>* for more detail.

## Cable flip

- **Cable flip toggle** – switches USB data, VConn, and SBU lines from side A to side B as if the cable had been flipped. When using standard USB-C cables with USB-C-Switch, one cable orientation will work, the other will need to be flipped physically, or by using the toggle.
- **CC, SS, SBU, USB2 flip toggles** – individually flip each connection type

To enable automated cable flips for testing, use one [Universal Orientation Cable](https://acroname.com/store/c44-usb-uoc)<sup>89</sup> for either the host or mux connection, and one standard cable for the other connection.

## Equalizer (requires redriver model)

The equalizer section provides controls to set transmitter and receiver gains for USB 2 and USB 3 data lines in both directions.

### USB 2.0

- **Transmitter config** – selects the amount of DC boost applied to USB 2.0 (HS) signals. USB Low Speed and Full Speed signals are unaffected. When boost is set to 0 mV, the HS redriver is disabled independent of receiver configuration

<sup>89</sup> <https://acroname.com/store/c44-usb-uoc>

Equalizer

USB 2.0

Transmitter Config      Receiver Config

40mV      Level 1

USB 3.0

Transmitter Config

Mux +1db, Common +0db @ 900mV

Receiver Config: Com      Receiver Config: Mux

Level 1      Level 1

#### USB 2.0 transmitter DC boost

40 mV – default  
 60 mV  
 80 mV  
 0 mV (redriver disabled)

- **Receiver config** – controls the sensitivity of the redriver to incoming HS signals by boosting higher frequencies to make sharper edges. When receiver config is set to level 0, the redriver is disabled independent of transmitter configuration

#### USB 2.0 Receiver Equalization

Level 1 – moderate boost – default  
 Level 2 – higher boost  
 Level 0 – redriver disabled


### USB 3.0

- **Transmitter config** – selects preset combinations of transmitter gains for each direction of the full-duplex USB 3 (SS) data lines, and peak-to-peak voltage for both directions

Mux Side	Common Side	Range	
1 db	0 db	900 mVpp	default
0 db	1 db	900 mVpp	
1 db	1 db	900 mVpp	
0 db	0 db	900 mVpp	
0 db	0 db	1100 mVpp	
1 db	0 db	1100 mVpp	
0 db	1 db	1100 mVpp	
2 db	2 db	1100 mVpp	
0 db	0 db	1300 mVpp	

- **Receiver config: com** – sets the sensitivity of the redriver to incoming SS signals on the com side by boosting higher frequencies to make sharper edges. Level 1 (lowest boost, default) to Level 16 (highest)
- **Receiver config: mux** – sets the sensitivity of the redriver to incoming SS signals on the mux side by boosting higher frequencies to make sharper edges. Level 1 (lowest boost, default) to Level 16 (highest boost)

## Mux Port controls

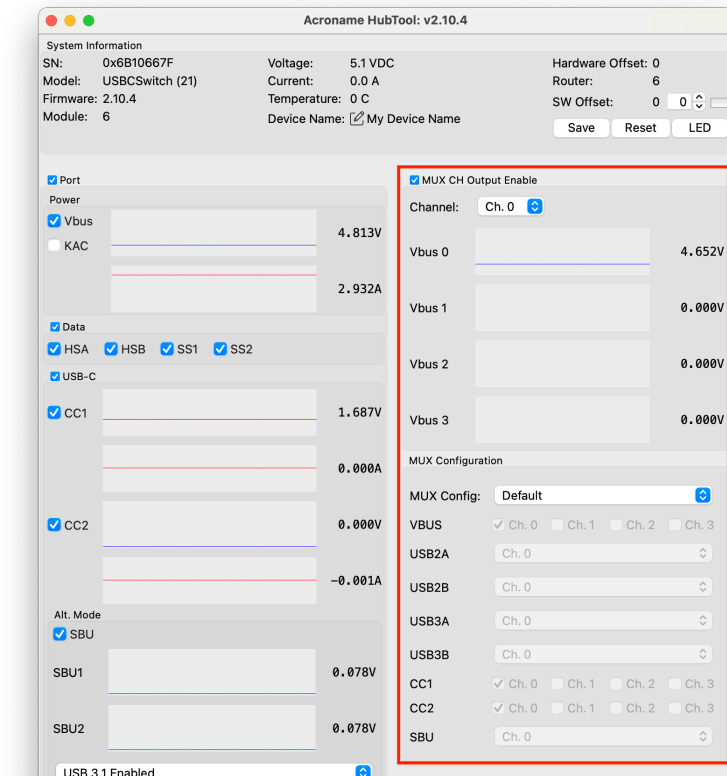

The right side of HubTool shows controls and attributes related to the mux ports.


## Mux Channel control

- **Mux channel output enable** – toggles the output of the selected port
- **Mux channel selector** – designates one mux port to connect to the Common port. Unavailable in Channel priority and Split configuration
- **VBus voltage plots** – shows VBus voltage for each mux port. Click the graph to pop up the *Voltage and Current plot window*

## Mux configuration

- **Default** – switches all enabled USB-C lines to the single mux port designated by the channel selector
- **Channel priority** – auto-selects the lowest-numbered mux port that has VBus present. Allows simple automatic host selection (requires USB A-to-C cables)
- **Split** – allows each signal type to be independently connected to a mux port. VBus and CC lines can be assigned to any combination of ports, while USB2, USB3, and SBU can be assigned to a single mux port. See the [API reference](#)<sup>90</sup> for more detail

## Voltage and current plot window

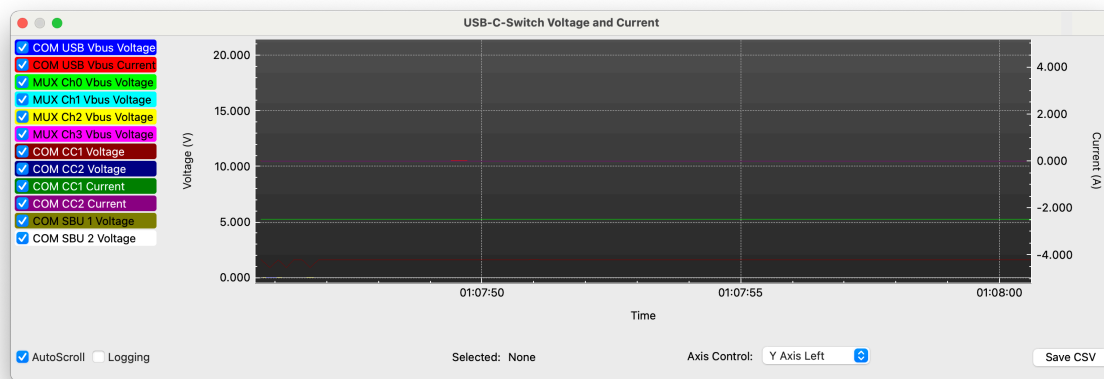


The voltage and current plot window pops up when any of the traces in the main window are clicked.

- **Trace select toggles** – show and hide each trace
- **Autoscroll** – scrolls automatically. When enabled, the right edge is “now” – default = on
- **Logging** – when enabled, data is stored beyond the current plot view
- **Axis control** – sets whether dragging and scrolling zoom affect the voltage, current, or time axis
- **Save CSV** – saves data for each non-hidden trace as an independent CSV file. If logging is not enabled, only the data visible in the graph is saved

<sup>90</sup> <https://acroname.com/reference/devices/usbcswitch/functionality.html#mux-split-mode>

## 2.2 BrainD

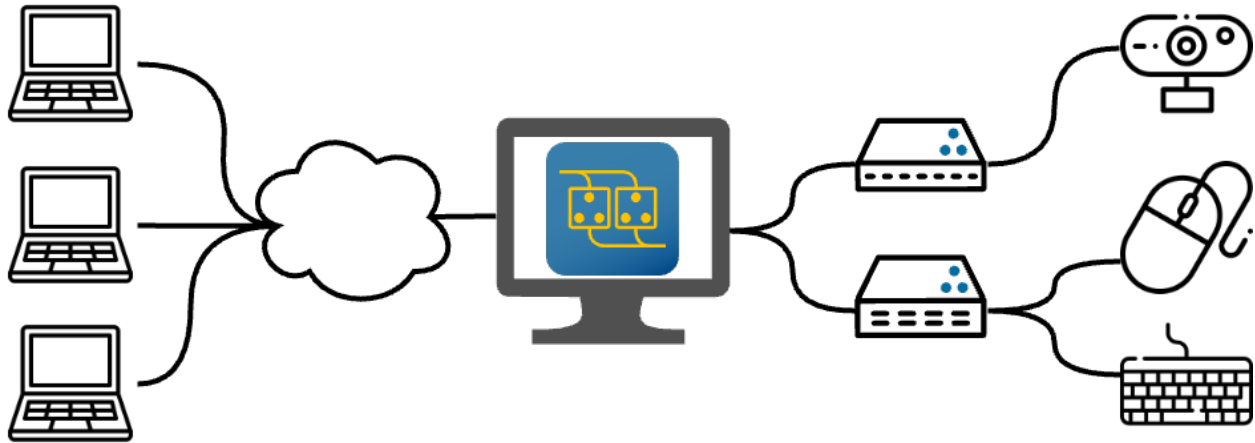

BrainD is a server application that provides simultaneous multi-client access and control to Acroname devices connected to a host computer. Connected devices can be accessed without drivers via any intranet or internet connection, including tunneling over VPNs. Using a standard HTTP request interface, BrainD serves a REST-Ful API that provides telemetry and status information on the entire USB tree. BrainD builds upon decades of experience from successfully deploying complex test and measurement systems, conference room solutions, and artificially intelligent robotic applications.

---

### 2.2.1 Installation

#### Procedure

Please ensure you have appropriate privileges on your computer and back up any critical data to prevent data loss during the upgrade process.

1. Download latest software release.
  1. Navigate to the [Acroname Download Center](https://acroname.com/software/braind)<sup>91</sup>.
  2. Choose the appropriate software for your operating system and click the link to initiate the download.
  3. If prompted to choose a download location, select a place that is easily accessible.
  4. Wait for the download to complete.
2. Installation of BrainD
  1. Windows:
    1. The downloaded file will be a setup .exe file. Open the .exe file to run the program installer.
    2. If BrainD is already installed, the installer will prompt to uninstall the existing version.
    3. Follow the installer prompts to accept the license and select the application installation directory.
    4. Open BrainD from the Start Menu or Windows Explorer.
  2. macOS

---

<sup>91</sup> <https://acroname.com/software/braind>



1. The downloaded file will be a .dmg disk image. Open the .dmg file to mount the disk image.
2. Drag the BrainD application into the Applications folder inside the disk image
3. Open BrainD from the Applications folder.
3. Linux
  1. The downloaded file will be a .deb installer package.
  2. In a command line, run `sudo dpkg -i <image file>.deb`. This will install the BrainD application.

---

**Note:** If dependencies are missing, the above command may fail. Run `sudo apt-get -f install` to install the dependencies, then re-run the previous install command.

---

3. After installation, open BrainD from the applications selector or from the command line.

---

**Note:** On Linux, the `api/v1/devices` REST endpoint may not enumerate all devices on the system if the user does not have write permissions to `/dev/bus/usb`.

---

## Software Requirements

### Web Browsers

The following web browsers are supported for accessing and using the web-based application:

Table 43: Supported Web Browsers

Browser	Version	Windows	macOS	Linux	iOS	Android
Safari	Latest stable	Yes	Yes	Yes	Yes	No
Brave	Latest stable	Yes	Yes	Yes	Yes	Yes
Microsoft Edge	Latest stable	Yes	Yes	No	No	No
Google Chrome	Latest stable	Yes	Yes	Yes	Yes	Yes
Mozilla Firefox	Latest stable	Yes	Yes	Yes	Yes	Yes

### Operating Systems

BrainD application is compatible with the following operating systems:

Table 44: Supported Operating Systems

Operating System	Version	BrainD	ControlRoom
Windows (x86/x86_64)	10	Yes	Yes
	11	Yes	Yes
macOS (Intel/Apple Silicon)	10.15	Yes	Yes
	11.x	Yes	Yes
	12.x	Yes	Yes
	13.x	Yes	Yes
Linux (x86_64)	Ubuntu 20.04 LTS	Yes	Yes
	Ubuntu 22.04 LTS	Yes	Yes
Linux (arm64)	Ubuntu 20.04 LTS	Yes	Yes
Linux (armhf)	Debian Bullseye	Yes	Yes

Please note that while our web-based application may function on earlier versions of the mentioned operating systems, we strongly recommend using the specified minimum versions for optimal performance, security, and compatibility.

## 2.2.2 Quick Start Guide

To get started with BrainD, follow these steps:

1. Install BrainD following the [Installation Guide](#).
2. Connect an Acroname product with a valid Software License installed. For this guide, a [USBHub3c](#) will be used, with serial number `F7A9DFC6`.
3. Start BrainD by selecting it in the Start Menu under “Acroname” (Windows) or from the Applications directory (Mac). An icon will appear in the system taskbar.
4. The BrainD service is now running. The [RESTful API](#) is available at `http://127.0.0.1:9005`. See the following sections for example usage. Additional examples are in the documentation for each RESTful endpoint.

### GET Example - Get Version

The version of software that is running can be read by issuing a GET request to the `version` endpoint.

Bash

```
curl -H 'Accept: application/json' http://127.0.0.1:9005/api/v1/version
```

Python

```
import requests
import json
response = requests.get('http://127.0.0.1:9005/api/v1/version')
json_data = response.json()
print(json.dumps(json_data, indent=3))
```

The resulting return of the version will return the following JSON body.

```

1 {
2   "braind": {
3     "version": {
4       "major": 1,
5       "minor": 0,
6       "patch": 0
7     },
8     "buildDate": "Thu Aug 24 13:58:24 2023",
9     "buildHash": "d38f0a1dd5f8daa2c8cd0a0170fee8210d1356b4"
10  },
11  "brainstem": {
12    "version": {
13      "major": 2,
14      "minor": 10,
15      "patch": 0
16    },
17    "buildDate": "2023-09-08T19:03:10Z",
18    "buildHash": "7af9c07e44601d6987fe3dab0ea201a13609683e"
19  }
20 }

```

### PUT Example - Set BrainStem Port Off

BrainD is designed to manage and manipulate Acroname products through the *RESTful API*

Bash

```

curl -X PUT http://127.0.0.1:9005/api/v1/brainstem/F7A9DFC6/port/1/enabled -H
  ↪ 'Content-Type: application/json' -d '{"value": 0}'

```

Python

```

import requests
import json
response = requests.put('http://127.0.0.1:9005/api/v1/brainstem/F7A9DFC6/port/1/
  ↪enabled', json={'value': 0})
json_data = response.json()
print(json.dumps(json_data, indent=3))

```

The resulting return of the version will return the following JSON body.

```

1 {
2   "timestamp": "2023-09-18T04:43:09.813Z",
3   "request": {
4     "endpointName": "/api/v1/brainstem/F7A9DFC6/port/1/enabled",
5     "parameters": {
6       "value": 0
7     }
8   },
9   "response": {}
10 }

```

## GET Example - Get BrainStem Port 2 Vbus Voltage

Bash


```
curl http://127.0.0.1:9005/api/v1/brainstem/F7A9DFC6/port/2/VbusVoltage
```

Python

```
import requests
import json
response = requests.put('http://127.0.0.1:9005/api/v1/brainstem/F7A9DFC6/port/2/
↳VbusVoltage')
json_data = response.json()
print(json.dumps(json_data, indent=3))
```

```
1 {
2   "timestamp": "2023-09-18T04:56:16.639Z",
3   "request": {
4     "endpointName": "/api/v1/brainstem/F7A9DFC6/port/2/VbusVoltage",
5     "parameters": {}
6   },
7   "response": {
8     "value": 5100097,
9     "rawValue": 5100097
10  }
11 }
```

## 2.2.3 Usage

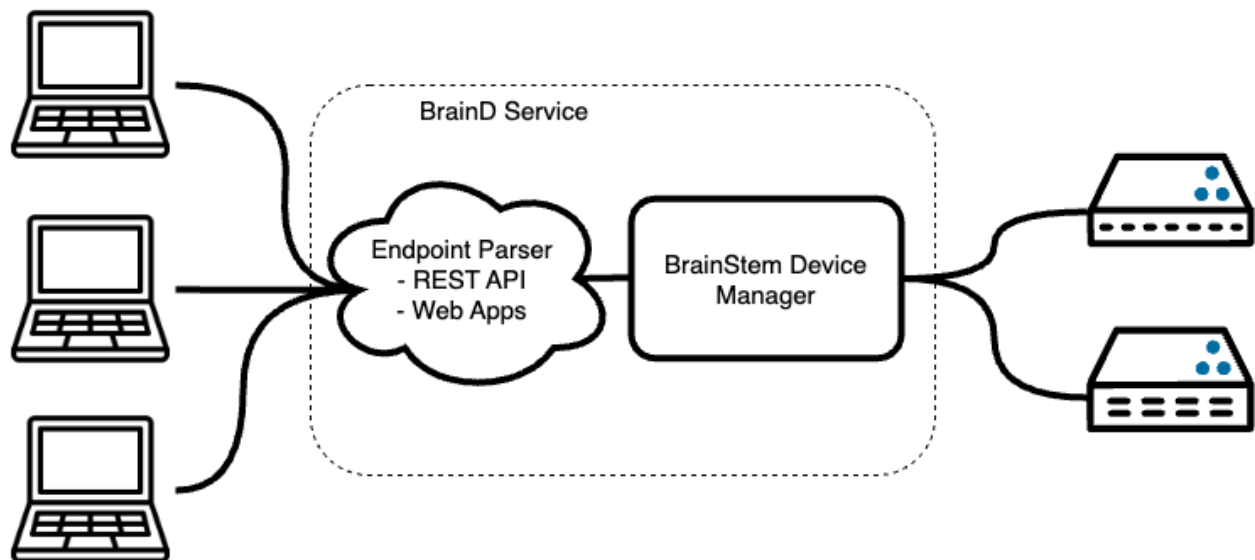

BrainD has multiple methods of interface and interacting with a consumer or client. A host processor must host the BrainD service for endpoints and user applications to run. The BrainD service will inherently manage all links to BrainStem devices that are connected to the host processor with the use of *aEther*. Also, BrainD service creates specific *RESTful endpoints* for connected devices, bulk data endpoints, and web based application endpoints.

Background Service

BrainD user interface application enables simple configuration and manipulation of the application service.

Taskbar

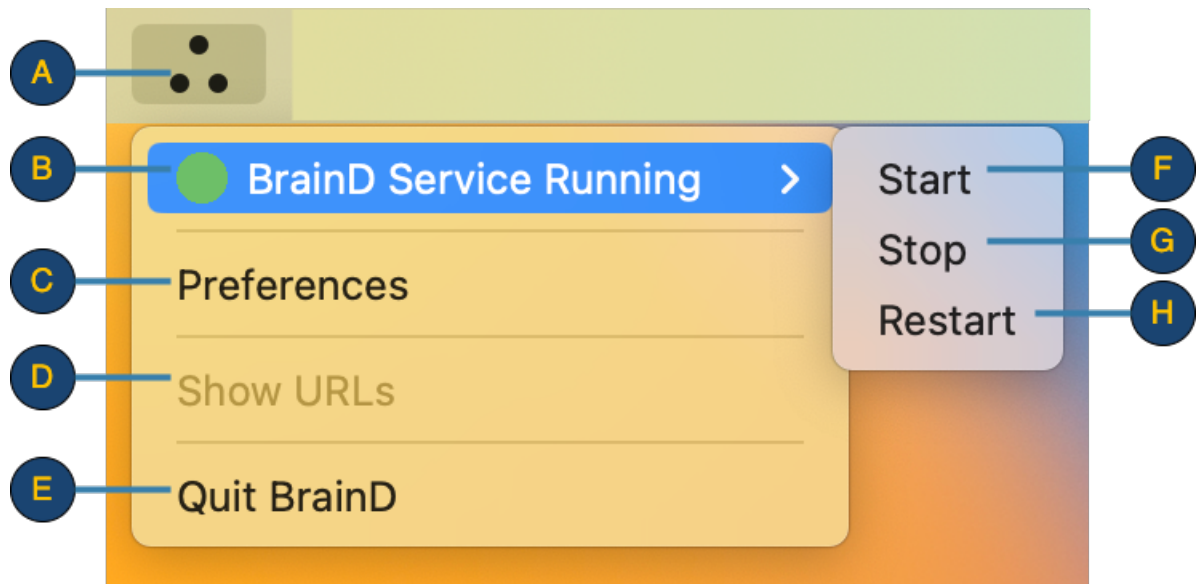


Table 45: Taskbar Details

Item	Description
A	Application icon.
B	BrainD operation status. A green indicator shows the service is running. A red indication shows the service is stopped and no application connections or updates will be available.
D	Opens the <a href="#">settings and configuration dialog</a> .
E	Close and quit the BrainD service.
F	Start the BrainD service.
G	Stop the BrainD service.
H	Restart the BrainD service. All active connections will be terminated.

Command Line

For headless servers, starting as a system service, or as part of a larger solution, BrainD may be directly run from a command line, without the use of the taskbar GUI application.

The list of command line arguments may be found with the `--help` argument:

```
$ braind_service --help

BrainD Version 1.0.0
Service providing a REST interface to Acroname BrainStem devices

Application Usage:
```

(continues on next page)

(continued from previous page)

```
braind_service [-f <filename>]... [-d <json object>]
```

**Parameters:**

-h, --help	- Show full help message
-v, --version	- Show version information
-f, --config-file <file>	- Specifies <b>any</b> additional configuration files that override the default setting. May be specified multiple times <b>for</b> multiple files.
-d, --config-data <json>	- JSON Object containing configuration to override the default settings

The `-f` flag is used to specify an additional configuration file that will be read, and this may be specified multiple times.

The `-d` flag allows a JSON configuration object to be passed directly to the service, which will take priority over all configuration files.

The details of the configuration is documented in [Configuration](#).

## Examples

For endpoint usage examples, please refer to the [RESTful API](#) section which will have additional information.

---

## 2.2.4 Security

### SSL Certificates

SSL (Secure Sockets Layer) is a fundamental technology for securing web applications by encrypting data, ensuring data integrity, authenticating servers, and enhancing user trust.

SSL layers encrypt the data transmitted between a user's web browser and server. This encryption ensures that the data remains unreadable and secure even if intercepted by malicious actors. SSL includes mechanisms to ensure data integrity during transmission using cryptographic hash functions to detect unauthorized modifications or tampering. In the event of altered data during transit, the recipient can see and reject the modified data.

BrainD allows loading a user's SSL certificate through the [settings and configuration dialog](#). Many external service providers can provide an SSL certificate; one may already have an SSL certificate for BrainD installations.

Use of a self-signed certificate may cause a warning to appear when accessing the REST endpoints. This is caused by the browser failing to authenticate the received certificate against a trusted certificate authority.



## This Connection Is Not Private

This website may be impersonating "127.0.0.1" to steal your personal or financial information. You should go back to the previous page.

Go Back

Safari warns you when a website has a certificate that is not valid. This may happen if the website is misconfigured or an attacker has compromised your connection.

To learn more, you can [view the certificate](#). If you understand the risks involved, you can [visit this website](#).

OpenSSL is an option that one can use to create a self-signed SSL certificate. The following command may be used to generate a self-signed certificate:

Bash

```
openssl req -new -x509 -days 365 -nodes -keyout example.key -out example.crt
```

By default, BrainD will serve an insecure web page over HTTP, without any certificates or encryption. If insecure communications over HTTP are not desirable, the [settings and configuration dialog](#) can be used to enable HTTPS/SSL communication. If a certificate is not specified, then BrainD will automatically generate a self-signed certificate.

Certificates are stored in the following directory:

1. Windows: %AppData%\Acroname\BrainD\config
2. Mac: ~/Library/Application\ Support/Acroname/BrainD/config
3. Linux: ~/.acroname/BrainD/config

## 2.2.5 Configuration

### Preferences

To change the default settings of BrainD, the desktop application provides a simple dialog window that enables users to change the HTTP server settings and specify [SSL/TLS Certificates](#). To open the dialog, click on the taskbar menu and select "Preferences".

The following diagram lists the available configuration options in the Settings dialog:

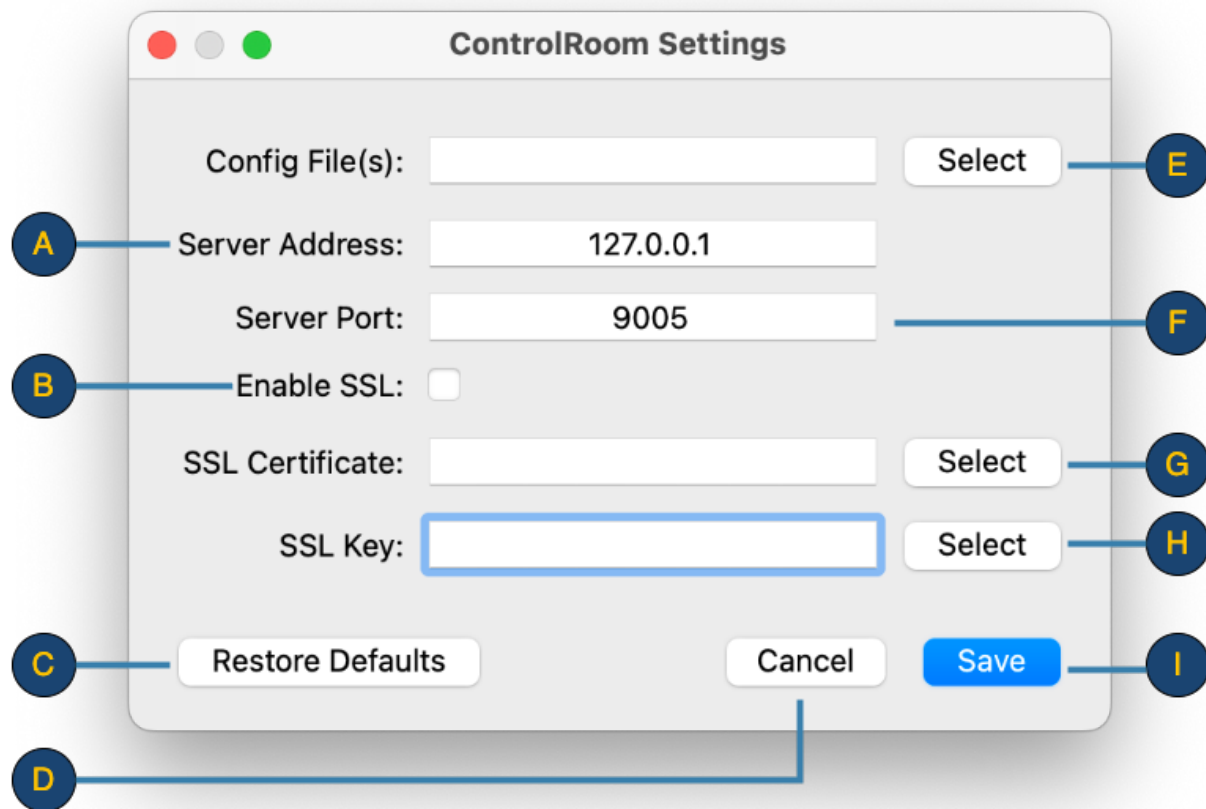


Table 46: Preferences Details

Item	Description
A	Default server address. Default is 127.0.0.1, which will allow connection from external devices.
B	<a href="#">Enable SSL/TLS</a> on client connections.
C	Restore configuration settings to factory defaults.
D	Close the preferences window without saving.
E	Optional path to a JSON Configuration File.
F	Server port to bind to for clients. Default is 9005.
G	<a href="#">SSL/TLS Certificate (.cert) file</a> . If not specified, a self-signed cert will be generated.
H	<a href="#">SSL/TLS Key (.key) file</a> . If not specified, a self-signed cert will be generated.
I	Save application settings.



## Configuration Files

BrainD allows for more fine-grained control of the backend service through the use of JSON configuration files. This configuration includes settings for *logging*, polling rates, and web server configuration.

The BrainD service will read the following configuration file for the current operating system:

1. Windows: %AppData%\Acroname\BrainD\config\config.json
2. Mac: ~/Library/Application Support/Acroname/BrainD/config/config.json
3. Linux: ~/.acroname/BrainD/config/config.json

Each entry in the `config.json` file will be merged into the default configuration object, overriding each field that is listed. In addition, if any configuration files are specified in the “Config File(s)” entry of the Settings menu, these files will be read and merged as well. The default configuration object is defined as the following:

```
{
  "logging": {
    "loggers": {
      "default": "debug"
    },
    "sinks": {
      "consoleSinks": [
        {
          "enable": true,
          "level": "debug",
          "enableColors": true,
          "colorPattern": "\u001B[0m[\u001B[32m%Y-%m-%d %H:%M:%S.%e\
\u001B[0m] [%^%l%$] [\u001B[35m%n\u001B[0m:\u001B[33m%#\u001B[0m] %v",
          "noColorPattern": "[%Y-%m-%d %H:%M:%S] [%l] [%n:%#] %v"
        }
      ],
      "fileSinks": [
        {
          "enable": true,
          "level": "info",
          "pattern": "[%Y-%m-%d %H:%M:%S] [%l] [%n:%#] %v",
          "path": {
            "win": "%AppData%\Acroname\BrainD\log",
            "mac": "~/Library/Logs/Acroname/BrainD",
            "lin": ~/.acroname/BrainD/log"
          },
          "baseFileName": "braind.log",
          "maxFiles": 5,
          "maxFileSize": 5242880
        }
      ]
    },
    "flushInterval": 3000
  },
  "httpServer": {
    "enable": false,
    "address": "0.0.0.0",
    "port": 9005,
    "threadCount": 1
  },
  "httpsServer": {
    "enable": true,
```

(continues on next page)

(continued from previous page)

```
    "address": "0.0.0.0",
    "port": 9006,
    "threadCount": 1,
    "sslCert": "",
    "sslKey": ""
  },
  "pollingRates": {
    "acronameDevicesState": 300,
    "devices": 300,
    "brainstem": 1000
  }
}
```

---

**Note:** The `config['httpServer']` and `config['httpsServer']` configuration objects will have no effect if the BrainD desktop application is used. The value in the Settings dialog takes priority.

---

## Examples

Add an additional log file output:

```
{
  "logging": {
    "sinks": {
      "fileSinks": [
        {
          "enable": true,
          "level": "info",
          "pattern": "[%Y-%m-%d %H:%M:%S] [%l] [%n:%#] %v",
          "path": {
            "win": "C:\\\\Users\\username\\Desktop",
            "mac": "~/Desktop",
            "lin": "~/Desktop"
          },
          "baseFileName": "custom-log-file.log"
        }
      ]
    }
  }
}
```

Increase the log flush rate from 3000ms to 500ms, and reduce the USB tree polling rate from 300ms to 1000ms:

```
{
  "logging": {
    "flushInterval": 500
  },
  "pollingRates": {
    "devices": 1000
  }
}
```

## 2.2.6 Logging

BrainD generates runtime logging to aid in debugging and understanding for many events. These log files are stored by default in the following path for each operating system:

1. Windows: %AppData%\Acroname\BrainD\log
2. Mac: ~/Library/Logs/Acroname/BrainD
3. Linux: ~/.acroname/BrainD/log

By default, these log files will rotate when they reach 5MB in size, up to a maximum of five log files. After this point, old log files will be removed to make room for new ones.

For information on how to adjust the logging parameters or specify new log files, see [Configuration](#).

## 2.2.7 Platform Specific Considerations

### Configure MacOS to Advertise Its Hostname


Name resolution is a process where a readable name, e.g. `ElizaPC`, can be resolved into a numerical IP address, e.g. `192.168.41.75`. Name resolution eases server connections, by allowing usage of URLs like `https://ElizaPC` instead of a hard-to-remember, and fragile, `https://192.168.41.75`.

MacOS, in default configuration, doesn't provide resolution for the host's own name.


Here's how to fix that.

1. Get to System Preferences via the Apple Menu in the top left of the screen.


#### Top Left of the Screen

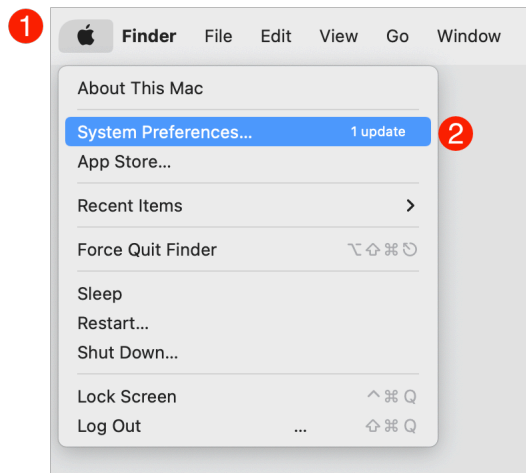

2. Go to the "Sharing" Panel

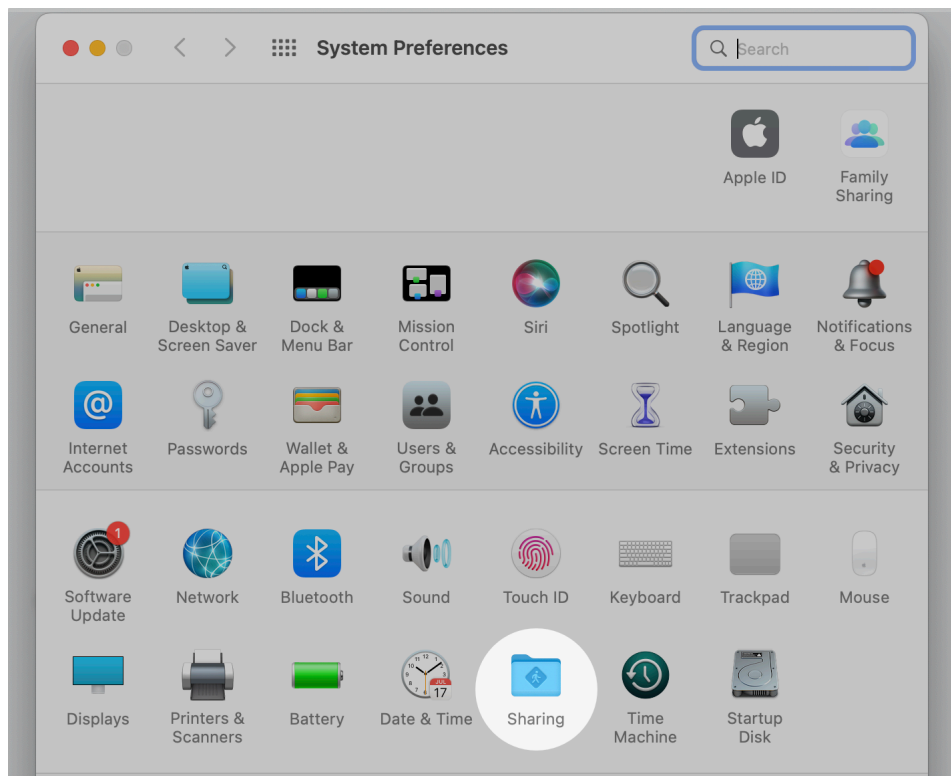

3. Enable File Sharing by checking this box. Other devices on the network can now resolve this machine's name. Note: File sharing does not have to remain enabled but must be enabled at least once for name resolution.

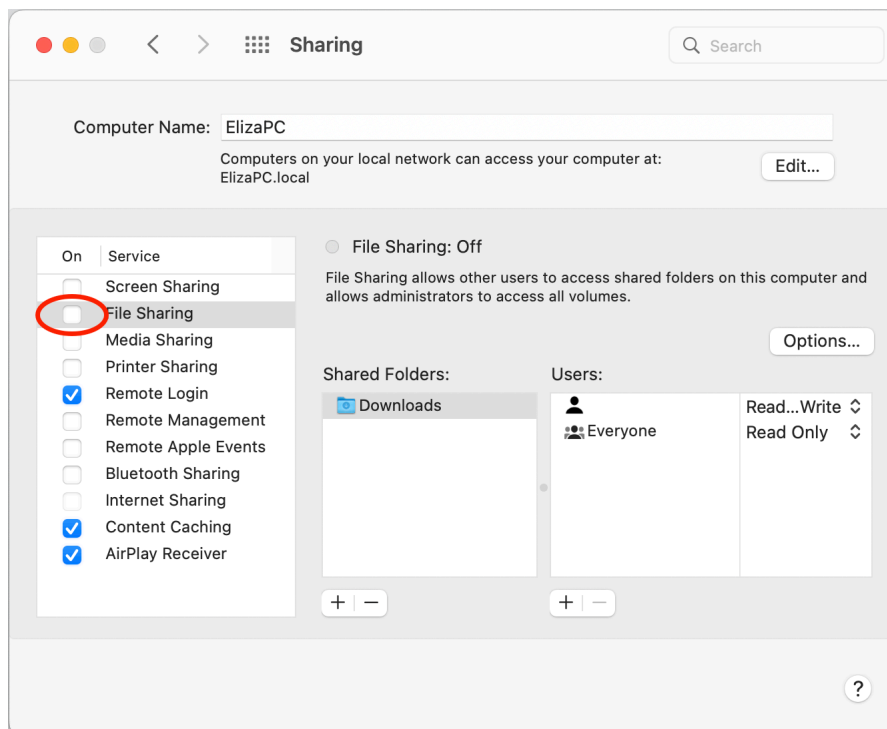

4. Configure these settings to your application's needs. This configuration is just for pictorial example. Other devices on the network can still resolve this machine's name, if File Sharing was ever enabled.

## 2.2.8 Functionality and Features

1. Full remote control of an Acroname device.
2. Telemetry and status information on the host computer's entire usb tree.
3. Simultaneous access from multiple client devices.
4. Extends Acroname's Brainstem protocol, the shared core of all Acroname products.
5. Convenient JSON response format.
6. Mirrors the existing Brainstem interface providing users a new, convenient way to control their devices.


## 2.2.9 Audio-Video Conferencing Solutions

1. **Peripheral Management:** BrainD can efficiently handle USB peripherals such as microphones, cameras, and speakers.
2. **Enhanced Quality:** Proper management of USB devices can lead to improved audio and video quality during conferences. BrainD can highlight bandwidth allocation and ensure that devices and installations work optimally.
3. **Remote Diagnostics:** Troubleshooting issues with connected devices becomes more straightforward with BrainD by providing diagnostic information and assisting in resolving technical problems remotely.

## 2.2.10 Test and Measurement Applications

1. **Flexibility:** The ability to dynamically add or remove devices based on specific testing needs enhances flexibility. Engineers can adapt their setups quickly and efficiently, responding to changing requirements without significant disruptions.
2. **Data Logging and Analysis:** BrainD can facilitate real-time data logging and analysis, allowing research, development, and quality control applications to monitor measurements, perform in-depth analysis, and visualize results conveniently.

## 2.3 ControlRoom

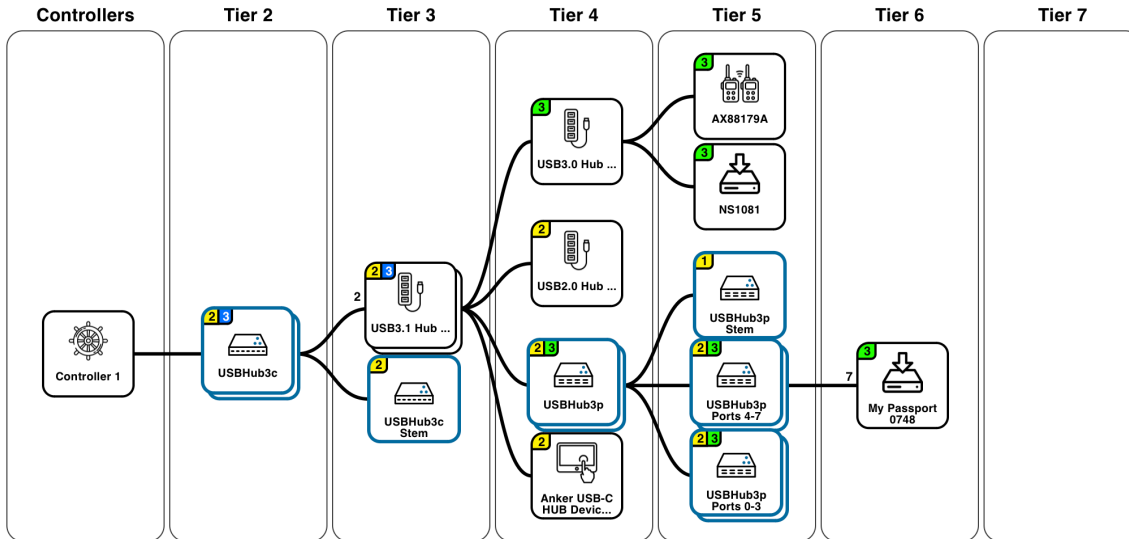

ControlRoom is a service and web application that lets you control, monitor, and reset USB ports in connected conference rooms through a browser. ControlRoom gives a real-time view of your system's connected USB devices for easy troubleshooting and to ensure correct installation. Remotely resolve issues that would normally require a physical unplug / plug cycle.

### 2.3.1 Installation

To install ControlRoom, download the appropriate [installer](#)<sup>92</sup> for your operating system.

#### Requirements

ControlRoom requires a supported Acroname hub with the [ControlRoom add-on software feature](#)<sup>93</sup>:

- [USBHub3c](#)<sup>94</sup> – USB-C Hub with Power Delivery Analyzer + Tester
- [USBHub3p](#)<sup>95</sup> – Programmable Industrial 8-port USB 5Gbps Hub
- [USBHub2x4](#)<sup>96</sup> – Industrial Intelligent 4-port Hi-Speed USB Hub

<sup>92</sup> <https://acroname.com/controlroom>

<sup>93</sup> <https://acroname.com/store/controlroom-feature>

<sup>94</sup> <https://acroname.com/store/programmable-industrial-power-delivery-hub-s99-usbhub-3c-pro>

<sup>95</sup> <https://acroname.com/store/programmable-industrial-hub-s79-usbhub-3p>

<sup>96</sup> <https://acroname.com/store/industrial-intelligent-4-port-hub-s77-usbhub-2x4>

## Supported operating systems

ControlRoom binaries are available for the following platforms:

- Windows 10 and higher
- Intel and Apple Silicon Macs running macOS 10.15 or higher
- Linux:
  - x86\_64 Ubuntu LTS 20.04, 22.04
  - arm64v8 Ubuntu LTS 20.04
  - armhf Debian Bullseye

While ControlRoom may work on earlier OS versions, support is limited to the listed versions.


## Supported browsers

The ControlRoom web application supports the latest stable versions of Safari, Brave, Edge, Chrome, and Firefox.

## Install and launch

### Windows

- Open the downloaded .exe file to launch the installer
- Click “Run” in the security popup
- Follow the installer prompts to accept the license

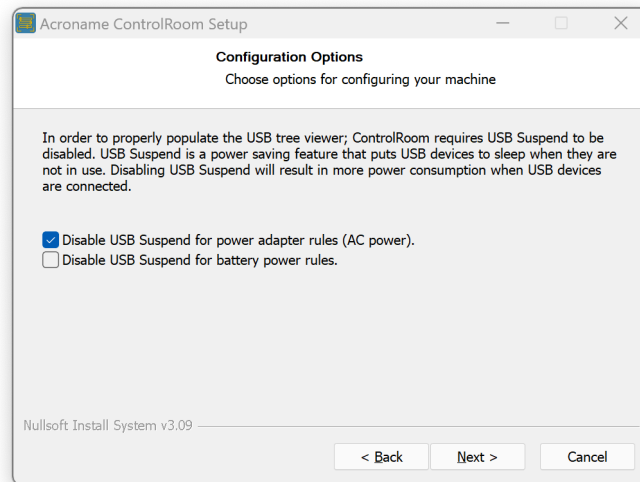

- To reliably view the USB tree, follow the prompt to disable USB suspend
- Choose an install location and start menu folder

### Mac

- Open the downloaded .dmg disk image file

- Drag the ControlRoom app into the applications folder inside the disk image



## Linux

- The downloaded file will be a .deb software package
- In a command line, run `sudo dpkg -i <image file>.deb` to install the ControlRoom application

---

**Note:** If dependencies are missing, the above command may fail. Run `sudo apt-get -f install` to install the dependencies, then re-run the previous install command.

---

- After installation, open ControlRoom from the applications selector or from the command line

---

**Note:** On Linux, the USB Tree may not enumerate all devices on the system if the user does not have write permissions to `/dev/bus/usb`.


---

## 2.3.2 Usage

### Getting Started

To get started with ControlRoom, first confirm that it's *installed*, then connect a supported Acroname device with a valid [ControlRoom License](https://acroname.com/store/controlroom-license)<sup>97</sup>. This guide will use a [USBHub3c](https://acroname.com/store/programmable-industrial-power-delivery-hub-s99-usbhub-3c-pro)<sup>98</sup>.

### Windows

- Start ControlRoom by selecting it in the Start Menu under “Acroname”
- Acroname’s 3-dot icon (  ) will appear in the System Tray, or in Hidden Icons
- Right click to pop up the ControlRoom menu


---

<sup>97</sup> <https://acroname.com/store/controlroom-feature>

<sup>98</sup> <https://acroname.com/store/programmable-industrial-power-delivery-hub-s99-usbhub-3c-pro>




- In the ControlRoom popup menu, select “Open ControlRoom” to launch the viewer in a browser:

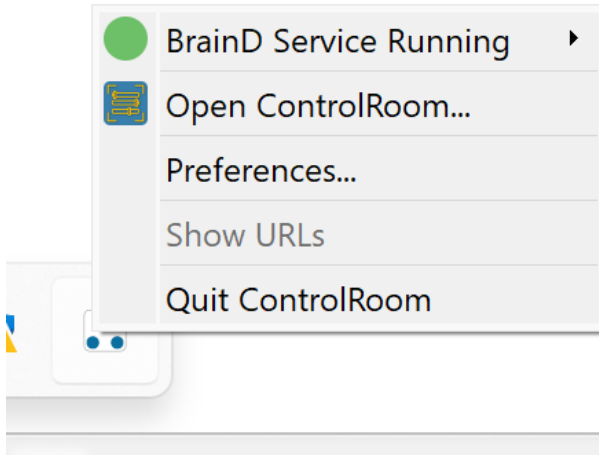

*ControlRoom popup menu (Windows)*

## Mac

- Launch the ControlRoom app from the applications folder
- Acroname's 3-dot icon (⋮) will appear in the Mac menu bar
- Click to pop up the ControlRoom menu
- In the ControlRoom popup menu, select “Open ControlRoom” to launch the viewer in a browser:

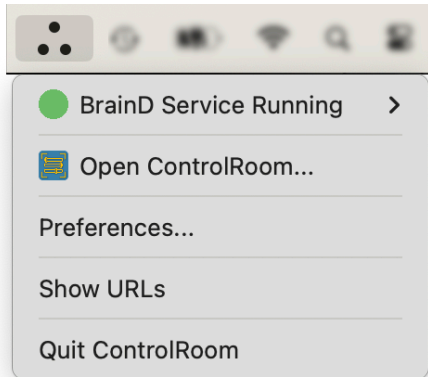



*ControlRoom popup menu (Mac)*




## USB tree

The top of the page contains the USB Tree section. This section shows all of the USB devices connected to the system, as well as the hierarchy of the devices. The tree will continuously update as devices are connected and disconnected. See [the USB Tree section](#) for more information.

In this example, USBHub3c is the hub, USBHub3c Stem is a microcontroller responsible for controlling the hub and communicating with ControlRoom. If a box shows “2” and “3” (  ), then the device is connected to the host via both USB 2 and USB 3. If just a “2” is showing (  ), the device is only connected via USB 2.


### USB Tree

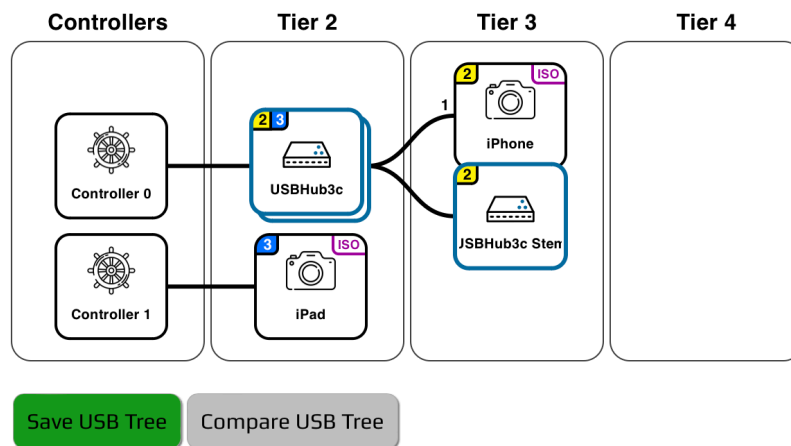

#### *USB tree with an iPhone connected*


To demonstrate, connect a USB Device into USBHub3c Port 1. It will appear in the tree as a child of the USBHub3c. For this example an iPhone is connected, and the device icon shows that it is connected by USB 2 and the “ISO” mark indicates that it is capable of isochronous transfers such as streaming video and audio.

## Port control panel

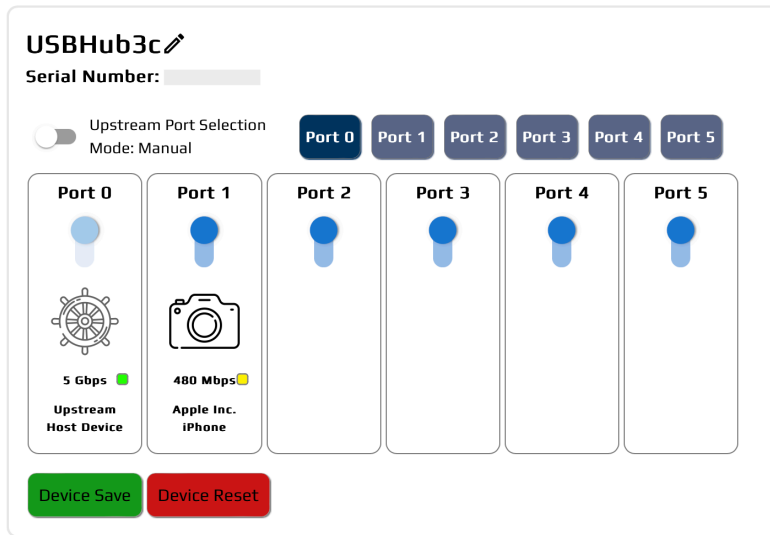

*Port control panel for USBHub3c with an iPhone connected*


Below the USB Tree are panels representing each connected Acroname device. This section allows a user to power ports on and off, view attached devices, and more. See [the Port Control section](#) for more information.

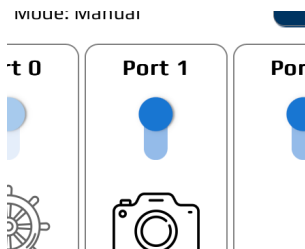

### Port Toggle


To demonstrate, disable the device on USBHub3c Port 1 by toggling the blue enable switch. The device will be removed from the USB Tree.

Detailed information about each connected device can be seen by clicking on the device icon below each port power switch:

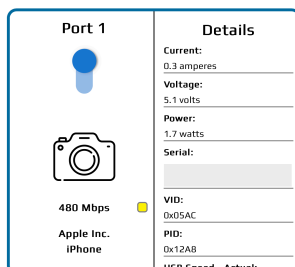

## Taskbar menu

The ControlRoom background application enables simple configuration and manipulation of the application service through a taskbar menu.

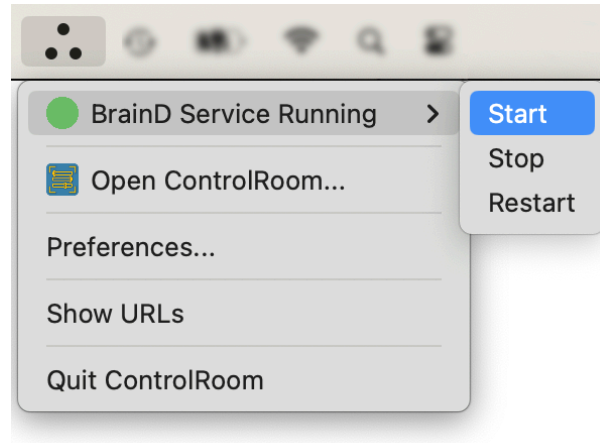

### *ControlRoom taskbar menu*

**BrainD Service [Running or Stopped]** – shows whether the BrainD service that communicates with Acroname devices is running:

- **Start** – starts the BrainD service. This is required for ControlRoom to operate
- **Stop** – stops the BrainD service
- **Restart** – restarts the BrainD service. All active connections will terminate

**Open ControlRoom** – launches the ControlRoom web app in a browser


**Preferences** – opens the [settings and configuration dialog](#)

**Show URLs** – displays all broadcasted URLs that can be used to access the local ControlRoom session

**Quit ControlRoom** – closes and quits the ControlRoom taskbar and stops the BrainD service


## USB Tree

### USB Tree

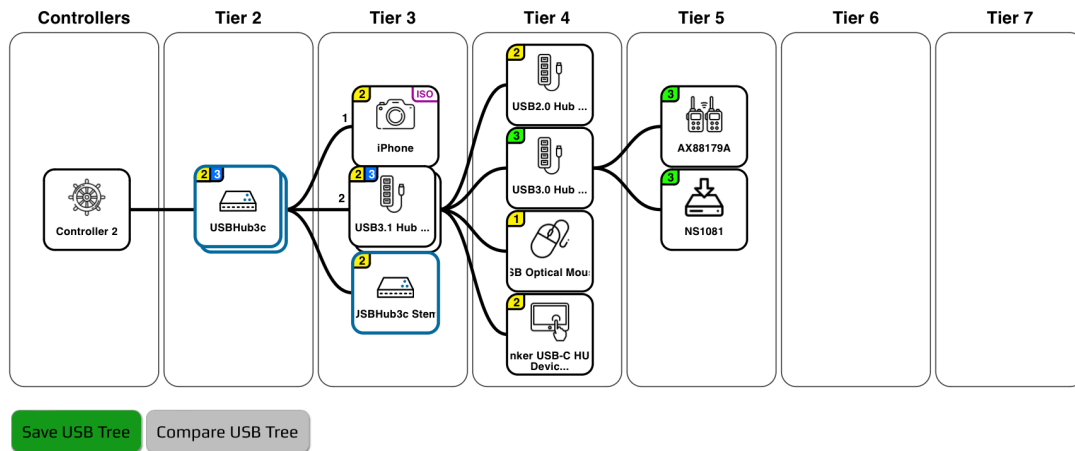

The USB Tree is a great way to visualize the USB device tree for the host processor. USB has the concept of tiers: the host and root hub are on the first tier. A device connected to the root hub is on the second tier. If a hub is added in between the device and the root hub, the device moves down to the third tier. Up to 5 non-root hubs can be added in series for a maximum of 7 USB tiers (5 Hubs + root hub + device).

The USB Tree provides a simple visualization of the 7 hub tiers along with each device and how it is connected back to the host controller.

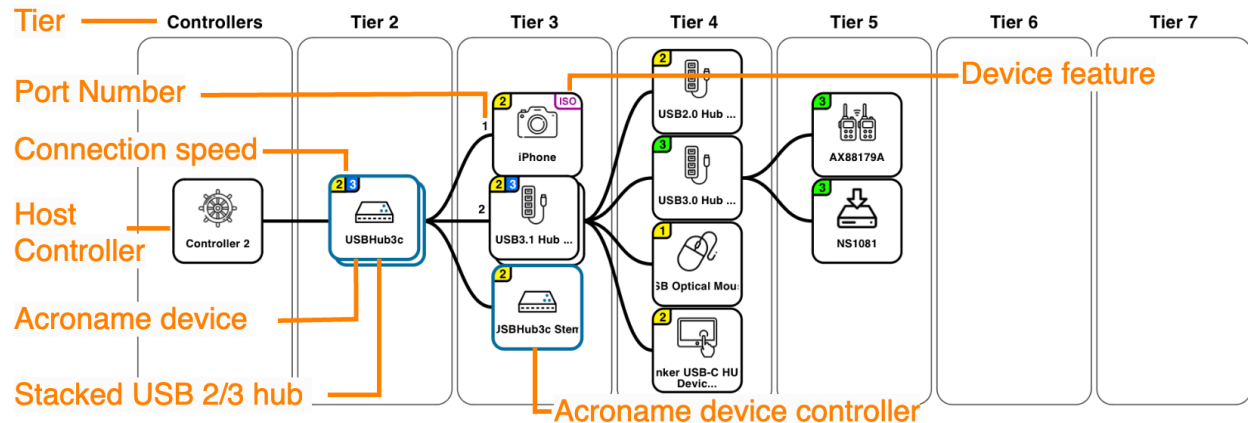


Label	Description
Tier	Depth of USB tree, up to 7
Port number	Physical port of the Acroname product the USB device is connected to (Only available when connected to Acroname products)
Connection speed	3 = USB 3 (blue = 10 Gb/s, green = 5 Gb/s) 2 = USB 2 480 Mb/s 1 = USB 1
Host controller	Host controller node, tier 1
Acroname device	Acroname devices are outlined in blue to for easy indentification
Stacked USB 2/3 hub	Hubs with both USB 2 and USB 3 connections are shown as stacks
Acroname device controller (stem)	Responsible for controlling the hub and communicating with ControlRoom
Device feature	USB device feature. <b>ISO</b> indicates that the device is capable of isochronous transfers such as streaming video and audio

## USB Tree Comparisons

The USB Tree can be saved as a PDF with embedded data. The current tree can then be compared with a saved tree to easily identify changes.

### USB Tree

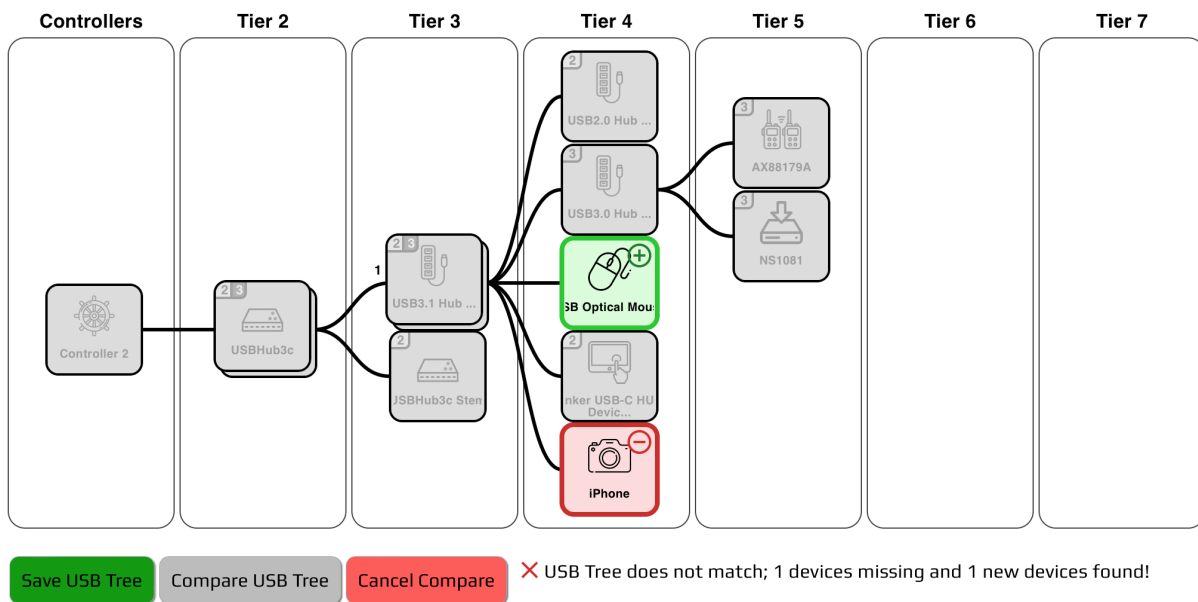

**Save USB Tree** – saves to a PDF file. Saved USB Tree PDF files can be used as recipes for room designs

**Compare the USB Tree** – uploads a saved USB Tree PDF file for dynamic comparison with the current tree. USB devices that match the loaded USB Tree recipe will show a gray background. Missing devices will be shown in red and new devices in green. If a device has been moved to a different port, it will appear twice, once in green as new, and once in red as missing

**Cancel Compare** – cancels the USB Tree comparison

**Summary** – if the current tree does not match, a summary will be displayed indicating how many devices are new, and how many devices are missing

## Port Control

The Port control panels represent each connected Acroname device, providing detailed control and information per port.

**Editable Acroname device name** – click the pencil icon to change the friendly name, click *device save* to store the change to the device internal memory. Default – product family name

**Serial number** – unique to the Acroname device

**Upstream port selection** – toggle to enable manual or auto (lowest port number priority) host port selection. In manual mode, the upstream port can be selected directly by clicking the dark blue port name buttons



**Port name** – name of Acroname device port. Default – numerical value of port

**Device class icon** – unique for each device class

**Port toggle** – independently enables and disables each port. Up = on


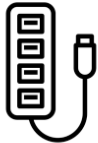

**USB device speed** – nominal device connection speed

**USB MFG / device name** – manufacturer and device name descriptors

**Device save** – stores changes to the hub friendly name and port enabled / disabled toggles. Saved changes will persist through power cycles

**Device reset** – reboots the Acroname device, temporarily disconnecting and reconnecting all connected USB devices

### Port Details Expanded

Port 2	Details
	<b>Voltage:</b> 5.1 volts
	<b>Power:</b> 2.5 watts
<b>10 Gbps</b> 	<b>Serial:</b> 000000001
<b>VIA Labs, Inc.</b> <b>USB3.1 Hub</b>	<b>VID:</b> 0x2109
	<b>PID:</b> 0x0822
	<b>USB Speed - Actual:</b> 10 Gbps

#### Expanded port view with details

Click the USB device icon to expand each port view for realtime details:

- Current
- Voltage
- Power
- Serial number
- Vendor and Product ID
- Actual and maximum USB speeds
- Device manufacturer and device name
- Cable information (if advertised):
  - Cable current max

- Cable voltage max
  - Cable speed max
  - Cable orientation
  - Cable type
- 

### 2.3.3 Advanced

For more advanced ControlRoom options, see configuration, logging, and security.

---

#### Configuration

##### Preferences

To change the default settings of ControlRoom, the desktop application provides a simple dialog window that enables users to change the HTTP server settings and specify *SSL/TLS Certificates*. To open the dialog, click on the taskbar menu and select “Preferences”.

##### Basic settings

*Basic ControlRoom settings*

**Config File(s)** – optional path to load JSON *configuration files*

**Start BrainD at login** – toggles BrainD service to start automatically

**Allow remote access** – lets other computers view the local USB tree information over a network connection

**Use HTTP Secure** – *Enables SSL/TLS* on client connections.

**Restore Defaults** – sets configuration to factory defaults

**Cancel** – closes the preferences window without saving

**Save** – saves application settings, restart ControlRoom to apply

##### Advanced settings

*Advanced ControlRoom settings*

**Server Address** – IP address to allow remote browsers to connect and view the local ControlRoom instance. Default is 127.0.0.1


**Server Port** – server port for remote connections. Default is 9005


**Enable SSL** – *enables SSL/TLS* on client connections.

**SSL Certificate** – *SSL/TLS Certificate (.cert) file*. If not specified, a self-signed cert will be generated.

**SSL Key** – *SSL/TLS Key (.key) file*. If not specified, a self-signed cert will be generated.

**Preferred Network Interface** – IP address to allow remote applications to connect over aEther. Default is 127.0.0.1

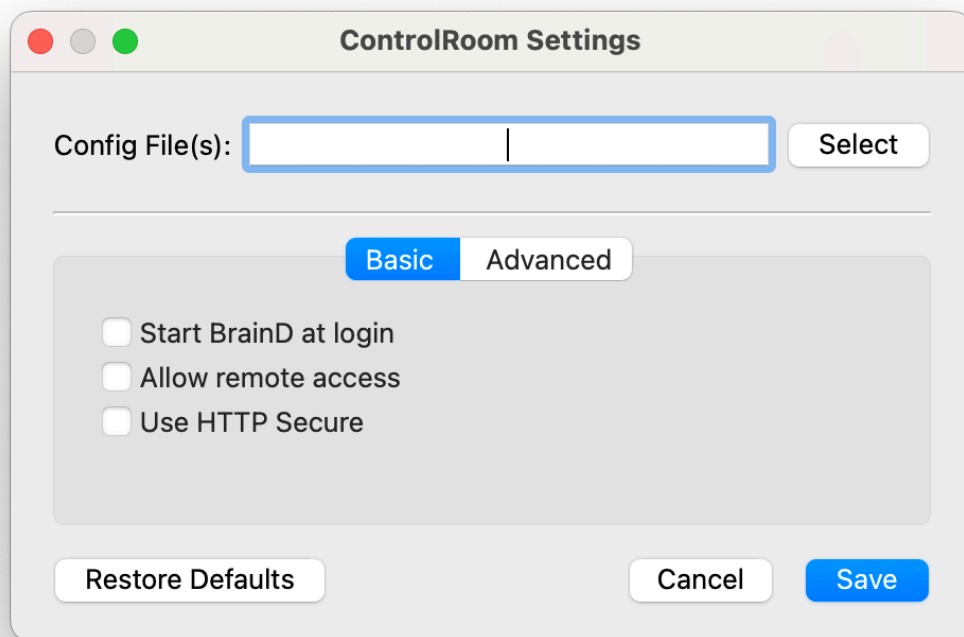

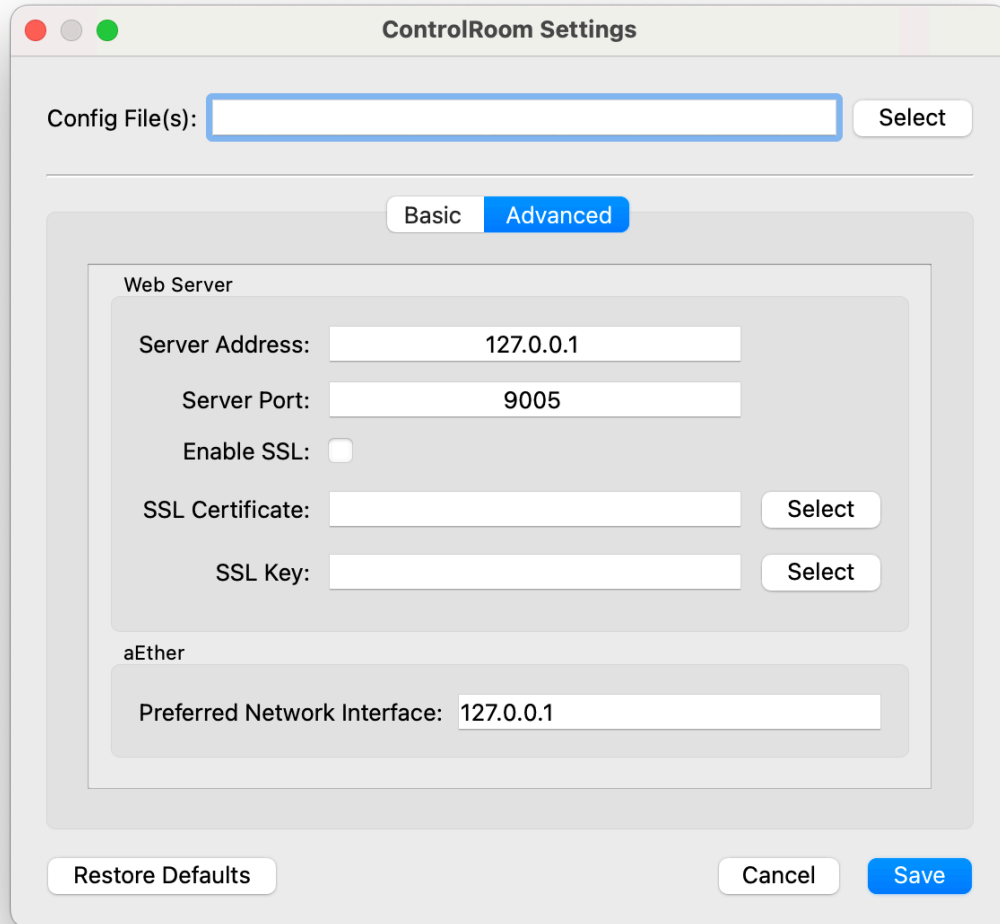

The image shows a macOS-style dialog box titled "ControlRoom Settings". At the top, there are three window control buttons (red, yellow, green). Below the title bar, there is a text field labeled "Config File(s):" followed by a "Select" button. A horizontal line separates this from the main settings area. Inside the main area, there are two tabs: "Basic" and "Advanced", with "Advanced" currently selected. The "Advanced" tab contains two sections: "Web Server" and "aEther". The "Web Server" section has five fields: "Server Address" (127.0.0.1), "Server Port" (9005), "Enable SSL" (unchecked checkbox), "SSL Certificate" (text field with a "Select" button), and "SSL Key" (text field with a "Select" button"). The "aEther" section has one field: "Preferred Network Interface" (127.0.0.1). At the bottom of the dialog, there are three buttons: "Restore Defaults", "Cancel", and "Save".

ControlRoom Settings

Config File(s):  Select

Basic Advanced

Web Server

Server Address:

Server Port:

Enable SSL: ☐

SSL Certificate:  Select

SSL Key:  Select

aEther

Preferred Network Interface:

Restore Defaults Cancel Save

## Configuration Files

ControlRoom allows for more fine-grained control of the backend service through the use of JSON configuration files. This configuration includes settings for [logging](#), polling rates, and web server configuration.

The BrainD service will read the following configuration file for the current operating system:

1. **Windows:** %AppData%\Acroname\BrainD\config\config.json
2. **Mac:** ~/Library/Application Support/Acroname/BrainD/config/config.json
3. **Linux:** ~/.acroname/BrainD/config/config.json

Each entry in the config.json file will be merged into the default configuration object, overriding each field that is listed. In addition, if any configuration files are specified in the “Config File(s)” entry of the Settings menu, these files will be read and merged as well. The default configuration object is defined as the following:

```
{
  "logging": {
    "loggers": {
      "default": "debug"
    },
    "sinks": {
      "consoleSinks": [
        {
          "enable": true,
          "level": "debug",
          "enableColors": true,
          "colorPattern": "\u001B[0m[\u001B[32m%Y-%m-%d %H:%M:%S.%e\
\u001B[0m] [%^%l%$] [\u001B[35m%n\u001B[0m:\u001B[33m%#\u001B[0m] %v",
          "noColorPattern": "[%Y-%m-%d %H:%M:%S] [%l] [%n:%#] %v"
        }
      ],
      "fileSinks": [
        {
          "enable": true,
          "level": "info",
          "pattern": "[%Y-%m-%d %H:%M:%S] [%l] [%n:%#] %v",
          "path": {
            "win": "%AppData%\Acroname\BrainD\log",
            "mac": "~/Library/Logs/Acroname/BrainD",
            "lin": ~/.acroname/BrainD/log"
          },
          "baseFileName": "braind.log",
          "maxFiles": 5,
          "maxFileSize": 5242880
        }
      ]
    },
    "flushInterval": 3000
  },
  "httpServer": {
    "enable": false,
    "address": "0.0.0.0",
    "port": 9005,
    "threadCount": 1
  },
  "httpsServer": {
    "enable": true,
```

(continues on next page)

(continued from previous page)

```

        "address": "0.0.0.0",
        "port": 9006,
        "threadCount": 1,
        "sslCert": "",
        "sslKey": ""
    },
    "pollingRates": {
        "acronameDevicesState": 300,
        "devices": 300,
        "brainstem": 1000
    }
}

```

**Note:** The `config['httpServer']` and `config['httpsServer']` configuration objects will have no effect if the ControlRoom desktop application is used. The value in the Settings dialog takes priority.

## Examples

Add an additional log file output:

```

{
    "logging": {
        "sinks": {
            "fileSinks": [
                {
                    "enable": true,
                    "level": "info",
                    "pattern": "[%Y-%m-%d %H:%M:%S] [%l] [%n:%#] %v",
                    "path": {
                        "win": "C:\\\\Users\\username\\Desktop",
                        "mac": "~/Desktop",
                        "lin": "~/Desktop"
                    },
                    "baseFileName": "custom-log-file.log"
                }
            ]
        }
    }
}

```

Increase the log flush rate from 3000ms to 500ms, and reduce the USB tree polling rate from 300ms to 1000ms:

```

{
    "logging": {
        "flushInterval": 500
    },
    "pollingRates": {
        "devices": 1000
    }
}

```

## Logging

ControlRoom generates runtime logging to aid in debugging and understanding for many events. These log files are stored by default in the following path for each operating system:

1. Windows: %AppData%\Acroname\BrainD\log
2. Mac: ~/Library/Logs/Acroname/BrainD
3. Linux: ~/.acroname/BrainD/log

By default, these log files will rotate when they reach 5MB in size, up to a maximum of five log files. After this point, old log files will be removed to make room for new ones.

For information on how to adjust the logging parameters or specify new log files, see [Configuration](#).

## Security

### SSL Certificates

SSL (Secure Sockets Layer) is a fundamental technology for securing web applications by encrypting data, ensuring data integrity, authenticating servers, and enhancing user trust.

SSL layers encrypt the data transmitted between a user's web browser and server. This encryption ensures that the data remains unreadable and secure even if intercepted by malicious actors. SSL includes mechanisms to ensure data integrity during transmission using cryptographic hash functions to detect unauthorized modifications or tampering. In the event of altered data during transit, the recipient can see and reject the modified data.

ControlRoom allows loading a user's SSL certificate through the [settings and configuration dialog](#). Many external service providers can provide an SSL certificate; one may already have an SSL certificate for ControlRoom installations.

Use of a self-signed certificate may cause a warning to appear when accessing the ControlRoom webpage or BrainD REST endpoints. This is caused by the browser failing to authenticate the received certificate against a trusted certificate authority.



## This Connection Is Not Private

This website may be impersonating "127.0.0.1" to steal your personal or financial information. You should go back to the previous page.

Go Back

Safari warns you when a website has a certificate that is not valid. This may happen if the website is misconfigured or an attacker has compromised your connection.

To learn more, you can [view the certificate](#). If you understand the risks involved, you can [visit this website](#).

OpenSSL is an option that one can use to create a self-signed SSL certificate. The following command may be used to generate a self-signed certificate:

## Bash

```
openssl req -new -x509 -days 365 -nodes -keyout example.key -out example.crt
```

By default, ControlRoom will serve an insecure web page over HTTP, without any certificates or encryption. If insecure communications over HTTP are not desirable, the [settings and configuration dialog](#) can be used to enable HTTPS/SSL communication. If a certificate is not specified, then ControlRoom will automatically generate a self-signed certificate.

Certificates are stored in the following directory:

1. Windows: %AppData%\Acroname\BrainD\config
2. Mac: ~/Library/Application\ Support/Acroname/BrainD/config
3. Linux: ~/.acroname/BrainD/config

## Platform Specific Considerations

### Configure MacOS to Advertise Its Hostname


Name resolution is a process where a readable name, e.g. ElizaPC, can be resolved into a numerical IP address, e.g. 192.168.41.75. Name resolution eases server connections, by allowing usage of URLs like `https://ElizaPC` instead of a hard-to-remember, and fragile, `https://192.168.41.75`.

MacOS, in default configuration, doesn't provide resolution for the host's own name.

Here's how to fix that.


1. Get to System Preferences via the Apple Menu in the top left of the screen.

#### Top Left of the Screen

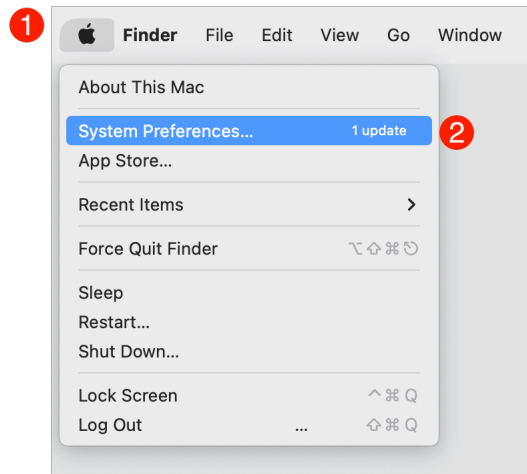


2. Go to the "Sharing" Panel



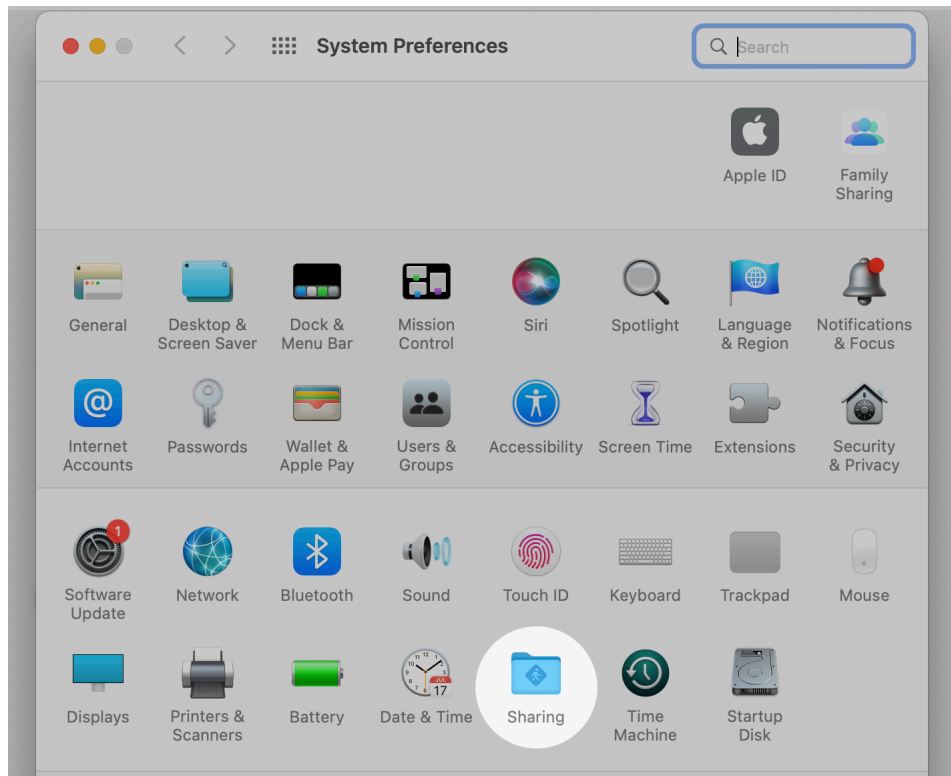

3. Enable File Sharing by checking this box. Other devices on the network can now resolve this machine's name. Note: File sharing does not have to remain enabled but must be enabled at least once for name resolution.

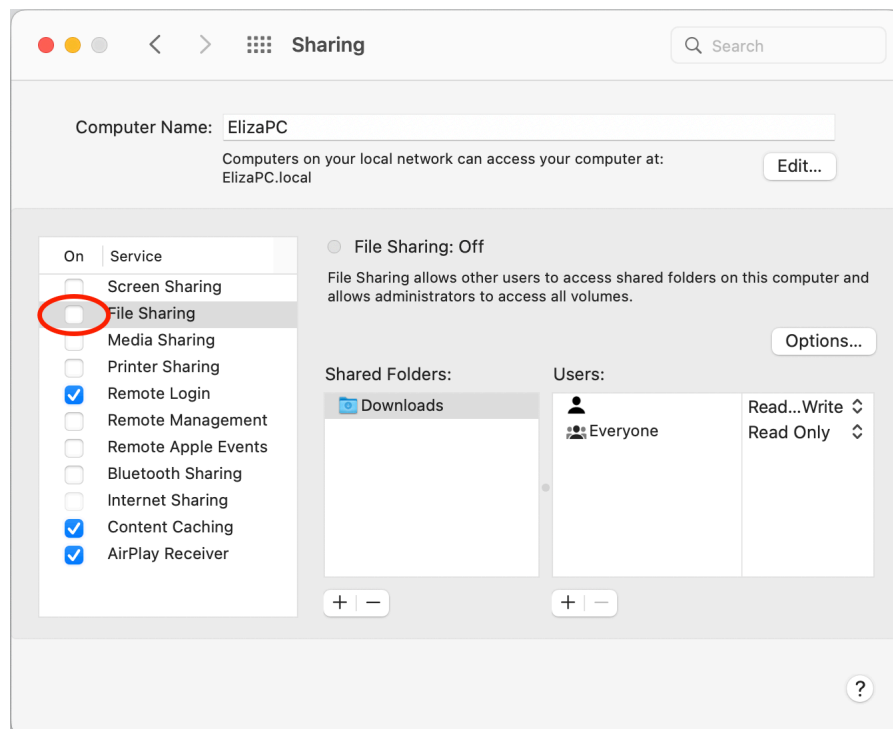

4. Configure these settings to your application's needs. This configuration is just for pictorial example. Other devices on the network can still resolve this machine's name, if File Sharing was ever enabled.

### 2.3.4 Features and Functions

- Visualize the USB tree in a browser in real-time
- Create device layout recipes via snapshots
- Compare the current device layout to a loaded snapshot
- View device status including:
  - Device connection speed
  - Custom devices names
  - Troubleshooting information
- Control Acroname device functions including:
  - Downstream port toggle, simulating a device unplug / plug cycle
  - Upstream port swap
  - Upstream port selection mode
  - Save settings to non-volatile storage
  - Remote Acroname device reset

## 2.4 Q-Sys



The Q-Sys OS and Designer Software serves as the software-based singular foundation that drives and manages a multitude of Q-Sys Products within the platform, including native software, services and hardware. Acroname's products bring unique control and telemetry of USB devices and peripherals.

The Q-Sys Designer Software's modern IT architecture and a set of development tools (called "Q-Sys Open") enable an entire Ecosystem of third-party integrations developed by approved/endorsed Q-Sys Partners as well as a worldwide community of Q-Sys programmers and developers. Acroname is part of the approved Partners.

---

## 2.4.1 Installation

Download the appropriate [Q-Sys Design Software](#)<sup>99</sup> for your operating system. See Q-Sys support documentation for installation instructions.

### Requirements

- Q-Sys Designer Software Version 9.9 and higher is recommended when using a virtual core instances.

Q-Sys requires a supported Acroname USBHub3c with the [Serial Control add-on software feature](#)<sup>100</sup>:

- [USBHub3c](#)<sup>101</sup> – USB-C Hub with Power Delivery Analyzer + Tester

### Install Plugin

The Q-Sys Asset Manger is the recommended method for managing plugins. To install an Acroname plugin:

1. Click the plugin icon to open the Asset Manager
2. In the Browse tab, search for `Acroname` and select the plugin that correlating the Acroname hardware.
3. Review the Description information for any additional notes or requirements.
4. Click `Install`. When the installation is complete, the Acroname product plugin will appear in the Plugins categoray within the Schematic Elements section of Q-Sys Designer.

## 2.4.2 Quick Start Guide

To get started with Q-Sys, follow these steps from the Q-Sys Designer Software:

1. Install Q-Sys Plugin following the [Installation Guide](#).
2. Connect an Acroname product with a valid Acroname USBHub3c with the *Serial Control add-on software feature* <<https://acroname.com/store/t99-serial>> installed. For this guide, a [USBHub3c](#).
3. Add an Acroname USBHub3c plugin to the design canvas to create rich USB based applications.

---


<sup>99</sup> <https://www.qsys.com/resources/software-and-firmware/q-sys-designer-software/>

<sup>100</sup> <https://acroname.com/store/t99-serial>

<sup>101</sup> <https://acroname.com/store/programmable-industrial-power-delivery-hub-s99-usbhub-3c-pro>


## Connecting through Serial Port

The following example shows highlights that a serial port on the Core can be connected to a USBHub3c serial port.

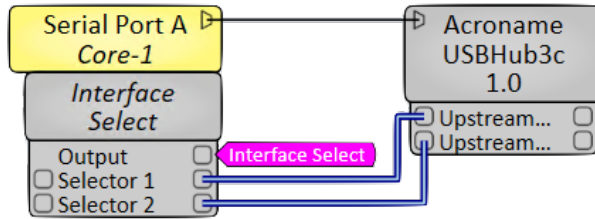

## Change Upstream Port

The following example shows how an output selector through the Q-Sys user interface can change the upstream port on the USBHub3c. Switching the upstream port allows USB devices to communicate with two different host machines, which is often found in BYOD applications and environments.

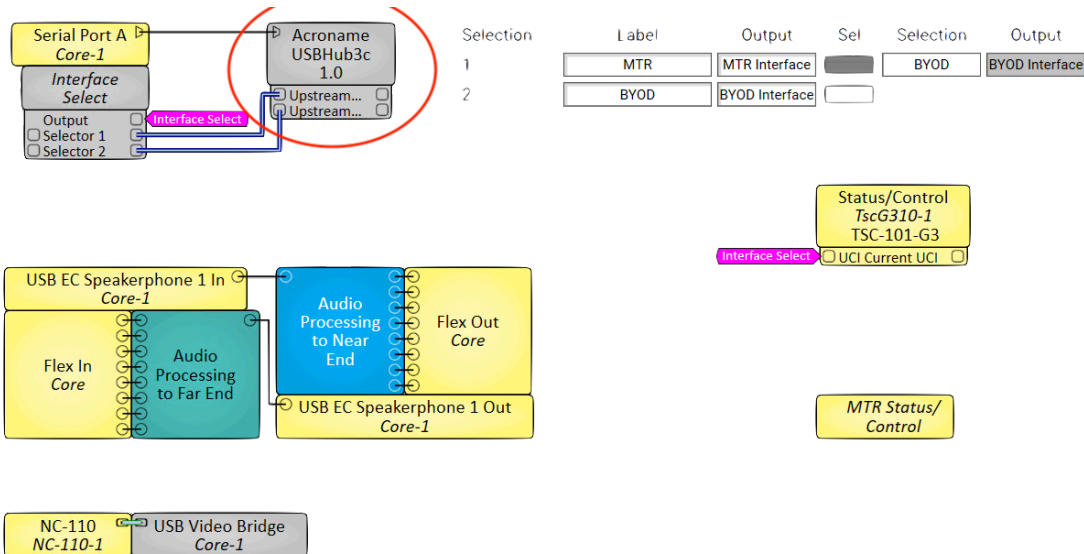


## 2.4.3 Usage

### 2.4.4 Features and Functions

- Control Acroname device functions including:
  - Downstream port toggle, simulating a device unplug / plug cycle
  - Downstream port connection status
  - Upstream port selection
  - Upstream port connection status
  - Firmware and model information

## 2.5 DFU Automator

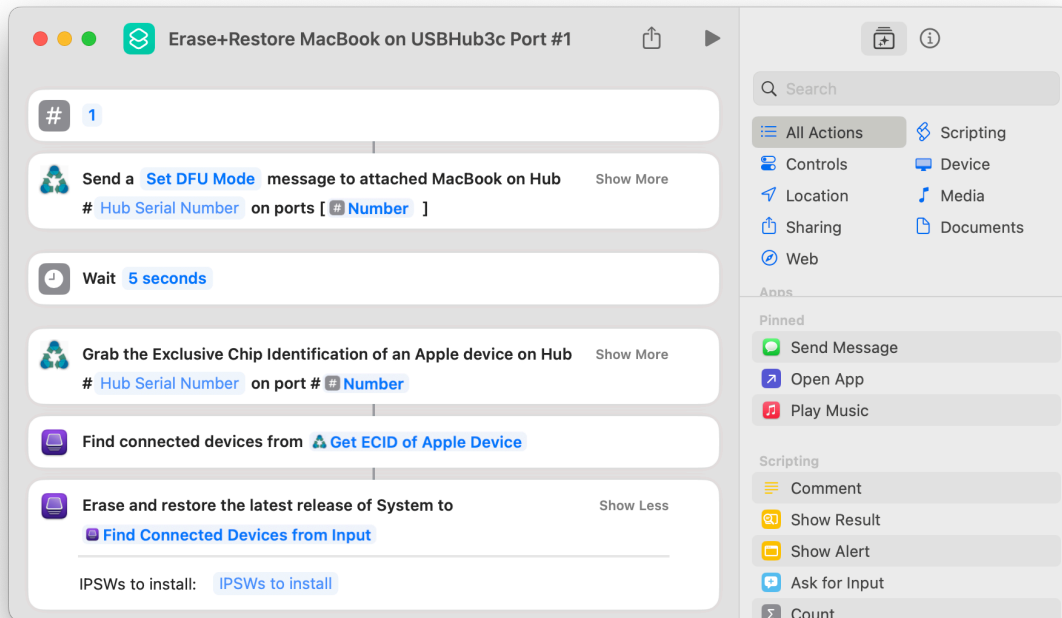

Apple Devices can be put into Device Firmware Update (DFU) mode to allow for firmware updating and restoration, as well as the deployment of custom OS images. This is achieved by sending Vendor-Specific Messages (VDMs) to a DFU-capable port on the target device. VDMs are point-to-point and are not passed on by a USB Hub; however, USBHub3c can generate and send arbitrary VDMs directly to connected devices. This lets Mac Sysadmins re-image multiple Macs at once, greatly speeding up deployment.

DFU Automator is a small application that enables Apple Shortcuts to control USBHub3c's DFU functions. DFU Automator operates as a background tool, responding to commands issued by Apple Shortcuts. When combined with Apple Configurator actions, shortcuts can fully automate Mac deployment and provisioning.

Included with DFU Automator is an example shortcut showing how to DFU restore a Macbook on port 1 of USBHub3c.

### 2.5.1 DFU Automator Features

- Send DFU Mode or Reboot VDMs to a MacBook
- Send arbitrary VDMs (Hexstring input)
- Enable or disable hub ports
- Retrieve the ECID of an attached Apple device


## Installation and Setup

### Install Apple Configurator

- Open the **App Store** on your Mac
- Search for **Apple Configurator**
- Click **Install**

### Install DFU Automator


1. *Download DFU Automator* from the official source
2. Open the downloaded *.dmg* file

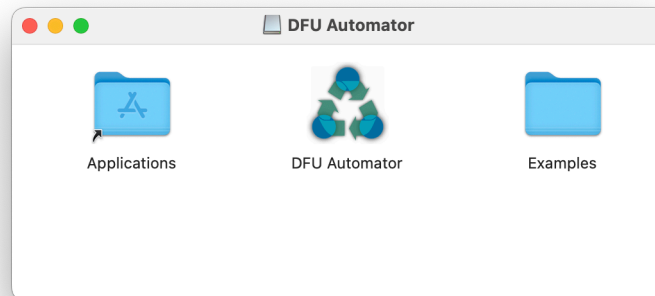


3. Drag **DFU Automator** into the **Applications** folder
4. Open DFU Automator from the **Applications** folder once to allow Shortcuts to recognize it

### Adding the Example Shortcut


1. In the **Examples Folder**, open the shortcut titled **Erase+Restore MacBook on USBHub3c Port #1**

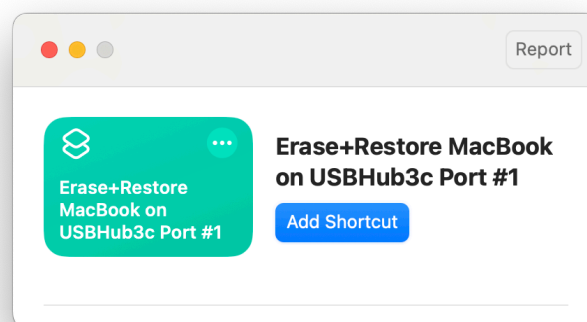


2. Click **Add Shortcut**
3. The shortcut will now appear in the **Shortcuts app** under **All Shortcuts**

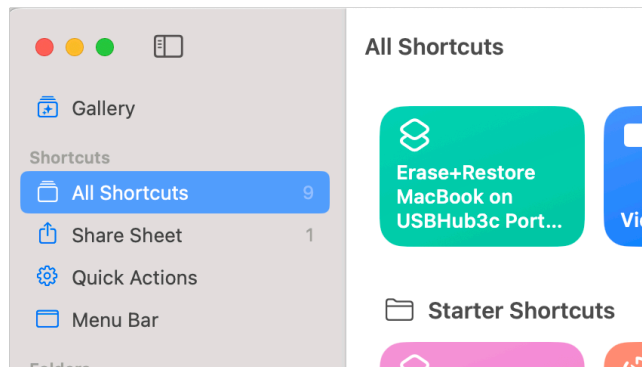

4. Click the shortcut's icon (not the play button that appears on hover) to view the workflow:

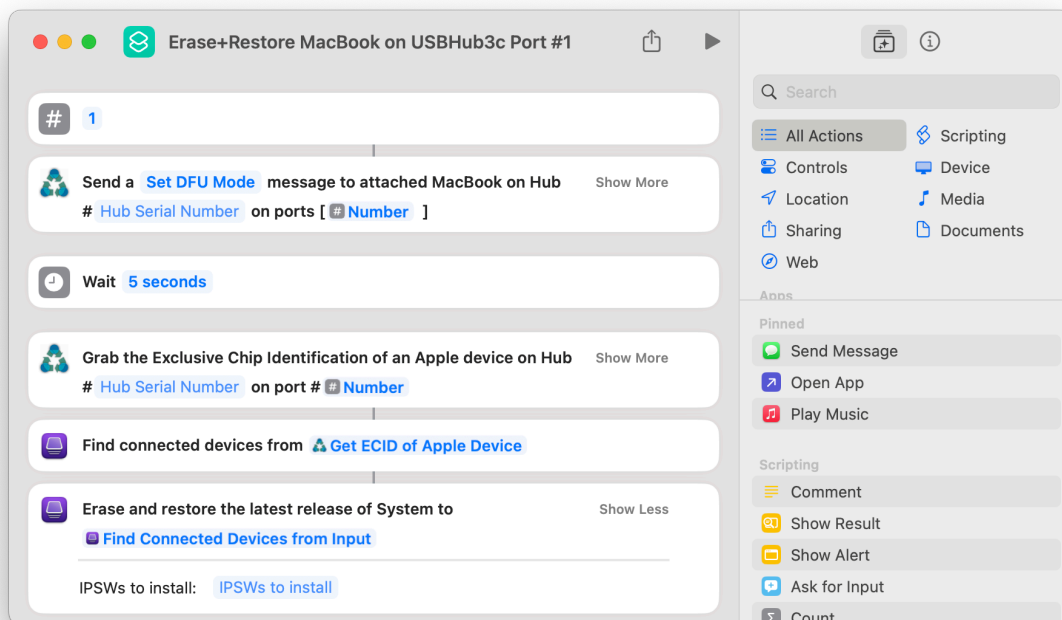


## Shortcut Example

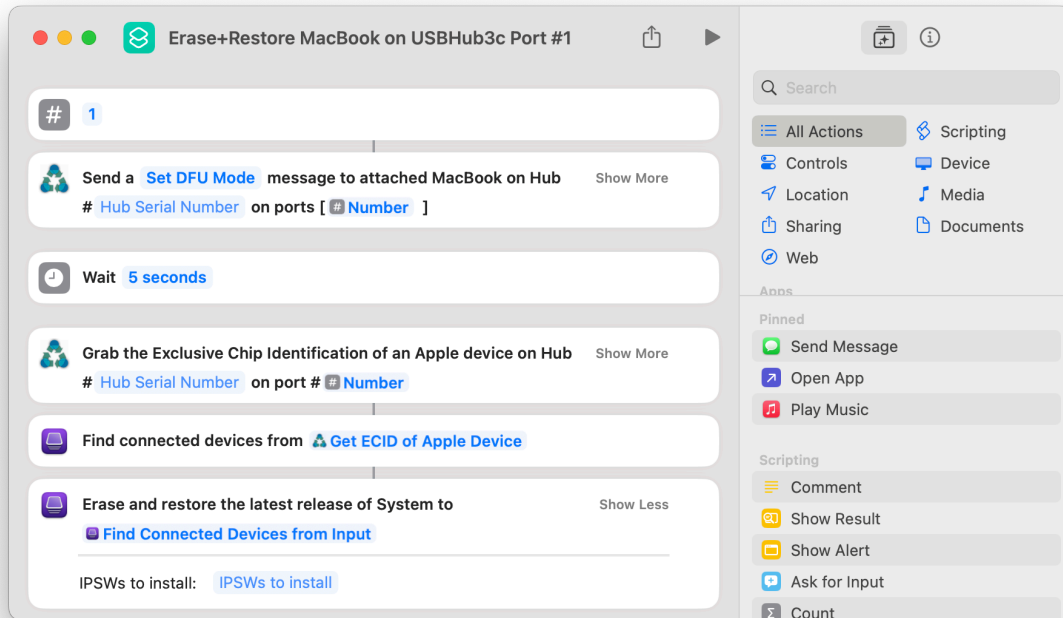


## Shortcut Workflow Step-by-Step

To understand each step of the shortcut, **Control-click** an action and select **Show Info**.

## Key Actions




- Sets the USBHub3c port number for the MacBook to be updated (set to 1 by default)



- Sends a *Set DFU Mode* message on hub # *Hub Serial Number* on ports [# *Number*]
  - Tells DFU Automator to have USBHub3c send a Vendor-Defined-Message to put a MacBook on port [# *Number*] into DFU mode
  - If only one hub connected, *Hub Serial Number* can be blank
- Waits 5 seconds to give the MacBook time to enter DFU Mode



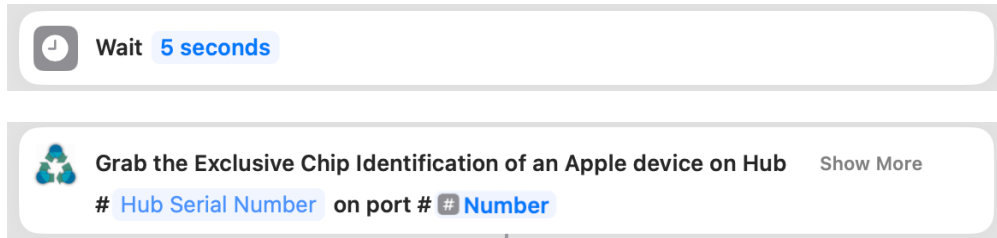

- Tells DFU Automator to read the ECID of the attached MacBook on the specified port



- Tells Apple Configurator to convert the ECID to a *Connected Device Entity* for use in other Apple Configurator shortcut actions
- Erases and restores the connected devices

**Warning:** All data and settings will be removed!

- *IPSWs to install:* Select additional IPSW files to install on connected devices. Configurator will choose the correct IPSW for the device being updated

## Example Usage


To use the example shortcut to DFU-restore a MacBook:

1. Locate the DFU-enabled USB-C port on the target Mac:  
**Apple Silicon MacBooks:** Left side, towards the hinge  
**Intel MacBooks with T2 chip:** Left side, away from the hinge  
**Desktops:** Refer to [Apple Support](https://support.apple.com/en-us/108900)<sup>102</sup> for more details
2. Connect the host Mac to **USBHub3c Port 0**
3. Connect the target MacBook's DFU-enabled port to **USBHub3c Port 1**

**Warning:** Target MacBook will be erased!

4. In **Shortcuts**, click the **play button** in the upper right of the shortcut icon or the expanded view of the shortcut
5. Click "Allow" to let the shortcut run actions
  - The target MacBook will chime and boot into DFU mode with a black screen
6. Approve any other privacy popups that appear:
  - Allow configurator to find devices
  - Allow the shortcut share the device ECID with Apple Configurator

<sup>102</sup> <https://support.apple.com/en-us/108900>

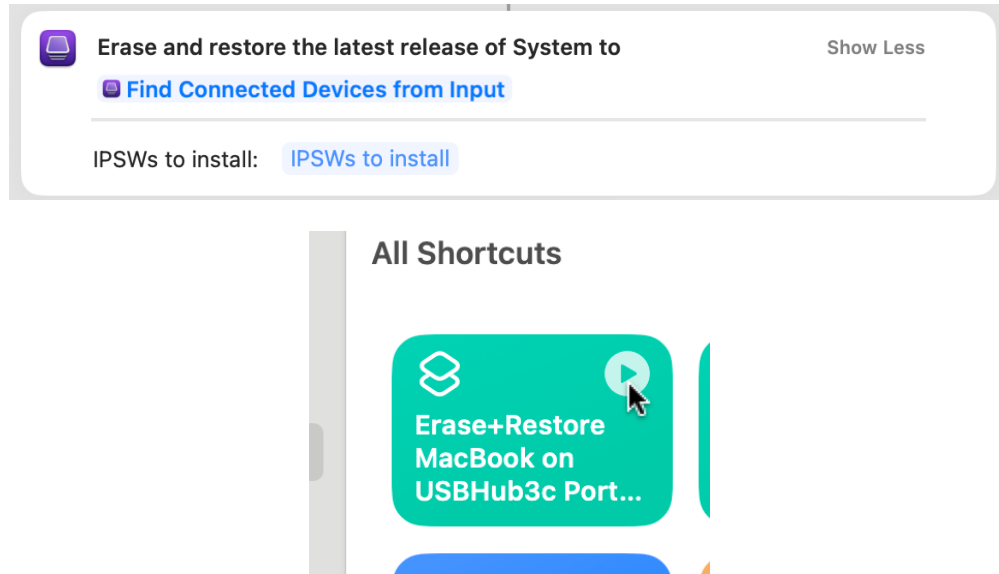

8. Apple Configurator will erase and restore the MacBook on port 1

### Restoring Multiple Devices Simultaneously

Shortcuts and Configurator actions can be run in parallel, allowing multiple MacBooks to be restored asynchronously. The restore shortcut can be copied and the port number can be set for each port. To use, connect a MacBook to an available USBHub3c port and manually trigger the corresponding restore shortcut matching the port number.

More information about using Apple Configurator with Shortcuts can be found [here](https://support.apple.com/en-au/guide/apple-configurator-mac/acm12a6f7b56/mac)<sup>103</sup>.



lets users view detailed information and control settings of Acroname devices.

*HubTool*  
is  
a  
util-  
ity  
that



vice that exposes an HTTP REST interface to connected BrainStem Devices.

*BrainD*  
is  
a  
desk-  
top  
ser-



*Con-  
trol-  
Room*

<sup>103</sup> <https://support.apple.com/en-au/guide/apple-configurator-mac/acm12a6f7b56/mac>

browser application built on BrainD, designed for audio/video applications and USB device diagnostics.



for BrainStem Devices to be used in the Q-Sys Designer Software for audio/video applications.



helper application that enables Apple Shortcuts to control USBHub3c's Device Firmware Update (DFU) mode operations for Apple devices.

is  
a  
web

Q-  
Sys  
plug-  
in  
in-  
ter-  
face

DFU  
Au-  
toma-  
tor  
is  
a



## API Reference

This API reference is organized by programming language. You will find product specific documentation in the [products](#) section.

## 3.1 BrainStem Entities

### 3.1.1 Analog Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read an analog voltage (ADC) and convert this into a discrete digitized value or output a voltage value based on a desired discrete value (DAC). Analog voltage capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of analog entities and details for their capacities will be described in that module's datasheet.

#### Value (Get/Set)

```
analog [ index ] . getValue <= (unsigned short) value
analog [ index ] . setValue => (unsigned short) value
```

#### Getting Values

A BrainStem's A2D reading will always return a 16 bit value. If the module hardware does not have full 16 bit wide analog to digital conversion capabilities, the measurement will get propagated up to 16 bits wide.

For example, if a 12-bit A2D engine exists in the target module's hardware, the reading will get promoted in the firmware layer by shifting up 4 bits to fill out the 16 bit value ( $0x0FFF =: 0x0FFF \ll 4 = 0xFFF0$ ) in the module's firmware. This approach allows more portable API code to be generated independent of the target hardware.

#### Setting Values

The reading resolution will return a 16 bit value. If the module hardware does not have full 16 bit wide analog to digital conversion capabilities, the value sent by the API will get propagated up to 16 bits wide.

For example, if a 10-bit DAC engine exists in the target module's hardware, the reading will get down shifted 5 bits to derive the 10 bit value ( $0x8000 =: 0x8000 \gg 5 = 0x0400$ ) in the module's firmware. This approach allows more portable API code to be generated independent of the target hardware.

#### Configuration (Get/Set)

```
analog [ index ] . getConfiguration <= (unsigned char) configuration
analog [ index ] . setConfiguration => (unsigned char) configuration
```

#### Getting Configuration

Some analog entities may be single purpose functionality or can be configured for multiple different behaviors depending on the hardware. Configuration information includes whether the entities is an input only, output only, or can be configured as either and input or output.

#### Setting Configuration

Analog entities that are capable of different operating configurations can be explicitly set to operate in a desired configuration mode when possible. Defaults for most analog entities are typically as inputs, but will vary by module hardware.

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success.

stem.analog[0].getValue(value); // gets the value of A2D channel 0 into variable value
stem.analog[3].setValue(1234); // sets the DAC on channel 3 to a value of 1234
stem.analog[0].setConfiguration(analogConfigurationInput);
```


### Python

```
result = stem.analog[2].getValue() # gets the value of A2D channel 2 into variable_
↪result.
print result.value
err = stem.analog[3].setValue(1234) # sets the DAC on channel 3 to a value of 1234
print err
```

## 3.1.2 App Entity

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules have a unique mechanism and communication method to send host-to-stem or stem-to-stem messages that can initiate a Reflex origin to trigger if one is defined on the target module. BrainStem modules may have up to 4 different (0-3) entity app instances.

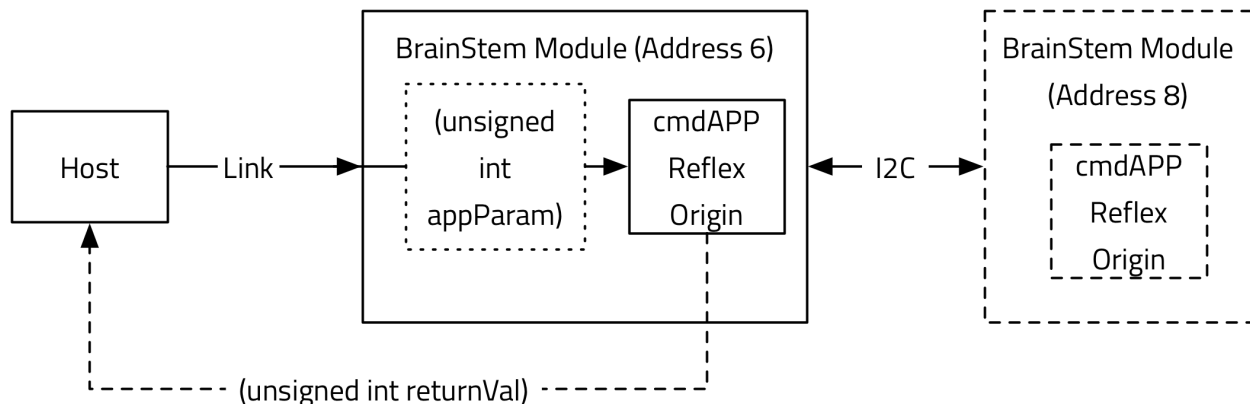

Please be aware that a Reflex file must be enabled on the target module for a call to an App entity to be successful.

## Execute (non-blocking)

```
app[0] . execute => (unsigned int) appParam
```

This entities will pass the data specified in appParam to be passed into the Reflex handle. The 4 bytes are up to the implementor to mean what ever one wants them to be.

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on  
// success.  
  
stem.app[0].execute(3131948783); // triggers the App reflex handle and passes 4 bytes.  
↳to it
```

### Python

```
Implementation coming in future release.
```

## 3.1.3 Clock Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have a real time clock. This capability will be listed in the product datasheet. The clock entity allows the user to set and read the real time clock.

### Year (Get/Set)

```
clock . getYear <= (unsigned short) year  
clock . setyear => (unsigned short) year
```

Gets or sets the year value of the real time clock.

### Month (Get/Set)

```
clock . getMonth <= (unsigned char) month  
clock . setMonth => (unsigned char) month
```

Gets or sets the month value of the real time clock. Valid values are 1-12.



### Day (Get/Set)

```
clock . getDay <= (unsigned char) day
clock . setDay => (unsigned char) day
```

Gets or sets the day value of the real time clock. Valid values are 1-31 depending on the month setting.

### Hour (Get/Set)

```
clock . getHour <= (unsigned char) hour
clock . setHour => (unsigned char) hour
```

Gets or sets the hour value of the real time clock. Valid values are 0-23.

### Minute (Get/Set)

```
clock . getMinute <= (unsigned char) minute
clock . setMinute => (unsigned char) minute
```

Gets or sets the minute value of the real time clock. Valid values are 0-59.

### Second (Get/Set)

```
clock . getSecond <= (unsigned char) second
clock . setSecond => (unsigned char) second
```

Gets or sets the second value of the real time clock. Valid values are 0-59.

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success. Get requests fill the variable with the current clock value.

stem.clock.getYear(year);
stem.clock.setYear(year);
stem.clock.getMonth(month);
stem.clock.setMonth(month);
stem.clock.getDay(day);
stem.clock.setDay(day);
stem.clock.getHour(hour);
stem.clock.setHour(hour);
stem.clock.getMinute(minute);
stem.clock.setMinute(minute);
stem.clock.getSecond(second);
stem.clock.setSecond(second);
```

## Python

```
year = stem.clock.getYear();
stem.clock.setYear(year);
month = stem.clock.getMonth();
stem.clock.setMonth(month);
day = stem.clock.getDay();
stem.clock.setDay(day);
hour = stem.clock.getHour();
stem.clock.setHour(hour);
minute = stem.clock.getMinute();
stem.clock.setMinute(minute);
second = stem.clock.getSecond();
stem.clock.setSecond(second);
```

### 3.1.4 Digital Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

BrainStem modules may have the ability to read, write or manipulate a digital pin. Digital I/O capabilities will be dictated by the module hardware being used. Module specifics that include the quantity of digital entities and details for their capacities will be described in that module's datasheet.

#### State (Get/Set)

```
digital [ index ] . getState <= (unsigned char) state
digital [ index ] . setState => (unsigned char) state
```

Gets or Sets the digital I/O Value.

For gets the digital input state will be reported in a boolean fashion. Voltage threshold tolerance details for the target module will be described in the datasheet.

For sets the digital output state will be asserted logic high or logic low. Voltage threshold details for the target module will be described in the datasheet.

#### Configuration (Get/Set)

```
digital [ index ] . getConfiguration <= (unsigned char) configuration
digital [ index ] . setConfiguration => (unsigned char) configuration
```

Gets or Sets the digital pin configuration.

Some digital entities may be single purpose functionality or can be configured for multiple behaviors depending on the hardware.

Digital entities that are capable of different operating configurations can be explicitly set to operate in a desired configuration mode when possible. Defaults for most digital entities are typically as inputs, but will vary by module hardware.

Available configurations for the digital entities:

Function	Typedef Constant (C++)	Typedef Constant (Python)	Val
Digital Input	digitalConfigurationInput	CONFIGURATION_INPUT	0
Digital Output	digitalConfigurationOutput	CONFIGURATION_OUTPUT	1
RCServo Input	digitalConfigurationRCServoInput	CONFIGURATION_RCSERVO_INPUT	2
RCServo Output	digitalConfigurationRCServoOutput	CONFIGURATION_RCSERVO_OUTPUT	3
High Z State	digitalConfigurationHiZ	CONFIGURATION_HIGHZ	4
Input Pull Up	digitalConfigurationInputPullUp	CONFIGURATION_INPUT_PULL_UP	0
Input No Pull	digitalConfigurationInputNoPull	CONFIGURATION_INPUT_NO_PULL	4
Input Pull Down	digitalConfigurationInputPullDown	CONFIGURATION_INPUT_PULL_DOWN	5
Signal Output	digitalConfigurationSignalOutput	CONFIGURATION_SIGNAL_OUTPUT	6
Signal Input	digitalConfigurationSignalInput	CONFIGURATION_SIGNAL_INPUT	7

**Note:** When using the High Z State configuration the pin and pull-ups are disconnected internally leaving the external pin floating. A get or set of the state will return in an error.

See the [RCServo Entity](#) for more information on its configuration.

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success.

stem.digital[0].getState(&state); // gets the current digital state for channel 0
stem.digital[3].setState(1); // sets the digital output state to logic high on
    ↳channel 3
stem.digital[0].setConfiguration(digitalConfigurationInput);
```

## Python

```
state = stem.digital[3].getState() # gets the value of digital channel 3 into
↳variable state
stem.digital[3].setState(1) # sets the digital on channel 3 to a logic high
```

### 3.1.5 Ethernet Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Ethernet Entity provides control over network configuration and monitoring for devices with Ethernet connectivity. This includes IP address management, network configuration modes, and interface settings.

#### Ethernet Enable/Disable (Get/Set)

```
ethernet . getEnabled <= (unsigned char) enabled
ethernet . setEnabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the Ethernet interface. When enabled, the Ethernet interface is active and can be used for network communication.

#### Network Configuration (Get/Set)

```
ethernet . getNetworkConfiguration <= (unsigned char) configuration
ethernet . setNetworkConfiguration => (unsigned char) configuration
```

Returns or sets the network configuration mode for the Ethernet interface. This controls whether the interface uses DHCP or static IP configuration.

Table 1: Network Configuration Options

Value	Name	Description
0	None	No network configuration
1	Static	Static IP configuration
2	DHCP	DHCP automatic configuration

#### Static IPv4 Address (Get/Set)

```
ethernet . getStaticIPv4Address <= (unsigned char[]) address
ethernet . setStaticIPv4Address => (unsigned char[]) address
```

Returns or sets the static IPv4 address for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the IP address (e.g., [192, 168, 1, 100] for “192.168.1.100”).

### Static IPv4 Netmask (Get/Set)

```
ethernet . getStaticIPv4Netmask <= (unsigned char[]) netmask  
ethernet . setStaticIPv4Netmask => (unsigned char[]) netmask
```

Returns or sets the static IPv4 netmask for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the netmask (e.g., [255, 255, 255, 0] for "255.255.255.0").

### Static IPv4 Gateway (Get/Set)

```
ethernet . getStaticIPv4Gateway <= (unsigned char[]) gateway  
ethernet . setStaticIPv4Gateway => (unsigned char[]) gateway
```

Returns or sets the static IPv4 gateway address for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the gateway address (e.g., [192, 168, 1, 1] for "192.168.1.1").

### IPv4 Address (Get)

```
ethernet . getIPv4Address <= (unsigned char[]) address
```

Returns the current IPv4 address of the Ethernet interface as a 4-byte array. This reflects the actual address being used, whether obtained via DHCP or set statically. Each byte represents one octet of the IP address.

### IPv4 Netmask (Get)

```
ethernet . getIPv4Netmask <= (unsigned char[]) netmask
```

Returns the current IPv4 netmask of the Ethernet interface as a 4-byte array. This reflects the actual netmask being used, whether obtained via DHCP or set statically. Each byte represents one octet of the netmask.

### IPv4 Gateway (Get)

```
ethernet . getIPv4Gateway <= (unsigned char[]) gateway
```

Returns the current IPv4 gateway address of the Ethernet interface as a 4-byte array. This reflects the actual gateway being used, whether obtained via DHCP or set statically. Each byte represents one octet of the gateway address.

### Static IPv4 DNS Address (Get/Set)

```

ethernet . getStaticIPv4DNSAddress <= (unsigned char[]) dns
ethernet . setStaticIPv4DNSAddress => (unsigned char[]) dns

```

Returns or sets the static IPv4 DNS server address for the Ethernet interface as a 4-byte array. This is used when the network configuration is set to static mode. Each byte represents one octet of the DNS address.

### IPv4 DNS Address (Get)

```

ethernet . getIPv4DNSAddress <= (unsigned char[]) dns

```

Returns the current IPv4 DNS server address of the Ethernet interface as a 4-byte array. This reflects the actual DNS server being used, whether obtained via DHCP or set statically. Each byte represents one octet of the DNS address.

### Hostname (Get/Set)

```

ethernet . getHostname <= (unsigned char[]) hostname
ethernet . setHostname => (unsigned char[]) hostname

```

Returns or sets the hostname for the Ethernet interface. The hostname is used for network identification and can be up to 63 characters long.

### MAC Address (Get)

```

ethernet . getMACAddress <= (unsigned char[]) mac

```

Returns the MAC address of the Ethernet interface. This is a unique hardware identifier for the network interface.

### Interface Port (Get/Set)

```

ethernet . getInterfacePort (unsigned char) service <= (unsigned short) port
ethernet . setInterfacePort => (unsigned char) service, (unsigned short) port

```

Returns or sets the interface port for specific services on the Ethernet interface. The service parameter specifies which service to configure, and the port parameter sets the port number for that service.

Table 2: Interface Port Services

Name	Value	Description
RestServer_HTTP	0	HTTP REST API server
RestServer_HTTPS	1	HTTPS REST API server
BrainStem_TCP	2	BrainStem TCP communication
BrainStem_DiscoveryRequest	3	BrainStem discovery request port
BrainStem_DiscoveryReply	4	BrainStem discovery reply port

## Examples

### C++

```
// Enable Ethernet interface
ethernet.setEnabled(1);

// Set static IP configuration
ethernet.setNetworkConfiguration(1); // Static mode
unsigned char ip[4] = {192, 168, 1, 100};
unsigned char netmask[4] = {255, 255, 255, 0};
unsigned char gateway[4] = {192, 168, 1, 1};
ethernet.setStaticIPv4Address(ip, 4);
ethernet.setStaticIPv4Netmask(netmask, 4);
ethernet.setStaticIPv4Gateway(gateway, 4);

// Get current IP address
unsigned char current_ip[4];
ethernet.getIPv4Address(current_ip, 4);

// Set hostname
ethernet.setHostname("brainstem-device");
```

### Python

```
# Enable Ethernet interface
stem.ethernet.setEnabled(1)

# Set static IP configuration
stem.ethernet.setNetworkConfiguration(1) # Static mode
ip = [192, 168, 1, 100]
netmask = [255, 255, 255, 0]
gateway = [192, 168, 1, 1]
stem.ethernet.setStaticIPv4Address(ip)
stem.ethernet.setStaticIPv4Netmask(netmask)
stem.ethernet.setStaticIPv4Gateway(gateway)

# Get current IP address
current_ip = stem.ethernet.getIPv4Address()
print(current_ip.value)

# Set hostname
stem.ethernet.setHostname("brainstem-device")
```

## 3.1.6 Equalizer Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Equalizer entity provides a concise interface for controlling equalizer and filter settings for receivers (inputs) and transmitters (outputs). Products supporting Equalizer are capable of applying frequency dependent gain to their signals. This can allow for compensation for signal loss and degradation due to cable quality, cable length and the number of connections. It can also act as a filter implemented in hardware or firmware. Products may implement one or more equalizers; each can be configured using the Equalizer index. Allowed index values are specified in the product data sheet.

### Set/Get Transmitter Configuration

```
equalizer [ index ] . getTransmitterConfig <= (unsigned char) config  
equalizer [ index ] . setTransmitterConfig => (unsigned char) config
```

The transmitter is the outgoing portion of the equalizer entity. It is responsible for generating the signal output. Generally, transmitters may have configurations which apply frequency dependent filters, broadband gain, and DC-offsets.

### Set/Get Receiver Configuration

```
equalizer [ index ] . getReceiverConfig (unsigned char) channel <= (unsigned char)   
↪config  
equalizer [ index ] . setReceiverConfig (unsigned char) channel => (unsigned char)   
↪config
```

The receiver is the incoming portion of the equalizer entity. The receiver equalizer may have configurations which apply frequency dependent filters or broadband gain. Products with more than one receiver may allow individual configuration of the receivers via the channel parameter. Allowed channel and config parameter values are specified in the product data sheet.

### Code Examples

#### C++

```
//Set Transmitter and Receiver configurations  
err = stem.equalizer[0].setTransmitterConfig(transmitterConfig);  
err = stem.equalizer[1].setTransmitterConfig(transmitterConfig);  
err = stem.equalizer[0].setReceiverConfig(eqReceiverChannel, receiverConfig);  
err = stem.equalizer[1].setReceiverConfig(eqReceiverChannel, receiverConfig);  
  
//Get Transmitter and Receiver configurations  
err = stem.equalizer[0].getTransmitterConfig(&transmitterConfig);  
err = stem.equalizer[1].getTransmitterConfig(&transmitterConfig);  
err = stem.equalizer[0].getReceiverConfig(eqReceiverChannel, &receiverConfig);  
err = stem.equalizer[1].getReceiverConfig(eqReceiverChannel, &receiverConfig);
```

#### Python

```
#Set Transmitter and Receiver configurations  
err = stem.equalizer[0].setTransmitterConfig(transmitterConfig);  
err = stem.equalizer[1].setTransmitterConfig(transmitterConfig);  
err = stem.equalizer[0].setReceiverConfig(eqReceiverChannel, receiverConfig);  
err = stem.equalizer[1].setReceiverConfig(eqReceiverChannel, receiverConfig);  
  
#Get Transmitter and Receiver configurations  
result = stem.equalizer[0].getTransmitterConfig();  
result = stem.equalizer[1].getTransmitterConfig();  
result = stem.equalizer[0].getReceiverConfig(eqReceiverChannel);  
result = stem.equalizer[1].getReceiverConfig(eqReceiverChannel);
```



### 3.1.7 HDBaseT Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The **HDBaseT** entity provides link telemetry, remote-end USB topology discovery, and role control for the HDBaseT-USB3 link.

---

#### Identification

`stem.system.getSerialNumber()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Fills a caller-provided buffer with up to 6 bytes and reports the actual length unloaded.

`stem.hdbaset.getFirmwareVersion()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Returns a packed 32-bit value (Major: Bits 24-31; Minor: Bits 16-23; Patch: Bits 8-15; Build: Bits 0-7)

#### Link Status and Health

`stem.hdbaset.getState()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Returns a packed integer describing current link state.

`stem.hdbaset.getCableLength()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Perceived cable length in  $\mu\text{m}$ .

`stem.hdbaset.getMSEA()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

`stem.hdbaset.getMSEB()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Mean Squared Error for channel A or B in  $\mu\text{dB}$ .

`stem.hdbaset.getRetransmissionRate()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Number of successful messages between retransmission; 0 = no errors, otherwise higher is better.

`stem.hdbaset.getLinkUtilization()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Link utilization in milli-percent (1000 = saturation).

`stem.hdbaset.getEncodingState()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

Encoding state (e.g. PAM 8).

---

#### Remote USB Topology (Device Trees)

`stem.hdbaset.getUSB2DeviceTree()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

`stem.hdbaset.getUSB3DeviceTree()` [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[LabVIEW\]](#)

These calls return bytes describing the USB2/USB3 device trees at the HDBaseT endpoint.

---

## Link Role Control

```
stem.hdbaset.getLinkRole() [cpp] [python] [.NET] [LabVIEW]
stem.hdbaset.setLinkRole() [cpp] [python] [.NET] [LabVIEW]
Role values are product/firmware specific (e.g., Auto Detect, Leader, Follower).
```

When in *Auto Detect*, the active role can be read using `getState()`.

## 3.1.8 I<sup>2</sup>C Entity

**API Documentation:** [cpp] [python] [.NET] [CCA] [REST]

BrainStem modules may have the ability to read, write data on up to two I<sup>2</sup>C busses

### Read

```
i2c [ index ] . read => (unsigned char) address, (unsigned char) length <= (unsigned_
↳char*) data
```

Reads up to 26 bytes from the I<sup>2</sup>C bus given by the index. The parameters are the I<sup>2</sup>C address of the device on the bus, and the number of bytes to read. The result is the data that was read or an error.

### Write

```
i2c [ index ] . write => (unsigned char) address, (unsigned char) length, (unsigned_
↳char*) data <= (unsigned char) result
```

Writes up to 26 bytes to the I<sup>2</sup>C bus given by the index. The parameters are the I<sup>2</sup>C address of the device on the bus, the number of bytes to write, and the data to write. The result is the result error condition or none.

### Set Pullup

```
i2c [ index ] . setPullup => (unsigned char) bool
```

Sets software controlled pullup state on modules which have software controllable pullups. This setting is saved when a call to `system.save` is made so that Pullup settings on bus 0 can persist.

### Speed (Get/Set)

```
i2c [ index ] . getSpeed <= (unsigned char) speed
i2c [ index ] . setSpeed => (unsigned char) speed
```

Returns or sets the I2C bus communication speed. The speed setting controls the clock frequency for I2C transactions on the specified bus.

Table 3: I2C Speed Options

Value	Name	Description
0	Default	Default I2C speed (typically 100 kHz)
1	100Khz	Standard I2C speed (100 kHz)
2	400Khz	Fast I2C speed (400 kHz)
3	1000Khz	Fast Plus I2C speed (1 MHz)

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success.
char buff[2];
stem.i2c[0].read(0x42, 0x02, buff); // reads two from device with address 0x42.
char wrbuff[] = {0xBE, 0xEF};
stem.i2c[0].write(0x42, 0x02, wrbuff); // writes 0xBEEF to the device with address_
    ↪ 0x42
stem.i2c[0].setPullup(true); //enables pullup on bus 0
stem.i2c[0].setSpeed(1); // sets I2C speed to 100 kHz (i2cSpeed_100Khz)
stem.i2c[0].setSpeed(2); // sets I2C speed to 400 kHz (i2cSpeed_400Khz)
stem.i2c[0].setSpeed(3); // sets I2C speed to 1 MHz (i2cSpeed_1000Khz)
unsigned char speed;
stem.i2c[0].getSpeed(&speed); // gets current I2C speed
```

### Python

The length parameter for I<sup>2</sup>C write is not used in python.

```
result = stem.i2c[0].read(0x42, 0x02) # reads two bytes from the i2c bus. The value_
    ↪ is given in result.value
print result.value
err = stem.i2c[0].write(0x42, b'\xbe\xef') # writes b'\xbe\xef' to the i2c bus.
print err
err = stem.i2c[0].setPullup(True)
print err
err = stem.i2c[0].setSpeed(1) # sets I2C speed to 100 kHz (i2cSpeed_100Khz)
print err
speed = stem.i2c[0].getSpeed() # gets current I2C speed
print speed.value
```

### 3.1.9 Mux Entity

#### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

A MUX is a multiplexer that takes one or more similar inputs (bus, connection, or signal) and allows switching to one or more outputs. An analogy would be the switchboard of a telephone operator. Calls (inputs) come in and by re-connecting the input to an output, the operator (multiplexer) can direct that input to one or more outputs.

One possible output is to not connect the input to anything which essentially disables that input's connection to anything. Not every MUX has multiple inputs.

Some mux entities can simply be a single input that can be enabled (connected to a single output) or disabled (not connected to anything).

#### Channel (Set/Get)

```
mux [ index ] . setChannel => (unsigned char) channel
mux [ index ] . getChannel <= (unsigned char) channel
```

Gets/Sets the currently selected channel

#### Enable/Disable (Set/Get)

```
mux [ index ] . setEnable => (unsigned char) enable
mux [ index ] . getEnable <= (unsigned char) enable
```

Enables/Disables the mux.

#### Get Channel Voltage (Get)

```
mux [ index ] . getChannelVoltage <= ((unsigned char) channel, (unsigned char) voltage)
```

Returns the voltage of the supplied channel.

### Code Examples

#### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success. Get calls will fill the variable with the returned value.

err = stem.mux[0].getChannel(&channel);
err = stem.mux[0].setChannel(1);
err = stem.mux[0].setEnable(1);
err = stem.mux[0].setEnable(0);
err = stem.mux[0].getChannel(1, &voltage);
err = stem.mux[0].setChannel(3);
```

## Python

```
result = stem.mux[0].getChannel(&channel);
print result.value
err = stem.mux[0].setChannel(1)
err = stem.mux[0].setEnabled(1)
err = stem.mux[0].setEnabled(0)
voltage = stem.mux[0].getChannel(1)
print voltage.value
err = stem.mux[0].setChannel(3)
```

### 3.1.10 Pointer Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Access the reflex pad from a host computer.

The Pointers access the pad which is a shared memory area on a BrainStem module. The interface allows the use of the brainstem scratchpad from the host, and provides a mechanism for allowing the host application and brainstem reflexes to communicate.

The Pointer allows access to the pad in a similar manner as a file pointer accesses the underlying file. The cursor position can be set via `setOffset`. A read or write of a character short or int can be made from that cursor position. In addition the mode of the pointer can be set so that the cursor position automatically increments or set so that it does not. This allows for multiple reads of the same pad value, or reads of multi-record values, via an incrementing pointer.

#### Offset (Get/Set)

```
pointer [ index ] . getOffset <= (unsigned char) Offset
pointer [ index ] . setOffset => (unsigned char) offset
```

Gets or sets the current cursor position for the pointer.

#### Mode (Get/Set)

```
pointer [ index ] . getMode <= (unsigned char) mode
pointer [ index ] . setMode => (unsigned char) mode
```

Get or set the pointer mode, static (0 default) or incrementing (1).

#### Char (Get/Set)

```
pointer [ index ] . getChar <= (unsigned char) value
pointer [ index ] . setChar => (unsigned char) value
```

Get or set a character value into the scratchpad at the current pointer offset. This will increment the pointer by 1 byte if the pointer mode is set to increment.

## Short (Get/Set)

```
pointer [ index ] . getShort <= (unsigned short) value  
pointer [ index ] . setShort => (unsigned short) value
```

Get or set a short value into the scratchpad at the current pointer offset. This will increment the pointer by 2 bytes if the pointer mode is set to increment.

## Int (Get/Set)

```
pointer [ index ] . getInt <= (unsigned int) value  
pointer [ index ] . setInt => (unsigned int) value
```

Get or set an int value into the scratchpad at the current pointer offset. This will increment the pointer by 4 bytes if the pointer mode is set to increment.

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on  
// success. Get calls will fill the variable with the returned value.  
  
stem.pointer[0].getOffset(&offset);  
stem.pointer[0].setOffset(4);  
stem.pointer[0].getMode(&mode);  
stem.pointer[1].setMode(1);  
stem.pointer[1].getChar(&value);  
stem.pointer[1].setChar(6);  
stem.pointer[1].getShort(&value);  
stem.pointer[1].setShort(600);  
stem.pointer[1].getInt(&value);  
stem.pointer[1].setInt(600000);
```

### Python

```
result = stem.pointer[0].getOffset()  
print result.value  
err = stem.pointer[0].setOffset(4)  
result = stem.pointer[0].getMode(mode)  
print result.value  
err = stem.pointer[1].setMode(1)  
result = stem.pointer[1].getChar()  
print result.value  
err = stem.pointer[1].setChar(6)  
result = stem.pointer[1].getShort()  
result.value  
err = stem.pointer[1].setShort(600)  
result = stem.pointer[1].getInt()  
result.value  
result = stem.pointer[1].setInt(600000)
```

### 3.1.11 PoE Entity

#### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The **PoE** entity provides Power over Ethernet control and telemetry on supported products. Use this entity to enable/disable PoE pairs, select power modes, inspect negotiated classes, and read per-pair electrical measurements and accumulated power.

- *pair* = 0 = wire pair 1/2
- *pair* = 1 = wire pair 3/4

#### Pair Enable/Disable

```
stem.poe.getPairEnabled(pair) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
stem.poe.setPairEnabled(pair, enable) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
1 = Enabled, 0 = Disabled.
```

#### Power Mode and Power State

```
stem.poe.getPowerMode() \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
stem.poe.setPowerMode(value) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
stem.poe.getPowerState() \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
Power Mode (commanded): PD, PSE, Auto, Off.
Power State (actual): PD, PSE, Off.
```

#### Classification and Detection

```
stem.poe.getPairSourcingClass(pair) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
stem.poe.setPairSourcingClass(pair, value) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
Sourcing class: The PoE class offered by the device when acting as a PSE.
stem.poe.getPairRequestedClass(pair) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
Requested class: The PoE class requested by the device when acting as a PD.
stem.poe.getPairDiscoveredClass(pair) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
Discovered class (PSE/PD): The negotiated PoE class result.
stem.poe.getPairDetectionStatus(pair) \[cpp\] \[python\] \[.NET\] \[LabVIEW\]
Current per-pair detection status.
```

Table 4: Detection status values

Unknown
Short circuit
Open circuit
Low resistance
High resistance
Valid
Switch Failure

### Electrical Measurements (per pair)

`stem.poe.getPairVoltage(pair) [cpp] [python] [.NET] [LabVIEW]`

Voltage:  $\mu\text{V}$

`stem.poe.getPairCurrent(pair) [cpp] [python] [.NET] [LabVIEW]`

Current:  $\mu\text{A}$

`stem.poe.getPairResistance(pair) [cpp] [python] [.NET] [LabVIEW]`

Resistance:  $\text{m}\Omega$

`stem.poe.getPairCapacitance(pair) [cpp] [python] [.NET] [LabVIEW]`

Capacitance:  $\text{nF}$

`stem.poe.getPairPower(pair) [cpp] [python] [.NET] [LabVIEW]`

Power:  $\text{mW}$  (approx. Voltage \* Current for the pair)

### Total Power (instantaneous)

`stem.poe.getTotalPower() [cpp] [python] [.NET] [LabVIEW]`

Returns the sum of both pairs' instantaneous power ( $\text{mW}$ ).

### Accumulated Power (energy counters)

`stem.poe.getPairAccumulatedPower(pair) [cpp] [python] [.NET] [LabVIEW]`

`stem.poe.setPairAccumulatedPower(pair, power) [cpp] [python] [.NET] [LabVIEW]`

`stem.poe.getTotalAccumulatedPower() [cpp] [python] [.NET] [LabVIEW]`

`stem.poe.setTotalAccumulatedPower(power) [cpp] [python] [.NET] [LabVIEW]`

\* All values are in  $\text{mWh}$

\* Setting total or pair accumulated power resets the corresponding accumulator.

## 3.1.12 Port Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Port Entity provides control over the most basic items related to a USB Port. This includes actions ranging from a complete port enable and disable to the individual interface control. Voltage and current measurements are also included for devices which support the Port Entity.

### Port Enable/Disable (Get/Set)

```
port [index] . getEnabled <= (unsigned char) enabled
port [index] . setEnabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over an entire port for a provided index (Power, Data, CC and Vconn). Values either passed in or returned are treated as boolean values.



### Power Enable/Disable (Get/Set)

```
port [index] . getPowerEnabled <= (unsigned char) enabled
port [index] . setPowerEnabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the power for a provided index (Vbus). Values either passed in or returned are treated as boolean values.

### Data Enable/Disable (Get/Set)

```
port [index] . getDataEnabled <= (unsigned char) enabled
port [index] . setDataEnabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the data lines for a provided index (High Speed (HS) and Super Speed (SS)). Values either passed in or returned are treated as boolean values.

### High Speed (HS) Data Enable/Disable (Get/Set)

```
port [index] . getDataHSEnabled <= (unsigned char) enabled
port [index] . setDataHSEnabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the High Speed (HS) data lines for a provided index (HS1 and HS2). Values either passed in or returned are treated as boolean values.

### High Speed 1 (HS1) Data Enable/Disable (Get/Set)

```
port [index] . getDataHS1Enabled <= (unsigned char) enabled
port [index] . setDataHS1Enabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the High Speed 1 (HS1) data lines for a provided index. Values either passed in or returned are treated as boolean values.

### High Speed 2 (HS2) Data Enable/Disable (Get/Set)

```
port [index] . getDataHS2Enabled <= (unsigned char) enabled
port [index] . setDataHS2Enabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the High Speed 2 (HS2) data lines for a provided index. Values either passed in or returned are treated as boolean values.

### Super Speed (SS) Data Enable/Disable (Get/Set)

```
port [index] . getDataSSEnabled <= (unsigned char) enabled
port [index] . setDataSSEnabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the Super Speed (SS) data lines for a provided index (SS1 and SS2). Values either passed in or returned are treated as boolean values.

### Super Speed 1 (SS1) Data Enable/Disable (Get/Set)

```
port [index] . getDataSS1Enabled <= (unsigned char) enabled
port [index] . setDataSS1Enabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the Super Speed 1 (SS1) data lines for a provided index. Values either passed in or returned are treated as boolean values.

### Super Speed 2 (SS2) Data Enable/Disable (Get/Set)

```
port [index] . getDataSS2Enabled <= (unsigned char) enabled
port [index] . setDataSS2Enabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the Super Speed 2 (SS2) data lines for a provided index. Values either passed in or returned are treated as boolean values.

### Vconn Enable/Disable (Get/Set)

```
port [index] . getVconnEnabled <= (unsigned char) enabled
port [index] . setVconnEnabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the Vconn lines for a provided index (Vconn1 and Vconn2 (only one ever exists)). Values either passed in or returned are treated as boolean values.

### Vconn 1 Enable/Disable (Get/Set)

```
port [index] . getVconn1Enabled <= (unsigned char) enabled
port [index] . setVconn1Enabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the Vconn 1 lines for a provided index. Values either passed in or returned are treated as boolean values.

### Vconn 2 Enable/Disable (Get/Set)

```
port [index] . getVconn2Enabled <= (unsigned char) enabled
port [index] . setVconn2Enabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the Vconn 2 lines for a provided index. Values either passed in or returned are treated as boolean values.

### CC Enable/Disable (Get/Set)

```
port [index] . getCCEnabled <= (unsigned char) enabled
port [index] . setCCEnabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the CC lines for a provided index (CC1 and CC2). Values either passed in or returned are treated as boolean values.

### CC 1 Enable/Disable (Get/Set)

```
port [index] . getCC1Enabled <= (unsigned char) enabled
port [index] . setCC1Enabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the CC 1 lines for a provided index. Values either passed in or returned are treated as boolean values.

### CC 2 Enable/Disable (Get/Set)

```
port [index] . getCC2Enabled <= (unsigned char) enabled
port [index] . setCC2Enabled => (unsigned char) enabled
```

Provides control (Set) and monitoring (Get) over the CC 2 lines for a provided index. Values either passed in or returned are treated as boolean values.

### Vbus Voltage/Current (Get)

```
port [index] . getVbusVoltage <= (unsigned int) microvolts
port [index] . getVbusCurrent <= (unsigned int) microamps
```

Provides access to the last read values of Voltage (in microvolts) and Current (in microamps) for the Vbus lines.

### Vconn Voltage/Current (Get)

```
port [index] . getVconnVoltage <= (unsigned int) microvolts
port [index] . getVconnCurrent <= (unsigned int) microamps
```

Provides access to the last read values of Voltage (in microvolts) and Current (in microamps) for the Vconn lines.

### Vbus Accumulated Power (Get/Reset)

```
port [index] . getVbusAccumulatedPower <= (unsigned int) milliwatthours  
port [index] . resetVbusAccumulatedPower => (void)
```

Returns the accumulated power (energy) sank or sourced by the Vbus line for the given port in units of milliWatt-hours.

### Vconn Accumulated Power (Get/Reset)

```
port [index] . getVconnAccumulatedPower <= (unsigned int) milliwatthours  
port [index] . resetVconnAccumulatedPower => (void)
```

Returns the accumulated power (energy) sank or sourced by the Vconn line for the given port in units of milliWatt-hours.

### Port Name (Get/Set)

```
port [index] . getName <= (unsigned char[]) name  
port [index] . setName => (unsigned char[]) name
```

Allows for setting a friendly name to the port with a 32 character limit.

### Downstream Data Speed (Get)

```
port [index] . getDataSpeed <= (unsigned int)
```

Gets the speed of the enumerated device.

Data Speed	Bit	Value	Define
1.5 Mbit/s	0	0/1	portDataSpeed_ls_1p5M_Bit
12 Mbit/s	1	0/1	portDataSpeed_fs_12M_Bit
480 Mbit/s	2	0/1	portDataSpeed_hs_480M_Bit
5 Gbit/s	3	0/1	portDataSpeed_ss_5G_Bit
10 Gbit/s	4	0/1	portDataSpeed_ss_10G_Bit
USB 2.0	6	0/1	portDataSpeed_Connected_2p0_Bit
USB 3.0	7	0/1	portDataSpeed_Connected_3p0_Bit

### Allocated Power (Get)

```
port[index] . getAllocatedPower <= (unsigned int) milliwatts
```

Returns the currently allocated power for the port in milliwatts. This represents the power that has been allocated to this port from the available power budget.

### Available Power (Get)

```
port[index] . getAvailablePower <= (unsigned int) milliwatts
```

Returns the available power for the port in milliwatts. This represents the power that is available for allocation to this port.

### CC1/CC2 Accumulated Power (Get/Set)

```
port[index] . getCC[1|2]AccumulatedPower <= (unsigned int) milliwatt_hours
port[index] . setCC[1|2]AccumulatedPower => (unsigned int) milliwatt_hours
```

Returns or sets the accumulated power consumption for the CC1/CC2 line in milliwatt-hours. This tracks the total energy consumed over time.

### CC1/CC2 Current (Get)

```
port[index] . getCC[1|2]Current <= (unsigned int) microamps
```

Returns the current flowing through the CC1/CC2 line in microamps. This is used for USB-C power delivery monitoring.

### CC1/CC2 State (Get)

```
port[index] . getCC[1|2]State <= (unsigned int) state
```

Returns the current state of the CC1/CC2 line. The state is a 2-byte value where the upper byte represents the remote device state (device on the other end of the cable) and the lower byte represents the local hub state.

Table 5: CC State Values

Value	Name	Description
0	None	No connection or state
1	Invalid	Invalid or error state
2	RpDefault	Default pull-up resistor (500/900/1500mA)
3	Rp1p5	1.5 Amp pull-up resistor
4	Rp3p0	3.0 Amp pull-up resistor
5	Rd	Pull-down resistor (sink device)
6	Ra	Audio accessory resistor
7	Managed	Managed by firmware
8	Unknown	Unknown state

### CC1/CC2 Voltage (Get)

```
port[index] . getCC[1|2]Voltage <= (unsigned int) microvolts
```

Returns the voltage on the CC1/CC2 line in microvolts. This is used for USB-C power delivery monitoring.

### CC Current Limit (Get/Set)

```
port[index] . getCCCurrentLimit <= (unsigned char) limit
port[index] . setCCCurrentLimit => (unsigned char) limit
```

Returns or sets the current limit enumeration for the CC lines. This sets the maximum current value that will be advertised for power delivery negotiation.

Table 6: CC Current Limit Options

Value	Name	Description
0	None	No current limit
1	Default	Default current limit (500/900mA)
2	1p5	1.5 Amp current limit
3	3p0	3.0 Amp current limit

### Current Limit Mode (Get/Set)

```
port[index] . getCurrentLimitMode <= (unsigned char) mode
port[index] . setCurrentLimitMode => (unsigned char) mode
```

Returns or sets the current limit mode for the port. This controls how the current limit is applied and enforced.

### Data HS Routing Behavior (Get/Set)

```
port[index] . getDataHSRoutingBehavior <= (unsigned char) behavior
port[index] . setDataHSRoutingBehavior => (unsigned char) behavior
```

Returns or sets the high-speed data routing behavior for the port. This controls how high-speed data signals are routed through the port.

Table 7: Data HS Routing Behavior Options

Value	Name	Description
0	FollowCC	Auto follow CC line routing
1	Side1	Route to side 1 only
2	Side2	Route to side 2 only
3	Shorted	Route to both sides (shorted)

### Data Role (Get)

```
port[index] . getDataRole <= (unsigned char) role
```

Returns the current data role of the port. This indicates whether the port is acting as a host or device for data communication.

### Data SS Routing Behavior (Get/Set)

```
port[index] . getDataSSRoutingBehavior <= (unsigned char) behavior
port[index] . setDataSSRoutingBehavior => (unsigned char) behavior
```

Returns or sets the super-speed data routing behavior for the port. This controls how super-speed data signals are routed through the port.

Table 8: Data SS Routing Behavior Options

Value	Name	Description
0	FollowCC	Auto follow CC line routing
1	Side1	Route to side 1 only
2	Side2	Route to side 2 only

### Port Errors (Get)

```
port[index] . getErrors <= (unsigned int) errors
```

Returns the current error status for the port. The error value is a bitfield indicating various port-related error conditions.

### HS Boost (Get/Set)

```
port[index] . getHSBoost <= (unsigned char) boost
port[index] . setHSBoost => (unsigned char) boost
```

Returns or sets the high-speed boost setting for the port. This controls signal amplification for high-speed data transmission.

### Port Mode (Get/Set)

```
port[index] . getMode <= (unsigned int) mode
port[index] . setMode => (unsigned int) mode
```

Returns or sets the operating mode for the port. The mode is a bitfield that controls various port behaviors and capabilities.

### Power Limit Mode (Get/Set)

```
port[index] . getPowerLimitMode <= (unsigned char) mode  
port[index] . setPowerLimitMode => (unsigned char) mode
```

Returns or sets the power limit mode for the port. This controls how the power limit is applied and enforced.

### Power Mode (Get/Set)

```
port[index] . getPowerMode <= (unsigned char) mode  
port[index] . setPowerMode => (unsigned char) mode
```

Returns or sets the power mode for the port. This controls the power delivery behavior and capabilities.

### SBU1 Voltage (Get)

```
port[index] . getSBU1Voltage <= (unsigned int) microvolts
```

Returns the voltage on the SBU1 line in microvolts. SBU (Sideband Use) lines are used for alternate modes in USB-C.

### SBU2 Voltage (Get)

```
port[index] . getSBU2Voltage <= (unsigned int) microvolts
```

Returns the voltage on the SBU2 line in microvolts. SBU (Sideband Use) lines are used for alternate modes in USB-C.

### Port State (Get)

```
port[index] . getState <= (unsigned int) state
```

Returns the current state of the port. The state is a bitfield indicating the status of various port components and features.

### Voltage Setpoint (Get/Set)

```
port[index] . getVoltageSetpoint <= (unsigned int) millivolts  
port[index] . setVoltageSetpoint => (unsigned int) millivolts
```

Returns or sets the voltage setpoint for the port in millivolts. This controls the target voltage for the port's power output.



### Vbus Accumulated Power (Set)

```
port[index] . setVbusAccumulatedPower => (unsigned int) milliwatt_hours
```

Sets the accumulated power consumption for the Vbus line in milliwatt-hours. This is used to reset or initialize the power tracking.

### Vconn Accumulated Power (Set)

```
port[index] . setVconnAccumulatedPower => (unsigned int) milliwatt_hours
```

Sets the accumulated power consumption for the Vconn line in milliwatt-hours. This is used to reset or initialize the power tracking.

## 3.1.13 Power Delivery Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Power Delivery or PD is a power specification which allows more charging options and device behaviors within the USB interface. This Entity will allow you to directly access the vast landscape of PD.

When the capabilities of a PD system are fully realized everything in the system is “smart”. That includes the device, the host and even the cable. All of these elements contain electronics that identify themselves and what they are capable of doing. Because of this complexity it is important to align on a few terms that will be used throughout this Entity.

**Partner** This refers to the side of the PD connection in question. The possible options for this parameter are.

- **Local** Indicates the context/perspective of the Acraname device you are communicating with through a BrainStem connection.
- **Remote** The context/perspective of anything other than the Acraname device.

Partner Type	Value	Define
Local	0	powerdeliveryPartnerLocal
Remote	1	powerdeliveryPartnerRemote

**Power Role** Indicates the direction of power. This value is typically used in the context of a “Partner”. i.e. The remote partner is sinking, which would mean the local partner is sourcing. The possible options for this context are:

- **Sink** Indicates that the partner is taking power in/from.
- **Source** Indicates that the partner is providing power out/to.

Power Roles are also used in the context of what a port is capable of doing.

- **Sink** Device is capable of consuming power.
- **Source** Device is capable of producing power.
- **Sink/Source** Device is capable of both consuming or producing power. Dual Role Port (DRP)

Power Role	Value	Define
Disabled	0	powerdeliveryPowerRoleDisabled
Source	1	powerdeliveryPowerRoleSource
Sink	2	powerdeliveryPowerRoleSink
Source/Sink	3	powerdeliveryPowerRoleSourceSink

### Power Data Objects (PDO)

- PDO's define what a device is capable of doing in the world of Power Delivery. PDO's are bit packed integers defined by the PD Specification which vary in meaning based on the type of PDO.

### Request Data Objects (RDO)

- RDO's are the final agreement after successful Power Delivery negotiations. This RDO is always sent by the sinking device and is the result of the sources advertised PDO's and the needs/requirements of the sinking device. Only one RDO exists per valid connection.

### Connection State (Get)

```
pd[x] . getConnectionState => (unsigned char) state
```

Gets the type of connection as defined by the Power Delivery Specification. The most common connections types are: Not Attached, Sourcing and Sinking.

### Power Data Object (Get/Set)

```
pd[x] . getPowerDataObject => (unsigned int) pdo  
pd[x] . setPowerDataObject <= (unsigned int) pdo
```

Gets and Sets the PDO for a given pd[x] instance, partner and power role.

For any one connection there are 4 locations in which PDOs exist: Remote Sink, Remote Source, Local Sink, and Local Source. Within each of PDO locations up to 7 PDOs can be defined.

Set calls are only allowed on Local Partner assuming the BrainStem device supports this feature.

### Number of Power Data Objects (Get)

```
pd[x] . getNumberOfPowerDataObjects => (unsigned int) pdoCount
```

As previously stated 7 PDO's can be defined per location; however, it is only required that there be 1. This API allows you the get the number of PDO's available for a given partner and power role.

### Reset Power Data Objects (Set)

```
pd[x] . resetPowerDataObjectToDefault => (void)
```

Resets the local partner PDO for a given power role and index.

### Power Data Object List (Get)

```
pd[x] . getPowerDataObjectList => (unsigned int [MAX_PDOS]) list
```

Returns a list of all PDOs for a given pd[x] instance. This is equivalent to calling getPowerDataObject on all possible configurations.

### Power Data Objects Enabled (Get/Set)

```
pd[x] . getPowerDataObjectEnabled => (unsigned char) enable
pd[x] . setPowerDataObjectEnabled <= (unsigned char) enable
```

Acroname products which support this feature can selectively enable and disable its local PDO's. In that, if the local source location has 7 PDO's, the user could disable all but the first PDO from being advertised by disabling them.

### Power Data Object Enabled List (Get)

```
pd[x] . getPowerDataObjectEnabledList => (unsigned char) enableList
```

Convenience function to getPowerDataObjectEnabled. Returns a bit packed representation of the PDO enabled status.

### Request Data Object (Get/Set)

```
pd[x] . getRequestDataObject => (unsigned int) rdo
pd[x] . setRequestDataObject <= (unsigned int) rdo
```

Gets and Sets the RDO for a given pd[x] instance and partner

Set calls are only possible on a local sinking partner assuming the BrainStem device supports this feature.

### Power Role (Get/Set)

```
pd[x] . getPowerRole => (unsigned char) role
pd[x] . setPowerRole <= (unsigned char) role
```

The power role defines the type of PD connections the device supports. Devices can be disabled, sinking, sourcing or dual role ports (capable of sinking or sourcing).

### Power Role Preferred (Get/Set)

```
pd[x] . getPowerRolePreferred => (unsigned char) role
pd[x] . setPowerRolePreferred <= (unsigned char) role
```

Dual role port typically have a preference of whether they are sinking or sourcing. For instance battery powered devices typically prefer to sink power since they have a finite amount of battery power; however, many of them can source power if requested to do so.

### Cable Voltage Maximum (Get)

```
pd[x] . getCableVoltageMax => (unsigned char) voltage
```

Returns the maximum amount of voltage the attached cable is capable of handling. This information is defined in the emark of the cable and is used during PD negotiations for PDO compatibility.

### Cable Current Maximum (Get)

```
pd[x] . getCableCurrentMax => (unsigned char) voltage
```

Returns the maximum amount of current the attached cable is capable of handling. This information is defined in the emark of the cable and is used during PD negotiations for PDO compatibility.

### Cable Speed Maximum (Get)

```
pd[x] . getCableSpeedMax => (unsigned char) speed
```

Returns the maximum speed the attached cable is capable of handling. This information is defined in the emark of the cable.

### Cable Type (Get)

```
pd[x] . getCableType => (unsigned char) cable
```

Returns whether the cable is active or passive and if it is emarked.

Table 9: Cable Type Options

Value	Name	Description
0	Invalid	Invalid or unknown cable type
1	Passive	Passive cable (no active electronics)
2	Active	Active cable (contains active electronics)

### Cable Orientation (Get)

```
pd[x] . getCableOrientation => (unsigned char) orientation
```

Indicates which side of the connection is being using for PD negotiations. This is based on physical CC strap-ping within the cable.

### Request (Set)

```
pd[x] . getCableOrientation <= (unsigned char) request
```

Allows access to specific request which are built into the PD specification. It's important to remember that these are requests and are not guaranteed to occur. Examples are resets, power, data, vconn role swaps etc.

Table 10: Requests

Request	Value	Define
Hard Reset	0	pdRequestHardReset
Soft Reset	1	pdRequestSoftReset
Data Reset	2	pdRequestDataReset
Power Role Swap	3	pdRequestPowerRoleSwap
Power Fast Role Swap	4	pdRequestPowerFastRoleSwap
Data Role Swap	5	pdRequestDataRoleSwap
Vconn Swap	6	pdRequestVconnSwap
Sink GoTo Minimum	7	pdRequestSinkGoToMinimum
Remote Source Power Data Objects	8	pdRequestRemoteSourcePowerDataObjects
Remote Sink Power Data Objects	9	pdRequestRemoteSinkPowerDataObjects
Remote Source Extended Capabilities	10	pdRequestRemoteSourceExtendedCapabilities
Remote Sink Extended Capabilities	11	pdRequestRemoteSinkExtendedCapabilities
Status	12	pdRequestStatus
PPS Status	13	pdRequestPPSStatus
Battery Capabilities	14	pdRequestBatteryCapabilities
Battery Status	15	pdRequestBatteryStatus
Manufacturer Info Sop	16	pdRequestManufacturerInfoSop
Manufacturer Info Sop'	17	pdRequestManufacturerInfoSopp
Manufacturer Info Sop''	18	pdRequestManufacturerInfoSoppp
Discover Identity Sop	19	pdRequestDiscoverIdentitySop
Discover Identity Sop'	20	pdRequestDiscoverIdentitySopp
Discover Identity Sop''	21	pdRequestDiscoverIdentitySoppp
Revision	22	pdRequestRevision

### Request Status (Get)

```
pd[x] . requestStatus => (unsigned char) status
```

Returns the most recent status for a given pd[x] instance. This is usually paired with the request command since they are not guaranteed and are asynchronous.

### Flag Mode (Get/Set)

```
pd[x] . getFlagMode => (unsigned char) mode  
pd[x] . getFlagMode <= (unsigned char) mode
```

Allows get and set of a flag configuration for a given USB Power Delivery Flag. The following flags can be configured to the following different modes:

Table 11: Flags

Flag	Value	Define
Dual Role Data	1	pdFlagDualRoleData
Dual Role Power	2	pdFlagDualRolePower
Unconstrained Power	3	pdFlagUnconstrainedPower
Suspend Possible	4	pdFlagSuspendPossible
USB Com Possible	5	pdFlagUSBComPossible
Unchunked Message Support	6	pdFlagUnchunkedMessageSupport
Higher Capability	7	pdFlagHigherCapability
Capability Mismatch	8	pdFlagCapabilityMismatch
Giveback Flag	9	pdFlagGivebackFlag

Table 12: Modes

Mode	Value	Description
Disabled	0	Flag will always report 0
Enabled	1	Flag will always report 1
Auto	2	Flag will show 0 or 1 correctly according to the rest of the hubs state/config

### Override (Get/Set)

```
pd[x] . getOverride <= (unsigned int) overrides  
pd[x] . setOverride => (unsigned int) overrides
```

Returns or sets the override configuration for the Power Delivery connection. Overrides allow bypassing certain Power Delivery protocol behaviors for testing or special applications.

Table 13: Override Options

Bit	Name	Description
0	CableCurrent	Override cable current limits
1	PortPower	Override port power limits
2	AutoDiscovery	Override automatic discovery behavior

### 3.1.14 Rail Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Rail entity provides power control to connected devices on some modules. Check the module datasheet to determine if the module has this capability.

the Rail entity controls power provided to downstream devices, it has the ability to enable and disable power, can read voltage on the rail, and provides current consumption information on some modules. There are additional capabilities that certain modules provide which enhance basic power delivery through Kelvin sensing, or by bringing online separate power management functionality.

Certain modules may provide more than one power rail. These are independently controlled and can be accessed via the entity index.

#### Current (Get)

```
rail[ index ] . getCurrent <= (int) microamps
```

Returns the current consumption of the device attached to the rail. This can be a positive or negative value, and is reported in microamps.

#### Current Limit (Get/Set)

```
rail [ index ] . getCurrentLimit <= (int) microamps
rail [ index ] . setCurrentLimit => (int) microamps
```

Available on some modules, check your module datasheet. This control gets or sets the maximum current draw for the given power rail in microamps.

#### Temperature (Get)

```
rail [ index ] . getTemperature <= (int) microcelsius
```

Some modules have a rail temperature measurement. This command gets the current rail temperature in microcelsius.

### Enable (Get/Set)

```
rail [ index ] . setEnable => (unsigned char) enable  
rail [ index ] . getEnable <= (unsigned char) enable
```

#### Setting Enable

Some rails can be enabled or disabled. The enable value is treated as a boolean 1 will enable the rail and 0 will disable it. Check the module datasheet to determine if this functionality is available for the given rail.

#### Getting Enable

If a rail can be enabled or disabled, getting the Enable setting will return a 1 if the rail is enabled or 0 otherwise.

### Voltage (Get/Set)

```
rail [ index ] . setVoltage => (int) microvolts  
rail [ index ] . getVoltage <= (int) microvolts
```

Some rails are variable voltage rails, and users can set the rails to supply voltage at range of voltage values. Check the module datasheet for the rail voltage limits, and settings.

#### Setting Rail Voltage

Setting this value will cause the rail to supply the requested voltage, if it is within the settings defined in the datasheet.

#### Getting Rail Voltage

Getting this value will return the current voltage setpoint for the rail in microvolts. If the given rail is fixed, it returns the fixed voltage setting for the given rail.

### Kelvin Sensing (Get/Set)

```
rail [ index ] . setKelvinSensingEnable => (unsigned char) enable  
rail [ index ] . getKelvinSensingEnable <= (unsigned char) enable
```

Some rails have kelvin sensing capabilities. See the module datasheet for more information about using kelvin sensing in your application.

#### Setting Kelvin Sensing mode

Setting this value to 1 will enable Kelvin sensing on this rail.

#### Getting Kelvin Sensing mode

Getting this value will return whether kelvin sensing is enabled on the rail. 1 is enabled 0 is disabled.



### Kelvin Sensing State (Get)

```
rail [ index ] . getKelvinSensingState <= (unsigned char) state
```

When a rail is capable of Kelvin sensing, under certain error conditions kelvin sensing may be disabled by the system. This command returns the current kelvin sensing state of the rail, either enabled or disabled.

### Operational Mode (Get/Set)

```
rail [ index ] . setOperationalMode => (unsigned char) mode
rail [ index ] . getOperationalMode <= (unsigned char) mode
```

Certain modules have multiple power regulation stages that can affect the behavior of the supplied rail voltage and current. This command sets and gets the preferred mode of operation for the given rail. Check the module datasheet for details on the capabilities and behavior of these operational modes.

### Operational State (Get)

```
rail [ index ] . getOperationalState <= (unsigned char) mode
```

When a rail is capable of multiple operational modes, getting this value will return the current operational state of the rail, this can indicate error conditions, or a certain operational mode if the rail is in an automatic behavior.

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success. Get commands fill the variable with the returned value.

stem.rail[0].getCurrent(microamps);
stem.rail[0].setCurrentLimit(limit);
stem.rail[0].getCurrentLimit(limit);
stem.rail[0].getTemperature(microcelsius);
stem.rail[0].setEnabled(1); //enables rail.
stem.rail[0].getEnable(bEnable);
stem.rail[1].setVoltage(2000000); // set rail to 2 volts.
stem.rail[1].getVoltage(microvolts);
stem.rail[0].setKelvinSensingEnable(1); // enable kelvin sensing.
stem.rail[0].getKelvinSensingEnable(bEnabled);
stem.rail[0].getKelvinSensingState(bEnabled);
stem.rail[0].setOperationalMode(auto);
stem.rail[0].getOperationalMode(mode);
stem.rail[0].getOperationalState(state);
```

## Python

```
microamps = stem.rail[0].getCurrent()
print microamps.value
stem.rail[0].setCurrentLimit(limit)
limit = stem.rail[0].getCurrentLimit()
print limit.value
temperature = stem.rail[0].getTemperature()
print temperature.value
stem.rail[0].setEnabled(1) //enables rail.
bEnable = stem.rail[0].getEnable()
print bEnable.value
stem.rail[0].setVoltage(2000000) // set rail to 2 volts.
microvolts = stem.rail[0].getVoltage(microvolts)
print microvolts.value
stem.rail[0].setKelvinSensingEnable() // enable kelvin sensing.
bEnabled = stem.rail[0].getKelvinSensingEnable()
print bEnabled.value
bEnabled = stem.rail[0].getKelvinSensingState()
print bEnabled.value
stem.rail[0].setOperationalMode(0, auto);
mode = stem.rail[0].getOperationalMode(0);
print mode.value
state = stem.rail[0].getOperationalState(0);
print state.value
```

### 3.1.15 RCServo Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The RCServo entity provides a pulsed signal based on the RC servo standard. This consist of a period lasting 20ms with a high pulse between 1-2ms. The time high corresponds to a specific position determined by the servo being used. For example if you are using a 90 degree servo a 1.5ms pulse will correspond to the 45 degrees. 1ms and 2ms pulses will correspond to 0 and 90 degree positions respectively.

The RCServo entity is an overload to the [Digital Entity](#) and therefor requires proper configuration of the Digital entity before the RCServo entity can be enabled.

---

**Note:** Not all BrainStem modules will have this capability.

---

#### Set/Get Enable

```
servo [ index ] . getEnable <= (unsigned char) enable
servo [ index ] . setEnable => (unsigned char) enable
```

This functions gets/sets the RCServo function for a given pin (pending, it has been properly configured in the digital entity). At a firmware level this enables/disables the timers.

## Set/Get Position

```
servo [ index ] . getPosition <= (unsigned char) position
servo [ index ] . setPosition => (unsigned char) position
```

This functions gets/sets the RCServo position. For outputs this will return the currently set position; however, for inputs it will return the value seen at the pin pending the pulse is valid. If the pulse or period are invalid a zero will be returned along with the error code aErrRange.

The default range is: 64 (1ms) - 192 (2ms). For example when working with a 90 degree servo setting the position to 64 will give you 0 degrees and 192 will give you 90 degrees.

---

**Note:** getPosition() will return the original setPosition() regardless of the reverse settings.

---

## Set/Get Reverse

```
servo [ index ] . getReverse <= (unsigned char) reverse
servo [ index ] . setReverse => (unsigned char) reverse
```

This functions gets/sets the reverse (invert) option in the RCServo Class.

Given a setPosition of 64 the servo pulse will be 1ms; however, if you reverse it the value will now be treated as 192.

## Aligning the Digital and RCServo Entities

Digital Entity	Servo Entity	Pin Number	Assignment
digital[0]	servo[0]	Pin 0	RCServo Input
digital[1]	servo[1]	Pin 1	RCServo Input
digital[2]	servo[2]	Pin 2	RCServo Input
digital[3]	servo[3]	Pin 3	RCServo Input
digital[4]	servo[4]	Pin 4	RCServo Output
digital[5]	servo[5]	Pin 5	RCServo Output
digital[6]	servo[6]	Pin 6	RCServo Output
digital[7]	servo[7]	Pin 7	RCServo Output

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success.

//Output
//Set digital pin 8 as an RCServo output.
err = stem.digital[8].setConfiguration(digitalConfigurationRCServoOutput);
//Enable the servo channel
```

(continues on next page)

(continued from previous page)

```

err = stem.servo[4].setEnabled(1);
//Set servo to middle/neutral position
err = stem.servo[4].setPosition(128);

//Input
//Set digital pin 0 as an RCServo input.
err = stem.digital[0].setConfiguration(digitalConfigurationRCServoInput);
//Enable the servo channel
err = stem.servo[0].setEnabled(1);
//Set servo to middle/neutral position
err = stem.servo[4].getPosition(&pPosition);

```

## Python

```

# All commands return aErr values when errors are encountered and aErrNone on
# success.

#Output
#Set digital pin 8 as an RCServo output.
err = stem.digital[8].setConfiguration(CONFIGURATION_RCSERVO_OUTPUT)
#Enable the servo channel
err = stem.servo[4].setEnabled(1)
#Set servo to middle/neutral position
err = stem.servo[4].setPosition(128)

#Input
#Set digital pin 0 as an RCServo input.
err = stem.digital[0].setConfiguration(CONFIGURATION_RCSERVO_INPUT)
#Enable the servo channel
err = stem.servo[0].setEnabled(1)
#Set servo to middle/neutral position
err = stem.servo[0].getPosition(&pPosition)

```

### 3.1.16 Relay Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Relay entity is a simple class which allows the enabling and disabling of a specified relay.

#### Channel Enable (Get/Set)

```

relay [ index ] . setEnable => (unsigned char) enable
relay [ index ] . getEnable <= (unsigned char) enable

```

Enables the relay channel for the specified index

## Get Voltage (Get)

```
relay [ index ] . getVoltage <= (unsigned char) voltage
```

Returns the voltage of the specified index.

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success. Get calls will fill the variable with the returned value.

err = stem.relay[0].setEnabled(1);
err = stem.relay[1].setEnabled(1);

err = stem.relay[0].getEnable(&enable);
err = stem.relay[1].getEnable(&enable);

err = stem.relay[0].getVoltage(&voltage);
err = stem.relay[1].getVoltage(&voltage);

err = stem.relay[0].setEnabled(0);
err = stem.relay[1].setEnabled(0);
```

### Python

```
err = stem.relay[0].setEnabled(1);
err = stem.relay[1].setEnabled(1);

result = stem.relay[0].getEnable()
print result.value

result = stem.relay[1].getEnable()
print result.value

voltage = stem.relay[0].getVoltage();
print voltage.value

voltage = stem.relay[1].getVoltage();
print voltage.value

err = stem.relay[0].setEnabled(0);
err = stem.relay[1].setEnabled(0);
```


### 3.1.17 Signal Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

SignalClass. Interface to digital pins configured to produce square wave signals. This class is designed to allow for square waves at various frequencies and duty cycles. Control is defined by specifying the wave period as (T3Time) and the active portion of the cycle as (T2Time). See the entity overview section of the reference for more detail regarding the timing.

Signal entity to Digital entity mapping varies from device to device. Please refer to the datasheet.

#### Timing

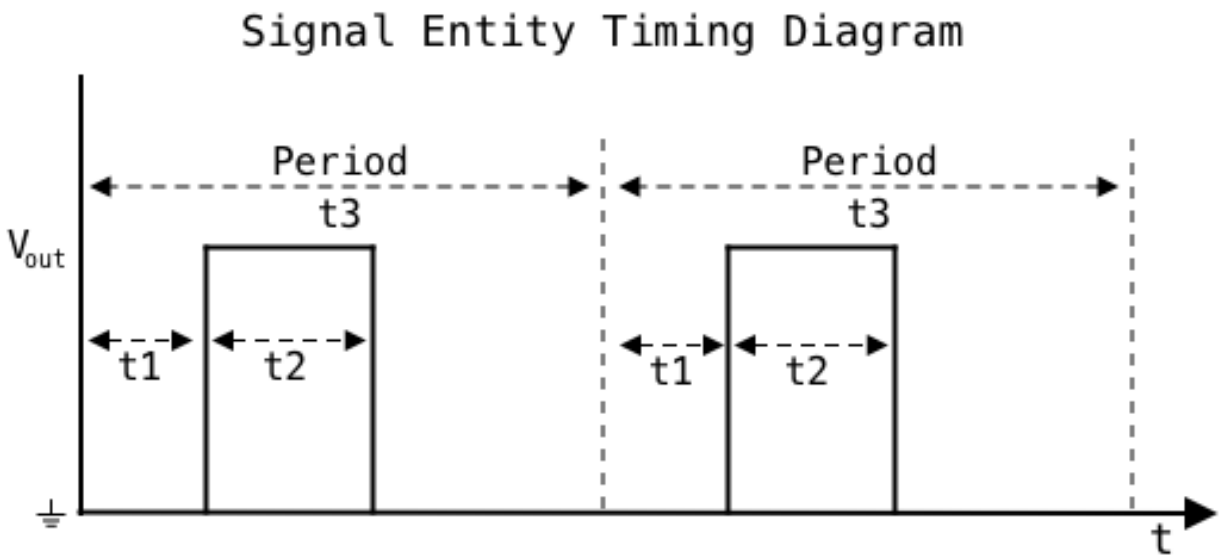

#### Set/Get enable

```
signal [ index ] . getEnable <= (unsigned char) enable  
signal [ index ] . setEnable => (unsigned char) enable
```

Enables the Signal Entity for a given index.

#### Set/Get T3 Time

```
signal [ index ] . getT3Time <= (unsigned int) t3_nsec  
signal [ index ] . setT3Time => (unsigned int) t3_nsec
```

The T3 time defines the period of the waveform in nano seconds.

## Set/Get T2 Time

```
signal [ index ] . getT2Time <= (unsigned int) t2_nsec
signal [ index ] . setT2Time => (unsigned int) t2_nsec
```

The T2 time defines the high period of the waveform in nano seconds.

## Set/Get invert

```
signal [ index ] . getInvert <= (unsigned char) invert
signal [ index ] . setInvert => (unsigned char) invert
```

Inverts the meaning of the T2 time. When inverted the T2 time will represent the time in nano seconds that the waveform is low.

## Code Examples

### C++

```
//Setup 10Hz Signal Output with 50% Duty Cycle
err = stem.digital[0].setConfiguration(digitalConfigurationSignalOutput);
err = stem.signal[0].setT2Time(50000000);
err = stem.signal[0].setT3Time(100000000);
err = stem.signal[0].setEnabled(1);

//Setup Signal as input and calculate the duty cycle.
err = stem.digital[4].setConfiguration(digitalConfigurationSignalInput);
err = stem.signal[4].getT2Time(&t2Time);
err = stem.signal[4].getT3Time(&t3Time);
double dutyCycle = ((double)t2Time / t3Time) * 100;
```

### Python

```
#Setup 10Hz Signal Output with 50% Duty Cycle
err = stem.digital[0].setConfiguration(digitalConfigurationSignalOutput);
err = stem.signal[0].setT2Time(50000000);
err = stem.signal[0].setT3Time(100000000);
err = stem.signal[0].setEnabled(1);

#Setup Signal as input and calculate the duty cycle.
err = stem.digital[4].setConfiguration(digitalConfigurationSignalInput);
t2Time = stem.signal[4].getT2Time();
t3Time = stem.signal[4].getT3Time();
dutyCycle = (t2Time.value / t3Time.value) * 100;
```

### 3.1.18 Store Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module has one or more stores. Stores are the BrainStem equivalent of a filesystem. Stores are broken up into a number of slots, each of which can be thought of as a file. A Store generally represents a specific type of storage. Flash or internal, RAM, or SD if the BrainStem includes an SD slot. The most common usage of slots and stores is for the storage of reflex code that will run on the BrainStem module. Additionally Bulk capture of Analog data can write to a slot within a store. Slots within the internal store can be set up as boot slots by setting the appropriate slot number in the system configuration. See the :doc:`System <system>` entity for more information about setting a boot slot.

The number and type of stores is Model specific. Details about the number of slots per store, and available stores can be found in the data sheets for specific models.

There are a number of commands for manipulating stores, which are detailed below. Many of the store commands are only accessible from host API's and UI applications, however commands relating to enabling reflex files in slots are accessible from the reflex language.

#### Get Slot State (Get)

```
store [ index ] . getSlotState <= (unsigned char) state
```

For slots which hold reflexes, this read only command returns whether the slot is currently enabled or not. 1 is enabled 0 is disabled. This command can be called from a reflex.

#### Load Slot (Write)

```
store [ index ] . loadSlot => (slot, byte buffer, buffer length)
```

This command writes a data buffer into a slot for the given store. It is only available from host side API's.

#### Unload Slot (Read)

```
store [ index ] . unloadSlot <= (slot, byte buffer, max buffer size, length read)
```

**This command reads the slot in the given store into the byte buffer. The length**

will never be more than the max buffer size given, but may be less if the slot contents were shorter than max buffer length.

#### Slot Enable (Set)

```
store [ index ] . slotEnable => (unsigned char) slot
```

This command enables the reflex file in the given store and slot. This command is accessible from the reflex language.



### Slot Disable (Set)

```
store [ index ] . slotDisable => (unsigned char) slot
```

This command disables the reflex file in the given store and slot. This command is accessible from the reflex language.

### Slot Capacity (Get)

```
store [ index ] . slotCapacity (unsigned char) slot <= (unsigned short) capacity
```

This command gets the maximum capacity of the given slot for the store. This command is accessible from the reflex language.

### Slot Size (Get)

```
store [ index ] . slotSize (unsigned char) slot <= (unsigned short) size
```

This command gets the current size of the data in the given slot for the store. This can be the size in bytes of the reflex byte code file, or the data size for a bulk capture.

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success.

stem.store[0].getSlotState(3, state); // gets the state of slot 3 in the internal
↳store.
stem.store[0].loadSlot(3, buffer, length); // loads the data in buffer.
stem.store[1].unloadSlot(0, buffer, 300, length); // unloads at most 300 bytes from
↳the 1st RAM slot.
stem.store[0].enableSlot(1);
stem.store[0].disableSlot(1);
stem.store[0].getSlotCapacity(1, size); // gets the max size of the slot.
Stem.store[0].getSlotSize(1, size); // gets the current size of the data in the slot.
```

### Python

```
res = stem.store[0].getSlotState(3) #res.value is the state of slot 3 in the internal
↳store
stem.store[0].loadSlot(3, buffer, length) # loads length bytes from buffer to slot 3
res = stem.store[1].unloadSlot(0) # res.value is a tuple of (str|bytes|int) of the
↳data in slot 0 and the length
stem.store[0].enableSlot(3)
stem.store[0].disableSlot(3)
res = stem.store[0].getCapacity(1) #res.value is the max size of the slot
res = stem.store[0].getSize(1) #res.value is the current size of the data in slot 1
```

### 3.1.19 System Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Every BrainStem module includes a single system entity. The system entity allows the retrieval and manipulation of configuration settings like the module address and input voltage, control over the user LED, as well as other functionality.

#### System save

```
system . save => (void)
```

BrainStem configuration settings are stored in volatile memory until the save command is executed. Settings such as the BootSlot, and changes to the Module or Router address will not persist across resets unless followed by a call to:

#### System reset (Set)

```
system . reset => (void)
```

Calling `system.reset()` will reset the BrainStem module just as if the reset button were pressed.

#### User LED

```
system . setLED => (unsigned char) state  
system . getLED <= (unsigned char) state
```

Gets or Sets the state of the User LED. Setting LED with a value of 1 turns the User LED on and setting it to 0 turns it off.

#### LED Brightness (Get/Set)

```
system . setLEDMaxBrightness => (unsigned char) value  
system . getLEDMaxBrightness <= (unsigned char) value
```

Gets or Sets the scaling factor for the brightness of all LEDs on the system. The brightness is set to the ratio of this value compared to 255 (maximum). The colors of each LED may be inconsistent at low brightness levels.

Note that if the brightness is set to zero and the settings are saved, then the LEDs will no longer indicate whether the system is powered on. When troubleshooting, the user configuration may need to be manually reset in order to view the LEDs again.

### Boot Slot (Get/Set)

```
system . setBootSlot => (unsigned char) slot
system . getBootSlot <= (unsigned char) slot
```

BrainStem modules can be configured to enable a reflex file at boot. The reflex file must be loaded into a slot in the internal store. Setting the boot slot to the value 255 will disable on boot functionality. For more information about stores and slots please see the store section of the reference manual. For more information about reflexes please see the Reflex section of the manual.

### Input Voltage (Get)

```
system . getInputVoltage <= (unsigned int) inputVoltage
```

The input voltage system command is a read only command and will return the input supply voltage of the BrainStem module in micro volts.

### Serial Number (Get)

```
system . getSerialNumber <= (unsigned int) serialNumber
```

Read only command that returns the unique module serial number. The returned value is an unsigned int. In Acroname UI applications the serial number is generally represented as an 8 character Hexadecimal number.

### BrainStem Model (Get)

```
system . getModel <= (unsigned char) BrainStem model.
```

Read only command that returns the model of the BrainStem module.

### Hardware Version (Get)

```
system . getHardwareVersion <= (unsigned int) Hardware Version.
```

Read only command that returns the hardware version of the module. The content of the hardware version is specific to each Acroname product and used to indicate behavioral differences between product revisions. The codes are not well defined and may change at any time.

### Version (Get)

```
system . getVersion <= (unsigned int) version number.
```

Read only command that returns the version number of the BrainStem firmware. This is a packed format. The `aVersion.h` C API can represent this version in a human readable manner. The format of the version number is 3 digits separated by ..

```
major . minor . patch
```

### Module Address (Get)

```
system . getModule <= (unsigned char) module
```

The module address is the number used to address the module on the BrainStem network and from the host. This is a combination of the module base address, any software offset that is applied and any hardware module offset.

### Module Base Address (Get)

```
system . getModuleBaseAddress <= (unsigned char) module
```

The module base address is the default or base address of the module, before any offsets are applied.

### Module Software Offset (Set/Get)

```
system . getModuleSoftwareOffset <= (unsigned char) software offset  
system . setModuleSoftwareOffset => (unsigned char) software offset
```

The module software offset is added to the module's base address and any hardware offsets to determine the final module address of the module. This setting is not applied until saved and the module has been reset.

### Module Hardware Offset (Get)

```
system . getModuleHardwareOffset <= (unsigned char) module hardware offset
```

MTM BrainStems have a set of module offset pins which will adjust the module address via hardware. See the data sheet for your MTM module for more information about these hardware settings. The module offset command is a read only command that returns the offset that will be added to the base module address and any software offset to determine the operating address of the MTM BrainStem module. Changes to the hardware offset are applied when the Device is reset.

### Router Address (Get/Set)

```
system . setRouter => (unsigned char) module  
system . getRouter <= (unsigned char) module
```

The BrainStem router address refers to the BrainStem module address of the module that will coordinate communication with the host system. This setting is not applied until it is saved and the module has been reset.

Changing the router address can have negative consequences for communicating with the BrainStem network. Please see the appendix on the BrainStem Network setup for more information.

- [Appendix: Brainstem Universal Entity Interface](#)
- [Appendix: The BrainStem Communication Protocol](#)

### HeartBeat Interval (Get/Set)

```
system . setHBInterval => (unsigned char) interval
system . getHBInterval <= (unsigned char) interval
```

Gets or sets the heartbeat interval to control the amount of heartbeat traffic. This value is set at approximately 1/50th of a second resolution. Heartbeat packets are handled by the underlying system, and are indicated on the brainstem by the blinking green heartbeat LED. UI applications also have Heartbeat indicators. Default value is 12.

### System Name (Get/Set)

```
system . getName <= (unsigned char[]) name
system . setName => (unsigned char[]) name
```

Allows for setting a friendly name to the device with a 32 character limit.

### System Build (Get)

```
system . getBuild <= (unsigned int) build
```

Returns the build number of the current firmware. This is a unique identifier for the specific firmware build.

### System Errors (Get)

```
system . getErrors <= (unsigned int) errors
```

Returns the current system error status. The error value is a bitfield indicating various system-level error conditions.

### Input Current (Get)

```
system . getInputCurrent <= (unsigned int) milliamps
```

Returns the current input current to the system in milliamps. This represents the current being drawn from the power source.

### Input Power Behavior (Get/Set)

```
system . getInputPowerBehavior <= (unsigned char) behavior
system . setInputPowerBehavior => (unsigned char) behavior
```

Returns or sets the input power behavior configuration. This controls how the system responds to different power input conditions.

### Input Power Behavior Config (Get/Set)

```
system . getInputPowerBehaviorConfig <= (unsigned int[]) config  
system . setInputPowerBehaviorConfig => (unsigned int[]) config
```

Returns or sets the detailed input power behavior configuration. This provides fine-grained control over power input behavior.

### Input Power Source (Get)

```
system . getInputPowerSource <= (unsigned char) source
```

Returns the current input power source. Indicates which power source is currently being used to power the system.

### Link Interface (Get/Set)

```
system . getLinkInterface <= (unsigned char) interface  
system . setLinkInterface => (unsigned char) interface
```

Returns or sets the link interface configuration. This controls how the system communicates with external devices.

### Maximum Temperature (Get)

```
system . getMaximumTemperature <= (unsigned int) microcelsius
```

Returns the maximum temperature recorded by the system in microcelsius. This represents the highest temperature the system has reached.

### Minimum Temperature (Get)

```
system . getMinimumTemperature <= (unsigned int) microcelsius
```

Returns the minimum temperature recorded by the system in microcelsius. This represents the lowest temperature the system has reached.

### System Power Limit (Get)

```
system . getPowerLimit <= (unsigned int) milliwatts
```

Returns the current system power limit in milliwatts. This represents the maximum power the system is configured to consume.

### System Power Limit Max (Get/Set)

```
system . getPowerLimitMax <= (unsigned int) milliwatts  
system . setPowerLimitMax => (unsigned int) milliwatts
```

Returns or sets the maximum system power limit in milliwatts. This sets the upper bound for system power consumption.

### System Power Limit State (Get)

```
system . getPowerLimitState <= (unsigned int) state
```

Returns the current power limit state. This indicates whether the system is operating within, approaching, or exceeding power limits.

### Protocol Features (Get)

```
system . getProtocolFeatures <= (unsigned int) features
```

Returns the protocol features supported by the system. This is a bitfield indicating which protocol features are available.

### Router Address Setting (Get)

```
system . getRouterAddressSetting <= (unsigned char) address
```

Returns the router address setting. This indicates the configured router address for the system.

### System Temperature (Get)

```
system . getTemperature <= (unsigned int) microcelsius
```

Returns the current system temperature in microcelsius. This represents the real-time temperature of the system.

### Unregulated Current (Get)

```
system . getUnregulatedCurrent <= (unsigned int) milliamps
```

Returns the current unregulated current in milliamps. This represents the current being drawn from the unregulated power supply.

### Unregulated Voltage (Get)

```
system . getUnregulatedVoltage <= (unsigned int) millivolts
```

Returns the current unregulated voltage in millivolts. This represents the voltage of the unregulated power supply.

### System Uptime (Get)

```
system . getUptime <= (unsigned int) seconds
```

Returns the system uptime in seconds. This represents how long the system has been running since the last reset.

### Log Events (Get)

```
system . logEvents => (void)
```

Initiates logging of system events to a designated slot. This command triggers the system to save event logs to memory.

### Reset Device to Factory Defaults (Set)

```
system . resetDeviceToFactoryDefaults => (void)
```

Resets the device to its factory default configuration. This command restores all settings to their original factory state.

### Route to Me (Get/Set)

```
system . routeToMe <= (unsigned char) enabled  
system . routeToMe => (unsigned char) enabled
```

Returns or sets the “route to me” configuration. When enabled, this allows the system to receive routed packets.

## Code Examples

### C++

```
// Get requests fill the parameter with the current system value upon success.  
// All commands return aErr values when errors are encountered and aErrNone on  
// success.  
  
stem.system.save();  
stem.system.reset();  
stem.system.setLED(1);  
stem.system.getLED(state);  
stem.system.setLEDMaxBrightness(255);
```

(continues on next page)



(continued from previous page)

```

stem.system.getLEDMaxBrightness(value);
stem.system.setBootSlot(5);
stem.system.getBootSlot(slot);
stem.system.getInputVoltage(voltage);
stem.system.getModule(address);
stem.system.getRouter(address);
stem.system.setRouter(6);
stem.system.getModuleBaseAddress(address);
stem.system.setModuleSoftwareOffset(16);
stem.system.getModuleSoftwareOffset(offset);
stem.system.getModuleHardwareOffset(offset);
stem.system.getSerialNumber(serialNumber);
stem.system.getModel(model);
stem.system.getHardwareVersion(hardwareVersion);
stem.system.getVersion(version);
stem.system.getHBInterval(interval);
stem.system.setHBInterval(interval);

```

## Python

```

stem.system.save()
stem.system.reset()
stem.system.setLED(1)
state = stem.system.getLED()
print state.value
stem.system.setLEDMaxBrightness(255);
brightness = stem.system.getLEDMaxBrightness();
print brightness.value
stem.system.setBootSlot(5)
slot = stem.system.getBootSlot()
print slot.value
inputVoltage = stem.system.getInputVoltage()
print inputVoltage.value
module = stem.system.getModule()
print module.value
address = stem.system.getModuleBaseAddress();
print address.value
stem.system.setModuleSoftwareOffset(16);
offset = stem.system.getModuleSoftwareOffset();
print offset.value
offset = stem.system.getModuleHardwareOffset();
print offset.value
serialNumber = stem.system.getSerialNumber()
print serialNumber.value
model = stem.system.getModel()
hardwareVersion = stem.system.getHardwareVersion()
print hardwareVersion.value
version = stem.system.getVersion()
print brainstem.version.get_version_string(version.value)
hbInterval = stem.system.getHBInterval()
print hbInterval.value
stem.system.setHBInterval(12)

```

### 3.1.20 Temperature Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

Certain modules have a temperature measurement available. The temperature entity gives access to these measurements. Check your module datasheet to see if your module has a temperature entity.

#### Temperature (Get)

```
temperature [ index ] . getTemperature => (int) microcelsius
```

Returns a temperature measurement in microcelsius.

#### Temperature Value (Get)

```
temperature [ index ] . getValue <= (int) microcelsius
```

Returns the current temperature measurement in microcelsius. This is the same as `getTemperature` but follows the standard naming convention.

#### Temperature Maximum (Get)

```
temperature [ index ] . getValueMax <= (int) microcelsius
```

Returns the maximum temperature recorded since the last power cycle in microcelsius. This tracks the highest temperature the module has reached.

#### Temperature Minimum (Get)

```
temperature [ index ] . getValueMin <= (int) microcelsius
```

Returns the minimum temperature recorded since the last power cycle in microcelsius. This tracks the lowest temperature the module has reached.

### Code Examples

#### C++

```
// All commands return aErr values when errors are encountered and aErrNone on  
// success. Get commands fill the variable with the returned value.  
  
stem.temperature[0].getTemperature(microcelsius);  
stem.temperature[0].getValue(currentTemp);  
stem.temperature[0].getValueMax(maxTemp);  
stem.temperature[0].getValueMin(minTemp);
```

## Python

```
microcelsius = stem.temperature[0].getTemperature();
print microcelsius.value
currentTemp = stem.temperature[0].getValue();
print currentTemp.value
maxTemp = stem.temperature[0].getValueMax();
print maxTemp.value
minTemp = stem.temperature[0].getValueMin();
print minTemp.value
```

### 3.1.21 Timer Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The Timer entity provides simple scheduling for events in the reflex system. BrainStem modules generally contain between 4 and 8 timers depending on the module. The most common usage is to write a timer reflex and load and enable it on the BrainStem module, then an expiration can be set for the timer, and this reflex code will be executed when the timer expires.

Timers have two modes, single which executes just once and repeat which executes until the expiration is set to zero or the mode is changed to single.

#### Expiration (Get/Set)

```
timer [ index ] . getExpiration <= (unsigned int) microseconds
timer [ index ] . setExpiration => (unsigned int) microseconds
```

Gets or sets the next expiration for this timer in microseconds. If zero, the timer is not currently set to expire in the future.

#### Mode (Get/Set)

```
timer [ index ] . getMode <= (unsigned char) mode
timer [ index ] . setMode => (unsigned char) mode
```

Gets or sets the current timer mode. 1 for repeat mode and 0 for single mode.

When in repeat mode an expiration will occur every n microseconds when n is the expiration setting of the timer. To stop a repeat timer, set its expiration to 0.

When in single mode (The default) setting a non-zero expiration will cause the timer to trigger a single time after the expiration setting in microseconds. If a timer is set, resetting its expiration to zero will clear the timer, and no reflex code will be triggered.

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success. Get commands fill the variable with the returned value.

stem.timer[0].getExpiration(uSecs);
stem.timer[0].setExpiration(1000000); // Sets the timer for 1 second in the future.
stem.timer[0].getMode(mode);
stem.timer[0].setMode(timerModeRepeat) // timerModeRepeat is a convenience define.
```

### Python

```
uSecs = stem.timer[3].getExpiration()
stem.timer[3].setExpiration(1000000) # Sets the timer for 1 second in the future.
mode = stem.timer[3].getMode()
stem.timer[3].setMode(timerModeRepeat) // timerModeRepeat is a convenience define.
```

## 3.1.22 UART Entity

### API Documentation: [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The UART entity is a class which allows a user to configure and control an arbitrary stream of serial data. These streams can represent a number of different transports, including a RS232 external interface, a virtual COM port, and onboard UART interfaces from system components. This entity allows each transport to be configured as either an endpoint, or as a passthrough between transports, similar to a switchboard of a telephone operator.

Products may implement any number of UART entities for the specific capabilities of that product. Consult the product specific reference material for details about the exact capabilities of the product.

### Channel Enable (Get/Set)

```
uart [ index ] . setEnable => (unsigned char) enable
uart [ index ] . getEnable <= (unsigned char) enable
```

Enables the uart channel for the specified index.

### Change Linked Channel (Get/Set)

```
uart [ index ] . setLinkChannel => (unsigned char) index
uart [ index ] . getLinkChannel <= (unsigned char) index
```

Sets a UART channel to pass data to and from another UART channel. If the channel index is set to the current index, the UART channel will operate as an endpoint with a specific protocol.

---

**Note:** Channel linking must be set up on both ends of the connection. That is, setting Channel A's link channel to Channel B will not pass data through until Channel B's link channel is also set to channel A.

---

## Change Protocol (Get/Set)

```
uart [ index ] . setProtocol => (unsigned char) protocol
uart [ index ] . getProtocol <= (unsigned char) protocol
```

Sets the protocol of the UART when operating as an endpoint. The protocols supported by the API are listed below. Note that not all products or indexes are required to support all protocols. The list of protocols that may be assigned can be queried using `getCapableProtocols` and `getAvailableProtocols`.

Enumera- tion	Name	Description
0	Undefined	Entity will drop incoming data and will not send data
1	Extron Responder	Entity will respond to incoming Extron-like commands (see product details)
2	BrainStem Transport	Connection can be opened to this entity from the BrainStem API
3	Extron Initiator	Entity will initiate Extron-like commands on certain events (see product details)
4	Reserved	Reserved for future use
5	Reserved	Reserved for future use
6	Loopback	Entity will write back any received data

```
uart [ index ] . getCapableProtocols => (unsigned int) protocols
```

Returns an integer containing a bitmask where each bit represents a protocol enumeration value that the channel may be able to be configured with. This does not guarantee that attempting to set the protocol will succeed, as there may not be sufficient resources to assign to this channel.

```
uart [ index ] . getAvailableProtocols => (unsigned int) protocols
```

Returns an integer containing a bitmask where each bit represents a protocol enumeration value that the channel both supports and has an available resource to assign for this protocol.

Table 14: UART Protocol Values

Value	Name	Description
0	Undefined	Disabled/Undefined protocol
1	Extron Responder	Extron Compatible Protocol (backward compatibility)
2	Brainstem Transport	Brainstem Transport protocol
6	Loopback	Loopback mode for testing

**Note:** Protocol availability may vary by device. Use `getCapableProtocols()` and `getAvailableProtocols()` to determine which protocols are supported on a specific device and channel.

### Set Link Channel (Get/Set)

```
uart [ index ] . setLinkChannel => (unsigned char) channel
uart [ index ] . getLinkChannel <= (unsigned char) channel
```

Sets or gets the index of another UART Entity that should be linked to this UART. If set to the index of this entity, the channel will not be linked. If set to the index of another UART entity, data will be sent between the two UART entities with no additional processing.

**Note: Linking VCOM to Hardware UART/RS232:** A common use case is to link a VCOM (Virtual COM port) channel to the hardware UART/RS232 connector. This allows USB-based serial communication to be transparently forwarded to the physical RS232 interface. For example, linking UART[1] (VCOM) to UART[0] (hardware RS232) will forward all data received on the VCOM channel directly to the RS232 connector, and vice versa. This is useful for remote serial access or bridging USB serial connections to physical serial devices.

### Set Stop Bits (Get/Set)

```
uart [ index ] . setStopBits => (unsigned char) stopBits
uart [ index ] . getStopBits <= (unsigned char) stopBits
```

Sets or gets the UART stop bit configuration.

Table 15: Stop Bits Values

Value	Description
0	1 Stop Bit
1	1.5 Stop Bits
2	2 Stop Bits

### Set Parity (Get/Set)

```
uart [ index ] . setParity => (unsigned char) parity
uart [ index ] . getParity <= (unsigned char) parity
```

Sets or gets the UART parity configuration.

Table 16: Parity Values

Value	Description
0	No Parity Bit
1	Odd Parity Bit
2	Even Parity Bit
3	Mark Parity Bit
4	Space Parity Bit

### Set Data Bits (Get/Set)

```
uart [ index ] . setDataBits => (unsigned char) dataBits
uart [ index ] . getDataBits <= (unsigned char) dataBits
```

Sets or gets the number of data bits per character for the UART channel.

### Set Flow Control (Get/Set)

```
uart [ index ] . setFlowControl => (unsigned char) flowControl
uart [ index ] . getFlowControl <= (unsigned char) flowControl
```

Sets or gets the UART flow control configuration as a bitmask. Multiple flow control methods can be enabled simultaneously.

Table 17: Flow Control Bits

Bit	Description
0	RTS/CTS Enable
1	DSR/DTR Enable
2	XON/XOFF Enable

### Get Capable Protocols

```
uart [ index ] . getCapableProtocols <= (unsigned int) protocols
```

Returns a bitmask indicating which protocols are capable of being used on this UART channel. The value of the protocol is mapped to the bit index (e.g., protocol 0 is bit 0, protocol 1 is bit 1, etc.).

### Get Available Protocols

```
uart [ index ] . getAvailableProtocols <= (unsigned int) protocols
```

Returns a bitmask indicating which protocols are currently available for use on this UART channel. This takes into account resource availability (e.g., whether Brainstem Transport resources are available). The value of the protocol is mapped to the bit index (e.g., protocol 0 is bit 0, protocol 1 is bit 1, etc.).

### Change Line Coding (Get/Set)

These APIs are all used to set the UART line coding parameters. Note that not all parameters may be changed for certain indexes, nor may all options for line coding be specified.

```
uart [ index ] . setBaudRate => (unsigned int) rate
uart [ index ] . getBaudRate <= (unsigned int) rate
```

Sets the baud rate of the transport in bits per second.

**Note:** A baudrate of 0 will perform automatic baudrate selection if supported on the specified index.

```
uart [ index ] . setParity => (unsigned char) parity
uart [ index ] . getParity <= (unsigned char) parity
```

Sets the parity bit configuration:

Enumeration	Name	Description
0	uartParity_None_Value	Parity bit is not used
1	uartParity_Odd_Value	Parity bit is set to 1 if the number of 1s in the data bits is odd
2	uartParity_Even_Value	Parity bit is set to 1 if the number of 1s in the data bits is even
3	uartParity_Mark_Value	Forces parity bit to a binary 1
4	uartParity_Space_Value	Forces parity bit to a binary 0

```
uart [ index ] . setStopBits => (unsigned char) stopBits
uart [ index ] . getStopBits <= (unsigned char) stopBits
```

Sets the stop bit configuration:

Enumeration	Name	Number of Stop Bits
0	uartStopBits_1_Value	1
1	uartStopBits_1p5_Value	1.5
2	uartStopBits_2_Value	2

```
uart [ index ] . setDataBits => (unsigned char) dataBits
uart [ index ] . getDataBits <= (unsigned char) dataBits
```

Sets the number of bits in a single payload (e.g. 7, 8, 9)

```
uart [ index ] . setFlowControl => (unsigned char) flowControl
uart [ index ] . getFlowControl <= (unsigned char) flowControl
```

Sets the flow control configuration:

Bit	Name	Description
0	uartFlowControl_RTS_CTS_Bit	Enable RTS/CTS Flow Control
1	uartFlowControl_DSR_DTR_Bit	Enable DSR/DTR Flow Control
2	uartFlowControl_XON_XOFF_Bit	Enable XON/XOFF Flow Control



## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success. Get calls will fill the variable with the returned value.

err = stem.uart[0].setEnabled(1);
err = stem.uart[1].setEnabled(1);

err = stem.uart[0].getEnable(&enable);
err = stem.uart[1].getEnable(&enable);

err = stem.uart[0].setBaudRate(115200);
err = stem.uart[0].setProtocol(1); // Extron Compatible Protocol

err = stem.uart[0].setEnabled(0);
err = stem.uart[1].setEnabled(0);

// Loopback Protocol Example
// Configure UART[0] for loopback testing
err = stem.uart[0].setEnabled(1);
err = stem.uart[0].setBaudRate(115200);
err = stem.uart[0].setProtocol(6); // Loopback protocol
// Data sent to UART[0] will be echoed back

// VCOM to Hardware UART Link Example
// Link VCOM channel (UART[1]) to hardware RS232 (UART[0])
err = stem.uart[0].setEnabled(1); // Enable hardware UART
err = stem.uart[1].setEnabled(1); // Enable VCOM channel
err = stem.uart[1].setLinkChannel(0); // Link VCOM to hardware UART
err = stem.uart[0].setLinkChannel(1); // Link hardware UART to VCOM
// Data received on VCOM will be forwarded to RS232, and vice versa
```

### Python

```
err = stem.uart[0].setEnabled(1)
err = stem.uart[1].setEnabled(1)

result = stem.uart[0].getEnable()
print result.value

result = stem.uart[1].getEnable()
print result.value

err = stem.uart[0].setBaudRate(115200)
err = stem.uart[0].setProtocol(1) # Extron Compatible Protocol

err = stem.uart[0].setEnabled(0)
err = stem.uart[1].setEnabled(0)

# Loopback Protocol Example
# Configure UART[0] for loopback testing
err = stem.uart[0].setEnabled(1)
```

(continues on next page)

(continued from previous page)

```

err = stem.uart[0].setBaudRate(115200)
err = stem.uart[0].setProtocol(6)  # Loopback protocol
# Data sent to UART[0] will be echoed back

# VCOM to Hardware UART Link Example
# Link VCOM channel (UART[1]) to hardware RS232 (UART[0])
err = stem.uart[0].setEnabled(1)  # Enable hardware UART
err = stem.uart[1].setEnabled(1)  # Enable VCOM channel
err = stem.uart[1].setLinkChannel(0)  # Link VCOM to hardware UART
# Data received on VCOM will be forwarded to RS232, and vice versa

```

### 3.1.23 USB Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The USB Entity provides the software control interface for USB related features. This entity is supported by BrainStem products which have programmatically controlled USB features.

#### Port Enable/Disable (Set)

```

usb . setPortEnable => (unsigned char) channel
usb . setPortDisable => (unsigned char) channel

```

Enables or Disables the given downstream channel. This call enables or disables data and power together for the given channel.

#### Data Enable/Disable (Set)

```

usb . setDataEnable => (unsigned char) channel
usb . setDataDisable => (unsigned char) channel

```

Enables or Disables data only for given downstream channel. This call enables or disables the usb data (+) and data (-) lines for the given channel.

Calls to this command have no side effects on the power connections for the channel. If power was enabled before the call then it will still be enabled after the call to setDataEnable/Disable.

#### High Speed Data Enable/Disable (Set)

```

usb . setHiSpeedDataEnable => (unsigned char) channel
usb . setHiSpeedDataDisable => (unsigned char) channel

```

Enables or Disables Hi Speed data only for given downstream channel. This call enables or disables the usb data (+) and data (-) lines for the given channel.

Calls to this command have no side effects on the power connections for the channel. If power was enabled before the call then it will still be enabled after the call to setHiSpeedDataEnable/Disable.

### Super Speed Data Enable/Disable (Set)

```
usb . setSuperSpeedDataEnable => (unsigned char) channel
usb . setSuperSpeedDataDisable => (unsigned char) channel
```

Enables or Disables Super Speed (3.0) data only for given downstream channel. This call enables or disables the usb data (+) and data (-) lines for the given channel.

Calls to this command have no side effects on the power connections for the channel. If power was enabled before the call then it will still be enabled after the call to setSuperSpeedDataEnable/Disable.

### Power Enable/Disable (Set)

```
usb . setPowerEnable => (unsigned char) channel
usb . setPowerDisable => (unsigned char) channel
```

Enables or Disables power only for given downstream channel. This call enables or disables the usb power connection for the given channel.

Calls to this command have no side effects on the data connections for the channel. If data was enabled before the call then it will still be enabled after the call to setPowerEnable/Disable.

### port Voltage/Current (Get)

```
usb . getPortVoltage (unsigned char) channel <= (unsigned int) microvolts
usb . getPortCurrent (unsigned char) channel <= (unsigned int) microamps
```

Returns the last read values for Voltage (in microvolts) and Current (in microamps) for the given channel.

### Hub Mode (Get/Set)

```
usb . getHubMode <= (unsigned int) state
usb . setHubMode => (unsigned int) state
```

Gets/Sets the hubs mode in the form of a big mapped representation. See the product datasheet for state mapping. Usually represents the downstream ports power and data lines enable/disable state.

### Hub State (Get)

---

**Note:** This function has been removed in version 2.5. This functionality is moved to [Port State](#).

---

## Hub Error Status (Get)

---

**Note:** This function has been removed in version 2.5. This functionality is moved to [Port Error](#).

---

## Clear Port Error Status (Set)

```
usb . clearPortErrorStatus => (unsigned char) channel
```

Clears the error status for the given channel

## Upstream Mode (Get/Set)

```
usb . getUpstreamMode <= (unsigned char) mode
usb . setUpstreamMode => (unsigned char) mode
```

Gets/Sets the mode of the upstream USB ports. The mode parameter can be defined as the following:

Value	Definitions	Hub Upstream Mode Descriptions
0	usbUpstreamModePort0	Force upstream port 0 to be selected
1	usbUpstreamModePort1	Force upstream port 1 to be selected
2	usbUpstreamModeAuto	Automatically detect upstream port
255	usbUpstreamModeNone	Disconnect both upstream ports

## Upstream State (Get)

```
usb . getUpstreamState <= (unsigned char) state
```

Gets the upstream switch state for the USB upstream ports. Returns none if no ports are plugged in, port 0 if the mode is set correctly and a cable is plugged into port 0, and port 1 if the mode is set correctly and a cable is plugged into port 1

## Enumeration Delay (Get/Set)

```
usb . getEnumerationDelay <= (unsigned int) ms_delay
usb . setEnumerationDelay => (unsigned int) ms_delay
```

Gets/Sets the inter-port enumeration delay in milliseconds. The enumeration delay sequentially enables data and power to downstream ports after the defined delay time. After setting and saving this parameter all downstream ports will be initially disabled upon system power-on or reset. Similarly, if there is no upstream connection, all downstream ports will be disabled. When an upstream connection is applied, or after the system boots, the system will wait for the defined delay time and enable the lowest port number. The system will then wait for the defined delay time and then enable the next highest port. This behavior repeats until all ports are enabled.

Inconsistent behavior from race conditions may occur if enumeration delay is used in conjunction with Reflex programs which also manipulate the downstream port states. Care should be taken to ensure no conflicts between the enumeration delay and Reflex programs.

---

**Note:** This setting should be saved with a `stem.system.save()` call.

---

### Upstream Boost Mode (Get/Set)

```
usb . getUpstreamBoostMode <= (unsigned char) setting
usb . setUpstreamBoostMode => (unsigned char) setting
```

Gets/Sets the upstream boost mode. Boost mode increase the drive strength of the USB data signals (power signals are not changed). Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through “pogo” pins. Modes: 0 = no boost, 1 = 4% boost, 2 = 8% boost, 3 = 12% boost.

---

**Note:** This setting is not applied until a `stem.system.save()` call and power cycle of the hub. Setting is then persistent until changed or the hub is reset. After reset, default value of 0% boost is restored.

---

### Down Stream Boost Mode (Get/Set)

```
usb . getDownstreamBoostMode <= (unsigned char) setting
usb . setDownstreamBoostMode => (unsigned char) setting
```

Gets/Sets the Downstream boost mode. Boost mode increase the drive strength of the USB data signals (power signals are not changed). Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through “pogo” pins. Modes: 0 = no boost, 1 = 4% boost, 2 = 8% boost, 3 = 12% boost.

---

**Note:** This setting is not applied until a `stem.system.save()` call and power cycle of the hub. Setting is then persistent until changed or the hub is reset. After reset, default value of 0% boost is restored.

---

### Port Current Limit (Get/Set)

```
usb . setPortCurrentLimit => (unsigned char) channel, (unsigned int) microamps
usb . getPortCurrentLimit (unsigned char) channel <= (unsigned int) microamps
```

Gets/Sets the current limit for the downstream channel. There are a number of settings for current limits ranging from 100 mAmps to 2.5 amps. See the USB hub datasheet for specific settings information.

### Port Mode setting (Get/Set)

```
usb . setPortMode => (unsigned char) channel, (unsigned char) mode  
usb . getPortMode (unsigned char) channel <= (unsigned char) mode
```

Gets/Sets the Port mode for the channel specified. The portmode is a bitmapped setting. Device specific mode options are listed in the data-sheet. There is a unified listing of all port mode bits at *usbPortMode* within *usb\_entity*.

### Port State (Get)

```
usb . getPortState (unsigned char) channel <= (unsigned char) mode
```

Gets the Port state for the channel specified. State options for the device are listed in the device data-sheet.

### Port Error (Get)

```
usb . getPortError (unsigned char) channel <= (unsigned char) mode
```

Gets the Port error status for the channel specified. Error status for the device are listed in the device data-sheet.

### System Temperature (Get)

---

**Note:** This function has been removed in version 2.5. This functionality is moved to [temperature](#).

---

### Connect Mode setting (Get/Set)

```
usb . setConnectMode => (unsigned char) channel, (unsigned char) mode  
usb . getConnectMode (unsigned char) channel <= (unsigned char) mode
```

Gets/Sets the connect mode for the channel specified. Check the device datasheet for more information regarding the use of this function.

### CC1/CC2 Enable/Disable setting (Get/Set)

```
usb . setCC[1|2]Enable => (unsigned char) channel, (unsigned char) bEnable  
usb . getCC[1|2]Enable (unsigned char) channel <= (unsigned char) bEnable
```

Gets or sets the enabled status of the CC1/CC2 lines.

### CC1/CC2 Current (Get)

```
usb . getCC[1|2]Current (unsigned char) channel <= (unsigned char) microAmps
```

Gets the current on the CC1/CC2 line in microAmps.

### CC1/CC2 Voltage (Get)

```
usb . getCC[1|2]Voltage (unsigned char) channel <= (unsigned char) microVolts
```

Gets the voltage on the CC1/CC2 lines in microVolts.

### SBU Enable/Disable setting (Get/Set)

```
usb . setSBUEnable => (unsigned char) channel, (unsigned char) bEnable
usb . getSBUEnable (unsigned char) channel <= (unsigned char) bEnable
```

Gets or sets the enabled status of the SBU lines.

### Cable Flip (Get/Set)

```
usb . getCableFlip (unsigned char) channel <= (unsigned char) flipped
usb . setCableFlip => (unsigned char) channel, (unsigned char) flipped
```

Gets or sets the cable flip state for the channel specified. This indicates whether the USB-C cable is flipped and affects signal routing. Change the orientation of the common side to Mux side cable connection.

### Alt Mode Configuration (Get/Set)

```
usb . getAltModeConfig (unsigned char) channel <= (unsigned int) configuration
usb . setAltModeConfig => (unsigned char) channel, (unsigned int) configuration
```

Gets or sets the alternate mode configuration for the channel specified. This controls which alternate mode is active on the port.

### Downstream Data Speed (Get)

```
usb . getDownstreamDataSpeed (unsigned char) channel <= (unsigned char) speed
```

Returns the data speed of the downstream device for the channel specified. This indicates the USB speed at which the connected device is operating.

Table 18: Downstream Data Speed Options

Value	Name	Description
0	Unknown	Unknown or not detected speed
1	Hi-Speed	USB 2.0 Hi-Speed (480 Mbps)
2	SuperSpeed	USB 3.0 SuperSpeed (5 Gbps)
3	Low-Speed	USB 1.1 Low-Speed (1.5 Mbps)

### SBU1/SBU2 Voltage (Get)

```
usb . getSBU[1|2]Voltage (unsigned char) channel <= (unsigned int) microvolts
```

Returns the voltage on the SBU[1|2] line in microvolts for the channel specified. SBU (Sideband Use) lines are used for alternate modes in USB-C.

### SBU Enable (Get/Set)

```
usb . getSBUEnable (unsigned char) channel <= (unsigned char) enabled
usb . setSBUEnable => (unsigned char) channel, (unsigned char) enabled
```

Gets or sets the enabled status of the SBU lines for the channel specified. When enabled, the SBU lines are active for alternate mode communication.

## Code Examples

### C++

```
// All commands return aErr values when errors are encountered and aErrNone on
// success. Get commands fill the variable with the returned value.

stem.usb.setPortEnable(1);
stem.usb.setPortDisable(2);
stem.usb.setDataEnable(0);
...
```

### Python

```
stem.usb.setPortEnable(1)
stem.usb.setPortDisable(2)
stem.usb.setDataEnable(0)
stem.usb.setDataDisable(1)
stem.usb.setPowerEnable(0)
stem.usb.setPowerDisable(0)
microamps = stem.usb.getPortCurrent(0)
print microamps.value
microvolts = stem.usb.getPortVoltage(0)
print microvolts.value
```

(continues on next page)



(continued from previous page)

```
stem.usb.setPortCurrentLimit(0, limit_setting)
state = stem.usb.getHubState()
print state.value
...
```

### 3.1.24 USB System Entity

**API Documentation:** [\[cpp\]](#) [\[python\]](#) [\[.NET\]](#) [\[CCA\]](#) [\[REST\]](#)

The USBSystem class provides high level control of the lower level *Port Entity*

#### Upstream Connection (Get/Set)

```
usbssystem . setUpstream => (unsigned char) enable
usbssystem . getUpstream <= (unsigned char) enable
```

Many acroname products have multiple upstream port selections. This function is used to access and control that functionality.

#### Upstream Connection HighSpeed (Get/Set)

```
usbssystem . setUpstreamHS => (unsigned char) enable
usbssystem . getUpstreamHS <= (unsigned char) enable
```

Many acroname products have multiple upstream port selections, some even have the ability to move just the HighSpeed or SuperSpeed signals. This function is used to access and control that functionality for the HighSpeed signals only.

#### Upstream Connection SuperSpeed (Get/Set)

```
usbssystem . setUpstreamSS => (unsigned char) enable
usbssystem . getUpstreamSS <= (unsigned char) enable
```

Many acroname products have multiple upstream port selections, some even have the ability to move just the HighSpeed or SuperSpeed signals. This function is used to access and control that functionality for the SuperSpeed signals only.

#### Enumeration Delay (Get/Set)

```
usbssystem . getEnumerationDelay <= (unsigned int) ms_delay
usbssystem . setEnumerationDelay => (unsigned int) ms_delay
```

Gets/Sets the inter-port enumeration delay in milliseconds. The enumeration delay sequentially enables data and power to downstream ports after the defined delay time. After setting and saving this parameter all downstream ports will be initially disabled upon system power-on or reset. Similarly, if there is no upstream connection, all downstream ports will be disabled. When an upstream connection is applied, or after the system boots, the system will wait for the defined delay time and enable the lowest port number. The system will then wait for the defined delay time and then enable the next highest port. This behavior repeats until all ports are enabled.

Inconsistent behavior from race conditions may occur if enumeration delay is used in conjunction with Reflex programs which also manipulate the downstream port states. Care should be taken to ensure no conflicts between the enumeration delay and Reflex programs.

### Enabled List (Get/Set)

```
usbsystem . getEnabledList <= (unsigned int) list
usbsystem . setEnabledList => (unsigned int) list
```

The enabled list function provides state and control over all lower ports enables. It is equivalent to calling calling get/set enabled from the [PortClass](#) on all ports at once. The returned variable is in a bit mapped format. Please see the product data sheet for specific bit meanings.

### Mode List (Get/Set)

```
usbsystem . getModeList <= (unsigned int [NUM_PORTS]) list
usbsystem . setModeList => (unsigned int [NUM_PORTS]) list
```

The mode list function gives you access and control to all lower level port modes. It is equivalent to calling get/set mode from the [PortClass](#) on all ports at once.

### State List (Get)

```
usbsystem . getModeList <= (unsigned int [NUM_PORTS]) list
usbsystem . setModeList => (unsigned int [NUM_PORTS]) list
```

The state list function gives you access and control to all lower level port states. It is equivalent to calling get/set state from the [PortClass](#) on all ports at once.

### Power Behavior (Get/Set)

```
usbsystem . getPowerBehavior <= (unsigned char) behavior
usbsystem . setPowerBehavior => (unsigned char) behavior
```

The power behavior controls how power will be allocated to each lower level port. This behavior comes into play when the requested power of the system exceeds the available power. i.e. first come first server, even distribution, priority list. See the product datasheet for specific implementations.

### Power Behavior Config (Get/Set)

```
usbsystem . getPowerBehaviorConfig <= (unsigned int) config
usbsystem . setPowerBehaviorConfig => (unsigned int) config
```

Some power behaviors require a list of parameters in order to operate. For instance in priority list mode the user can supply a list of port indexes to priorities for power. This feature is product specific and users should consult the manual for further details.

### Data Role Behavior (Get/Set)

```
usbsystem . getDataRoleBehavior <= (unsigned char) behavior
usbsystem . setDataRoleBehavior => (unsigned char) behavior
```

Some Type-C ports are capable of being dual role ports (DRP). Meaning they are capable of being either a host or a device. The behavior defined here will determine if that is allowed, what happens if it is, and what occurs when a host goes away. Examples are: first come first serve, priority list, static/fixed selection, etc. See the product datasheet for specific implementations.

### Data Role Behavior Config (Get/Set)

```
usbsystem . getDataRoleBehaviorConfig <= (unsigned int) config
usbsystem . setDataRoleBehaviorConfig => (unsigned int) config
```

Many of the data role behaviors require a list of parameters in order to operate. For instance in a static/fixed mode the config would indicate what port is the upstream connection.

### Data HighSpeed Max Datarate (Get/Set)

```
usbsystem . setDataHSMMaxDatarate <= (unsigned int) config
usbsystem . getDataHSMMaxDatarate => (unsigned int) config
```

The Max Datarate APIs will limit the device to a maximum specified datarate for the specific signal set. This API modifies the max datarate on the USB HighSpeed signals.

Enumeration	Name	Description
0	None	Configure HighSpeed Signals to no connection
1	Low Speed	Configure HighSpeed Signals to a maximum datarate of 1.5Mbps
2	Full Speed	Configure HighSpeed Signals to a maximum datarate of 12Mbps
3	High Speed	Configure HighSpeed Signals to a maximum datarate of 480Mbps

### Data SuperSpeed Max Datarate (Get/Set)

```
usbsystem . setDataSSMaxDatarate <= (unsigned int) config
usbsystem . getDataSSMaxDatarate => (unsigned int) config
```

The Max Datarate APIs will limit the device to a maximum specified datarate for the specific signal set. This API modifies the max datarate on the USB SuperSpeed signals.

Enumeration	Name	Description
0	None	Configure SuperSpeed Signals to no connection
1	Super Speed	Configure SuperSpeed Signals to a maximum datarate of 5Gbps
2	Super Speed Plus	Configure SuperSpeed Signals to a maximum datarate of 10Gbps

## Override (Get/Set)

```
usbsystem . getOverride <= (unsigned int) config  
usbsystem . setOverride => (unsigned int) config
```

The system inherently goes towards compliant behavior, in some conditions you may not want compliant behavior and this is what the override bit field allows. There are the following override bits that can be set.

Bit	Name	Description
0	Auto Vbus Toggle Disable	This bit is used to disable the auto vbus toggle behavior on re-enumeration of the upstream port.
1	Vbus Detect Disable	This bit is used to disable the requirement of an upstream connection for enabling the hub chip.

## 3.2 Python API Reference

Welcome to the BrainStem Python API reference documentation. This documentation covers the Python Acroname BrainStem module. This reference assumes that you understand the BrainStem system. If you would like to get started using BrainStem, please see the following sections of the Reference documentation.

- [BrainStem Overview](#)
- [BrainStem Terminology](#)
- [Getting Started with the BrainStem.](#)

Next check out the python [Getting Started](#) section.

### 3.2.1 Getting (Quickly) Started

The BrainStem python package allows you to interact with a collection of BrainStem modules from python. The API is similar to both the C++ and Reflex API's, with a few significant differences. The remainder of this section details the structure and functionality of the python API.

Most modern operating systems come with all the tools needed to immediately install the BrainStem python libraries and create python based applications. As such, simply download the [latest development package](#)<sup>104</sup>, and then use pip to install the library.

```
#> cd <path to extracted download>/development/python
#> pip install brainstem-*.whl
```

If you see errors from these commands, check the requirements and details below.

#### Requirements

The brainstem python package is currently compatible with python 2.7 and python 3.6 through 3.10. When using 2.7 it is recommended that your python version be at least 2.7.9.

#### pip

The brainstem python package is installed via a platform specific wheel. To install these wheels you need a relatively up to date version of pip and setuptools. If you don't have pip installed you can install it by following the instructions at;

<https://pip.pypa.io/en/latest/installing.html>

If you do have pip installed it may be helpful to update pip. To do so run the following command from your command line. You may need to have administrator privileges on macOS and Linux. Instructions for updating pip can be found at;

<https://pip.pypa.io/en/latest/installing/#upgrade-pip>

<sup>104</sup> <https://acroname.com/software/brainstem-development-kit>

## libffi

The Brainstem python library relies on libffi, on macOS and Windows this is generally available via pip. On Linux you may need to install libffi via your distro's package manager.

## Python development headers

Also on Linux, you may need to install the development package for python via your distro's package manager before you can install.

## CentOS package manager

On CentOS and yum based distros the following command will install the required packages.

```
$> sudo yum install libffi-devel python-devel
```

## Installation

Install the python package.

---

**Note:** '#>' indicates that the command must be run with admin privileges on MacOS and Linux, either via sudo or su.

---

```
#> pip install brainstem-*.whl
```

If you need to uninstall the library, the easiest way to do so is with pip.

```
$> pip uninstall brainstem
```

## A Tour of the Python Example

To run the example, go to Development/python in the "BrainStem2 Development Kit" package and type:

```
$> python brainstem_example.py
```

The example requires that you have a USB BrainStem link module connected to your host computer. If you see the following message, you probably don't have a module connected:

```
Creating USB stem and connecting to first module found  
Could not find a module.
```

Once the example starts running, it will connect to the first USBStem it finds connected to your computer and then blink the user LED on the module.

```
$> python brainstem_example.py  
Creating USB stem and connecting to first module found  
Connecting to Module with serial number: 0x40F5849A  
Flashing the user LED
```

The following is a brief introduction interacting with the brainstem via the python interactive interpreter. The first step is to import some modules that we'll need later. There are multiple ways to import the brainstem package. For this example we will use the simplest method.

```
>>> import brainstem
```

See the *Package Structure* <package> section of the python reference for more information about the brainstem package, and the modules it includes.

Next we discover a USBStem module, and connect to it.

```
>>> spec = brainstem.discover.findFirstModule(brainstem.link.Spec.USB)
>>> print spec
LinkType: USB(serial: 0x40F5849A, module: 0)
>>> stem = brainstem.stem.USBStem()
>>> stem.connect(0x40F5849A)
```

Information about specific modules can be found in the *Modules* <Modules> section.

Now that we have created a *USBStem*, we can turn on the user LED using the *system* entity:

```
>>> stem.system.setLED(1)
```

Finally lets blink the LED in a loop.

```
>>> from time import sleep
>>> for i in range(0,100):
...     err = stem.system.setLED(i % 2)
...     if err != 0:
...         print "error %d"% err
...         break
...     sleep(0.5)
...
>>>
```

As you can see the call to setLED returns an error value. In this case that is an error value, that will be 0 on success and some other number if there is an error. The brainstem library generally avoids raising exceptions, and instead passes information via result objects, or result error codes. More information about these errors, and the result object can be found in the *Result* <result> section of the python reference

Help is available from within the python interpreter, calling help() on a stem or other object will yield context specific documentation.

```
>>> import brainstem
>>> help(brainstem.stem.USBStem)
Help on class USBStem in module brainstem.stem:

class USBStem(brainstem.module.Module)
|   Concrete Module implementation for 40Pin and MTM USBStem modules
|
|   USBStem modules contain Analogs, Digital IO's, and I2C entities
|   in addition to the system entity.
|
|   Method resolution order:
|       USBStem
...

```

Enjoy!

The Acroname Team.

## Support

If you are having issues, please let us know. We have a mailing list located at: [support@acroname.com](mailto:support@acroname.com)

### 3.2.2 Acroname Modules

#### Quick Access:

- *USBHub3c*
- *USBHub3p*
- *USBHub2x4*
- *USBCSwitchPro*
- *USBCSwitch*
- *MTMDAQ2*
- *MTMEtherStem*
- *MTMIOSerial*
- *MTMLOAD1*
- *MTMPM1*
- *MTMRelay*
- *MTMUSBStem*
- *MTMDAQ1*
- *EtherStem*
- *USBStem*

Each type of BrainStem module is represented by a corresponding concrete Module implementation. The following classes are instantiated to allow communication through to the corresponding BrainStem module hardware.

The instantiation and subsequent connection to each module is as follows

```
>>> stem = USBStem()  
# 0XXXXXXXXX is the serial number of the module.  
>>> stem.connect(0XXXXXXXXX)
```

Connecting to the BrainStem module can take multiple forms, the simplest way to connect when you know the module's serial number is to call connect with the serial number, as in the above code snippet. If you don't know the serial number of the module, you can perform a discovery of the modules currently connected and print that information. For details of the connection functions API please see [Connections](#) in this reference.



**USBHub3c**

```
class brainstem.stem.USBHub3c (address=6, enable_auto_networking=True, model=0)
```

Concrete Module implementation for the USBHub3c.

The module contains the USB entity as well as the following.

**Entities:**

- system
- app[0-3]
- pointers[0-3]
- store[0-2]
- temperature[0-2]
- timer[0-7]
- hub
- hub.port[0-7]
- rail[0-6]
- pd[0-7]
- usb
- uart[0-1]

**Useful Constants:**

- BASE\_ADDRESS (6)
- NUMBER\_OF\_STORES (2)
- NUMBER\_OF\_INTERNAL\_SLOTS (12)
- NUMBER\_OF\_RAM\_SLOTS (1)
- NUMBER\_OF\_TIMERS (8)
- NUMBER\_OF\_APPS (4)
- NUMBER\_OF\_POINTERS (4)
- NUMBER\_OF\_USB\_PORTS (8)
- NUMBER\_OF\_UARTS (2)
- NUMBER\_OF\_RAILS (7)
- STORE\_INTERNAL\_INDEX (0)
- STORE\_RAM\_INDEX (1)
- STORE\_EEPROM\_INDEX (2)
- PORT\_ID\_CONTROL\_INDEX (6)
- PORT\_ID\_POWER\_C\_INDEX (7)
- NUMBER\_OF\_PORTS (8)

```
class Hub (module, index)
```

**connect** (*serial\_number*, *\*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in brainstem.result

**i2c**

usb entity adds minimal legacy support

[Back to the top](#)

## USBHub3p

**class** brainstem.stem.USBHub3p (*address=6, enable\_auto\_networking=True, model=0*)

Concrete Module implementation for the USBHub3p.

The module contains the USB entity as well as the following.

**Entities:**

- system
- app[0-3]
- pointers[0-3]
- usb
- store[0-1]
- temperature
- timer[0-7]

**Useful Constants:**

- BASE\_ADDRESS (6)
- NUMBER\_OF\_STORES (2)
- NUMBER\_OF\_INTERNAL\_SLOTS (12)
- NUMBER\_OF\_RAM\_SLOTS (1)
- NUMBER\_OF\_TIMERS (8)
- NUMBER\_OF\_APPS (4)
- NUMBER\_OF\_POINTERS (4)
- NUMBER\_OF\_DOWNSTREAM\_USB (8)
- NUMBER\_OF\_UPSTREAM\_USB (2)
- NUMBER\_OF\_PORTS (12)

Bit defines for port state UInt32 use brainstem.BIT(X) from aDefs.h to get bit value. i.e if (state & brainstem.BIT(aUSBHUB3P\_USB\_VBUS\_ENABLED))

- aUSBHUB3P\_USB\_VBUS\_ENABLED (0)

- aUSBHUB3P\_USB2\_DATA\_ENABLED (1)
- aUSBHUB3P\_USB3\_DATA\_ENABLED (3)
- aUSBHUB3P\_USB\_SPEED\_USB2 (11)
- aUSBHUB3P\_USB\_SPEED\_USB3 (12)
- aUSBHUB3P\_USB\_ERROR\_FLAG (19)
- aUSBHUB3P\_USB2\_BOOST\_ENABLED (20)
- aUSBHUB3P\_DEVICE\_ATTACHED (23)

Bit defines for port error UInt32 use brainstem.BIT(X) from aDefs.h to get bit value. i.e if (error & brainstem.BIT(aUSBHUB3P\_ERROR\_VBUS\_OVERCURRENT))

- aUSBHUB3P\_ERROR\_VBUS\_OVERCURRENT (0)
- aUSBHUB3P\_ERROR\_VBUS\_BACKDRIVE (1)
- aUSBHUB3P\_ERROR\_HUB\_POWER (2)
- aUSBHUB3P\_ERROR\_OVER\_TEMPERATURE (3)

**class** Hub (*module, index*)

**connect** (*serial\_number, \*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in brainstem.result

[Back to the top](#)

## USBHub2x4

**class** brainstem.stem.USBHub2x4 (*address=6, enable\_auto\_networking=True, model=0*)

Concrete Module implementation for the USBHub2x4.

The module contains the USB entity as well as the following.

**Entities:**

- system
- app[0-3]
- pointer[0-3]
- usb
- mux
- store[0-1]
- temperature
- timer[0-7]

**Useful Constants:**

- `BASE_ADDRESS` (6)
- `NUMBER_OF_STORES` (3)
- `NUMBER_OF_INTERNAL_SLOTS` (12)
- `NUMBER_OF_RAM_SLOTS` (1)
- `NUMBER_OF_TIMERS` (8)
- `NUMBER_OF_APPS` (4)
- `NUMBER_OF_POINTERS` (4)
- `NUMBER_OF_DOWNSTREAM_USB` (4)
- `NUMBER_OF_UPSTREAM_USB` (2)
- `NUMBER_OF_PORTS` (6)

Bit defines for port error UInt32 use `brainstem.BIT(X)` from `aDefs.h` to get bit value. i.e if (error & `brainstem.BIT(aUSBHUB2X4_USB_VBUS_ENABLED)`)

- `aUSBHUB2X4_USB_VBUS_ENABLED` (0)
- `aUSBHUB2X4_USB2_DATA_ENABLED` (1)
- `aUSBHUB2X4_USB_ERROR_FLAG` (19)
- `aUSBHUB2X4_USB2_BOOST_ENABLED` (20)
- `aUSBHUB2X4_DEVICE_ATTACHED` (23)
- `aUSBHUB2X4_CONSTANT_CURRENT` (24)

Bit defines for port error UInt32 use `brainstem.BIT(X)` from `aDefs.h` to get bit value. i.e if (error & `brainstem.BIT(aUSBHUB3P_ERROR_VBUS_OVERCURRENT)`)

- `aUSBHUB2X4_ERROR_VBUS_OVERCURRENT` (0)
- `aUSBHUB2X4_ERROR_OVER_TEMPERATURE` (3)
- `aUSBHub2X4_ERROR_DISCHARGE` (4)

**class** `Hub` (*module, index*)

**connect** (*serial\_number, \*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

[Back to the top](#)

## USBCSwitchPro

```
class brainstem.stem.USBCSwitchPro (address=16, enable_auto_networking=True,  
                                     model=0)
```

Concrete Module implementation for the USBCSwitchPro.

The module contains the USB entity as well as the following.

### Entities:

- system
- rail[0]
- store[0-2]
- temperature[0-4]
- i2c[0]
- usb
- uart[0-1]
- port[0-5]
- pd[0-5]
- mux
- digital[0]

### Useful Constants:

- BASE\_ADDRESS (16)
- NUMBER\_OF\_STORES (3)
- NUMBER\_OF\_INTERNAL\_SLOTS (12)
- NUMBER\_OF\_RAM\_SLOTS (1)
- NUMBER\_OF\_TEMPERATURES (5)
- NUMBER\_OF\_I2CS (1)
- NUMBER\_OF\_USB (1)
- NUMBER\_OF\_UARTS (2)
- NUMBER\_OF\_PORTS (6)
- NUMBER\_OF\_POWER\_DELIVERY\_PORTS (6)
- NUMBER\_OF\_MUXS (1)
- NUMBER\_OF\_DIGITALS (1)
- PORT\_ID\_0 (0)
- PORT\_ID\_1 (1)
- PORT\_ID\_2 (2)
- PORT\_ID\_3 (3)
- PORT\_ID\_COMMON (4)
- PORT\_ID\_CONTROL (5)

**connect** (*serial\_number*, *\*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in brainstem.result

[Back to the top](#)

## USBCSwitch

```
class brainstem.stem.USBCSwitch (address=6, enable_auto_networking=True,  
                                model=0)
```

Concrete Module implementation for the USBC-Switch.

The module contains the USB entity as well as the following.

**Entities:**

- system
- usb
- mux
- store[0-1]
- equalizer[0-1]

**Useful Constants:**

- BASE\_ADDRESS (6)
- NUMBER\_OF\_STORES (3)
- NUMBER\_OF\_INTERNAL\_SLOTS (12)
- NUMBER\_OF\_RAM\_SLOTS (1)
- NUMBER\_OF\_USB (1)
- NUMBER\_OF\_MUXS (1)
- NUMBER\_OF\_EQUALIZERS (2)

Bit defines for port state UInt32 use brainstem.BIT(X) from aDefs.h to get bit value. i.e if (state & brainstem.BIT(usbPortStateVBUS))

- usbPortStateVBUS (0)
- usbPortStateUSB2A (1)
- usbPortStateUSB2B (2)
- usbPortStateSBU (3)
- usbPortStateSS1 (4)
- usbPortStateSS2 (5)
- usbPortStateCC1 (6)

- usbPortStateCC2 (7)
- usbPortStateCCFlip (14)
- usbPortStateSSFlip (15)
- usbPortStateSBUFlip (16)
- usbPortStateUSB2Flip (17)
- usbPortStateCC1Inject (26)
- usbPortStateCC2Inject (27)
- usbPortStateCC1Detect (28)
- usbPortStateCC2Detect (29)
- usbPortStateCC1LogicState (30)
- usbPortStateCC2LogicState (31)
- TRANSMITTER\_2P0\_40mV (0)
- TRANSMITTER\_2P0\_60mV (1)
- TRANSMITTER\_2P0\_80mV (2)
- TRANSMITTER\_2P0\_0mV (3)
- MUX\_1db\_COM\_0db\_900mV (0)
- MUX\_0db\_COM\_1db\_900mV (1)
- MUX\_1db\_COM\_1db\_900mV (2)
- MUX\_0db\_COM\_0db\_900mV (3)
- MUX\_0db\_COM\_0db\_1100mV (4)
- MUX\_1db\_COM\_0db\_1100mV (5)
- MUX\_0db\_COM\_1db\_1100mV (6)
- MUX\_2db\_COM\_2db\_1100mV (7)
- MUX\_0db\_COM\_0db\_1300mV (8)
- LEVEL\_1\_2P0 (0)
- LEVEL\_2\_2P0 (1)
- LEVEL\_1\_3P0 (0)
- LEVEL\_2\_3P0 (1)
- LEVEL\_3\_3P0 (2)
- LEVEL\_4\_3P0 (3)
- LEVEL\_5\_3P0 (4)
- LEVEL\_6\_3P0 (5)
- LEVEL\_7\_3P0 (6)
- LEVEL\_8\_3P0 (7)
- LEVEL\_9\_3P0 (8)
- LEVEL\_10\_3P0 (9)

- LEVEL\_11\_3P0 (10)
- LEVEL\_12\_3P0 (11)
- LEVEL\_13\_3P0 (12)
- LEVEL\_14\_3P0 (13)
- LEVEL\_15\_3P0 (14)
- LEVEL\_16\_3P0 (15)
- EQUALIZER\_CHANNEL\_BOTH (0)
- EQUALIZER\_CHANNEL\_MUX (1)
- EQUALIZER\_CHANNEL\_COMMON (2)
- NO\_DAUGHTERCARD (0)
- PASSIVE\_DAUGHTERCARD (1)
- REDRIVER\_DAUGHTERCARD (2)
- UNKNOWN\_DAUGHTERCARD (3)

**connect** (*serial\_number*, *\*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in brainstem.result

[Back to the top](#)

## MTMDAQ2

**class** brainstem.stem.**MTMDAQ2** (*address=10, enable\_auto\_networking=True, model=0*)

Concrete Module implementation for MTM-DAQ-2 module

**MTM-DAQ-2 modules contain contain the following entities:**

- system
- app[0-3]
- digital[0-1]
- analog[0-19]
- i2c[0]
- pointer[0-3]
- store[0-1]
- timer[0-7]

**Useful Constants:**

- BASE\_ADDRESS (10)
- NUMBER\_OF\_STORES (2)



- NUMBER\_OF\_INTERNAL\_SLOTS (12)
- NUMBER\_OF\_RAM\_SLOTS (1)
- NUMBER\_OF\_DIGITALS (2)
- NUMBER\_OF\_ANALOGS (20)
- NUMBER\_OF\_I2C (1)
- NUMBER\_OF\_POINTERS (4)
- NUMBER\_OF\_TIMERS (8)
- NUMBER\_OF\_APPS (4)
- ANALOG\_RANGE\_P0V064N0V064 (0)
- ANALOG\_RANGE\_P0V64N0V64 (1)
- ANALOG\_RANGE\_P0V128N0V128 (2)
- ANALOG\_RANGE\_P1V28N1V28 (3)
- ANALOG\_RANGE\_P1V28N0V0 (4)
- ANALOG\_RANGE\_P0V256N0V256 (5)
- ANALOG\_RANGE\_P2V56N2V56 (6)
- ANALOG\_RANGE\_P2V56N0V0 (7)
- ANALOG\_RANGE\_P0V512N0V512 (8)
- ANALOG\_RANGE\_P5V12N5V12 (9)
- ANALOG\_RANGE\_P5V12N0V0 (10)
- ANALOG\_RANGE\_P1V024N1V024 (11)
- ANALOG\_RANGE\_P10V24N10V24 (12)
- ANALOG\_RANGE\_P10V24N0V0 (13)
- ANALOG\_RANGE\_P2V048N0V0 (14)
- ANALOG\_RANGE\_P4V096N0V0 (15)
- ANALOG\_BULK\_CAPTURE\_MAX\_HZ (500000)
- ANALOG\_BULK\_CAPTURE\_MIN\_HZ (1)

**connect** (*serial\_number*, **\*\*kwargs**)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

[Back to the top](#)

## MTMEtherStem

```
class brainstem.stem.MTMEtherStem (address=4, enable_auto_networking=True,  
                                     model=0)
```

Concrete Module implementation for MTM EtherStem modules

### USBStem modules contain the following entities:

- system
- analog[0-3]
- app[0-3]
- clock
- digital[0-14]
- i2c[0-1]
- pointer[0-3]
- servo[0-7]
- store[0-2]
- timer[0-7]

### Useful Constants:

- BASE\_ADDRESS (4)
- NUMBER\_OF\_STORES (3)
- NUMBER\_OF\_INTERNAL\_SLOTS (12)
- NUMBER\_OF\_RAM\_SLOTS (1)
- NUMBER\_OF\_SD\_SLOTS (255)
- NUMBER\_OF\_ANALOGS (4)
- DAC\_ANALOG\_INDEX (3)
- FIXED\_DAC\_ANALOG (False)
- NUMBER\_OF\_DIGITALS (15)
- NUMBER\_OF\_I2C (2)
- NUMBER\_OF\_POINTERS (4)
- NUMBER\_OF\_TIMERS (8)
- NUMBER\_OF\_APPS (4)
- NUMBER\_OF\_SERVOS (8)
- NUMBER\_OF\_SERVO\_OUTPUTS (4)
- NUMBER\_OF\_SERVO\_INPUTS (4)
- ANALOG\_BULK\_CAPTURE\_MAX\_HZ (200000)
- ANALOG\_BULK\_CAPTURE\_MIN\_HZ (7000)

**connect** (*serial\_number*, *\*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in brainstem.result

[Back to the top](#)

## MTMIOSerial

```
class brainstem.stem.MTMIOSerial (address=8, enable_auto_networking=True,  
                                   model=0)
```

Concrete Module implementation for MTM-IO-Serial module

**MTM-IO-SERIAL modules contain contain the following entities:**

- system
- app[0-3]
- digital[0-8]
- i2c[0]
- pointer[0-3]
- servo[0-7]
- signal[0-4]
- store[0-1]
- temperature
- timer[0-7]
- uart[0-3]
- rail[0-2]

**Useful Constants:**

- BASE\_ADDRESS (8)
- NUMBER\_OF\_STORES (2)
- NUMBER\_OF\_INTERNAL\_SLOTS (12)
- NUMBER\_OF\_RAM\_SLOTS (1)
- NUMBER\_OF\_DIGITALS (8)
- NUMBER\_OF\_I2C (1)
- NUMBER\_OF\_POINTERS (4)
- NUMBER\_OF\_TIMERS (8)
- NUMBER\_OF\_APPS (4)
- NUMBER\_OF\_UART (1)

- NUMBER\_OF\_RAILS (3)
- NUMBER\_OF\_SERVOS (8)
- NUMBER\_OF\_SERVO\_OUTPUTS (4)
- NUMBER\_OF\_SERVO\_INPUTS (4)
- NUMBER\_OF\_SIGNALS (5)
- NUMBER\_OF\_USB (1)
- NUMBER\_OF\_USB\_PORTS (4)
- NUMBER\_OF\_PORTS (5)
- aMTMIO SERIAL\_USB\_VBUS\_ENABLED (0)
- aMTMIO SERIAL\_USB2\_DATA\_ENABLED (1)
- aMTMIO SERIAL\_USB\_ERROR\_FLAG (19)
- aMTMIO SERIAL\_USB2\_BOOST\_ENABLED (20)
- aMTMIO SERIAL\_ERROR\_VBUS\_OVERCURRENT (0)

**class** `Hub` (*module, index*)

**connect** (*serial\_number, \*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in brainstem.result

[Back to the top](#)

## MTMLOAD1

**class** `brainstem.stem.MTMLOAD1` (*address=14, enable\_auto\_networking=True, model=0*)

Concrete Module implementation for MTM-LOAD-1 module

**MTM-LOAD-1 modules contain contain the following entities:**

- system
- app[0-3]
- digital[0-3]
- i2c[0]
- pointer[0-3]
- store[0-1]
- timer[0-7]
- rail[0]
- temperature

**Useful Constants:**

- `BASE_ADDRESS` (14)
- `NUMBER_OF_STORES` (2)
- `NUMBER_OF_INTERNAL_SLOTS` (12)
- `NUMBER_OF_RAM_SLOTS` (1)
- `NUMBER_OF_DIGITALS` (2)
- `NUMBER_OF_I2C` (1)
- `NUMBER_OF_POINTERS` (4)
- `NUMBER_OF_TIMERS` (8)
- `NUMBER_OF_APPS` (4)
- `NUMBER_OF_RAILS` (2)
- `NUMBER_OF_TEMPERATURES` (1)

**connect** (*serial\_number*, *\*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

[Back to the top](#)

**MTMPM1**

**class** `brainstem.stem.MTMPM1` (*address=6, enable\_auto\_networking=True, model=0*)

Concrete Module implementation for MTM-PM-1 module

**MTM-PM-1 modules contain contain the following entities:**

- `system`
- `app[0-3]`
- `digital[0-1]`
- `i2c[0]`
- `pointer[0-3]`
- `store[0-1]`
- `timer[0-7]`
- `rail[0-1]`
- `temperature`

**Useful Constants:**

- `BASE_ADDRESS` (6)
- `NUMBER_OF_STORES` (2)

- `NUMBER_OF_INTERNAL_SLOTS` (12)
- `NUMBER_OF_RAM_SLOTS` (1)
- `NUMBER_OF_DIGITALS` (2)
- `NUMBER_OF_I2C` (1)
- `NUMBER_OF_POINTERS` (4)
- `NUMBER_OF_TIMERS` (8)
- `NUMBER_OF_APPS` (4)
- `NUMBER_OF_RAILS` (2)
- `NUMBER_OF_TEMPERATURES` (1)

**connect** (*serial\_number*, *\*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

[Back to the top](#)

## MTMRelay

**class** `brainstem.stem.MTMRelay` (*address=12, enable\_auto\_networking=True, model=0*)

Concrete Module implementation for MTM-RELAY module

**MTM-RELAY modules contain contain the following entities:**

- `system`
- `app[0-3]`
- `digital[0-3]`
- `i2c[0]`
- `pointer[0-3]`
- `store[0-1]`
- `timer[0-7]`
- `relay[0-3]`
- `temperature`

**Useful Constants:**

- `BASE_ADDRESS` (12)
- `NUMBER_OF_STORES` (2)
- `NUMBER_OF_INTERNAL_SLOTS` (12)
- `NUMBER_OF_RAM_SLOTS` (1)
- `NUMBER_OF_DIGITALS` (4)

- `NUMBER_OF_I2C` (1)
- `NUMBER_OF_POINTERS` (4)
- `NUMBER_OF_TIMERS` (8)
- `NUMBER_OF_APPS` (4)
- `NUMBER_OF_RELAYS` (4)

**connect** (*serial\_number*, *\*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

[Back to the top](#)

## MTMUSBStem

```
class brainstem.stem.MTMUSBStem (address=4, enable_auto_networking=True,
                                model=0)
```

Concrete Module implementation for MTM USBStem modules

**MTMUSBStem modules contain the following entities:**

- system
- analog[0-3]
- app[0-3]
- clock
- digital[0-14]
- i2c[0-1]
- pointer[0-3]
- servo[0-7]
- signal[0-4]
- store[0-2]
- timer[0-7]

**Useful Constants:**

- `BASE_ADDRESS` (4)
- `NUMBER_OF_STORES` (3)
- `NUMBER_OF_INTERNAL_SLOTS` (12)
- `NUMBER_OF_RAM_SLOTS` (1)
- `NUMBER_OF_SD_SLOTS` (255)
- `NUMBER_OF_ANALOGS` (4)

- DAC\_ANALOG\_INDEX (3)
- FIXED\_DAC\_ANALOG (True)
- NUMBER\_OF\_DIGITALS (15)
- NUMBER\_OF\_I2C (2)
- NUMBER\_OF\_POINTERS (4)
- NUMBER\_OF\_TIMERS (8)
- NUMBER\_OF\_APPS (4)
- NUMBER\_OF\_SERVOS (8)
- NUMBER\_OF\_SERVO\_OUTPUTS (4)
- NUMBER\_OF\_SERVO\_INPUTS (4)
- NUMBER\_OF\_SIGNALS (5)
- ANALOG\_BULK\_CAPTURE\_MAX\_HZ (200000)
- ANALOG\_BULK\_CAPTURE\_MIN\_HZ (7000)

**connect** (*serial\_number*, *\*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in brainstem.result

[Back to the top](#)

## MTMDAQ1

**class** brainstem.stem.**MTMDAQ1** (*address=10, enable\_auto\_networking=True, model=0*)

Concrete Module implementation for MTM-DAQ-1 module

**MTM-DAQ-1 modules contain contain the following entities:**

- system
- app[0-3]
- digital[0-1]
- analog[0-19]
- i2c[0]
- pointer[0-3]
- store[0-1]
- timer[0-7]

**Useful Constants:**

- BASE\_ADDRESS (10)
- NUMBER\_OF\_STORES (2)



- NUMBER\_OF\_INTERNAL\_SLOTS (12)
- NUMBER\_OF\_RAM\_SLOTS (1)
- NUMBER\_OF\_DIGITALS (2)
- NUMBER\_OF\_ANALOGS (20)
- NUMBER\_OF\_I2C (1)
- NUMBER\_OF\_POINTERS (4)
- NUMBER\_OF\_TIMERS (8)
- NUMBER\_OF\_APPS (4)
- ANALOG\_RANGE\_P0V064N0V064 (0)
- ANALOG\_RANGE\_P0V64N0V64 (1)
- ANALOG\_RANGE\_P0V128N0V128 (2)
- ANALOG\_RANGE\_P1V28N1V28 (3)
- ANALOG\_RANGE\_P1V28N0V0 (4)
- ANALOG\_RANGE\_P0V256N0V256 (5)
- ANALOG\_RANGE\_P2V56N2V56 (6)
- ANALOG\_RANGE\_P2V56N0V0 (7)
- ANALOG\_RANGE\_P0V512N0V512 (8)
- ANALOG\_RANGE\_P5V12N5V12 (9)
- ANALOG\_RANGE\_P5V12N0V0 (10)
- ANALOG\_RANGE\_P1V024N1V024 (11)
- ANALOG\_RANGE\_P10V24N10V24 (12)
- ANALOG\_RANGE\_P10V24N0V0 (13)
- ANALOG\_RANGE\_P2V048N0V0 (14)
- ANALOG\_RANGE\_P4V096N0V0 (15)

**connect** (*serial\_number*, **\*\*kwargs**)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in brainstem.result

[Back to the top](#)

## EtherStem

```
class brainstem.stem.EtherStem (address=2, enable_auto_networking=True,  
                                model=0)
```

Concrete Module implementation for 40Pin EtherStem modules

### **EtherStem modules contain the following entities:**

- system
- analog[0-3]
- app[0-3]
- clock
- digital[0-14]
- i2c[0-1]
- pointer[0-3]
- servo[0-7]
- store[0-2]
- timer[0-7]

### **Useful Constants:**

- BASE\_ADDRESS (2)
- NUMBER\_OF\_STORES (3)
- NUMBER\_OF\_INTERNAL\_SLOTS (12)
- NUMBER\_OF\_RAM\_SLOTS (1)
- NUMBER\_OF\_SD\_SLOTS (255)
- NUMBER\_OF\_ANALOGS (4)
- DAC\_ANALOG\_INDEX (3)
- FIXED\_DAC\_ANALOG (False)
- NUMBER\_OF\_DIGITALS (15)
- NUMBER\_OF\_I2C (2)
- NUMBER\_OF\_POINTERS (4)
- NUMBER\_OF\_TIMERS (8)
- NUMBER\_OF\_APPS (4)
- NUMBER\_OF\_SERVOS (8)
- NUMBER\_OF\_SERVO\_OUTPUTS (4)
- NUMBER\_OF\_SERVO\_INPUTS (4)
- ANALOG\_BULK\_CAPTURE\_MAX\_HZ (200000)
- ANALOG\_BULK\_CAPTURE\_MIN\_HZ (7000)

**connect** (*serial\_number*, *\*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in brainstem.result

[Back to the top](#)

## USBStem

**class** brainstem.stem.**USBStem** (*address=2, enable\_auto\_networking=True, model=0*)

Concrete Module implementation for 40Pin USBStem modules

**USBStem modules contain contain the following entities:**

- system
- analog[0-3]
- app[0-3]
- clock
- digital[0-14]
- i2c[0-1]
- pointer[0-3]
- servo[0-7]
- store[0-2]
- timer[0-7]

**Useful Constants:**

- BASE\_ADDRESS (2)
- NUMBER\_OF\_STORES (3)
- NUMBER\_OF\_INTERNAL\_SLOTS (12)
- NUMBER\_OF\_RAM\_SLOTS (1)
- NUMBER\_OF\_SD\_SLOTS (255)
- NUMBER\_OF\_ANALOGS (4)
- DAC\_ANALOG\_INDEX (3)
- FIXED\_DAC\_ANALOG (False)
- NUMBER\_OF\_DIGITALS (15)
- NUMBER\_OF\_I2C (2)
- NUMBER\_OF\_POINTERS (4)
- NUMBER\_OF\_TIMERS (8)

- `NUMBER_OF_APPS` (4)
- `NUMBER_OF_SERVOS` (8)
- `NUMBER_OF_SERVO_OUTPUTS` (4)
- `NUMBER_OF_SERVO_INPUTS` (4)
- `ANALOG_BULK_CAPTURE_MAX_HZ` (200000)
- `ANALOG_BULK_CAPTURE_MIN_HZ` (7000)

**connect** (*serial\_number*, *\*\*kwargs*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

[Back to the top](#)

### 3.2.3 Package Structure

The BrainStem package consists of a number of modules, which together form the BrainStem python API.

#### **brainstem.module**

A module that provides base classes for BrainStem Modules and Entities.

The Module and Entity classes are designed to be extended for specific types of BrainStem Modules and Entities. For more information about Brainstem Modules and Entities, please see the [Terminology](#)<sup>105</sup> section of the [Acroname BrainStem Reference](#)<sup>106</sup>

#### **brainstem.stem**

Provides specific module instances, and entity functionality.

The Module and Entity classes contained in this module provide the core API functionality for all of the Brainstem modules. For more information about possible entities please see the [Entity](#)<sup>107</sup> section of the [Acroname BrainStem Reference](#)<sup>108</sup>

---

<sup>105</sup> <https://acroname.com/reference/brainstem/terms.html>

<sup>106</sup> <https://acroname.com/reference>

<sup>107</sup> <https://acroname.com/reference/api/entities>

<sup>108</sup> <https://acroname.com/reference>

### brainstem.link

A module that provides a Spec class for specifying a connection to a BrainStem module.

A Spec instance fully describes a connection to a brainstem module. In the case of USB based stems this is simply the serial number of the module. For TCPIP based stems this is an IP address and TCP port.

For more information about links and the Brainstem network see the [Acroname BrainStem Reference](#)<sup>109</sup>

### brainstem.discover

A module that provides methods for discovering brainstem modules over USB and TPCIP.

The discovery module provides an interface for locating BrainStem modules accross multiple transports. It provides a way to find all modules for a give transport as well as specific modules by serial number, or first found. The result of a call to one of the discovery functions is either a list of brainstem.link.Spec objects, or a single brainstem.link.Spec.

The Discovery module allows users to find specific brainstem devices via their serial number, or a list of all devices connected to the host via usb or on the same subnet via TCP/IP. In all cases a *Spec* object is returned with connection details for the device. In addition do connection details, the BrainStem model is returned. This model is one of a list of BrainStem device model numbers which are accessible via the *defs* module.

A typical interactive python session finding all connected USB modules might look like the following.

```
>> import brainstem >> module_list = brainstem.discover.findAllModules(brainstem.link.Spec.USB)
>> print [str(s) for s in module_list] ['Model: 4 LinkType: USB(serial: 0xCB4A3B25, module: 0)',
'Model: 13 LinkType: USB(serial: 0x40F5849A, module: 0)']
```

For an overview of links, discovery and the Brainstem network see the [Acroname BrainStem Reference](#)<sup>110</sup>

### brainstem.defs

A module that provides defines and constants useful for working with the python library.

### brainstem.result

A module that provides a result class for returning results of UEI commands.

Results consist of an error attribute and a value attribute. If the error attribute is set to NO\_ERROR, then the result value is the response to the UEI command that was sent.

For more information about return values for commands and UEI's see the [Acroname BrainStem Reference](#)<sup>111</sup>

---

<sup>109</sup> <https://acroname.com/reference>

<sup>110</sup> <https://acroname.com/reference>

<sup>111</sup> <https://acroname.com/reference>

## brainstem.version

Provides version access utilities.

### 3.2.4 Definitions

A module that provides defines and constants useful for working with the python library.

```
brainstem.defs.model_info(model)
```

Get Model information.

#### Parameters

**model** (*int*) – One of the model numbers, i.e from stem.system.getModel().

#### Returns

String containing model information.

```
brainstem.defs.model_name(model)
```

Get Model Name.

#### Parameters

**model** (*int*) – One of the model numbers, i.e from stem.system.getModel().

#### Returns

A string containing model name.

### 3.2.5 Discovery

A module that provides methods for discovering brainstem modules over USB and TPCIP.

The discovery module provides an interface for locating BrainStem modules accross multiple transports. It provides a way to find all modules for a give transport as well as specific modules by serial number, or first found. The result of a call to one of the discovery functions is either a list of `brainstem.link.Spec` objects, or a single `brainstem.link.Spec`.

The Discovery module allows users to find specific brainstem devices via their serial number, or a list of all devices connected to the host via usb or on the same subnet via TCP/IP. In all cases a *Spec* object is returned with connection details for the device. In addition do connection details, the BrainStem model is returned. This model is one of a list of BrainStem device model numbers which are accessible via the *defs* module.

A typical interactive python session finding all connected USB modules might look like the following.

```
>> import brainstem >> module_list = brainstem.discover.findAllModules(brainstem.link.Spec.USB)
>> print [str(s) for s in module_list] ['Model: 4 LinkType: USB(serial: 0xCB4A3B25, module: 0)',
'Model: 13 LinkType: USB(serial: 0x40F5849A, module: 0)']
```

For an overview of links, discovery and the Brainstem network see the [Acroname BrainStem Reference](https://acroname.com/reference)<sup>112</sup>

```
class brainstem.discover.DeviceNode
```

#### Python representation of DeviceNode\_t (C structure)

- `hub_serial_number` (`uint32_t`): Serial number of the Acroname hub where the device was found.
- `hub_port` (`uint8_t`): Port of the Acroname hub where the device was found.
- `id_vendor` (`uint16_t`): Manufactures Vendor ID of the downstream device.

---

<sup>112</sup> <https://acroname.com/reference>

- `id_product` (`uint16_t`): Manufactures Product ID of the downstream device.
- **speed (enumeration): The devices downstream device speed.**
  - Unknown (0)
  - Low Speed (1)
  - Full Speed (2)
  - High Speed (3)
  - Super Speed (4)
  - Super Speed Plus (5)
- `product_name` (string): USB string descriptor.
- `manufacture` (string): USB string descriptor.
- `serial_number` (string): USB string descriptor.

`brainstem.discover.findAllModules (transports, network_interface=0, buffer_length=128)`

Return a list of Specs for all modules found on the transports given.

Transports can be presented as a list, and the results would be a list of all modules found for those transports. TCPIP modules take a little longer to find due to the Multicast and gather necessary for finding modules on the local network segment.

#### Parameters

- **transports** (*int or list(int)*) – A list of transports or a single transport.
- **network\_interface** (*unsigned int*) – The network interface to use for the discovery.
- **buffer\_length** (*unsigned int*) – The length of the buffer to use for the discovery.

#### Returns

A list of the Spec objects for all modules found.

#### Return type

`list(Spec)`

`brainstem.discover.findFirstModule (transports, network_interface=0)`

Return the Spec for the first module found on the given transport.

#### Parameters

- **transports** (*int or list(int)*) – A list of transports or a single transport.
- **network\_interface** (*unsigned int*) – The network interface to use for the discovery.

#### Returns

The connection spec of the first module found on the given transport.

#### Return type

`Spec`

`brainstem.discover.findModule (transports, serial_number, network_interface=0)`

Return the Spec for the module with the given serial number.

Transports can be presented as a list. TCPIP modules take a little longer to find due to the Multicast and gather necessary for finding modules on the local network segment.

#### Parameters

- **transports** (*int or list(int)*) – A list of transports or a single transport.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.
- **network\_interface** (*unsigned int*) – The network interface to use for the discovery.

**Returns**

The connection spec for the module whose serial number is given in the args.

```
brainstem.discover.getDownstreamDevices (list_length=128)
```

Gets downstream device USB information for all Acroname hubs.

**Parameters**

**list\_length** – The amount of memory to provide for the lower level C call.

**Returns**

Result object containing NO\_ERROR and a tuple of DeviceNode's containing the detected downstream devices:: - **aErrParam**: Passed in values are not valid (NULL, size, etc). - **aErrMemory**: No more room in the list. - **aErrNotFound**: No Acroname devices were found.

**Return type**

*Result*

```
brainstem.discover.getIPv4Interfaces (list_length=30)
```

Populates a list with all of the available IPv4 Interfaces.

**Parameters**

**list\_length** (*unsigned int*) – Size of list to allocate for.

**Returns**

A tuple of IPv4 interfaces.

**Return type**

tuple(unsigned int)

### 3.2.6 Entity

```
class brainstem.Entity_Entity.Entity (module, cmd, index)
```

Base class for BrainStem Entity.

Provides the default implementation for a functional entity within the BrainStem. This can include IO like GPIOs, Analogs etc. For a more detailed description of Entities see the [Terminology](#)<sup>113</sup> section of the brainstem reference for more information.

```
call_UEI (option)
```

Call a set UEI on this entity.

**Parameters**

**option** (*byte*) – The command option.

**Returns**

An error result from the list of defined error codes in brainstem.result

```
property command
```

Return the entity command.

**Type**

int



**drain\_UEI** (*option*)

Drain UEI packets matching option.

**Parameters**

**option** (*byte*) – The command option.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

**getStreamStatus** (*buffer\_length=1024*)

Gets all available stream values associated with the cmd and index of the called API.

**Parameters**

**buffer\_length** (*unsigned int*) – Size of the buffer to allocate

**Returns**

An error result from the list of defined error codes in `brainstem.result`

**get\_UEI16** (*option*)

Get a UEI short value.

**Parameters**

**option** (*byte*) – The command option.

**Returns**

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

**Return type**

*Result*

**get\_UEI16\_with\_subindex** (*option, subIndex*)

Call a get UEI short value with a subIndex.

**Parameters**

- **option** (*byte*) – The command option.
- **subIndex** (*byte*) – The subIndex of the entity.

**Returns**

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

**Return type**

*Result*

**get\_UEI32** (*option*)

Get a UEI int value.

**Parameters**

**option** (*byte*) – The command option.

**Returns**

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

**Return type**

*Result*

**get\_UEI32\_with\_subindex** (*option, subIndex*)

Call a get UEI int value with a subIndex.

**Parameters**

- **option** (*byte*) – The command option.
- **subIndex** (*byte*) – The subIndex of the entity.

**Returns**

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

**Return type**

*Result*

**get\_UEI8** (*option*)

Get a UEI byte value.

**Parameters**

**option** (*byte*) – The command option.

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**Return type**

*Result*

**get\_UEI8\_with\_subindex** (*option*, *subIndex*)

Call a get UEI byte value with a subIndex.

**Parameters**

- **option** (*byte*) – The command option.
- **subIndex** (*byte*) – The subIndex of the entity.

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**Return type**

*Result*

**get\_UEIBytes** (*option*, *buffer\_length=65536*)

Get a UEI Bytes buffer on this entity.

**Parameters**

- **option** (*byte*) – The command option.
- **buffer\_length** (*unsigned int*) – The subIndex of the entity.

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**Return type**

*Result*

**property index**

Return the entity index

**Type**

int

**loadEntityFromSavedValues** ()

Load the Entity from memory.

**Parameters**

**option** (*byte*) – The command option.

**Returns**

An error result from the list of defined error codes in brainstem.result

**property module**

returns the associated module object.

**Type**

*Module*

**registerOptionCallback** (*option*, *enable*, *cb*, *pRef*)

Registers a callback function based on a specific option code. Option code applies to the cmd and index of the called API.

:param option The option code for the entities command and index. :type option: byte

:param enable Enable (True) or disable (False) streaming. :type enable: bool

:param cb Callback to be executed on the provided criteria. :type cb:  
@ffi.callback("unsigned char(aPacket\*, void\*)")

:param pRef Handle to be passed to the provided callback. This handle must be kept alive by the caller. :type pRef: ffi handle

#### Returns

An error result from the list of defined error codes in brainstem.result

#### resetEntityToFactoryDefaults()

Resets the Entity to factory defaults

#### Parameters

**option** (*byte*) – The command option.

#### Returns

An error result from the list of defined error codes in brainstem.result

#### saveEntity()

Saves the Entity.

#### Parameters

**option** (*byte*) – The command option.

#### Returns

An error result from the list of defined error codes in brainstem.result

#### setStreamEnabled(enable)

Enables streaming for all possible option codes within the cmd and index the entity was created for.

#### Parameters

**enable** (*bool*) – Enable (True) or disable (False) streaming.

#### Returns

An error result from the list of defined error codes in brainstem.result

#### set\_UEI16(option, value)

Call a set UEI with short value on this entity.

#### Parameters

- **option** (*byte*) – The command option.
- **value** (*short*) – The short parameter to send.

#### Returns

An error result from the list of defined error codes in brainstem.result

#### set\_UEI16\_with\_subindex(option, subIndex, value)

Call a set UEI short value with a subIndex.

#### Parameters

- **option** (*byte*) – The command option.
- **subIndex** (*byte*) – The subIndex of the entity.
- **value** (*short*) – The short parameter to send.

#### Returns

An error result from the list of defined error codes in brainstem.result

#### set\_UEI32(option, value)

Call a set UEI with int value on this entity.

#### Parameters

- **option** (*byte*) – The command option.
- **value** (*int*) – The int parameter to send.

#### set\_UEI32\_with\_subindex(option, subIndex, value)

Call a set UEI int value with a subIndex.

#### Parameters

- **option** (*byte*) – The command option.
- **subIndex** (*byte*) – The subIndex of the entity.
- **value** (*int*) – The int parameter to send.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

**set\_UEI8** (*option, value*)

Call a set UEI with byte value on this entity.

**Parameters**

- **option** (*byte*) – The command option.
- **value** (*byte*) – The byte parameter to send.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

**set\_UEI8\_with\_subindex** (*option, subIndex, value*)

Call a set UEI byte value with a subIndex.

**Parameters**

- **option** (*byte*) – The command option.
- **subIndex** (*byte*) – The subIndex of the entity.
- **value** (*byte*) – The byte parameter to send.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

**set\_UEIBytes** (*option, buffer*)

Call a set UEI with buffer and length of buffer on this entity.

**Parameters**

- **option** (*byte*) – The command option.
- **buffer** (*bytearray()*) – The buffer to be sent

**Returns**

An error result from the list of defined error codes in `brainstem.result`

### 3.2.7 Link

A module that provides a Spec class for specifying a connection to a BrainStem module.

A Spec instance fully describes a connection to a brainstem module. In the case of USB based stems this is simply the serial number of the module. For TCPIP based stems this is an IP address and TCP port.

For more information about links and the Brainstem network see the [Acroname BrainStem Reference](https://acroname.com/reference/brainstem/terms.html)<sup>113</sup>

```
class brainstem.link.Spec (transport, serial_number, module, model, **keywords)
```

Spec class for specifying connection details

Instances of Spec represent the connection details for a brainstem link. The Spec class also contains constants representing the possible transport types for BrainStem modules.

**Parameters**

- **transport** (*int*) – One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*int*) – The module serial number.
- **module** – The module address on the Brainstem network.
- **model** – The device model number of the Brainstem module.

---

<sup>113</sup> <https://acroname.com/reference/brainstem/terms.html>

<sup>114</sup> <https://acroname.com/reference>

- **\*\*keywords** – For TCPIP, SERIAL and AETHER connections. The possibilities are,
  - `ip_address`: (int/str) The IPV4 address for a TCPIP/AETHER connection type.
  - `ip_port`: (int/str) The port for a TCPIP/AETHER connection type.
  - `port`: (str) The serial port for a SERIAL connection type.
  - `baudrate`: (int/str) The baudrate for a SERIAL connection type.

**AETHER = 4**

AETHER transport type.

**AETHER\_SERIAL = 7**

AETHER\_SERIAL transport type.

**AETHER\_TCPIP = 6**

AETHER\_TCPIP transport type.

**AETHER\_USB = 5**

AETHER\_USB transport type.

**INVALID = 0**

INVALID Undefined transport type.

**SERIAL = 3**

SERIAL transport type.

**TCPIP = 2**

TCPIP transport type.

**USB = 1**

USB transport type.

**static `cca_spec_to_python_spec` (*cca\_spec*)**

Internal: Translate cffi spec into python Spec

**class `brainstem.link.Status`**

Status variables represent the link status possibilities for Brainstem Links.

#### **Status States:**

- STOPPED (0)
- INITIALIZING (1)
- RUNNING (2)
- STOPPING (3)
- SYNCING (4)
- INVALID\_LINK\_STREAM (5)
- IO\_ERROR (6)
- UNKNOWN\_ERROR (7)

**class `brainstem.link.StreamStatusEntry` (*key, value*)**

**property key**

A unique key made up of module, cmd, option, index, subindex

**Type**

unsigned long long (64bit)

**property value**

The Value associated with the key

**Type**

unsigned int (32bit)

**class** `brainstem.link.aEtherConfig`

aEther configuration class for configuring AETHER connection types.

Note: If `localOnly == false` AND `networkInterface` is default (0 or `LOCALHOST_IP_ADDRESS`) it will be populated with the auto-selected interface upon successful connection.

**enabled**

True: Client-Server model is used; False: Direct module control is used.

**fallback**

True: If connections fails it will automatically search for network connections.

**localOnly**

True: Restricts access to localhost; False: Expose device to external network.

**assignedPort**

Server assigned port after successful connection.

**networkInterface**

Network interface to use for connections.

### 3.2.8 Module

A module that provides base classes for BrainStem Modules and Entities.

The Module and Entity classes are designed to be extended for specific types of BrainStem Modules and Entities. For more information about Brainstem Modules and Entities, please see the [Terminology](https://acroname.com/reference/brainstem/terms.html)<sup>115</sup> section of the [Acroname BrainStem Reference](https://acroname.com/reference)<sup>116</sup>

**class** `brainstem.module.Module` (*address, enable\_auto\_networking=True, model=0*)

The Module Entity provides a generic interface to a BrainStem hardware module. The Module Class is the parent class for all BrainStem modules. Each module inherits from Module and implements its hardware specific features.

**property address**

Module address of the device

**Type**

unsigned byte

**property bAutoNetworking**

Return the current networking mode.

---

<sup>115</sup> <https://acroname.com/reference/brainstem/terms.html>

<sup>116</sup> <https://acroname.com/reference>

**Type**

bool

**classQuantity** (*command*)

Queries the module to determine how many entities of the specified class are implemented by the module. Zero is a valid return value. For example, calling classQuantity with the command parameter of cmdANALOG would return the number of analog entities implemented by the module.

**Parameters**

**command** (*unsigned byte*) – One of the UEI commands (cmdXXX).

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**connect** (*transport, serial\_number*)

Connect to a Module with a transport type and serial number.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.
- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in brainstem.result

**connectFromSpec** (*spec*)

Connect to a BrainStem module with a Spec.

**Parameters**

**spec** (*Spec*) – The specifier for the connection.

**Returns**

An error result from the list of defined error codes in brainstem.result

**connectThroughLinkModule** (*module*)

Connects to a Brainstem module on a BrainStem network, through the module given as an argument. The module passed in must have an active valid connection.

**Parameters**

**module** (*Module*) – The brainstem module to connect through.

**Returns**

An error result from the list of defined error codes in brainstem.result

**disconnect** ()

Disconnect from the Brainstem module.

**discoverAndConnect** (*transport, serial\_number=0*)

Discover and connect from the Module level.

A discover-based connect. This member function will connect to the first available BrainStem found on the given transport. If the serial number is passed, it will only connect to the module with that serial number. Passing 0 or None as the serial number will create a link to the first link module found on the specified transport.

**Parameters**

- **transport** (*Spec.transport*) – (Spec.transport): One of USB, TCPIP, SERIAL or AETHER.

- **serial\_number** (*unsigned int*) – The module serial\_number to look for.

**Returns**

An error result from the list of defined error codes in `brainstem.result`

**entityGroup** (*command, index*)

Queries the module the group assigned to an entity and index. Entities groups are used to specify when certain hardware features are fundamentally related. E.g. certain hardware modules may have some digital pins associated with an adjustable voltage rail; these digitals would be in the same group as the rail. Zero is the default group.

**Parameters**

**command** (*unsigned byte*) – One of the UEI commands (cmdXXX).

**Returns**

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

**getBuild** ()

Get the modules firmware build number The build number is a unique hash assigned to a specific firmware.

**Returns**

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

**getConfig** ()

Gets the links current aEther configuration

**Returns**

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

**Return type**

Result containing a `aEtherConfig`

**getModuleAddress** ()

Get the address of the module object.

This method changes the local address of the module, not of the device. It is possible to get the module address of the device via `system.getModuleSoftwareOffset()`.

**Returns**

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

**getStatus** ()

Returns the status of the BrainStem connection See `brainstem.link.Status` for the possible states.

**hasUEI** (*command, option, index, flags*)

Queries the module to determine if it implements a UEI. Each UEI has a command, option or variant, index and flag. The `hasUEI` method queries for a fully specified UEI. Returns `aErrNone` if the variation is supported and an appropriate error if not. This call is blocking for up to the `nMSTimeout` period.

**Parameters**

- **command** (*unsigned byte*) – One of the UEI commands (cmdXXX).
- **option** (*unsigned byte*) – The option or variant of the command.
- **index** (*unsigned byte*) – The entity index.



- **flags** (*unsigned byte*) – The flags (ueiOPTION\_SET or ueiOPTION\_GET).

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**property id**

A unique identifier of the associated module

**Type**

unsigned int

**isConnected()**

Returns true if the Module has an active connection or false otherwise

**property link**

return the current link or None.

**Type**

Link

**property model**

Model number of the device

**Type**

unsigned byte

**reconnect()**

Reconnect a lost connection to a Brainstem module.

**setConfig(config)**

Sets the links aEther configuration. Note: Configuration must be set BEFORE connection.

**Parameters**

**config** (*aEtherConfig*) – (aEtherConfig object): aEther configuration to be set.

**Returns**

An error result from the list of defined error codes in brainstem.result

**setModuleAddress(address)**

Set the address of the module object.

This method changes the local address of the module, not of the device. It is possible to set the module address of the device via system.setModuleSoftwareOffset().

**Parameters**

**address** (*unsigned byte*) – The module address to switch to for this module instance.

**Returns**

An error result from the list of defined error codes in brainstem.result

**setNetworkingMode(mode)**

Changes the networking mode of the stem object. Auto mode is enabled by default which allows automatic adjustment of the module/stems networking configuration. Refer to BrainStem Networking at [www.acroname.com/support](http://www.acroname.com/support)

**Parameters**

**mode** (*bool*) – Mode to be set. True = Auto; False = Manual

**Returns**

An error result from the list of defined error codes in brainstem.result

**subClassQuantity** (*command, index*)

Queries the module to determine how many subclass entities of the specified class are implemented by the module for a given entity index. This is used for entities which may be 2-dimensional. E.g. cmdMUX subclasses are the number of channels supported by a particular mux type (index); as a specific example, a module may support 4 UART channels, so subClassQuantity(cmdMUX, aMUX\_UART...) could return 4. Zero is a valid return value.

**Parameters**

**command** (*unsigned byte*) – One of the UEI commands (cmdXXX).

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

### 3.2.9 PDChannelLogger

```
class brainstem.pd_channel_logger.BS_PD_Packet (channel=0, seconds=0, uSeconds=0,  
                                                direction=0, sop=0, event=0, payload=[],  
                                                ccChannel=0, crc=0)
```

**Python representation of BS\_PD\_Packet\_t (C structure)**

- channel (uint8\_t): Channel/Index
- seconds (uint8\_t): Seconds in device time since power on.
- uSeconds (uint32\_t): Micro Seconds in device time since power on.
- **direction (enumeration): Direction of packet transmission relative to the device.**
  - Invalid = 0
  - Transmit = 1
  - Receive = 2
  - Unknown = 3
- **sop (enumeration): See bs\_pd\_packet.h for more details**
  - SOP = 0
  - SOP' = 1
  - SOP'' = 2
  - Unknown = 3
- **event (enumeration): See powerdeliveryLogEvent in aProtocolDefs.h**
  - pdEventNone = 0
  - pdEventPacket = 1
  - pdEventConnect = 2
  - pdEventDisconnect = 3
  - pdEventCableResetReceived = 4
  - pdEventCableResetSent = 5
  - pdEventHardResetReceived = 6
  - pdEventHardResetSent = 7

- pdEventMessageTransmitFailed = 8 // No GoodCRC received
- pdEventMessageTransmitDiscarded = 9 // Incoming message detected so tx discarded
- pdEventPDFunctionDisabled = 10 // PD Stack is giving up on PD Comms
- pdEventVBUSEnabled = 11
- pdEventVBUSDisabled = 12
- pdEventVCONNEnabled = 13
- pdEventVCONNDISabled = 14
- pdEventRp1A5 = 15 // Used for Src Atomic Message Sequences
- pdEventRp3A0 = 16 // Used for Src Atomic Message Sequences
- pdEventBistEnter = 17
- pdEventBistExit = 18
- pdEventLast = 19 // Should always be last!!

- payload (list): Raw PD Packet data

**class** `brainstem.pd_channel_logger.PDChannelLogger` (*module, index, buffer\_length=1024*)

Manages BrainStem Power Delivery logging packets.

#### Parameters

- **module** (*Module*) – : Reference to an existing BrainStem Module
- **index** (*unsigned byte*) – Index/channel logging should be enabled for.
- **buffer\_length** (*unsigned short*) – Number of packets the class should queue before dropping.

**property** `buffer_length`

Gets the buffer length

#### Returns

Buffer length of the associated object.

#### Return type

unsigned int

**getPacket** ()

Attempts to takes a packet from the internal buffer.

#### Returns

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**getPackets** (*buffer\_length=100*)

Attempts to take a multiple packets (up to a maximum) from the internal buffer.

#### Returns

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**property** `index`

Gets the Index/Channel

#### Returns

Index/channel of the associated object.

**Return type**

unsigned byte

**property module**

Gets the Module object.

**Returns**

The associated module object.

**Return type***Module***setEnabled (enabled)**

Enables Power Delivery logging.

**Parameters****enable** (*bool*) – True enables logging; False disables loggingreturn: An error result from the list of defined error codes in `brainstem.result`

### 3.2.10 Results

A module that provides a result class for returning results of UEI commands.

Results consist of an error attribute and a value attribute. If the error attribute is set to `NO_ERROR`, then the result value is the response to the UEI command that was sent.

For more information about return values for commands and UEI's see the [Acroname BrainStem Reference](https://acroname.com/reference)<sup>117</sup>

```
class brainstem.result.Result (error, *args, **kwargs)
```

Result class for returning results of commands

Instances of Result represent the response to a command. The Result class also contains constants for the error codes that Brainstem APIs may return, for example `Result.aErrNone`, `result.aErrorMemory`, etc. Refer to the C API Error Codes for a complete list.

**property error**

Return the error attribute

```
static getErrorDescription (error, buffer_length=256)
```

Get the description of an error code.

**Parameters****error** (*int or Result object*) – The error to decode.**Returns**

The error code in human readable form.

**Return type**

string

```
static getErrorText (error)
```

Get the string representation of an error code.

**Parameters****error** (*int or Result object*) – The error to decode.

---

<sup>117</sup> <https://acroname.com/reference>

**Returns**

The error code in human readable form.

**Return type**

string

**items()**

Return the key, value mapping for each result value

**keys()**

Return a list of the names of each value in the result

**property value**

Return the value attribute(s)

**values()**

Return a list of the values of each value in the result

### 3.2.11 Version

Provides version access utilities.

```
brainstem.version.getMajor()
```

Gets the major revision number for the software package.

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**Return type**

*Result*

```
brainstem.version.getMinor()
```

Gets the minor revision number for the software package.

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**Return type**

*Result*

```
brainstem.version.getPatch()
```

Gets the patch revision number for the software package.

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**Return type**

*Result*

```
brainstem.version.get_version_string(packed_version=None, buffer_length=256)
```

Gets the version string from a packed version.

**Parameters**

- **packed\_version** (*unsigned int*) – If version is provided, it is unpacked and presented as the version string. Most useful for printing the firmware version currently installed on a module.

- **buffer\_length** (*unsigned short*) – The amount of C memory to allocate

**Returns**

The library version as a string

**Return type**

str

`brainstem.version.isAtLeast (major, minor, patch)`

Check that the current software version is at least major.minor.patch

**Parameters**

- **major** (*const unsigned byte*) – The major revision level.
- **minor** (*const unsigned byte*) – The minor revision level.
- **patch** (*const unsigned byte*) – The patch revision level.

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**Return type**

*Result*

`brainstem.version.isAtleastCompare (major_lhs, minor_lhs, patch_lhs, major_rhs, minor_rhs, patch_rhs)`

Check that the supplied left hand side (lhs) version is at least ( $\geq$ ) the right hand side (rhs).

**Parameters**

- **major\_lhs** (*const unsigned byte*) – The lhs major revision level.
- **minor\_lhs** (*const unsigned byte*) – The lhs minor revision level.
- **patch\_lhs** (*const unsigned byte*) – The lhs patch revision level.
- **major\_rhs** (*const unsigned byte*) – The rhs major revision level.
- **minor\_rhs** (*const unsigned byte*) – The rhs minor revision level.
- **patch\_rhs** (*const unsigned byte*) – The rhs patch revision level.

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**Return type**

*Result*

`brainstem.version.isLegacyFormat (packed_version)`

Check if the given build version is of the legacy packing format

**Parameters**

**packed\_version** (*const unsigned int*) – The packed version number returned from `version.pack()` or `system.getVersion()`

**Returns**

Result object containing the requested value when the results error is set to NO\_ERROR(0)

**Return type**

*Result*

`brainstem.version.pack (major, minor, patch)`

Packs the given version into a single integer

#### Parameters

- **major** (*const unsigned byte*) – The major revision level.
- **minor** (*const unsigned byte*) – The minor revision level.
- **patch** (*const unsigned byte*) – The patch revision level.

#### Returns

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

#### Return type

*Result*

`brainstem.version.parseMajor (packed_version)`

Parses the major revision level from the given build number.

#### Parameters

**packed\_version** (*const unsigned int*) – The packed version number returned from `version.pack()` or `system.getVersion()`

#### Returns

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

#### Return type

*Result*

`brainstem.version.parseMinor (packed_version)`

Parses the minor revision level from the given build number.

#### Parameters

**packed\_version** (*const unsigned int*) – The packed version number returned from `version.pack()` or `system.getVersion()`

#### Returns

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

#### Return type

*Result*

`brainstem.version.parsePatch (packed_version)`

Parses the revision patch level from the given build number.

#### Parameters

**packed\_version** (*const unsigned int*) – The packed version number returned from `version.pack()` or `system.getVersion()`

#### Returns

Result object containing the requested value when the results error is set to `NO_ERROR(0)`

#### Return type

*Result*

`brainstem.version.unpack_version (packed_version)`

Unpacks a packed version.

**Parameters**

**packed\_version** (*unsigned int*) – The packed version number.

**Returns**

Returns the library version as a 3-tuple (major, minor, patch)

**Return type**

str

### 3.2.12 Analog

See the [Analog Entity](#) for generic information.

**class** `brainstem.entity.Analog (module, index)`

Interface to analog entities on BrainStem modules. Analog entities may be configured as a input or output depending on hardware capabilities. Some modules are capable of providing actual voltage readings, while other simply return the raw analog-to-digital converter (ADC) output value. The resolution of the voltage or number of useful bits is also hardware dependent.

**getBulkCaptureNumberOfSamples ()**

Get the current number of samples setting for this analog when bulk capturing.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] number of samples.

**Return type**

*brainstem.result.Result*

**getBulkCaptureSampleRate ()**

Get the current sample rate setting for this analog when bulk capturing.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] upon success filled with current sample rate in samples per second (Hertz).

**Return type**

*brainstem.result.Result*

**getBulkCaptureState ()**

Get the current bulk capture state for this analog.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes



**value**

[unsigned char] the state of bulk capture. - Idle: bulkCaptureIdle = 0 - Pending: bulkCapturePending = 1 - Finished: bulkCaptureFinished = 2 - Error: bulkCaptureError = 3

**Return type**

*brainstem.result.Result*

**getConfiguration()**

Get the analog configuration.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Current configuration of the analog entity.

**Return type**

*brainstem.result.Result*

**getEnable()**

Get the analog output enable status.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 0 if disabled 1 if enabled.

**Return type**

*brainstem.result.Result*

**getRange()**

Get the analog input range.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] 8 bit value corresponding to a discrete range option

**Return type**

*brainstem.result.Result*

**getValue()**

Get the raw ADC output value in bits.

---

**Note:** Not all modules are provide 16 useful bits; this value's least significant bits are zero-padded to 16 bits. Refer to the module's datasheet to determine analog bit depth and reference voltage.

---

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned short] 16 bit analog reading with 0 corresponding to the negative analog voltage reference and 0xFFFF corresponding to the positive analog voltage reference.

**Return type**

*brainstem.result.Result*

**getVoltage ()**

Get the scaled micro volt value with reference to ground.

---

**Note:** Not all modules provide 32 bits of accuracy. Refer to the module's datasheet to determine the analog bit depth and reference voltage.

---

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] 32 bit signed integer (in microvolts) based on the board's ground and reference voltages.

**Return type**

*brainstem.result.Result*

**initiateBulkCapture ()**

Initiate a BulkCapture on this analog. Captured measurements are stored in the module's RAM store (RAM\_STORE) slot 0. Data is stored in a contiguous byte array with each sample stored in two consecutive bytes, LSB first.

---

**Note:** When the bulk capture is complete getBulkCaptureState() will return either bulkCaptureFinished or bulkCaptureError.

---

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setBulkCaptureNumberOfSamples (value)**

Set the number of samples to capture for this analog when bulk capturing.

**Parameters**

**value** (*unsigned int*) – number of samples. - Minimum # of Samples: 0 - Maximum # of Samples: (BRAINSTEM\_RAM\_SLOT\_SIZE / 2) = (3FFF / 2) = 1FFF = 8191

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setBulkCaptureSampleRate** (*value*)

Set the sample rate for this analog when bulk capturing.

**Parameters**

**value** (*unsigned int*) – sample rate in samples per second (Hertz). - Minimum rate: 7,000 Hz - Maximum rate: 200,000 Hz

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setConfiguration** (*configuration*)

Set the analog configuration.

**Parameters**

**configuration** (*unsigned char*) – `bitAnalogConfigurationOutput` configures the analog entity as an output.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setEnabled** (*enable*)

Set the analog output enable state.

**Parameters**

**enable** (*bool*) – set 1 to enable or 0 to disable.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setRange** (*range*)

Set the analog input range.

**Parameters**

**range** (*unsigned char*) – 8 bit value corresponding to a discrete range option

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setValue** (*value*)

Set the value of an analog output (DAC) in bits.

**Parameters**

**value** (*unsigned short*) – 16 bit analog set point with 0 corresponding to the negative analog voltage reference and 0xFFFF corresponding to the positive analog voltage reference.

---

**Note:** Not all modules are provide 16 useful bits; the least significant bits are discarded. E.g. for a 10 bit DAC, 0xFFC0 to 0x0040 is the useful range. Refer to the module's datasheet to determine analog bit depth and reference voltage.

---

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setVoltage** (*microvolts*)

Set the voltage level of an analog output (DAC) in microvolts.

**Parameters**

**microvolts** (*int*) – 32 bit signed integer (in microvolts) based on the board's ground and reference voltages.

---

**Note:** Voltage range is dependent on the specific DAC channel range.

---

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.13 App

See the [App Entity](#) for generic information.

**class** `brainstem.entity.App` (*module, index*)

Used to send a cmdAPP packet to the BrainStem network. These commands are used for either host-to-stem or stem-to-stem interactions. BrainStem modules can implement a reflex origin to complete an action when a cmdAPP packet is addressed to the module.

**execute** (*app\_param*)

Execute the app reflex on the module. Doesn't wait for a return value from the execute call; this call returns immediately upon execution of the module's reflex.

**Parameters**

**app\_param** (*unsigned int*) – The app parameter handed to the reflex.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**executeAndReturn** (*app\_param, ms\_timeout=1000*)

Execute the app reflex on the module. Waits for a return from the reflex execution for msTimeout milliseconds. This method will block for up to msTimeout.

**Parameters**

- **app\_param** (*unsigned int*) – The app parameter handed to the reflex.

- **ms\_timeout** (*unsigned int*) – The amount of time to wait for the return value from the reflex routine. The default value is 1000 milliseconds if not specified.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The return value filled in from the result of executing the reflex routine.

**Return type**

*brainstem.result.Result*

### 3.2.14 Clock

See the *Clock Entity* for generic information.

**class** `brainstem.entity.Clock (module, index)`

Provides an interface to a real-time clock entity on a BrainStem module. The clock entity may be used to get and set the real time of the system. The clock entity has a one second resolution.

**getDay ()**

Get the two digit day of month value (1-28, 29, 30 or 31 depending on the month).

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The two digit day portion of the real-time clock value.

**Return type**

*brainstem.result.Result*

**getHour ()**

Get the two digit hour value (0-23).

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The two digit hour portion of the real-time clock value.

**Return type**

*brainstem.result.Result*

**getMinute ()**

Get the two digit minute value (0-59).

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The two digit minute portion of the real-time clock value.

**Return type**

*brainstem.result.Result*

**getMonth()**

Get the two digit month value (1-12).

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The two digit month portion of the real-time clock value.

**Return type**

*brainstem.result.Result*

**getSecond()**

Get the two digit second value (0-59).

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The two digit second portion of the real-time clock value.

**Return type**

*brainstem.result.Result*

**getYear()**

Get the four digit year value (0-4095).

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned short] Get the year portion of the real-time clock value.

**Return type**

*brainstem.result.Result*

**setDay(day)**

Set the two digit day of month value (1-28, 29, 30 or 31 depending on the month).

**Parameters**

**day** (*unsigned char*) – The two digit day portion of the real-time clock value.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**  
unsigned byte

**setHour** (*hour*)

Set the two digit hour value (0-23).

**Parameters**  
**hour** (*unsigned char*) – The two digit hour portion of the real-time clock value.

**Returns**  
An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**  
unsigned byte

**setMinute** (*minute*)

Set the two digit minute value (0-59).

**Parameters**  
**minute** (*unsigned char*) – The two digit minute portion of the real-time clock value.

**Returns**  
An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**  
unsigned byte

**setMonth** (*month*)

Set the two digit month value (1-12).

**Parameters**  
**month** (*unsigned char*) – The two digit month portion of the real-time clock value.

**Returns**  
An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**  
unsigned byte

**setSecond** (*second*)

Set the two digit second value (0-59).

**Parameters**  
**second** (*unsigned char*) – The two digit second portion of the real-time clock value.

**Returns**  
An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**  
unsigned byte

**setYear** (*year*)

Set the four digit year value (0-4095).

**Parameters**  
**year** (*unsigned short*) – Set the year portion of the real-time clock value.

**Returns**  
An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**  
unsigned byte

### 3.2.15 Digital

See the [Digital Entity](#) for generic information.

**class** `brainstem.entity.Digital (module, index)`

Interface to digital entities on BrainStem modules. Digital entities have the following 5 possibilities: Digital Input, Digital Output, RCServo Input, RCServo Output, and HighZ. Other capabilities may be available and not all pins support all configurations. Please see the product datasheet.

**getConfiguration()**

Get the digital configuration.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Current configuration of the digital entity.

**Return type**

[brainstem.result.Result](#)

**getLinkChannel()**

Get the link channel (entity index) for linking digital entities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current link channel (entity index) value.

**Return type**

[brainstem.result.Result](#)

**getState()**

Get the state.

---

**Note:** If in high Z state an error will be returned.

---

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] The current state of the digital entity. 0 is logic low, 1 is logic high.

**Return type**

[brainstem.result.Result](#)



**getStateAll()**

Gets the logical state of all available digitals in a bit mapped representation. Number of digitals varies across BrainStem modules. Refer to the datasheet for the capabilities of your module.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The state of all digitals where bit 0 = digital 0, bit 1 = digital 1 etc. 0 is logic low, 1 is logic high.

**Return type**

*brainstem.result.Result*

**getValue()**

Get the expected value of the digital pin.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The expected value of the digital pin. 0 is logic low, 1 is logic high.

**Return type**

*brainstem.result.Result*

**setConfiguration(configuration)**

Set the digital configuration to one of the available 5 states.

**Parameters**

**configuration** (*unsigned char*) -

**The configuration to be applied**

- Digital Input: digitalConfigurationInput = 0
- Digital Output: digitalConfigurationOutput = 1
- RCServo Input: digitalConfigurationRCServoInput = 2
- RCServo Output: digitalConfigurationRCServoOutput = 3
- High Z State: digitalConfigurationHiZ = 4
- Digital Input: digitalConfigurationInputPullUp = 0
- Digital Input: digitalConfigurationInputNoPull = 4
- Digital Input: digitalConfigurationInputPullDown = 5

---

**Note:** Some configurations are only supported on specific pins.

---

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setLinkChannel** (*link\_channel*)

Set the link channel (entity index) for linking digital entities. Two digital entities will link when one is configured as LinkInput, one as LinkOutput, and both have each others linkChannel indexes.

**Parameters**

**link\_channel** (*unsigned char*) – The link channel (entity index) value. Entities with matching linkChannel values can be linked.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setState** (*state*)

Set the logical state.

**Parameters**

**state** (*bool*) – The state to be set. 0 is logic low, 1 is logic high.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setStateAll** (*state*)

Sets the logical state of all available digitals based on the bit mapping. Number of digitals varies across BrainStem modules. Refer to the datasheet for the capabilities of your module.

**Parameters**

**state** (*unsigned int*) – The state to be set for all digitals in a bit mapped representation. 0 is logic low, 1 is logic high. Where bit 0 = digital 0, bit 1 = digital 1 etc.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setValue** (*value*)

Set the expected value of the digital pin.

**Parameters**

**value** (*unsigned char*) – The expected value of the digital pin. 0 is logic low, 1 is logic high.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.16 Equalizer

See the [Equalizer Entity](#) for generic information.

**class** `brainstem.entity.Equalizer (module, index)`

Provides receiver and transmitter gain/boost/emphasis settings for some of Acroname's products. Please see product documentation for further details.

**getReceiverConfig** (*channel*)

Gets the receiver configuration for a given channel.

**Parameters**

**channel** (*unsigned char*) – The equalizer receiver channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Configuration of the receiver.

**Return type**

[brainstem.result.Result](#)

**getTransmitterConfig** ()

Gets the transmitter configuration

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Configuration of the Transmitter.

**Return type**

[brainstem.result.Result](#)

**setReceiverConfig** (*channel, config*)

Sets the receiver configuration for a given channel.

**Parameters**

- **channel** (*unsigned char*) – The equalizer receiver channel.
- **config** (*unsigned char*) – Configuration to be applied to the receiver.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setTransmitterConfig** (*config*)

Sets the transmitter configuration

**Parameters**

**config** (*unsigned char*) – Configuration to be applied to the transmitter.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.17 Ethernet

See the [Ethernet Entity](#) for generic information.

**class** `brainstem.entity.Ethernet` (*module, index*)

IP configuration. MAC info. BrainD port.

**getEnabled()**

Gets the current enable value of the Ethernet interface.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Fully enabled network connectivity; 0 = Ethernet MAC is disabled.

**Return type**

[brainstem.result.Result](#)

**getHostname** (*buffer\_length=65536*)

Get hostname that's requested when this device sends a DHCP request.

**Parameters**

**buffer\_length** (*unsigned int*) – N, for N bytes.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[string] alias to an array of `uint8_t[N]`

**Return type**

[brainstem.result.Result](#)

**getIPv4Address** (*buffer\_length=65536*)

Get the effective IP address of this device.

**Parameters**

**buffer\_length** (*unsigned int*) – size of buffer. Should be 4.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] alias to an array of `uint8_t[4]` for returned output

**Return type***brainstem.result.Result***getIPv4DNSAddress** (*buffer\_length=65536*)

Get effective IPv4 DNS addresses, for the current NetworkConfiguration

**Parameters****buffer\_length** (*unsigned int*) – Maximum length of array, in bytes.**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] alias to an array of uint8\_t[N][4]

**Return type***brainstem.result.Result***getIPv4Gateway** (*buffer\_length=65536*)

Get the effective IP gateway of this device.

**Parameters****buffer\_length** (*unsigned int*) – size of buffer. Should be 4.**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] alias to an array of uint8\_t[4] for returned output

**Return type***brainstem.result.Result***getIPv4Netmask** (*buffer\_length=65536*)

Get the effective IP netmask of this device.

**Parameters****buffer\_length** (*unsigned int*) – size of buffer. Should be 4.**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] alias to an array of uint8\_t[4] for returned output

**Return type***brainstem.result.Result***getInterfacePort** (*service*)

Get the port of a TCPIP service on the device.

**Parameters****service** (*unsigned char*) – The index of the service to get the port for.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned short] The port of the TCPIP server.

**Return type**

*brainstem.result.Result*

**getMACAddress** (*buffer\_length=65536*)

Get the MAC address of the Ethernet interface.

**Parameters**

**buffer\_length** (*unsigned int*) – length of buffer that's writeable, should be > 6.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] alias to an array of uint8\_t[6]

**Return type**

*brainstem.result.Result*

**getNetworkConfiguration** ()

Get the method in which IP Address is assigned to this device

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Method used. Current methods**

- NONE = 0
- STATIC = 1
- DHCP = 2

**Return type**

*brainstem.result.Result*

**getStaticIPv4Address** (*buffer\_length=65536*)

Get the expected IPv4 address of this device, when networkConfiguration == STATIC

**Parameters**

**buffer\_length** (*unsigned int*) – size of buffer. Should be 4.

---

**Note:** The functional IPv4 address of The Module will differ if NetworkConfiguration != STATIC.

---

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] alias to an array of uint8\_t[4] for returned output

**Return type***brainstem.result.Result***getStaticIPv4DNSAddress** (*buffer\_length=65536*)

Get IPv4 DNS addresses (plural), when NetworkConfiguration == STATIC

**Parameters****buffer\_length** (*unsigned int*) – Maximum length of array, in bytes.**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] alias to an array of uint8\_t[N][4]

**Return type***brainstem.result.Result***getStaticIPv4Gateway** (*buffer\_length=65536*)

Get the expected IPv4 gateway of this device, when networkConfiguration == STATIC

**Parameters****buffer\_length** (*unsigned int*) – size of buffer. Should be 4.**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] alias to an array of uint8\_t[4] for returned output

**Return type***brainstem.result.Result***getStaticIPv4Netmask** (*buffer\_length=65536*)

Get the expected IPv4 netmask of this device, when networkConfiguration == STATIC

**Parameters****buffer\_length** (*unsigned int*) – size of buffer. Should be 4.

---

**Note:** The functional IPv4 netmask of The Module will differ if NetworkConfiguration != STATIC.

---

**Returns****Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] alias to an array of uint8\_t[4] for returned output

**Return type**

*brainstem.result.Result*

**setEnabled (enabled)**

Sets the Ethernet's interface to enabled/disabled.

**Parameters**

**enabled** (*bool*) – 1 = enabled; 0 = disabled

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setHostname (buffer)**

Set hostname that's requested when this device sends a DHCP request.

**Parameters**

**buffer** (*string*) – alias to an array of uint8\_t[N]

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setInterfacePort (service, port)**

Set the port of a TCPIP service on the device.

**Parameters**

- **service** (*unsigned char*) – The index of the service to set the port for.
- **port** (*unsigned short*) – The port to be used for the TCPIP server.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setNetworkConfiguration (address\_style)**

Get the method in which IP Address is assigned to this device

**Parameters**

**address\_style** (*unsigned char*) – Method to use. See getNetworkConfiguration for addressStyle enumerations.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte



**setStaticIPv4Address** (*buffer*)

Set the desired IPv4 address of this device, if NetworkConfiguration == STATIC.

**Parameters**

**buffer** (*list (unsigned char)*) – alias to an array of uint8\_t[4] with an IP address

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setStaticIPv4DNSAddress** (*buffer*)

Set IPv4 DNS Addresses (plural), if NetworkConfiguration == STATIC

**Parameters**

**buffer** (*list (unsigned char)*) – alias to an array of uint8\_t[N][4]

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setStaticIPv4Gateway** (*buffer*)

Set the desired IPv4 gateway of this device, if NetworkConfiguration == STATIC

**Parameters**

**buffer** (*list (unsigned char)*) – alias to an array of uint8\_t[4] with an IP address

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setStaticIPv4Netmask** (*buffer*)

Set the desired IPv4 address of this device, if NetworkConfiguration == STATIC

**Parameters**

**buffer** (*list (unsigned char)*) – alias to an array of uint8\_t[4] with an IP address

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

### 3.2.18 HDBaseT

See the [HDBaseT Entity](#) for generic information.

**class** brainstem.entity.**HDBaseT** (*module, index*)

This entity is only available on certain modules, and provides information on HDBaseT extenders.

**getCableLength** ()

Gets the perceived cable length

**Returns**

Object containing error code and returned value on success.

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Cable length in micro-meters

**Return type**

*brainstem.result.Result*

**getEncodingState()**

Gets the current encoding state.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Signal modulation encoding type.

**Return type**

*brainstem.result.Result*

**getFirmwareVersion()**

Gets the firmware version of the HDBaseT device

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] A bit packet representation of the firmware version Major: Bits 24-31; Minor: Bits 16-23; Patch: Bits 8-15; Build: Bits 0-7

**Return type**

*brainstem.result.Result*

**getLinkRole()**

Gets the current link role In the case of "Auto" the getState API will provide the current role.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Link role

**Return type**

*brainstem.result.Result*

**getLinkUtilization()**

Gets the current link utilization

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Utilization in milli-percent

**Return type***brainstem.result.Result***getMSEA()**

Gets the Mean Squared Error (MSE) for channel A

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The current MSE for channel A in micro-dB

**Return type***brainstem.result.Result***getMSEB()**

Gets the Mean Squared Error (MSE) for channel B

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The current MSE for channel B in micro-dB

**Return type***brainstem.result.Result***getRetransmissionRate()**

Gets the number of successful messages between retransmission

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Instantaneous number of successful messages between retransmission. To be interpreted as: 1 / retransmissionRate for rate interpretation. If the value is 0, there have been no retransmissions, otherwise higher is better..

**Return type***brainstem.result.Result***getSerialNumber (buffer\_length=65536)**

Gets the serial number of the HDBaseT device (6 bytes)

**Parameters****buffer\_length** (*unsigned int*) – Length of the buffer to be filed

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] pointer to the start of a c style buffer to be filled

**Return type**

*brainstem.result.Result*

**getState ()**

Gets the current state of the HDBaseT link

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Bit packeted representation of the state.

**Return type**

*brainstem.result.Result*

**getUSB2DeviceTree (buffer\_length=65536)**

Gets the USB2 tree at the HDBaseT device.

**Parameters**

**buffer\_length** (*unsigned int*) – Length of the buffer to be filled

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] pointer to the start of a c style buffer to be filled

**Return type**

*brainstem.result.Result*

**getUSB3DeviceTree (buffer\_length=65536)**

Gets the USB3 tree at the HDBaseT device.

**Parameters**

**buffer\_length** (*unsigned int*) – Length of the buffer to be filled

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] pointer to the start of a c style buffer to be filled

**Return type***brainstem.result.Result***setLinkRole** (*role*)

Sets the active link role

**Parameters****role** (*unsigned char*) – The role to be set.**Returns**An error result from the list of defined error codes in *brainstem.result.Result***Return type**

unsigned byte

### 3.2.19 I2C

See the *I2C Entity* for generic information.**class** *brainstem.entity.I2C* (*module, index*)

Interface the I2C buses on BrainStem modules. The class provides a way to send read and write commands to I2C devices on the entities bus.

**getSpeed** ()

Get I2C bus speed.

This call gets the communication speed for I2C transactions through this API. Speed is an enumeration value which can take the following values:

1 - 100Khz 2 - 400Khz 3 - 1MHz

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The speed setting value.

**Return type***brainstem.result.Result***read** (*address, read\_length*)

Read from a device on this I2C bus.

**Parameters**

- **address** (*unsigned char*) – The I2C address (7bit <XXXX-XXX0>) of the device to read.
- **read\_length** (*unsigned char*) – The length of the data to read in bytes.

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] The array of bytes that will be filled with the result, upon success. This array should be larger or equivalent to aBRAINSTEM\_MAXPACKETBYTES - 5

**Return type**

*brainstem.result.Result*

**setPullup** (*enable*)

Set bus pull-up state. This call only works with stems that have software controlled pull-ups. Check the datasheet for more information. This parameter is saved when system.save is called.

**Parameters**

**enable** (*bool*) - true enables pull-ups false disables them.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setSpeed** (*speed*)

Set I2C bus speed.

This call sets the communication speed for I2C transactions through this API. Speed is an enumeration value which can take the following values:

1 - 100Khz 2 - 400Khz 3 - 1MHz

**Parameters**

**speed** (*unsigned char*) - The speed setting value.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**write** (*address, buffer*)

Write to a device on this I2C bus.

**Parameters**

- **address** (*unsigned char*) - The I2C address (7bit <XXXX-XXX0>) of the device to write.
- **buffer** (*unsigned char*) - The data to send to the device This array should be no larger than aBRAINSTEM\_MAXPACKETBYTES - 5

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

### 3.2.20 Mux

See the [Mux Entity](#) for generic information.

**class** `brainstem.entity.Mux (module, index)`

A MUX is a multiplexer that takes one or more similar inputs (bus, connection, or signal) and allows switching to one or more outputs. An analogy would be the switchboard of a telephone operator. Calls (inputs) come in and by re-connecting the input to an output, the operator (multiplexer) can direct that input to one or more outputs. One possible output is to not connect the input to anything which essentially disables that input's connection to anything. Not every MUX has multiple inputs; some may simply be a single input that can be enabled (connected to a single output) or disabled (not connected to anything).

**getChannel ()**

Get the current selected mux channel.

#### Returns

**Object containing error code and returned value on success.**

##### error

[unsigned byte] An error result from the list of defined error codes

##### value

[unsigned char] Indicates which channel is selected.

#### Return type

[brainstem.result.Result](#)

**getChannelVoltage (channel)**

Get the voltage of the indicated mux channel.

#### Parameters

**channel** (*unsigned char*) – The channel in which voltage was requested.

---

**Note:** Not all modules provide 32 bits of accuracy; Refer to the module's datasheet to determine the analog bit depth and reference voltage.

---

#### Returns

**Object containing error code and returned value on success.**

##### error

[unsigned byte] An error result from the list of defined error codes

##### value

[int] 32 bit signed integer (in microvolts) based on the board's ground and reference voltages.

#### Return type

[brainstem.result.Result](#)

**getConfiguration ()**

Get the configuration of the mux.

#### Returns

**Object containing error code and returned value on success.**

##### error

[unsigned byte] An error result from the list of defined error codes

**value**

[int] integer representing the mux configuration either default, or split-mode.

**Return type**

*brainstem.result.Result*

**getEnable()**

Get the mux enable/disable status

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] true: mux is enabled, false: the mux is disabled.

**Return type**

*brainstem.result.Result*

**getSplitMode()**

Get the current split mode mux configuration.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] integer representing the channel selection for each sub-channel within the mux. See the data-sheet for the device for specific information.

**Return type**

*brainstem.result.Result*

**setChannel(channel)**

Set the current mux channel.

**Parameters**

**channel** (*unsigned char*) – mux channel to select.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setConfiguration(config)**

Set the configuration of the mux.

**Parameters**

**config** (*int*) – integer representing the mux configuration either *muxConfig\_default*, or *muxConfig\_splitMode*.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte



**setEnabled** (*enable*)

Enable the mux.

**Parameters**

**enable** (*bool*) – true: enables the mux for the selected channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setSplitMode** (*split\_mode*)

Sets the mux's split mode configuration.

**Parameters**

**split\_mode** (*int*) – integer representing the channel selection for each sub-channel within the mux. See the data-sheet for the device for specific information.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.21 PoE

See the [PoE Entity](#) for generic information.

**class** `brainstem.entity.PoE` (*module*, *index*)

This entity is only available on certain modules, and provides a Power over Ethernet control ability.

**getPairAccumulatedPower** (*pair*)

Gets the accumulated power for a given pair.

**Parameters**

**pair** (*unsigned char*) –

**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] Variable to be filled with the total accumulated POE power in milli-watts (mW).

**Return type**

[brainstem.result.Result](#)

**getPairCapacitance** (*pair*)

Gets the Capacitance for a given pair

**Parameters**

**pair** (*unsigned char*) –

**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The capacitance in nanofarads (1 == 1e-9F).

**Return type**

*brainstem.result.Result*

**getPairCurrent** (*pair*)

Gets the Current for a given pair.

**Parameters**

**pair** (*unsigned char*) -

**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The current in microamps (1 == 1e-6V).

**Return type**

*brainstem.result.Result*

**getPairDetectionStatus** (*pair*)

Gets detected status of the POE connection for a given pair.

**Parameters**

**pair** (*unsigned char*) -

**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current detected status of the pairs.

**Return type***brainstem.result.Result***getPairDiscoveredClass** (*pair*)

Gets the discovered class for a given pair.

**Parameters****pair** (*unsigned char*) -**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The negotiated POE class by the device (PSE/PD).

**Return type***brainstem.result.Result***getPairEnabled** (*pair*)

Gets the current enable value of the indicated POE pair.

**Parameters****pair** (*unsigned char*) -**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Enabled; 0 = Disabled;

**Return type***brainstem.result.Result***getPairPower** (*pair*)

Get the instantaneous power consumption for a given pair The equivalent of Voltage x Current

**Parameters****pair** (*unsigned char*) -**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] Variable to be filled with the pairs power in milli-watts (mW).

**Return type**

*brainstem.result.Result*

**getPairRequestedClass** (*pair*)

Gets the requested class for a given pair.

**Parameters**

**pair** (*unsigned char*) -

**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The requested POE class by the device (PD).

**Return type**

*brainstem.result.Result*

**getPairResistance** (*pair*)

Gets the Resistance for a given pair.

**Parameters**

**pair** (*unsigned char*) -

**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The resistance in milliohms (1 == 1e-3Z).

**Return type**

*brainstem.result.Result*

**getPairSourcingClass** (*pair*)

Gets the sourcing class for a given pair.

**Parameters**

**pair** (*unsigned char*) -

**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The POE class being offered by the device (PSE).

**Return type**

*brainstem.result.Result*

**getPairVoltage (pair)**

Gets the Voltage for a given pair.

**Parameters**

**pair** (*unsigned char*) -

**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The voltage in microvolts (1 == 1e-6V).

**Return type**

*brainstem.result.Result*

**getPowerMode ()**

Gets the power mode of the device

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The power mode (PD, PSE, Auto, Off).

**Return type**

*brainstem.result.Result*

**getPowerState ()**

Gets the power state of the device

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The power state (PD, PSE, Off).

**Return type**

*brainstem.result.Result*

**getTotalAccumulatedPower()**

Gets the total Accumulated Power

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] Variable to be filled with the total accumulated POE power in milli-watts (mW).

**Return type**

*brainstem.result.Result*

**getTotalPower()**

Gets the total instantaneous power consumption The equivalent of Pair1(Voltage x Current) + Pair2(Voltage x Current)

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] Variable to be filled with the total POE power in milli-watts (mW).

**Return type**

*brainstem.result.Result*

**setPairAccumulatedPower(pair, power)**

Sets the accumulated power for a given pair.

**Parameters**

- **pair** (*unsigned char*) -

**Selects PoE pair to access**

- 0 = Pair 1/2
- 1 = Pair 3/4

- **power** (*int*) - The power accumulator value to be set in milli-watts (mW).

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setPairEnabled** (*pair*, *enable*)

Enables or disables the indicated POE pair.

**Parameters**

- **pair** (*unsigned char*) -  
**Selects PoE pair to access**
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **enable** (*bool*) - 1 = Enable port; 0 = Disable port.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPairSourcingClass** (*pair*, *value*)

Sets the sourcing class for a given pair.

**Parameters**

- **pair** (*unsigned char*) -  
**Selects PoE pair to access**
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** (*unsigned char*) - The POE class being offered by the device (PSE).

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerMode** (*value*)

Sets the power mode of the device

**Parameters**

- value** (*unsigned char*) - The power mode (PD, PSE, Auto, Off).

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setTotalAccumulatedPower** (*power*)

Sets the total accumulated power

**Parameters**

- power** (*int*) - The power accumulator value to be set in milli-watts (mW).

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.22 Pointer

See the [Pointer Entity](#) for generic information.

**class** `brainstem.entity.Pointer (module, index)`

Allows access to the reflex scratchpad from a host computer.

The Pointers access the pad which is a shared memory area on a BrainStem module. The interface allows the use of the BrainStem scratchpad from the host, and provides a mechanism for allowing the host application and BrainStem relexes to communicate.

The Pointer allows access to the pad in a similar manner as a file pointer accesses the underlying file. The cursor position can be set via `setOffset`. A read of a character short or int can be made from that cursor position.

In addition the mode of the pointer can be set so that the cursor position automatically increments or set so that it does not this allows for multiple reads of the same pad value, or reads of multi-record values, via an incrementing pointer.

**getChar ()**

Get a char (1 byte) value from the pointer at this object's index, where elements are 1 byte long.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The value of a single character (1 byte) stored in the pointer.

**Return type**

[brainstem.result.Result](#)

**getInt ()**

Get an int (4 bytes) value from the pointer at this objects index, where elements are 4 bytes long

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The value of a single int (4 byte) stored in the pointer.

**Return type**

[brainstem.result.Result](#)

**getMode ()**

Get the mode of the pointer

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The mode: `aPOINTER_MODE_STATIC` or `aPOINTER_MODE_AUTO_INCREMENT`.



**Return type***brainstem.result.Result***getOffset ()**

Get the offset of the pointer

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned short] The value of the offset.

**Return type***brainstem.result.Result***getShort ()**

Get a short (2 byte) value from the pointer at this objects index, where elements are 2 bytes long

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned short] The value of a single short (2 byte) stored in the pointer.

**Return type***brainstem.result.Result***getTransferStore ()**

Get the handle to the store.

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The handle of the store.

**Return type***brainstem.result.Result***initiateTransferFromStore (transfer\_length)**

Transfer data from the store.

**Parameters****transfer\_length** (*unsigned char*) – The length of the data transfer.**Returns**An error result from the list of defined error codes in *brainstem.result.Result***Return type**

unsigned byte

**initiateTransferToStore** (*transfer\_length*)

Transfer data to the store.

**Parameters**

**transfer\_length** (*unsigned char*) – The length of the data transfer.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setChar** (*value*)

Set a char (1 byte) value to the pointer at this object's element index, where elements are 1 byte long.

**Parameters**

**value** (*unsigned char*) – The single char (1 byte) value to be stored in the pointer.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setInt** (*value*)

Set an int (4 bytes) value from the pointer at this objects index, where elements are 4 bytes long

**Parameters**

**value** (*unsigned int*) – The single int (4 byte) value to be stored in the pointer.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setMode** (*mode*)

Set the mode of the pointer

**Parameters**

**mode** (*unsigned char*) – The mode: `aPOINTER_MODE_STATIC` or `aPOINTER_MODE_AUTO_INCREMENT`.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setOffset** (*offset*)

Set the offset of the pointer

**Parameters**

**offset** (*unsigned short*) – The value of the offset.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setShort (value)**

Set a short (2 bytes) value to the pointer at this object's element index, where elements are 2 bytes long.

**Parameters**

**value** (*unsigned short*) – The single short (2 byte) value to be set in the pointer.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setTransferStore (handle)**

Set the handle to the store.

**Parameters**

**handle** (*unsigned char*) – The handle of the store.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.23 Port

See the [Port Entity](#) for generic information.

**class** `brainstem.entity.Port (module, index)`

The Port Entity provides software control over the most basic items related to a USB Port. This includes everything from the complete enable and disable of the entire port to the individual control of specific pins. Voltage and Current measurements are also included for devices which support the Port Entity.

**getAllocatedPower ()**

Gets the currently allocated power This value is determined by the power manager which is responsible for budgeting the systems available power envelope.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] Variable to be filled with the allocated power in milli-watts (mW).

**Return type**

[brainstem.result.Result](#)

**getAvailablePower ()**

Gets the current available power. This value is determined by the power manager which is responsible for budgeting the systems available power envelope.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Variable to be filled with the available power in milli-watts (mW).

**Return type**

*brainstem.result.Result*

**getCC1AccumulatedPower()**

Gets the CC1 Accumulated Power

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The accumulated power on Vconn in milliwatt-hours.

**Return type**

*brainstem.result.Result*

**getCC1Current()**

Get the current through the CC1 for a port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel current in micro-amps (1 == 1e-6A).

**Return type**

*brainstem.result.Result*

**getCC1Enabled()**

Gets the current enable value of the CC1 lines. Sub-component of getCCEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = CC1 enabled; 0 = CC1 disabled.

**Return type**

*brainstem.result.Result*

**getCC1State()**

Gets the current CC1 Strapping on local and remote The state is a bit packed value where the upper byte is used to represent the remote or partner device attached to the ports resistance and the lower byte is used to represent the local or hubs resistance.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned short] Variable to be filled with an packed enumerated representation of the CC state. Enumeration values for each byte are as follows:

- None = 0 = portCC1State\_None
- Invalid = 1 = portCC1State\_Invalid
- Rp (default) = 2 = portCC1State\_RpDefault
- Rp (1.5A) = 3 = portCC1State\_Rp1p5
- Rp (3A) = 4 = portCC1State\_Rp3p0
- Rd = 5 = portCC1State\_Rd
- Ra = 6 = portCC1State\_Ra
- Managed by controller = 7 = portCC1State\_Managed
- Unknown = 8 = portCC1State\_Unknown

**Return type**

*brainstem.result.Result*

**getCC1Voltage()**

Get the voltage of CC1 for a port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel voltage in micro-volts (1 == 1e-6V).

**Return type**

*brainstem.result.Result*

**getCC2AccumulatedPower()**

Gets the CC2 Accumulated Power

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The accumulated power on Vconn in milliwatt-hours.

**Return type**

*brainstem.result.Result*

**getCC2Current()**

Get the current through the CC2 for a port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel current in micro-amps (1 == 1e-6A).

**Return type**

*brainstem.result.Result*

**getCC2Enabled()**

Gets the current enable value of the CC2 lines. Sub-component of getCCEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = CC2 enabled; 0 = CC2 disabled.

**Return type**

*brainstem.result.Result*

**getCC2State()**

Gets the current CC2 Strapping on local and remote The state is a bit packed value where the upper byte is used to represent the remote or partner device attached to the ports resistance and the lower byte is used to represent the local or hubs resistance.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned short] Variable to be filled with an packed enumerated representation of the CC state. Enumeration values for each byte are as follows:

- None = 0 = portCC2State\_None
- Invalid = 1 = portCC2State\_Invalid
- Rp (default) = 2 = portCC2State\_RpDefault
- Rp (1.5A) = 3 = portCC2State\_Rp1p5
- Rp (3A) = 4 = portCC2State\_Rp3p0
- Rd = 5 = portCC2State\_Rd
- Ra = 6 = portCC2State\_Ra
- Managed by controller = 7 = portCC2State\_Managed
- Unknown = 8 = portCC2State\_Unknown

**Return type**

*brainstem.result.Result*

**getCC2Voltage()**

Get the voltage of CC2 for a port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel voltage in micro-volts (1 == 1e-6V).

**Return type**

*brainstem.result.Result*

**getCCCurrentLimit ()**

Gets the CC Current Limit Resistance The CC Current limit is the value that's set for the pull up resistance on the CC lines for basic USB-C negotiations.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with an enumerated representation of the CC Current limit.

- 0 = None
- 1 = Default (500/900mA)
- 2 = 1.5A
- 3 = 3.0A

**Return type**

*brainstem.result.Result*

**getCCEnabled ()**

Gets the current enable value of the CC lines. Sub-component (CC) of getEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = CC enabled; 0 = CC disabled.

**Return type**

*brainstem.result.Result*

**getCurrentLimit ()**

Gets the current limit of the port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Variable to be filled with the limit in microAmps (uA).

**Return type***brainstem.result.Result***getCurrentLimitMode()**

Gets the current limit mode. The mode determines how the port will react to an over current condition.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with an enumerated representation of the current limit mode. Available modes are product specific. See the reference documentation.

**Return type***brainstem.result.Result***getDataEnabled()**

Gets the current enable value of the data lines. Sub-component (Data) of getEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Data enabled; 0 = Data disabled.

**Return type***brainstem.result.Result***getDataHS1Enabled()**

Gets the current enable value of the High Speed A side (HSA) data lines. Sub-component of getDataHSEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Data enabled; 0 = Data disabled.

**Return type***brainstem.result.Result***getDataHS2Enabled()**

Gets the current enable value of the High Speed B side (HSB) data lines. Sub-component of getDataHSEnabled.

**Returns**

**Object containing error code and returned value on success.**



**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Data enabled; 0 = Data disabled.

**Return type**

*brainstem.result.Result*

**getDataHSEnabled()**

Gets the current enable value of the High Speed (HS) data lines. Sub-component of getDataEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Data enabled; 0 = Data disabled.

**Return type**

*brainstem.result.Result*

**getDataHSRoutingBehavior()**

Gets the HighSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with an enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Return type**

*brainstem.result.Result*

**getDataRole()**

Gets the Port Data Role.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The data role to be set. See datasheet for details.

**Return type**

*brainstem.result.Result*

**getDataSS1Enabled()**

Gets the current enable value of the Super Speed A side (SSA) data lines. Sub-component of getDataSSEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Data enabled; 0 = Data disabled.

**Return type**

*brainstem.result.Result*

**getDataSS2Enabled()**

Gets the current enable value of the Super Speed B side (SSB) data lines. Sub-component of getDataSSEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Data enabled; 0 = Data disabled.

**Return type**

*brainstem.result.Result*

**getDataSSEnabled()**

Gets the current enable value of the Super Speed (SS) data lines. Sub-component of getDataEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Data enabled; 0 = Data disabled.

**Return type**

*brainstem.result.Result*

**getDataSSRoutingBehavior()**

Gets the SuperSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with an enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Return type***brainstem.result.Result***getDataSpeed ()**

Gets the speed of the enumerated device.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Bit mapped value representing the devices speed. See "Devices" reference for details.

**Return type***brainstem.result.Result***getEnabled ()**

Gets the current enable value of the port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Fully enabled port; 0 = One or more disabled components.

**Return type***brainstem.result.Result***getErrors ()**

Returns any errors that are present on the port. Calling this function will clear the current errors. If the error persists it will be set again.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Bit mapped field representing the current errors of the ports

**Return type***brainstem.result.Result***getHSBoost ()**

Gets the ports USB 2.0 High Speed Boost Settings The setting determines how much additional drive the USB 2.0 signal will have in High Speed mode.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] An enumerated representation of the boost range. Available modes are product specific. See the reference documentation.

**Return type**

*brainstem.result.Result*

**getMode()**

Gets current mode of the port

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Bit mapped value representing the ports mode. See “Devices” reference for details.

**Return type**

*brainstem.result.Result*

**getName (buffer\_length=65536)**

Gets a user defined name of the port. Helpful for identifying ports/devices in a static environment.

**Parameters**

**buffer\_length** (*unsigned int*) – Length of the buffer to be filled

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[string] pointer to the start of a c style buffer to be filled

**Return type**

*brainstem.result.Result*

**getPowerEnabled()**

Gets the current enable value of the power lines. Sub-component (Power) of getEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Power enabled; 0 = Power disabled.

**Return type**

*brainstem.result.Result*

**getPowerLimit()**

Gets the user defined power limit for the port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Variable to be filled with the power limit in milli-watts (mW).

**Return type**

*brainstem.result.Result*

**getPowerLimitMode()**

Gets the power limit mode. The mode determines how the port will react to an over power condition.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with an enumerated representation of the power limit mode. Available modes are product specific. See the reference documentation.

**Return type**

*brainstem.result.Result*

**getPowerMode()**

Gets the Port Power Mode: Convenience Function of get/setPortMode

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current power mode.

**Return type**

*brainstem.result.Result*

**getSBU1Voltage()**

Get the voltage of SBU1 for a port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel voltage in micro-volts (1 == 1e-6V).

**Return type**

*brainstem.result.Result*

**getSBU2Voltage()**

Get the voltage of SBU2 for a port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel voltage in micro-volts (1 == 1e-6V).

**Return type**

*brainstem.result.Result*

**getState ()**

A bit mapped representation of the current state of the port. Reflects what the port IS which may differ from what was requested.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Variable to be filled with the current state.

**Return type**

*brainstem.result.Result*

**getVbusAccumulatedPower ()**

Gets the Vbus Accumulated Power

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The accumulated power on Vbus in milliwatt-hours.

**Return type**

*brainstem.result.Result*

**getVbusCurrent ()**

Gets the Vbus Current

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The current in microamps (1 == 1e-6A) currently present on Vbus.

**Return type**

*brainstem.result.Result*

**getVbusVoltage()**

Gets the Vbus Voltage

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The voltage in microvolts (1 == 1e-6V) currently present on Vbus.

**Return type**

*brainstem.result.Result*

**getVconn1Enabled()**

Gets the current enable value of the Vconn1 lines. Sub-component of getVconnEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Vconn1 enabled; 0 = Vconn1 disabled.

**Return type**

*brainstem.result.Result*

**getVconn2Enabled()**

Gets the current enable value of the Vconn2 lines. Sub-component of getVconnEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Vconn2 enabled; 0 = Vconn2 disabled.

**Return type**

*brainstem.result.Result*

**getVconnAccumulatedPower()**

Gets the Vconn Accumulated Power

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The accumulated power on Vconn in milliwatt-hours.

**Return type**

*brainstem.result.Result*

**getVconnCurrent ()**

Gets the Vconn Current

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The current in microamps (1 == 1e-6A) currently present on Vconn.

**Return type**

*brainstem.result.Result*

**getVconnEnabled ()**

Gets the current enable value of the Vconn lines. Sub-component (Vconn) of getEnabled.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] 1 = Vconn enabled; 0 = Vconn disabled.

**Return type**

*brainstem.result.Result*

**getVconnVoltage ()**

Gets the Vconn Voltage

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The voltage in microvolts (1 == 1e-6V) currently present on Vconn.

**Return type**

*brainstem.result.Result*

**getVoltageSetpoint ()**

Gets the current voltage setpoint value for the port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] the voltage setpoint of the port in uV.

**Return type**

*brainstem.result.Result*



**resetVbusAccumulatedPower ()**

Resets the Vbus Accumulated Power to zero.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**resetVconnAccumulatedPower ()**

Resets the Vconn Accumulated Power to zero.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setCC1AccumulatedPower (milliwatthours)**

Sets the CC1 Accumulated Power

**Parameters**

**milliwatthours** (*int*) – The accumulated power on Vconn to be set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setCC1Enabled (enable)**

Enables or disables the CC1 lines. Sub-component of `setCCEnabled`.

**Parameters**

**enable** (*bool*) – 1 = Enable CC1 lines; 0 = Disable CC1 lines.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setCC2AccumulatedPower (milliwatthours)**

Sets the CC2 Accumulated Power

**Parameters**

**milliwatthours** (*int*) – The accumulated power on Vconn to be set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setCC2Enabled (enable)**

Enables or disables the CC2 lines. Sub-component of `setCCEnabled`.

**Parameters**

**enable** (*bool*) – 1 = Enable CC2 lines; 0 = Disable CC2 lines.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setCCCurrentLimit** (*value*)

Sets the CC Current Limit Resistance The CC Current limit is the value that's set for the pull up resistance on the CC lines for basic USB-C negotiations.

**Parameters****value** (*unsigned char*) -

**Variable to be filled with an enumerated representation of the CC Current limit.**

- 0 = None
- 1 = Default (500/900mA)
- 2 = 1.5A
- 3 = 3.0A

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setCCEnabled** (*enable*)

Enables or disables the CC lines. Sub-component (CC) of `setEnabled`.

**Parameters****enable** (*bool*) - 1 = Enable CC lines; 0 = Disable CC lines.**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setCurrentLimit** (*limit*)

Sets the current limit of the port.

**Parameters****limit** (*unsigned int*) - Current limit to be applied in microAmps (uA).**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setCurrentLimitMode** (*mode*)

Sets the current limit mode. The mode determines how the port will react to an over current condition.

**Parameters**

**mode** (*unsigned char*) - An enumerated representation of the current limit mode. Available modes are product specific. See the reference documentation.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataEnabled (enable)**

Enables or disables the data lines. Sub-component (Data) of setEnabled.

**Parameters**

**enable** (*bool*) – 1 = Enable data; 0 = Disable data.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataHS1Enabled (enable)**

Enables or disables the High Speed A side (HSA) data lines. Sub-component of setDataHSEnabled.

**Parameters**

**enable** (*bool*) – 1 = Enable data; 0 = Disable data.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataHS2Enabled (enable)**

Enables or disables the High Speed B side (HSB) data lines. Sub-component of setDataHSEnabled.

**Parameters**

**enable** (*bool*) – 1 = Enable data; 0 = Disable data.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataHSEnabled (enable)**

Enables or disables the High Speed (HS) data lines. Sub-component of setDataEnabled.

**Parameters**

**enable** (*bool*) – 1 = Enable data; 0 = Disable data.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataHSRoutingBehavior (mode)**

Sets the HighSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Parameters**

**mode** (*unsigned char*) – An enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataSS1Enabled** (*enable*)

Enables or disables the Super Speed A side (SSA) data lines. Sub-component of setDataEnabled.

**Parameters**

**enable** (*bool*) - 1 = Enable data; 0 = Disable data.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataSS2Enabled** (*enable*)

Enables or disables the Super Speed B side (SSB) data lines. Sub-component of setDataSSEnabled.

**Parameters**

**enable** (*bool*) - 1 = Enable data; 0 = Disable data.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataSSEnabled** (*enable*)

Enables or disables the Super Speed (SS) data lines. Sub-component of setDataEnabled.

**Parameters**

**enable** (*bool*) - 1 = Enable data; 0 = Disable data.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataSSRoutingBehavior** (*mode*)

Sets the SuperSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Parameters**

**mode** (*unsigned char*) - An enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setEnabled** (*enable*)

Enables or disables the entire port.

**Parameters**

**enable** (*bool*) - 1 = Fully enable port; 0 = Fully disable port.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setHSBoost** (*boost*)

Sets the ports USB 2.0 High Speed Boost Settings The setting determines how much additional drive the USB 2.0 signal will have in High Speed mode.

**Parameters**

**boost** (*unsigned char*) – An enumerated representation of the boost range. Available values are product specific. See the reference documentation.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setMode** (*mode*)

Sets the mode of the port

**Parameters**

**mode** (*unsigned int*) – Port mode to be set. See “Devices” documentation for details.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setName** (*buffer*)

Sets a user defined name of the port. Helpful for identifying ports/devices in a static environment.

**Parameters**

**buffer** (*string*) – Pointer to the start of a c style buffer to be transferred.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerEnabled** (*enable*)

Enables or Disables the power lines. Sub-component (Power) of `setEnabled`.

**Parameters**

**enable** (*bool*) – 1 = Enable power; 0 = Disable power.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerLimit** (*limit*)

Sets a user defined power limit for the port.

**Parameters**

**limit** (*unsigned int*) – Power limit to be applied in milli-watts (mW).

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerLimitMode** (*mode*)

Sets the power limit mode. The mode determines how the port will react to an over power condition.

**Parameters**

**mode** (*unsigned char*) – An enumerated representation of the power limit mode to be applied Available modes are product specific. See the reference documentation.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerMode** (*power\_mode*)

Sets the Port Power Mode: Convenience Function of `get/setPortMode`

**Parameters**

**power\_mode** (*unsigned char*) – The power mode to be set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setVbusAccumulatedPower** (*milliwatthours*)

Sets the Vbus Accumulated Power

**Parameters**

**milliwatthours** (*int*) – The accumulated power on Vbus in milliwatt-hours to be set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setVconn1Enabled** (*enable*)

Enables or disables the Vconn1 lines. Sub-component of `setVconnEnabled`.

**Parameters**

**enable** (*bool*) – 1 = Enable Vconn1 lines; 0 = Disable Vconn1 lines.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setVconn2Enabled** (*enable*)

Enables or disables the Vconn2 lines. Sub-component of `setVconnEnabled`.

**Parameters**

**enable** (*bool*) – 1 = Enable Vconn2 lines; 0 = Disable Vconn2 lines.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setVconnAccumulatedPower** (*milliwatthours*)

Sets the Vconn Accumulated Power

**Parameters**

**milliwatthours** (*int*) – The accumulated power on Vconn to be set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setVconnEnabled** (*enable*)

Enables or disables the Vconn lines. Sub-component (Vconn) of `setEnabled`.

**Parameters**

**enable** (*bool*) – 1 = Enable Vconn lines; 0 = Disable Vconn lines.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setVoltageSetpoint** (*value*)

Sets the current voltage setpoint value for the port.

**Parameters**

**value** (*unsigned int*) – the voltage setpoint of the port in uV.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.24 PowerDelivery

See the [PowerDelivery Entity](#) for generic information.

**class** `brainstem.entity.PowerDelivery` (*module, index*)

Power Delivery or PD is a power specification which allows more charging options and device behaviors within the USB interface. This Entity will allow you to directly access the vast landscape of PD.

**getAttachTimeElapsed** (*buffer\_length=16384*)

Gets the length of time that the port has been in the attached state. Returned as a list of two unsigned integers, first seconds, then microseconds.

**Parameters**

**buffer\_length** (*unsigned int*) – Length of the buffer to be filed

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned int)] Pointer to list of unsigned integers to fill with attach time elapsed

**Return type***brainstem.result.Result***getCableCurrentMax ( )**

Gets the maximum current capability report by the e-mark of the attached cable.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Variable to be filled with an enumerated representation of current.**

- Unknown/Unattached (0)
- 3 Amps (1)
- 5 Amps (2)

**Return type***brainstem.result.Result***getCableOrientation ( )**

Gets the current orientation being used for PD communication

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Variable filled with an enumeration of the orientation.**

- Unconnected (0)
- CC1 (1)
- CC2 (2)

**Return type***brainstem.result.Result***getCableSpeedMax ( )**

Gets the maximum data rate capability reported by the e-mark of the attached cable.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Variable to be filled with an enumerated representation of data speed.**

- Unknown/Unattached (0)



- USB 2.0 (1)
- USB 3.2 gen 1 (2)
- USB 3.2 / USB 4 gen 2 (3)
- USB 4 gen 3 (4)

**Return type***brainstem.result.Result***getCableType ()**

Gets the cable type reported by the e-mark of the attached cable.

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Variable to be filled with an enumerated representation of the cable type.**

- Invalid, no e-mark and not Vconn powered (0)
- Passive cable with e-mark (1)
- Active cable (2)

**Return type***brainstem.result.Result***getCableVoltageMax ()**

Gets the maximum voltage capability reported by the e-mark of the attached cable.

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Variable to be filled with an enumerated representation of voltage.**

- Unknown/Unattached (0)
- 20 Volts DC (1)
- 30 Volts DC (2)
- 40 Volts DC (3)
- 50 Volts DC (4)

**Return type***brainstem.result.Result***getConnectionState ()**

Gets the current state of the connection in the form of an enumeration.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Pointer to be filled with the current connection state.

**Return type**

*brainstem.result.Result*

**getDataRoleCapabilities ()**

Gets the data roles that may be advertised by the local partner.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Variable to be filed with the data role**

- None = 0 = pdDataRoleCapabilities\_None
- DFP = 1 = pdDataRoleCapabilities\_DFP
- UFP = 2 = pdDataRoleCapabilities\_UFP
- DFP/UFP = 3 = pdDataRoleCapabilities\_DualRole (Dual Role Port)

**Return type**

*brainstem.result.Result*

**getFastRoleSwapCurrent ()**

Gets the Fast Role Swap Current The fast role swap current refers to the amount of current required by the Local Sink in order to successfully preform the swap.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**An enumerated value referring to current swap value.**

- 0A (0)
- 900mA (1)
- 1.5A (2)
- 3A (3)

**Return type**

*brainstem.result.Result*

**getFlagMode (flag)**

Gets the current mode of the local partner flag/advertisement. These flags are apart of the first Local Power Data Object and must be managed in order to accurately represent the system to other PD devices. This API allows overriding of that feature. Overriding may lead to unexpected behaviors.

**Parameters**

**flag** (*unsigned char*) – Flag/Advertisement to be modified

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Variable to be filled with the current mode.**

- Disabled (0)
- Enabled (1)
- Auto (2) default

**Return type**

*brainstem.result.Result*

**getLinkState ()**

Gets the current state of the connection in the form of a bitmask.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Pointer to be filled with the current connection state bits.

**Return type**

*brainstem.result.Result*

**getNumberOfPowerDataObjects (partner, power\_role)**

Gets the number of Power Data Objects (PDOs) for a given partner and power role.

**Parameters**

- **partner** (*unsigned char*) –

**Indicates which side of the PD connection is in question.**

- Local = 0 = powerdeliveryPartnerLocal
- Remote = 1 = powerdeliveryPartnerRemote

- **power\_role** (*unsigned char*) –

**Indicates which power role of PD connection is in question.**

- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with the number of PDOs.

**Return type**

*brainstem.result.Result*

**getOverride()**

Gets the current enabled overrides

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Bit mapped representation of the current override configuration.

**Return type**

*brainstem.result.Result*

**getPeakCurrentConfiguration()**

Gets the Peak Current Configuration for the Local Source. The peak current configuration refers to the allowable tolerance/overload capabilities in regards to the devices max current. This tolerance includes a maximum value and a time unit.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**An enumerated value referring to the current configuration.**

- Allowable values are 0 - 4

**Return type**

*brainstem.result.Result*

**getPowerDataObject(partner, power\_role, rule\_index)**

Gets the Power Data Object (PDO) for the requested partner, powerRole and index.

**Parameters**

- **partner** (*unsigned char*) -

**Indicates which side of the PD connection is in question.**

- Local = 0 = powerdeliveryPartnerLocal
- Remote = 1 = powerdeliveryPartnerRemote

- **power\_role** (*unsigned char*) -

**Indicates which power role of PD connection is in question.**

- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink
- **rule\_index** (*unsigned char*) – The index of the PDO in question. Valid index are 1-7.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Variable to be filled with the requested power rule.

**Return type**

*brainstem.result.Result*

**getPowerDataObjectEnabled** (*power\_role*, *rule\_index*)

Gets the enabled state of the Local Power Data Object (PDO) for a given power role and index. Enabled refers to whether the PDO will be advertised when a PD connection is made. This does not indicate the currently active rule index. This information can be found in Request Data Object (RDO).

**Parameters**

- **power\_role** (*unsigned char*) –  
**Indicates which power role of PD connection is in question.**
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **rule\_index** (*unsigned char*) – The index of the PDO in question. Valid index are 1-7.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] Variable to be filled with enabled state.

**Return type**

*brainstem.result.Result*

**getPowerDataObjectEnabledList** (*power\_role*)

Gets all Power Data Object enables for a given power role. Equivalent of calling PowerDeliveryClass::getPowerDataObjectEnabled() for all indexes.

**Parameters**

**power\_role** (*unsigned char*) –

**Indicates which power role of PD connection is in question.**

- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink

**Returns**

**Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with a mapped representation of the enabled PDOs for a given power role. Values align with a given rule index (bits 1-7, bit 0 is invalid)

**Return type**

*brainstem.result.Result*

**getPowerDataObjectList (buffer\_length=16384)**

Gets all Power Data Objects (PDOs). Equivalent to calling PowerDeliveryClass::getPowerDataObject() on all partners, power roles, and index's.

**Parameters**

**buffer\_length** (*unsigned int*) - Length of the buffer to be filled

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned int)] pointer to the start of a c style buffer to be filled The order of which is:

- Rules 1-7 Local Source
- Rules 1-7 Local Sink
- Rules 1-7 Partner Source
- Rules 1-7 Partner Sink.

**Return type**

*brainstem.result.Result*

**getPowerRole ()**

Gets the power role that is currently being advertised by the local partner. (CC Strapping).

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Variable to be filled with the power role**

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink
- Source/Sink = 3 = powerdeliveryPowerRoleSourceSink (Dual Role Port)

**Return type***brainstem.result.Result***getPowerRoleCapabilities()**

Gets the power roles that may be advertised by the local partner. (CC Strapping).

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Variable to be filed with the power role**

- None = 0 = pdPowerRoleCapabilities\_None
- Source = 1 = pdPowerRoleCapabilities\_Source
- Sink = 2 = pdPowerRoleCapabilities\_Sink
- Source/Sink = 3 = pdPowerRoleCapabilities\_DualRole (Dual Role Port)

**Return type***brainstem.result.Result***getPowerRolePreferred()**

Gets the preferred power role currently being advertised by the Local partner. (CC Strapping).

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Value to be applied.**

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink

**Return type***brainstem.result.Result***getRequestDataObject(partner)**

Gets the current Request Data Object (RDO) for a given partner. RDOs are provided by the sinking device and exist only after a successful PD negotiation (Otherwise zero). Only one RDO can exist at a time. i.e. Either the Local or Remote partner RDO

**Parameters**

**partner** (*unsigned char*) -

**Indicates which side of the PD connection is in question.**

- Local = 0 = powerdeliveryPartnerLocal
- Remote = 1 = powerdeliveryPartnerRemote

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Variable to be filled with the current RDO. Zero indicates the RDO is not active.

**Return type**

*brainstem.result.Result*

**static packDataObjectAttributes** (*partner, power\_role, rule\_index*)

Helper function for packing Data Object attributes. This value is used as a subindex for all Data Object calls with the BrainStem Protocol.

**Parameters**

- **partner** (*unsigned char*) -  
**Indicates which side of the PD connection.**
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **power\_role** (*unsigned char*) -  
**Indicates which power role of PD connection.**
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **rule\_index** (*unsigned char*) - Data object index.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with packed values.

**Return type**

*brainstem.result.Result*

**request** (*request*)

Requests an action of the Remote partner. Actions are not guaranteed to occur.

**Parameters**

**request** (*unsigned char*) -

**Request to be issued to the remote partner**

- pdRequestHardReset (0)
- pdRequestSoftReset (1)
- pdRequestDataReset (2)
- pdRequestPowerRoleSwap (3)



- `pdRequestPowerFastRoleSwap` (4)
- `pdRequestDataRoleSwap` (5)
- `pdRequestVconnSwap` (6)
- `pdRequestSinkGoToMinimum` (7)
- `pdRequestRemoteSourcePowerDataObjects` (8)
- `pdRequestRemoteSinkPowerDataObjects` (9)

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**`requestStatus` ( )**

Gets the status of the last request command sent.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Variable to be filled with the status

**Return type**

*`brainstem.result.Result`*

**`resetPowerDataObjectToDefault` (*power\_role*, *rule\_index*)**

Resets the Power Data Object (PDO) of the Local partner for a given power role and index.

**Parameters**

- **`power_role`** (*unsigned char*) -

**Indicates which power role of PD connection is in question.**

- Source = 1 = `powerdeliveryPowerRoleSource`
- Sink = 2 = `powerdeliveryPowerRoleSink`

- **`rule_index`** (*unsigned char*) - The index of the PDO in question. Valid index are 1-7.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**`setFastRoleSwapCurrent` (*swap\_current*)**

Sets the Fast Role Swap Current The fast role swap current refers to the amount of current required by the Local Sink in order to successfully preform the swap.

**Parameters**

- **`swap_current`** (*unsigned char*) -

**An enumerated value referring to value to be set.**

- 0A (0)

- 900mA (1)
- 1.5A (2)
- 3A (3)

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setFlagMode** (*flag, mode*)

Sets how the local partner flag/advertisement is managed. These flags are apart of the first Local Power Data Object and must be managed in order to accurately represent the system to other PD devices. This API allows overriding of that feature. Overriding may lead to unexpected behaviors.

**Parameters**

- **flag** (*unsigned char*) – Flag/Advertisement to be modified
- **mode** (*unsigned char*) –

**Value to be applied.**

- Disabled (0)
- Enabled (1)
- Auto (2) default

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setOverride** (*overrides*)

Sets the current enabled overrides

**Parameters**

**overrides** (*unsigned int*) – Overrides to be set in a bit mapped representation.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPeakCurrentConfiguration** (*configuration*)

Sets the Peak Current Configuration for the Local Source. The peak current configuration refers to the allowable tolerance/overload capabilities in regards to the devices max current. This tolerance includes a maximum value and a time unit.

**Parameters**

**configuration** (*unsigned char*) –

**An enumerated value referring to the configuration to be set**

- Allowable values are 0 - 4

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerDataObject** (*power\_role*, *rule\_index*, *pdo*)

Sets the Power Data Object (PDO) of the local partner for a given power role and index.

**Parameters**

- **power\_role** (*unsigned char*) -  
**Indicates which power role of PD connection is in question.**
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **rule\_index** (*unsigned char*) - The index of the PDO in question. Valid index are 1-7.
- **pdo** (*unsigned int*) - Power Data Object to be set.

**Returns**An error result from the list of defined error codes in `brainstem.result.Result`**Return type**

unsigned byte

**setPowerDataObjectEnabled** (*power\_role*, *rule\_index*, *enabled*)

Sets the enabled state of the Local Power Data Object (PDO) for a given powerRole and index. Enabled refers to whether the PDO will be advertised when a PD connection is made. This does not indicate the currently active rule index. This information can be found in Request Data Object (RDO).

**Parameters**

- **power\_role** (*unsigned char*) -  
**Indicates which power role of PD connection is in question.**
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **rule\_index** (*unsigned char*) - The index of the PDO in question. Valid index are 1-7.
- **enabled** (*bool*) - The state to be set.

**Returns**An error result from the list of defined error codes in `brainstem.result.Result`**Return type**

unsigned byte

**setPowerRole** (*power\_role*)

Set the current power role to be advertised by the Local partner. (CC Strapping).

**Parameters****power\_role** (*unsigned char*) -**Value to be applied.**

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource

- Sink = 2 = powerdeliveryPowerRoleSink
- Source/Sink = 3 = powerdeliveryPowerRoleSourceSink (Dual Role Port)

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setPowerRolePreferred** (*power\_role*)

Set the preferred power role to be advertised by the Local partner (CC Strapping).

**Parameters**

**power\_role** (*unsigned char*) -

**Value to be applied.**

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setRequestDataObject** (*rdo*)

Sets the current Request Data Object (RDO) for a given partner. Only the local partner can be changed. RDOs are provided by the sinking device and exist only after a successful PD negotiation (Otherwise zero). Only one RDO can exist at a time. i.e. Either the Local or Remote partner RDO

**Parameters**

**rdo** (*unsigned int*) - Request Data Object to be set.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**static unpackDataObjectAttributes** (*attributes*)

Helper function for unpacking Data Object attributes. This value is used as a subindex for all Data Object calls with the BrainStem Protocol.

**Parameters**

**attributes** (*unsigned char*) - Variable to be filled with packed values.

**Returns**

**Object containing error code and returned values on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**partner**

[unsigned char]

**Indicates which side of the PD connection.**

- Local = 0 = powerdeliveryPartnerLocal

- Remote = 1 = powerdeliveryPartnerRemote

**power\_role**

[unsigned char]

**Indicates which power role of PD connection.**

- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink

**rule\_index**

[unsigned char] Data object index.

**Return type***brainstem.result.Result*

### 3.2.25 RCServo

See the *RCServo Entity* for generic information.

**class** `brainstem.entity.RCServo (module, index)`

Interface to servo entities on BrainStem modules. Servo entities are built upon the digital input/output pins and therefore can also be inputs or outputs. Please see the product datasheet on the configuration limitations.

**getEnable ()**

Get the enable status of the servo channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] The current enable status of the servo entity. 0 is disabled, 1 is enabled.

**Return type***brainstem.result.Result***getPosition ()**

Get the position of the servo channel

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current position of the servo channel. Default 64 = a 1ms pulse and 192 = a 2ms pulse.

**Return type***brainstem.result.Result***getReverse ()**

Get the reverse status of the servo channel

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] The current reverse status of the servo entity. 0 = not reversed, 1 = reversed.

**Return type**

*brainstem.result.Result*

**setEnabled** (*enable*)

Enable the servo channel

**Parameters**

**enable** (*bool*) – The state to be set. 0 is disabled, 1 is enabled.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setPosition** (*position*)

Set the position of the servo channel

**Parameters**

**position** (*unsigned char*) – The position to be set. Default 64 = a 1ms pulse and 192 = a 2ms pulse.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setReverse** (*reverse*)

Set the output to be reversed on the servo channel

**Parameters**

**reverse** (*bool*) – Reverses the value set by “setPosition”. For example, if the position is set to 64 (1ms pulse) the output will now be 192 (2ms pulse), however “getPosition” will return the set value of 64. 0 = not reversed, 1 = reversed.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

### 3.2.26 Rail

See the *Rail Entity* for generic information.

**class** *brainstem.entity.Rail* (*module, index*)

Provides power rail functionality on certain modules. The RailClass can be used to control power to downstream devices. It has the ability to take current and voltage measurements, and depending on hardware, may have additional modes and capabilities.

**clearFaults()**

Clears the current fault state of the rail. Refer to the module datasheet for definition of the rail faults.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**getCurrent()**

Get the rail current.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The current in micro-amps (1 == 1e-6A).

**Return type**

*[brainstem.result.Result](#)*

**getCurrentLimit()**

Get the rail current limit setting. (Check product datasheet to see if this feature is available)

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The current in micro-amps (1 == 1e-6A).

**Return type**

*[brainstem.result.Result](#)*

**getCurrentSetpoint()**

Get the rail setpoint current. Rail current control capabilities vary between modules. Refer to the module datasheet for definition of the rail current capabilities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The current in micro-amps (1 == 1e-6A) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the `setCurrent` interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Return type**

*[brainstem.result.Result](#)*

**getEnable()**

Get the state of the external rail switch. Not all rails can be switched on and off. Refer to the module datasheet for capability specification of the rails.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] true: enabled: connected to the supply rail voltage; false: disabled: disconnected from the supply rail voltage

**Return type**

*brainstem.result.Result*

**getKelvinSensingEnable()**

Determine whether kelvin sensing is enabled or disabled. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] Kelvin sensing is enabled or disabled.

**Return type**

*brainstem.result.Result*

**getKelvinSensingState()**

Determine whether kelvin sensing has been disabled by the system. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] Kelvin sensing is enabled or disabled.

**Return type**

*brainstem.result.Result*

**getOperationalMode()**

Determine the current operational mode of the system. Refer to the module datasheet for definition of the rail operational mode capabilities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes



**value**

[unsigned char] The current operational mode setting.

**Return type**

*brainstem.result.Result*

**getOperationalState()**

Determine the current operational state of the system. Refer to the module datasheet for definition of the rail operational states.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The current operational state, hardware configuration, faults, and operating mode.

**Return type**

*brainstem.result.Result*

**getPower()**

Get the rail supply power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The power in milli-watts ( $1 == 1e-3W$ ) currently supplied by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setPower interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Return type**

*brainstem.result.Result*

**getPowerLimit()**

Get the rail power maximum limit setting. (Check product datasheet to see if this feature is available)

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The power in milli-watts (mW).

**Return type**

*brainstem.result.Result*

**getPowerSetpoint()**

Get the rail setpoint power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The power in milli-watts ( $1 == 1e-3W$ ) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setPower interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Return type**

*brainstem.result.Result*

**getResistance()**

Get the rail load resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The resistance in milli-ohms ( $1 == 1e-3Ohms$ ) currently drawn by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setResistance interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Return type**

*brainstem.result.Result*

**getResistanceSetpoint()**

Get the rail setpoint resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The resistance in milli-ohms ( $1 == 1e-3Ohms$ ) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setResistance interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Return type**

*brainstem.result.Result*

**getTemperature()**

Get the rail temperature.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The measured temperature associated with the rail in micro-Celsius ( $1 == 1e-6^{\circ}\text{C}$ ). The temperature may be associated with the module's internal rail circuitry or an externally connected temperature sensors. Refer to the module datasheet for definition of the temperature measurement location and specific capabilities.

**Return type**

*brainstem.result.Result*

**getVoltage()**

Get the rail supply voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The voltage in micro-volts ( $1 == 1e-6\text{V}$ ) currently supplied by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setVoltage interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Return type**

*brainstem.result.Result*

**getVoltageMaxLimit()**

Get the rail voltage maximum limit setting. (Check product datasheet to see if this feature is available)

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The voltage in micro-volts ( $1 == 1e-6\text{V}$ ).

**Return type**

*brainstem.result.Result*

**getVoltageMinLimit()**

Get the rail voltage minimum limit setting. (Check product datasheet to see if this feature is available)

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The voltage in micro-volts ( $1 == 1e-6\text{V}$ ).

**Return type***brainstem.result.Result***getVoltageSetpoint ()**

Get the rail setpoint voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The voltage in micro-volts (1 == 1e-6V) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setVoltage interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Return type***brainstem.result.Result***setCurrentLimit (microamps)**

Set the rail current limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microamps** (*int*) – The current in micro-amps (1 == 1e-6A).

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setCurrentSetpoint (microamps)**

Set the rail supply current. Rail current control capabilities vary between modules. Refer to the module datasheet for definition of the rail current capabilities.

**Parameters**

**microamps** (*int*) – The current in micro-amps (1 == 1e-6A) to be supply by the rail.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setEnabled (enable)**

Set the state of the external rail switch. Not all rails can be switched on and off. Refer to the module datasheet for capability specification of the rails.

**Parameters**

**enable** (*bool*) – true: enable and connect to the supply rail voltage; false: disable and disconnect from the supply rail voltage

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setKelvinSensingEnable** (*enable*)

Enable or Disable kelvin sensing on the module. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

**Parameters**

**enable** (*bool*) – enable or disable kelvin sensing.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setOperationalMode** (*mode*)

Set the operational mode of the rail. Refer to the module datasheet for definition of the rail operational capabilities.

**Parameters**

**mode** (*unsigned char*) – The operational mode to employ.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerLimit** (*milliwatts*)

Set the rail power maximum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**milliwatts** (*int*) – The power in milli-watts (mW).

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerSetpoint** (*milliwatts*)

Set the rail supply power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

**Parameters**

**milliwatts** (*int*) – The power in milli-watts ( $1 == 1e-3W$ ) to be supplied by the rail.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setResistanceSetpoint** (*milliohms*)

Set the rail load resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

**Parameters**

**milliohms** (*int*) – The resistance in milli-ohms ( $1 == 1e-3Ohms$ ) to be drawn by the rail.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setVoltageMaxLimit** (*microvolts*)

Set the rail voltage maximum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microvolts** (*int*) – The voltage in micro-volts (1 == 1e-6V).

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setVoltageMinLimit** (*microvolts*)

Set the rail voltage minimum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microvolts** (*int*) – The voltage in micro-volts (1 == 1e-6V).

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setVoltageSetpoint** (*microvolts*)

Set the rail supply voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

**Parameters**

**microvolts** (*int*) – The voltage in micro-volts (1 == 1e-6V) to be supplied by the rail.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.27 Relay

See the [Relay Entity](#) for generic information.

**class** `brainstem.entity.Relay` (*module, index*)

Interface to relay entities on BrainStem modules. Relay entities can be set, and the voltage read. Other capabilities may be available, please see the product datasheet.

**getEnable** ()

Get the state.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] False or 0 = Disabled, True or 1 = Enabled

**Return type***brainstem.result.Result***getVoltage()**

Get the scaled micro volt value with reference to ground.

---

**Note:** Not all modules provide 32 bits of accuracy. Refer to the module's datasheet to determine the analog bit depth and reference voltage.

---

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] 32 bit signed integer (in micro Volts) based on the boards ground and reference voltages.

**Return type***brainstem.result.Result***setEnabled(enable)**

Set the enable/disable state.

**Parameters****enable** (*bool*) – False or 0 = Disabled, True or 1 = Enabled**Returns**An error result from the list of defined error codes in *brainstem.result.Result***Return type**

unsigned byte

### 3.2.28 Signal

See the *Signal Entity* for generic information.**class** *brainstem.entity.Signal* (*module, index*)

Interface to digital pins configured to produce square wave signals. This class is designed to allow for square waves at various frequencies and duty cycles. Control is defined by specifying the wave period as (T3Time) and the active portion of the cycle as (T2Time). See the entity overview section of the reference for more detail regarding the timing.

**setEnabled()**

Get the Enable/Disable of the signal.

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] True to enable, false to disable

**Return type**

*brainstem.result.Result*

**getInvert ()**

Get the invert status the signal output.

Normal mode is High on t0 then low at t2. Inverted mode is Low at t0 on period start and high at t2.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] True to invert, false for normal mode.

**Return type**

*brainstem.result.Result*

**getT2Time ()**

Get the signal active period or T2 in nanoseconds.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Integer not larger than unsigned 32 bit max value representing the wave active period in nanoseconds.

**Return type**

*brainstem.result.Result*

**getT3Time ()**

Get the signal period or T3 in nanoseconds.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Integer not larger than unsigned 32 bit max value representing the wave period in nanoseconds.

**Return type**

*brainstem.result.Result*

**setEnabled (enable)**

Enable/Disable the signal output.

**Parameters**

**enable** (*bool*) – True to enable, false to disable



**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setInvert** (*invert*)

Invert the signal output.

Normal mode is High on t0 then low at t2. Inverted mode is Low at t0 on period start and high at t2.

**Parameters**

**invert** (*bool*) – True to invert, false for normal mode.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setT2Time** (*t2\_nsec*)

Set the signal active period or T2 in nanoseconds.

**Parameters**

**t2\_nsec** (*unsigned int*) – Integer not larger than unsigned 32 bit max value representing the wave active period in nanoseconds.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setT3Time** (*t3\_nsec*)

Set the signal period or T3 in nanoseconds.

**Parameters**

**t3\_nsec** (*unsigned int*) – Integer not larger than unsigned 32 bit max value representing the wave period in nanoseconds.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.29 Store

See the [Store Entity](#) for generic information.

**class** `brainstem.entity.Store` (*module, index*)

The store provides a flat file system on modules that have storage capacity. Files are referred to as slots and they have simple zero-based numbers for access. Store slots can be used for generalized storage and commonly contain compiled reflex code (files ending in `.map`) or templates used by the system. Slots simply contain bytes with no expected organization but the code or use of the slot may impose a structure. Stores have fixed indices based on type. Not every module contains a store of each type. Consult the module datasheet for details on which specific stores are implemented, if any, and the capacities of implemented stores.

**getSlotCapacity (slot)**

Get the slot capacity. Returns the Capacity of the slot, i.e. The number of bytes it can hold.

**Parameters**

**slot** (*unsigned char*) – The slot number.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The slot capacity.

**Return type**

*brainstem.result.Result*

**getSlotLocked (slot)**

Gets the current lock state of the slot Allows for write protection on a slot.

**Parameters**

**slot** (*unsigned char*) – The slot number

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] Variable to be filed with the locked state.

**Return type**

*brainstem.result.Result*

**getSlotSize (slot)**

Get the slot size. The slot size represents the size of the data currently filling the slot in bytes.

**Parameters**

**slot** (*unsigned char*) – The slot number.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The slot size.

**Return type**

*brainstem.result.Result*

**getSlotState (slot)**

Get slot state.

**Parameters**

**slot** (*unsigned char*) – The slot number.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] true: enabled, false: disabled.

**Return type**

*brainstem.result.Result*

**loadSlot** (*slot*, *buffer*)

Load the slot.

**Parameters**

- **slot** (*unsigned char*) – The slot number.
- **buffer** (*unsigned char*) – The data.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setSlotLocked** (*slot*, *lock*)

Sets the locked state of the slot Allows for write protection on a slot.

**Parameters**

- **slot** (*unsigned char*) – The slot number
- **lock** (*bool*) – state to be set.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**slotDisable** (*slot*)

Disable slot.

**Parameters**

**slot** (*unsigned char*) – The slot number.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**slotEnable** (*slot*)

Enable slot.

**Parameters**

**slot** (*unsigned char*) – The slot number.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

`unloadSlot (slot, buffer_length=65536)`

Unload the slot data.

**Parameters**

- `slot` (*unsigned char*) – The slot number.
- `buffer_length` (*unsigned int*) – The length of buffer buffer in bytes. This is the maximum number of bytes that should be unloaded.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned char)] Byte array that the unloaded data will be placed into.

**Return type**

*brainstem.result.Result*

### 3.2.30 System

See the *System Entity* for generic information.

**class** `brainstem.entity.System (module, index)`

The System class provides access to the core settings, configuration and system information of the Brain-Stem module. The class provides access to the model type, serial number and other static information as well as the ability to set boot reflexes, toggle the user LED, as well as affect module and router addresses etc.

`getBootSlot ()`

Get the store slot which is mapped when the module boots.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The slot number in aSTORE\_INTERNAL that is mapped after the module boots.

**Return type**

*brainstem.result.Result*

`getBuild ()`

Get the modules firmware build number The build number is a unique hash assigned to a specific firmware.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Variable to be filled with build.

**Return type**

*brainstem.result.Result*

**getErrors ()**

Gets any system level errors. Calling this function will clear the current errors. If the error persists it will be set again.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Bit mapped field representing the devices errors

**Return type**

*brainstem.result.Result*

**getHBInterval ()**

Get the delay between heartbeat packets which are sent from the module. For link modules, these these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current heartbeat delay.

**Return type**

*brainstem.result.Result*

**getHardwareVersion ()**

Get the module's hardware revision information. The content of the hardware version is specific to each Acroname product and used to indicate behavioral differences between product revisions. The codes are not well defined and may change at any time.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The module's hardware version information.

**Return type**

*brainstem.result.Result*

**getInputCurrent ()**

Get the module's input current.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The module's input current reported in microamps.

**Return type**

*brainstem.result.Result*

**getInputPowerBehavior ( )**

Gets the systems input power behavior. This behavior refers to where the device sources its power from and what happens if that power source goes away.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with an enumerated value representing behavior.

**Return type**

*brainstem.result.Result*

**getInputPowerBehaviorConfig (buffer\_length=16384)**

Gets the input power behavior configuration. Certain behaviors use a list of ports to determine priority when budgeting power.

**Parameters**

**buffer\_length** (*unsigned int*) – Length of the buffer to be filled

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned int)] pointer to the start of a c style buffer to be filled

**Return type**

*brainstem.result.Result*

**getInputPowerSource ( )**

Provides the source of the current power source in use.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with enumerated representation of the source.

**Return type**

*brainstem.result.Result*

**getInputVoltage ()**

Get the module's input voltage.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The module's input voltage reported in microvolts.

**Return type**

*brainstem.result.Result*

**getLED ()**

Get the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] true: LED on, false: LED off.

**Return type**

*brainstem.result.Result*

**getLEDMaxBrightness ()**

Gets the scaling factor for the brightness of all LEDs on the system. The brightness is set to the ratio of this value compared to 255 (maximum).

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Brightness value relative to 255

**Return type**

*brainstem.result.Result*

**getLinkInterface ()**

Gets the link interface configuration. This refers to which interface is being used for control by the device.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Variable to be filled with an enumerated value representing interface.**

- 0 = Auto= systemLinkAuto
- 1 = Control Port = systemLinkUSBControl
- 2 = Hub Upstream Port = systemLinkUSBHub

**Return type**

*brainstem.result.Result*

**getMaximumTemperature()**

Get the module's maximum temperature ever recorded in micro-C (uC). This value will persists through a power cycle.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The module's maximum system temperature in micro-C

**Return type**

*brainstem.result.Result*

**getMinimumTemperature()**

Get the module's minimum temperature ever recorded in micro-C (uC). This value will persists through a power cycle.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The module's minimum system temperature in micro-C

**Return type**

*brainstem.result.Result*

**getModel()**

Get the module's model enumeration. A subset of the possible model enumerations is defined in BrainStem.h under "BrainStem model codes". Other codes are be used by Acroname for proprietary module types.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The module's model enumeration.

**Return type**

*brainstem.result.Result*



**getModule ()**

Get the current address the module uses on the BrainStem network.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The address the module is using on the BrainStem network.

**Return type**

*brainstem.result.Result*

**getModuleBaseAddress ()**

Get the base address of the module. Software offsets and hardware offsets are added to this base address to produce the effective module address.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The address the module is using on the BrainStem network.

**Return type**

*brainstem.result.Result*

**getModuleHardwareOffset ()**

Get the module hardware address offset. This is added to the base address to allow the module address to be configured in hardware. Not all modules support the hardware module address offset. Refer to the module datasheet.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The module address offset.

**Return type**

*brainstem.result.Result*

**getModuleSoftwareOffset ()**

Get the software address offset. This software offset is added to the module base address, and potentially a module hardware address to produce the final module address. You must save the system settings and restart for this to take effect. Please review the BrainStem network fundamentals before modifying the module address.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The address for the module. Value must be even from 0-254.

**Return type**

*brainstem.result.Result*

**getName** (*buffer\_length=65536*)

Gets a user defined name of the device. Helpful for identifying ports/devices in a static environment.

**Parameters**

**buffer\_length** (*unsigned int*) - Length of the buffer to be filled

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[string] pointer to the start of a c style buffer to be filled

**Return type**

*brainstem.result.Result*

**getPowerLimit** ()

Reports the amount of power the system has access to and thus how much power can be budgeted to sinking devices.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The available power in milli-Watts (mW, 1 t)

**Return type**

*brainstem.result.Result*

**getPowerLimitMax** ()

Gets the user defined maximum power limit for the system. Provides mechanism for defining an unregulated power supplies capability.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Variable to be filled with the power limit in milli-Watts (mW)

**Return type**

*brainstem.result.Result*

**getPowerLimitState** ()

Gets a bit mapped representation of the factors contributing to the power limit. Active limit can be found through PowerDeliverClass::getPowerLimit().

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Variable to be filled with the state.

**Return type**

*brainstem.result.Result*

**getProtocolFeatures ()**

Gets the firmware protocol features

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Value representing the firmware protocol features

**Return type**

*brainstem.result.Result*

**getRouter ()**

Get the router address the module uses to communicate with the host and heartbeat to in order to establish the BrainStem network.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The address.

**Return type**

*brainstem.result.Result*

**getRouterAddressSetting ()**

Get the router address system setting. This setting may not be the same as the current router address if the router setting was set and saved but no reset has occurred. Please review the BrainStem network fundamentals before modifying the module address.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The address for the module. Value must be even from 0-254.

**Return type**

*brainstem.result.Result*

**getSerialNumber()**

Get the module's serial number. The serial number is a unique 32 bit integer which is usually communicated in hexadecimal format.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The module's serial number.

**Return type**

*brainstem.result.Result*

**getTemperature()**

Get the module's current temperature in micro-C

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The module's system temperature in micro-C

**Return type**

*brainstem.result.Result*

**getUnregulatedCurrent()**

Gets the current passing through the unregulated port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] Variable to be filled with the current in micro-Amps (uA).

**Return type**

*brainstem.result.Result*

**getUnregulatedVoltage()**

Gets the voltage present at the unregulated port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] Variable to be filled with the voltage in micro-Volts (uV).

**Return type**

*brainstem.result.Result*

**getUptime()**

Get the module's accumulated uptime in minutes

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The module's accumulated uptime in minutes.

**Return type**

*brainstem.result.Result*

**getVersion()**

Get the modules firmware version number. The version number is packed into the return value. Utility functions in the aVersion module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The build version date code.

**Return type**

*brainstem.result.Result*

**logEvents()**

Saves system log events to a slot defined by the module (usually ram slot 0).

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**reset()**

Reset the system. A return value of aErrTimeout indicates a successful reset, as the system resets immediately, which tears down the USB-link immediately, thus preventing an affirmative response.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**resetDeviceToFactoryDefaults()**

Resets the device to it factory default configuration.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**routeToMe** (*enable*)

Enables/Disables the route to me function. This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

**Parameters**

**enable** (*bool*) – Enable or disable of the route to me function 1 = enable.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**save** ()

Save the system operating parameters to the persistent module flash memory. Operating parameters stored in the system flash will be loaded after the module reboots. Operating parameters include: heartbeat interval, module address, module router address.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setBootSlot** (*slot*)

Set a store slot to be mapped when the module boots. The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

**Parameters**

**slot** (*unsigned char*) – The slot number in `aSTORE_INTERNAL` to be marked as a boot slot.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setHBInterval** (*interval*)

Set the delay between heartbeat packets which are sent from the module. For link modules, these these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments Valid values are 1-255; default is 10 (256 milliseconds).

**Parameters**

**interval** (*unsigned char*) – The desired heartbeat delay.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setInputPowerBehavior** (*behavior*)

Sets the systems input power behavior. This behavior refers to where the device sources its power from and what happens if that power source goes away.

**Parameters**

**behavior** (*unsigned char*) – An enumerated representation of behavior to be set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setInputPowerBehaviorConfig** (*buffer*)

Sets the input power behavior configuration. Certain behaviors use a list of ports to determine priority when budgeting power.

**Parameters**

**buffer** (*list(unsigned int)*) – Pointer to the start of a c style buffer to be transferred.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setLED** (*led\_on*)

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

**Parameters**

**led\_on** (*bool*) – true: turn the LED on, false: turn LED off.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setLEDMaxBrightness** (*brightness*)

Sets the scaling factor for the brightness of all LEDs on the system. The brightness is set to the ratio of this value compared to 255 (maximum). The colors of each LED may be inconsistent at low brightness levels. Note that if the brightness is set to zero and the settings are saved, then the LEDs will no longer indicate whether the system is powered on. When troubleshooting, the user configuration may need to be manually reset in order to view the LEDs again.

**Parameters**

**brightness** (*unsigned char*) – Brightness value relative to 255

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setLinkInterface** (*link\_interface*)

Sets the link interface configuration. This refers to which interface is being used for control by the device.

**Parameters**

**link\_interface** (*unsigned char*) –

**An enumerated representation of interface to be set.**

- 0 = Auto= `systemLinkAuto`

- 1 = Control Port = systemLinkUSBControl
- 2 = Hub Upstream Port = systemLinkUSBHub

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setModuleSoftwareOffset** (*address*)

Set the software address offset. This software offset is added to the module base address, and potentially a module hardware address to produce the final module address. You must save the system settings and restart for this to take effect. Please review the BrainStem network fundamentals before modifying the module address.

**Parameters**

**address** (*unsigned char*) – The address for the module. Value must be even from 0-254.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setName** (*buffer*)

Sets a user defined name for the device. Helpful for identification when multiple devices of the same type are present in a system.

**Parameters**

**buffer** (*string*) – Pointer to the start of a c style buffer to be transferred.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerLimitMax** (*power*)

Sets a user defined maximum power limit for the system. Provides mechanism for defining an unregulated power supplies capability.

**Parameters**

**power** (*unsigned int*) – Limit in milli-Watts (mW) to be set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setRouter** (*address*)

Set the router address the module uses to communicate with the host and heartbeat to in order to establish the BrainStem network. This setting must be saved and the board reset before the setting becomes active. Warning: changing the router address may cause the module to “drop off” the BrainStem network if the new router address is not in use by a BrainStem module. Please review the BrainStem network fundamentals before modifying the router address.

**Parameters**

**address** (*unsigned char*) – The router address to be used.



**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.31 Temperature

See the [Temperature Entity](#) for generic information.

**class** `brainstem.entity.Temperature (module, index)`

This entity is only available on certain modules, and provides a temperature reading in microcelsius.

**getValue()**

Get the modules temperature in micro-C

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The temperature in micro-Celsius (1 == 1e-6C).

**Return type**

[brainstem.result.Result](#)

**getValueMax()**

Get the module's maximum temperature in micro-C since the last power cycle.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The module's maximum temperature in micro-C

**Return type**

[brainstem.result.Result](#)

**getValueMin()**

Get the module's minimum temperature in micro-C since the last power cycle.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The module's minimum temperature in micro-C

**Return type**

[brainstem.result.Result](#)

### 3.2.32 Timer

See the *Timer Entity* for generic information.

**class** `brainstem.entity.Timer (module, index)`

The Timer Class provides access to a simple scheduler. The timer can set to fire only once, or to repeat at a certain interval. Additionally, a timer entity can execute custom Reflex routines upon firing.

**getExpiration ()**

Get the currently set expiration time in microseconds. This is not a “live” timer. That is, it shows the expiration time originally set with `setExpiration`; it does not “tick down” to show the time remaining before expiration.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The timer expiration duration in microseconds.

**Return type**

*brainstem.result.Result*

**getMode ()**

Get the mode of the timer which is either single or repeat mode.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The mode of the time. `aTIMER_MODE_REPEAT` or `aTIMER_MODE_SINGLE`.

**Return type**

*brainstem.result.Result*

**setExpiration (usec\_duration)**

Set the expiration time for the timer entity. When the timer expires, it will fire the associated `timer[index]()` reflex.

**Parameters**

**usec\_duration** (*unsigned int*) – The duration before timer expiration in microseconds.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setMode (mode)**

Set the mode of the timer which is either single or repeat mode.

**Parameters**

**mode** (*unsigned char*) – The mode of the timer. aTIMER\_MODE\_REPEAT or aTIMER\_MODE\_SINGLE.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.33 UART

See the [UART Entity](#) for generic information.

**class** `brainstem.entity.UART` (*module, index*)

A UART is a “Universal Asynchronous Receiver/Transmitter. Many times referred to as a COM (communication), Serial, or TTY (teletypewriter) port. The UART Class allows the enabling and disabling of the UART data lines.

**getAvailableProtocols** ()

Returns a bitmask containing a list of protocols that this UART entity is capable of selecting, and has an available protocol resource to assign.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Bitmask containing list of protocols that are available to select. The value of the `uartProtocol` is mapped to the bit index (e.g. `uartProtocol_Undefined` is bit 0, `uartProtocol_ExtronResponder_Value` is bit 1, etc.)

**Return type**

[brainstem.result.Result](#)

**getBaudRate** ()

Get the UART baud rate. If zero, automatic baud rate selection is used.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Pointer variable to be filled with baud rate.

**Return type**

[brainstem.result.Result](#)

**getCapableProtocols** ()

Returns a bitmask containing a list of protocols that this UART entity is allowed to select. This does not guarantee that selecting a protocol with “setProtocol” will have an available resource.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Bitmask containing list of protocols that may be selected. The value of the uartProtocol is mapped to the bit index (e.g. uartProtocol\_Undefined is bit 0, uartProtocol\_ExtronResponder\_Value is bit 1, etc.)

**Return type**

*brainstem.result.Result*

**getDataBits ()**

Get the number of bits per character

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Pointer to where result is placed.

**Return type**

*brainstem.result.Result*

**getEnable ()**

Get the enabled state of the uart.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] true: enabled, false: disabled.

**Return type**

*brainstem.result.Result*

**getFlowControl ()**

Set the UART flow control configuration

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Pointer to bitmask where result is placed. Possible bits:**

- uartFlowControl\_RTS\_CTS\_Bit
- uartFlowControl\_DSR\_DTR\_Bit
- uartFlowControl\_XON\_XOFF\_Bit

**Return type***brainstem.result.Result***getLinkChannel ()**

Gets the index of the UART Entity that this entity is linked to.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Pointer to where result is placed.

**Return type***brainstem.result.Result***getParity ()**

Get the UART parity.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Pointer variable to be filled with value. Possible values:**

- uartParity\_None\_Value
- uartParity\_Odd\_Value
- uartParity\_Even\_Value
- uartParity\_Mark\_Value
- uartParity\_Space\_Value

**Return type***brainstem.result.Result***getProtocol ()**

Get the UART protocol.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Pointer to where result is placed.

**Return type***brainstem.result.Result*

**getStopBits()**

Set the UART stop bit configuration

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Pointer to where result is placed. Possible values:**

- `uartStopBits_1_Value`
- `uartStopBits_1p5_Value`
- `uartStopBits_2_Value`

**Return type**

*brainstem.result.Result*

**setBaudRate(rate)**

Set the UART baud rate. If zero, automatic baud rate selection is used.

**Parameters**

**rate** (*unsigned int*) – baud rate.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataBits(data\_bits)**

Set the number of bits per character

**Parameters**

**data\_bits** (*unsigned char*) – Data Bits of UART Channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setEnabled(enabled)**

Enable the UART channel.

**Parameters**

**enabled** (*bool*) – true: enabled, false: disabled.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setFlowControl(flow\_control)**

Set the UART flow control configuration

**Parameters****flow\_control** (*unsigned char*) -**Flow Control of UART Channel as a bitmask. Allowed bits:**

- uartFlowControl\_RTS\_CTS\_Bit
- uartFlowControl\_DSR\_DTR\_Bit
- uartFlowControl\_XON\_XOFF\_Bit

**Returns**An error result from the list of defined error codes in `brainstem.result.Result`**Return type**

unsigned byte

**setLinkChannel** (*channel*)

Set the index of another UART Entity that should be linked to this UART.

If set to the index of this entity, the channel will not be linked. If set to the index of another UART entity, data will be sent between the two UART entities with no additional processing.

**Parameters****channel** (*unsigned char*) - Index of the UART Entity to link**Returns**An error result from the list of defined error codes in `brainstem.result.Result`**Return type**

unsigned byte

**setParity** (*parity*)

Set the UART parity.

**Parameters****parity** (*unsigned char*) -**Parity of UART Channel. Allowed options:**

- uartParity\_None\_Value
- uartParity\_Odd\_Value
- uartParity\_Even\_Value
- uartParity\_Mark\_Value
- uartParity\_Space\_Value

**Returns**An error result from the list of defined error codes in `brainstem.result.Result`**Return type**

unsigned byte

**setProtocol** (*protocol*)

Set the UART protocol.

**Parameters****protocol** (*unsigned char*) - An enumeration of serial protocols.**Returns**An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setStopBits** (*stop\_bits*)

Set the UART stop bit configuration

**Parameters****stop\_bits** (*unsigned char*) -**Stop Bits of UART Channel. Allowed options:**

- uartStopBits\_1\_Value
- uartStopBits\_1p5\_Value
- uartStopBits\_2\_Value

**Returns**An error result from the list of defined error codes in `brainstem.result.Result`**Return type**

unsigned byte

### 3.2.34 USB

See the [USB Entity](#) for generic information.**class** `brainstem.entity.USB` (*module, index*)

The USB class provides methods to interact with a USB hub and USB switches. Different USB hub products have varying support; check the datasheet to understand the capabilities of each product.

**clearPortErrorStatus** (*channel*)

Clear the error status for the given port.

**Parameters****channel** (*unsigned char*) - The port to clear error status for.**Returns**An error result from the list of defined error codes in `brainstem.result.Result`**Return type**

unsigned byte

**getAltModeConfig** (*channel*)

Get USB Alt Mode Configuration.

**Parameters****channel** (*unsigned char*) - The USB sub channel**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The USB configuration for the given channel.

**Return type**[brainstem.result.Result](#)



**getCC1Current** (*channel*)

Get the current through the CC1 for a port.

**Parameters**

**channel1** (*unsigned char*) – The USB sub channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel current in micro-amps (1 == 1e-6A).

**Return type**

*brainstem.result.Result*

**getCC1Enable** (*channel*)

Get Enable/Disable on the CC1 line.

**Parameters**

**channel1** (*unsigned char*) – USB channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool]

**State to be filled**

- Disabled: 0
- Enabled: 1

**Return type**

*brainstem.result.Result*

**getCC1Voltage** (*channel*)

Get the voltage of CC1 for a port.

**Parameters**

**channel1** (*unsigned char*) – The USB sub channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel voltage in micro-volts (1 == 1e-6V).

**Return type**

*brainstem.result.Result*

**getCC2Current** (*channel*)

Get the current through the CC2 for a port.

**Parameters**

**channel1** (*unsigned char*) – The USB sub channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel current in micro-amps (1 == 1e-6A).

**Return type**

*brainstem.result.Result*

**getCC2Enable** (*channel*)

Get Enable/Disable on the CC2 line.

**Parameters**

**channel1** (*unsigned char*) – USB channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool]

**State to be filled**

- Disabled: 0
- Enabled: 1

**Return type**

*brainstem.result.Result*

**getCC2Voltage** (*channel*)

Get the voltage of CC2 for a port.

**Parameters**

**channel1** (*unsigned char*) – The USB sub channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel voltage in micro-volts (1 == 1e-6V).

**Return type**

*brainstem.result.Result*

**getCableFlip** (*channel*)

Get Cable flip setting.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] The enable/disable status of cable flip.

**Return type**

*brainstem.result.Result*

**getConnectMode** (*channel*)

Gets the connect mode of the switch.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current connect mode

**Return type**

*brainstem.result.Result*

**getDownstreamBoostMode** ()

Get the downstream boost mode. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current Downstream boost setting 0, 1, 2, or 3.

**Return type**

*brainstem.result.Result*

**getDownstreamDataSpeed** (*channel*)

Get the current data transfer speed for the downstream port. The data speed can be Hi-Speed (2.0) or SuperSpeed (3.0) depending on what the downstream device attached is using

**Parameters**

**channel** (*unsigned char*) – USB downstream channel to check.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char]

**Filled with the current port data speed**

- N/A: usbDownstreamDataSpeed\_na = 0
- Hi Speed: usbDownstreamDataSpeed\_hs = 1
- SuperSpeed: usbDownstreamDataSpeed\_ss = 2

**Return type**

*brainstem.result.Result*

**getEnumerationDelay ()**

Get the inter-port enumeration delay in milliseconds.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Millisecond delay in 100mS increments (100, 200, 300 etc.)

**Return type**

*brainstem.result.Result*

**getHubMode ()**

Get a bit mapped representation of the hubs mode; see the product datasheet for mode mapping and meaning.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The USB hub mode.

**Return type**

*brainstem.result.Result*

**getPortCurrent (channel)**

Get the current through the power line for a port.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel current in micro-amps (1 == 1e-6A).

**Return type**

*brainstem.result.Result*

**getPortCurrentLimit** (*channel*)

Get the current limit for the port.

**Parameters**

**channel1** (*unsigned char*) – USB downstream channel to limit.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The current limit setting.

**Return type**

*brainstem.result.Result*

**getPortError** (*channel*)

Get the current error for the Port.

**Parameters**

**channel1** (*unsigned char*) – USB downstream channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

**Return type**

*brainstem.result.Result*

**getPortMode** (*channel*)

Get the current mode for the Port. The mode is a bitmapped representation of the capabilities of the usb port. These capabilities change for each of the BrainStem devices which implement the usb entity. See your device reference page for a complete list of capabilities. Some devices use a common bit mapping for port mode, as sub-definitions of usbPortMode.

**Parameters**

**channel1** (*unsigned char*) – USB downstream channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

**Return type***brainstem.result.Result***getPortState** (*channel*)

Get the current State for the Port.

**Parameters****channel1** (*unsigned char*) – USB downstream channel.**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

**Return type***brainstem.result.Result***getPortVoltage** (*channel*)

Get the voltage on the power line for a port.

**Parameters****channel1** (*unsigned char*) – The USB sub channel.**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel voltage in microvolts (1 == 1e-6V).

**Return type***brainstem.result.Result***getSBU1Voltage** (*channel*)

Get the voltage of SBU1 for a port.

**Parameters****channel1** (*unsigned char*) – The USB sub channel.**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel voltage in micro-volts (1 == 1e-6V).

**Return type***brainstem.result.Result***getSBU2Voltage** (*channel*)

Get the voltage of SBU2 for a port.

**Parameters**

**channel1** (*unsigned char*) – The USB sub channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[int] The USB channel voltage in micro-volts (1 == 1e-6V).

**Return type**

*brainstem.result.Result*

**getSBUEnable** (*channel*)

Get the Enable/Disable status of the SBU

**Parameters**

**channel1** (*unsigned char*) – The USB sub channel.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[bool] The enable/disable status of the SBU

**Return type**

*brainstem.result.Result*

**getUpstreamBoostMode** ()

Get the upstream boost mode. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current Upstream boost setting 0, 1, 2, or 3.

**Return type**

*brainstem.result.Result*

**getUpstreamMode** ()

Get the upstream switch mode for the USB upstream ports. Returns auto, port 0 or port 1.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The Upstream port mode.

**Return type***brainstem.result.Result***getUpstreamState ( )**

Get the upstream switch state for the USB upstream ports. Returns 2 if no ports plugged in, 0 if the mode is set correctly and a cable is plugged into port 0, and 1 if the mode is set correctly and a cable is plugged into port 1.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The Upstream port state.

**Return type***brainstem.result.Result***setAltModeConfig (channel, configuration)**

Set USB Alt Mode Configuration.

**Parameters**

- **channel** (*unsigned char*) – The USB sub channel
- **configuration** (*unsigned int*) – The USB configuration to be set for the given channel.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setCC1Enable (channel, enable)**

Set Enable/Disable on the CC1 line.

**Parameters**

- **channel** (*unsigned char*) – USB channel.
- **enable** (*bool*) –

**State to be set**

- Disabled: 0
- Enabled: 1

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setCC2Enable (channel, enable)**

Set Enable/Disable on the CC2 line.

**Parameters**

- **channel** (*unsigned char*) – USB channel.



- **enable** (*bool*) –

**State to be filled**

- Disabled: 0
- Enabled: 1

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setCableFlip** (*channel*, *enable*)

Set Cable flip. This will flip SBU, CC and SS data lines.

**Parameters**

- **channel** (*unsigned char*) – The USB sub channel.
- **enable** (*bool*) –

**The state to be set The state to be set**

- Disabled: 0
- Enabled: 1

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setConnectMode** (*channel*, *mode*)

Sets the connect mode of the switch.

**Parameters**

- **channel** (*unsigned char*) – The USB sub channel.
- **mode** (*unsigned char*) –

**The connect mode**

- `usbManualConnect` = 0
- `usbAutoConnect` = 1

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataDisable** (*channel*)

Disable only the data lines for a port without changing the state of the power line.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDataEnable** (*channel*)

Enable the only the data lines for a port without changing the state of the power line.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setDownstreamBoostMode** (*setting*)

Set the downstream boost mode. Boost mode increases the drive strength of the USB data signals (power signals are not changed). Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through “pogo” pins. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost. This setting is not applied until a `stem.system.save()` call and power cycle of the hub. Setting is then persistent until changed or the hub is reset. After reset, default value of 0% boost is restored.

**Parameters**

**setting** (*unsigned char*) – Downstream boost setting 0, 1, 2, or 3.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setEnumerationDelay** (*ms\_delay*)

Set the inter-port enumeration delay in milliseconds.

**Parameters**

**ms\_delay** (*unsigned int*) – Millisecond delay in 100mS increments (100, 200, 300 etc.)

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setHiSpeedDataDisable** (*channel*)

Disable only the data lines for a port without changing the state of the power line, Hi-Speed (2.0) only.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setHiSpeedDataEnable** (*channel*)

Enable the only the data lines for a port without changing the state of the power line, Hi-Speed (2.0) only.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setHubMode** (*mode*)

Set a bit mapped hub state; see the product datasheet for state mapping and meaning.

**Parameters**

**mode** (*unsigned int*) – The USB hub mode.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPortCurrentLimit** (*channel, microamps*)

Set the current limit for the port. If the set limit is not achievable, devices will round down to the nearest available current limit setting. This setting can be saved with a `stem.system.save()` call.

**Parameters**

- **channel** (*unsigned char*) – USB downstream channel to limit.
- **microamps** (*unsigned int*) – The current limit setting.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPortDisable** (*channel*)

Disable both power and data lines for a port.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPortEnable** (*channel*)

Enable both power and data lines for a port.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPortMode** (*channel, mode*)

Set the mode for the Port. The mode is a bitmapped representation of the capabilities of the usb port. These capabilities change for each of the BrainStem devices which implement the usb entity. See your device reference page for a complete list of capabilities. Some devices use a common bit mapping for port mode, as sub-definitions of `usbPortMode`.

**Parameters**

- **channel** (*unsigned char*) – USB downstream channel to set the mode on.
- **mode** (*unsigned int*) – The port mode setting as packed bit field.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerDisable** (*channel*)

Disable only the power line for a port without changing the state of the data lines.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setPowerEnable** (*channel*)

Enable only the power line for a port without changing the state of the data lines.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setSBUEnable** (*channel, enable*)

Enable/Disable only the SBU1/2 based on the configuration of the `usbPortMode` settings.

**Parameters**

- **channel** (*unsigned char*) – The USB sub channel.
- **enable** (*bool*) – The state to be set - Disabled: 0 - Enabled: 1

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setSuperSpeedDataDisable** (*channel*)

Disable only the data lines for a port without changing the state of the power line, SuperSpeed (3.0) only.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setSuperSpeedDataEnable** (*channel*)

Enable the only the data lines for a port without changing the state of the power line, SuperSpeed (3.0) only.

**Parameters**

**channel** (*unsigned char*) – The USB sub channel.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setUpstreamBoostMode** (*setting*)

Set the upstream boost mode. Boost mode increases the drive strength of the USB data signals (power signals are not changed). Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through “pogo” pins. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost. This setting is not applied until a `stem.system.save()` call and power cycle of the hub. Setting is then persistent until changed or the hub is reset. After reset, default value of 0% boost is restored.

**Parameters**

**setting** (*unsigned char*) – Upstream boost setting 0, 1, 2, or 3.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setUpstreamMode** (*mode*)

Set the upstream switch mode for the USB upstream ports. Values are `usbUpstreamModeAuto`, `usbUpstreamModePort0`, `usbUpstreamModePort1`, and `usbUpstreamModeNone`.

**Parameters**

**mode** (*unsigned char*) – The Upstream port mode.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

### 3.2.35 USBSystem

See the [USBSystem Entity](#) for generic information.

**class** `brainstem.entity.USBSystem` (*module, index*)

The USBSystem class provides high level control of the lower level Port Class.

**getDataHSMaxDataRate** ()

Gets the USB HighSpeed Max datarate

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Current maximum datarate for the USB HighSpeed signals.

**Return type**

*brainstem.result.Result*

**getDataRoleBehavior()**

Gets the behavior of how upstream and downstream ports are determined, i.e. How do you manage requests for data role swaps and new upstream connections.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with an enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

**Return type**

*brainstem.result.Result*

**getDataRoleBehaviorConfig(buffer\_length=16384)**

Gets the current data role behavior configuration. Certain data role behaviors use a list of ports to determine priority host priority.

**Parameters**

**buffer\_length** (*unsigned int*) – Length of the buffer to be filled

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned int)] pointer to the start of a c style buffer to be filled

**Return type**

*brainstem.result.Result*

**getDataRoleList()**

Gets the data role of all ports with a single call Equivalent to calling PortClass::getDataRole() on each individual port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] A bit packed representation of the data role for all ports.

**Return type**

*brainstem.result.Result*

**getDataSSMaxDatarate()**

Gets the USB SuperSpeed Max datarate

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Current maximum datarate for the USB SuperSpeed signals.

**Return type***brainstem.result.Result***getEnabledList ()**

Gets the current enabled status of all ports with a single call. Equivalent to calling PortClass::setEnabled() on each port.

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Bit packed representation of the enabled status for all ports.

**Return type***brainstem.result.Result***getEnumerationDelay ()**

Gets the inter-port enumeration delay in milliseconds. Delay is applied upon hub enumeration.

**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] the current inter-port delay in milliseconds.

**Return type***brainstem.result.Result***getModeList (buffer\_length=16384)**

Gets the current mode of all ports with a single call. Equivalent to calling PortClass:getMode() on each port.

**Parameters****buffer\_length** (*unsigned int*) – Length of the buffer to be filled**Returns****Object containing error code and returned value on success.****error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned int)] pointer to the start of a c style buffer to be filled

**Return type***brainstem.result.Result*

**getOverride()**

Gets the current enabled overrides

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned int] Bit mapped representation of the current override configuration.

**Return type**

*brainstem.result.Result*

**getPowerBehavior()**

Gets the behavior of the power manager. The power manager is responsible for budgeting the power of the system, i.e. What happens when requested power greater than available power.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] Variable to be filled with an enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

**Return type**

*brainstem.result.Result*

**getPowerBehaviorConfig (buffer\_length=16384)**

Gets the current power behavior configuration. Certain power behaviors use a list of ports to determine priority when budgeting power.

**Parameters**

**buffer\_length** (*unsigned int*) - Length of the buffer to be filled

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned int)] pointer to the start of a c style buffer to be filled

**Return type**

*brainstem.result.Result*

**getSelectorMode()**

Gets the current mode of the selector input. This mode determines what happens and in what order when the external selector input is used.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes



**value**

[unsigned char] Variable to be filled with the selector mode

**Return type**

*brainstem.result.Result*

**getStateList** (*buffer\_length=16384*)

Gets the state for all ports with a single call. Equivalent to calling PortClass::getState() on each port.

**Parameters**

**buffer\_length** (*unsigned int*) - Length of the buffer to be filled

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[list(unsigned int)] pointer to the start of a c style buffer to be filled

**Return type**

*brainstem.result.Result*

**getUpstream** ()

Gets the upstream port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current upstream port.

**Return type**

*brainstem.result.Result*

**getUpstreamHS** ()

Gets the USB HighSpeed upstream port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current upstream port.

**Return type**

*brainstem.result.Result*

**getUpstreamSS** ()

Gets the USB SuperSpeed upstream port.

**Returns**

**Object containing error code and returned value on success.**

**error**

[unsigned byte] An error result from the list of defined error codes

**value**

[unsigned char] The current upstream port.

**Return type**

*brainstem.result.Result*

**setDataHSMaxDatarate (datarate)**

Sets the USB HighSpeed Max datarate

**Parameters**

**datarate** (*unsigned int*) – Maximum datarate for the USB HighSpeed signals.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setDataRoleBehavior (behavior)**

Sets the behavior of how upstream and downstream ports are determined, i.e. How do you manage requests for data role swaps and new upstream connections.

**Parameters**

**behavior** (*unsigned char*) – An enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setDataRoleBehaviorConfig (buffer)**

Sets the current data role behavior configuration. Certain data role behaviors use a list of ports to determine host priority.

**Parameters**

**buffer** (*list (unsigned int)*) – Pointer to the start of a c style buffer to be transferred.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setDataSSMaxDatarate (datarate)**

Sets the USB SuperSpeed Max datarate

**Parameters**

**datarate** (*unsigned int*) – Maximum datarate for the USB SuperSpeed signals.

**Returns**

An error result from the list of defined error codes in *brainstem.result.Result*

**Return type**

unsigned byte

**setEnabledList** (*enabled\_list*)

Sets the enabled status of all ports with a single call. Equivalent to calling PortClass::setEnabled() on each port.

**Parameters**

**enabled\_list** (*unsigned int*) – Bit packed representation of the enabled status for all ports to be applied.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setEnumerationDelay** (*ms\_delay*)

Sets the inter-port enumeration delay in milliseconds. Delay is applied upon hub enumeration.

**Parameters**

**ms\_delay** (*unsigned int*) – The delay in milliseconds to be applied between port enables

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setModeList** (*buffer*)

Sets the mode of all ports with a single call. Equivalent to calling PortClass::setMode() on each port

**Parameters**

**buffer** (*list(unsigned int)*) – Pointer to the start of a c style buffer to be transferred.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setOverride** (*overrides*)

Sets the current enabled overrides

**Parameters**

**overrides** (*unsigned int*) – Overrides to be set in a bit mapped representation.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setPowerBehavior** (*behavior*)

Sets the behavior of how available power is managed, i.e. What happens when requested power is greater than available power.

**Parameters**

**behavior** (*unsigned char*) – An enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

**Returns**

An error result from the list of defined error codes in brainstem.result.Result

**Return type**

unsigned byte

**setPowerBehaviorConfig** (*buffer*)

Sets the current power behavior configuration. Certain power behaviors use a list of ports to determine priority when budgeting power.

**Parameters**

**buffer** (*list (unsigned int)*) – Pointer to the start of a c style buffer to be transferred.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setSelectorMode** (*mode*)

Sets the current mode of the selector input. This mode determines what happens and in what order when the external selector input is used.

**Parameters**

**mode** (*unsigned char*) – Mode to be set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setUpstream** (*port*)

Sets the upstream port.

**Parameters**

**port** (*unsigned char*) – The upstream port to set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setUpstreamHS** (*port*)

Sets the USB HighSpeed upstream port.

**Parameters**

**port** (*unsigned char*) – The upstream port to set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**

unsigned byte

**setUpstreamSS** (*port*)

Sets the USB SuperSpeed upstream port.

**Parameters**

**port** (*unsigned char*) – The upstream port to set.

**Returns**

An error result from the list of defined error codes in `brainstem.result.Result`

**Return type**  
unsigned byte

## 3.3 C++ API Reference

### 3.3.1 Acroname Modules

#### USBHub3c

##### Class

class **aUSBHub3c** : public Acroname::BrainStem::Module

Concrete Module implementation of a USBHub3c Allows a user to connect to and control an attached hub.

##### Public Types

enum **PORT\_ID**

Port ID

*Values:*

enumerator **kPORT\_ID\_0**

enumerator **kPORT\_ID\_1**

enumerator **kPORT\_ID\_2**

enumerator **kPORT\_ID\_3**

enumerator **kPORT\_ID\_4**

enumerator **kPORT\_ID\_5**

enumerator **kPORT\_ID\_CONTROL**

enumerator **kPORT\_ID\_POWER\_C**

typedef enum *aUSBHub3c::PORT\_ID* **PORT\_ID\_t**

Port ID

## Public Members

*HubClass* **hub**

Hub Class

Acroname::BrainStem::*PowerDeliveryClass* **pd**[aUSBHUB3C\_NUM\_PD\_PORTS]

Power Delivery Class

Acroname::BrainStem::*RailClass* **rail**[aUSBHUB3C\_NUM\_RAILS]

Rail Class

Acroname::BrainStem::*StoreClass* **store**[aUSBHUB3C\_NUM\_STORES]

Store Class

Acroname::BrainStem::*SystemClass* **system**

System Class

Acroname::BrainStem::*TemperatureClass* **temperature**[aUSBHUB3C\_NUM\_TEMPERATURES]

Temperature Class

Acroname::BrainStem::*I2CClass* **i2c**[aUSBHUB3C\_NUM\_I2C]

I2C Class

Acroname::BrainStem::*USBClass* **usb**

USB Class

Acroname::BrainStem::*UARTClass* **uart**[aUSBHUB3C\_NUM\_UART]

UART Class

class **HubClass** : public Acroname::BrainStem::*USBSystemClass*

Hub class implementation for use with USBHub3c.

## Defines

**aUSBHUB3C\_MODULE** 6

USBHub3c module number

**aUSBHUB3C\_NUM\_STORES** 2

Number of Store instances available

**aUSBHUB3C\_NUM\_INTERNAL\_SLOTS** 12

Store: Number of internal slots instances available

**aUSBHUB3C\_NUM\_RAM\_SLOTS** 1

Store: Number of RAM slot instances available

**aUSBHUB3C\_STORE\_INTERNAL\_INDEX** 0

Store: Array index for internal store

**aUSBHUB3C\_STORE\_RAM\_INDEX** 1

Store: Array index for RAM store

**aUSBHUB3C\_STORE\_EEPROM\_INDEX** 2

Store: Array index for EEPROM store

**aUSBHUB3C\_NUM\_TEMPERATURES** 3

Number of Temperature instances available

**aUSBHUB3C\_NUM\_USB** 1

Number of USB instances available

**aUSBHUB3C\_NUM\_USB\_PORTS** 8

Number of USB ports available

**aUSBHUB3C\_NUM\_PORTS** 8

Number of Ports available

**aUSBHUB3C\_NUM\_PD\_PORTS** 8

Number of PD compatible ports available

**aUSBHUB3C\_NUM\_PD\_RULES\_PER\_PORT** 7

Number of PD Rules per port available

**aUSBHUB3C\_NUM\_RAILS** 7

Number of Rail instances available

**aUSBHUB3C\_NUM\_I2C** 1

Number of I2C instances available

**aUSBHUB3C\_NUM\_UART** 2

Number of UART instances available

## USBHub3p

### Class

class **aUSBHub3p** : public Acroname::BrainStem::Module

Concrete Module implementation of a [aUSBHub3p](#) Allows a user to connect to and control an attached hub.



## Public Types

enum **PORT\_ID**

Port ID 3p

*Values:*

enumerator **kPORT\_ID\_0**

enumerator **kPORT\_ID\_1**

enumerator **kPORT\_ID\_2**

enumerator **kPORT\_ID\_3**

enumerator **kPORT\_ID\_4**

enumerator **kPORT\_ID\_5**

enumerator **kPORT\_ID\_6**

enumerator **kPORT\_ID\_7**

enumerator **kPORT\_ID\_DWNA**

enumerator **kPORT\_ID\_UP0**

enumerator **kPORT\_ID\_UP1**

enumerator **kPORT\_ID\_CONTROL**

typedef enum *aUSBHub3p::PORT\_ID* **PORT\_ID\_t**

Port ID 3p

## Public Members

*HubClass* **hub**

Hub Class

Acroname::BrainStem::*AppClass* **app**[aUSBHUB3P\_NUM\_APPS]

App Class

Acroname::BrainStem::*PointerClass* **pointer**[aUSBHUB3P\_NUM\_POINTERS]

Pointer Class

Acroname::BrainStem::*StoreClass* **store**[aUSBHUB3P\_NUM\_STORES]  
Store Class

Acroname::BrainStem::*SystemClass* **system**  
System Class

Acroname::BrainStem::*TemperatureClass* **temperature**  
Temperature Class

Acroname::BrainStem::*TimerClass* **timer**[aUSBHUB3P\_NUM\_TIMERS]  
Timer Class

Acroname::BrainStem::*USBClass* **usb**  
USB Class

class **HubClass** : public Acroname::BrainStem::*USBSystemClass*  
Hub class implementation for use with USBHub3p.

## Defines

**aUSBHUB3P\_MODULE** 6  
USBHub3p module number

**aUSBHUB3P\_NUM\_APPS** 4  
Number of App instances available

**aUSBHUB3P\_NUM\_POINTERS** 4  
Number of Pointer instances available

**aUSBHUB3P\_NUM\_STORES** 2  
Number of Store instances available

**aUSBHUB3P\_NUM\_INTERNAL\_SLOTS** 12  
Store: Number of internal slots instances available

**aUSBHUB3P\_NUM\_RAM\_SLOTS** 1  
Store: Number of RAM slot instances available

**aUSBHUB3P\_NUM\_TIMERS** 8  
Number of Timer instances available

**aUSBHUB3P\_NUM\_USB** 1  
Number of USB instances available

**aUSBHUB3P\_NUM\_USB\_PORTS** 8  
Number of USB ports available

**aUSBHUB3P\_NUM\_PORTS** 12  
Number of Prts available

### Port State Defines

**aUSBHUB3P\_USB\_VBUS\_ENABLED** 0  
USB VBUS current state

**aUSBHUB3P\_USB2\_DATA\_ENABLED** 1  
USB2 data current state

**aUSBHUB3P\_USB3\_DATA\_ENABLED** 3  
USB3 data current state

**aUSBHUB3P\_USB\_SPEED\_USB2** 11  
USB2 speed current state

**aUSBHUB3P\_USB\_SPEED\_USB3** 12  
USB3 speed current state

**aUSBHUB3P\_USB\_ERROR\_FLAG** 19  
Error indicator for this port  
(see 'Port Errors' below)

**aUSBHUB3P\_USB2\_BOOST\_ENABLED** 20  
USB2 boost current state

**aUSBHUB3P\_DEVICE\_ATTACHED** 23  
Device attached indicator for this port

### Port State Error Defines

**aUSBHUB3P\_ERROR\_VBUS\_OVERCURRENT** 0  
VBUS overcurrent error

**aUSBHUB3P\_ERROR\_VBUS\_BACKDRIVE** 1  
VBUS backdrive (backpower) error

**aUSBHUB3P\_ERROR\_HUB\_POWER** 2

Hub power error

**aUSBHUB3P\_ERROR\_OVER\_TEMPERATURE** 3

Over temperature error

**aUSBHUB3P\_ERROR\_DISCHARGE\_ERR** 4

For compat with USBHub2x4

**aUSBHUB3P\_ERROR\_SHORT\_CIRCUIT** 5

Short circuit detected

## USBHub2x4

### Class

class **aUSBHub2x4** : public Acroname::BrainStem::Module

Concrete Module implementation of a USBHub2x4 Allows a user to connect to and control an attached hub.

### Public Types

enum **PORT\_ID**

Port ID 2x4

*Values:*

enumerator **kPORT\_ID\_0**

enumerator **kPORT\_ID\_1**

enumerator **kPORT\_ID\_2**

enumerator **kPORT\_ID\_3**

enumerator **kPORT\_ID\_UP0**

enumerator **kPORT\_ID\_UP1**

typedef enum *aUSBHub2x4::PORT\_ID* **PORT\_ID\_t**

Port ID 2x4

## Public Members

*HubClass* **hub**

Hub Class

Acroname::BrainStem::*AppClass* **app**[aUSBHUB2X4\_NUM\_APPS]

App Class

Acroname::BrainStem::*PointerClass* **pointer**[aUSBHUB2X4\_NUM\_POINTERS]

Pointer Class

Acroname::BrainStem::*StoreClass* **store**[aUSBHUB2X4\_NUM\_STORES]

Store Class

Acroname::BrainStem::*SystemClass* **system**

System Class

Acroname::BrainStem::*TemperatureClass* **temperature**

Temperature Class

Acroname::BrainStem::*TimerClass* **timer**[aUSBHUB2X4\_NUM\_TIMERS]

Timer Class

Acroname::BrainStem::*USBClass* **usb**

USB Class

class **HubClass** : public Acroname::BrainStem::*USBSystemClass*

Hub class implementation for use with USBHub2x4.

## Defines

**aUSBHUB2X4\_MODULE** 6

USBHub2x4 module number

**aUSBHUB2X4\_NUM\_APPS** 4

Number of App instances available

**aUSBHUB2X4\_NUM\_POINTERS** 4

Number of Pointer instances available

**aUSBHUB2X4\_NUM\_STORES** 2

Number of Store instances available

**aUSBHUB2X4\_NUM\_INTERNAL\_SLOTS** 12

Store: Number of internal slots instances available

**aUSBHUB2X4\_NUM\_RAM\_SLOTS** 1

Store: Number of RAM slot instances available

**aUSBHUB2X4\_NUM\_TIMERS** 8

Number of Timer instances available

**aUSBHUB2X4\_NUM\_USB** 1

Number of USB instances available

**aUSBHUB2x4\_NUM\_USB\_PORTS** 4

Number of USB ports available

**aUSBHUB2x4\_NUM\_PORTS** 6

Number of Ports available

### Port State Defines

**aUSBHUB2X4\_USB\_VBUS\_ENABLED** 0

USB VBUS current state

**aUSBHUB2X4\_USB2\_DATA\_ENABLED** 1

USB2 data current state

**aUSBHUB2X4\_USB\_ERROR\_FLAG** 19

Error indicator for this port

(see 'Port Errors' below)

**aUSBHUB2X4\_USB2\_BOOST\_ENABLED** 20

USB2 boost current state

**aUSBHUB2X4\_DEVICE\_ATTACHED** 23

Device attached indicator for this port

**aUSBHUB2X4\_CONSTANT\_CURRENT** 24

Constant current mode indicator

## Port State Error Defines

**aUSBHUB2X4\_ERROR\_VBUS\_OVERCURRENT** 0

VBUS overcurrent error

**aUSBHUB2X4\_ERROR\_OVER\_TEMPERATURE** 3

Over temperature error

**aUSBHub2X4\_ERROR\_DISCHARGE** 4

Discharge error

## USBCSwitchPro

### Class

class **aUSBCSwitchPro** : public Acroname::BrainStem::Module

Concrete Module implementation of a USBCSwitchPro Allows a user to connect to and control an attached switch.

### Public Types

enum **PORT\_ID**

Port ID

*Values:*

enumerator **kPORT\_ID\_0**

enumerator **kPORT\_ID\_1**

enumerator **kPORT\_ID\_2**

enumerator **kPORT\_ID\_3**

enumerator **kPORT\_ID\_COMMON**

enumerator **kPORT\_ID\_CONTROL**

typedef enum *aUSBCSwitchPro::PORT\_ID* **PORT\_ID\_t**

Port ID

## Public Members

Acroname::BrainStem::*PowerDeliveryClass* **pd**[aUSBCSWITCHPRO\_NUM\_PD\_PORTS]  
Power Delivery Class

Acroname::BrainStem::*RailClass* **rail**[aUSBCSWITCHPRO\_NUM\_RAILS]  
Rail Class

Acroname::BrainStem::*StoreClass* **store**[aUSBCSWITCHPRO\_NUM\_STORES]  
Store Class

Acroname::BrainStem::*SystemClass* **system**  
System Class

Acroname::BrainStem::*TemperatureClass*  
**temperature**[aUSBCSWITCHPRO\_NUM\_TEMPERATURES]  
Temperature Class

Acroname::BrainStem::*I2CClass* **i2c**[aUSBCSWITCHPRO\_NUM\_I2C]  
I2C Class

Acroname::BrainStem::*USBClass* **usb**  
USB Class

Acroname::BrainStem::*UARTClass* **uart**[aUSBCSWITCHPRO\_NUM\_UART]  
UART Class

Acroname::BrainStem::*MuxClass* **mux**  
Mux Class

Acroname::BrainStem::*DigitalClass* **digital**[aUSBCSWITCHPRO\_NUM\_DIGITALS]  
Digital Class

## Defines

**aUSBCSWITCHPRO\_MODULE** 16  
USBCSwitchPro module number

**aUSBCSWITCHPRO\_NUM\_STORES** 3  
Number of Store instances available

**aUSBCSWITCHPRO\_NUM\_INTERNAL\_SLOTS** 12  
Store: Number of internal slots instances available



**aUSBCSWITCHPRO\_NUM\_RAM\_SLOTS 1**

Store: Number of RAM slot instances available

**aUSBCSWITCHPRO\_NUM\_EEPROM\_SLOTS 8**

Store: Number of EEPROM slot instances available

**aUSBCSWITCHPRO\_STORE\_INTERNAL\_INDEX 0**

Store: Array index for internal store

**aUSBCSWITCHPRO\_STORE\_RAM\_INDEX 1**

Store: Array index for RAM store

**aUSBCSWITCHPRO\_STORE\_EEPROM\_INDEX 2**

Store: Array index for EEPROM store

**aUSBCSWITCHPRO\_NUM\_TEMPERATURES 5**

Number of Temperature instances available

**aUSBCSWITCHPRO\_NUM\_USB 1**

Number of USB instances available

**aUSBCSWITCHPRO\_NUM\_USB\_PORTS 6**

Number of USB ports available

**aUSBCSWITCHPRO\_NUM\_PORTS 6**

Number of Ports available

**aUSBCSWITCHPRO\_NUM\_PD\_PORTS 6**

Number of PD compatible ports available

**aUSBCSWITCHPRO\_NUM\_PD\_RULES\_PER\_PORT 7**

Number of PD Rules per port available

**aUSBCSWITCHPRO\_NUM\_RAILS 1**

Number of Rail instances available

**aUSBCSWITCHPRO\_NUM\_I2C 1**

Number of I2C instances available

**aUSBCSWITCHPRO\_NUM\_UART 2**

Number of UART instances available

**aUSBCSWITCHPRO\_NUM\_MUX 1**

Number of Mux instances available

**aUSBCSWITCHPRO\_NUM\_MUX\_CHANNELS** 4

Number of Mux channels available

**aUSBCSWITCHPRO\_NUM\_DIGITALS** 1

Number of Digital instances available

## Port State Defines

**Warning:** doxygengroup: Cannot find group “aUSBCSwitchPro\_Port\_State\_Defines” in doxygen xml output for project “BrainStem” from directory: doxml/xml

## Port State Error Defines

**Warning:** doxygengroup: Cannot find group “aUSBCSwitchPro\_Port\_Orientation\_Defines” in doxygen xml output for project “BrainStem” from directory: doxml/xml

## USBCSwitch

### Class

class **aUSBCSwitch** : public Acroname::BrainStem::Module

Concrete Module implementation of a USBCSwitch Allows a user to connect to and control an attached switch.

### Public Types

enum **EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS**

Equalizer 3P0 transmitter configs

*Values:*

enumerator **MUX\_1db\_COM\_0db\_900mV**

enumerator **MUX\_0db\_COM\_1db\_900mV**

enumerator **MUX\_1db\_COM\_1db\_900mV**

enumerator **MUX\_0db\_COM\_0db\_900mV**

enumerator **MUX\_0db\_COM\_0db\_1100mV**

enumerator **MUX\_1db\_COM\_0db\_1100mV**

enumerator **MUX\_0db\_COM\_1db\_1100mV**

enumerator **MUX\_2db\_COM\_2db\_1100mV**

enumerator **MUX\_0db\_COM\_0db\_1300mV**

enum **EQUALIZER\_3P0\_RECEIVER\_CONFIGS**

Equalizer 3P0 receiver configs

*Values:*

enumerator **LEVEL\_1\_3P0**

enumerator **LEVEL\_2\_3P0**

enumerator **LEVEL\_3\_3P0**

enumerator **LEVEL\_4\_3P0**

enumerator **LEVEL\_5\_3P0**

enumerator **LEVEL\_6\_3P0**

enumerator **LEVEL\_7\_3P0**

enumerator **LEVEL\_8\_3P0**

enumerator **LEVEL\_9\_3P0**

enumerator **LEVEL\_10\_3P0**

enumerator **LEVEL\_11\_3P0**

enumerator **LEVEL\_12\_3P0**

enumerator **LEVEL\_13\_3P0**

enumerator **LEVEL\_14\_3P0**

enumerator **LEVEL\_15\_3P0**

enumerator **LEVEL\_16\_3P0**

enum **EQUALIZER\_2P0\_TRANSMITTER\_CONFIGS**

Equalizer 2P0 transmitter configs

*Values:*

enumerator **TRANSMITTER\_2P0\_40mV**

enumerator **TRANSMITTER\_2P0\_60mV**

enumerator **TRANSMITTER\_2P0\_80mV**

enumerator **TRANSMITTER\_2P0\_0mV**

enum **EQUALIZER\_2P0\_RECEIVER\_CONFIGS**

Equalizer 3P0 receiver configs

*Values:*

enumerator **LEVEL\_1\_2P0**

enumerator **LEVEL\_2\_2P0**

enum **EQUALIZER\_CHANNELS**

Equalizer channels

*Values:*

enumerator **BOTH**

enumerator **MUX**

enumerator **COMMON**

enum **daughtercard\_type**

Daughter Cards

*Values:*

enumerator **NO\_DAUGHTERCARD**

enumerator **PASSIVE\_DAUGHTERCARD**

enumerator **REDRIVER\_DAUGHTERCARD**

enumerator **UNKNOWN\_DAUGHTERCARD**

## Public Members

Acroname::BrainStem::*MuxClass* **mux**  
Mux Class

Acroname::BrainStem::*StoreClass* **store**[aUSBCSWITCH\_NUM\_STORES]  
Store Class

Acroname::BrainStem::*SystemClass* **system**  
System Class Timer Class

Acroname::BrainStem::*USBCClass* **usb**  
USB Class

Acroname::BrainStem::*EqualizerClass* **equalizer**[aUSBCSWITCH\_NUM\_EQ]  
Equalizer Class

## Defines

**aUSBCSWITCH\_MODULE** 6  
USBCSwitch module number

**aUSBCSWITCH\_NUM\_STORES** 2  
Number of Store instances available

**aUSBCSWITCH\_NUM\_INTERNAL\_SLOTS** 12  
Store: Number of internal slots instances available

**aUSBCSWITCH\_NUM\_RAM\_SLOTS** 1  
Store: Number of RAM slot instances available

**aUSBCSWITCH\_NUM\_USB** 1  
Number of USB instances available

**aUSBCSWITCH\_NUM\_MUX** 1  
Number of Mux instances available

**aUSBCSWITCH\_NUM\_EQ** 2  
Number of Equalizer instances available

**aUSBCSWITCH\_NUM\_MUX\_CHANNELS** 4  
Number of Mux channels available

## Port State Defines

**usbPortStateVBUS 0**

USB VBUS current state

**usbPortStateUSB2A 1**

USB2 side A current state

**usbPortStateUSB2B 2**

USB2 side B current state

**usbPortStatesBU 3**

SBU current state

**usbPortStateSS1 4**

SS1 current state

**usbPortStateSS2 5**

SS2 A current state

**usbPortStateCC1 6**

CC1 current state

**usbPortStateCC2 7**

CC2 A current state

**usbPortStateCCFlip 14**

CC flip status

**usbPortStateSSFlip 15**

SS flip status

**usbPortStatesBUFlip 16**

SBU flip status

**usbPortStateUSB2Flip 17**

USB2 flip status

**usbPortStateConnectionEstablished 23**

Connection established state

**usbPortStateCC1Inject 26**

CC1 inject current state

**usbPortStateCC2Inject** 27

CC2 inject current state

**usbPortStateCC1Detect** 28

CC1 detect current state

**usbPortStateCC2Detect** 29

CC2 detect current state

**usbPortStateCC1LogicState** 30

CC1 logic current state

**usbPortStateCC2LogicState** 31

CC2 logic current state

**get\_usbPortStateDaughterCard** (var) ((var & (3 << 18)) >> 18)

Daughter card status

## Port State Error Defines

**Warning:** doxygengroup: Cannot find group "aUSBCSwitch\_Port\_Orientation\_Defines" in doxygen xml output for project "BrainStem" from directory: doxml/xml

## MTM-DAQ-2

### Class

class **aMTMDAQ2** : public Acroname::BrainStem::Module

Concrete Module implementation of an MTM-DAQ-2 Allows a user to connect to and control an attached module.

### Public Members

Acroname::BrainStem::AnalogClass **analog**[aMTMDAQ2\_NUM\_ANALOGS]

Analog Class

Acroname::BrainStem::AppClass **app**[aMTMDAQ2\_NUM\_APPS]

App Class

Acroname::BrainStem::DigitalClass **digital**[aMTMDAQ2\_NUM\_DIGITALS]

Digital Class

Acroname::BrainStem::*I2CClass* **i2c**[aMTMDAQ2\_NUM\_I2C]  
I2C Class

Acroname::BrainStem::*PointerClass* **pointer**[aMTMDAQ2\_NUM\_POINTERS]  
Pointer Class

Acroname::BrainStem::*StoreClass* **store**[aMTMDAQ2\_NUM\_STORES]  
Store Class

Acroname::BrainStem::*SystemClass* **system**  
System Class

Acroname::BrainStem::*TimerClass* **timer**[aMTMDAQ2\_NUM\_TIMERS]  
Timer Class

### Public Static Functions

static inline const std::list<uint8\_t> &**getSingleEndedInputRanges** (void)  
Get list of analog ranges for single-ended inputs.

**Return values**

**std::list** – analog ranges

static inline const std::list<uint8\_t> &**getDifferentialInputRanges** (void)  
Get list of analog ranges for differential inputs.

**Return values**

**std::list** – analog ranges

static inline const std::list<uint8\_t> &**getOutputRanges** (void)  
Get list of analog range outputs.

**Return values**

**std::list** – analog ranges

### Defines

**aMTMDAQ2\_MODULE\_BASE\_ADDRESS** 10  
MTM-DAQ-2 module base address

**aMTMDAQ2\_NUM\_ANALOGS** 18  
Number of Analog instances available

**aMTMDAQ2\_NUM\_ANALOG\_INPUTS** 16  
Analog: Number of Inputs available

**aMTMDAQ2\_NUM\_ANALOG\_OUTPUTS** 2  
Analog: Number of Outputs available



**aMTMDAQ2\_NUM\_APPS** 4

Number of App instances available

**aMTMDAQ2\_BULK\_CAPTURE\_MAX\_HZ** 500000

Bulk Capture Max Hertz

**aMTMDAQ2\_BULK\_CAPTURE\_MIN\_HZ** 1

Bulk Capture Min Hertz

**aMTMDAQ2\_NUM\_DIGITALS** 2

Number of Digital instances available

**aMTMDAQ2\_NUM\_I2C** 1

Number of I2C instances available

**aMTMDAQ2\_NUM\_POINTERS** 4

Number of Pointer instances available

**aMTMDAQ2\_NUM\_STORES** 2

Number of Store instances available

**aMTMDAQ2\_NUM\_INTERNAL\_SLOTS** 12

Store: Number of internal slots instances available

**aMTMDAQ2\_NUM\_RAM\_SLOTS** 1

Store: Number of RAM slot instances available

**aMTMDAQ2\_NUM\_TIMERS** 8

Number of Timer instances available

## MTM-EtherStem

### Class

class **aMTMEtherStem** : public *aMTMStemModule*

Concrete Module implementation of an MTM-EtherStem Allows a user to connect to and control an attached module.

## Defines

**aMTM\_ETHERSTEM\_MODULE\_BASE\_ADDRESS** *aMTM\_STEM\_MODULE\_BASE\_ADDRESS*

MTM-EtherStem module base address

**aMTM\_ETHERSTEM\_NUM\_STORES** *aMTM\_STEM\_NUM\_STORES*

Number of Store instances available

**aMTM\_ETHERSTEM\_NUM\_STORES** *aMTM\_STEM\_NUM\_STORES*

Number of Store instances available

**aMTM\_ETHERSTEM\_NUM\_INTERNAL\_SLOTS** *aMTM\_STEM\_NUM\_INTERNAL\_SLOTS*

Store: Number of internal slots instances available

**aMTM\_ETHERSTEM\_NUM\_INTERNAL\_SLOTS** *aMTM\_STEM\_NUM\_INTERNAL\_SLOTS*

Store: Number of internal slots instances available

**aMTM\_ETHERSTEM\_NUM\_RAM\_SLOTS** *aMTM\_STEM\_NUM\_RAM\_SLOTS*

Store: Number of RAM slot instances available

**aMTM\_ETHERSTEM\_NUM\_RAM\_SLOTS** *aMTM\_STEM\_NUM\_RAM\_SLOTS*

Store: Number of RAM slot instances available

**aMTM\_ETHERSTEM\_NUM\_SD\_SLOTS** *aMTM\_STEM\_NUM\_SD\_SLOTS*

Store: Number of SD slot instances available

**aMTM\_ETHERSTEM\_NUM\_SD\_SLOTS** *aMTM\_STEM\_NUM\_SD\_SLOTS*

Store: Number of SD slot instances available

**aMTM\_ETHERSTEM\_NUM\_A2D** *aMTM\_STEM\_NUM\_A2D*

Number of Analog instances available

**aMTM\_ETHERSTEM\_NUM\_APPS** *aMTM\_STEM\_NUM\_APPS*

Number of App instances available

**aMTM\_ETHERSTEM\_BULK\_CAPTURE\_MAX\_HZ** *aMTM\_STEM\_BULK\_CAPTURE\_MAX\_HZ*

Bulk Capture Max Hertz

**aMTM\_ETHERSTEM\_BULK\_CAPTURE\_MIN\_HZ** *aMTM\_STEM\_BULK\_CAPTURE\_MIN\_HZ*

Bulk Capture Min Hertz

**aMTM\_ETHERSTEM\_NUM\_CLOCK** *aMTM\_STEM\_NUM\_CLOCK*

Number of Clock instances available

**aMTM\_ETHERSTEM\_NUM\_DIG** *aMTM\_STEM\_NUM\_DIG*

Number of Digital instances available

**aMTM\_ETHERSTEM\_NUM\_I2C** *aMTM\_STEM\_NUM\_I2C*

Number of I2C instances available

**aMTM\_ETHERSTEM\_NUM\_POINTERS** *aMTM\_STEM\_NUM\_POINTERS*

Number of Pointer instances available

**aMTM\_ETHERSTEM\_NUM\_SERVOS** *aMTM\_STEM\_NUM\_SERVOS*

Number of RC Servo instances available

**aMTM\_ETHERSTEM\_NUM\_SIGNALS** *aMTM\_STEM\_NUM\_SIGNALS*

Number of Signal instances available

**aMTM\_ETHERSTEM\_NUM\_OUTPUT\_SIGNALS** *aMTM\_STEM\_NUM\_OUTPUT\_SIGNALS*

Signal: Number of output signal instances available

**aMTM\_ETHERSTEM\_NUM\_INPUT\_SIGNALS** *aMTM\_STEM\_NUM\_INPUT\_SIGNALS*

Signal: Number of input signal instances available

**aMTM\_ETHERSTEM\_NUM\_TIMERS** *aMTM\_STEM\_NUM\_TIMERS*

Number of Timer instances available

## MTM-IO-Serial

### Class

class **aMTMIOSerial** : public Acroname::BrainStem::Module

Concrete Module implementation of an MTM-IO-Serial Allows a user to connect to and control an attached module.

### Public Types

enum **PORT\_ID**

Port ID

*Values:*

enumerator **kPORT\_ID\_0**

enumerator **kPORT\_ID\_1**

enumerator **kPORT\_ID\_2**

enumerator **kPORT\_ID\_3**

enumerator **kPORT\_ID\_UP0**

typedef enum *aMTMIOSerial::PORT\_ID* **PORT\_ID\_t**  
Port ID

## Public Members

*HubClass* **hub**

Hub Class

Acroname::BrainStem::*AppClass* **app**[aMTMIO SERIAL\_NUM\_APPS]

App Class

Acroname::BrainStem::*DigitalClass* **digital**[aMTMIO SERIAL\_NUM\_DIGITALS]

Digital Class

Acroname::BrainStem::*I2CClass* **i2c**[aMTMIO SERIAL\_NUM\_I2C]

I2C Class

Acroname::BrainStem::*UARTClass* **uart**[aMTMIO SERIAL\_NUM\_UART]

UART Class

Acroname::BrainStem::*PointerClass* **pointer**[aMTMIO SERIAL\_NUM\_POINTERS]

Pointer Class

Acroname::BrainStem::*RailClass* **rail**[aMTMIO SERIAL\_NUM\_RAILS]

Rail Class

Acroname::BrainStem::*RCServoClass* **servo**[aMTM\_STEM\_NUM\_SERVOS]

RC Servo Class

Acroname::BrainStem::*SignalClass* **signal**[aMTMIO SERIAL\_NUM\_SIGNALS]

Signal Class

Acroname::BrainStem::*StoreClass* **store**[aMTMIO SERIAL\_NUM\_STORES]

Store Class

Acroname::BrainStem::*SystemClass* **system**

System Class

Acroname::BrainStem::*TemperatureClass* **temperature**

Temperature Class

Acroname::BrainStem::*TimerClass* **timer**[aMTMIO SERIAL\_NUM\_TIMERS]  
 Timer Class

Acroname::BrainStem::*USBClass* **usb**  
 USB Class

class **HubClass** : public Acroname::BrainStem::*USBSystemClass*  
 Hub class implementation for use with MTMIOSerial.

## Defines

**aMTMIO SERIAL\_MODULE\_BASE\_ADDRESS** 8  
 MTM-IO-Serial module number

**aMTMIO SERIAL\_NUM\_APPS** 4  
 Number of App instances available

**aMTMIO SERIAL\_NUM\_DIGITALS** 8  
 Number of Digital instances available

**aMTMIO SERIAL\_NUM\_I2C** 1  
 Number of I2C instances available

**aMTMIO SERIAL\_NUM\_POINTERS** 4  
 Number of Pointer instances available

**aMTMIO SERIAL\_NUM\_RAILS** 3  
 Number of Rail instances available

**aMTMIO SERIAL\_5VRAIL** 0  
 Rail: 5v Rail specifier

**aMTMIO SERIAL\_ADJRAIL1** 1  
 Rail: Adjustable Rail 0 specifier

**aMTMIO SERIAL\_ADJRAIL2** 2  
 Rail: Adjustable Rail 1 specifier

**aMTMIO SERIAL\_MAX\_MICROVOLTAGE** 5000000  
 Rail: Max voltage in microvolts

**aMTMIO SERIAL\_MIN\_MICROVOLTAGE** 1800000  
 Rail: Min voltage in microvolts

**aMTMIO SERIAL\_NUM\_SERVOS 8**

Number of RC Servo instances available

**aMTMIO SERIAL\_NUM\_SIGNALS 5**

Number of Signal instances available

**aMTMIO SERIAL\_NUM\_OUTPUT\_SIGNALS 4**

Signal: Number of output signal instances available

**aMTMIO SERIAL\_NUM\_INPUT\_SIGNALS 5**

Signal: Number of input signal instances available

**aMTMIO SERIAL\_NUM\_STORES 2**

Number of Store instances available

**aMTMIO SERIAL\_NUM\_INTERNAL\_SLOTS 12**

Store: Number of internal slots instances available

**aMTMIO SERIAL\_NUM\_RAM\_SLOTS 1**

Store: Number of RAM slot instances available

**aMTMIO SERIAL\_NUM\_TIMERS 8**

Number of Timer instances available

**aMTMIO SERIAL\_NUM\_UART 4**

Number of UART instances available

**aMTMIO SERIAL\_NUM\_USB 1**

Number of USB instances available

**aMTMIO SERIAL\_NUM\_USB\_PORTS 4**

Number of USB ports available

**aMTMIO SERIAL\_NUM\_PORTS 5**

Number of Ports available

**aMTMIO SERIAL\_USB\_NUM\_CHANNELS 4**

Number of channels available

**aUSB\_UPSTREAM\_CONFIG\_AUTO 0**

Upstream Mode specifier: Auto (Default)

**aUSB\_UPSTREAM\_CONFIG\_ONBOARD 1**

Upstream Mode specifier: Onboard

**aUSB\_UPSTREAM\_CONFIG\_EDGE** 2

Upstream Mode specifier: Edge Connector

**aUSB\_UPSTREAM\_ONBOARD** 0

Upstream State specifier: Onboard

**aUSB\_UPSTREAM\_EDGE** 1

Upstream State specifier: Edge Connector

## Port State Defines

**aMTMIO SERIAL\_USB\_VBUS\_ENABLED** 0

USB VBUS current state

**aMTMIO SERIAL\_USB2\_DATA\_ENABLED** 1

USB2 data current state

**aMTMIO SERIAL\_USB\_ERROR\_FLAG** 19

Error indicator for this channel

(see 'Port Errors' below)

**aMTMIO SERIAL\_USB2\_BOOST\_ENABLED** 20

USB2 boost current state

## Port State Error Defines

**aMTMIO SERIAL\_ERROR\_VBUS\_OVERCURRENT** 0

VBUS overcurrent error

## MTM-Load-1

### Class

class **aMTMLoad1** : public Acroname::BrainStem::Module

Concrete Module implementation of an MTM-Load-1 Allows a user to connect to and control an attached module.

## Public Members

Acroname::BrainStem::*AppClass* **app**[aMTMLOAD1\_NUM\_APPS]  
App Class

Acroname::BrainStem::*DigitalClass* **digital**[aMTMLOAD1\_NUM\_DIGITALS]  
Digital Class

Acroname::BrainStem::*I2CClass* **i2c**[aMTMLOAD1\_NUM\_I2C]  
I2C Class

Acroname::BrainStem::*PointerClass* **pointer**[aMTMLOAD1\_NUM\_POINTERS]  
Pointer Class

Acroname::BrainStem::*RailClass* **rail**[aMTMLOAD1\_NUM\_RAILS]  
Rail Class

Acroname::BrainStem::*StoreClass* **store**[aMTMLOAD1\_NUM\_STORES]  
Store Class

Acroname::BrainStem::*SystemClass* **system**  
System Class

Acroname::BrainStem::*TemperatureClass* **temperature**  
Temperature Class

Acroname::BrainStem::*TimerClass* **timer**[aMTMLOAD1\_NUM\_TIMERS]  
Timer Class

## Defines

**aMTMLOAD1\_MODULE\_BASE\_ADDRESS** 14  
MTM-Load-1 module base address

**aMTMLOAD1\_NUM\_APPS** 4  
Number of App instances available

**aMTMLOAD1\_NUM\_DIGITALS** 4  
Number of Digital instances available

**aMTMLOAD1\_NUM\_I2C** 1  
Number of I2C instances available

**aMTMLOAD1\_NUM\_POINTERS** 4  
Number of Pointer instances available



**aMTMLOAD1\_NUM\_RAILS 1**

Rail: Number of Rail instances available

**aMTMLOAD1\_RAIL0 0**

Rail: Define for Rail 0

**aMTMLOAD1\_MAX\_MICROVOLTAGE 32000000**

Rail: Max voltage in microvolts

**aMTMLOAD1\_MIN\_MICROVOLTAGE 0**

Rail: Min voltage in microvolts

**aMTMLOAD1\_MAX\_MICROAMPS 11000000**

Rail: Max current in microamps

**aMTMLOAD1\_MIN\_MICROAMPS 0**

Rail: Min current in microamps

**aMTMLOAD1\_MAX\_MILLIWATTS 150000**

Rail: Max power in milliwatts

**aMTMLOAD1\_MIN\_MILLIWATTS 0**

Rail: Min power in milliwatts

**aMTMLOAD1\_MAX\_MILLIOHMS 1000000000**

Rail: Max resistance in milliohms

**aMTMLOAD1\_MIN\_MILLIOHMS 0**

Rail: Min resistance in milliohms

**aMTMLOAD1\_MAX\_VOLTAGE\_LIMIT\_MICROVOLTS 35000000**

Rail: Max voltage limit in microvolts

**aMTMLOAD1\_MIN\_VOLTAGE\_LIMIT\_MICROVOLTS -700000**

Rail: Min voltage limit in microvolts

**aMTMLOAD1\_MAX\_CURRENT\_LIMIT\_MICROAMPS 12000000**

Rail: Max current limit in microamps

**aMTMLOAD1\_MIN\_CURRENT\_LIMIT\_MICROAMPS -1000000**

Rail: Min current limit in microamps

**aMTMLOAD1\_MAX\_POWER\_LIMIT\_MILLIWATTS 150000**

Rail: Max power limit in milliwatts

**aMTMLOAD1\_MIN\_POWER\_LIMIT\_MILLIWATTS** 0

Rail: Min power limit in milliwatts

**aMTMLOAD1\_NUM\_STORES** 2

Number of Store instances available

**aMTMLOAD1\_NUM\_INTERNAL\_SLOTS** 12

Store: Number of internal slots instances available

**aMTMLOAD1\_NUM\_RAM\_SLOTS** 1

Store: Number of RAM slot instances available

**aMTMLOAD1\_NUM\_TEMPERATURES** 1

Number of Temperature instances available

**aMTMLOAD1\_NUM\_TIMERS** 8

Number of Timer instances available

## MTM-PM-1

### Class

class **aMTMPM1** : public Acroname::BrainStem::Module

Concrete Module implementation of an MTM-PM-1 Allows a user to connect to and control an attached module.

### Public Members

Acroname::BrainStem::AppClass **app**[aMTMPM1\_NUM\_APPS]

App Class

Acroname::BrainStem::DigitalClass **digital**[aMTMPM1\_NUM\_DIGITALS]

Digital Class

Acroname::BrainStem::I2CClass **i2c**[aMTMPM1\_NUM\_I2C]

I2C Class

Acroname::BrainStem::PointerClass **pointer**[aMTMPM1\_NUM\_POINTERS]

Pointer Class

Acroname::BrainStem::RailClass **rail**[aMTMPM1\_NUM\_RAILS]

Rail Class

Acroname::BrainStem::*StoreClass* **store**[aMTMPM1\_NUM\_STORES]  
Store Class

Acroname::BrainStem::*SystemClass* **system**  
System Class

Acroname::BrainStem::*TemperatureClass* **temperature**  
Temperature Class

Acroname::BrainStem::*TimerClass* **timer**[aMTMPM1\_NUM\_TIMERS]  
Timer Class

## Defines

**aMTMPM1\_MODULE\_BASE\_ADDRESS** 6  
MTM-PM-1 module base address

**aMTMPM1\_NUM\_APPS** 4  
Number of App instances available

**aMTMPM1\_NUM\_DIGITALS** 2  
Number of Digital instances available

**aMTMPM1\_NUM\_I2C** 1  
Number of I2C instances available

**aMTMPM1\_NUM\_POINTERS** 4  
Number of Pointer instances available

**aMTMPM1\_NUM\_RAILS** 2  
Number of Rail instances available

**aMTMPM1\_RAIL0** 0  
Rail: Define for Rail 0

**aMTMPM1\_RAIL1** 1  
Rail: Define for Rail 1

**aMTMPM1\_MAX\_MICROVOLTAGE** 5000000  
Rail: Max voltage in microvolts

**aMTMPM1\_MIN\_MICROVOLTAGE** 1800000  
Rail: Min voltage in microvolts

**aMTMPM1\_MAX\_CURRENT\_LIMIT\_MICROAMPS** 3000000

Rail: Max current in microamps

**aMTMPM1\_MIN\_CURRENT\_LIMIT\_MICROAMPS** 0

Rail: Min current in microamps

**aMTMPM1\_NUM\_STORES** 2

Number of Store instances available

**aMTMPM1\_NUM\_INTERNAL\_SLOTS** 12

Store: Number of internal slots instances available

**aMTMPM1\_NUM\_RAM\_SLOTS** 1

Store: Number of RAM slot instances available

**aMTMPM1\_NUM\_TEMPERATURES** 1

Number of Temperature instances available

**aMTMPM1\_NUM\_TIMERS** 8

Number of Timer instances available

## MTM-Relay

### Class

class **aMTMRelay** : public Acroname::BrainStem::Module

Concrete Module implementation of an MTM-Relay Allows a user to connect to and control an attached module.

### Public Members

Acroname::BrainStem::AppClass **app**[aMTMRELAY\_NUM\_APPS]

App Class

Acroname::BrainStem::DigitalClass **digital**[aMTMRELAY\_NUM\_DIGITALS]

Digital Class

Acroname::BrainStem::I2CClass **i2c**[aMTMRELAY\_NUM\_I2C]

I2C Class

Acroname::BrainStem::PointerClass **pointer**[aMTMRELAY\_NUM\_POINTERS]

Pointer Class

Acroname::BrainStem::*RelayClass* **relay**[aMTMRELAY\_NUM\_RELAYS]  
Relay Class

Acroname::BrainStem::*StoreClass* **store**[aMTMRELAY\_NUM\_STORES]  
Store Class

Acroname::BrainStem::*SystemClass* **system**  
System Class

Acroname::BrainStem::*TimerClass* **timer**[aMTMRELAY\_NUM\_TIMERS]  
Timer Class

## Defines

**aMTMRELAY\_MODULE\_BASE\_ADDRESS** 12  
MTM-RELAY module base address

**aMTMRELAY\_NUM\_APPS** 4  
Number of App instances available

**aMTMRELAY\_NUM\_DIGITALS** 4  
Number of Digital instances available

**aMTMRELAY\_NUM\_I2C** 1  
Number of I2C instances available

**aMTMRELAY\_NUM\_POINTERS** 4  
Number of Pointer instances available

**aMTMRELAY\_NUM\_RELAYS** 4  
Number of Rail instances available

**aMTMRELAY\_NUM\_STORES** 2  
Number of Store instances available

**aMTMRELAY\_NUM\_INTERNAL\_SLOTS** 12  
Store: Number of internal slots instances available

**aMTMRELAY\_NUM\_RAM\_SLOTS** 1  
Store: Number of RAM slot instances available

**aMTMRELAY\_NUM\_TIMERS** 8  
Number of Timer instances available

## MTM-USBStem

### Class

class **aMTMUSBStem** : public *aMTMStemModule*

Concrete Module implementation of an MTM-USBStem Allows a user to connect to and control an attached module.

### Defines

**aMTM\_USBSTEM\_MODULE\_BASE\_ADDRESS** *aMTM\_STEM\_MODULE\_BASE\_ADDRESS*

MTM-USBStem module base address

**aMTM\_USBSTEM\_NUM\_A2D** *aMTM\_STEM\_NUM\_A2D*

Number of Analog instances available

**aMTM\_USBSTEM\_NUM\_APPS** *aMTM\_STEM\_NUM\_APPS*

Number of App instances available

**aMTM\_USBSTEM\_BULK\_CAPTURE\_MAX\_HZ** *aMTM\_STEM\_BULK\_CAPTURE\_MAX\_HZ*

Bulk Capture Max Hertz

**aMTM\_USBSTEM\_BULK\_CAPTURE\_MIN\_HZ** *aMTM\_STEM\_BULK\_CAPTURE\_MIN\_HZ*

Bulk Capture Min Hertz

**aMTM\_USBSTEM\_NUM\_CLOCK** *aMTM\_STEM\_NUM\_CLOCK*

Number of Clock instances available

**aMTM\_USBSTEM\_NUM\_DIG** *aMTM\_STEM\_NUM\_DIG*

Number of Digital instances available

**aMTM\_USBSTEM\_NUM\_I2C** *aMTM\_STEM\_NUM\_I2C*

Number of I2C instances available

**aMTM\_USBSTEM\_NUM\_POINTERS** *aMTM\_STEM\_NUM\_POINTERS*

Number of Pointer instances available

**aMTM\_USBSTEM\_NUM\_SERVOS** *aMTM\_STEM\_NUM\_SERVOS*

Number of RC Servo instances available

**aMTM\_USBSTEM\_NUM\_SIGNALS** *aMTM\_STEM\_NUM\_SIGNALS*

Number of Signal instances available

**aMTM\_USBSTEM\_NUM\_OUTPUT\_SIGNALS** *aMTM\_STEM\_NUM\_OUTPUT\_SIGNALS*

Signal: Number of output signal instances available

**aMTM\_USBSTEM\_NUM\_INPUT\_SIGNALS** *aMTM\_STEM\_NUM\_INPUT\_SIGNALS*

Signal: Number of input signal instances available

**aMTM\_USBSTEM\_NUM\_STORES** *aMTM\_STEM\_NUM\_STORES*

Number of Store instances available

**aMTM\_USBSTEM\_NUM\_INTERNAL\_SLOTS** *aMTM\_STEM\_NUM\_INTERNAL\_SLOTS*

Store: Number of internal slots instances available

**aMTM\_USBSTEM\_NUM\_RAM\_SLOTS** *aMTM\_STEM\_NUM\_RAM\_SLOTS*

Store: Number of RAM slot instances available

**aMTM\_USBSTEM\_NUM\_SD\_SLOTS** *aMTM\_STEM\_NUM\_SD\_SLOTS*

Store: Number of SD slot instances available

**aMTM\_USBSTEM\_NUM\_TIMERS** *aMTM\_STEM\_NUM\_TIMERS*

Number of Timer instances available

## MTM-Stem

### Class

class **aMTMStemModule** : public Acroname::BrainStem::Module

Instantiation of base class MTM-Stem-Module.

Subclassed by *aMTMEtherStem*, *aMTMUSBStem*

### Public Members

Acroname::BrainStem::AnalogClass **analog**[aMTM\_STEM\_NUM\_A2D]

Analog Class

Acroname::BrainStem::AppClass **app**[aMTM\_STEM\_NUM\_APPS]

App Class

Acroname::BrainStem::ClockClass **clock**

Clock Class

Acroname::BrainStem::DigitalClass **digital**[aMTM\_STEM\_NUM\_DIG]

Digital Class

Acroname::BrainStem::I2CClass **i2c**[aMTM\_STEM\_NUM\_I2C]

I2C Class

Acroname::BrainStem::*PointerClass* **pointer**[aMTM\_STEM\_NUM\_POINTERS]  
Pointer Class

Acroname::BrainStem::*RCServoClass* **servo**[aMTM\_STEM\_NUM\_SERVOS]  
RC Servo Class

Acroname::BrainStem::*SignalClass* **signal**[aMTM\_STEM\_NUM\_SIGNALS]  
Signal Class

Acroname::BrainStem::*StoreClass* **store**[aMTM\_STEM\_NUM\_STORES]  
Store Class

Acroname::BrainStem::*SystemClass* **system**  
System Class

Acroname::BrainStem::*TimerClass* **timer**[aMTM\_STEM\_NUM\_TIMERS]  
Timer Class

## Defines

**aMTM\_STEM\_MODULE\_BASE\_ADDRESS** 4  
MTM-Stem module base address

**aMTM\_STEM\_NUM\_A2D** 4  
Number of Analog instances available

**aMTM\_STEM\_NUM\_APPS** 4  
Number of App instances available

**aMTM\_STEM\_BULK\_CAPTURE\_MAX\_HZ** *analog\_Hz\_Maximum*  
Bulk Capture Max Hertz: 200000

**aMTM\_STEM\_BULK\_CAPTURE\_MIN\_HZ** *analog\_Hz\_Minimum*  
Bulk Capture Min Hertz: 7000

**aMTM\_STEM\_NUM\_CLOCK** 1  
Number of Clock instances available

**aMTM\_STEM\_NUM\_DIG** 15  
Number of Digital instances available

**aMTM\_STEM\_NUM\_I2C** 2  
Number of I2C instances available



**aMTM\_STEM\_NUM\_POINTERS 4**

Number of Pointer instances available

**aMTM\_STEM\_NUM\_SERVOS 8**

Number of RC Servo instances available

**aMTM\_STEM\_NUM\_SIGNALS 5**

Number of Signal instances available

**aMTM\_STEM\_NUM\_OUTPUT\_SIGNALS 4**

Signal mber of output signal instances available

**aMTM\_STEM\_NUM\_INPUT\_SIGNALS 5**

Signal mber of input signal instances available

**aMTM\_STEM\_NUM\_STORES 3**

Number of Store instances available

**aMTM\_STEM\_NUM\_INTERNAL\_SLOTS 12**

Store mber of internal slots instances available

**aMTM\_STEM\_NUM\_RAM\_SLOTS 1**

Store mber of RAM slot instances available

**aMTM\_STEM\_NUM\_SD\_SLOTS 255**

Store mber of SD slot instances available

**aMTM\_STEM\_NUM\_TIMERS 8**

Number of Timer instances available

### 3.3.2 Entity Class

**class EntityClass**

*EntityClass*: The *EntityClass* is the base class for interacting with BrainStem UEI entities. All BrainStem UEI classes inherit from *EntityClass*. Advanced users may use *EntityClass* to extend BrainStem functionality specific to their needs.

Subclassed	by	<i>Acroname::BrainStem::AnalogClass,</i>	<i>Acron-</i>
		<i>ame::BrainStem::AppClass,</i>	<i>ame::BrainStem::ClockClass,</i>
		<i>ame::BrainStem::DigitalClass,</i>	<i>Acroname::BrainStem::EqualizerClass,</i>
		<i>Acroname::BrainStem::Ethernet::Utilities::EthernetClassProperties,</i>	<i>Acron-</i>
		<i>ame::BrainStem::EthernetClass,</i>	<i>Acroname::BrainStem::FactoryClass,</i>
		<i>ame::BrainStem::HDBaseTClass,</i>	<i>Acroname::BrainStem::I2CClass,</i>
		<i>ame::BrainStem::MuxClass,</i>	<i>Acroname::BrainStem::PoEClass,</i>
		<i>ame::BrainStem::PointerClass,</i>	<i>Acroname::BrainStem::PortClass,</i>
		<i>ame::BrainStem::PowerDeliveryClass,</i>	<i>Acroname::BrainStem::RailClass,</i>
		<i>ame::BrainStem::RCServoClass,</i>	<i>Acroname::BrainStem::RelayClass,</i>

<i>ame::BrainStem::SignalClass,</i>	<i>Acroname::BrainStem::StoreClass,</i>	<i>Acron-</i>
<i>ame::BrainStem::SystemClass,</i>	<i>Acroname::BrainStem::TemperatureClass,</i>	<i>Acron-</i>
<i>ame::BrainStem::TimerClass,</i>	<i>Acroname::BrainStem::UARTClass,</i>	<i>Acron-</i>
<i>ame::BrainStem::USBClass,</i>	<i>Acroname::BrainStem::USBSystemClass</i>	

## Public Functions

**EntityClass** (void)

Constructor.

virtual **~EntityClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t command, const uint8\_t index)  
init.

Initialize the entity class.

### Parameters

- **pModule** – The BrainStem module object.
- **command** – The command of the UEI.
- **index** – The index of the UEI entity.

*aErr* **callUEI** (const uint8\_t option)

A callUEI is a setUEI that has no data length.

### Parameters

**option** – An option for the UEI.

### Returns

Returns *common entity* return values

*aErr* **setUEI8** (const uint8\_t option, const uint8\_t byteValue)

Set a byte value.

### Parameters

- **option** – The option for the UEI.
- **byteValue** – The value.

### Returns

Returns *common entity* return values

*aErr* **setUEI8** (const uint8\_t option, const uint8\_t param, const uint8\_t byteValue)

Set a byte value with a subindex.

### Parameters

- **option** – The option for the UEI.
- **param** – of the option.
- **byteValue** – The value.

### Returns

Returns *common entity* return values

*aErr* **getUEI8** (const uint8\_t option, uint8\_t \*byteValue)

Get a byte value.

### Parameters

- **option** – The option for the UEI.
- **byteValue** – The value.

### Returns

Returns *common entity* return values

*aErr* **getUEI8** (const uint8\_t option, const uint8\_t param, uint8\_t \*byteValue)

Get a byte value with a parameter.

**Parameters**

- **option** – The option for the UEI.
- **param** – The parameter.
- **byteValue** – The value.

**Returns**

Returns *common entity* return values

*aErr* **setUEI16** (const uint8\_t option, const uint16\_t shortValue)

Set a 2-byte value.

**Parameters**

- **option** – The option for the UEI.
- **shortValue** – The value.

**Returns**

Returns *common entity* return values

*aErr* **setUEI16** (const uint8\_t option, const uint8\_t param, const uint16\_t shortValue)

Set a 2-byte value with a parameter.

**Parameters**

- **option** – The option for the UEI.
- **param** – The parameter.
- **shortValue** – The value.

**Returns**

Returns *common entity* return values

*aErr* **getUEI16** (const uint8\_t option, uint16\_t \*shortValue)

Get a 2-byte value.

**Parameters**

- **option** – The option for the UEI.
- **shortValue** – The value.

**Returns**

Returns *common entity* return values

*aErr* **getUEI16** (const uint8\_t option, const uint8\_t param, uint16\_t \*shortValue)

Get a 2-byte value with a parameter.

**Parameters**

- **option** – The option for the UEI.
- **param** – The parameter.
- **shortValue** – The value.

**Returns**

Returns *common entity* return values

*aErr* **setUEI32** (const uint8\_t option, const uint32\_t intValue)

Set a 4-byte value.

**Parameters**

- **option** – The option for the UEI.
- **intValue** – The value.

**Returns**

Returns *common entity* return values

*aErr* **setUEI32** (const uint8\_t option, const uint8\_t subIndex, const uint32\_t intValue)

Set a 4-byte value, with a subindex parameter.

**Parameters**

- **option** – The option for the UEI.

- **subIndex** – The subindex to set.
- **intValue** – The value.

**Returns**

Returns *common entity* return values

*aErr* **getUEI32** (const uint8\_t option, uint32\_t \*intValue)

Get a 4-byte value.

**Parameters**

- **option** – The option for the UEI.
- **intValue** – The 4 byte value

**Returns**

Returns *common entity* return values

*aErr* **getUEI32** (const uint8\_t option, const uint8\_t param, uint32\_t \*intValue)

Get a 4-byte value with parameter.

**Parameters**

- **option** – The option for the UEI.
- **param** – The parameter.
- **intValue** – The 4 byte value

**Returns**

Returns *common entity* return values

*aErr* **setUEIBytes** (const uint8\_t option, const uint8\_t \*bufPtr, const size\_t bufLen)

Set a multi-byte value.

**Parameters**

- **option** – The option for the UEI.
- **bufPtr** – The pointer to a data buffer
- **bufLen** – The length of the data buffer

**Returns**

Returns *common entity* return values

*aErr* **getUEIBytes** (const uint8\_t option, uint8\_t \*buf, const size\_t bufLength, size\_t \*unloadedLength)

Unloads UEI Bytes data as byte data

**Parameters**

- **option** – The option for the UEI.
- **buf** – Start of where data should be stored..
- **bufLength** – Size of the buffer
- **unloadedLength** – Amount of data unloaded (in bytes)

**Returns**

Returns *common entity* return values

*aErr* **getUEIBytesCheck** (size\_t \*unloadedLength, const size\_t valueSize)

**Parameters**

- **unloadedLength** – Amount of data unloaded (in bytes)
- **valueSize** – The base type size in this array

**Returns**

Returns *common entity* return values

uint8\_t **getIndex** (void) const

Get the UEI entity index.

**Returns**

The 1 byte index of the UEI entity.

*aErr* **drainUEI** (const uint8\_t option)

Drain all packets matching this UEI from the packet fifo.

This functionality is useful in rare cases where packet synchronization is lost and a valid return packet is not accessible.

**aErr setStreamEnabled** (uint8\_t enabled)

Enables streaming for all possible option codes within the cmd and index the entity was created for.

**Parameters**

**enabled** – The state to be applied. 0 = Disabled; 1 = enabled

**Returns**

Returns *common entity* return values

**aErr registerOptionCallback** (const uint8\_t option, const bool enable, [Link::streamCallback\\_t](#) cb, void \*pRef)

Registers a callback function based on a specific option code. Option code applies to the cmd and index of the called API.

**Parameters**

- **option** – option to filter by (supports Wildcards)
- **enable** – True - installs/updates callback and ref; False - uninstalls callback
- **cb** – Callback to be executed when a new packet matching the criteria is received.
- **pRef** – Pointer to user reference for use inside the callback function.

**Returns**

aErrNotFound - Item not found (uninstalling only)

**Returns**

aErrNone - success

**aErr getStreamStatus** ([Link::StreamStatusEntry\\_t](#) \*buffer, const size\_t bufferLength, size\_t \*unloadedSize)

Gets all available stream values associated with the cmd and index of the called API. Keys can be decoded with [Link::getStreamKeyElement](#).

**Parameters**

- **buffer** – Buffer of user allocated memory to be filled with stream data
- **bufferLength** – Number of elements the buffer can hold.
- **unloadedSize** – Number of elements that were placed in the buffer

**Returns**

aErrParam if status or unloadedSize is null

**Returns**

aErrResource - if the link is not valid

**Returns**

aErrNone - success

**aErr resetEntityToFactoryDefaults** (void)

Resets the Entity to factory defaults

**Returns**

Returns *common entity* return values

**aErr loadEntityFromStore** (void)

Load the Entity from the internal store

**Returns**

Returns *common entity* return values

**aErr saveEntityToStore** (void)

Saves the Entity to the internal store

**Returns**

Returns *common entity* return values

### Public Static Functions

static uint8\_t **getUEIBytesSequence** (const *aPacket* \*packet)

**Parameters**

**packet** – UEI packet to be checked/filtered.

**Returns**

The sequence number of the byte.

static bool **getUEIBytesContinue** (const *aPacket* \*packet)

**Parameters**

**packet** – UEI packet to be checked/filtered.

**Returns**

True - Continue bit is set (more packets to come); False - Continue bit is not set (first or last packet).

static uint8\_t **sUEIBytesFilter** (const *aPacket* \*packet, const void \*ref)

Filter function for UEI Bytes calls. Exposed for unit-testing purposes only.

**Parameters**

- **packet** – UEI packet to be checked/filtered.
- **ref** – Opaque reference handle

class impl

#### group **EntityReturnValues**

Common *EntityClass* Return Values.

- *aErrNone* - Action completed successfully.
- *aErrTimeout* - Request timed out without response.
- *aErrConnection* - No active link.

### 3.3.3 Analog Class

See the *Analog Entity* for generic information.

class **AnalogClass** : public Acroname::BrainStem::EntityClass

*AnalogClass*: Interface to analog entities on BrainStem modules. Analog entities may be configured as a input or output depending on hardware capabilities. Some modules are capable of providing actual voltage readings, while other simply return the raw analog-to-digital converter (ADC) output value. The resolution of the voltage or number of useful bits is also hardware dependent.

## Public Functions

**AnalogClass** (void)

Constructor.

virtual **~AnalogClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Analog Class.

### Parameters

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Analog entity to be addressed.

*aErr* **getValue** (uint16\_t \*value)

Get the raw ADC output value in bits.

---

**Note:** Not all modules provide 16 useful bits; this value's least significant bits are zero-padded to 16 bits. Refer to the module's datasheet to determine analog bit depth and reference voltage.

---

### Parameters

**value** – 16 bit analog reading with 0 corresponding to the negative analog voltage reference and 0xFFFF corresponding to the positive analog voltage reference.

### Returns

Returns *common entity* return values

*aErr* **getVoltage** (int32\_t \*microvolts)

Get the scaled micro volt value with reference to ground.

---

**Note:** Not all modules provide 32 bits of accuracy. Refer to the module's datasheet to determine the analog bit depth and reference voltage.

---

### Parameters

**microvolts** – 32 bit signed integer (in microvolts) based on the board's ground and reference voltages.

### Returns

Returns *common entity* return values

*aErr* **getRange** (uint8\_t \*range)

Get the analog input range.

### Parameters

**range** – 8 bit value corresponding to a discrete range option

### Returns

Returns *common entity* return values

*aErr* **getEnable** (uint8\_t \*enable)

Get the analog output enable status.

**Parameters**

**enable** – 0 if disabled 1 if enabled.

**Returns**

Returns *common entity* return values

*aErr* **setValue** (const uint16\_t value)

Set the value of an analog output (DAC) in bits.

---

**Note:** Not all modules are provide 16 useful bits; the least significant bits are discarded. E.g. for a 10 bit DAC, 0xFFC0 to 0x0040 is the useful range. Refer to the module's datasheet to determine analog bit depth and reference voltage.

---

**Parameters**

**value** – 16 bit analog set point with 0 corresponding to the negative analog voltage reference and 0xFFFF corresponding to the positive analog voltage reference.

**Returns**

Returns *common entity* return values

*aErr* **setVoltage** (const int32\_t microvolts)

Set the voltage level of an analog output (DAC) in microvolts.

---

**Note:** Voltage range is dependent on the specific DAC channel range.

---

**Parameters**

**microvolts** – 32 bit signed integer (in microvolts) based on the board's ground and reference voltages.

**Returns**

Returns *common entity* return values

*aErr* **setRange** (const uint8\_t range)

Set the analog input range.

**Parameters**

**range** – 8 bit value corresponding to a discrete range option

**Returns**

Returns *common entity* return values

*aErr* **setEnable** (const uint8\_t enable)

Set the analog output enable state.

**Parameters**

**enable** – set 1 to enable or 0 to disable.

**Returns**

Returns *common entity* return values



***aErr* setConfiguration** (const uint8\_t configuration)

Set the analog configuration.

**Parameters**

**configuration** – bitAnalogConfigurationOutput configures the analog entity as an output.

**Returns**

Returns *common entity* return values

***aErr* getConfiguration** (uint8\_t \*configuration)

Get the analog configuration.

**Parameters**

**configuration** – Current configuration of the analog entity.

**Returns**

Returns *common entity* return values

***aErr* setBulkCaptureSampleRate** (const uint32\_t value)

Set the sample rate for this analog when bulk capturing.

**Parameters**

**value** – sample rate in samples per second (Hertz).

- Minimum rate: 7,000 Hz
- Maximum rate: 200,000 Hz

**Returns**

Returns *common entity* return values

***aErr* getBulkCaptureSampleRate** (uint32\_t \*value)

Get the current sample rate setting for this analog when bulk capturing.

**Parameters**

**value** – upon success filled with current sample rate in samples per second (Hertz).

**Returns**

Returns *common entity* return values

***aErr* setBulkCaptureNumberOfSamples** (const uint32\_t value)

Set the number of samples to capture for this analog when bulk capturing.

**Parameters**

**value** – number of samples.

- Minimum # of Samples: 0
- Maximum # of Samples: (BRAINSTEM\_RAM\_SLOT\_SIZE / 2) = (3FFF / 2) = 1FFF = 8191

**Returns**

Returns *common entity* return values

***aErr* getBulkCaptureNumberOfSamples** (uint32\_t \*value)

Get the current number of samples setting for this analog when bulk capturing.

**Parameters**

**value** – number of samples.

**Returns**

Returns *common entity* return values

*aErr* **initiateBulkCapture** (void)

Initiate a BulkCapture on this analog. Captured measurements are stored in the module's RAM store (RAM\_STORE) slot 0. Data is stored in a contiguous byte array with each sample stored in two consecutive bytes, LSB first.

---

**Note:** When the bulk capture is complete *getBulkCaptureState()* will return either bulkCaptureFinished or bulkCaptureError.

---

#### Returns

Returns *common entity* return values

*aErr* **getBulkCaptureState** (uint8\_t \*state)

Get the current bulk capture state for this analog.

#### Parameters

**state** – the state of bulk capture.

- Idle: bulkCaptureIdle = 0
- Pending: bulkCapturePending = 1
- Finished: bulkCaptureFinished = 2
- Error: bulkCaptureError = 3

#### Returns

Returns *common entity* return values

### 3.3.4 App Class

See the *App Entity* for generic information.

class **AppClass** : public Acroname::BrainStem::EntityClass

*AppClass*: Used to send a cmdAPP packet to the BrainStem network. These commands are used for either host-to-stem or stem-to-stem interactions. BrainStem modules can implement a reflex origin to complete an action when a cmdAPP packet is addressed to the module.

#### Public Functions

**AppClass** (void)

Constructor.

virtual **~AppClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the App Class.

#### Parameters

- **pModule** – The module to which this entity belongs.
- **index** – The index of the App entity to be addressed.

*aErr* **execute** (const uint32\_t appParam)

Execute the app reflex on the module. Doesn't wait for a return value from the execute call; this call returns immediately upon execution of the module's reflex.

#### Parameters

**appParam** – The app parameter handed to the reflex.

#### Return values

- **aErrNone** – success.
- **aErrTimeout** – The request timed out waiting to start execution.
- **aErrConnection** – No active link connection.
- **aErrNotFound** – the app reflex was not found or not enabled on the module.

*aErr* **execute** (const uint32\_t appParam, uint32\_t \*returnVal, const uint32\_t msTimeout = 1000)

Execute the app reflex on the module. Waits for a return from the reflex execution for msTimeout milliseconds. This method will block for up to msTimeout.

#### Parameters

- **appParam** – The app parameter handed to the reflex.
- **returnVal** – The return value filled in from the result of executing the reflex routine.
- **msTimeout** – The amount of time to wait for the return value from the reflex routine. The default value is 1000 milliseconds if not specified.

#### Return values

- **aErrNone** – - success.
- **aErrTimeout** – - The request timed out waiting for a response.
- **aErrConnection** – - No active link connection.
- **aErrNotFound** – - the app reflex was not found or not enabled on the module.

### 3.3.5 Clock Class

See the *Clock Entity* for generic information.

class **ClockClass** : public Acroname::BrainStem::EntityClass

*ClockClass*: Provides an interface to a real-time clock entity on a BrainStem module. The clock entity may be used to get and set the real time of the system. The clock entity has a one second resolution.

---

**Note:** Clock time must be reset if power to the BrainStem module is lost.

---

## Public Functions

**ClockClass** (void)

Constructor.

virtual **~ClockClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Clock Class.

### Parameters

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Clock entity to be addressed.

*aErr* **getYear** (uint16\_t \*year)

Get the four digit year value (0-4095).

### Parameters

**year** – Get the year portion of the real-time clock value.

### Returns

Returns *common entity* return values

*aErr* **setYear** (const uint16\_t year)

Set the four digit year value (0-4095).

### Parameters

**year** – Set the year portion of the real-time clock value.

### Returns

Returns *common entity* return values

*aErr* **getMonth** (uint8\_t \*month)

Get the two digit month value (1-12).

### Parameters

**month** – The two digit month portion of the real-time clock value.

### Returns

Returns *common entity* return values

*aErr* **setMonth** (const uint8\_t month)

Set the two digit month value (1-12).

### Parameters

**month** – The two digit month portion of the real-time clock value.

### Returns

Returns *common entity* return values

*aErr* **getDay** (uint8\_t \*day)

Get the two digit day of month value (1-28, 29, 30 or 31 depending on the month).

### Parameters

**day** – The two digit day portion of the real-time clock value.

### Returns

Returns *common entity* return values

*aErr* **setDay** (const uint8\_t day)

Set the two digit day of month value (1-28, 29, 30 or 31 depending on the month).

**Parameters**

**day** – The two digit day portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **getHour** (uint8\_t \*hour)

Get the two digit hour value (0-23).

**Parameters**

**hour** – The two digit hour portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **setHour** (const uint8\_t hour)

Set the two digit hour value (0-23).

**Parameters**

**hour** – The two digit hour portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **getMinute** (uint8\_t \*minute)

Get the two digit minute value (0-59).

**Parameters**

**minute** – The two digit minute portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **setMinute** (const uint8\_t minute)

Set the two digit minute value (0-59).

**Parameters**

**minute** – The two digit minute portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **getSecond** (uint8\_t \*second)

Get the two digit second value (0-59).

**Parameters**

**second** – The two digit second portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **setSecond** (const uint8\_t second)

Set the two digit second value (0-59).

**Parameters**

**second** – The two digit second portion of the real-time clock value.

**Returns**

Returns *common entity* return values

### 3.3.6 Digital Class

See the *Digital Entity* for generic information.

class **DigitalClass** : public Acroname::BrainStem::EntityClass

*DigitalClass*: Interface to digital entities on BrainStem modules. Digital entities have the following 5 possibilities: Digital Input, Digital Output, RCServo Input, RCServo Output, and HighZ. Other capabilities may be available and not all pins support all configurations. Please see the product datasheet.

#### Public Functions

**DigitalClass** (void)

Constructor.

virtual ~**DigitalClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Digital Class.

#### Parameters

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Digital entity to be addressed.

*aErr* **setConfiguration** (const uint8\_t configuration)

Set the digital configuration to one of the available 5 states.

---

**Note:** Some configurations are only supported on specific pins.

---

#### Parameters

**configuration** – The configuration to be applied

- Digital Input: digitalConfigurationInput = 0
- Digital Output: digitalConfigurationOutput = 1
- RCServo Input: digitalConfigurationRCServoInput = 2
- RCServo Output: digitalConfigurationRCServoOutput = 3
- High Z State: digitalConfigurationHiZ = 4
- Digital Input: digitalConfigurationInputPullUp = 0
- Digital Input: digitalConfigurationInputNoPull = 4
- Digital Input: digitalConfigurationInputPullDown = 5

#### Returns

Returns *common entity* return values

*aErr* **getConfiguration** (uint8\_t \*configuration)

Get the digital configuration.

#### Parameters

**configuration** – Current configuration of the digital entity.

**Returns**

Returns *common entity* return values

*aErr* **setState** (const uint8\_t state)

Set the logical state.

**Parameters**

**state** – The state to be set. 0 is logic low, 1 is logic high.

**Returns**

Returns *common entity* return values

*aErr* **getState** (uint8\_t \*state)

Get the state.

---

**Note:** If in high Z state an error will be returned.

---

**Parameters**

**state** – The current state of the digital entity. 0 is logic low, 1 is logic high.

**Returns**

Returns *common entity* return values

*aErr* **setStateAll** (const uint32\_t state)

Sets the logical state of all available digitals based on the bit mapping. Number of digitals varies across BrainStem modules. Refer to the datasheet for the capabilities of your module.

**Parameters**

**state** – The state to be set for all digitals in a bit mapped representation. 0 is logic low, 1 is logic high. Where bit 0 = digital 0, bit 1 = digital 1 etc.

**Returns**

Returns *common entity* return values

*aErr* **getStateAll** (uint32\_t \*state)

Gets the logical state of all available digitals in a bit mapped representation. Number of digitals varies across BrainStem modules. Refer to the datasheet for the capabilities of your module.

**Parameters**

**state** – The state of all digitals where bit 0 = digital 0, bit 1 = digital 1 etc. 0 is logic low, 1 is logic high.

**Returns**

Returns *common entity* return values

*aErr* **setValue** (const uint8\_t value)

Set the expected value of the digital pin.

**Parameters**

**value** – The expected value of the digital pin. 0 is logic low, 1 is logic high.

**Returns**

Returns *common entity* return values

*aErr* **getValue** (uint8\_t \*value)

Get the expected value of the digital pin.

**Parameters**

**value** – The expected value of the digital pin. 0 is logic low, 1 is logic high.

**Returns**

Returns *common entity* return values

*aErr* **setLinkChannel** (const uint8\_t linkChannel)

Set the link channel (entity index) for linking digital entities. Two digital entities will link when one is configured as LinkInput, one as LinkOutput, and both have each others linkChannel indexes.

**Parameters**

**linkChannel** – The link channel (entity index) value. Entities with matching linkChannel values can be linked.

**Returns**

Returns *common entity* return values

*aErr* **getLinkChannel** (uint8\_t \*linkChannel)

Get the link channel (entity index) for linking digital entities.

**Parameters**

**linkChannel** – The current link channel (entity index) value.

**Returns**

Returns *common entity* return values

### 3.3.7 Equalizer Class

See the *Equalizer Entity* for generic information.

class **EqualizerClass** : public Acroname::BrainStem::EntityClass

*EqualizerClass*: Provides receiver and transmitter gain/boost/emphasis settings for some of Acroname's products. Please see product documentation for further details.

**Public Functions**

**EqualizerClass** (void)

Constructor.

virtual **~EqualizerClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Equalizer Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Equalizer entity to be addressed.

*aErr* **setReceiverConfig** (const uint8\_t channel, const uint8\_t config)

Sets the receiver configuration for a given channel.

**Parameters**

- **channel** – The equalizer receiver channel.
- **config** – Configuration to be applied to the receiver.



**Returns**

Returns *common entity* return values

*aErr* **getReceiverConfig** (const uint8\_t channel, uint8\_t \*config)

Gets the receiver configuration for a given channel.

**Parameters**

- **channel** – The equalizer receiver channel.
- **config** – Configuration of the receiver.

**Returns**

Returns *common entity* return values

*aErr* **setTransmitterConfig** (const uint8\_t config)

Sets the transmitter configuration

**Parameters**

**config** – Configuration to be applied to the transmitter.

**Returns**

Returns *common entity* return values

*aErr* **getTransmitterConfig** (uint8\_t \*config)

Gets the transmitter configuration

**Parameters**

**config** – Configuration of the Transmitter.

**Returns**

Returns *common entity* return values

### 3.3.8 Ethernet Class

See the *Ethernet Entity* for generic information.

class **EthernetClass** : public Acroname::BrainStem::EntityClass

*EthernetClass*: IP configuration. MAC info. BrainD port.

**Public Functions**

**EthernetClass** (void)

Constructor.

virtual **~EthernetClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Ethernet Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Ethernet entity to be addressed.

*aErr* **setEnabled** (const uint8\_t enabled)

Sets the Ethernet's interface to enabled/disabled.

**Parameters**

**enabled** – 1 = enabled; 0 = disabled

**Returns**

Returns *common entity* return values

*aErr* **getEnabled** (uint8\_t \*enabled)

Gets the current enable value of the Ethernet interface.

**Parameters**

**enabled** – 1 = Fully enabled network connectivity; 0 = Ethernet MAC is disabled.

**Returns**

Returns *common entity* return values

*aErr* **getNetworkConfiguration** (uint8\_t \*addressStyle)

Get the method in which IP Address is assigned to this device

**Parameters**

**addressStyle** – Method used. Current methods

- NONE = 0
- STATIC = 1
- DHCP = 2

**Returns**

Returns *common entity* return values

*aErr* **setNetworkConfiguration** (const uint8\_t addressStyle)

Get the method in which IP Address is assigned to this device

**Parameters**

**addressStyle** – Method to use. See getNetworkConfiguration for addressStyle enumerations.

**Returns**

Returns *common entity* return values

*aErr* **getStaticIPv4Address** (uint8\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Get the expected IPv4 address of this device, when networkConfiguration == STATIC

---

**Note:** The functional IPv4 address of The *Module* will differ if NetworkConfiguration != STATIC.

---

**Parameters**

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

**Returns**

Returns *common entity* return values

*aErr* **setStaticIPv4Address** (const uint8\_t \*buffer, const size\_t bufferLength)

Set the desired IPv4 address of this device, if NetworkConfiguration == STATIC.

#### Parameters

- **buffer** – alias to an array of uint8\_t[4] with an IP address
- **bufferLength** – size of buffer. Should be 4.

#### Returns

Returns *common entity* return values

*aErr* **getStaticIPv4Netmask** (uint8\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Get the expected IPv4 netmask of this device, when networkConfiguration == STATIC

---

**Note:** The functional IPv4 netmask of The *Module* will differ if NetworkConfiguration != STATIC.

---

#### Parameters

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

#### Returns

Returns *common entity* return values

*aErr* **setStaticIPv4Netmask** (const uint8\_t \*buffer, const size\_t bufferLength)

Set the desired IPv4 address of this device, if NetworkConfiguration == STATIC

#### Parameters

- **buffer** – alias to an array of uint8\_t[4] with an IP address
- **bufferLength** – size of buffer. Should be 4.

#### Returns

Returns *common entity* return values

*aErr* **getStaticIPv4Gateway** (uint8\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Get the expected IPv4 gateway of this device, when networkConfiguration == STATIC

#### Parameters

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

#### Returns

Returns *common entity* return values

*aErr* **setStaticIPv4Gateway** (const uint8\_t \*buffer, const size\_t bufferLength)

Set the desired IPv4 gateway of this device, if NetworkConfiguration == STATIC

#### Parameters

- **buffer** – alias to an array of uint8\_t[4] with an IP address
- **bufferLength** – size of buffer. Should be 4. setStaticIPv4Gateway([192, 168, 1, 1], 4) would equate with address “192.168.1.1”

**Returns**

Returns *common entity* return values

*aErr* **getIPv4Address** (uint8\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Get the effective IP address of this device.

**Parameters**

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

**Returns**

Returns *common entity* return values

*aErr* **getIPv4Netmask** (uint8\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Get the effective IP netmask of this device.

**Parameters**

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

**Returns**

Returns *common entity* return values

*aErr* **getIPv4Gateway** (uint8\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Get the effective IP gateway of this device.

**Parameters**

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

**Returns**

Returns *common entity* return values

*aErr* **setStaticIPv4DNSAddress** (const uint8\_t \*buffer, const size\_t bufferLength)

Set IPv4 DNS Addresses (plural), if NetworkConfiguration == STATIC

**Parameters**

- **buffer** – alias to an array of uint8\_t[N][4]
- **bufferLength** – Total array length in bytes. Must be a multiple of 4.

**Returns**

Returns *common entity* return values

*aErr* **getStaticIPv4DNSAddress** (uint8\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Get IPv4 DNS addresses (plural), when NetworkConfiguration == STATIC

**Parameters**

- **buffer** – alias to an array of uint8\_t[N][4]
- **bufferLength** – Maximum length of array, in bytes.

- **unloadedLength** – Length of occupied bytes of buffer, after the call.

**Returns**

Returns *common entity* return values

*aErr* **getIPv4DNSAddress** (uint8\_t \*buffer, const size\_t bufferSize, size\_t \*unloadedLength)

Get effective IPv4 DNS addresses, for the current NetworkConfiguration

**Parameters**

- **buffer** – alias to an array of uint8\_t[N][4]
- **bufferLength** – Maximum length of array, in bytes.
- **unloadedLength** – Length of occupied bytes of buffer, after the call.

**Returns**

Returns *common entity* return values

*aErr* **setHostname** (const uint8\_t \*buffer, const size\_t bufferSize)

Set hostname that's requested when this device sends a DHCP request.

**Parameters**

- **buffer** – alias to an array of uint8\_t[N]
- **bufferLength** – N, for N bytes.

**Returns**

Returns *common entity* return values

*aErr* **getHostname** (uint8\_t \*buffer, const size\_t bufferSize, size\_t \*unloadedLength)

Get hostname that's requested when this device sends a DHCP request.

**Parameters**

- **buffer** – alias to an array of uint8\_t[N]
- **bufferLength** – N, for N bytes.
- **unloadedLength** – Length of occupied bytes of buffer, after the call.

**Returns**

Returns *common entity* return values

*aErr* **getMACAddress** (uint8\_t \*buffer, const size\_t bufferSize, size\_t \*unloadedLength)

Get the MAC address of the Ethernet interface.

**Parameters**

- **buffer** – alias to an array of uint8\_t[6]
- **bufferLength** – length of buffer that's writeable, should be > 6.
- **unloadedLength** – Length of occupied bytes of buffer, after the call.

**Returns**

Returns *common entity* return values

*aErr* **setInterfacePort** (const uint8\_t service, const uint16\_t port)

Set the port of a TCPIP service on the device.

**Parameters**

- **service** – The index of the service to set the port for.
- **port** – The port to be used for the TCPIP server.

**Returns**

Returns *common entity* return values

*aErr* **getInterfacePort** (const uint8\_t service, uint16\_t \*port)

Get the port of a TCPIP service on the device.

**Parameters**

- **service** – The index of the service to get the port for.
- **port** – The port of the TCPIP server.

**Returns**

Returns *common entity* return values

### 3.3.9 HDBaseT Class

See the *HDBaseT Entity* for generic information.

class **HDBaseTClass** : public Acroname::BrainStem::EntityClass

*HDBaseTClass*: This entity is only available on certain modules, and provides information on HDBaseT extenders.

**Public Functions**

**HDBaseTClass** (void)

Constructor.

virtual **~HDBaseTClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the HDBaseT Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the HDBaseT entity to be addressed.

*aErr* **getSerialNumber** (uint8\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Gets the serial number of the HDBaseT device (6 bytes)

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **getFirmwareVersion** (uint32\_t \*firmwareVersion)

Gets the firmware version of the HDBaseT device

**Parameters**

**firmwareVersion** – A bit packet representation of the firmware version Major: Bits 24-31; Minor: Bits 16-23; Patch: Bits 8-15; Build: Bits 0-7

**Returns**

Returns *common entity* return values

*aErr* **getState** (uint32\_t \*state)

Gets the current state of the HDBaseT link

**Parameters**

**state** – Bit packeted representation of the state.

**Returns**

Returns *common entity* return values

*aErr* **getCableLength** (uint32\_t \*cableLength)

Gets the perceived cable length

**Parameters**

**cableLength** – Cable length in micro-meters

**Returns**

Returns *common entity* return values

*aErr* **getMSEA** (int32\_t \*mseA)

Gets the Mean Squared Error (MSE) for channel A

**Parameters**

**mseA** – The current MSE for channel A in micro-dB

**Returns**

Returns *common entity* return values

*aErr* **getMSEB** (int32\_t \*mseB)

Gets the Mean Squared Error (MSE) for channel B

**Parameters**

**mseB** – The current MSE for channel B in micro-dB

**Returns**

Returns *common entity* return values

*aErr* **getRetransmissionRate** (uint32\_t \*retransmissionRate)

Gets the number of successful messages between retransmission

**Parameters**

**retransmissionRate** – Instantaneous number of successful messages between retransmission. To be interpreted as: 1 / retransmissionRate for rate interpretation. If the value is 0, there have been no retransmissions, otherwise higher is better..

**Returns**

Returns *common entity* return values

*aErr* **getLinkUtilization** (uint32\_t \*linkUtilization)

Gets the current link utilization

**Parameters**

**linkUtilization** – Utilization in milli-percent

**Returns**

Returns *common entity* return values

*aErr* **getEncodingState** (uint8\_t \*encodingState)

Gets the current encoding state.

**Parameters**

**encodingState** – Signal modulation encoding type.

**Returns**

Returns *common entity* return values

*aErr* **getUSB2DeviceTree** (uint8\_t \*buffer, const size\_t bufferSize, size\_t \*unloadedLength)

Gets the USB2 tree at the HDBaseT device.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **getUSB3DeviceTree** (uint8\_t \*buffer, const size\_t bufferSize, size\_t \*unloadedLength)

Gets the USB3 tree at the HDBaseT device.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **getLinkRole** (uint8\_t \*role)

Gets the current link role In the case of “Auto” the getState API will provide the current role.

**Parameters**

**role** – *Link* role

**Returns**

Returns *common entity* return values

*aErr* **setLinkRole** (const uint8\_t role)

Sets the active link role

**Parameters**

**role** – The role to be set.

**Returns**

Returns *common entity* return values

### 3.3.10 I2C Class

See the *I2C Entity* for generic information.

class **I2CClass** : public Acroname::BrainStem::EntityClass

*I2CClass*: Interface the I2C buses on BrainStem modules. The class provides a way to send read and write commands to I2C devices on the entities bus.



## Public Functions

**I2CClass** (void)

Constructor.

virtual **~I2CClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the I2C Class.

### Parameters

- **pModule** – The module to which this entity belongs.
- **index** – The index of the I2C entity to be addressed.

*aErr* **read** (const uint8\_t address, const uint8\_t readLength, uint8\_t \*buffer)

Read from a device on this I2C bus.

### Parameters

- **address** – The I2C address (7bit <XXXX-XXX0>) of the device to read.
- **readLength** – The length of the data to read in bytes.
- **buffer** – The array of bytes that will be filled with the result, upon success. This array should be larger or equivalent to aBRAINSTEM\_MAXPACKETBYTES - 5

### Returns

Returns *common entity* return values

*aErr* **write** (const uint8\_t address, const uint8\_t bufferLength, const uint8\_t \*buffer)

Write to a device on this I2C bus.

### Parameters

- **address** – The I2C address (7bit <XXXX-XXX0>) of the device to write.
- **bufferLength** – The length of the data to write in bytes.
- **buffer** – The data to send to the device This array should be no larger than aBRAINSTEM\_MAXPACKETBYTES - 5

### Returns

Returns *common entity* return values

*aErr* **setPullup** (const uint8\_t enable)

Set bus pull-up state. This call only works with stems that have software controlled pull-ups. Check the datasheet for more information. This parameter is saved when system.save is called.

### Parameters

**enable** – true enables pull-ups false disables them.

### Returns

Returns *common entity* return values

*aErr* **setSpeed** (const uint8\_t speed)

Set I2C bus speed.

This call sets the communication speed for I2C transactions through this API. Speed is an enumeration value which can take the following values: 1 - 100Khz 2 - 400Khz 3 - 1MHz

**Parameters**

**speed** – The speed setting value.

**Returns**

Returns *common entity* return values

*aErr* **getSpeed** (uint8\_t \*speed)

Get I2C bus speed.

This call gets the communication speed for I2C transactions through this API. Speed is an enumeration value which can take the following values: 1 - 100Khz 2 - 400Khz 3 - 1MHz

**Parameters**

**speed** – The speed setting value.

**Returns**

Returns *common entity* return values

### 3.3.11 Mux Class

See the *Mux Entity* for generic information.

class **MuxClass** : public Acroname::BrainStem::EntityClass

*MuxClass*: A MUX is a multiplexer that takes one or more similar inputs (bus, connection, or signal) and allows switching to one or more outputs. An analogy would be the switchboard of a telephone operator. Calls (inputs) come in and by re-connecting the input to an output, the operator (multiplexer) can direct that input to on or more outputs. One possible output is to not connect the input to anything which essentially disables that input's connection to anything. Not every MUX has multiple inputs; some may simply be a single input that can be enabled (connected to a single output) or disabled (not connected to anything).

**Public Functions**

**MuxClass** (void)

Constructor.

virtual ~**MuxClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Mux Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Mux entity to be addressed.

*aErr* **getEnable** (uint8\_t \*enabled)

Get the mux enable/disable status

**Parameters**

**enabled** – true: mux is enabled, false: the mux is disabled.

**Returns**

Returns *common entity* return values

*aErr* **setEnabled** (const uint8\_t enable)

Enable the mux.

**Parameters**

**enable** – true: enables the mux for the selected channel.

**Returns**

Returns *common entity* return values

*aErr* **getChannel** (uint8\_t \*channel)

Get the current selected mux channel.

**Parameters**

**channel** – Indicates which channel is selected.

**Returns**

Returns *common entity* return values

*aErr* **setChannel** (const uint8\_t channel)

Set the current mux channel.

**Parameters**

**channel** – mux channel to select.

**Returns**

Returns *common entity* return values

*aErr* **getChannelVoltage** (const uint8\_t channel, int32\_t \*microvolts)

Get the voltage of the indicated mux channel.

---

**Note:** Not all modules provide 32 bits of accuracy; Refer to the module's datasheet to determine the analog bit depth and reference voltage.

---

**Parameters**

- **channel** – The channel in which voltage was requested.
- **microvolts** – 32 bit signed integer (in microvolts) based on the board's ground and reference voltages.

**Returns**

Returns *common entity* return values

*aErr* **getConfiguration** (int32\_t \*config)

Get the configuration of the mux.

**Parameters**

**config** – integer representing the mux configuration either default, or split-mode.

**Returns**

Returns *common entity* return values

*aErr* **setConfiguration** (const int32\_t config)

Set the configuration of the mux.

**Parameters**

**config** – integer representing the mux configuration either muxConfig\_default, or mux-Config\_splitMode.

**Returns**

Returns *common entity* return values

*aErr* **getSplitMode** (int32\_t \*splitMode)

Get the current split mode mux configuration.

**Parameters**

**splitMode** – integer representing the channel selection for each sub-channel within the mux. See the data-sheet for the device for specific information.

**Returns**

Returns *common entity* return values

*aErr* **setSplitMode** (const int32\_t splitMode)

Sets the mux's split mode configuration.

**Parameters**

**splitMode** – integer representing the channel selection for each sub-channel within the mux. See the data-sheet for the device for specific information.

**Returns**

Returns *common entity* return values

### 3.3.12 PoE Class

See the *PoE Entity* for generic information.

class **PoEClass** : public Acroname::BrainStem::EntityClass

*PoEClass*: This entity is only available on certain modules, and provides a Power over Ethernet control ability.

**Public Functions**

**PoEClass** (void)

Constructor.

virtual **~PoEClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the PoE Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the PoE entity to be addressed.

*aErr* **getPairEnabled** (const uint8\_t pair, uint8\_t \*enable)

Gets the current enable value of the indicated POE pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

- **enable** - 1 = Enabled; 0 = Disabled;

**Returns**

Returns *common entity* return values

*aErr* **setPairEnabled** (const uint8\_t pair, const uint8\_t enable)

Enables or disables the indicated POE pair.

**Parameters**

- **pair** - Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **enable** - 1 = Enable port; 0 = Disable port.

**Returns**

Returns *common entity* return values

*aErr* **getPowerMode** (uint8\_t \*value)

Gets the power mode of the device

**Parameters**

**value** - The power mode (PD, PSE, Auto, Off).

**Returns**

Returns *common entity* return values

*aErr* **setPowerMode** (const uint8\_t value)

Sets the power mode of the device

**Parameters**

**value** - The power mode (PD, PSE, Auto, Off).

**Returns**

Returns *common entity* return values

*aErr* **getPowerState** (uint8\_t \*value)

Gets the power state of the device

**Parameters**

**value** - The power state (PD, PSE, Off).

**Returns**

Returns *common entity* return values

*aErr* **getPairSourcingClass** (const uint8\_t pair, uint8\_t \*value)

Gets the sourcing class for a given pair.

**Parameters**

- **pair** - Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** - The POE class being offered by the device (PSE).

**Returns**

Returns *common entity* return values

*aErr* **setPairSourcingClass** (const uint8\_t pair, const uint8\_t value)

Sets the sourcing class for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** – The POE class being offered by the device (PSE).

**Returns**

Returns *common entity* return values

*aErr* **getPairRequestedClass** (const uint8\_t pair, uint8\_t \*value)

Gets the requested class for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** – The requested POE class by the device (PD).

**Returns**

Returns *common entity* return values

*aErr* **getPairDiscoveredClass** (const uint8\_t pair, uint8\_t \*value)

Gets the discovered class for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** – The negotiated POE class by the device (PSE/PD).

**Returns**

Returns *common entity* return values

*aErr* **getPairDetectionStatus** (const uint8\_t pair, uint8\_t \*value)

Gets detected status of the POE connection for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** – The current detected status of the pairs.

**Returns**

Returns *common entity* return values

*aErr* **getPairVoltage** (const uint8\_t pair, int32\_t \*microvolts)

Gets the Voltage for a given pair.

#### Parameters

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **microvolts** – The voltage in microvolts (1 == 1e-6V).

#### Returns

Returns *common entity* return values

*aErr* **getPairCurrent** (const uint8\_t pair, int32\_t \*microamps)

Gets the Current for a given pair.

#### Parameters

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **microamps** – The current in microamps (1 == 1e-6V).

#### Returns

Returns *common entity* return values

*aErr* **getPairResistance** (const uint8\_t pair, int32\_t \*milliohms)

Gets the Resistance for a given pair.

#### Parameters

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **milliohms** – The resistance in milliohms (1 == 1e-3Z).

#### Returns

Returns *common entity* return values

*aErr* **getPairCapacitance** (const uint8\_t pair, int32\_t \*nanofarads)

Gets the Capacitance for a given pair

#### Parameters

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **nanofarads** – The capacitance in nanofarads (1 == 1e-9F).

#### Returns

Returns *common entity* return values

*aErr* **getPairPower** (const uint8\_t pair, int32\_t \*power)

Get the instantaneous power consumption for a given pair The equivalent of Voltage x Current

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **power** – Variable to be filled with the pairs power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getTotalPower** (int32\_t \*power)

Gets the total instantaneous power consumption The equivalent of Pair1(Voltage x Current) + Pair2(Voltage x Current)

**Parameters**

- **power** – Variable to be filled with the total POE power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getPairAccumulatedPower** (const uint8\_t pair, int32\_t \*power)

Gets the accumulated power for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **power** – Variable to be filled with the total accumulated POE power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **setPairAccumulatedPower** (const uint8\_t pair, const int32\_t power)

Sets the accumulated power for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **power** – The power accumulator value to be set in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getTotalAccumulatedPower** (int32\_t \*power)

Gets the total Accumulated Power

**Parameters**

- **power** – Variable to be filled with the total accumulated POE power in milli-watts (mW).



**Returns**

Returns *common entity* return values

*aErr* **setTotalAccumulatedPower** (const int32\_t power)

Sets the total accumulated power

**Parameters**

**power** – The power accumulator value to be set in milli-watts (mW).

**Returns**

Returns *common entity* return values

### 3.3.13 Pointer Class

See the *Pointer Entity* for generic information.

class **PointerClass** : public Acroname::BrainStem::EntityClass

*PointerClass*: Allows access to the reflex scratchpad from a host computer.

The Pointers access the pad which is a shared memory area on a BrainStem module. The interface allows the use of the BrainStem scratchpad from the host, and provides a mechanism for allowing the host application and BrainStem relexes to communicate.

The Pointer allows access to the pad in a similar manner as a file pointer accesses the underlying file. The cursor position can be set via `setOffset`. A read of a character short or int can be made from that cursor position.

In addition the mode of the pointer can be set so that the cursor position automatically increments or set so that it does not this allows for multiple reads of the same pad value, or reads of multi-record values, via an incrementing pointer.

**Public Functions**

**PointerClass** (void)

Constructor.

virtual **~PointerClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Pointer Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Pointer entity to be addressed.

*aErr* **getOffset** (uint16\_t \*offset)

Get the offset of the pointer

**Parameters**

**offset** – The value of the offset.

**Returns**

Returns *common entity* return values

*aErr* **setOffset** (const uint16\_t offset)

Set the offset of the pointer

**Parameters**

**offset** – The value of the offset.

**Returns**

Returns *common entity* return values

*aErr* **getMode** (uint8\_t \*mode)

Get the mode of the pointer

**Parameters**

**mode** – The mode: aPOINTER\_MODE\_STATIC or  
aPOINTER\_MODE\_AUTO\_INCREMENT.

**Returns**

Returns *common entity* return values

*aErr* **setMode** (const uint8\_t mode)

Set the mode of the pointer

**Parameters**

**mode** – The mode: aPOINTER\_MODE\_STATIC or  
aPOINTER\_MODE\_AUTO\_INCREMENT.

**Returns**

Returns *common entity* return values

*aErr* **getTransferStore** (uint8\_t \*handle)

Get the handle to the store.

**Parameters**

**handle** – The handle of the store.

**Returns**

Returns *common entity* return values

*aErr* **setTransferStore** (const uint8\_t handle)

Set the handle to the store.

**Parameters**

**handle** – The handle of the store.

**Returns**

Returns *common entity* return values

*aErr* **initiateTransferToStore** (const uint8\_t transferLength)

Transfer data to the store.

**Parameters**

**transferLength** – The length of the data transfer.

**Returns**

Returns *common entity* return values

*aErr* **initiateTransferFromStore** (const uint8\_t transferLength)

Transfer data from the store.

**Parameters**

**transferLength** – The length of the data transfer.

**Returns**

Returns *common entity* return values

*aErr* **getChar** (uint8\_t \*value)

Get a char (1 byte) value from the pointer at this object's index, where elements are 1 byte long.

**Parameters**

**value** – The value of a single character (1 byte) stored in the pointer.

**Returns**

Returns *common entity* return values

*aErr* **setChar** (const uint8\_t value)

Set a char (1 byte) value to the pointer at this object's element index, where elements are 1 byte long.

**Parameters**

**value** – The single char (1 byte) value to be stored in the pointer.

**Returns**

Returns *common entity* return values

*aErr* **getShort** (uint16\_t \*value)

Get a short (2 byte) value from the pointer at this objects index, where elements are 2 bytes long

**Parameters**

**value** – The value of a single short (2 byte) stored in the pointer.

**Returns**

Returns *common entity* return values

*aErr* **setShort** (const uint16\_t value)

Set a short (2 bytes) value to the pointer at this object's element index, where elements are 2 bytes long.

**Parameters**

**value** – The single short (2 byte) value to be set in the pointer.

**Returns**

Returns *common entity* return values

*aErr* **getInt** (uint32\_t \*value)

Get an int (4 bytes) value from the pointer at this objects index, where elements are 4 bytes long

**Parameters**

**value** – The value of a single int (4 byte) stored in the pointer.

**Returns**

Returns *common entity* return values

*aErr* **setInt** (const uint32\_t value)

Set an int (4 bytes) value from the pointer at this objects index, where elements are 4 bytes long

**Parameters**

**value** – The single int (4 byte) value to be stored in the pointer.

**Returns**

Returns *common entity* return values

### 3.3.14 Port Class

See the *Port Entity* for generic information.

class **PortClass** : public Acroname::BrainStem::EntityClass

*PortClass*: The Port Entity provides software control over the most basic items related to a USB Port. This includes everything from the complete enable and disable of the entire port to the individual control of specific pins. Voltage and Current measurements are also included for devices which support the Port Entity.

#### Public Functions

**PortClass** (void)

Constructor.

virtual ~**PortClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Port Class.

#### Parameters

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Port entity to be addressed.

*aErr* **getVbusVoltage** (int32\_t \*microvolts)

Gets the Vbus Voltage

#### Parameters

**microvolts** – The voltage in microvolts (1 == 1e-6V) currently present on Vbus.

#### Returns

Returns *common entity* return values

*aErr* **getVbusCurrent** (int32\_t \*microamps)

Gets the Vbus Current

#### Parameters

**microamps** – The current in microamps (1 == 1e-6A) currently present on Vbus.

#### Returns

Returns *common entity* return values

*aErr* **getVconnVoltage** (int32\_t \*microvolts)

Gets the Vconn Voltage

#### Parameters

**microvolts** – The voltage in microvolts (1 == 1e-6V) currently present on Vconn.

#### Returns

Returns *common entity* return values

*aErr* **getVconnCurrent** (int32\_t \*microamps)

Gets the Vconn Current

#### Parameters

**microamps** – The current in microamps (1 == 1e-6A) currently present on Vconn.

**Returns**

Returns *common entity* return values

*aErr* **getPowerMode** (uint8\_t \*powerMode)

Gets the Port Power Mode: Convenience Function of get/setPortMode

**Parameters**

**powerMode** – The current power mode.

**Returns**

Returns *common entity* return values

*aErr* **setPowerMode** (const uint8\_t powerMode)

Sets the Port Power Mode: Convenience Function of get/setPortMode

**Parameters**

**powerMode** – The power mode to be set.

**Returns**

Returns *common entity* return values

*aErr* **getEnabled** (uint8\_t \*enable)

Gets the current enable value of the port.

**Parameters**

**enable** – 1 = Fully enabled port; 0 = One or more disabled components.

**Returns**

Returns *common entity* return values

*aErr* **setEnabled** (const uint8\_t enable)

Enables or disables the entire port.

**Parameters**

**enable** – 1 = Fully enable port; 0 = Fully disable port.

**Returns**

Returns *common entity* return values

*aErr* **getDataEnabled** (uint8\_t \*enable)

Gets the current enable value of the data lines. Sub-component (Data) of getEnabled.

**Parameters**

**enable** – 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

*aErr* **setDataEnabled** (const uint8\_t enable)

Enables or disables the data lines. Sub-component (Data) of setEnabled.

**Parameters**

**enable** – 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getDataHSEnabled** (uint8\_t \*enable)

Gets the current enable value of the High Speed (HS) data lines. Sub-component of getDataEnabled.

**Parameters**

`enable` - 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

*aErr* **setDataHSEnabled** (const uint8\_t enable)

Enables or disables the High Speed (HS) data lines. Sub-component of setDataEnabled.

**Parameters**

`enable` - 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getDataHS1Enabled** (uint8\_t \*enable)

Gets the current enable value of the High Speed A side (HSA) data lines. Sub-component of getDataHSEnabled.

**Parameters**

`enable` - 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

*aErr* **setDataHS1Enabled** (const uint8\_t enable)

Enables or disables the High Speed A side (HSA) data lines. Sub-component of setDataHSEnabled.

**Parameters**

`enable` - 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getDataHS2Enabled** (uint8\_t \*enable)

Gets the current enable value of the High Speed B side (HSB) data lines. Sub-component of getDataHSEnabled.

**Parameters**

`enable` - 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

*aErr* **setDataHS2Enabled** (const uint8\_t enable)

Enables or disables the High Speed B side (HSB) data lines. Sub-component of setDataHSEnabled.

**Parameters**

`enable` - 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getDataSSEnabled** (uint8\_t \*enable)

Gets the current enable value of the Super Speed (SS) data lines. Sub-component of getDataEnabled.

**Parameters**

`enable` - 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

*aErr* **setDataSSEnabled** (const uint8\_t enable)

Enables or disables the Super Speed (SS) data lines. Sub-component of setDataEnabled.

**Parameters**

**enable** - 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getDataSS1Enabled** (uint8\_t \*enable)

Gets the current enable value of the Super Speed A side (SSA) data lines. Sub-component of getDataSSEnabled.

**Parameters**

**enable** - 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

*aErr* **setDataSS1Enabled** (const uint8\_t enable)

Enables or disables the Super Speed A side (SSA) data lines. Sub-component of setDataEnabled.

**Parameters**

**enable** - 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getDataSS2Enabled** (uint8\_t \*enable)

Gets the current enable value of the Super Speed B side (SSB) data lines. Sub-component of getDataSSEnabled.

**Parameters**

**enable** - 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

*aErr* **setDataSS2Enabled** (const uint8\_t enable)

Enables or disables the Super Speed B side (SSB) data lines. Sub-component of setDataSSEnabled.

**Parameters**

**enable** - 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getPowerEnabled** (uint8\_t \*enable)

Gets the current enable value of the power lines. Sub-component (Power) of getEnabled.

**Parameters**

**enable** - 1 = Power enabled; 0 = Power disabled.

**Returns**

Returns *common entity* return values

*aErr* **setPowerEnabled** (const uint8\_t enable)

Enables or Disables the power lines. Sub-component (Power) of setEnable.

**Parameters**

**enable** - 1 = Enable power; 0 = Disable disable.

**Returns**

Returns *common entity* return values

*aErr* **getDataRole** (uint8\_t \*dataRole)

Gets the Port Data Role.

**Parameters**

**dataRole** – The data role to be set. See datasheet for details.

**Returns**

Returns *common entity* return values

*aErr* **getVconnEnabled** (uint8\_t \*enable)

Gets the current enable value of the Vconn lines. Sub-component (Vconn) of getEnabled.

**Parameters**

**enable** – 1 = Vconn enabled; 0 = Vconn disabled.

**Returns**

Returns *common entity* return values

*aErr* **setVconnEnabled** (const uint8\_t enable)

Enables or disables the Vconn lines. Sub-component (Vconn) of setEnabled.

**Parameters**

**enable** – 1 = Enable Vconn lines; 0 = Disable Vconn lines.

**Returns**

Returns *common entity* return values

*aErr* **getVconn1Enabled** (uint8\_t \*enable)

Gets the current enable value of the Vconn1 lines. Sub-component of getVconnEnabled.

**Parameters**

**enable** – 1 = Vconn1 enabled; 0 = Vconn1 disabled.

**Returns**

Returns *common entity* return values

*aErr* **setVconn1Enabled** (const uint8\_t enable)

Enables or disables the Vconn1 lines. Sub-component of setVconnEnabled.

**Parameters**

**enable** – 1 = Enable Vconn1 lines; 0 = Disable Vconn1 lines.

**Returns**

Returns *common entity* return values

*aErr* **getVconn2Enabled** (uint8\_t \*enable)

Gets the current enable value of the Vconn2 lines. Sub-component of getVconnEnabled.

**Parameters**

**enable** – 1 = Vconn2 enabled; 0 = Vconn2 disabled.

**Returns**

Returns *common entity* return values

*aErr* **setVconn2Enabled** (const uint8\_t enable)

Enables or disables the Vconn2 lines. Sub-component of setVconnEnabled.

**Parameters**

**enable** – 1 = Enable Vconn2 lines; 0 = Disable Vconn2 lines.



**Returns**

Returns *common entity* return values

*aErr* **getCCEnabled** (uint8\_t \*enable)

Gets the current enable value of the CC lines. Sub-component (CC) of getEnabled.

**Parameters**

**enable** – 1 = CC enabled; 0 = CC disabled.

**Returns**

Returns *common entity* return values

*aErr* **setCCEnabled** (const uint8\_t enable)

Enables or disables the CC lines. Sub-component (CC) of setEnabled.

**Parameters**

**enable** – 1 = Enable CC lines; 0 = Disable CC lines.

**Returns**

Returns *common entity* return values

*aErr* **getCC1Enabled** (uint8\_t \*enable)

Gets the current enable value of the CC1 lines. Sub-component of getCCEnabled.

**Parameters**

**enable** – 1 = CC1 enabled; 0 = CC1 disabled.

**Returns**

Returns *common entity* return values

*aErr* **setCC1Enabled** (const uint8\_t enable)

Enables or disables the CC1 lines. Sub-component of setCCEnabled.

**Parameters**

**enable** – 1 = Enable CC1 lines; 0 = Disable CC1 lines.

**Returns**

Returns *common entity* return values

*aErr* **getCC2Enabled** (uint8\_t \*enable)

Gets the current enable value of the CC2 lines. Sub-component of getCCEnabled.

**Parameters**

**enable** – 1 = CC2 enabled; 0 = CC2 disabled.

**Returns**

Returns *common entity* return values

*aErr* **setCC2Enabled** (const uint8\_t enable)

Enables or disables the CC2 lines. Sub-component of setCCEnabled.

**Parameters**

**enable** – 1 = Enable CC2 lines; 0 = Disable CC2 lines.

**Returns**

Returns *common entity* return values

*aErr* **getVoltageSetpoint** (uint32\_t \*value)

Gets the current voltage setpoint value for the port.

**Parameters**

**value** – the voltage setpoint of the port in uV.

**Returns**

Returns *common entity* return values

*aErr* **setVoltageSetpoint** (const uint32\_t value)

Sets the current voltage setpoint value for the port.

**Parameters**

**value** – the voltage setpoint of the port in uV.

**Returns**

Returns *common entity* return values

*aErr* **getState** (uint32\_t \*state)

A bit mapped representation of the current state of the port. Reflects what the port IS which may differ from what was requested.

**Parameters**

**state** – Variable to be filled with the current state.

**Returns**

Returns *common entity* return values

*aErr* **getDataSpeed** (uint8\_t \*speed)

Gets the speed of the enumerated device.

**Parameters**

**speed** – Bit mapped value representing the devices speed. See “Devices” reference for details.

**Returns**

Returns *common entity* return values

*aErr* **getMode** (uint32\_t \*mode)

Gets current mode of the port

**Parameters**

**mode** – Bit mapped value representing the ports mode. See “Devices” reference for details.

**Returns**

Returns *common entity* return values

*aErr* **setMode** (const uint32\_t mode)

Sets the mode of the port

**Parameters**

**mode** – Port mode to be set. See “Devices” documentation for details.

**Returns**

Returns *common entity* return values

*aErr* **getErrors** (uint32\_t \*errors)

Returns any errors that are present on the port. Calling this function will clear the current errors. If the error persists it will be set again.

**Parameters**

**errors** – Bit mapped field representing the current errors of the ports

**Returns**

Returns *common entity* return values

*aErr* **getCurrentLimit** (uint32\_t \*limit)

Gets the current limit of the port.

**Parameters**

**limit** – Variable to be filled with the limit in microAmps (uA).

**Returns**

Returns *common entity* return values

*aErr* **setCurrentLimit** (const uint32\_t limit)

Sets the current limit of the port.

**Parameters**

**limit** – Current limit to be applied in microAmps (uA).

**Returns**

Returns *common entity* return values

*aErr* **getCurrentLimitMode** (uint8\_t \*mode)

Gets the current limit mode. The mode determines how the port will react to an over current condition.

**Parameters**

**mode** – Variable to be filled with an enumerated representation of the current limit mode. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **setCurrentLimitMode** (const uint8\_t mode)

Sets the current limit mode. The mode determines how the port will react to an over current condition.

**Parameters**

**mode** – An enumerated representation of the current limit mode. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getAvailablePower** (uint32\_t \*power)

Gets the current available power. This value is determined by the power manager which is responsible for budgeting the systems available power envelope.

**Parameters**

**power** – Variable to be filled with the available power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getAllocatedPower** (int32\_t \*power)

Gets the currently allocated power This value is determined by the power manager which is responsible for budgeting the systems available power envelope.

**Parameters**

**power** – Variable to be filled with the allocated power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getPowerLimit** (uint32\_t \*limit)

Gets the user defined power limit for the port.

**Parameters**

**limit** – Variable to be filled with the power limit in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **setPowerLimit** (const uint32\_t limit)

Sets a user defined power limit for the port.

**Parameters**

**limit** – Power limit to be applied in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getPowerLimitMode** (uint8\_t \*mode)

Gets the power limit mode. The mode determines how the port will react to an over power condition.

**Parameters**

**mode** – Variable to be filled with an enumerated representation of the power limit mode. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **setPowerLimitMode** (const uint8\_t mode)

Sets the power limit mode. The mode determines how the port will react to an over power condition.

**Parameters**

**mode** – An enumerated representation of the power limit mode to be applied Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getName** (uint8\_t \*buffer, const size\_t bufferSize, size\_t \*unloadedLength)

Gets a user defined name of the port. Helpful for identifying ports/devices in a static environment.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setName** (const uint8\_t \*buffer, const size\_t bufferSize)

Sets a user defined name of the port. Helpful for identifying ports/devices in a static environment.

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

***aErr* getCCCurrentLimit** (uint8\_t \*value)

Gets the CC Current Limit Resistance The CC Current limit is the value that's set for the pull up resistance on the CC lines for basic USB-C negotiations.

**Parameters**

**value** – Variable to be filled with an enumerated representation of the CC Current limit.

- 0 = None
- 1 = Default (500/900mA)
- 2 = 1.5A
- 3 = 3.0A

**Returns**

Returns *common entity* return values

***aErr* setCCCurrentLimit** (const uint8\_t value)

Sets the CC Current Limit Resistance The CC Current limit is the value that's set for the pull up resistance on the CC lines for basic USB-C negotiations.

**Parameters**

**value** – Variable to be filled with an enumerated representation of the CC Current limit.

- 0 = None
- 1 = Default (500/900mA)
- 2 = 1.5A
- 3 = 3.0A

**Returns**

Returns *common entity* return values

***aErr* getDataHSRoutingBehavior** (uint8\_t \*mode)

Gets the HighSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Parameters**

**mode** – Variable to be filled with an enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

***aErr* setDataHSRoutingBehavior** (const uint8\_t mode)

Sets the HighSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Parameters**

**mode** – An enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

***aErr* getDataSSRoutingBehavior** (uint8\_t \*mode)

Gets the SuperSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Parameters**

**mode** – Variable to be filled with an enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **setDataSSRoutingBehavior** (const uint8\_t mode)

Sets the SuperSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Parameters**

**mode** – An enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getVbusAccumulatedPower** (int32\_t \*milliwatthours)

Gets the Vbus Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vbus in milliwatt-hours.

**Returns**

Returns *common entity* return values

*aErr* **setVbusAccumulatedPower** (const int32\_t milliwatthours)

Sets the Vbus Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vbus in milliwatt-hours to be set.

**Returns**

Returns *common entity* return values

*aErr* **resetVbusAccumulatedPower** (void)

Resets the Vbus Accumulated Power to zero.

*Deprecated:*

Replace with setVbusAccumulatedPower(0)

**Returns**

Returns *common entity* return values

*aErr* **getVconnAccumulatedPower** (int32\_t \*milliwatthours)

Gets the Vconn Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn in milliwatt-hours.

**Returns**

Returns *common entity* return values

*aErr* **setVconnAccumulatedPower** (const int32\_t milliwatthours)

Sets the Vconn Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn to be set.

**Returns**

Returns *common entity* return values

*aErr* **resetVconnAccumulatedPower** (void)

Resets the Vconn Accumulated Power to zero.

*Deprecated:*

Replace with setVconnAccumulatedPower(0)

**Returns**

Returns *common entity* return values

*aErr* **setHSBoost** (const uint8\_t boost)

Sets the ports USB 2.0 High Speed Boost Settings The setting determines how much additional drive the USB 2.0 signal will have in High Speed mode.

**Parameters**

**boost** – An enumerated representation of the boost range. Available value are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getHSBoost** (uint8\_t \*boost)

Gets the ports USB 2.0 High Speed Boost Settings The setting determines how much additional drive the USB 2.0 signal will have in High Speed mode.

**Parameters**

**boost** – An enumerated representation of the boost range. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getCC1State** (uint16\_t \*value)

Gets the current CC1 Strapping on local and remote The state is a bit packed value where the upper byte is used to represent the remote or partner device attached to the ports resistance and the lower byte is used to represent the local or hubs resistance.

**Parameters**

**value** – Variable to be filled with an packed enumerated representation of the CC state. Enumeration values for each byte are as follows:

- None = 0 = portCC1State\_None
- Invalid = 1 = portCC1State\_Invalid
- Rp (default) = 2 = portCC1State\_RpDefault
- Rp (1.5A) = 3 = portCC1State\_Rp1p5
- Rp (3A) = 4 = portCC1State\_Rp3p0
- Rd = 5 = portCC1State\_Rd
- Ra = 6 = portCC1State\_Ra
- Managed by controller = 7 = portCC1State\_Managed
- Unknown = 8 = portCC1State\_Unknown

**Returns**

Returns *common entity* return values

*aErr* **getCC2State** (uint16\_t \*value)

Gets the current CC2 Strapping on local and remote The state is a bit packed value where the upper byte is used to represent the remote or partner device attached to the ports resistance and the lower byte is used to represent the local or hubs resistance.

**Parameters**

**value** – Variable to be filled with an packed enumerated representation of the CC state. Enumeration values for each byte are as follows:

- None = 0 = portCC2State\_None
- Invalid = 1 = portCC2State\_Invalid
- Rp (default) = 2 = portCC2State\_RpDefault
- Rp (1.5A) = 3 = portCC2State\_Rp1p5
- Rp (3A) = 4 = portCC2State\_Rp3p0
- Rd = 5 = portCC2State\_Rd
- Ra = 6 = portCC2State\_Ra
- Managed by controller = 7 = portCC2State\_Managed
- Unknown = 8 = portCC2State\_Unknown

**Returns**

Returns *common entity* return values

*aErr* **getSBU1Voltage** (int32\_t \*microvolts)

Get the voltage of SBU1 for a port.

**Parameters**

**microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getSBU2Voltage** (int32\_t \*microvolts)

Get the voltage of SBU2 for a port.

**Parameters**

**microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getCC1Voltage** (int32\_t \*microvolts)

Get the voltage of CC1 for a port.

**Parameters**

**microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getCC2Voltage** (int32\_t \*microvolts)

Get the voltage of CC2 for a port.



**Parameters**

**microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getCC1Current** (int32\_t \*microamps)

Get the current through the CC1 for a port.

**Parameters**

**microamps** – The USB channel current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getCC2Current** (int32\_t \*microamps)

Get the current through the CC2 for a port.

**Parameters**

**microamps** – The USB channel current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getCC1AccumulatedPower** (int32\_t \*milliwatthours)

Gets the CC1 Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn in milliwatt-hours.

**Returns**

Returns *common entity* return values

*aErr* **setCC1AccumulatedPower** (const int32\_t milliwatthours)

Sets the CC1 Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn to be set.

**Returns**

Returns *common entity* return values

*aErr* **getCC2AccumulatedPower** (int32\_t \*milliwatthours)

Gets the CC2 Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn in milliwatt-hours.

**Returns**

Returns *common entity* return values

*aErr* **setCC2AccumulatedPower** (const int32\_t milliwatthours)

Sets the CC2 Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn to be set.

**Returns**

Returns *common entity* return values

### 3.3.15 PowerDelivery Class

See the [PowerDelivery Entity](#) for generic information.

class **PowerDeliveryClass** : public Acroname::BrainStem::EntityClass

[PowerDeliveryClass](#): Power Delivery or PD is a power specification which allows more charging options and device behaviors within the USB interface. This Entity will allow you to directly access the vast landscape of PD.

#### Public Functions

**PowerDeliveryClass** (void)

Constructor.

virtual ~**PowerDeliveryClass** (void)

Destructor.

void **init** ([Module](#) \*pModule, const uint8\_t index)

Initialize the PowerDelivery Class.

#### Parameters

- **pModule** – The module to which this entity belongs.
- **index** – The index of the PowerDelivery entity to be addressed.

[aErr](#) **getConnectionState** (uint8\_t \*state)

Gets the current state of the connection in the form of an enumeration.

#### Parameters

**state** – Pointer to be filled with the current connection state.

#### Returns

Returns [common entity](#) return values

[aErr](#) **getNumberOfPowerDataObjects** (const uint8\_t partner, const uint8\_t powerRole, uint8\_t \*numRules)

Gets the number of Power Data Objects (PDOs) for a given partner and power role.

#### Parameters

- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **numRules** – Variable to be filled with the number of PDOs.

#### Returns

Returns [common entity](#) return values

*aErr* **getPowerDataObject** (const uint8\_t partner, const uint8\_t powerRole, const uint8\_t ruleIndex, uint32\_t \*pdo)

Gets the Power Data Object (PDO) for the requested partner, powerRole and index.

#### Parameters

- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.
- **pdo** – Variable to be filled with the requested power rule.

#### Returns

Returns *common entity* return values

*aErr* **setPowerDataObject** (const uint8\_t powerRole, const uint8\_t ruleIndex, const uint32\_t pdo)

Sets the Power Data Object (PDO) of the local partner for a given power role and index.

#### Parameters

- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.
- **pdo** – Power Data Object to be set.

#### Returns

Returns *common entity* return values

*aErr* **resetPowerDataObjectToDefault** (const uint8\_t powerRole, const uint8\_t ruleIndex)

Resets the Power Data Object (PDO) of the Local partner for a given power role and index.

#### Parameters

- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.

#### Returns

Returns *common entity* return values

*aErr* **getPowerDataObjectList** (uint32\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Gets all Power Data Objects (PDOs). Equivalent to calling *PowerDeliveryClass::getPowerDataObject()* on all partners, power roles, and index's.

#### Parameters

- **buffer** – pointer to the start of a c style buffer to be filled The order of which is:

- Rules 1-7 Local Source
- Rules 1-7 Local Sink
- Rules 1-7 Partner Source
- Rules 1-7 Partner Sink.
- **bufferLength** – Length of the buffer to be filed
- **unloadedLength** – Length that was actually received and filled. On success this value should be 28 (7 rules \* 2 partners \* 2 power roles)

#### Returns

Returns *common entity* return values

*aErr* **getPowerDataObjectEnabled** (const uint8\_t powerRole, const uint8\_t ruleIndex, uint8\_t \*enabled)

Gets the enabled state of the Local Power Data Object (PDO) for a given power role and index. Enabled refers to whether the PDO will be advertised when a PD connection is made. This does not indicate the currently active rule index. This information can be found in Request Data Object (RDO).

#### Parameters

- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.
- **enabled** – Variable to be filled with enabled state.

#### Returns

Returns *common entity* return values

*aErr* **setPowerDataObjectEnabled** (const uint8\_t powerRole, const uint8\_t ruleIndex, const uint8\_t enabled)

Sets the enabled state of the Local Power Data Object (PDO) for a given powerRole and index. Enabled refers to whether the PDO will be advertised when a PD connection is made. This does not indicate the currently active rule index. This information can be found in Request Data Object (RDO).

#### Parameters

- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.
- **enabled** – The state to be set.

#### Returns

Returns *common entity* return values

*aErr* **getPowerDataObjectEnabledList** (const uint8\_t powerRole, uint8\_t \*enabledList)

Gets all Power Data Object enables for a given power role. Equivalent of calling *PowerDeliveryClass::getPowerDataObjectEnabled()* for all indexes.

#### Parameters

- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **enabledList** – Variable to be filled with a mapped representation of the enabled PDOs for a given power role. Values align with a given rule index (bits 1-7, bit 0 is invalid)

**Returns**

Returns *common entity* return values

*aErr* **getRequestDataObject** (const uint8\_t partner, uint32\_t \*rdo)

Gets the current Request Data Object (RDO) for a given partner. RDOs are provided by the sinking device and exist only after a successful PD negotiation (Otherwise zero). Only one RDO can exist at a time. i.e. Either the Local or Remote partner RDO

**Parameters**

- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **rdo** – Variable to be filled with the current RDO. Zero indicates the RDO is not active.

**Returns**

Returns *common entity* return values

*aErr* **setRequestDataObject** (const uint32\_t rdo)

Sets the current Request Data Object (RDO) for a given partner. Only the local partner can be changed. RDOs are provided by the sinking device and exist only after a successful PD negotiation (Otherwise zero). Only one RDO can exist at a time. i.e. Either the Local or Remote partner RDO

**Parameters**

**rdo** – Request Data Object to be set.

**Returns**

Returns *common entity* return values

*aErr* **getLinkState** (uint32\_t \*state)

Gets the current state of the connection in the form of a bitmask.

**Parameters**

**state** – Pointer to be filled with the current connection state bits.

**Returns**

Returns *common entity* return values

*aErr* **getAttachTimeElapsed** (uint32\_t \*secondsAndMicroseconds, const size\_t bufferLength, size\_t \*unloadedLength)

Gets the length of time that the port has been in the attached state. Returned as a list of two unsigned integers, first seconds, then microseconds.

**Parameters**

- **secondsAndMicroseconds** – Pointer to list of unsigned integers to fill with attach time elapsed
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **getPowerRoleCapabilities** (uint8\_t \*powerRole)

Gets the power roles that may be advertised by the local partner. (CC Strapping).

**Parameters**

**powerRole** – Variable to be filled with the power role

- None = 0 = pdPowerRoleCapabilities\_None
- Source = 1 = pdPowerRoleCapabilities\_Source
- Sink = 2 = pdPowerRoleCapabilities\_Sink
- Source/Sink = 3 = pdPowerRoleCapabilities\_DualRole (Dual Role Port)

**Returns**

Returns *common entity* return values

*aErr* **getPowerRole** (uint8\_t \*powerRole)

Gets the power role that is currently being advertised by the local partner. (CC Strapping).

**Parameters**

**powerRole** – Variable to be filled with the power role

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink
- Source/Sink = 3 = powerdeliveryPowerRoleSourceSink (Dual Role Port)

**Returns**

Returns *common entity* return values

*aErr* **setPowerRole** (const uint8\_t powerRole)

Set the current power role to be advertised by the Local partner. (CC Strapping).

**Parameters**

**powerRole** – Value to be applied.

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink
- Source/Sink = 3 = powerdeliveryPowerRoleSourceSink (Dual Role Port)

**Returns**

Returns *common entity* return values

*aErr* **getPowerRolePreferred** (uint8\_t \*powerRole)

Gets the preferred power role currently being advertised by the Local partner. (CC Strapping).

**Parameters**

**powerRole** – Value to be applied.

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink

**Returns**

Returns *common entity* return values

*aErr* **setPowerRolePreferred** (const uint8\_t powerRole)

Set the preferred power role to be advertised by the Local partner (CC Strapping).

**Parameters**

**powerRole** – Value to be applied.

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink

**Returns**

Returns *common entity* return values

*aErr* **getDataRoleCapabilities** (uint8\_t \*dataRole)

Gets the data roles that may be advertised by the local partner.

**Parameters**

**dataRole** – Variable to be filled with the data role

- None = 0 = pdDataRoleCapabilities\_None
- DFP = 1 = pdDataRoleCapabilities\_DFP
- UFP = 2 = pdDataRoleCapabilities\_UFP
- DFP/UFP = 3 = pdDataRoleCapabilities\_DualRole (Dual Role Port)

**Returns**

Returns *common entity* return values

*aErr* **getCableVoltageMax** (uint8\_t \*maxVoltage)

Gets the maximum voltage capability reported by the e-mark of the attached cable.

**Parameters**

**maxVoltage** – Variable to be filled with an enumerated representation of voltage.

- Unknown/Unattached (0)
- 20 Volts DC (1)
- 30 Volts DC (2)
- 40 Volts DC (3)
- 50 Volts DC (4)

**Returns**

Returns *common entity* return values

*aErr* **getCableCurrentMax** (uint8\_t \*maxCurrent)

Gets the maximum current capability report by the e-mark of the attached cable.

**Parameters**

**maxCurrent** – Variable to be filled with an enumerated representation of current.

- Unknown/Unattached (0)
- 3 Amps (1)
- 5 Amps (2)

**Returns**

Returns *common entity* return values

*aErr* **getCableSpeedMax** (uint8\_t \*maxSpeed)

Gets the maximum data rate capability reported by the e-mark of the attached cable.

**Parameters**

**maxSpeed** – Variable to be filled with an enumerated representation of data speed.

- Unknown/Unattached (0)
- USB 2.0 (1)
- USB 3.2 gen 1 (2)
- USB 3.2 / USB 4 gen 2 (3)
- USB 4 gen 3 (4)

**Returns**

Returns *common entity* return values

*aErr* **getCableType** (uint8\_t \*type)

Gets the cable type reported by the e-mark of the attached cable.

**Parameters**

**type** – Variable to be filled with an enumerated representation of the cable type.

- Invalid, no e-mark and not Vconn powered (0)
- Passive cable with e-mark (1)
- Active cable (2)

**Returns**

Returns *common entity* return values

*aErr* **getCableOrientation** (uint8\_t \*orientation)

Gets the current orientation being used for PD communication

**Parameters**

**orientation** – Variable filled with an enumeration of the orientation.

- Unconnected (0)
- CC1 (1)
- CC2 (2)

**Returns**

Returns *common entity* return values

*aErr* **request** (const uint8\_t request)

Requests an action of the Remote partner. Actions are not guaranteed to occur.

**Parameters**

**request** – Request to be issued to the remote partner

- pdRequestHardReset (0)
- pdRequestSoftReset (1)
- pdRequestDataReset (2)
- pdRequestPowerRoleSwap (3)



- `pdRequestPowerFastRoleSwap` (4)
- `pdRequestDataRoleSwap` (5)
- `pdRequestVconnSwap` (6)
- `pdRequestSinkGoToMinimum` (7)
- `pdRequestRemoteSourcePowerDataObjects` (8)
- `pdRequestRemoteSinkPowerDataObjects` (9)

**Returns**

Returns *common entity* return values

*aErr* **requestStatus** (uint32\_t \*status)

Gets the status of the last request command sent.

**Parameters**

**status** – Variable to be filled with the status

**Returns**

Returns *common entity* return values

*aErr* **getOverride** (uint32\_t \*overrides)

Gets the current enabled overrides

**Parameters**

**overrides** – Bit mapped representation of the current override configuration.

**Returns**

Returns *common entity* return values

*aErr* **setOverride** (const uint32\_t overrides)

Sets the current enabled overrides

**Parameters**

**overrides** – Overrides to be set in a bit mapped representation.

**Returns**

Returns *common entity* return values

*aErr* **getFlagMode** (const uint8\_t flag, uint8\_t \*mode)

Gets the current mode of the local partner flag/advertisement. These flags are apart of the first Local Power Data Object and must be managed in order to accurately represent the system to other PD devices. This API allows overriding of that feature. Overriding may lead to unexpected behaviors.

**Parameters**

- **flag** – Flag/Advertisement to be modified
- **mode** – Variable to be filled with the current mode.
  - Disabled (0)
  - Enabled (1)
  - Auto (2) default

**Returns**

Returns *common entity* return values

*aErr* **setFlagMode** (const uint8\_t flag, const uint8\_t mode)

Sets how the local partner flag/advertisement is managed. These flags are apart of the first Local Power Data Object and must be managed in order to accurately represent the system to other PD devices. This API allows overriding of that feature. Overriding may lead to unexpected behaviors.

#### Parameters

- **flag** – Flag/Advertisement to be modified
- **mode** – Value to be applied.
  - Disabled (0)
  - Enabled (1)
  - Auto (2) default

#### Returns

Returns *common entity* return values

*aErr* **getPeakCurrentConfiguration** (uint8\_t \*configuration)

Gets the Peak Current Configuration for the Local Source. The peak current configuration refers to the allowable tolerance/overload capabilities in regards to the devices max current. This tolerance includes a maximum value and a time unit.

#### Parameters

- configuration** – An enumerated value referring to the current configuration.
- Allowable values are 0 - 4

#### Returns

Returns *common entity* return values

*aErr* **setPeakCurrentConfiguration** (const uint8\_t configuration)

Sets the Peak Current Configuration for the Local Source. The peak current configuration refers to the allowable tolerance/overload capabilities in regards to the devices max current. This tolerance includes a maximum value and a time unit.

#### Parameters

- configuration** – An enumerated value referring to the configuration to be set
- Allowable values are 0 - 4

#### Returns

Returns *common entity* return values

*aErr* **getFastRoleSwapCurrent** (uint8\_t \*swapCurrent)

Gets the Fast Role Swap Current The fast role swap current refers to the amount of current required by the Local Sink in order to successfully preform the swap.

#### Parameters

- swapCurrent** – An enumerated value referring to current swap value.
- 0A (0)
  - 900mA (1)
  - 1.5A (2)
  - 3A (3)

#### Returns

Returns *common entity* return values

*aErr* **setFastRoleSwapCurrent** (const uint8\_t swapCurrent)

Sets the Fast Role Swap Current The fast role swap current refers to the amount of current required by the Local Sink in order to successfully preform the swap.

#### Parameters

**swapCurrent** – An enumerated value referring to value to be set.

- 0A (0)
- 900mA (1)
- 1.5A (2)
- 3A (3)

#### Returns

Returns *common entity* return values

### Public Static Functions

static *aErr* **packDataObjectAttributes** (uint8\_t \*attributes, const uint8\_t partner, const uint8\_t powerRole, const uint8\_t ruleIndex)

Helper function for packing Data Object attributes. This value is used as a subindex for all Data Object calls with the BrainStem Protocol.

#### Parameters

- **attributes** – Variable to be filled with packed values.
- **partner** – Indicates which side of the PD connection.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – Data object index.

#### Returns

Returns *common entity* return values

static *aErr* **unpackDataObjectAttributes** (const uint8\_t attributes, uint8\_t \*partner, uint8\_t \*powerRole, uint8\_t \*ruleIndex)

Helper function for unpacking Data Object attributes. This value is used as a subindex for all Data Object calls with the BrainStem Protocol.

#### Parameters

- **attributes** – Variable to be filled with packed values.
- **partner** – Indicates which side of the PD connection.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection.
  - Source = 1 = powerdeliveryPowerRoleSource

- Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – Data object index.

**Returns**

Returns *common entity* return values

### 3.3.16 RCServo Class

See the *RCServo Entity* for generic information.

class **RCServoClass** : public Acroname::BrainStem::EntityClass

*RCServoClass*: Interface to servo entities on BrainStem modules. Servo entities are built upon the digital input/output pins and therefore can also be inputs or outputs. Please see the product datasheet on the configuration limitations.

**Public Functions**

**RCServoClass** (void)

Constructor.

virtual **~RCServoClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the RCServo Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the RCServo entity to be addressed.

*aErr* **setEnabled** (const uint8\_t enable)

Enable the servo channel

**Parameters**

**enable** – The state to be set. 0 is disabled, 1 is enabled.

**Returns**

Returns *common entity* return values

*aErr* **getEnable** (uint8\_t \*enable)

Get the enable status of the servo channel.

**Parameters**

**enable** – The current enable status of the servo entity. 0 is disabled, 1 is enabled.

**Returns**

Returns *common entity* return values

*aErr* **setPosition** (const uint8\_t position)

Set the position of the servo channel

**Parameters**

**position** – The position to be set. Default 64 = a 1ms pulse and 192 = a 2ms pulse.

**Returns**

Returns *common entity* return values

*aErr* **getPosition** (uint8\_t \*position)

Get the position of the servo channel

**Parameters**

**position** – The current position of the servo channel. Default 64 = a 1ms pulse and 192 = a 2ms pulse.

**Returns**

Returns *common entity* return values

*aErr* **setReverse** (const uint8\_t reverse)

Set the output to be reversed on the servo channel

**Parameters**

**reverse** – Reverses the value set by “setPosition”. For example, if the position is set to 64 (1ms pulse) the output will now be 192 (2ms pulse), however “getPosition” will return the set value of 64. 0 = not reversed, 1 = reversed.

**Returns**

Returns *common entity* return values

*aErr* **getReverse** (uint8\_t \*reverse)

Get the reverse status of the servo channel

**Parameters**

**reverse** – The current reverse status of the servo entity. 0 = not reversed, 1 = reversed.

**Returns**

Returns *common entity* return values

### 3.3.17 Rail Class

See the *Rail Entity* for generic information.

class **RailClass** : public Acroname::BrainStem::EntityClass

*RailClass*: Provides power rail functionality on certain modules. The *RailClass* can be used to control power to downstream devices. It has the ability to take current and voltage measurements, and depending on hardware, may have additional modes and capabilities.

**Public Functions**

**RailClass** (void)

Constructor.

virtual **~RailClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Rail Class.

**Parameters**

- **pModule** – The module to which this entity belongs.

- **index** – The index of the Rail entity to be addressed.

*aErr* **getCurrent** (int32\_t \*microamps)

Get the rail current.

**Parameters**

**microamps** – The current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **setCurrentSetpoint** (const int32\_t microamps)

Set the rail supply current. Rail current control capabilities vary between modules. Refer to the module datasheet for definition of the rail current capabilities.

**Parameters**

**microamps** – The current in micro-amps (1 == 1e-6A) to be supply by the rail.

**Returns**

Returns *common entity* return values

*aErr* **getCurrentSetpoint** (int32\_t \*microamps)

Get the rail setpoint current. Rail current control capabilities vary between modules. Refer to the module datasheet for definition of the rail current capabilities.

**Parameters**

**microamps** – The current in micro-amps (1 == 1e-6A) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setCurrent interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setCurrentLimit** (const int32\_t microamps)

Set the rail current limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microamps** – The current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getCurrentLimit** (int32\_t \*microamps)

Get the rail current limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microamps** – The current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getTemperature** (int32\_t \*microcelsius)

Get the rail temperature.

**Parameters**

**microcelsius** – The measured temperature associated with the rail in micro-Celsius (1 == 1e-6°C). The temperature may be associated with the module's internal rail circuitry or an externally connected temperature sensors. Refer to the module datasheet for definition of the temperature measurement location and specific capabilities.

**Returns**

Returns *common entity* return values

*aErr* **getEnable** (uint8\_t \*enable)

Get the state of the external rail switch. Not all rails can be switched on and off. Refer to the module datasheet for capability specification of the rails.

**Parameters**

**enable** – true: enabled: connected to the supply rail voltage; false: disabled: disconnected from the supply rail voltage

**Returns**

Returns *common entity* return values

*aErr* **setEnable** (const uint8\_t enable)

Set the state of the external rail switch. Not all rails can be switched on and off. Refer to the module datasheet for capability specification of the rails.

**Parameters**

**enable** – true: enable and connect to the supply rail voltage; false: disable and disconnect from the supply rail voltage

**Returns**

Returns *common entity* return values

*aErr* **getVoltage** (int32\_t \*microvolts)

Get the rail supply voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V) currently supplied by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setVoltage interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setVoltageSetpoint** (const int32\_t microvolts)

Set the rail supply voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V) to be supplied by the rail.

**Returns**

Returns *common entity* return values

*aErr* **getVoltageSetpoint** (int32\_t \*microvolts)

Get the rail setpoint voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setVoltage interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setVoltageMinLimit** (const int32\_t microvolts)

Set the rail voltage minimum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getVoltageMinLimit** (int32\_t \*microvolts)

Get the rail voltage minimum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **setVoltageMaxLimit** (const int32\_t microvolts)

Set the rail voltage maximum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getVoltageMaxLimit** (int32\_t \*microvolts)

Get the rail voltage maximum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getPower** (int32\_t \*milliwatts)

Get the rail supply power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

**Parameters**

**milliwatts** – The power in milli-watts (1 == 1e-3W) currently supplied by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setPower interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setPowerSetpoint** (const int32\_t milliwatts)

Set the rail supply power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

**Parameters**

**milliwatts** – The power in milli-watts (1 == 1e-3W) to be supplied by the rail.

**Returns**

Returns *common entity* return values



*aErr* **getPowerSetpoint** (int32\_t \*milliwatts)

Get the rail setpoint power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

#### Parameters

**milliwatts** – The power in milli-watts ( $1 == 1e-3W$ ) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setPower interface. Refer to the module datasheet to determine if this is a measured or stored value.

#### Returns

Returns *common entity* return values

*aErr* **setPowerLimit** (const int32\_t milliwatts)

Set the rail power maximum limit setting. (Check product datasheet to see if this feature is available)

#### Parameters

**milliwatts** – The power in milli-watts (mW).

#### Returns

Returns *common entity* return values

*aErr* **getPowerLimit** (int32\_t \*milliwatts)

Get the rail power maximum limit setting. (Check product datasheet to see if this feature is available)

#### Parameters

**milliwatts** – The power in milli-watts (mW).

#### Returns

Returns *common entity* return values

*aErr* **getResistance** (int32\_t \*milliohms)

Get the rail load resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

#### Parameters

**milliohms** – The resistance in milli-ohms ( $1 == 1e-3Ohms$ ) currently drawn by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setResistance interface. Refer to the module datasheet to determine if this is a measured or stored value.

#### Returns

Returns *common entity* return values

*aErr* **setResistanceSetpoint** (const int32\_t milliohms)

Set the rail load resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

#### Parameters

**milliohms** – The resistance in milli-ohms ( $1 == 1e-3Ohms$ ) to be drawn by the rail.

#### Returns

Returns *common entity* return values

*aErr* **getResistanceSetpoint** (int32\_t \*milliohms)

Get the rail setpoint resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

#### Parameters

**milliohms** – The resistance in milli-ohms ( $1 == 1e-3Ohms$ ) the rail is trying to achieve.

On some modules this is a measured value so it may not exactly match what was previously set via the `setResistance` interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setKelvinSensingEnable** (const uint8\_t enable)

Enable or Disable kelvin sensing on the module. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

**Parameters**

**enable** – enable or disable kelvin sensing.

**Returns**

Returns *common entity* return values

*aErr* **getKelvinSensingEnable** (uint8\_t \*enable)

Determine whether kelvin sensing is enabled or disabled. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

**Parameters**

**enable** – Kelvin sensing is enabled or disabled.

**Returns**

Returns *common entity* return values

*aErr* **getKelvinSensingState** (uint8\_t \*state)

Determine whether kelvin sensing has been disabled by the system. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

**Parameters**

**state** – Kelvin sensing is enabled or disabled.

**Returns**

Returns *common entity* return values

*aErr* **setOperationalMode** (const uint8\_t mode)

Set the operational mode of the rail. Refer to the module datasheet for definition of the rail operational capabilities.

**Parameters**

**mode** – The operational mode to employ.

**Returns**

Returns *common entity* return values

*aErr* **getOperationalMode** (uint8\_t \*mode)

Determine the current operational mode of the system. Refer to the module datasheet for definition of the rail operational mode capabilities.

**Parameters**

**mode** – The current operational mode setting.

**Returns**

Returns *common entity* return values

*aErr* **getOperationalState** (uint32\_t \*state)

Determine the current operational state of the system. Refer to the module datasheet for definition of the rail operational states.

**Parameters**

**state** – The current operational state, hardware configuration, faults, and operating mode.

**Returns**

Returns *common entity* return values

*aErr* **clearFaults** (void)

Clears the current fault state of the rail. Refer to the module datasheet for definition of the rail faults.

**Returns**

Returns *common entity* return values

### 3.3.18 Relay Class

See the *Relay Entity* for generic information.

class **RelayClass** : public Acroname::BrainStem::EntityClass

*RelayClass*: Interface to relay entities on BrainStem modules. Relay entities can be set, and the voltage read. Other capabilities may be available, please see the product datasheet.

**Public Functions**

**RelayClass** (void)

Constructor.

virtual **~RelayClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Relay Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Relay entity to be addressed.

*aErr* **setEnabled** (const uint8\_t enable)

Set the enable/disable state.

**Parameters**

**enable** – False or 0 = Disabled, True or 1 = Enabled

**Returns**

Returns *common entity* return values

*aErr* **getEnabled** (uint8\_t \*enabled)

Get the state.

**Parameters**

**enabled** – False or 0 = Disabled, True or 1 = Enabled

**Returns**

Returns *common entity* return values

*aErr* **getVoltage** (int32\_t \*microvolts)

Get the scaled micro volt value with reference to ground.

---

**Note:** Not all modules provide 32 bits of accuracy. Refer to the module's datasheet to determine the analog bit depth and reference voltage.

---

**Parameters**

**microvolts** – 32 bit signed integer (in micro Volts) based on the boards ground and reference voltages.

**Returns**

Returns *common entity* return values

### 3.3.19 Signal Class

See the *Signal Entity* for generic information.

class **SignalClass** : public Acroname::BrainStem::EntityClass

*SignalClass*: Interface to digital pins configured to produce square wave signals. This class is designed to allow for square waves at various frequencies and duty cycles. Control is defined by specifying the wave period as (T3Time) and the active portion of the cycle as (T2Time). See the entity overview section of the reference for more detail regarding the timing.

**Public Functions**

**SignalClass** (void)

Constructor.

virtual ~**SignalClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Signal Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Signal entity to be addressed.

*aErr* **setEnabled** (const uint8\_t enable)

Enable/Disable the signal output.

**Parameters**

**enable** – True to enable, false to disable

**Returns**

Returns *common entity* return values

*aErr* **getEnable** (uint8\_t \*enable)

Get the Enable/Disable of the signal.

**Parameters**

**enable** – True to enable, false to disable

**Returns**

Returns *common entity* return values

*aErr* **setInvert** (const uint8\_t invert)

Invert the signal output.

Normal mode is High on t0 then low at t2. Inverted mode is Low at t0 on period start and high at t2.

**Parameters**

**invert** – True to invert, false for normal mode.

**Returns**

Returns *common entity* return values

*aErr* **getInvert** (uint8\_t \*invert)

Get the invert status the signal output.

Normal mode is High on t0 then low at t2. Inverted mode is Low at t0 on period start and high at t2.

**Parameters**

**invert** – True to invert, false for normal mode.

**Returns**

Returns *common entity* return values

*aErr* **setT3Time** (const uint32\_t t3\_nsec)

Set the signal period or T3 in nanoseconds.

**Parameters**

**t3\_nsec** – Integer not larger than unsigned 32 bit max value representing the wave period in nanoseconds.

**Returns**

Returns *common entity* return values

*aErr* **getT3Time** (uint32\_t \*t3\_nsec)

Get the signal period or T3 in nanoseconds.

**Parameters**

**t3\_nsec** – Integer not larger than unsigned 32 bit max value representing the wave period in nanoseconds.

**Returns**

Returns *common entity* return values

*aErr* **setT2Time** (const uint32\_t t2\_nsec)

Set the signal active period or T2 in nanoseconds.

**Parameters**

**t2\_nsec** – Integer not larger than unsigned 32 bit max value representing the wave active period in nanoseconds.

**Returns**

Returns *common entity* return values

*aErr* **getT2Time** (uint32\_t \*t2\_nsec)

Get the signal active period or T2 in nanoseconds.

**Parameters**

**t2\_nsec** – Integer not larger than unsigned 32 bit max value representing the wave active period in nanoseconds.

**Returns**

Returns *common entity* return values

### 3.3.20 Store Class

See the *Store Entity* for generic information.

class **StoreClass** : public Acroname::BrainStem::EntityClass

*StoreClass*: The store provides a flat file system on modules that have storage capacity. Files are referred to as slots and they have simple zero-based numbers for access. Store slots can be used for generalized storage and commonly contain compiled reflex code (files ending in .map) or templates used by the system. Slots simply contain bytes with no expected organization but the code or use of the slot may impose a structure. Stores have fixed indices based on type. Not every module contains a store of each type. Consult the module datasheet for details on which specific stores are implemented, if any, and the capacities of implemented stores.

**Public Functions**

**StoreClass** (void)

Constructor.

virtual **~StoreClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Store Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Store entity to be addressed.

*aErr* **getSlotState** (const uint8\_t slot, uint8\_t \*state)

Get slot state.

**Parameters**

- **slot** – The slot number.
- **state** – true: enabled, false: disabled.

**Returns**

Returns *common entity* return values

*aErr* **loadSlot** (const uint8\_t slot, const uint8\_t \*buffer, const uint16\_t bufferLength)

Load the slot.

**Parameters**

- **slot** – The slot number.
- **buffer** – The data.
- **bufferLength** – The data length.

**Returns**

Returns *common entity* return values

*aErr* **unloadSlot** (const uint8\_t slot, const size\_t bufferLength, uint8\_t \*buffer, size\_t \*unloadedLength)

Unload the slot data.

#### Parameters

- **slot** – The slot number.
- **bufferLength** – The length of buffer buffer in bytes. This is the maximum number of bytes that should be unloaded.
- **buffer** – Byte array that the unloaded data will be placed into.
- **unloadedLength** – Length of data that was unloaded. Unloaded length will never be larger than dataLength.

#### Returns

Returns *common entity* return values

*aErr* **slotEnable** (const uint8\_t slot)

Enable slot.

#### Parameters

**slot** – The slot number.

#### Returns

Returns *common entity* return values

*aErr* **slotDisable** (const uint8\_t slot)

Disable slot.

#### Parameters

**slot** – The slot number.

#### Returns

Returns *common entity* return values

*aErr* **getSlotCapacity** (const uint8\_t slot, size\_t \*capacity)

Get the slot capacity. Returns the Capacity of the slot, i.e. The number of bytes it can hold.

#### Parameters

- **slot** – The slot number.
- **capacity** – The slot capacity.

#### Returns

Returns *common entity* return values

*aErr* **getSlotSize** (const uint8\_t slot, size\_t \*size)

Get the slot size. The slot size represents the size of the data currently filling the slot in bytes.

#### Parameters

- **slot** – The slot number.
- **size** – The slot size.

#### Returns

Returns *common entity* return values

*aErr* **getSlotLocked** (const uint8\_t slot, uint8\_t \*lock)

Gets the current lock state of the slot Allows for write protection on a slot.

**Parameters**

- **slot** – The slot number
- **lock** – Variable to be filled with the locked state.

**Returns**

Returns *common entity* return values

*aErr* **setSlotLocked** (const uint8\_t slot, const uint8\_t lock)

Sets the locked state of the slot Allows for write protection on a slot.

**Parameters**

- **slot** – The slot number
- **lock** – state to be set.

**Returns**

Returns *common entity* return values

### 3.3.21 System Class

See the *System Entity* for generic information.

class **SystemClass** : public Acroname::BrainStem::EntityClass

*SystemClass*: The System class provides access to the core settings, configuration and system information of the BrainStem module. The class provides access to the model type, serial number and other static information as well as the ability to set boot reflexes, toggle the user LED, as well as affect module and router addresses etc.

**Public Functions**

**SystemClass** (void)

Constructor.

virtual **~SystemClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the System Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the System entity to be addressed.

*aErr* **getModule** (uint8\_t \*address)

Get the current address the module uses on the BrainStem network.

**Parameters**

**address** – The address the module is using on the BrainStem network.

**Returns**

Returns *common entity* return values



*aErr* **getModuleBaseAddress** (uint8\_t \*address)

Get the base address of the module. Software offsets and hardware offsets are added to this base address to produce the effective module address.

**Parameters**

**address** – The address the module is using on the BrainStem network.

**Returns**

Returns *common entity* return values

*aErr* **setRouter** (const uint8\_t address)

Set the router address the module uses to communicate with the host and heartbeat to in order to establish the BrainStem network. This setting must be saved and the board reset before the setting becomes active. Warning: changing the router address may cause the module to “drop off” the BrainStem network if the new router address is not in use by a BrainStem module. Please review the BrainStem network fundamentals before modifying the router address.

**Parameters**

**address** – The router address to be used.

**Returns**

Returns *common entity* return values

*aErr* **getRouter** (uint8\_t \*address)

Get the router address the module uses to communicate with the host and heartbeat to in order to establish the BrainStem network.

**Parameters**

**address** – The address.

**Returns**

Returns *common entity* return values

*aErr* **setHBInterval** (const uint8\_t interval)

Set the delay between heartbeat packets which are sent from the module. For link modules, these these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments Valid values are 1-255; default is 10 (256 milliseconds).

**Parameters**

**interval** – The desired heartbeat delay.

**Returns**

Returns *common entity* return values

*aErr* **getHBInterval** (uint8\_t \*interval)

Get the delay between heartbeat packets which are sent from the module. For link modules, these these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments.

**Parameters**

**interval** – The current heartbeat delay.

**Returns**

Returns *common entity* return values

*aErr* **setLED** (const uint8\_t ledOn)

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

**Parameters**

**ledOn** – true: turn the LED on, false: turn LED off.

**Returns**

Returns *common entity* return values

*aErr* **getLED** (uint8\_t \*ledOn)

Get the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

**Parameters**

**ledOn** – true: LED on, false: LED off.

**Returns**

Returns *common entity* return values

*aErr* **setLEDMaxBrightness** (const uint8\_t brightness)

Sets the scaling factor for the brightness of all LEDs on the system. The brightness is set to the ratio of this value compared to 255 (maximum). The colors of each LED may be inconsistent at low brightness levels. Note that if the brightness is set to zero and the settings are saved, then the LEDs will no longer indicate whether the system is powered on. When troubleshooting, the user configuration may need to be manually reset in order to view the LEDs again.

**Parameters**

**brightness** – Brightness value relative to 255

**Returns**

Returns *common entity* return values

*aErr* **getLEDMaxBrightness** (uint8\_t \*brightness)

Gets the scaling factor for the brightness of all LEDs on the system. The brightness is set to the ratio of this value compared to 255 (maximum).

**Parameters**

**brightness** – Brightness value relative to 255

**Returns**

Returns *common entity* return values

*aErr* **setBootSlot** (const uint8\_t slot)

Set a store slot to be mapped when the module boots. The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

**Parameters**

**slot** – The slot number in aSTORE\_INTERNAL to be marked as a boot slot.

**Returns**

Returns *common entity* return values

*aErr* **getBootSlot** (uint8\_t \*slot)

Get the store slot which is mapped when the module boots.

**Parameters**

**slot** – The slot number in aSTORE\_INTERNAL that is mapped after the module boots.

**Returns**

Returns *common entity* return values

**aErr getVersion** (uint32\_t \*build)

Get the modules firmware version number. The version number is packed into the return value. Utility functions in the aVersion module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

**Parameters**

**build** – The build version date code.

**Returns**

Returns *common entity* return values

**aErr getBuild** (uint32\_t \*build)

Get the modules firmware build number The build number is a unique hash assigned to a specific firmware.

**Parameters**

**build** – Variable to be filled with build.

**Returns**

Returns *common entity* return values

**aErr getModel** (uint8\_t \*model)

Get the module's model enumeration. A subset of the possible model enumerations is defined in BrainStem.h under "BrainStem

model codes". Other codes are be used by Acroname for proprietary module types.

**Parameters**

**model** – The module's model enumeration.

**Returns**

Returns *common entity* return values

**aErr getHardwareVersion** (uint32\_t \*hardwareVersion)

Get the module's hardware revision information. The content of the hardware version is specific to each Acroname product and used to indicate behavioral differences between product revisions. The codes are not well defined and may change at any time.

**Parameters**

**hardwareVersion** – The module's hardware version information.

**Returns**

Returns *common entity* return values

**aErr getSerialNumber** (uint32\_t \*serialNumber)

Get the module's serial number. The serial number is a unique 32 bit integer which is usually communicated in hexadecimal format.

**Parameters**

**serialNumber** – The module's serial number.

**Returns**

Returns *common entity* return values

**aErr save** (void)

Save the system operating parameters to the persistent module flash memory. Operating parameters stored in the system flash will be loaded after the module reboots. Operating parameters include: heartbeat interval, module address, module router address.

**Returns**

Returns *common entity* return values

***aErr* reset** (void)

Reset the system. A return value of `aErrTimeout` indicates a successful reset, as the system resets immediately, which tears down the USB-link immediately, thus preventing an affirmative response.

**Returns**

Returns *common entity* return values

***aErr* logEvents** (void)

Saves system log events to a slot defined by the module (usually ram slot 0).

**Returns**

Returns *common entity* return values

***aErr* getUptime** (uint32\_t \*uptimeCounter)

Get the module's accumulated uptime in minutes

**Parameters**

**uptimeCounter** – The module's accumulated uptime in minutes.

**Returns**

Returns *common entity* return values

***aErr* getTemperature** (int32\_t \*temperature)

Get the module's current temperature in micro-C

**Parameters**

**temperature** – The module's system temperature in micro-C

**Returns**

Returns *common entity* return values

***aErr* getMinimumTemperature** (int32\_t \*minTemperature)

Get the module's minimum temperature ever recorded in micro-C (uC). This value will persists through a power cycle.

**Parameters**

**minTemperature** – The module's minimum system temperature in micro-C

**Returns**

Returns *common entity* return values

***aErr* getMaximumTemperature** (int32\_t \*maxTemperature)

Get the module's maximum temperature ever recorded in micro-C (uC). This value will persists through a power cycle.

**Parameters**

**maxTemperature** – The module's maximum system temperature in micro-C

**Returns**

Returns *common entity* return values

***aErr* getInputVoltage** (uint32\_t \*inputVoltage)

Get the module's input voltage.

**Parameters**

**inputVoltage** – The module's input voltage reported in microvolts.

**Returns**

Returns *common entity* return values

***aErr* getInputCurrent** (uint32\_t \*inputCurrent)

Get the module's input current.

**Parameters**

**inputCurrent** – The module's input current reported in microamps.

**Returns**

Returns *common entity* return values

***aErr* getModuleHardwareOffset** (uint8\_t \*offset)

Get the module hardware address offset. This is added to the base address to allow the module address to be configured in hardware. Not all modules support the hardware module address offset. Refer to the module datasheet.

**Parameters**

**offset** – The module address offset.

**Returns**

Returns *common entity* return values

***aErr* setModuleSoftwareOffset** (const uint8\_t address)

Set the software address offset. This software offset is added to the module base address, and potentially a module hardware address to produce the final module address. You must save the system settings and restart for this to take effect. Please review the BrainStem network fundamentals before modifying the module address.

**Parameters**

**address** – The address for the module. Value must be even from 0-254.

**Returns**

Returns *common entity* return values

***aErr* getModuleSoftwareOffset** (uint8\_t \*address)

Get the software address offset. This software offset is added to the module base address, and potentially a module hardware address to produce the final module address. You must save the system settings and restart for this to take effect. Please review the BrainStem network fundamentals before modifying the module address.

**Parameters**

**address** – The address for the module. Value must be even from 0-254.

**Returns**

Returns *common entity* return values

***aErr* getRouterAddressSetting** (uint8\_t \*address)

Get the router address system setting. This setting may not be the same as the current router address if the router setting was set and saved but no reset has occurred. Please review the BrainStem network fundamentals before modifying the module address.

**Parameters**

**address** – The address for the module. Value must be even from 0-254.

**Returns**

Returns *common entity* return values

***aErr* routeToMe** (const uint8\_t enable)

Enables/Disables the route to me function. This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

**Parameters**

**enable** – Enable or disable of the route to me function 1 = enable.

**Returns**

Returns *common entity* return values

*aErr* **getPowerLimit** (uint32\_t \*power)

Reports the amount of power the system has access to and thus how much power can be budgeted to sinking devices.

**Parameters**

**power** – The available power in milli-Watts (mW, 1 t)

**Returns**

Returns *common entity* return values

*aErr* **getPowerLimitMax** (uint32\_t \*power)

Gets the user defined maximum power limit for the system. Provides mechanism for defining an unregulated power supplies capability.

**Parameters**

**power** – Variable to be filled with the power limit in milli-Watts (mW)

**Returns**

Returns *common entity* return values

*aErr* **setPowerLimitMax** (const uint32\_t power)

Sets a user defined maximum power limit for the system. Provides mechanism for defining an unregulated power supplies capability.

**Parameters**

**power** – Limit in milli-Watts (mW) to be set.

**Returns**

Returns *common entity* return values

*aErr* **getPowerLimitState** (uint32\_t \*state)

Gets a bit mapped representation of the factors contributing to the power limit. Active limit can be found through PowerDeliverClass::getPowerLimit().

**Parameters**

**state** – Variable to be filled with the state.

**Returns**

Returns *common entity* return values

*aErr* **getUnregulatedVoltage** (int32\_t \*voltage)

Gets the voltage present at the unregulated port.

**Parameters**

**voltage** – Variable to be filled with the voltage in micro-Volts (uV).

**Returns**

Returns *common entity* return values

*aErr* **getUnregulatedCurrent** (int32\_t \*current)

Gets the current passing through the unregulated port.

**Parameters**

**current** – Variable to be filled with the current in micro-Amps (uA).

**Returns**

Returns *common entity* return values

*aErr* **getInputPowerSource** (uint8\_t \*source)

Provides the source of the current power source in use.

**Parameters**

**source** – Variable to be filled with enumerated representation of the source.

**Returns**

Returns *common entity* return values

*aErr* **getInputPowerBehavior** (uint8\_t \*behavior)

Gets the systems input power behavior. This behavior refers to where the device sources its power from and what happens if that power source goes away.

**Parameters**

**behavior** – Variable to be filled with an enumerated value representing behavior.

**Returns**

Returns *common entity* return values

*aErr* **setInputPowerBehavior** (const uint8\_t behavior)

Sets the systems input power behavior. This behavior refers to where the device sources its power from and what happens if that power source goes away.

**Parameters**

**behavior** – An enumerated representation of behavior to be set.

**Returns**

Returns *common entity* return values

*aErr* **getInputPowerBehaviorConfig** (uint32\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Gets the input power behavior configuration Certain behaviors use a list of ports to determine priority when budgeting power.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setInputPowerBehaviorConfig** (const uint32\_t \*buffer, const size\_t bufferLength)

Sets the input power behavior configuration Certain behaviors use a list of ports to determine priority when budgeting power.

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

*aErr* **getName** (uint8\_t \*buffer, const size\_t bufferSize, size\_t \*unloadedLength)

Gets a user defined name of the device. Helpful for identifying ports/devices in a static environment.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setName** (const uint8\_t \*buffer, const size\_t bufferSize)

Sets a user defined name for the device. Helpful for identification when multiple devices of the same type are present in a system.

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

*aErr* **resetDeviceToFactoryDefaults** (void)

Resets the device to it factory default configuration.

**Returns**

Returns *common entity* return values

*aErr* **getLinkInterface** (uint8\_t \*linkInterface)

Gets the link interface configuration. This refers to which interface is being used for control by the device.

**Parameters**

**linkInterface** – Variable to be filled with an enumerated value representing interface.

- 0 = Auto= systemLinkAuto
- 1 = Control Port = systemLinkUSBControl
- 2 = Hub Upstream Port = systemLinkUSBHub

**Returns**

Returns *common entity* return values

*aErr* **setLinkInterface** (const uint8\_t linkInterface)

Sets the link interface configuration. This refers to which interface is being used for control by the device.

**Parameters**

**linkInterface** – An enumerated representation of interface to be set.

- 0 = Auto= systemLinkAuto
- 1 = Control Port = systemLinkUSBControl
- 2 = Hub Upstream Port = systemLinkUSBHub

**Returns**

Returns *common entity* return values



*aErr* **getErrors** (uint32\_t \*errors)

Gets any system level errors. Calling this function will clear the current errors. If the error persists it will be set again.

**Parameters**

**errors** – Bit mapped field representing the devices errors

**Returns**

Returns *common entity* return values

*aErr* **getProtocolFeatures** (uint32\_t \*features)

Gets the firmware protocol features

**Parameters**

**features** – Value representing the firmware protocol features

**Returns**

Returns *common entity* return values

### 3.3.22 Temperature Class

See the *Temperature Entity* for generic information.

class **TemperatureClass** : public Acroname::BrainStem::EntityClass

*TemperatureClass*: This entity is only available on certain modules, and provides a temperature reading in microcelsius.

**Public Functions**

**TemperatureClass** (void)

Constructor.

virtual **~TemperatureClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Temperature Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Temperature entity to be addressed.

*aErr* **getValue** (int32\_t \*temp)

Get the modules temperature in micro-C

**Parameters**

**temp** – The temperature in micro-Celsius (1 == 1e-6C).

**Returns**

Returns *common entity* return values

*aErr* **getValueMin** (int32\_t \*minTemp)

Get the module's minimum temperature in micro-C since the last power cycle.

**Parameters**

**minTemp** – The module's minimum temperature in micro-C

**Returns**

Returns *common entity* return values

*aErr* **getValueMax** (int32\_t \*maxTemp)

Get the module's maximum temperature in micro-C since the last power cycle.

**Parameters**

**maxTemp** – The module's maximum temperature in micro-C

**Returns**

Returns *common entity* return values

### 3.3.23 Timer Class

See the *Timer Entity* for generic information.

class **TimerClass** : public Acroname::BrainStem::EntityClass

*TimerClass*: The Timer Class provides access to a simple scheduler. The timer can set to fire only once, or to repeat at a certain interval. Additionally, a timer entity can execute custom Reflex routines upon firing.

**Public Functions**

**TimerClass** (void)

Constructor.

virtual **~TimerClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the Timer Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the Timer entity to be addressed.

*aErr* **getExpiration** (uint32\_t \*usecDuration)

Get the currently set expiration time in microseconds. This is not a “live” timer. That is, it shows the expiration time originally set with **setExpiration**; it does not “tick down” to show the time remaining before expiration.

**Parameters**

**usecDuration** – The timer expiration duration in microseconds.

**Returns**

Returns *common entity* return values

*aErr* **setExpiration** (const uint32\_t usecDuration)

Set the expiration time for the timer entity. When the timer expires, it will fire the associated **timer[index]()** reflex.

**Parameters**

**usecDuration** – The duration before timer expiration in microseconds.

**Returns**

Returns *common entity* return values

*aErr* **getMode** (uint8\_t \*mode)

Get the mode of the timer which is either single or repeat mode.

**Parameters**

**mode** – The mode of the timer. aTIMER\_MODE\_REPEAT or aTIMER\_MODE\_SINGLE.

**Returns**

Returns *common entity* return values

*aErr* **setMode** (const uint8\_t mode)

Set the mode of the timer which is either single or repeat mode.

**Parameters**

**mode** – The mode of the timer. aTIMER\_MODE\_REPEAT or aTIMER\_MODE\_SINGLE.

**Returns**

Returns *common entity* return values

### 3.3.24 UART Class

See the *UART Entity* for generic information.

class **UARTClass** : public Acroname::BrainStem::EntityClass

*UARTClass*: A UART is a “Universal Asynchronous Receiver/Transmitter. Many times referred to as a COM (communication), Serial, or TTY (teletypewriter) port. The UART Class allows the enabling and disabling of the UART data lines.

**Public Functions**

**UARTClass** (void)

Constructor.

virtual **~UARTClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the UART Class.

**Parameters**

- **pModule** – The module to which this entity belongs.
- **index** – The index of the UART entity to be addressed.

*aErr* **setEnabled** (const uint8\_t enabled)

Enable the UART channel.

**Parameters**

**enabled** – true: enabled, false: disabled.

**Returns**

Returns *common entity* return values

*aErr* **getEnable** (uint8\_t \*enabled)

Get the enabled state of the uart.

**Parameters**

**enabled** – true: enabled, false: disabled.

**Returns**

Returns *common entity* return values

*aErr* **setBaudRate** (const uint32\_t rate)

Set the UART baud rate. If zero, automatic baud rate selection is used.

**Parameters**

**rate** – baud rate.

**Returns**

Returns *common entity* return values

*aErr* **getBaudRate** (uint32\_t \*rate)

Get the UART baud rate. If zero, automatic baud rate selection is used.

**Parameters**

**rate** – Pointer variable to be filled with baud rate.

**Returns**

Returns *common entity* return values

*aErr* **setProtocol** (const uint8\_t protocol)

Set the UART protocol.

**Parameters**

**protocol** – An enumeration of serial protocols.

**Returns**

Returns *common entity* return values

*aErr* **getProtocol** (uint8\_t \*protocol)

Get the UART protocol.

**Parameters**

**protocol** – Pointer to where result is placed.

**Returns**

Returns *common entity* return values

*aErr* **setLinkChannel** (const uint8\_t channel)

Set the index of another UART Entity that should be linked to this UART.

If set to the index of this entity, the channel will not be linked. If set to the index of another UART entity, data will be sent between the two UART entities with no additional processing.

**Parameters**

**channel** – Index of the UART Entity to link

**Returns**

Returns *common entity* return values

*aErr* **getLinkChannel** (uint8\_t \*channel)

Gets the index of the UART Entity that this entity is linked to.

**Parameters**

**channel** – Pointer to where result is placed.

**Returns**

Returns *common entity* return values

*aErr* **setStopBits** (const uint8\_t stopBits)

Set the UART stop bit configuration

**Parameters**

**stopBits** – Stop Bits of UART Channel. Allowed options:

- uartStopBits\_1\_Value
- uartStopBits\_1p5\_Value
- uartStopBits\_2\_Value

**Returns**

Returns *common entity* return values

*aErr* **getStopBits** (uint8\_t \*stopBits)

Set the UART stop bit configuration

**Parameters**

**stopBits** – Pointer to where result is placed. Possible values:

- uartStopBits\_1\_Value
- uartStopBits\_1p5\_Value
- uartStopBits\_2\_Value

**Returns**

Returns *common entity* return values

*aErr* **setParity** (const uint8\_t parity)

Set the UART parity.

**Parameters**

**parity** – Parity of UART Channel. Allowed options:

- uartParity\_None\_Value
- uartParity\_Odd\_Value
- uartParity\_Even\_Value
- uartParity\_Mark\_Value
- uartParity\_Space\_Value

**Returns**

Returns *common entity* return values

*aErr* **getParity** (uint8\_t \*parity)

Get the UART parity.

**Parameters**

**parity** – Pointer variable to be filled with value. Possible values:

- uartParity\_None\_Value
- uartParity\_Odd\_Value
- uartParity\_Even\_Value
- uartParity\_Mark\_Value

- uartParity\_Space\_Value

**Returns**

Returns *common entity* return values

*aErr* **setDataBits** (const uint8\_t dataBits)

Set the number of bits per character

**Parameters**

**dataBits** – Data Bits of UART Channel.

**Returns**

Returns *common entity* return values

*aErr* **getDataBits** (uint8\_t \*dataBits)

Get the number of bits per character

**Parameters**

**dataBits** – Pointer to where result is placed.

**Returns**

Returns *common entity* return values

*aErr* **setFlowControl** (const uint8\_t flowControl)

Set the UART flow control configuration

**Parameters**

**flowControl** – Flow Control of UART Channel as a bitmask. Allowed bits:

- uartFlowControl\_RTS\_CTS\_Bit
- uartFlowControl\_DSR\_DTR\_Bit
- uartFlowControl\_XON\_XOFF\_Bit

**Returns**

Returns *common entity* return values

*aErr* **getFlowControl** (uint8\_t \*flowControl)

Set the UART flow control configuration

**Parameters**

**flowControl** – Pointer to bitmask where result is placed. Possible bits:

- uartFlowControl\_RTS\_CTS\_Bit
- uartFlowControl\_DSR\_DTR\_Bit
- uartFlowControl\_XON\_XOFF\_Bit

**Returns**

Returns *common entity* return values

*aErr* **getCapableProtocols** (uint32\_t \*protocols)

Returns a bitmask containing a list of protocols that this UART entity is allowed to select. This does not guarantee that selecting a protocol with “setProtocol” will have an available resource.

**Parameters**

**protocols** – Bitmask containing list of protocols that may be selected. The value of the uartProtocol is mapped to the bit index (e.g. uartProtocol\_Undefined is bit 0, uartProtocol\_ExtronResponder\_Value is bit 1, etc.)

**Returns**

Returns *common entity* return values

*aErr* **getAvailableProtocols** (uint32\_t \*protocols)

Returns a bitmask containing a list of protocols that this UART entity is capable of selecting, and has an available protocol resource to assign.

#### Parameters

**protocols** – Bitmask containing list of protocols that are available to select. The value of the uartProtocol is mapped to the bit index (e.g. uartProtocol\_Undefined is bit 0, uartProtocol\_ExtronResponder\_Value is bit 1, etc.)

#### Returns

Returns *common entity* return values

### 3.3.25 USB Class

See the *USB Entity* for generic information.

class **USBClass** : public Acroname::BrainStem::EntityClass

*USBClass*: The USB class provides methods to interact with a USB hub and USB switches. Different USB hub products have varying support; check the datasheet to understand the capabilities of each product.

#### Public Functions

**USBClass** (void)

Constructor.

virtual **~USBClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the USB Class.

#### Parameters

- **pModule** – The module to which this entity belongs.
- **index** – The index of the USB entity to be addressed.

*aErr* **setPortEnable** (const uint8\_t channel)

Enable both power and data lines for a port.

#### Parameters

**channel** – The USB sub channel.

#### Returns

Returns *common entity* return values

*aErr* **setPortDisable** (const uint8\_t channel)

Disable both power and data lines for a port.

#### Parameters

**channel** – The USB sub channel.

#### Returns

Returns *common entity* return values

*aErr* **setDataEnable** (const uint8\_t channel)

Enable the only the data lines for a port without changing the state of the power line.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setDataDisable** (const uint8\_t channel)

Disable only the data lines for a port without changing the state of the power line.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setHiSpeedDataEnable** (const uint8\_t channel)

Enable the only the data lines for a port without changing the state of the power line, Hi-Speed (2.0) only.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setHiSpeedDataDisable** (const uint8\_t channel)

Disable only the data lines for a port without changing the state of the power line, Hi-Speed (2.0) only.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setSuperSpeedDataEnable** (const uint8\_t channel)

Enable the only the data lines for a port without changing the state of the power line, SuperSpeed (3.0) only.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setSuperSpeedDataDisable** (const uint8\_t channel)

Disable only the data lines for a port without changing the state of the power line, SuperSpeed (3.0) only.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setPowerEnable** (const uint8\_t channel)

Enable only the power line for a port without changing the state of the data lines.



**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setPowerDisable** (const uint8\_t channel)

Disable only the power line for a port without changing the state of the data lines.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **getPortCurrent** (const uint8\_t channel, int32\_t \*microamps)

Get the current through the power line for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microamps** – The USB channel current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getPortVoltage** (const uint8\_t channel, int32\_t \*microvolts)

Get the voltage on the power line for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microvolts** – The USB channel voltage in microvolts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getHubMode** (uint32\_t \*mode)

Get a bit mapped representation of the hubs mode; see the product datasheet for mode mapping and meaning.

**Parameters**

**mode** – The USB hub mode.

**Returns**

Returns *common entity* return values

*aErr* **setHubMode** (const uint32\_t mode)

Set a bit mapped hub state; see the product datasheet for state mapping and meaning.

**Parameters**

**mode** – The USB hub mode.

**Returns**

Returns *common entity* return values

*aErr* **clearPortErrorStatus** (const uint8\_t channel)

Clear the error status for the given port.

**Parameters**

**channel** – The port to clear error status for.

**Returns**

Returns *common entity* return values

*aErr* **getUpstreamMode** (uint8\_t \*mode)

Get the upstream switch mode for the USB upstream ports. Returns auto, port 0 or port 1.

**Parameters**

**mode** – The Upstream port mode.

**Returns**

Returns *common entity* return values

*aErr* **setUpstreamMode** (const uint8\_t mode)

Set the upstream switch mode for the USB upstream ports. Values are usbUpstreamModeAuto, usbUpstreamModePort0, usbUpstreamModePort1, and usbUpstreamModeNone.

**Parameters**

**mode** – The Upstream port mode.

**Returns**

Returns *common entity* return values

*aErr* **getUpstreamState** (uint8\_t \*state)

Get the upstream switch state for the USB upstream ports. Returns 2 if no ports plugged in, 0 if the mode is set correctly and a cable is plugged into port 0, and 1 if the mode is set correctly and a cable is plugged into port 1.

**Parameters**

**state** – The Upstream port state.

**Returns**

Returns *common entity* return values

*aErr* **setEnumerationDelay** (const uint32\_t ms\_delay)

Set the inter-port enumeration delay in milliseconds.

**Parameters**

**ms\_delay** – Millisecond delay in 100mS increments (100, 200, 300 etc.)

**Returns**

Returns *common entity* return values

*aErr* **getEnumerationDelay** (uint32\_t \*ms\_delay)

Get the inter-port enumeration delay in milliseconds.

**Parameters**

**ms\_delay** – Millisecond delay in 100mS increments (100, 200, 300 etc.)

**Returns**

Returns *common entity* return values

*aErr* **setPortCurrentLimit** (const uint8\_t channel, const uint32\_t microamps)

Set the current limit for the port. If the set limit is not achievable, devices will round down to the nearest available current limit setting. This setting can be saved with a stem.system.save() call.

**Parameters**

- **channel** – USB downstream channel to limit.
- **microamps** – The current limit setting.

**Returns**

Returns *common entity* return values

*aErr* **getPortCurrentLimit** (const uint8\_t channel, uint32\_t \*microamps)

Get the current limit for the port.

#### Parameters

- **channel** – USB downstream channel to limit.
- **microamps** – The current limit setting.

#### Returns

Returns *common entity* return values

*aErr* **setPortMode** (const uint8\_t channel, const uint32\_t mode)

Set the mode for the Port. The mode is a bitmapped representation of the capabilities of the usb port. These capabilities change for each of the BrainStem devices which implement the usb entity. See your device reference page for a complete list of capabilities. Some devices use a common bit mapping for port mode, as sub-definitions of usbPortMode.

#### Parameters

- **channel** – USB downstream channel to set the mode on.
- **mode** – The port mode setting as packed bit field.

#### Returns

Returns *common entity* return values

*aErr* **getPortMode** (const uint8\_t channel, uint32\_t \*mode)

Get the current mode for the Port. The mode is a bitmapped representation of the capabilities of the usb port. These capabilities change for each of the BrainStem devices which implement the usb entity. See your device reference page for a complete list of capabilities. Some devices use a common bit mapping for port mode, as sub-definitions of usbPortMode.

#### Parameters

- **channel** – USB downstream channel.
- **mode** – The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

#### Returns

Returns *common entity* return values

*aErr* **getPortState** (const uint8\_t channel, uint32\_t \*state)

Get the current State for the Port.

#### Parameters

- **channel** – USB downstream channel.
- **state** – The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

#### Returns

Returns *common entity* return values

*aErr* **getPortError** (const uint8\_t channel, uint32\_t \*error)

Get the current error for the Port.

#### Parameters

- **channel** – USB downstream channel.

- **error** – The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

**Returns**

Returns *common entity* return values

*aErr* **setUpstreamBoostMode** (const uint8\_t setting)

Set the upstream boost mode. Boost mode increases the drive strength of the USB data signals (power signals are not changed). Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through “pogo” pins. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost. This setting is not applied until a `stem.system.save()` call and power cycle of the hub. Setting is then persistent until changed or the hub is reset. After reset, default value of 0% boost is restored.

**Parameters**

**setting** – Upstream boost setting 0, 1, 2, or 3.

**Returns**

Returns *common entity* return values

*aErr* **setDownstreamBoostMode** (const uint8\_t setting)

Set the downstream boost mode. Boost mode increases the drive strength of the USB data signals (power signals are not changed). Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through “pogo” pins. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost. This setting is not applied until a `stem.system.save()` call and power cycle of the hub. Setting is then persistent until changed or the hub is reset. After reset, default value of 0% boost is restored.

**Parameters**

**setting** – Downstream boost setting 0, 1, 2, or 3.

**Returns**

Returns *common entity* return values

*aErr* **getUpstreamBoostMode** (uint8\_t \*setting)

Get the upstream boost mode. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost.

**Parameters**

**setting** – The current Upstream boost setting 0, 1, 2, or 3.

**Returns**

Returns *common entity* return values

*aErr* **getDownstreamBoostMode** (uint8\_t \*setting)

Get the downstream boost mode. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost.

**Parameters**

**setting** – The current Downstream boost setting 0, 1, 2, or 3.

**Returns**

Returns *common entity* return values

*aErr* **getDownstreamDataSpeed** (const uint8\_t channel, uint8\_t \*speed)

Get the current data transfer speed for the downstream port. The data speed can be Hi-Speed (2.0) or SuperSpeed (3.0) depending on what the downstream device attached is using

**Parameters**

- **channel** – USB downstream channel to check.

- **speed** – Filled with the current port data speed
  - N/A: usbDownstreamDataSpeed\_na = 0
  - Hi Speed: usbDownstreamDataSpeed\_hs = 1
  - SuperSpeed: usbDownstreamDataSpeed\_ss = 2

**Returns**

Returns *common entity* return values

*aErr* **setConnectMode** (const uint8\_t channel, const uint8\_t mode)

Sets the connect mode of the switch.

**Parameters**

- **channel** – The USB sub channel.
- **mode** – The connect mode
  - usbManualConnect = 0
  - usbAutoConnect = 1

**Returns**

Returns *common entity* return values

*aErr* **getConnectMode** (const uint8\_t channel, uint8\_t \*mode)

Gets the connect mode of the switch.

**Parameters**

- **channel** – The USB sub channel.
- **mode** – The current connect mode

**Returns**

Returns *common entity* return values

*aErr* **setCC1Enable** (const uint8\_t channel, const uint8\_t enable)

Set Enable/Disable on the CC1 line.

**Parameters**

- **channel** – USB channel.
- **enable** – State to be set
  - Disabled: 0
  - Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **getCC1Enable** (const uint8\_t channel, uint8\_t \*pEnable)

Get Enable/Disable on the CC1 line.

**Parameters**

- **channel** – USB channel.
- **pEnable** – State to be filled
  - Disabled: 0
  - Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **setCC2Enable** (const uint8\_t channel, const uint8\_t enable)

Set Enable/Disable on the CC2 line.

**Parameters**

- **channel** – USB channel.
- **enable** – State to be filled
  - Disabled: 0
  - Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **getCC2Enable** (const uint8\_t channel, uint8\_t \*pEnable)

Get Enable/Disable on the CC2 line.

**Parameters**

- **channel** – USB channel.
- **pEnable** – State to be filled
  - Disabled: 0
  - Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **getCC1Current** (const uint8\_t channel, int32\_t \*microamps)

Get the current through the CC1 for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microamps** – The USB channel current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getCC2Current** (const uint8\_t channel, int32\_t \*microamps)

Get the current through the CC2 for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microamps** – The USB channel current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getCC1Voltage** (const uint8\_t channel, int32\_t \*microvolts)

Get the voltage of CC1 for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getCC2Voltage** (const uint8\_t channel, int32\_t \*microvolts)

Get the voltage of CC2 for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **setSBUEnable** (const uint8\_t channel, const uint8\_t enable)

Enable/Disable only the SBU1/2 based on the configuration of the usbPortMode settings.

**Parameters**

- **channel** – The USB sub channel.
- **enable** – The state to be set
  - Disabled: 0
  - Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **getSBUEnable** (const uint8\_t channel, uint8\_t \*pEnable)

Get the Enable/Disable status of the SBU

**Parameters**

- **channel** – The USB sub channel.
- **pEnable** – The enable/disable status of the SBU

**Returns**

Returns *common entity* return values

*aErr* **setCableFlip** (const uint8\_t channel, const uint8\_t enable)

Set Cable flip. This will flip SBU, CC and SS data lines.

**Parameters**

- **channel** – The USB sub channel.
- **enable** – The state to be set The state to be set
  - Disabled: 0
  - Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **getCableFlip** (const uint8\_t channel, uint8\_t \*pEnable)

Get Cable flip setting.

**Parameters**

- **channel** – The USB sub channel.
- **pEnable** – The enable/disable status of cable flip.

**Returns**

Returns *common entity* return values

*aErr* **setAltModeConfig** (const uint8\_t channel, const uint32\_t configuration)

Set USB Alt Mode Configuration.

**Parameters**

- **channel** – The USB sub channel
- **configuration** – The USB configuration to be set for the given channel.

**Returns**

Returns *common entity* return values

*aErr* **getAltModeConfig** (const uint8\_t channel, uint32\_t \*configuration)

Get USB Alt Mode Configuration.

**Parameters**

- **channel** – The USB sub channel
- **configuration** – The USB configuration for the given channel.

**Returns**

Returns *common entity* return values

*aErr* **getSBU1Voltage** (const uint8\_t channel, int32\_t \*microvolts)

Get the voltage of SBU1 for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getSBU2Voltage** (const uint8\_t channel, int32\_t \*microvolts)

Get the voltage of SBU2 for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

### 3.3.26 USBSystem Class

See the *USBSystem Entity* for generic information.

class **USBSystemClass** : public Acroname::BrainStem::EntityClass

*USBSystemClass*: The USBSystem class provides high level control of the lower level Port Class.

Subclassed by *aMTMIOSerial::HubClass*, *aUSBExt3c::HubClass*, *aUSBHub2x4::HubClass*, *aUSBHub3c::HubClass*, *aUSBHub3p::HubClass*



## Public Functions

**USBSystemClass** (void)

Constructor.

virtual **~USBSystemClass** (void)

Destructor.

void **init** (*Module* \*pModule, const uint8\_t index)

Initialize the USBSystem Class.

### Parameters

- **pModule** – The module to which this entity belongs.
- **index** – The index of the USBSystem entity to be addressed.

*aErr* **getUpstream** (uint8\_t \*port)

Gets the upstream port.

### Parameters

**port** – The current upstream port.

### Returns

Returns *common entity* return values

*aErr* **setUpstream** (const uint8\_t port)

Sets the upstream port.

### Parameters

**port** – The upstream port to set.

### Returns

Returns *common entity* return values

*aErr* **getEnumerationDelay** (uint32\_t \*msDelay)

Gets the inter-port enumeration delay in milliseconds. Delay is applied upon hub enumeration.

### Parameters

**msDelay** – the current inter-port delay in milliseconds.

### Returns

Returns *common entity* return values

*aErr* **setEnumerationDelay** (const uint32\_t msDelay)

Sets the inter-port enumeration delay in milliseconds. Delay is applied upon hub enumeration.

### Parameters

**msDelay** – The delay in milliseconds to be applied between port enables

### Returns

Returns *common entity* return values

*aErr* **getDataRoleList** (uint32\_t \*roleList)

Gets the data role of all ports with a single call Equivalent to calling *PortClass::getDataRole()* on each individual port.

### Parameters

**roleList** – A bit packed representation of the data role for all ports.

### Returns

Returns *common entity* return values

*aErr* **getEnabledList** (uint32\_t \*enabledList)

Gets the current enabled status of all ports with a single call. Equivalent to calling *PortClass::setEnabled()* on each port.

**Parameters**

**enabledList** – Bit packed representation of the enabled status for all ports.

**Returns**

Returns *common entity* return values

*aErr* **setEnabledList** (const uint32\_t enabledList)

Sets the enabled status of all ports with a single call. Equivalent to calling *PortClass::setEnabled()* on each port.

**Parameters**

**enabledList** – Bit packed representation of the enabled status for all ports to be applied.

**Returns**

Returns *common entity* return values

*aErr* **getModeList** (uint32\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Gets the current mode of all ports with a single call. Equivalent to calling *PortClass::getMode()* on each port.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setModeList** (const uint32\_t \*buffer, const size\_t bufferLength)

Sets the mode of all ports with a single call. Equivalent to calling *PortClass::setMode()* on each port

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

*aErr* **getStateList** (uint32\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Gets the state for all ports with a single call. Equivalent to calling *PortClass::getState()* on each port.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **getPowerBehavior** (uint8\_t \*behavior)

Gets the behavior of the power manager. The power manager is responsible for budgeting the power of the system, i.e. What happens when requested power greater than available power.

#### Parameters

**behavior** – Variable to be filled with an enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

#### Returns

Returns *common entity* return values

*aErr* **setPowerBehavior** (const uint8\_t behavior)

Sets the behavior of how available power is managed, i.e. What happens when requested power is greater than available power.

#### Parameters

**behavior** – An enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

#### Returns

Returns *common entity* return values

*aErr* **getPowerBehaviorConfig** (uint32\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Gets the current power behavior configuration. Certain power behaviors use a list of ports to determine priority when budgeting power.

#### Parameters

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

#### Returns

Returns *common entity* return values

*aErr* **setPowerBehaviorConfig** (const uint32\_t \*buffer, const size\_t bufferLength)

Sets the current power behavior configuration. Certain power behaviors use a list of ports to determine priority when budgeting power.

#### Parameters

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

#### Returns

Returns *common entity* return values

*aErr* **getDataRoleBehavior** (uint8\_t \*behavior)

Gets the behavior of how upstream and downstream ports are determined, i.e. How do you manage requests for data role swaps and new upstream connections.

#### Parameters

**behavior** – Variable to be filled with an enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

#### Returns

Returns *common entity* return values

*aErr* **setDataRoleBehavior** (const uint8\_t behavior)

Sets the behavior of how upstream and downstream ports are determined, i.e. How do you manage requests for data role swaps and new upstream connections.

**Parameters**

**behavior** – An enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getDataRoleBehaviorConfig** (uint32\_t \*buffer, const size\_t bufferLength, size\_t \*unloadedLength)

Gets the current data role behavior configuration. Certain data role behaviors use a list of ports to determine priority host priority.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setDataRoleBehaviorConfig** (const uint32\_t \*buffer, const size\_t bufferLength)

Sets the current data role behavior configuration. Certain data role behaviors use a list of ports to determine host priority.

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

*aErr* **getSelectorMode** (uint8\_t \*mode)

Gets the current mode of the selector input. This mode determines what happens and in what order when the external selector input is used.

**Parameters**

**mode** – Variable to be filled with the selector mode

**Returns**

Returns *common entity* return values

*aErr* **setSelectorMode** (const uint8\_t mode)

Sets the current mode of the selector input. This mode determines what happens and in what order when the external selector input is used.

**Parameters**

**mode** – Mode to be set.

**Returns**

Returns *common entity* return values

*aErr* **getUpstreamHS** (uint8\_t \*port)

Gets the USB HighSpeed upstream port.

**Parameters**

**port** – The current upstream port.

**Returns**

Returns *common entity* return values

*aErr* **setUpstreamHS** (const uint8\_t port)

Sets the USB HighSpeed upstream port.

**Parameters**

**port** – The upstream port to set.

**Returns**

Returns *common entity* return values

*aErr* **getUpstreamSS** (uint8\_t \*port)

Gets the USB SuperSpeed upstream port.

**Parameters**

**port** – The current upstream port.

**Returns**

Returns *common entity* return values

*aErr* **setUpstreamSS** (const uint8\_t port)

Sets the USB SuperSpeed upstream port.

**Parameters**

**port** – The upstream port to set.

**Returns**

Returns *common entity* return values

*aErr* **getOverride** (uint32\_t \*overrides)

Gets the current enabled overrides

**Parameters**

**overrides** – Bit mapped representation of the current override configuration.

**Returns**

Returns *common entity* return values

*aErr* **setOverride** (const uint32\_t overrides)

Sets the current enabled overrides

**Parameters**

**overrides** – Overrides to be set in a bit mapped representation.

**Returns**

Returns *common entity* return values

*aErr* **setDataHSMMaxDataRate** (const uint32\_t datarate)

Sets the USB HighSpeed Max datarate

**Parameters**

**datarate** – Maximum datarate for the USB HighSpeed signals.

**Returns**

Returns *common entity* return values

*aErr* **getDataHSMaXDataRate** (uint32\_t \*dataRate)

Gets the USB HighSpeed Max dataRate

**Parameters**

**dataRate** – Current maximum dataRate for the USB HighSpeed signals.

**Returns**

Returns *common entity* return values

*aErr* **setDataSSMaXDataRate** (const uint32\_t dataRate)

Sets the USB SuperSpeed Max dataRate

**Parameters**

**dataRate** – Maximum dataRate for the USB SuperSpeed signals.

**Returns**

Returns *common entity* return values

*aErr* **getDataSSMaXDataRate** (uint32\_t \*dataRate)

Gets the USB SuperSpeed Max dataRate

**Parameters**

**dataRate** – Current maximum dataRate for the USB SuperSpeed signals.

**Returns**

Returns *common entity* return values

### 3.3.27 Link Class

class **Link**

LinkClass: The *Link* class provides an interface to a BrainStem link. The link is used to create interfaces to modules on a BrainStem network. The link represents a connection to the BrainStem network from a host computer. The link is always associated with a transport (e.g.: USB, Ethernet, etc.) and a link module, but there are several ways to make this association.

- a. The link can be fully specified with a transport and module serial number
- b. The link can be created by searching a transport and connecting to the first module found.

Calling connect on a link will start a connection to the module based on The link specification. Calling disconnect will disconnect the link from the the current connection.

#### Public Types

enum **STREAM\_PACKET**

Enumeration of stream packet types.

*Values:*

enumerator **kSTREAM\_PACKET\_UNKNOWN**

enumerator **kSTREAM\_PACKET\_U8**

enumerator **kSTREAM\_PACKET\_U16**

enumerator **kSTREAM\_PACKET\_U32**

enumerator **kSTREAM\_PACKET\_BYTES**

enumerator **kSTREAM\_PACKET\_SUBINDEX\_U8**

enumerator **kSTREAM\_PACKET\_SUBINDEX\_U16**

enumerator **kSTREAM\_PACKET\_SUBINDEX\_U32**

enumerator **kSTREAM\_PACKET\_LAST**

enum **STREAM\_KEY**

Enumeration for element types within a stream key.

*Values:*

enumerator **STREAM\_KEY\_MODULE\_ADDRESS**

enumerator **STREAM\_KEY\_CMD**

enumerator **STREAM\_KEY\_OPTION**

enumerator **STREAM\_KEY\_INDEX**

enumerator **STREAM\_KEY\_SUBINDEX**

enumerator **STREAM\_KEY\_LAST**

typedef enum Acroname::BrainStem::Link::STREAM\_PACKET **STREAM\_PACKET\_t**

Enumeration of stream packet types.

typedef std::function<uint8\_t(const *aPacket* \*packet, void \*pRef)> **streamCallback\_t**

Function signature for streaming callbacks.

**Param packet**

reference to streaming packet

**Param pRef**

User provided reference

**Return**

non zero error code on failure. Return value is not currently used.

typedef struct Acroname::BrainStem::Link::StreamStatusEntry StreamStatusEntry\_t  
*StreamStatusEntry* structure - It contains members of streaming entries in the form of key value pairs. Keys are comprised of the devices module address, command, option, index, and subindex API values.

typedef enum Acroname::BrainStem::Link::STREAM\_KEY STREAM\_KEY\_t  
Enumeration for element types within a stream key.

## Public Functions

*aErr* getConfig (aEtherConfig \*config)

Gets the links current aEther configuration

### Parameters

**config** - Pointer to the configuration to be filled

### Returns

aErrNone on success; aErrParam if config is NULL

*aErr* setConfig (const aEtherConfig config)

Sets the links aEther configuration. Configuration must be applied BEFORE connecting

### Parameters

**config** - Configuration to be applied

### Returns

aErrNone on success. aErrPermission if the module is currently connected.

Link (const *linkSpec* linkSpecifier, const char \*name = "Link")

*Link* Constructor. Takes a fully specified *linkSpec* pointer and creates a link instance with this specifier information.

### Parameters

- **linkSpecifier** - The connection details for a specific module.
- **name** - A name for the link to be created. This name can be used to reference the link during later interactions.

Link (const char \*name = "Link")

*Link* constructor without a specifier will most likely use the discoverAndConnect call to create a connection to a link module.

### Parameters

**name** - A name for the link to be created.

~Link (void)

Destructor.

*aErr* discoverAndConnect (const *linkType* type, const uint32\_t serialNumber = 0, const uint8\_t model = 0)

A discovery-based connect. This member function will connect to the first available BrainStem found on the given transport. If the serial number is passed, it will only connect to the module with that serial number. Passing 0 as the serial number will create a link to the first link module found on the specified transport. If a link module is found on the specified transport, a connection will be made.

### Parameters

- **type** - Transport on which to search for available BrainStem link modules. See the *transport* enum for supported transports.
- **serialNumber** - Specify a serial number to connect to a specific link module. Use 0 to connect to the first link module found.



- **model** – Acroname model number for the device.

**Return values**

- **aErrBusy** – if the module is already in use.
- **aErrParam** – if the transport type is undefined.
- **aErrNotFound** – if the module cannot be found or if no modules found.
- **aErrNone** – If the connect was successful.

**aErr connect** (void)

Connect to a link with a fully defined specifier.

**Return values**

- **aErrBusy** – if the module is running, starting or stopping. Try again in a bit.
- **aErrDuplicate** – If the module is already connected and running.
- **aErrConnection** – If there was an error with the connection. User needs to disconnect, then reconnect.
- **aErrConfiguration** – If the link has an invalid *linkSpec*.
- **aErrNotFound** – if the module cannot be found.
- **aErrNone** – If the connect was successful.

**aErr connectThroughLinkModule** (*Link* &link)

Connect using a pre-existing link. This member function will connect to the same BrainStem used by given *Link*. If a link module is found on the specified transport, a connection will be made.

**Parameters**

**link** – - Reference to the link to be used.

**Return values**

- **aErrInitialization** – If the referenced link does not exist yet.
- **aErrConnection** – If the connection could not be made.
- **aErrConfiguration** – If the device or connection is in properly configured.
- **aErrNone** – if the connect was successful.

**bool isConnected** (void)

Check to see if a module is connected. *isConnected* looks for a connection to an active module.

**Returns**

true: connected, false: not connected.

**linkStatus getStatus** (void)

Check the status of the module connection.

**Returns**

linkStatus (see aLink.h for status values)

**aErr disconnect** (void)

Disconnect from the BrainStem module.

**Return values**

- **aErrResource** – If there is no valid connection.
- **aErrConnection** – If the disconnect failed, due to a communication issue.
- **aErrNone** – If the disconnect was successful.

**aErr reset** (void)

Reset The underlying link stream.

**Return values**

- **aErrResource** – If there is no valid connection.
- **aErrConnection** – If the reset failed, due to a communication issue.
- **aErrNone** – If the reset was successful.

const char \*getName (void)

Accessor for link Name. Returns a pointer to the string representing the link. This string is part of the link, and will be destroyed with it. If you need access to the link name beyond the life of the link, then copy the char\* returned.

**Returns**

Pointer to character array containing the name of the link.

*aErr* getLinkSpecifier (*linkSpec* \*spec)

Accessor for current link specification.

**Parameters**

**spec** -- an allocated empty link spec reference.

**Returns**

aErrNotFound - If no *linkSpec* set for current link.

*aErr* setLinkSpecifier (const *linkSpec* linkSpecifier)

Accessor Set current link specification.

**Parameters**

**linkSpecifier** -- The specifier that will replace the current spec.

**Returns**

aErrBusy - If link is currently connected.

*aErr* getModuleAddress (uint8\_t \*address)

Gets the module address of the module the link is connected too. A zero is returned if no module can not be determined or if the link is not connected.

*aErr* sendUEI (const *uei* packet)

Sends a BrainStem protocol UEI packet on the link. This is an advanced interface, please see the relevant section of the reference manual for more information about UEIs.

**Parameters**

**packet** -- The command UEI packet to send.

**Return values**

- **aErrConnection** -- link not connected.
- **aErrParam** -- data too long or short.
- **aErrPacket** -- invalid module address.
- **aErrNone** -- success.

*aErr* sendUEI (const *uei* packet, const uint8\_t subindex)

Sends a BrainStem protocol UEI packet on the link where the packet contains a subindex. This is an advanced interface, please see the relevant section of the reference manual for more information about UEIs.

**Parameters**

- **packet** -- The command UEI packet to send.
- **subindex** -- The subindex of the command option.

**Return values**

- **aErrConnection** -- link not connected.
- **aErrParam** -- data too long or short.
- **aErrPacket** -- invalid module address.
- **aErrNone** -- success.

*aErr* receiveUEI (const uint8\_t module, const uint8\_t command, const uint8\_t option, const uint8\_t index, *uei* \*packet)

Awaits receipt of the first available matching UEI packet from the link. The first four arguments describe the packet to wait for. When successful, the supplied uei ref is filled with the received UEI. This is an advanced interface, please see the relevant section of the reference manual for more information about UEIs.

**Parameters**

- **module** – The module address.
- **command** – The command.
- **option** – The uei option.
- **index** – The index of the uei entity.
- **packet** – The uei packet reference to be filled on success.

**Return values**

- **aErrConnection** – link not connected.
- **aErrPacket** – invalid module address.
- **aErrTimeout** – no packet available.
- **aErrNone** – success.

*aErr* **receiveUEI** (const uint8\_t module, const uint8\_t command, const uint8\_t option, const uint8\_t index, uei \*packet, aPacketMatchPacketProc proc)

Awaits receipt of the first available matching UEI packet from the link. The first four arguments and proc describe the packet to wait for. When successful, the supplied uei ref is filled with the received UEI. This is an advanced interface, please see the relevant section of the reference manual for more information about UEIs.

**Parameters**

- **module** – The module address.
- **command** – The command.
- **option** – The uei option.
- **index** – The index of the uei entity.
- **packet** – The uei packet reference to be filled on success.
- **proc** – The callback used for determining a matching packet.

**Return values**

- **aErrConnection** – link not connected.
- **aErrPacket** – invalid module address.
- **aErrTimeout** – no packet available.
- **aErrNone** – success.

*aErr* **dropMatchingUEIPackets** (const uint8\_t module, const uint8\_t command, const uint8\_t option, const uint8\_t index)

Drops all existing queued packets that match. from the link. The arguments describe the packets to be matched This is an advanced interface, please see the relevant section of the reference manual for more information about UEIs.

**Parameters**

- **module** – The module address.
- **command** – The command.
- **option** – The uei option.
- **index** – The index of the uei entity.

**Return values**

- **aErrConnection** – link not connected.
- **aErrPacket** – invalid module address.
- **aErrNone** – success.

*aErr* **sendPacket** (const uint8\_t module, const uint8\_t command, const uint8\_t length, const uint8\_t \*data)

Sends a raw BrainStem protocol packet on the link. where the length does not include the module or the command. address byte and can be 0 to aBRAINSTEM\_MAXPACKETBYTES - 1. This is an advanced interface, please see the relevant section of the reference manual for more information about BrainStem Packet protocol.

**Parameters**

- **module** – The address of the destination module.
- **command** – The length of the data being sent.

- **length** – The length of the data being sent.
- **data** – The data to send.

**Return values**

- **aErrConnection** – link not connected.
- **aErrParam** – data too long or short.
- **aErrPacket** – invalid module address.
- **aErrNone** – success.

**aErr receivePacket** (const uint8\_t module, const uint8\_t \*match, uint8\_t \*length, uint8\_t \*data)

Awaits receipt of the first available matching raw BrainStem protocol packet from the link where the length does not include the module or command bytes and can be zero. The provided module and match array are compared to packets available and the first match is returned. The supplied data pointer must point to at least aBRAINSTEM\_MAXPACKETBYTES - 1 bytes. When successful, the data is filled in with the packet data not including the module and command and the length pointer is updated with the length of the returned data.

This is an advanced interface, please see the relevant section of the reference manual for more information about BrainStem Packet protocol.

**Parameters**

- **module** – The module address.
- **match** – A byte array of the values to match for received packets.
- **length** – The length of the match data on entry and length of the returned data filled on success.
- **data** – The data filled on success.

**Return values**

- **aErrConnection** – link not connected.
- **aErrPacket** – invalid module address.
- **aErrTimeout** – no packet available.
- **aErrNone** – success.

**aErr loadStoreSlot** (const uint8\_t module, const uint8\_t store, const uint8\_t slot, const uint8\_t \*pData, const size\_t length)

Loads data into a BrainStem Slot. See the relevant section of the BrainStem reference for information about BrainStem Slots and Stores.

**Parameters**

- **module** – - *Module* address.
- **store** – - BrainStem store to access, possibilities include Internal, RAM, and SD.
- **slot** – - The Slot within the Brainstem store to place the data.
- **pData** – - Pointer to a buffer containing the data to load.
- **length** – - The length in bytes of the data buffer to write.

**Return values**

- **aErrConnection** – link not connected.
- **aErrParam** – invalid module address.
- **aErrCancel** – The write process is closing and this call was unable to successfully complete.
- **aErrNone** – success.

**aErr unloadStoreSlot** (const uint8\_t module, const uint8\_t store, const uint8\_t slot, uint8\_t \*pData, const size\_t dataLength, size\_t \*pNRead)

Unloads data from a BrainStem Slot. If there are no read.

reference for information about BrainStem Slots and Stores.

**Parameters**

- **module** -- *Module* address.
- **store** -- BrainStem store to access, possibilities include Internal, RAM, and SD.
- **slot** -- The Slot within the Brainstem store to place the data.
- **pData** -- Pointer to a buffer with dataLength space in bytes that will be filled by the call.
- **dataLength** -- Expected length of the data, and at most the size of the pData buffer.
- **pNRead** -- The number of bytes actually read.

**Return values**

- **aErrConnection** – link not connected.
- **aErrParam** – invalid module address.
- **aErrCancel** – The write process is closing and this call was unable to successfully complete.
- **aErrOverrun** – The read would overrun the buffer, i.e there is more data in the slot than the buffer can handle.
- **aErrNone** – success.

*aErr* **storeSlotSize** (const uint8\_t module, const uint8\_t store, const uint8\_t slot, size\_t \*size)

Returns the current size of the data loaded in the slot specified.

**Parameters**

- **module** -- *Module* address.
- **store** -- BrainStem store to access, possibilities include Internal, RAM, and SD.
- **slot** -- The Slot within the Brainstem store to place the data.
- **size** -- size in bytes of the data stored in the slot.

**Return values**

- **aErrConnection** – link not connected.
- **aErrParam** – invalid module address.
- **aErrCancel** – The write process is closing and this request was unable to successfully complete.
- **aErrNone** – success.

*aErr* **storeSlotCapacity** (const uint8\_t module, const uint8\_t store, const uint8\_t slot, size\_t \*capacity)

Returns the maximum data capacity of the slot specified.

**Parameters**

- **module** -- *Module* address.
- **store** -- BrainStem store to access, possibilities include Internal, RAM, and SD.
- **slot** -- The Slot within the Brainstem store to place the data.
- **capacity** -- size in bytes of the data stored in the slot.

**Return values**

- **aErrConnection** – link not connected.
- **aErrParam** – invalid module address.
- **aErrCancel** – The write process is closing and this request was unable to successfully complete.
- **aErrNone** – success.

*aErr* **enableStream** (const uint8\_t moduleAddress, const uint8\_t cmd, const uint8\_t option, const uint8\_t index, const bool enable)

Enables streaming for the supplied criteria.

**Parameters**

- **moduleAddress** – Address to filter on.

- **cmd** – cmd to filter by (supports Wildcards)
- **option** – option to filter by (supports Wildcards)
- **index** – index to filter by (supports Wildcards)
- **enable** – True - Enables streaming; False - disables streaming

*aErr* **isLinkStreaming** (const uint8\_t moduleAddress, uint8\_t \*enabled)

Determines if the module is actively streaming. Does not indicate what is streaming, only if streaming is currently active.

**Parameters**

- **moduleAddress** – The devices module address.
- **enabled** – Variable to be populated.

**Returns**

Returns *common entity* return values

*aErr* **registerStreamCallback** (const uint8\_t moduleAddress, const uint8\_t cmd, const uint8\_t option, const uint8\_t index, const bool enable, *streamCallback\_t* cb, void \*pRef)

Registers a callback function based on a specific module, cmd, option, and index.

**Parameters**

- **moduleAddress** – Address to filter on (supports Wildcards)
- **cmd** – cmd to filter by (supports Wildcards)
- **option** – option to filter by (supports Wildcards)
- **index** – index to filter by (supports Wildcards)
- **enable** – True - installs/updates callback and ref; False - uninstalls callback
- **cb** – Callback to be executed when a new packet matching the criteria is received.
- **pRef** – Pointer to user reference for use inside the callback function.

**Returns**

aErrNotFound - Item not found (uninstalling only)

**Returns**

aErrNone - success

*aErr* **getStreamValue** (const uint8\_t moduleAddress, const uint8\_t cmd, const uint8\_t option, const uint8\_t index, const uint8\_t subindex, uint32\_t \*value)

Gets stream value based on the search criteria

**Parameters**

- **moduleAddress** – Address to filter on (supports Wildcards)
- **cmd** – cmd to filter by (supports Wildcards)
- **option** – option to filter by (supports Wildcards)
- **index** – index to filter by (supports Wildcards)

**Returns**

aErrStreamStale if the value has not been updated since the last read.

**Returns**

aErrNotFound if no such stream element exists.

**Returns**

aErrNone - success

*aErr* **getStreamStatus** (const uint8\_t moduleAddress, const uint8\_t cmd, const uint8\_t option, const uint8\_t index, const uint8\_t subindex, *StreamStatusEntry\_t* \*buffer, const size\_t bufferLength, size\_t \*unloadedSize)

Gets all available stream values based on the search criteria.

**Parameters**

- **moduleAddress** – Address to filter on (supports Wildcards)

- **cmd** – cmd to filter by (supports Wildcards)
- **option** – option to filter by (supports Wildcards)
- **index** – index to filter by (supports Wildcards)
- **subindex** – subindex to filter by (supports Wildcards)
- **buffer** – Buffer of user allocated memory to be filled with stream data Note:  
[Link::getStreamKeyElement](#) should be used to decode the keys
- **bufferLength** – Number of elements the buffer can hold.
- **unloadedSize** – Number of elements that were placed in the buffer

**Returns**

aErrParam if status or unloadedSize is null

**Returns**

aErrNone - success

```
std::vector<uint64_t> filterActiveStreamKeys (const uint8_t moduleAddress, const
                                             uint8_t cmd, const uint8_t option,
                                             const uint8_t index, const uint8_t
                                             subindex, const bool acquireLock)
```

Provides a list of active stream keys based on the supplied criteria. Exposed for unit-testing purposes only.

**Parameters**

- **moduleAddress** – Address to filter on (supports Wildcards)
- **cmd** – cmd to filter by (supports Wildcards)
- **option** – option to filter by (supports Wildcards)
- **index** – index to filter by (supports Wildcards)
- **acquireLock** – Option to acquire mutex before getting list elements.

**Returns**

List of keys meeting the search criteria

```
aErr enablePooledPackets (const bool enable)
```

Enables pooling of outgoing BrainStem packets. Allowing multiple packets to be packed into a single transaction frame.

**Parameters**

**enable** – True = Enables; False = Disables

```
aErr enablePacketLog (const char *logname)
```

Enable Packet logging.

Enable packet logging for this link. Enables the packet logging buffer, and writes packet traffic out to the file specified by logname.

**Parameters**

**logname** – the path and filename indicating where to write the packet log.

**Returns**

aErr returns appropriate errors if it fails to enable the packet log.

```
aErr disablePacketLog (void)
```

Disable Packet logging.

disable packet logging for this link. Disables the packet log.

**Returns**

aErr returns appropriate errors if it fails to disable the debug log.

```
aErr getFactoryData (const uint8_t module, const uint8_t command, uint8_t *pData,
                     const size_t dataLength, size_t *unloadedLength)
```

For Internal use only!

```
aErr setFactoryData (const uint8_t module, const uint8_t command, const uint8_t
                     *pData, const size_t dataLength)
```

For Internal use only!

## Public Static Functions

```
static inline aErr sDiscover (const linkType type, aDiscoveryModuleFoundProc  
                                cbLinkFound, void *vpCRef, const uint32_t  
                                networkInterface = LOCALHOST_IP_ADDRESS)
```

Discover is called with a specified transport to search for link modules on that transport. The callback is called with a fully filled in specifier for any link module found. The sDiscover returns aErrNone if the discovery process is successful, regardless of if any links are found. An error is only returned if the link discovery process fails. Discovery can take some time. The callback will occur in the same thread context as this routine call.

### Parameters

- **type** – Transport to search for available BrainStem link modules on. See the *transport* enum for supported transports.
- **cbLinkFound** – Process that is called when a module is discovered.
- **vpCRef** – This is passed to cbLinkFound when a module is discovered.

### Return values

- **aErrNone** – on success.
- **aErrNotFound** – if no devices were found.

```
static inline bContinueSearch sFindAll (const linkSpec *spec, bool *bSuccess, void  
                                         *vpCRef)
```

sFindAll is a callback function which matches any found stem. SFindAll is used by sDiscover(const linkType, list<linkSpec>\*) to fill the list provided with any found modules on the specified link type.

### Parameters

- **spec** – The linkspec pointer for the device currently being evaluated.
- **bSuccess** – a returned value indicating whether the search has succeeded.
- **vpCRef** – Reference pointer to the std::list that was passed in.

### Return values

- **true** – Caller should continue to call this function.
- **false** – Caller should stop calling this function.

```
static inline aErr sDiscover (const linkType type, list<linkSpec> *devices, const uint32_t  
                                networkInterface = LOCALHOST_IP_ADDRESS)
```

Discover is called with a specified transport to search for link modules on that transport. The devices list is filled with device specifiers. sDiscover returns aErrNone if the discovery process is successful, regardless of whether any links are found. An error is only returned if the link discovery process fails. Discovery can take some time.

### Parameters

- **type** – Transport to search for available BrainStem link modules on. See the *transport* enum for supported transports.
- **devices** – an empty list of specifiers that will be filled in.

### Return values

- **aErrNotFound** – if no devices were found.
- **aErrNone** – on success.

```
static bool getStreamPacketType (const aPacket *packet, STREAM_PACKET_t *type)
```

Decodes the streaming packet type from a provided packet.

### Parameters

- **packet** – - The packet to be interrogated.



- **type** – - variable to be populated. Filled with kSTREAM\_PACKET\_UNKNOWN on failure.

**Returns**

true on success; false on failure.

static bool **isSubindexType** (*STREAM\_PACKET\_t* type)

Helper function for indicating whether the packet is a subindex type. The subindex can be queried through *Link::getStreamKeyElement*

**Parameters**

**type** – - The element to evaluate.

**Returns**

true if the type contains a subindex; false if it does not.

static uint8\_t **getStreamKeyElement** (const uint64\_t key, *STREAM\_KEY\_t* element)

Convenience function to unpack a stream key. Note: This function will assert if an out of range STREAM\_KEY\_t is used.

**Parameters**

- **key** – The key to be unpacked
- **element** – The element to unpack from the key.

**Returns**

The requested element from the key.

static bool **isStreamPacket** (const *aPacket* \*packet)

Convenience function to determine whether the value is a stream packet. Stream “Packets” encompass all STREAM\_PACKET\_t valid elements.

**Parameters**

**packet** – UEI stream packet to be checked.

**Returns**

Whether the packet is a stream sample or not

static bool **isStreamSample** (const *aPacket* \*packet)

Convenience function to determine whether the value is a stream sample. Stream “Sample” encompasses all STREAM\_KEY\_t except for kSTREAM\_PACKET\_BYTES which have a varied structure and depend on the cmd/option/index. Calling isStreamPacket prior is not required as this function will verify the packet type

**Parameters**

**packet** – UEI stream packet to be checked.

**Returns**

Whether the packet is a stream sample or not

static *aErr* **getStreamSample** (const *aPacket* \*packet, uint64\_t \*timestamp = NULL, uint32\_t \*value = NULL, uint8\_t \*subindex = NULL)

Convenience function to unpack the stream samples timestamp and value. Calling isStreamSample prior is not required as this function will verify the packet type.

**Parameters**

- **packet** – UEI stream packet to be unpacked.
- **timestamp** – Variable to be filled with stream sample timestamp. (optional)
- **value** – Variable to be filled with the stream sample (optional). May require casting to signed value depending on the cmd/option code.

**Return values**

- **aErrPacket** – Not a stream packet
- **aErrUnknown** – Unknown decoding issue.
- **aErrNone** – success.

static void **getTimestampParts** (const uint64\_t timestamp, uint32\_t \*seconds, uint32\_t \*uSeconds)

Helper function for extracting the parts of a timestamp.

**Parameters**

- **timestamp** -- Value acquired from [Link::getStreamSample](#)
- **seconds** -- Seconds element from timestamp. Refers to the seconds since firmware boot.
- **uSeconds** -- Micro second element from the timestamp. Refers to the micro seconds from firmware boot. Micro seconds rolls over to seconds. Value range: 0-99999

static bool **linkStreamFilter** (const [aPacket](#) \*packet, void \*ref)

Filter function for Streaming packets. This is used internally whenever streaming is enabled. Exposed for unit-testing purposes only.

**Parameters**

- **packet** -- UEI stream packet to be checked/filtered.
- **ref** -- Opaque reference handle

class **impl**

struct **StreamStatusEntry**

[StreamStatusEntry](#) structure - It contains members of streaming entries in the form of key value pairs. Keys are comprised of the devices module address, command, option, index, and subindex API values.

**Public Members**

uint64\_t **key**

The stream key.

uint32\_t **value**

The value associated with the key

### 3.3.28 Module Class

class **Module**

ModuleClass: The [Module](#) class provides a generic interface to a BrainStem hardware module. The [Module](#) class is the parent class for all BrainStem modules. Each module inherits from [Module](#) and implements its hardware specific features.

Subclassed by [a40PinModule](#), [aMTMDAQ1](#), [aMTMDAQ2](#), [aMTMIOSerial](#), [aMTMLoad1](#), [aMTMPM1](#), [aMTMRelay](#), [aMTMStemModule](#), [aPD3M](#), [aUSBCSwitch](#), [aUSBCSwitchPro](#), [aUSBExt3c](#), [aUSBHub2x4](#), [aUSBHub3c](#), [aUSBHub3p](#)

## Public Functions

**Module** (const uint8\_t address, const uint8\_t model = 0)

Constructor. Implicitly creates a link object with no specifier. Most often objects created with this constructor will use linkDiscoverAndConnect to find and connect to a module.

### Parameters

- **address** – The BrainStem network address of the module. The default address (or base address for modules that support address offsets) is defined in each module's "Defs.h" header.
- **model** – Acroname model number.

virtual ~**Module** (void)

Destructor.

*aErr* **connect** (const *linkType* type, const uint32\_t serialNum)

Connect using the current link specifier.

### Parameters

- **type** – - Transport on which to search for available BrainStem link modules. See the *transport* enum for supported transports.
- **serialNum** – - Specify a serial number to connect to a specific link module. Use 0 to connect to the first link module found.

### Return values

- **aErrBusy** – if the module is already in use.
- **aErrParam** – if the type is incorrect or serialNum is not specified
- **aErrNotFound** – if the module cannot be found.
- **aErrNone** – If the connect was successful.

*aErr* **connectFromSpec** (const *linkSpec* linkSpecifier)

Connect to a link with a fully defined specifier.

### Parameters

**linkSpecifier** – - Connect to module with specifier.

### Return values

- **aErrInitialization** – If there is currently no link object.
- **aErrBusy** – If the link is currently connected.
- **aErrParam** – if the specifier is incorrect.
- **aErrNotFound** – if the module cannot be found.
- **aErrNone** – If the connect was successful.

*aErr* **discoverAndConnect** (*linkType* type, const uint32\_t serialNum = 0)

A discovery-based connect. This member function will connect to the first available BrainStem found on the given transport. If the serial number is passed, it will only connect to the module with that serial number. Passing 0 as the serial number will create a link to the first link module found on the specified transport. If a link module is found on the specified transport, a connection will

### Parameters

- **type** – - Transport on which to search for available BrainStem link modules. See the *transport* enum for supported transports.
- **serialNum** – - Specify a serial number to connect to a specific link module. Use 0 to connect to the first link module found.

### Return values

- **aErrBusy** – if the module is already in use.
- **aErrParam** – if the transport type is undefined.
- **aErrNotFound** – if the module cannot be found.
- **aErrNone** – If the connect was successful.

*aErr* **connectThroughLinkModule** (*Module* \*pModule)

Connect using link from another *Module*. This member function will connect to the same BrainStem used by given *Module*. If a link module is found on the specified transport, a connection will be made

**Parameters**

**pModule** – - Pointer to a valid *Module* class object.

**Return values**

- **aErrParam** – if the module is undefined.
- **aErrNone** – if the connect was successful.

bool **isConnected** (void)

Is the link connected to the BrainStem *Module*.

*linkStatus* **getStatus** (void)

Check the status of the BrainStem module connection.

**Returns**

linkStatus (see aLink.h for status values)

*aErr* **disconnect** (void)

Disconnect from the BrainStem module.

**Return values**

- **aErrResource** – If the there is no valid connection.
- **aErrConnection** – If the disconnect failed, due to a communication issue.
- **aErrNone** – If the disconnect was successful.

*aErr* **reconnect** ()

Reconnect using the current link specifier.

**Return values**

- **aErrBusy** – if the module is already in use.
- **aErrParam** – if the specifier is incorrect.
- **aErrNotFound** – if the module cannot be found.
- **aErrNone** – If the connect was successful.

*Link* \***getLink** (void) const

Get the current link object.

**Returns**

The link associated with the module.

*aErr* **getConfig** (aEtherConfig \*config)

Gets the links current network configuration

**Parameters**

**config** – Variable to be filled with the config

**Returns**

aErrNone on success. aErrNotReady if the module does not have a link aErrParam if config is NULL

*aErr* **setConfig** (const aEtherConfig config)

Sets the links network configuration. Configuration must be applied BEFORE connecting

**Parameters**

**config** – Configuration to be applied

**Returns**

aErrNone on success. aErrPermission if the module is currently connected. aErrNotReady if the module does not have a link

uint8\_t **getModuleAddress** (void) const

Accessor to get the address of the BrainStem module associated with the instance on

the host machine. (Not to be confused with the System entity which effects the device hardware.)

#### Returns

The module address.

void **setModuleAddress** (const uint8\_t address)

Accessor to set the address of the BrainStem module associated with the instance on the host machine. (Not to be confused with the System entity which effects the device hardware.)

#### Parameters

**address** – The module address.

*aErr* **getLinkSpecifier** (*linkSpec* \*spec)

Get linkSpecifier

#### Parameters

**spec** – - allocated linkspec struct will be filled with spec.

#### Returns

aErrNone - If the module does not have a spec.

*aErr* **getBuild** (uint32\_t \*build)

Get the modules firmware build number The build number is a unique hash assigned to a specific firmware.

#### Parameters

**build** – Variable to be filled with build.

*aErr* **hasUEI** (const uint8\_t command, const uint8\_t option, const uint8\_t index, const uint8\_t flags)

Queries the module to determine if it implements a UEI. Each UEI has a command, option or variant, index and flag. The hasUEI method queries for a fully specified UEI. Returns aErrNone if the variation is supported and an appropriate error if not. This call is blocking for up to the nMSTimeout period.

#### Parameters

- **command** – One of the UEI commands (cmdXXX).
- **option** – The option or variant of the command.
- **index** – The entity index.
- **flags** – The flags (ueiOPTION\_SET or ueiOPTION\_GET).

#### Return values

- **aErrNone** – The module supports this command and access flags.
- **aErrMode** – The module supports the command but not the access flag.
- **aErrNotFound** – The module does not support the command, option, or index.
- **aErrTimeout** – The request timed out without a response.
- **aErrConnection** – There is no active link

*aErr* **classQuantity** (const uint8\_t command, uint8\_t \*count)

Queries the module to determine how many entities of the specified class are implemented by the module. Zero is a valid return value. For example, calling classQuantity with the command parameter of cmdANALOG would return the number of analog entities implemented by the module.

#### Parameters

- **command** – One of UEI commands (cmdXXX).
- **count** – When the request is successful count is updated with the number of entities found.

#### Return values

- **aErrNone** – Success.

- **aErrTimeout** – The request timed out without a response.
- **aErrConnection** – There is no active link.

**aErr subClassQuantity** (const uint8\_t command, const uint8\_t index, uint8\_t \*count)

Queries the module to determine how many subclass entities of the specified class are implemented by the module for a given entity index. This is used for entities which may be 2-dimensional. E.g. cmdMUX subclasses are the number of channels supported by a particular mux type (index); as a specific example, a module may support 4 UART channels, so subClassQuantity(cmdMUX, aMUX\_UART...) could return 4. Zero is a valid return value.

**Parameters**

- **command** – One of the UEI commands (cmdXXX).
- **index** – The entity index.
- **count** – The number of subclasses found.

**Return values**

- **aErrNone** – Success.
- **aErrTimeout** – The request timed out waiting for response.
- **aErrConnection** – There is no active link.

**aErr entityGroup** (const uint8\_t command, const uint8\_t index, uint8\_t \*group)

Queries the module the group assigned to an entity and index. Entities groups are used to specify when certain hardware features are fundamentally related. E.g. certain hardware modules may have some digital pins associated with an adjustable voltage rail; these digitals would be in the same group as the rail. Zero is the default group.

**Parameters**

- **command** – One of the UEI commands (cmdXXX).
- **index** – The entity index.
- **group** – Upon success, group is filled with the entities group value.

**Return values**

- **aErrNone** – Success.
- **aErrTimeout** – The request timed out without response.
- **aErrConnection** – There is no active link.

**aErr debug** (const uint8\_t \*pData, const uint8\_t length)

Sends a debug packet to the module containing the provided data. Modules receiving debug packets simply echo the packet back to the sender. If the round-trip is successful, the reply data will match the data sent. This method returns aErrNone when successful, if not successful, an appropriate error is returned.

**Parameters**

- **pData** – A pointer to an array of data to be sent in the debug packet.
- **length** – The length of the data array.

**Return values**

- **aErrNone** – Success.
- **aErrTimeout** – Timeout occurred without response.
- **aErrConnection** – No active link exists.

void **setNetworkingMode** (const bool mode)

Sets the networking mode of the module object. By default the module object is configure to automatically adjust its address based on the devices current module address. So that, if the device has a software or hardware offset it will still be able to communication with the device. If advanced networking is required the auto networking mode can be turned off.

**Parameters**

**mode** – True/1 for Auto Networking, False/0 for manual networking

### 3.3.29 PDChannelLogger

class PDChannelLogger

#### Public Functions

**PDChannelLogger** (Acroname::BrainStem::Module \*module, const uint8\_t index, const uint16\_t bufferSize = 1024)

Manages BrainStem Power Delivery logging packets.

#### Parameters

- **module** – Reference to an existing BrainStem *Module*
- **index** – Index/channel logging should be enabled for.
- **bufferLength** – Number of packets the class should queue before dropping.

*aErr* **setEnabled** (bool enable)

Enables Power Delivery logging.

#### Parameters

**enable** – True enables logging; False disables logging

#### Returns

aErrNone on success

*aErr* **getPacket** (BS\_PD\_Packet\_t &packet)

Attempts to take a packet from the internal buffer.

#### Parameters

**packet** – Reference to a packet to be filled by the function.

#### Returns

aErrNone if the function successfully acquired any number of packets.

aErrNotReady if no packets were available.

aErrInitialization if this module is not in a valid state to execute.

*aErr* **getPackets** (std::vector<BS\_PD\_Packet\_t> &packets, const unsigned int maxPackets = 200)

Attempts to take a multiple packets (up to a maximum) from the internal buffer.

#### Parameters

- **packets** – reference to a vector to be filled by the function
- **maxPackets** – The maximum number of packets to acquire.

#### Returns

aErrNone if the function successfully acquired any number of packets.

aErrNotReady if no packets were available.

aErrInitialization if this module is not in a valid state to execute.

inline uint8\_t **getIndex** (void) const

Provides the index for which this object was created for.

#### Returns

The index of the object.

## 3.4 C API Reference

### 3.4.1 aDefs.h

#### *group* **aDefs**

Acroname Specific Universal Defines and includes.

The C-Interface requires some specific defines for cross platform compatibility. The [aDefs.h](#) file contains those defines and includes that are necessary at a global level across platforms.

Things like a cross platform way to specify line endings, safe c-string copy and concatenation operations, and boolean typedefs when they are not defined by default.

We rely on the following std headers:

- assert.h
- stddef.h
- stdint.h
- stdbool.h
- string.h
- stdio.h
- stdlib.h

**aSHOWERR** (msg, error) (printf("Error in File; %s on line; %d, %s: %d\n", \_\_FILE\_\_, \_\_LINE\_\_, msg, error))

A macro that will emit an error on stdout including file and line number when compiled without NDEBUG flag. When NDEBUG is defined it emits nothing.

**OS\_NEW\_LN** "\n"

A macro containing the appropriate line ending characters for a given platform \r\n on windows and \n elsewhere.

**aStringCopySafe** (d, l, s) strncpy((d), (s), (l))

A macro that maps to platform specific safe string copy. Parameters are;

- d: destination
- l: length
- s: source

**aStringCatSafe** (d, l, s) strncat((d), (s), (l))

A macro that maps to platform specific safe string concatenation. Parameters are;

- d: destination
- l: length
- s: source



**aSNPRINTF** snprintf

A macro that maps to the platform specific safe printf output.

**aLIBEXPORT** \_\_attribute\_\_((visibility ("default")))

A macro that expands for dynamic library linking on a given platform.

**aMemPtr** void \*

An acronym specific semantic define for a pointer to a chunk of memory.

const char \***aDefs\_GetModelName** (const int modelNum)

Returns a printable model string.

### 3.4.2 aDiscovery.h

*group* **aDiscovery**

Link Discovery Interface.

[aDiscovery.h](#) provides an interface for locating BrainStem modules accross multiple transports. It provides a way to find all modules for a give transport as well as specific modules by serial number, or first found.

enum **linkType**

Enum [linkType](#).

The linkType enum specifies the connection transport type.

*Values:*

enumerator **INVALID**

- Undefined link type.

enumerator **USB**

- USB link type.

enumerator **TCPIP**

- TCPIP link type.

enumerator **SERIAL**

- Serial link type.

enumerator **AETHER**

- aEther client link type.

enumerator **AETHER\_USB**

- aEther USB server link type.

enumerator **AETHER\_TCPIP**

- aEther TCPIP server link type.

enumerator **AETHER\_SERIAL**

- aEther SERIAL server link type.

struct **linkSpec**

Struct *linkSpec*.

The *linkSpec* contains the necessary information for connecting to a BrainStem module.

### Module Specifics

*linkType* **type**

The transport type of this spec.

**uint32\_t serial\_num**

The serial number of the module

**uint32\_t module**

The module address

**uint32\_t router**

The BrainStem network router address

**uint32\_t router\_serial\_num**

The BrainStem network router serial number

**uint32\_t model**

The model type

### Transport Specifics

The transport specifics are contained in a union named *t*. The union contains either of two structs *usb* or *ip*.

The USB struct contains a single element:

- **usb\_id** - *uint32\_t* the *usb\_id* of the BrainStem module.

The TCP/IP struct contains two elements:

- **ip\_address** - *uint32\_t* the IP4 address of the module.
- **ip\_port** - *uint32\_t* the TCP port for socket connection on the module.

The Serial struct contains two elements:

- **baudrate** - *uint32\_t* the serial port baudrate

- **port** - *\*char\*\** the serial port path or name

Address this member like `spec.t.usb` or `spec.t.ip`

union *linkSpec*::[anonymous] t  
transport union member.

typedef bool **bContinueSearch**

Typedef *bContinueSearch*.

Semantic typedef for continuing the search for modules.

typedef *bContinueSearch* (**aDiscoveryModuleFoundProc**)(const *linkSpec* \*spec, bool \*bSuccess, void \*vpRef)

Typedef *aDiscoveryModuleFoundProc*.

This procedure is the callback to determine whether modules match the ones we are looking for.

- **spec** - *linkSpec* passed into the continueSearch callback.
- **bSuccess** - *bool* Filled with true if a module was found. false otherwise
- **vpRef** - *void\** A reference to environment, or other element needed within the callback.
- *\*bContinueSearch* - Return true to continue, false to stop the search.

uint8\_t **aDiscovery\_EnumerateModules** (const *linkType* type, *aDiscoveryModuleFoundProc* cbFound, void \*vpCRef, const uint32\_t networkInterface)

Function *aDiscovery\_EnumerateModules*.

Enumerates the discoverable modules for the given link type. Takes a *aDiscoveryModuleFoundProc* which will determine when to stop the enumeration.

#### Parameters

- **type** – The transport type on which search for devices. Valid *linkType* “linktypes” are accepted
- **cbFound** – The *aDiscoveryModuleFoundProc* to call for each module found.
- **vpCRef** – The vpRef passed into the callback.
- **networkInterface** – Defines the network interface to use when multiple are present. A value of 0 or LOCALHOST\_IP\_ADDRESS will result in local searches only. Values other than this will have firewall implications.

#### Returns

Returns the number of modules found.

*linkSpec* \***aDiscovery\_FindModule** (const *linkType* type, const uint32\_t serialNum, const uint32\_t networkInterface)

Function *aDiscovery\_FindModule*.

Finds the module with the given serial number on the given transport type.

#### Parameters

- **type** – The transport type on which search for devices. Valid *linkType* “linktypes” are accepted

- **serialNum** – The serial number of the Module to find.
- **networkInterface** – Defines the network interface to use when multiple are present. A value of 0 or LOCALHOST\_IP\_ADDRESS will result in local searches only. Values other than this will have firewall implications.

**Returns**

A pointer to the *linkSpec* for the requested module if found or NULL otherwise. This call Allocates memory that must be freed by a call to *aLinkSpec\_Destroy*.

*linkSpec* \*aDiscovery\_FindFirstModule (const *linkType* type, const uint32\_t networkInterface)

Function *aDiscovery\_FindFirstModule*.

Finds the first module found on the given transport.

**Parameters**

- **type** – The transport type on which search for devices. Valid *linkType* “linktypes” are accepted
- **networkInterface** – Defines the network interface to use when multiple are present. A value of 0 or LOCALHOST\_IP\_ADDRESS will result in local searches only. Values other than this will have firewall implications.

**Returns**

A pointer to the *linkSpec* for the requested module if found or NULL otherwise. This call Allocates memory that must be freed by a call to *aLinkSpec\_Destroy*.

**LinkSpec Functions**

*linkSpec* \*aLinkSpec\_Create (const *linkType* type)

Function *aLinkSpec\_Create*.

Creates a *linkSpec* object with transport set to the given type.

**Parameters**

**type** – The transport type on which search for devices. Valid *linkType* “linktypes” are accepted

**Returns**

A pointer to the *linkSpec* for the requested module or NULL if there was an error allocating memory. This call Allocates memory that must be freed by a call to *aLinkSpec\_Destroy*.

*aErr* aLinkSpec\_Destroy (*linkSpec* \*\*spec)

Function *aLinkSpec\_Destroy*.

Destroys and clears the referenced *linkSpec*.

**Parameters**

**spec** – A pointer to the *linkSpec* pointer previously allocated.

**Returns**

aErrNone on success or an error if there was an error encountered deallocating the *linkSpec*.

### 3.4.3 Error Codes

enum **aErr**

The *aErr* enum lists the possible error codes for library calls. BrainStem commands generally return a set of unified Error codes. The API tries to be consistent and return these errors from every interaction with the stem.

*Values:*

enumerator **aErrNone**

0 - Success, no error.

enumerator **aErrMemory**

1 - Memory allocation.

enumerator **aErrParam**

2 - Invalid parameter.

enumerator **aErrNotFound**

3 - Not found.

enumerator **aErrFileNameLength**

4 - File name too long.

enumerator **aErrBusy**

5 - Resource busy.

enumerator **aErrIO**

6 - Input/Output error.

enumerator **aErrMode**

7 - Invalid Mode.

enumerator **aErrWrite**

8 - Write error.

enumerator **aErrRead**

9 - Read error.

enumerator **aErrEOF**

10 - End of file.

enumerator **aErrNotReady**

11 - Not ready, no bytes available.

enumerator **aErrPermission**

12 - Insufficient permissions.

- enumerator **aErrRange**  
13 - Value out of range.
- enumerator **aErrSize**  
14 - Invalid Size.
- enumerator **aErrOverrun**  
15 - Buffer/queue overrun.
- enumerator **aErrParse**  
16 - Parse error.
- enumerator **aErrConfiguration**  
17 - Configuration error.
- enumerator **aErrTimeout**  
18 - Timeout occurred.
- enumerator **aErrInitialization**  
19 - Initialization error.
- enumerator **aErrVersion**  
20 - Invalid version.
- enumerator **aErrUnimplemented**  
21 - Functionality unimplemented.
- enumerator **aErrDuplicate**  
22 - Duplicate request.
- enumerator **aErrCancel**  
23 - Cancellation occurred, or did not complete.
- enumerator **aErrPacket**  
24 - Packet byte invalid.
- enumerator **aErrConnection**  
25 - Connection error.
- enumerator **aErrIndexRange**  
26 - Index out of range.
- enumerator **aErrShortCommand**  
27 - BrainStem command to short.

enumerator **aErrInvalidEntity**

28 - Invalid entity error.

enumerator **aErrInvalidOption**

29 - Invalid option code.

enumerator **aErrResource**

30 - Resource unavailable.

enumerator **aErrMedia**

31 - Media error.

enumerator **aErrAsyncReturn**

32 - Asynchronous return.

enumerator **aErrStreamStale**

33 - Stream value is stale.

enumerator **aErrUnknown**

34 - Unknown error.

const char \***aError\_GetErrorText** (*aErr* err)

Returns a printable error string.

### 3.4.4 aFile.h

group **aFile**

Platform Independent File Access Interface.

*aFile.h* provides a platform independent interface for opening, reading, and writing files.

typedef void \***aFileRef**

Typedef *aFileRef* Opaque reference to a file handle.

enum **aFileMode**

Enum *aFileMode*.

Represents whether the file is to be opened in read or write mode.

*Values:*

enumerator **aFileModeReadOnly**

File read mode.

enumerator **aFileModeWriteOnly**

File write mode.

enumerator **aFileModeAppend**

File write mode from end of current file.

enumerator **aFileModeUnknown**

File in unknown mode.

enum **aFileSeekMode**

Enum *aFileSeekMode*.

Represents the seek start location.

*Values:*

enumerator **aSeekStart**

Perform a seek from the beginning of the file.

enumerator **aSeekCurrent**

Perform a seek from the current location.

enumerator **aSeekEnd**

Perform a seek from the end of the file.

bool **aFile\_Exists** (const char \*pFilename)

Does the File Exist.

Checks for the existence of a file at filename.

**Parameters**

**pFilename** – path to file.

**Returns**

bool True if file exists, false otherwise.

*aFileRef* **aFile\_Open** (const char \*pFilename, const *aFileMode* eMode)

Open a File.

Opens the file Given in pFilename with the given fileMode eMode.

**Parameters**

- **pFilename** – path to file.
- **eMode** – Open the file for Reading or Writing.

**Returns**

aFileRef on success or NULL on failure.

*aErr* **aFile\_Close** (*aFileRef* \*fileRef)

Close an open file.

Close an open file. The fileRef is set to NULL on success.

**Parameters**

**fileRef** – Pointer to the handle to the open file.

**Return values**

- **aErrNone** – Success.



- **aErrParam** – invalid file reference.

#### Returns

Function returns aErr values.

*aErr* **aFile\_Read** (*aFileRef* fileRef, uint8\_t \*pBuffer, const size\_t nLength, size\_t \*pActuallyRead)

Read from an open file.

Read from an open file.

#### Parameters

- **fileRef** – The handle to the open file.
- **pBuffer** – The data buffer to read into.
- **nLength** – The length of the read buffer.
- **pActuallyRead** – The Number of bytes actually read from the file.

#### Return values

- **aErrNone** – Success.
- **aErrMode** – The file is not readable.
- **aErrIO** – An error occurred reading from the file.
- **aErrEOF** – Read reached the end of the file.

#### Returns

Function returns aErr values.

*aErr* **aFile\_Write** (*aFileRef* fileRef, const uint8\_t \*pBuffer, const size\_t nLength, size\_t \*pActuallyWritten)

Write to an open file.

Write to an open file.

#### Parameters

- **fileRef** – The handle to the open file.
- **pBuffer** – The data to write.
- **nLength** – The length of the data to write.
- **pActuallyWritten** – The Number of bytes actually written to the file.

#### Return values

- **aErrNone** – Success.
- **aErrMode** – The file is not writable.
- **aErrIO** – An error occurred writing to the file.

#### Returns

Function returns aErr values.

*aErr* **aFile\_Seek** (*aFileRef* fileRef, const long nOffset, *aFileSeekMode* seekFrom)

Seek within an open file.

Seek within an open file.

#### Parameters

- **fileRef** – The handle to the open file.
- **nOffset** – The number of bytes to move within the file.

- **seekFrom** – The location to begin the seek from.

**Return values**

- **aErrNone** – Success.
- **aErrEOF** – Seek would run off the end of the file.
- **aErrRange** – Seek would run off the beginning of the file.
- **aErrIO** – An error occurred moving the file pointer.

**Returns**

Function returns aErr values.

*aErr* **aFile\_GetSize** (*aFileRef* fileRef, size\_t \*pulSize)

Get the size of an open file.

Get the size of an open file.

**Parameters**

- **fileRef** – The handle to the open file.
- **pulSize** – Out param filled with the size of the open file.

**Return values**

- **aErrNone** – Success.
- **aErrParam** – the fileRef is invalid.
- **aErrIO** – an error occurred calculating the size.

**Returns**

Function returns aErr values.

*aErr* **aFile\_Delete** (const char \*pFilename)

Delete a File.

Deletes the given file pFilename.

**Parameters**

**pFilename** – Path to file.

**Return values**

- **aErrNone** – Success.
- **aErrPermission** – user has insufficient privileges.
- **aErrNotFound** – if the file cannot be located.

**Returns**

Function returns aErr values.

### 3.4.5 aLink.h

#### group **aLink**

BrainStem Link Interface.

*aLink.h* provides the interface for creating and maintaining the link to a BrainStem module, and the BrainStem network. It includes facilities for starting and stopping links, as well as sending and receiving BrainStem protocol packets.

#### typedef uint32\_t **aLinkRef**

Typedef *aLinkRef* Opaque reference to a BrainStem link.

Typedef for aLinkRef for an opaque reference to BrainStem Link.

#### enum **linkStatus**

Represents the current state of the BrainStem link.

*Values:*

##### enumerator **STOPPED**

Link currently stopped.

##### enumerator **INITIALIZING**

Starting communication with module.

##### enumerator **RUNNING**

Link running.

##### enumerator **STOPPING**

Link is in the process of stopping.

##### enumerator **SYNCING**

Packet framing lost re-syncing.

##### enumerator **INVALID\_LINK\_STREAM**

Link stream provided is not valid.

##### enumerator **IO\_ERROR**

Communication error occurred on link, could not resync.

##### enumerator **RESETTING**

Resetting the link connection

##### enumerator **UNKNOWN\_ERROR**

Something really bad happened, but we couldn't determine what.

*aLinkRef* **aLink\_CreateUSB** (const uint32\_t serialNumber)

Create a USB BrainStem link reference.

Creates a reference to a USB BrainStem link. The linkStream is now maintained by the BrainStem link. If the link already exists, the use count for that link will be incremented and the linkRef for that entry will be returned.

Links created with this procedure must use aLink\_Destroy to properly dispose of the link reference and associated connections.

**Parameters**

**serialNumber** – Unique identifier of the device.

**Returns**

aLinkRef identifier if successful or 0 otherwise.

*aLinkRef* **aLink\_CreateTCPIP** (const uint32\_t serialNumber, const uint32\_t address, const uint16\_t port)

Creates a reference to a BrainStem link. The linkStream is now maintained by the BrainStem link. If the link already exists, the use count for that link will be incremented and the linkRef for that entry will be returned.

Links created with this procedure must use aLink\_Destroy to properly dispose of the link reference and associated connections.

**Parameters**

- **serialNumber** – the device serial number
- **address** – the TCPIP address
- **port** – the TCPIP port

**Returns**

aLinkRef identifier if successful or 0 otherwise.

*aErr* **aLink\_Destroy** (*aLinkRef* \*linkRef)

Destroy a BrainStem link reference.

Destroys a Link reference. deallocating associated resources cleanly.

Links created with aLink\_Create must use aLink\_Destroy to clean up resources used by the link Ref.

**Parameters**

**linkRef** – a Pointer to a valid LinkRef. The linkRef will be set to NULL on succesful completion of the Destroy call.

**Returns**

aStreamRef Return value will always be NULL. The return value has been left for backwards compatability.

*aErr* **aLink\_Reset** (const *aLinkRef* linkRef)

Reset a connection to a BrainStem module.

Stop the active connection to the BrainStem if the Link contains a valid stream Reference, and clear out the communication buffers, and restart the link.

**Parameters**

**linkRef** – A valid LinkRef.

**Return values**

- **aErrNone** – the call completed successfully, a subsequent call to aLink\_GetStatus should return the current state of the link.

- **aErrParam** – No valid LinkRef provided.

**Returns**

Function returns aErr values.

*linkStatus* **aLink\_GetStatus** (const *aLinkRef* linkRef)

Return the current status of the BrainStem link.

Return the current status of the BrainStem link.

**Parameters**

**linkRef** – A valid LinkRef.

**Returns**

*linkStatus* See the possible linkStatus values.

*aPacket* \***aLink\_GetPacket** (const *aLinkRef* linkRef)

Return the first packet in the Link incoming FIFO.

Return the first packet in the Link incoming FIFO. This call is non blocking, and will return immediately.

**Parameters**

**linkRef** – A valid LinkRef.

**Returns**

*aPacket* Returns a BrainStem packet on success or NULL.

*aPacket* \***aLink\_AwaitPacket** (const *aLinkRef* linkRef, const unsigned long msTimeout)

Return the first packet in the Link incoming FIFO.

Return the first packet in the Link incoming FIFO. This call blocks waiting for msTimeout milliseconds.

**Parameters**

- **linkRef** – A valid LinkRef.
- **msTimeout** – The maximum amount of time in milliseconds to wait for a packet.

**Returns**

*aPacket* Returns a BrainStem packet on success or NULL.

*aPacket* \***aLink\_GetFirst** (const *aLinkRef* linkRef, aPacketMatchPacketProc proc, const void \*vpRef)

Return the first packet matched by proc in the Link incoming FIFO.

Return the first packet matched by proc in the Link incoming FIFO. This call is non blocking and returns immediately.

**Parameters**

- **linkRef** – A valid LinkRef.
- **proc** – The callback used for determining a matching packet.
- **vpRef** – A resource passed to the callback proc.

**Returns**

*aPacket* Returns the first packet that is matched by proc or NULL.

*aPacket* \***aLink\_AwaitFirst** (const *aLinkRef* linkRef, aPacketMatchPacketProc proc, const void \*vpRef, const unsigned long msTimeout)

Return the first packet matched by proc in the Link incoming FIFO.

Return the first packet matched by proc in the Link incoming FIFO. This call blocks for up to msTimeout milliseconds waiting for a matching packet.

**Parameters**

- **linkRef** – A valid LinkRef.
- **proc** – The callback used for determining a matching packet.
- **vpRef** – A resource passed to the callback proc.
- **msTimeout** – The maximum amount of time in milliseconds to wait for a matching packet.

**Returns**

*aPacket* Returns the first packet that is matched by proc or NULL.

size\_t **aLink\_DrainPackets** (const *aLinkRef* linkRef, aPacketMatchPacketProc proc, const void \*vpRef)

Drain all matching packets from the incoming FIFO.

Drain all matching packets from the incoming FIFO. This call does not block.

**Parameters**

- **linkRef** – A valid LinkRef.
- **proc** – The callback used for determining a matching packet.
- **vpRef** – A resource passed to the callback proc.

**Returns**

*aPacket* Returns the first packet that is matched by proc or NULL.

aErr **aLink\_PutPacket** (const *aLinkRef* linkRef, const *aPacket* \*packet)

Put a packet into the outgoingBackend link FIFO.

Put a packet into the outgoingBackend link FIFO.

**Parameters**

- **linkRef** – A valid LinkRef.
- **packet** – A BrainStem packet.

**Return values**

- **aErrNone** – Call successfully added the packet.
- **aErrParam** – Invalid LinkRef or packet.
- **aErrResource** – Unable to create memory for packet in FIFO.

**Returns**

Function returns aErr values.

### 3.4.6 aMutex.h

**group aMutex**

Platform Independent Synchronization Primitive.

*aMutex.h* Provides a platform independent synchronization mechanism. The link interface and the packet fifos both use this interface for synchronization between threads. Includes facilities for creating, locking and unlocking mutex primitives.

typedef void \***aMutexRef**

Typedef *aMutexRef* Opaque pointer to cross platform Mutex.

*aMutexRef* **aMutex\_Create** (const char \*name)

Create a Mutex.

Creates a Mutex element and uses the character array as the name of the mutex.

#### Returns

aMutexRef on success or NULL on failure.

const char \***aMutex\_Identifier** (*aMutexRef* mutex)

Mutex Identifier.

Gets the character array that represents the mutex' name.

#### Returns

A const null terminated character array. This call does not copy the character array, only presents it for use.

*aErr* **aMutex\_Destroy** (*aMutexRef* \*mutex)

Mutex Destroy.

Safely destroys a MutexRef, and frees its associated memory. Free should not be called on a MutexRef directly, and all Mutexs created with aMutex\_Create must use aMutex\_Destroy to free associated resources properly.

#### Parameters

**mutex** -- Valid MutexRef

#### Return values

- **aErrNone** -- If the Destruction was successful.
- **aErrParam** -- If the MutexRef was invalid.

#### Returns

Function returns aErr values.

*aErr* **aMutex\_Lock** (*aMutexRef* mutex)

Mutex Lock.

Blocking attempt to Lock the mutex. The call will not return until, the requesting thread gains control of the mutex, and successfully locks it or some unrecoverable error occurred.

#### Return values

- **aErrNone** -- Successfully aquired the lock.
- **aErrParam** -- If the MutexRef was invalid.

#### Returns

Function returns aErr values.

#### Returns

aErrDuplicate - If a specific error occurred locking the mutex.

*aErr* **aMutex\_TryLock** (*aMutexRef* mutex)

Mutex TryLock.

Non Blocking attempt to Lock the mutex. The call will return immediately with aErrBusy if another process or thread owns the lock.

**Return values**

- **aErrNone** – - Successfully aquired the lock.
- **aErrParam** – - If the MutexRef was invalid.
- **aErrBusy** – - If the lock was already in use.

**Returns**

Function returns aErr values.

*aErr* **aMutex\_Unlock** (*aMutexRef* mutex)

Mutex Unlock.

Relenquish the lock on the mutex.

**Return values**

- **aErrNone** – - Successfully unlocked mutex.
- **aErrParam** – - If the MutexRef was invalid.
- **aErrPermission** – - If the lock is owned by another thread.

**Returns**

Function returns aErr values.

### 3.4.7 aPacket.h

*group* **aPacket**

BrainStem Packet.

*aPacket.h* Provides an interface for creating and destroying BrainStem Protocol packets.

const uint16\_t **VALIDPACKET**

Const value used to check packet validity.

struct **aPacket**

Struct for BrainStem packets.

the check member is for checking the validity of the packet structure in memory. Current size is used during link stream processing. Address, dataSize and data fulfill the requirements of the BrainStem protocol.

bool **aVALIDPACKET** (const *aPacket* \*packet)

Check packet pointer for validity.

Checks to make sure a packet was allocated using aPacket\_Create.

**Parameters**

**packet** – - valid packet pointer.

**Returns**

bool - True for valid false otherwise.



## aPacket Functions

*aPacket* \*aPacket\_Create (void)

Create a BrainStem packet.

Create a BrainStem packet.

### Returns

*aPacket* - Pointer or NULL on error.

*aPacket* \*aPacket\_CreateWithData (const uint8\_t address, const uint8\_t dataLength, const uint8\_t \*data)

Create a BrainStem packet, containing the given data.

Create a BrainStem packet with data.

### Parameters

- **address** - - Module address of the BrainStem module.
- **dataLength** - - The length of the data array.
- **data** - - Pointer to the beginning of the packet data.

### Returns

*aPacket* - Pointer or NULL on error.

*aErr* aPacket\_Reset (*aPacket* \*packet)

Reset an existing packet.

Zero out any data the packet contains.

### Return values

- **aErrNone** - - If the reset was successful.
- **aErrParam** - - If the packet is not valid.

### Returns

Function returns aErr values.

*aErr* aPacket\_AddByte (*aPacket* \*packet, const uint8\_t byte)

Accumulate a Byte into a packet.

A packet can be constructed byte by byte. the first byte added will be the BrainStem module address, the second byte the data length, and subsequent bytes will be data payload. This call will fail if more than dataLength bytes are added, or if address is an invalid module address (i.e. an odd number).

### Return values

- **aErrNone** - - Adding the byte was successful.
- **aErrParam** - - The packet was invalid.
- **aErrPacket** - - The byte added violates the BrainStem protocol.

### Returns

Function returns aErr values.

bool aPacket\_IsComplete (const *aPacket* \*packet)

Determine whether a packet is complete.

A packet can be constructed byte by byte. This call determines whether such a packet has been completed. It checks that dataSize is equal to the currentSize minus the Address and dataSize bytes.

**Returns**

bool - True if complete false if not complete.

*aErr* **aPacket\_Destroy** (*aPacket* \*\*packet)

Destroy a BrainStem packet.

Safely destroy a brainstem packet and deallocate the associated resources.

**Parameters**

**packet** -- A pointer to a pointer of a valid packet. The packet pointer will be set to NULL on successful destruction of the packet.

**Return values**

- **aErrNone** -- The packet was successfully destroyed.
- **aErrParam** -- The packetRef is invalid.

**Returns**

Function returns aErr values.

### 3.4.8 aProtocoldefs.h

*group* **aProtocoldefs**

BrainStem Protocol Definitions.

*aProtocoldefs.h* Provides protocol and BrainStem specific defines for entities, communication, and protocol specifics.

**aBRAINSTEM\_MAXPACKETBYTES** 28

**8 Bytes** - Packet protocol payload maximum.

*group* **UEI\_Defines**

UEI and Command support for C/C++ and Reflex languages.

**Defines**

**ueiSPECIFIER\_INDEX\_MASK** 0x1F

**0x1F** - Mask bits for Index on index byte.

**ueiSPECIFIER\_RETURN\_MASK** 0xE0

**0xE0** - Mask bits for Return value on index byte.

**ueiSPECIFIER\_RETURN\_HOST** 0x20

**1 << 5** - Specifier Bit for UEI response to host.

**ueiSPECIFIER\_RETURN\_I2C** 0x40

**2 << 5** - Specifier Bit for UEI response to Module over I2C.

**ueiSPECIFIER\_RETURN\_VM** 0x60

**3 << 5** - Specifier Bit for UEI response to VM on module.

**ueiREPLY\_ERROR** 0x80

**1 << 7** - Error flag on response in index byte.

**ueiREPLY\_STREAM** 0x40

**1 << 6** - Stream flag on response in index byte.

**ueiOPTION\_GET** 0x40

**0x40** - Option byte code for UEI Get request.

**ueiOPTION\_VAL** 0x00

**0x00** - Option byte code for UEI Val response.

**ueiOPTION\_SET** 0x80

**0x80** - Option byte code for UEI Set request.

**ueiOPTION\_ACK** 0xC0

**0xC0** - Option byte code for UEI Ack response.

**ueiOPTION\_MASK** 0x3F

**0x3F** - Mask for getting command option from option byte.

**ueiOPTION\_OP\_MASK** 0xC0

**0xC0** - Mask for getting Operation Get/Set/Val/Ack

**ueiBYTES\_CONTINUE** 0x80

**ueiBYTES\_CONTINUE\_MASK** 0x7F

## Analog Entity

*group* **cmdANALOG\_Defines**

Analog Command defines.

### Defines

**cmdANALOG** 30

**30** - Analog command code.

*group* **cmdANALOG\_Command\_Options**

## Defines

**analogConfiguration 1**  
1 - Analog Configuration Option Code

**analogConfigurationInput 0**  
0 - Input configuration

**analogConfigurationOutput 1**  
1 - Output configuration

**analogConfigurationHiZ 2**  
2 - High Impedance configuration

**analogValue 2**  
2 - Analog Value Option Code

**analogVoltage 3**  
3 - Analog Voltage Option Code

**analogBulkCaptureSampleRate 4**  
4 - Analog Bulk Capture Sample Rate Option Code

**analog\_Hz\_Minimum 7000**  
7000 - Minimum hertz sample rate

**analog\_Hz\_Maximum 200000**  
200000 - Maximum hertz sample rate

**analogBulkCaptureNumberOfSamples 5**  
5 - Bulk Capture number of samples Option Code

**analogBulkCapture 6**  
6 - Bulk Capture Option Code

**analogBulkCaptureState 7**  
7 - Bulk Capture State Option Code

**bulkCaptureIdle 0**  
0 - Idle state

**bulkCapturePending 1**  
1 - Pending state

**bulkCaptureFinished 2**  
2 - Finished state

**bulkCaptureError 3**

**3** - Error state

**analogRange 8**

**8** - Analog Range Option Code

**analogRange\_P0V064N0V064 0**

**0** - +/- 64mV range

**analogRange\_P0V64N0V64 1**

**1** - +/- 640mV range

**analogRange\_P0V128N0V128 2**

**2** - +/- 128mV range

**analogRange\_P1V28N1V28 3**

**3** - +/- 1.28V range

**analogRange\_P1V28N0V0 4**

**4** - 0-1.28V range

**analogRange\_P0V256N0V256 5**

**5** - +/- 256mV range

**analogRange\_P2V56N2V56 6**

**6** - +/- 2.56V range

**analogRange\_P2V56N0V0 7**

**7** - 0-2.56V range

**analogRange\_P0V512N0V512 8**

**8** - +/- 512mV range

**analogRange\_P5V12N5V12 9**

**9** - +/- 5.12V range

**analogRange\_P5V12N0V0 10**

**10** - 0-5.12V range

**analogRange\_P1V024N1V024 11**

**11** - +/- 1.024V range

**analogRange\_P10V24N10V24 12**

**12** - +/- 10.24V range

**analogRange\_P10V24N0V0** 13

13 - 0-10.24V range

**analogRange\_P2V048N0V0** 14

14 - 0-2.048V range

**analogRange\_P4V096N0V0** 15

15 - 0-4.096V range

**analogEnable** 9

9 - Analog Enable Option Code

**analogNumberOfOptions** 10

10 - Number of Options for analog, always last entry

## App Entity

*group* **cmdAPP\_Defines**

App Command defines.

### Defines

**cmdAPP** 5

5 - App command code.

*group* **cmdAPP\_Command\_Options**

### Defines

**appExecute** 1

1 - Execute Option Code

**appReturn** 2

2 - Return Option Code

## Capacity Entity

*group* **cmdCAPACITY\_Defines**

Capacity Command defines.

### Defines

**cmdCAPACITY 73**

**73** - Capacity command code.

*group* **cmdCAPACITY\_Command\_Options**

### Defines

**capacityUEI 1**

**1** - UEI Option Code

**capacitySubClassSize 3**

**3** - SubClass size Option Code

**capacityClassQuantity 4**

**4** - Class Quantity Option Code

**capacitySubClassQuantity 5**

**5** - SubClass Quantity Option Code

**capacityEntityGroup 6**

**6** - Entity Group Option Code

**capacityBuild 255**

**255** - Build Option Code

## Clock Entity

*group* **cmdCLOCK\_Defines**

Clock Command defines.

## Defines

`cmdCLOCK 83`

**83** - Clock command code.

*group* `cmdCLOCK_Command_Options`

## Defines

`clockYear 1`

**1** - Year Option Code

`clockMonth 2`

**2** - Month Option Code

`clockDay 3`

**3** - Day Option Code

`clockHour 4`

**4** - Hour Option Code

`clockMinute 5`

**5** - Minute Option Code

`clockSecond 6`

**6** - Second Option Code

`clockNumberOfOptions 7`

**7** - Number of Options for clock, always last entry

## Digital Entity

*group* `cmdDIGITAL_Defines`

Digital Command defines.

## Defines

`cmdDIGITAL 31`

**31** - Digital command code.

*group* `cmdDIGITAL_Command_Options`



## Defines

**digitalConfiguration 1**

**1** - Digital configuration Option Code

**digitalConfigurationInput 0x00**

**0x00** - Input Configuration

**digitalConfigurationOutput 0x01**

**0x01** - Output Configuration

**digitalConfigurationRCServoInput 0x02**

**0x02** - RCServo Input Configuration

**digitalConfigurationRCServoOutput 0x03**

**0x03** - RCServo Output Configuration

**digitalConfigurationHiZ 0x04**

**0x04** - High Impedance Configuration

**digitalConfigurationInputPullUp 0x00**

**0x00** - Input Configuration with pull-up

**digitalConfigurationInputNoPull 0x04**

**0x04** - Input Configuration without pull-up/pull-down

**digitalConfigurationInputPullDown 0x05**

**0x05** - Input Configuration with pull-down

**digitalConfigurationSignalOutput 0x06**

**0x06** - Signal Output Configuration

**digitalConfigurationSignalInput 0x07**

**0x07** - Signal Input Configuration

**digitalConfigurationSignalCounterInput 0x08**

**0x08** - Signal Input Counter Configuration

**digitalConfigurationLinkInput 0x09**

**0x09** - Input from a linked digital channel

**digitalConfigurationLinkOutput 0x0A**

**0x0A** - Output to a linked digital channel

**digitalState 2**

**2** - State Option Code

**digitalStateAll 3**

3 - Full State Option Code

**digitalTimeDelay 4**

4 - Time Delay Option Code

**digitalValue 5**

5 - Value to set the pin to

**digitalLinkChannel 6**

6 - Link channel for linking digital entities

**digitalNumberOfOptions 7**

7 - Number of Options for digital, always last entry

## Equalizer Entity

*group* **cmdEQUALIZER\_Defines**

Equalizer Command defines.

### Defines

**cmdEQUALIZER 15**

15 - Equalizer command code.

*group* **cmdEQUALIZER\_Command\_Options**

### Defines

**equalizerReceiverConfig 1**

1 - Receiver Configuration Option Code

**equalizerTransmitterConfig 2**

2 - Transmitter (Driver) Configuration Option Code

**equalizerManualConfig 3**

3 - Manual Configuration Option Code

**equalizerNumberOfOptions 4**

4 - Number of Options for equalizer, always last entry

*group* **cmdEQUALIZER\_Command\_Constants**

## Defines

**equalizer2p0 0**  
Equalizer Index for USB2.0.

**equalizer3p0 1**  
Equalizer Index for USB3.0.

## Ethernet Entity

*group* **cmdETHERNET\_Defines**  
Ethernet Command defines.

## Defines

**cmdETHERNET 39**  
**39** - Ethernet command code.

*group* **cmdETHERNET\_Command\_Options**

## Defines

**ethernetEnabled 1**  
**1** - Enabled

**ethernetNetworkConfiguration 2**  
**2** - Network IP Assignment Configuration

**ethernetConfigurationNone 0**  
**0** - Disable IP Assignment Option Code

**ethernetConfigurationStatic 1**  
**1** - Static IP Address Option Code

**ethernetConfigurationDhcp 2**  
**2** - DHCP Address Option Code

**ethernetStaticIPv4Address 3**  
**3** - Static IP Address

**ethernetStaticIPv4Netmask 4**  
**4** - Static IP Netmask

**ethernetStaticIPv4Gateway** 5  
5 - Static IP Gateway

**ethernetIPv4Address** 6  
6 - Current IP Address

**ethernetIPv4Netmask** 7  
7 - Current IP Netmask

**ethernetIPv4Gateway** 8  
8 - Current IP Gateway

**ethernetStaticIPv4DNSAddress** 9  
9 - Static DNS Address

**ethernetIPv4DNSAddress** 10  
10 - Current DNS Address

**ethernetHostname** 11  
11 - Hostname

**ethernetMACAddress** 12  
12 - MAC Address

**ethernetInterfacePort** 13  
13 - Port number of TCPIP Interface

**ethernetInterfacePort\_RestServer\_HTTP** 0  
0 - REST Service (HTTP) Port

**ethernetInterfacePort\_RestServer\_HTTPS** 1  
1 - REST Service (HTTP) Port

**ethernetInterfacePort\_BrainStem\_TCP** 2  
2 - BrainStem TCPIP Transport Port

**ethernetInterfacePort\_BrainStem\_DiscoveryRequest** 3  
3 - BrainStem Multicast Discovery Request Port

**ethernetInterfacePort\_BrainStem\_DiscoveryReply** 4  
4 - BrainStem Multicast Discovery Reply Port

**ethernetInterfacePort\_Max** 5  
5 - Number of options for ethernetInterfacePort

**ethernetNumberOfOptions** 14

14 - Number of Options for ethernet, always last entry

## General Definitions

*group* **General\_Defines**

### Defines

**cmdDEBUG** 23

Debug Command.

**cmdNOTIFY** 24

Notify Command.

**cmdLAST** 96

Maximum Command.

## HDBaseT Entity

*group* **cmdHDBASET\_Defines**

HDBaseT Command defines.

### Defines

**cmdHDBASET** 41

41 - HDBaseT command code.

*group* **cmdHDBASET\_Command\_Options**

### Defines

**hdbasetSerialNumber** 1

1 - Serial Number Option Code

**hdbasetFirmwareVersion** 2

2 - Firmware Version Option Code

**hdbasetState** 3

3 - State Option Code

**hdbasetState\_devicePresent\_Bit 0**

**0** - Device Present Bit

**hdbasetState\_linkUp\_Bit 1**

**1** - Link Up Bit

**hdbasetState\_linkRole\_Offset 2**

**2** - Link Role Offset

**hdbasetState\_linkRole\_Mask 0x3**

**0x3** - Link Role Mask

**hdbasetState\_linkRole\_Unknown 0**

**0** - Unknown Link Role

**hdbasetState\_linkRole\_Leader 1**

**1** - Leader/Master Link Role

**hdbasetState\_linkRole\_Follower 2**

**2** - Follower/Slave Link Role

**hdbasetCableLength 4**

**4** - Cable Length Option Code

**hdbasetMSEA 5**

**5** - Mean Squared Error Pair A Option Code

**hdbasetMSEB 6**

**6** - Mean Squared Error Pair B Option Code

**hdbasetRetransmissionRate 7**

**7** - Retransmission Rate Option Code

**hdbasetLinkUtilization 8**

**8** - Link Utilization Option Code

**hdbasetEncodingState 9**

**9** - HDBaseT Encoding State Option Code

**hdbasetEncodingState\_Unknown 0**

**0** - Unknown

**hdbasetEncodingState\_PAM16 1**

**1** - PAM16

**hdbasetEncodingState\_PAM8** 2

2 - PAM8

**hdbasetEncodingState\_PAM4** 3

3 - PAM4

**hdbasetUSB2DeviceTree** 10

10 - USB2 Device Tree Option Code

**hdbasetUSB3DeviceTree** 11

11 - USB3 Device Tree Option Code

**hdbasetLinkRole** 12

12 - Link Role Option Code

**hdbasetLinkRole\_AutoDetect** 0

0 - Auto-Detected Link Role

**hdbasetLinkRole\_Leader** 1

1 - Leader/Master Link Role

**hdbasetLinkRole\_Follower** 2

2 - Follower/Slave Link Role

**hdbasetNumberOfOptions** 13

13 - Number of Options for HDBaseT, always last entry

## Heartbeat Entity

*group* **cmdHB\_Defines**

Heartbeat Command defines.

### Defines

**cmdHB** 0

0 - Heartbeat command code.

*group* **cmdHB\_Command\_Constants**

## Defines

`val_HB_S2H_UP` 0

`val_HB_S2H_DOWN` 1

`val_HB_H2S_UP` 2

`val_HB_H2S_DOWN` 3

`val_HB_M2R_UP` 4

`val_HB_M2R_DOWN` 5

## I2C Entity

*group* `cmdI2C_Defines`  
I2C Command defines.

## Defines

`cmdI2C` 8  
8 - I2C command code.

*group* `cmdI2C_Command_Options`

## Defines

`i2cSetPullup` 1  
1 - Set Pullup Option Code

*group* `cmdI2C_Command_Constants`

## Defines

`i2cDefaultSpeed` 0  
Default I2C Speed Setting.

`i2cSpeed_100Khz` 1  
100kHz I2C Speed Setting



**i2cSpeed\_400Khz** 2  
400kHz I2C Speed Setting

**i2cSpeed\_1000Khz** 3  
1000kHz I2C Speed Setting

**bitI2CError** 0x80  
Bit I2C error code.

**bitI2CAck** 0x40  
Bit I2C ack code.

## Mux Entity

*group* **cmdMUX\_Defines**  
Mux Command defines.

### Defines

**cmdMUX** 6  
6 - Mux command code.

*group* **cmdMUX\_Command\_Options**

### Defines

**muxEnable** 1  
1 - Channel Enable Option Code

**muxChannel** 2  
2 - Channel Select Option Code

**muxVoltage** 3  
3 - Channel Voltage Measurement Option Code

**muxConfig** 4  
4 - Mux Mode Configuration Option Code

**muxConfig\_default** 0  
0 - Default (Manual)

**muxConfig\_splitMode** 1  
1 - Split Mode

`muxConfig_channelpriority` 2

2 - Channel Priority

`muxSplit` 5

5 - Split Mode Configuration Option Code

`muxNumberOfOptions` 6

6 - Number of Options for mux, always last entry

## POE Entity

*group* `cmdPOE_Defines`

POE Command defines.

### Defines

`cmdPOE` 40

40 - POE command code.

*group* `cmdPOE_Command_Options`

### Defines

`poePowerMode` 1

1 - Power Mode Option Code

`poePowerMode_Off` 0

`poePowerMode_PSE` 1

`poePowerMode_PD` 2

`poePowerMode_Auto` 3

`poePowerState` 2

2 - Power State Option Code

`poePowerState_Off` 0

`poePowerState_PSE` 1

poePowerState\_PD 2

poePairEnabled 3

3 - Pair Enabled Option Code

poePairSourcingClass 4

4 - Pair Sourcing Class Option Code

poePairSourcingClass\_Unknown 0

poePairSourcingClass\_0 1

poePairSourcingClass\_1 2

poePairSourcingClass\_2 3

poePairSourcingClass\_3 4

poePairSourcingClass\_4 5

poePairSourcingClass\_4\_PlusType1Limited 6

poePairSourcingClass\_5\_4PairSingleSignature 7

poePairSourcingClass\_5\_4PairDualSignature 8

poePairSourcingClass\_6\_4PairSingleSignature 9

poePairSourcingClass\_7\_4PairSingleSignature 10

poePairSourcingClass\_8\_4PairSingleSignature 11

poePairSourcingClass\_Mismatch 12

poePairSourcingClass\_OverCurrent 13

poePairRequestedClass 5

5 - Pair Requested Class Option Code

poePairRequestedClass\_Unknown 0

poePairRequestedClass\_0 1

poePairRequestedClass\_1 2

poePairRequestedClass\_2 3

poePairRequestedClass\_3 4

poePairRequestedClass\_4 5

poePairRequestedClass\_4\_PlusType1Limited 6

poePairRequestedClass\_5\_4PairSingleSignature 7

poePairRequestedClass\_5\_4PairDualSignature 8

poePairRequestedClass\_6\_4PairSingleSignature 9

poePairRequestedClass\_7\_4PairSingleSignature 10

poePairRequestedClass\_8\_4PairSingleSignature 11

poePairRequestedClass\_Mismatch 12

poePairRequestedClass\_OverCurrent 13

poePairDiscoveredClass 6

6 - Pair Discovered Class Option Code

poePairDiscoveredClass\_Unknown 0

poePairDiscoveredClass\_0 1

poePairDiscoveredClass\_1 2

poePairDiscoveredClass\_2 3

poePairDiscoveredClass\_3 4

poePairDiscoveredClass\_4 5

poePairDiscoveredClass\_4\_PlusType1Limited 6

poePairDiscoveredClass\_5\_4PairSingleSignature 7

poePairDiscoveredClass\_5\_4PairDualSignature 8

poePairDiscoveredClass\_6\_4PairSingleSignature 9

poePairDiscoveredClass\_7\_4PairSingleSignature 10

poePairDiscoveredClass\_8\_4PairSingleSignature 11

poePairDiscoveredClass\_Mismatch 12

poePairDiscoveredClass\_OverCurrent 13

poePairDetectionStatus 7  
7 - Pair Detection Status Option Code

poePairDetectionStatus\_Unknown 0

poePairDetectionStatus\_Short\_Circuit 1

poePairDetectionStatus\_Open\_Circuit 2

poePairDetectionStatus\_Low\_Resistance 3

poePairDetectionStatus\_High\_Resistance 4

poePairDetectionStatus\_Valid 5

poePairDetectionStatus\_Switch\_Failure 6

poePairVoltage 8  
8 - Pair Voltage Option Code

poePairCurrent 9  
9 - Pair Current Option Code

poePairPower 10  
10 - Pair Power Option Code

poeTotalPower 11  
11 - Combined Pair Power Option Code

poePairAccumulatedPower 12  
12 - Pair Accumulated Power Option Code

**poeTotalAccumulatedPower** 13  
13 - Combined Pair Accumulated Power Option Code

**poePairResistance** 14  
14 - Pair Resistance Option Code

**poePairCapacitance** 15  
15 - Pair Capacitance Option Code

**poeNumberOfOptions** 16  
16 - Number of Options for POE, always last entry

## Pointer Entity

*group* **cmdPOINTER\_Defines**  
Pointer Command defines.

### Defines

**cmdPOINTER** 7  
7 - Pointer command code.

*group* **cmdPOINTER\_Command\_Options**

### Defines

**pointerOffset** 1  
1 - Offset Option Code

**pointerMode** 2  
2 - Mode Option Code

**pointerModeStatic** 0  
0 - Static Mode

**pointerModeIncrement** 1  
1 - Increment Mode

**pointerModeDefault** 0  
0 - Default Mode

**pointerTransferStore** 3  
3 - Set Transfer Store Option Code

**pointerChar** 4

4 - Char Option Code

**pointerShort** 5

5 - Short Option Code

**pointerInt** 6

6 - Integer Option Code

**pointerTransferToStore** 7

7 - Transfer to Store Option Code

**pointerTransferFromStore** 8

8 - Transfer From Store Option Code

## Port Entity

*group* **cmdPORT\_Defines**

Port Command defines.

### Defines

**cmdPORT** 37

37 - Port command code.

*group* **cmdPORT\_Command\_Options**

### Defines

**portVbusVoltage** 1

1 - Vbus Voltage Option Code

**portVbusCurrent** 2

2 - Vbus Current Option Code

**portVconnVoltage** 3

3 - Vconn Voltage Option Code

**portVconnCurrent** 4

4 - Vconn Current Option Code

**portPortEnabled** 5

5 - Port Enabled Option Code

**portPowerEnabled 6**  
6 - Port Power Enabled Option Code

**portDataEnabled 7**  
7 - Port Data Enabled Option Code

**portDataHSEnabled 8**  
8 - Port HS Data Enabled Option Code

**portDataHS1Enabled 9**  
9 - Port HS1 Data Enabled Option Code

**portDataHS2Enabled 10**  
10 - Port HS2 Data Enabled Option Code

**portDataSSEnabled 11**  
11 - Port SS Data Enabled Option Code

**portDataSS1Enabled 12**  
12 - Port SS1 Data Enabled Option Code

**portDataSS2Enabled 13**  
13 - Port SS2 Data Enabled Option Code

**portCCEnabled 14**  
14 - CC Enabled Option Code

**portCC1Enabled 15**  
15 - CC1 Enabled Option Code

**portCC2Enabled 16**  
16 - CC2 Enabled Option Code

**portVconnEnabled 17**  
17 - Vconn Enabled Option Code

**portVconn1Enabled 18**  
18 - Vconn1 Enabled Option Code

**portVconn2Enabled 19**  
19 - Vconn2 Enabled Option Code

**portPortState 20**  
20 - Port State Option Code



`portPortState_powerEnabled_Bit 0`

0 - Power enable bit

`portPortState_HS1Enabled_Bit 1`

1 - USB 2.0 (HS) 1 side enable bit.

`portPortState_HS2Enabled_Bit 2`

2 - USB 2.0 (HS) 2 side enable bit

`portPortState_SS1Enabled_Bit 3`

3 - USB 3.0 (SS) 1 side enable bit

`portPortState_SS2Enabled_Bit 4`

4 - USB 3.0 (SS) 2 side enable bit

`portPortState_CC1Enabled_Bit 5`

5 - CC 1 enable bit

`portPortState_CC2Enabled_Bit 6`

6 - CC 2 enable bit

`portPortState_Vconn1Enabled_Bit 7`

7 - VConn 1 enable bit

`portPortState_Vconn2Enabled_Bit 8`

8 - VConn 2 enable bit

`portPortState_SBU1Enabled_Bit 9`

9 - SBU 1 enable bit

`portPortState_SBU2Enabled_Bit 10`

10 - SBU 2 enable bit

`portPortState_CC_Flipped_Bit 11`

11 - CC Flipped bit

`portPortState_HS_Flipped_Bit 12`

12 - HS Flipped bit

`portPortState_SS_Flipped_Bit 13`

13 - SS Flipped bit

`portPortState_SBU_Flipped_Bit 14`

14 - SBU Flipped bit

**portPortState\_KACEnabled\_Bit** 15

15 - KAC Enabled bit

**portErrors** 21

21 - Port Errors Option Code

**portCurrentLimit** 22

22 - Port Current Limit. Option Code

**portCurrentLimitMode** 23

23 - Port Current Limit Mode. Option Code

**portPowerLimit** 24

24 - Port Power Limit. Option Code

**portPowerLimitMode** 25

25 - Port Power Limit Mode. Option Code

**portAvailablePower** 26

26 - Port available power Option Code

**portName** 27

27 - Port Name Option Code

**portCCCurrentLimit** 28

28 - Port CC Current Limit Option Code

**portCCCurrentLimit\_None** 0

0 - None Current value

**portCCCurrentLimit\_Default** 1

1 - Default Current value (500/900mA)

**portCCCurrentLimit\_1p5** 2

2 - 1.5 Amp Current value

**portCCCurrentLimit\_3p0** 3

3 - 3.0 Amp Current value

**portPowerMode** 30

30 - Port Power mode Option Code

**portPowerMode\_none\_Value** 0

0 - None/Disabled

**portPowerMode\_sdp\_Value 1**  
 1 - Standard Downstream Port (SDP)

**portPowerMode\_cdp\_dcp\_Value 2**  
 2 - Charging Downstream Port (CDP) or Dedicated Charging Port (DCP)

**portPowerMode\_qc\_Value 3**  
 3 - Qualcomm Quick Charge (QC)

**portPowerMode\_pd\_Value 4**  
 4 - Power Delivery (PD)

**portPowerMode\_ps\_Value 5**  
 5 - Power Supply Mode

**portPowerMode\_usbc\_Value 6**  
 6 - USB-C Mode

**portDataRole 31**  
 31 - Port Data Role Option Code

**portDataRole\_Disabled\_Value 0**  
 0 - Role - Disabled

**portDataRole\_Upstream\_Value 1**  
 1 - Role - Upstream Port

**portDataRole\_Downstream\_Value 2**  
 2 - Role:Downstream Port

**portDataRole\_Control\_Value 3**  
 3 - Role:Control Port

**portDataSpeed 32**  
 32 - Port Data Speed Option Code

**portDataSpeed\_ls\_1p5M\_Bit 0**  
 0 - Speed - Low Speed (1.5Mbps) bit indicator

**portDataSpeed\_fs\_12M\_Bit 1**  
 1 - Speed - Full Speed (12Mbps) bit indicator

**portDataSpeed\_hs\_480M\_Bit 2**  
 2 - Speed - High Speed (480Mbps) bit indicator

`portDataSpeed_ss_5G_Bit 3`  
3 - Speed - Super Speed (5Gbps) bit indicator

`portDataSpeed_ss_10G_Bit 4`  
4 - Speed - Super Speed Plus (10Gbps) bit indicator

`portDataSpeed_Connected_2p0_Bit 6`  
6 - USB 2.0 Connected

`portDataSpeed_Connected_3p0_Bit 7`  
7 - USB 3.0 Connected

`portPortMode 33`  
33 - Port Mode Option Code

`portPortMode_powerEnabled_Bit 0`  
0 - Power enable bit

`portPortMode_HS1Enabled_Bit 1`  
1 - USB 2.0 (HS) 1 side enable bit.

`portPortMode_HS2Enabled_Bit 2`  
2 - USB 2.0 (HS) 2 side enable bit

`portPortMode_SS1Enabled_Bit 3`  
3 - USB 3.0 (SS) 1 side enable bit

`portPortMode_SS2Enabled_Bit 4`  
4 - USB 3.0 (SS) 2 side enable bit

`portPortMode_CC1Enabled_Bit 5`  
5 - CC 1 enable bit

`portPortMode_CC2Enabled_Bit 6`  
6 - CC 2 enable bit

`portPortMode_Vconn1Enabled_Bit 7`  
7 - VCONN 1 enable bit

`portPortMode_Vconn2Enabled_Bit 8`  
8 - VCONN 2 enable bit

`portPortMode_SBU1Enabled_Bit 9`  
9 - SBU 1 enable bit

`portPortMode_SBU2Enabled_Bit` 10

10 - SBU 2 enable bit

`portPortMode_HSFlipEnabled_Bit` 11

11 - HS Flipped bit

`portPortMode_SSFlipEnabled_Bit` 12

12 - SS Flipped bit

`portPortMode_CCFlipEnabled_Bit` 13

13 - CC Flipped bit

`portPortMode_SBUFlipEnabled_Bit` 14

14 - SBU Flipped bit

`portPortMode_KACEnabled_Bit` 15

15 - KAC Enabled bit

`portPortMode_portPowerMode_Offset` 16

16 - Port Power Mode offset within Port Mode

`portPortMode_portPowerMode_Mask` 0x7

0x7 - Port Power Mode offset (Pre offset shift)

`portPortMode_portPowerMode_none_Value` 0

0 - Port Power None/Disabled

`portPortMode_portPowerMode_sdp_Value` 1

1 - Port Power Standard Downstream Port (SDP)

`portPortMode_cdp_dcp_Value` 2

2 - Charging Downstream Port (CDP) or Dedicated Charging Port (DCP)

`portPortMode_portPowerMode_qc_Value` 3

3 - Port Power Qualcomm Quick Charge (QC)

`portPortMode_portPowerMode_pd_Value` 4

4 - Port Power Power Delivery (PD)

`portPortMode_portPowerMode_ps_Value` 5

5 - Port Power Power Supply Mode

`portPortMode_portPowerMode_usbc_Value` 6

6 - Port Power USB-C Mode

**portVoltageSetpoint** 34

**34** - Port Voltage Setpoint for VBUS Override Option Code

**portAllocatedPower** 35

**35** - Port Allocated Power Option Code

**portDataHSRoutingBehavior** 36

**36** - Port Change HighSpeed Data Signal Routing Behavior Option Code

**portDataHSRoutingBehavior\_FollowCC** 0

**0** - Auto Follow CC

**portDataHSRoutingBehavior\_Side1** 1

**1** - Side 1 Only

**portDataHSRoutingBehavior\_Side2** 2

**2** - Side 2 Only

**portDataHSRoutingBehavior\_Shorted** 3

**3** - Side 1 and 2 Shorted

**portDataSSRoutingBehavior** 37

**37** - Port Change SuperSpeed Data Signal Routing Behavior Option Code

**portDataSSRoutingBehavior\_FollowCC** 0

**0** - Auto Follow CC

**portDataSSRoutingBehavior\_Side1** 1

**1** - Side 1 Only

**portDataSSRoutingBehavior\_Side2** 2

**2** - Side 2 Only

**portVbusAccumulatedPower** 38

**38** - Vbus Accumulated Power Option Code

**portResetVbusAccumulatedPower** 39

**39** - Reset Vbus Accumulated power Option Code

**portVconnAccumulatedPower** 40

**40** - Vconn Accumulated Power Option Code

**portResetVconnAccumulatedPower** 41

**41** - Reset Vconn Accumulated power Option Code

**portHSBoost** 42

42 - Port USB 2.0 High Speed Boost Settings Option Code

**portHSBoost\_m5Percent** 0

0 - -5%

**portHSBoost\_Nominal** 1

1 - Nominal

**portHSBoost\_p5Percent** 2

2 - +5%

**portHSBoost\_p10Percent** 3

3 - +10%

**portHSBoost\_p15Percent** 4

4 - +15%

**portHSBoost\_p20Percent** 5

5 - +20%

**portHSBoost\_p25Percent** 6

6 - +25%

**portHSBoost\_p30Percent** 7

7 - +30%

**portResetEntityToFactoryDefaults** 44

44 - Port Reset to Factory Defaults Option Code

**portCC1State** 45

45 - Port CC1 Bias Option Code

**portCC1State\_None** 0

0 - None value

**portCC1State\_Invalid** 1

1 - Invalid value

**portCC1State\_RpDefault** 2

2 - Default (500/900/1500mA) Rp value

**portCC1State\_Rp1p5** 3

3 - 1.5 Amp Rp value

`portCC1State_Rp3p0` 4

4 - 3.0 Amp Rp value

`portCC1State_Rd` 5

5 - Rd value

`portCC1State_Ra` 6

6 - Ra value

`portCC1State_Managed` 7

7 - Managed by FW

`portCC1State_Unknown` 8

8 - Unknown

`portCC2State` 46

46 - Port CC2 State Option Code

`portCC2State_None` 0

0 - None value

`portCC2State_Invalid` 1

1 - Invalid value

`portCC2State_RpDefault` 2

2 - Default (500/900/1500mA) Rp value

`portCC2State_Rp1p5` 3

3 - 1.5 Amp Rp value

`portCC2State_Rp3p0` 4

4 - 3.0 Amp Rp value

`portCC2State_Rd` 5

5 - Rd value

`portCC2State_Ra` 6

6 - Ra value

`portCC2State_Managed` 7

7 - Managed by FW

`portCC2State_Unknown` 8

8 - Unknown



**portCC1Voltage** 47  
47 - CC1 get voltage Option Code

**portCC1Current** 48  
48 - CC1 get current Option Code

**portCC2Voltage** 49  
49 - CC2 get voltage Option Code

**portCC2Current** 50  
50 - CC2 get current Option Code

**portSBU1Voltage** 51  
51 - SBU1 get voltage Option Code

**portSBU2Voltage** 52  
52 - SBU2 get voltage Option Code

**portCC1AccumulatedPower** 53  
53 - CC1 Accumulated Power Option Code

**portCC2AccumulatedPower** 54  
54 - CC2 Accumulated Power Option Code

**portNumberOfOptions** 55  
55 - Number of Options for port, always last entry

## Power Delivery Entity

*group* **cmdPOWERDELIVERY\_Defines**  
Power Delivery Command defines.

### Defines

**cmdPOWERDELIVERY** 36  
36 - Power Delivery command code.

*group* **cmdPOWERDELIVERY\_Command\_Options**

## Defines

powerdeliveryPowerDataObject 1

powerdeliveryPowerDataObjectList 2

powerdeliveryPowerDataObjectEnabled 3

powerdeliveryPowerDataObjectEnabledList 4

powerdeliveryNumberOfPowerDataObjects 5

powerdeliveryRequestDataObject 6

powerdeliveryConnectionState 7

pdConnectionState\_None 0

pdConnectionState\_Source 1

pdConnectionState\_Sink 2

pdConnectionState\_PoweredCable 3

pdConnectionState\_PoweredCableWithSink 4

pdConnectionState\_AudioAccessory 5

pdConnectionState\_DebugAccessory 6

powerdeliveryLinkState 8

pdLinkState\_linkType\_Offset 0

pdLinkState\_linkType\_Mask 0x7

pdLinkState\_linkType\_None 0

pdLinkState\_linkType\_Legacy 1

pdLinkState\_linkType\_SPR 2

pdLinkState\_linkType\_EPR 3

pdLinkState\_connectionState\_Offset 4

pdLinkState\_connectionState\_Mask 0xF

pdLinkState\_connectionState\_None 0

pdLinkState\_connectionState\_Source 1

pdLinkState\_connectionState\_Sink 2

pdLinkState\_connectionState\_PoweredCable 3

pdLinkState\_connectionState\_PoweredCableWithSink 4

pdLinkState\_connectionState\_AudioAccessory 5

pdLinkState\_connectionState\_DebugAccessory 6

pdLinkState\_powerRole\_Offset 8

pdLinkState\_powerRole\_Mask 0x7

pdLinkState\_powerRole\_None 0

pdLinkState\_powerRole\_Source 1

pdLinkState\_powerRole\_Sink 2

pdLinkState\_dataRole\_Offset 12

pdLinkState\_dataRole\_Mask 0x7

pdLinkState\_dataRole\_None 0

pdLinkState\_dataRole\_DFP 1

pdLinkState\_dataRole\_UFP 2

pdLinkState\_vconnState\_Offset 16

pdLinkState\_vconnState\_Mask 0x7

pdLinkState\_vconnState\_Off 0

pdLinkState\_vconnState\_Source 1

pdLinkState\_vconnState\_NotSource 2

pdLinkState\_specRevision\_Offset 20

pdLinkState\_specRevision\_Mask 0x7

pdLinkState\_specRevision\_Unknown 0

pdLinkState\_specRevision\_1 1

pdLinkState\_specRevision\_2 2

pdLinkState\_specRevision\_3 3

powerdeliveryAttachTimeElapsed 9

powerdeliveryResetPowerDataObjectToDefault 15

powerdeliveryCableVoltageMax 16

pdCableVoltage\_Invalid 0

pdCableVoltage\_20VDC 1

pdCableVoltage\_30VDC 2

pdCableVoltage\_40VDC 3

pdCableVoltage\_50VDC 4

powerdeliveryCableCurrentMax 17

pdCableCurrent\_Invalid 0

pdCableCurrent\_3Amps 1

pdCableCurrent\_5Amps 2

powerdeliveryCableSpeedMax 18

pdCableSpeed\_Invalid 0

pdCableSpeed\_USB2p0 1

pdCableSpeed\_USB3p2\_Gen1 2

pdCableSpeed\_USB3p2\_USB4p0\_Gen2 3

pdCableSpeed\_USB4p0\_Gen3 4

pdCableSpeed\_USB4p0\_Gen4 5

powerdeliveryCableType 19

pdCableType\_Invalid 0

pdCableType\_Passive 1

pdCableType\_Active 2

powerdeliveryCableOrientation 20

pdCableOrientation\_Invalid 0

pdCableOrientation\_CC1 1

pdCableOrientation\_CC2 2

powerdeliveryPowerRoleCapabilities 21

pdPowerRoleCapabilities\_None 0

pdPowerRoleCapabilities\_Source 1

pdPowerRoleCapabilities\_Sink 2

pdPowerRoleCapabilities\_DualRole 3

powerdeliveryPowerRole 22

pdPowerRole\_None 0

pdPowerRole\_Source 1

pdPowerRole\_Sink 2

pdPowerRole\_SourceSink 3

powerdeliveryPowerRolePreferred 23

pdPowerRolePreferred\_None 0

pdPowerRolePreferred\_Source 1

pdPowerRolePreferred\_Sink 2

pdPowerRolePreferred\_FollowData 3

pdPowerRolePreferred\_Auto 4

powerdeliveryPeakCurrentConfiguration 24

powerdeliveryFastRoleSwapCurrent 25

powerdeliveryDataRoleCapabilities 26

pdDataRoleCapabilities\_None 0

pdDataRoleCapabilities\_DFP 1

pdDataRoleCapabilities\_UFP 2

pdDataRoleCapabilities\_DualRole 3

powerdeliveryOverride 41

pdOverrideCableCurrent 0

pdOverridePortPower 1

pdOverrideAutoDiscovery 2

powerdeliveryRequestCommand 42

pdRequestHardReset 0

pdRequestSoftReset 1

pdRequestDataReset 2

pdRequestPowerRoleSwap 3

pdRequestPowerFastRoleSwap 4

pdRequestDataRoleSwap 5

pdRequestVconnSwap 6

pdRequestSinkGoToMinimum 7

pdRequestRemoteSourcePowerDataObjects 8

pdRequestRemoteSinkPowerDataObjects 9

pdRequestRemoteSourceExtendedCapabilities 10

pdRequestRemoteSinkExtendedCapabilities 11

pdRequestStatus 12

pdRequestPPSStatus 13

pdRequestBatteryCapabilities 14

pdRequestBatteryStatus 15

pdRequestManufacturerInfoSop 16

pdRequestManufacturerInfoSopp 17

pdRequestManufacturerInfoSoppp 18

pdRequestDiscoverIdentitySop 19

pdRequestDiscoverIdentitySopp 20

pdRequestDiscoverIdentitySoppp 21

pdRequestRevision 22

pdRequestSourceInfo 23

pdRequestCountryCode 24

pdRequestCountryInfo 25

pdRequestRemoteSourceEPRCapabilities 26

pdRequestRemoteSinkEPRCapabilities 27

powerdeliveryRequestStatus 43

powerdeliveryFlagMode 44

pdFlagDualRoleData 1

pdFlagDualRolePower 2

pdFlagUnconstrainedPower 3

pdFlagSuspendPossible 4

pdFlagUSBComPossible 5

pdFlagUnchunkedMessageSupport 6

pdFlagHigherCapability 7

pdFlagCapabilityMismatch 8

pdFlagGivebackFlag 9

pdFlagLast 10



powerdeliveryLogEnable 45

powerdeliveryLogPacket 46

powerdeliveryLogEvent 47

pdEventNone 0

pdEventPacket 1

pdEventConnect 2

pdEventDisconnect 3

pdEventCableResetReceived 4

pdEventCableResetSent 5

pdEventHardResetReceived 6

pdEventHardResetSent 7

pdEventMessageTransmitFailed 8

pdEventMessageTransmitDiscarded 9

pdEventPDFunctionDisabled 10

pdEventVBUSEnabled 11

pdEventVBUSDisabled 12

pdEventVCONNEnabled 13

pdEventVCONNDisabled 14

pdEventRp1A5 15

pdEventRp3A0 16

pdEventBistEnter 17

`pdEventBistExit` 18

`pdEventInvalidPacket` 19

`pdEventLast` 20

`powerdeliveryVDM` 48

`powerdeliveryNumberOfOptions` 55

*group* `cmdPOWERDELIVERY_Command_Constants`

### Defines

`powerdeliveryPartnerLocal` 0

`powerdeliveryPartnerRemote` 1

`powerdeliveryPowerRoleDisabled` 0

`powerdeliveryPowerRoleSource` 1

`powerdeliveryPowerRoleSink` 2

`powerdeliveryPowerRoleSourceSink` 3

`powerDeliveryRequestStatus` 43

Backwards compatibility for `powerDeliveryRequestStatus`.

### Rail Entity

*group* `cmdRAIL_Defines`

Rail Command defines.

### Defines

`cmdRAIL` 32

**32** - Rail command code.

*group* `cmdRAIL_Command_Options`

## Defines

**railVoltage 1**

1 - Rail Voltage Option Code

**railCurrent 2**

2 - Rail Current Option Code

**railCurrentLimit 3**

3 - Rail Current limit Option Code

**railTemperature 4**

4 - Rail Temperature Option Code

**railEnable 5**

5 - Rail Enable Option Code

**railValue 6**

6 - Rail Value Option Code

**railKelvinSensingEnable 7**

7 - Rail Kelvin sensing Mode Option Code

**kelvinSensingOff\_Value 0**

0 - Kelvin Sensing off mode for Kelvin Sensing mode

**kelvinSensingOn\_Value 1**

1 - Kelvin Sensing on mode for Kelvin Sensing mode

**railKelvinSensingState 8**

8 - Kelving Sensing state Option Code

**railOperationalMode 9**

9 - Operational Mode Option Code

**railOperationalMode\_HardwareConfiguration\_Offset 0**

0 - Operational Mode hardware configuration offset region (bits[0:3])

**railOperationalModeAuto\_Value 0**

0 - Auto operational mode for operational mode

**railOperationalModeLinear\_Value 1**

1 - Linear mode for operational mode

**railOperationalModeSwitcher\_Value 2**

2 - Switcher mode for operational mode

**railOperationalModeSwitcherLinear\_Value 3**  
3 - Switcher Linear mode for operational mode

**railOperationalMode\_Mode\_Offset 4**  
4 - Operational Mode offset region (bits[4:7])

**railOperationalModeConstantCurrent\_Value 0**  
0 - Constant Current mode for operational mode

**railOperationalModeConstantVoltage\_Value 1**  
1 - Constant Voltage mode for operational mode

**railOperationalModeConstantPower\_Value 2**  
2 - Constant Power mode for operational mode

**railOperationalModeConstantResistance\_Value 3**  
3 - Constant Resistance mode for operational mode

**railOperationalModeFactoryReserved\_Value 0xF**  
0xF - Factory Reserved Operating Mode.

**DefaultOperationalRailMode\_Value 0**  
0 - Default operational mode for operational mode

**railOperationalState 10**  
10 - Operational state Option Code

**railOperationalState\_Initializing\_Bit 0**  
0 - Initializing bit for operational state

**railOperationalState\_Enabled\_Bit 1**  
1 - Enabled bit for operational state

**railOperationalState\_Fault\_Bit 2**  
2 - Fault bit for operational state

**railOperationalState\_HardwareConfiguration\_Offset 8**  
8 - Hardware Configuration region (bits[8-15]) for operational state.

**railOperationalStateLinear\_Value 0**  
0 - Linear state for operational state option mode.

**railOperationalStateSwitcher\_Value 1**  
1 - Switcher state for operational state option mode.

**railOperationalStateSwitcherLinear\_Value 2**  
2 - Switcher Linear state for operational state option mode.

**railOperationalStateOverVoltageFault\_Bit 16**  
16 - Over Voltage Fault bit for operational state option mode.

**railOperationalStateUnderVoltageFault\_Bit 17**  
17 - Under Voltage Fault bit for operational state option mode.

**railOperationalStateOverCurrentFault\_Bit 18**  
18 - Over Current Fault bit for operational state option mode.

**railOperationalStateOverPowerFault\_Bit 19**  
19 - Over Power Fault bit for operational state option mode.

**railOperationalStateReversePolarityFault\_Bit 20**  
20 - Reverse Polarity Fault bit for operational state option mode.

**railOperationalStateOverTemperatureFault\_Bit 21**  
21 - Over Temperature Fault bit for operational state option mode.

**railOperationalStateReverseCurrentFault\_Bit 22**  
22 - Reverse Current Fault bit for operational state option mode.

**railOperationalStateOperatingMode\_Offset 24**  
24 - Operating Mode region (bits[24:31]) for operational state.

**railOperationalStateConstantCurrent\_Value 0**  
0 - Constant Current mode for operational state

**railOperationalStateConstantVoltage\_Value 1**  
1 - Constant Voltage mode for operational state

**railOperationalStateConstantPower\_Value 2**  
2 - Constant Power mode for operational state option codes.

**railOperationalStateConstantResistance\_Value 3**  
3 - Constant Resistance mode for operational state

**railVoltageSetpoint 11**  
11 - Rail Setpoint Voltage option code

**railCurrentSetpoint 12**  
12 - Rail Setpoint Current Option Code

**railVoltageMinLimit** 13

13 - Rail Voltage min limit Option Code

**railVoltageMaxLimit** 14

14 - Rail Voltage max limit Option Code

**railPower** 15

15 - Rail power Option Code

**railPowerSetpoint** 16

16 - Rail Setpoint power Option Code

**railPowerLimit** 17

17 - Rail power limit Option Code

**railResistance** 18

18 - Rail resistance Option Code

**railResistanceSetpoint** 19

19 - Rail Setpoint resistance Option Code

**railClearFaults** 20

20 - Rail Clear Fault Codes. Option Code

**railNumberOfOptions** 21

21 - Number of Options for Rail, always last entry

*group* **cmdRAIL\_Command\_Constants**

## **Defines**

**railFactoryReserved** 62

Factory Reserved Code.

**railFactoryReserved2** 63

Factory Reserved Code.

## Relay Entity

*group* **cmdRELAY\_Defines**

Relay Command defines.

### Defines

**cmdRELAY** 34

**34** - Relay command code.

*group* **cmdRELAY\_Command\_Options**

### Defines

**relayEnable** 1

**1** - Enable Option Code

**relayVoltage** 2

**2** - Voltage Option Code

**relayNumberOfOptions** 3

**3** - Number of Options for relay, always last entry

## RCServo Entity

*group* **cmdSERVO\_Defines**

RCServo Command defines.

### Defines

**cmdSERVO** 13

**13** - RCServo command code.

*group* **cmdSERVO\_Command\_Options**

## Defines

**servoEnable** 1

1 - Enable Option Code

**servoPosition** 2

2 - Position Option Code

**servoReverse** 3

3 - Reverse Option Code

**servoNumberOfOptions** 4

4 - Number of Options for servo, always last entry

## Signal Entity

*group* **cmdSIGNAL\_Defines**

Signal Command defines.

## Defines

**cmdSIGNAL** 14

14 - Signal command code.

*group* **cmdSIGNAL\_Command\_Options**

## Defines

**signalEnable** 1

1 - Enable Option Code

**signalInvert** 2

2 - Inversion of Duty Cycle Option Code

**signalT3Time** 3

3 - Period Option Code

**signalT2Time** 4

4 - Active Time Option Code

**signalNumberOfOptions** 5

5 - Number of Options for signal, always last entry



## Slot Entity

*group* **cmdSLOT\_Defines**

Slot Command defines.

### Defines

**cmdSLOT 4**

4 - Slot command code.

*group* **cmdSLOT\_Command\_Options**

### Defines

**slotCapacity 1**

1 - Capacity Option Code

**slotSize 2**

2 - Size Option Code

**slotOpenRead 3**

3 - Open Read Only Option Code

**slotOpenWrite 4**

4 - Open Read Write Option Code

**slotSeek 5**

5 - Seek Option Code

**slotRead 6**

6 - Read Option Code

**slotWrite 7**

7 - Write Option Code

**slotClose 8**

8 - Close Option Code

**slotNumberOfOptions 9**

9 - Number of Options for slot, always last entry

*group* **cmdSLOT\_Command\_Constants**

## Defines

**bitSlotError** 0x80

Bit Slot Error.

## Store Entity

*group* **cmdSTORE\_Defines**

Store Command defines.

## Defines

**cmdSTORE** 77

77 - Store command code.

*group* **cmdSTORE\_Command\_Options**

## Defines

**storeSlotEnable** 1

1 - Slot Enable Option Code

**storeSlotDisable** 2

2 - Slot Disable Option Code

**storeSlotState** 3

3 - Slot State Option Code

**storeWriteSlot** 4

4 - Slot Write Option Code

**storeReadSlot** 5

5 - Slot Read Option Code

**storeCloseSlot** 6

6 - Slot Close Option Code

**storeLock** 7

7 - Slot Lock Option Code

**storeNumberOfOptions** 8

8 - Number of Options for store, always last entry

*group* **cmdSTORE\_Command\_Constants**

## Defines

**storeInternalStore** 0  
Internal Store Type.

**storeRAMStore** 1  
RAM Store Type.

**storeSDStore** 2  
SD Store Type.

**storeEEPROMStore** 3  
EEPROM Store Type.

**storeMaxStoreIndex** 3  
Maximum Store Type Index.

## Stream Entity

*group* **cmdSTREAM\_Defines**  
Stream Command defines.

## Defines

**cmdSTREAM** 93  
93 - Stream command code.

*group* **cmdSTREAM\_Command\_Options**

## Defines

**streamEnable** 1  
1 - Enable Stream Key Option Code

**streamDisable** 2  
2 - Disable Stream Key Option Code

**streamCapacity** 3  
3 - Stream Key Capacity Option Code

**streamNumberOfOptions** 4  
4 - Number of Options for stream, always last entry

## System Entity

*group* **cmdSYSTEM\_Defines**

System Command defines.

### Defines

**cmdSYSTEM 3**

**3** - System command code.

*group* **cmdSYSTEM\_Command\_Options**

### Defines

**systemModule 1**

**1** - Module address Option Code

**systemRouter 2**

**2** - Router address Option Code

**systemHBInterval 3**

**3** - Heartbeat interval Option Code

**systemLED 4**

**4** - User LED Option Code

**systemSleep 5**

**5** - Sleep Option Code

**systemBootSlot 6**

**6** - Boot Slot Option Code

**aSystemBootSlotNone 255**

**255** - Disable boot slot value for Boot Slot option.

**systemVersion 7**

**7** - Firmware Version Option Code

**systemModel 8**

**8** - Model Option Code

**systemSerialNumber 9**

**9** - Serial Number Option Code

**systemSave** 10  
10 - System save Option Code

**systemReset** 11  
11 - System reset Option Code

**systemInputVoltage** 12  
12 - Input voltage Option Code

**systemModuleHardwareOffset** 13  
13 - Module Offset Option Code

**systemModuleBaseAddress** 14  
14 - Module Base address Option Code

**systemModuleSoftwareOffset** 15  
15 - Module Software offset Option Code

**systemRouterAddressSetting** 16  
16 - Router address setting Option Code

**systemIPConfiguration** 17  
17 - IP configuration setting option code

**systemIPModeDHCP** 0  
0 - DHCP Configuration

**systemIPModeStatic** 1  
1 - Static Configuration

**systemIPModeDefault** 0  
0 - Default Configuration

**systemIPAddress** 18  
18 - IP address setting option code

**systemIPStaticAddressSetting** 19  
19 - Static IP address setting option code

**systemRouteToMe** 20  
20 - Route to me setting option code

**systemInputCurrent** 21  
21 - Input current Option Code

**systemUptime** 22  
22 - System uptime Option Code

**systemMaxTemperature** 23  
23 - System max temperature Option Code

**systemLogEvents** 24  
24 - System log events Option Code

**systemUnregulatedVoltage** 25  
25 - Unregulated System Voltage Option Code

**systemUnregulatedCurrent** 26  
26 - Unregulated System Current Option Code

**systemTemperature** 27  
27 - System temperature option code

**systemMinTemperature** 28  
28 - System min temperature option code

**systemInputPowerSource** 29  
29 - System input power source option code

**systemInputPowerBehavior** 30  
30 - System input power behavior option code

**systemInputPowerBehaviorConfig** 31  
31 - System input power behavior config option code

**systemName** 32  
32 - System name option code

**systemPowerLimit** 33  
33 - System power limit option code

**systemPowerLimitMax** 34  
34 - System power limit max option code

**systemPowerLimitState** 35  
35 - System power limit state option code

**systemResetEntityToFactoryDefaults** 36

**systemResetDeviceToFactoryDefaults** 37

**systemLinkInterface 38**

**38** - Setting the link interface for control Option Code

**systemLinkAuto 0**

**0** - System Link is automatically defined

**systemLinkUSBControl 1**

**1** - System Link through control port

**systemLinkUSBHub 2**

**2** - System Link through the Hub (upstream connection)

**systemLinkUSBA11 3**

**3** - System Link through the all available connections

**systemReserved 39**

**39** - Reserved Option Code for Acroname Internal Use Only Option Code

**systemHardwareVersion 40**

**40** - Hardware Version option code

**systemErrors 41**

**41** - System Error option code

**systemErrors\_ThermalProtection\_Bit 0**

**0** - Thermal Protection bit for operational Errors

**systemErrors\_OutputPowerProtection\_Bit 1**

**1** - Output Power Protection bit for operational Errors

**systemLEDMaxBrightness 42**

**42** - System LED Brightness option code

**systemBuild 43**

**43** - Firmware build option code

**systemProtocolFeatures 45**

**45** - Firmware protocol features Option Code

**systemProtocolFeatures\_pooledPackets\_Bit 31**

**31** - Defines bit if the protocol supports pooling of brainstem packets into a single USB frame.

**systemNumberOfOptions 46**

**46** - Number of Options for System, always last entry

## Temperature Entity

*group* **cmdTEMPERATURE\_Defines**  
Temperature Command defines.

### Defines

**cmdTEMPERATURE 33**  
**33** - Temperature command code.

*group* **cmdTEMPERATURE\_Command\_Options**

### Defines

**temperatureMicroCelsius 1**  
**1** - Temperature Value Option Code

**temperatureMinimumMicroCelsius 2**  
**2** - Minimum Recorded Temperature Option Code

**temperatureMaximumMicroCelsius 3**  
**3** - Maximum Recorded Temperature Option Code

**temperatureResetLoggedValues 4**  
**4** - Temperature Logged Value reset option code

**temperatureNumberOfOptions 5**  
**5** - Number of Options for temperature, always last entry

## Timer Entity

*group* **cmdTIMER\_Defines**  
Timer Command defines.

### Defines

**cmdTIMER 79**  
**79** - Timer command code.

*group* **cmdTIMER\_Command\_Options**



## Defines

**timerExpiration** 1

1 - Expiration Value Option Code

**timerMode** 2

2 - Mode Option Code

**timerModeSingle** 0

0 - Single Shot Mode

**timerModeRepeat** 1

1 - Repeated Mode

**DefaultTimerMode** 0

0 - Default Mode

**timerNumberOfOptions** 3

3 - Number of Options for timer, always last entry

## UART Entity

*group* **cmdUART\_Defines**

UART Command defines.

## Defines

**cmdUART** 35

35 - UART command code.

*group* **cmdUART\_Command\_Options**

## Defines

**uartEnable** 1

1 - Enable Option Code

**uartBaudRate** 2

2 - Baud Rate Option Code

**uartBaudRate\_Auto\_Value** 0

0 - Automatically Selected Baud Rate

**uartProtocol 3**  
3 - Protocol Option Code

**uartProtocol\_Undefined 0**  
0 - Not Yet Defined Protocol

**uartProtocol\_Extron\_Value 1**  
1 - Extron Responder (backward compatibility)

**uartProtocol\_ExtronResponder\_Value 1**  
1 - Extron Responder

**uartProtocol\_Brainstem\_Value 2**  
2 - Brainstem Transport

**uartProtocol\_ExtronInitiator\_Value 3**  
3 - Extron Initiator

**uartProtocol\_Reserved4\_Value 4**  
4 - Reserved

**uartProtocol\_Reserved5\_Value 5**  
5 - Reserved

**uartProtocol\_Loopback\_Value 6**  
6 - Loopback

**uartLinkChannel 4**  
4 - UART Linked Channel Option Code

**uartStopBits 5**  
5 - UART Stop Bits Option Code

**uartStopBits\_1\_Value 0**  
0 - 1 Stop Bit

**uartStopBits\_1p5\_Value 1**  
1 - 1.5 Stop Bits

**uartStopBits\_2\_Value 2**  
2 - 2 Stop Bits

**uartParity 6**  
6 - UART Parity Option Code

`uartParity_None_Value` 0  
0 - No Parity Bit

`uartParity_Odd_Value` 1  
1 - Odd Parity Bit

`uartParity_Even_Value` 2  
2 - Even Parity Bit

`uartParity_Mark_Value` 3  
3 - Mark Parity Bit

`uartParity_Space_Value` 4  
4 - Space Parity Bit

`uartDataBits` 7  
7 - UART Data Bits per Character Option Code

`uartFlowControl` 8  
8 - UART Flow Control Option Code

`uartFlowControl_RTS_CTS_Bit` 0  
0 - RTS/CTS Enable

`uartFlowControl_DSR_DTR_Bit` 1  
1 - DSR/DTR Enable

`uartFlowControl_XON_XOFF_Bit` 2  
2 - XON/XOFF Enable

`uartCapableProtocols` 9  
9 - Option Code for UART Capable Protocols

`uartAvailableProtocols` 10  
10 - Option Code for UART Available Protocols

`uartNumberOfOptions` 11  
11 - Number of Options for UART, always last entry

## USB Entity

### *group* cmdUSB\_Defines

USB Command defines.

#### Defines

cmdUSB 18

18 - USB command code.

### *group* cmdUSB\_Command\_Options

#### Defines

usbPortEnable 1

1 - Port Enable Option Code

usbPortDisable 2

2 - Port Disable Option Code

usbDataEnable 3

3 - Data Enable Option Code

usbDataDisable 4

4 - Data Disable Option Code

usbPowerEnable 5

5 - Power Enable Option Code

usbPowerDisable 6

6 - Power Disable Option Code

usbPortCurrent 7

7 - Port Current Option Code

usbPortVoltage 8

8 - Port Voltage Option Code

usbHubMode 9

9 - Hub Mode Option Code

usbPortClearErrorStatus 12

12 - Hub Clear Error Status Option Code

**usbUpstreamMode 14**  
14 - Upstream Mode Option Code

**usbUpstreamModeAuto 2**  
2 - UpstreamMode Auto for upstream mode

**usbUpstreamModePort0 0**  
0 - UpstreamMode Port 0 for upstream mode

**usbUpstreamModePort1 1**  
1 - UpstreamMode Port 1 for upstream mode

**usbUpstreamModeNone 255**  
255 - UpstreamMode None to turn off all upstream connections.

**usbUpstreamModeDefault 2**  
2 - UpstreamMode default for upstream mode

**usbUpstreamState 15**  
15 - UpstreamState Option Code

**usbUpstreamStateNone 2**  
2 - UpstreamMode Auto for upstream mode

**usbUpstreamStatePort0 0**  
0 - UpstreamMode Port 0 for upstream mode

**usbUpstreamStatePort1 1**  
1 - UpstreamMode Port 1 for upstream mode

**usbHubEnumerationDelay 16**  
16 - Downstream ports enumeration delay Option Code

**usbPortCurrentLimit 17**  
17 - Set or get the port current limit Option Code

**usbUpstreamBoostMode 18**  
18 - Set/Get upstream boost mode. Option Code

**usbDownstreamBoostMode 19**  
19 - Set/Get downstream boost mode. Option Code

**usbBoostMode\_0 0**  
0 - Boost mode off, no boost.

**usbBoostMode\_4** 1  
1 - Boost mode 4%.

**usbBoostMode\_8** 2  
2 - Boost mode 8%.

**usbBoostMode\_12** 3  
3 - Boost mode 12%.

**usbPortMode** 20  
20 - Set/Get Port mode (bit-packed) Option Code

**usbPortMode\_sdp** 0  
0 - Standard Downstream port (0.5 Amp).

**usbPortMode\_cdp** 1  
1 - Charging Downstream port (2.1 Amp).

**usbPortMode\_charging** 2  
2 - Trickle charging functionality.

**usbPortMode\_passive** 3  
3 - Electrical passthrough of VBUS.

**usbPortMode\_USB2AEnable** 4  
4 - USB2 dataline A side enabled.

**usbPortMode\_USB2BEnable** 5  
5 - USB2 dataline B side enabled.

**usbPortMode\_VBusEnable** 6  
6 - USB VBUS enabled.

**usbPortMode\_SuperSpeed1Enable** 7  
7 - USB SS Speed dataline side A enabled.

**usbPortMode\_SuperSpeed2Enable** 8  
8 - USB SS Speed dataline side B enabled.

**usbPortMode\_USB2BoostEnable** 9  
9 - USB2 Boost Mode Enabled.

**usbPortMode\_USB3BoostEnable** 10  
10 - USB3 Boost Mode Enabled.

**usbPortMode\_AutoConnectEnable 11**

**11** - Auto-connect Mode Enabled.

**usbPortMode\_CC1Enable 12**

**12** - CC1 Enabled.

**usbPortMode\_CC2Enable 13**

**13** - CC2 Enabled.

**usbPortMode\_SBUEnable 14**

**14** - SBU1 Enabled.

**usbPortMode\_CCFlipEnable 15**

**15** - Flip CC1 and CC2.

**usbPortMode\_SSFlipEnable 16**

**16** - Flip Super speed data lines

**usbPortMode\_SBUFlipEnable 17**

**17** - Flip Side Band Unit lines.

**usbPortMode\_USB2FlipEnable 18**

**18** - Flip Side Band Unit lines.

**usbPortMode\_CC1InjectEnable 19**

**19** - Internal Use.

**usbPortMode\_CC2InjectEnable 20**

**20** - Internal Use.

**usbHiSpeedDataEnable 21**

**21** - Hi-Speed Data Enable Option Code

**usbHiSpeedDataDisable 22**

**22** - Hi-Speed Data Disable Option Code

**usbSuperSpeedDataEnable 23**

**23** - SuperSpeed Data Enable Option Code

**usbSuperSpeedDataDisable 24**

**24** - SuperSpeed Data Disable Option Code

**usbDownstreamDataSpeed 25**

**25** - Get downstream port speed Option Code

**usbDownstreamDataSpeed\_na** 0

0 - Unknown.

**usbDownstreamDataSpeed\_hs** 1

1 - Hi-Speed (2.0).

**usbDownstreamDataSpeed\_ss** 2

2 - SuperSpeed (3.0).

**usbDownstreamDataSpeed\_ls** 3

3 - TODO

**usbConnectMode** 26

26 - USB connect mode Option Code

**usbManualConnect** 0

0 - Auto connect disabled.

**usbAutoConnect** 1

1 - Auto connect enabled.

**usbCC1Enable** 27

27 - CC1 Enable option code (USB Type C). Option Code

**usbCC2Enable** 28

28 - CC2 Enable option code (USB Type C). Option Code

**usbSBUEnable** 29

29 - SBU1/2 enable option code (USB Type C). Option Code

**usbCC1Current** 30

30 - CC1 get current option code (USB Type C). Option Code

**usbCC2Current** 31

31 - CC2 get current option code (USB Type C). Option Code

**usbCC1Voltage** 32

32 - CC1 get voltage option code (USB Type C). Option Code

**usbCC2Voltage** 33

33 - CC2 get voltage option code (USB Type C). Option Code

**usbPortState** 34

34 - TODO Option Code



**usbPortError 35**

**35** - TODO Option Code

**usbCableFlip 36**

**36** - TODO Option Code

**usbAltMode 37**

**37** - USB Alt Mode configuration. Option Code

**usbAltMode\_disabled 0**

**0** - Disabled mode.

**usbAltMode\_normal 1**

**1** - Normal mode (USB 3.1).

**usbAltMode\_4LaneDP\_ComToHost 2**

**2** - Alt Mode - 4 lanes of display port "Common" side connected to host.

**usbAltMode\_4LaneDP\_MuxToHost 3**

**3** - Alt Mode - 4 lanes of display port "Mux" side connected to host.

**usbAltMode\_2LaneDP\_ComToHost\_wUSB3 4**

**4** - Alt Mode - 2 lanes of display port "Common" side connected to host with USB3.1.

**usbAltMode\_2LaneDP\_MuxToHost\_wUSB3 5**

**5** - Alt Mode - 2 lanes of display port "Mux" side connected to host with USB3.1.

**usbAltMode\_2LaneDP\_ComToHost\_wUSB3\_Inverted 6**

**6** - Alt Mode - 2 lanes of display port "Common" side connected to host with USB3.1 with channels 1,2 and 3,4 inverted.

**usbAltMode\_2LaneDP\_MuxToHost\_wUSB3\_Inverted 7**

**7** - Alt Mode - 2 lanes of display port "Mux" side connected to host with USB3.1 with channels 1,2 and 3,4 inverted.

**usbAltMode\_USB4\_ComToHost 8**

**8** - Alt Mode - USB4 with "Common" side connected to host.

**usbAltMode\_USB4\_MuxToHost 9**

**9** - Alt Mode - USB4 with "Mux" side connected to host.

**usbAltMode\_USB4\_ComToHost\_Inverted 10**

**10** - Alt Mode - USB4 with "Common" side connected to host, inverted configuration

**usbAltMode\_USB4\_MuxToHost\_Inverted 11**

**11** - Alt Mode - USB4 with "Mux" side connected to host, inverted configuration

**usbSBU1Voltage** 38

**38** - SBU1 get voltage option code (USB Type C). Option Code

**usbSBU2Voltage** 39

**39** - SBU2 get voltage option code (USB Type C). Option Code

**usbNumberOfOptions** 40

**40** - Number of Options for USB, always last entry. Option Code

## USB System Entity

*group* **cmdUSBSYSTEM\_Defines**

USB System Command defines.

### Defines

**cmdUSBSYSTEM** 38

**38** - USB System command code.

*group* **cmdUSBSYSTEM\_Command\_Options**

### Defines

**usbsystemPowerDataMode** 1

**1** - Power and Data Mode option code

**usbsystemUpstreamPort** 2

**2** - Upstream Port option code (default port is 0) Option Code

**usbsystemUpstreamPortNone** 255

**255** - UpstreamPort None to turn off all upstream connections or invalid state.

**usbsystemEnumerationDelay** 3

**3** - Enumeration Delay option code

**usbsystemDataRoleList** 4

**4** - Data Role List option code

**usbsystemEnabledList** 5

**5** - Enabled List option code

**usbsystemModeList** 6

**6** - Mode List option code

**usbsystemStateList 7**

7 - State List option code

**usbsystemPowerBehavior 8**

8 - Power behavior option code

**usbsystemPowerBehavior\_Balancing 0**

0 - usbsystemPowerBehavior - Balancing between active ports

**usbsystemPowerBehavior\_Even 1**

1 - usbsystemPowerBehavior - Even between all ports

**usbsystemPowerBehaviorConfig 9**

9 - Power behavior config option code

**usbsystemDataBehavior 10**

10 - Data behavior option code

**usbsystemDataBehavior\_HardCoded 0**

0 - usbsystemDataBehavior - HardCoded ports

**usbsystemDataBehavior\_FollowPD 1**

1 - usbsystemDataBehavior - FollowPD

**usbsystemDataBehavior\_PortPriority 2**

2 - usbsystemDataBehavior - Use port priority

**usbsystemDataBehavior\_LastConnected 3**

3 - usbsystemDataBehavior - Most Recently Connected Upstream

**usbsystemDataBehaviorConfig 11**

11 - Data behavior config option code

**usbsystemSelectorMode 12**

12 - Selector mode option code

**usbsystemSelectorMode\_Disabled 0**

0 - Selector Disabled

**usbsystemSelectorMode\_Upstream 1**

1 - Selector Upstream - Toggles through upstreams

**usbsystemSelectorMode\_Mux 2**

2 - Selector Mux - Toggles through mux ports

**usbsystemResetEntityToFactoryDefaults 13**

**13** - Resets USBSystem reset to default option code.

**usbsystemOverride 14**

**14** - Behavior overrides for USB System Option Code

**usbsystemOverride\_AutoVbusToggle\_Bit 0**

**0** - USB System Override - Auto VBUS Toggle Disable Bit

**usbsystemOverride\_VbusDetect\_Bit 1**

**1** - USB System Override - VBUS Detect Disable Bit

**usbsystemUpstreamHSPort 15**

**15** - Upstream Port option code (default port is 0) Option Code

**usbsystemUpstreamSSPort 16**

**16** - Upstream Port option code (default port is 0) Option Code

**usbsystemDataHSMaxDataRate 17**

**17** - Max HighSpeed Data Rate that can be negotiated Option Code

**usbsystemDataHSMaxDataRate\_None 0**

**0** - Max HighSpeed Data Rate of None 0Mbps

**usbsystemDataHSMaxDataRate\_LowSpeed 1**

**1** - Max HighSpeed Data Rate of Low Speed 1.5Mbps

**usbsystemDataHSMaxDataRate\_FullSpeed 2**

**2** - Max HighSpeed Data Rate of Full Speed 12Mbps

**usbsystemDataHSMaxDataRate\_HighSpeed 3**

**3** - Max HighSpeed Data Rate of High Speed 480Mbps

**usbsystemDataSSMaxDataRate 18**

**18** - Max SuperSpeed Data Rate that can be negotiated Option Code

**usbsystemDataSSMaxDataRate\_None 0**

**0** - Max SuperSpeed Data Rate of None 0Gbps

**usbsystemDataSSMaxDataRate\_SuperSpeed 1**

**1** - Max SuperSpeed Data Rate of Super Speed 5Gbps (Gen 1)

**usbsystemDataSSMaxDataRate\_SuperSpeedPlus 2**

**2** - Max SuperSpeed Data Rate of Super Speed 10Gbps (Gen 2)

**usbsystemNumberOfOptions** 19

19 - Number of Options for USB System, always last entry

## UserConfig Entity

*group* **cmdUSERCONFIG\_Defines**

UserConfig Command defines.

### Defines

**cmdUSERCONFIG** 92

92 - UserConfig command code.

*group* **cmdUSERCONFIG\_Command\_Options**

### Defines

**userconfigSaveEntityToStore** 0

0 - Save Entity option code.

**userconfigResetEntityToFactoryDefaults** 1

1 - Reset Entity to factory defaults option code.

**userconfigLoadEntityFromStore** 2

2 - Load Entity from saved values option code.

**userconfigNumberOfOptions** 3

3 - Number of Options for UserConfig, always last entry

## 3.4.9 aStream.h

*group* **aStream**

Platform Independent Stream Abstraction.

[\*aStream.h\*](#) provides a platform independent stream abstraction for common I/O streams. Provides facilities for creating and destroying as well as writing and reading from streams.

**typedef void \*aStreamRef**

Typedef [\*aStreamRef\*](#) Opaque reference to stream primitive.

*group* **StreamCallbacks**

## Typedefs

typedef *aErr* (\***aStreamGetProc**)(uint8\_t \*pData, void \*ref)

Typedef *aStreamGetProc*.

This callback is defined to read one byte from the concrete stream implementation.

**Param pData**

The data Buffer to fill.

**Param ref**

Opaque reference to concrete stream implementation.

**Retval aErrNone**

Successfully read the byte.

**Retval aErrNotReady**

No bytes in stream to read.

**Retval aErrEOF**

Reached the end of the stream.

**Retval aErrIO**

An error encountered reading from stream.

**Return**

Function returns aErr values.

typedef *aErr* (\***aStreamPutProc**)(const uint8\_t \*pData, void \*ref)

Typedef *aStreamPutProc*.

This callback is defined to write one byte to the concrete stream implementation.

**Param pData**

The data Buffer to write.

**Param ref**

opaque reference to concrete stream implementation.

**Retval aErrNone**

Successfully wrote the byte.

**Retval aErrIO**

An error encountered reading from stream.

**Return**

Function returns aErr values.

typedef *aErr* (\***aStreamDeleteProc**)(void \*ref)

Typedef *aStreamDeleteProc*.

This callback is defined to destroy the concrete stream implementation.

**Param ref**

opaque reference to concrete stream implementation.

**Retval aErrNone**

Successfully destroyed.

**Retval aErrParam**

Invalid ref.

**Return**

Function returns aErr values.

```
typedef aErr (*aStreamWriteProc)(const uint8_t *pData, const size_t nSize, void *ref)
```

Typedef *aStreamWriteProc*. (Optional)

Optional multi-byte write for efficiency, not required..

**Param pData**

The pointer to the data to write to the stream.

**Param nSize**

The size of the data buffer in bytes.

**Param ref**

Opaque reference to concrete stream implementation.

**Retval aErrNone**

Successfully destroyed.

**Retval aErrIO**

An error encountered reading from stream.

**Return**

Function returns aErr values.

**enum aBaudRate**

Enum *aBaudRate*.

Accepted serial stream baudrates.

*Values:*

enumerator **aBAUD\_2400**

2400 baud

enumerator **aBAUD\_4800**

4800 baud

enumerator **aBAUD\_9600**

9600 baud

enumerator **aBAUD\_19200**

19,200 baud

enumerator **aBAUD\_38400**

38,400 baud

enumerator **aBAUD\_57600**

57,600 baud

enumerator **aBAUD\_115200**

115,200 baud

enumerator **aBAUD\_230400**  
230,400 buad

enum **aSerial\_Bits**  
Enum *aSerial\_Bits*.

The accepted number of serial bits per byte.

*Values:*

enumerator **aBITS\_8**  
8 bits

enumerator **aBITS\_7**  
7 bits

enum **aSerial\_Stop\_bits**  
Enum *aSerial\_Stop\_bits*.

The accepted number of serial stop bits.

*Values:*

enumerator **aSTOP\_BITS\_1**  
1 stop bit

enumerator **aSTOP\_BITS\_2**  
2 stop bits

*aStreamRef* **aStream\_Create** (*aStreamGetProc* getProc, *aStreamPutProc* putProc, *aStreamWriteProc* writeProc, *aStreamDeleteProc* deleteProc, const void \*procRef)

Base Stream creation procedure.

Creates a Stream Reference.

#### Parameters

- **getProc** – - Callback for reading bytes from the underlying stream.
- **putProc** – - Callback for writing bytes to the underlying stream.
- **writeProc** – - Optional callback for optimized writing of multiple bytes.
- **deleteProc** – - Callback for safe destruction of underlying resource.
- **procRef** – - opaque reference to the underlying resource,

#### Returns

Function returns *aStreamRef* on success and NULL on error.

*aErr* **aStream\_CreateFileInput** (const char \*pFilename, *aStreamRef* \*pStreamRef)

Create a file input stream.

Creates a file input stream.

#### Parameters

- **pFilename** – - The filename and path of the file to read from.



- **pStreamRef** -- The resulting stream accessor for the input file.

#### Return values

- **aErrNone** -- Successful creation.
- **aErrNotFound** -- The file to read was not found.
- **aErrIO** -- A communication error occurred.

#### Returns

Function returns aErr values.

*aErr* **aStream\_CreateFileOutput** (const char \*pFilename, *aStreamRef* \*pStreamRef)

Create a file output stream.

Creates a file output stream.

#### Parameters

- **pFilename** -- The filename and path of the file to write to.
- **pStreamRef** -- The resulting stream accessor for the output file.

#### Return values

- **aErrNone** -- Successful creation.
- **aErrIO** -- A communication error occurred.

#### Returns

Function returns aErr values.

*aErr* **aStream\_CreateSerial** (const char \*pPortName, const *aBaudRate* nBaudRate, const bool parity, const *aSerial\_Bits* bits, const *aSerial\_Stop\_bits* stop, *aStreamRef* \*pStreamRef)

Create a serial communication stream.

Creates a serial stream.

#### Parameters

- **pPortName** -- The portname of the serial device.
- **nBaudRate** -- The baudrate to connect to the device at.
- **parity** -- Whether serial parity is enabled.
- **bits** -- The number of bits per serial byte.
- **stop** -- The number of stop bits per byte.
- **pStreamRef** -- The resulting stream accessor for the serial device.

#### Return values

- **aErrNone** -- Successful creation.
- **aErrConnection** -- The connection was unsuccessful.
- **aErrIO** -- A communication error occurred.

#### Returns

Function returns aErr values.

*aErr* **aStream\_CreateSocket** (const uint32\_t address, const uint16\_t port, *aStreamRef* \*pStreamRef)

Create a TCP/IP socket stream.

Creates a TCP/IP socket stream.

#### Parameters

- **address** -- The IP4 address of the connection.
- **port** -- The TCP port to connect to.
- **pStreamRef** -- The resulting stream accessor for the TCP connection.

#### Return values

- **aErrNone** -- Successful creation.
- **aErrConnection** -- The connection was unsuccessful.
- **aErrIO** -- A communication error occurred.

#### Returns

Function returns aErr values.

*aErr* **aStream\_CreateMemory** (const aMemPtr pMemory, const size\_t size, *aStreamRef* \*pStreamRef)

Create a stream accessor for a block of memory.

Creates a stream accessor for a block of allocated memory. Reads and Writes like any other stream. The memory stream does not make a copy of the memory and doesn't free it but rather provides a stream layer to access it.

#### Parameters

- **pMemory** -- a pointer to a block of memory.
- **size** -- The size of the block in bytes.
- **pStreamRef** -- The resulting stream accessor for the memory block.

#### Return values

- **aErrNone** -- Successful creation.
- **aErrParam** -- The memory block is invalid.
- **aErrIO** -- A communication error occurred.

#### Returns

Function returns aErr values.

*aErr* **aStream\_CreateUSB** (const uint32\_t serialNum, *aStreamRef* \*pStreamRef)

Create a stream to a USB device.

Creates a BrainStem link stream to a USB based module.

#### Parameters

- **serialNum** -- The BrainStem serial number.
- **pStreamRef** -- The resulting stream accessor for the BrainStem module.

#### Return values

- **aErrNone** -- Successful creation.
- **aErrNotFound** -- The brainstem device was not found.
- **aErrIO** -- A communication error occurred.

**Returns**

Function returns aErr values.

*aErr* **aStreamBuffer\_Create** (const size\_t nIncSize, *aStreamRef* \*pBufferStreamRef)

Create a stream buffer.

Creates a stream buffer.

StreamBuffers are typically used to aggregate a bunch of output into a single pile of bytes. This pile can then be checked for size or accessed as a single block of bytes using the aStreamBuffer\_Get call. Finally, these bytes can then be read back out of the buffer until it is empty when it will report an error of aErrEOF. While this stream is thread-safe for different threads doing reads and writes, it is not the best candidate for managing a pipe between threads. Use the aStream\_CreatePipe in that scenario as it can be filled and emptied over and over which is typically the use case for cross-thread pipes.

**Parameters**

- **nIncSize** -- The Increment size to expand the buffer by when it becomes full.
- **pBufferStreamRef** -- The buffer stream resulting from the call.

**Return values**

- **aErrNone** -- The buffer was successfully created.
- **aErrResource** -- The resources were not available to create the buffer.

**Returns**

Function returns aErr values.

*aErr* **aStreamBuffer\_Get** (*aStreamRef* pBufferStreamRef, size\_t \*aSize, uint8\_t \*\*ppData)

Get the contents of the buffer.

Get the contents of the buffer.

StreamBuffers are typically used to aggregate a bunch of output into a single pile of bytes. This pile can then be checked for size or accessed as a single block of bytes using the aStreamBuffer\_Get call. Finally, these bytes can then be read back out of the buffer until it is empty when it will report an error of aErrEOF. While this stream is thread-safe for different threads doing reads and writes, it is not the best candidate for managing a pipe between threads. Use the aStream\_CreatePipe in that scenario as it can be filled and emptied over and over which is typically the use case for cross-thread pipes.

**Parameters**

- **pBufferStreamRef** -- The buffer stream resulting from the call.
- **aSize** -- The size of the buffered data in bytes.
- **ppData** -- The resulting buffer of the bytes.

**Return values**

- **aErrNone** -- The buffer was successfully created.
- **aErrParam** -- An invalid stream ref was given.

**Returns**

Function returns aErr values.

*aErr* **aStream\_CreatePipe** (*aStreamRef* \*pBufferStreamRef)

Create a pipe buffered stream.

Get the contents of the buffer. Offers a pipe that is thread-safe for reading and writing between two different contexts. Returns aErrNotReady when data is not available on reads. Expands a buffer internally to hold data when written to until it is read out (FIFO).

**Parameters**

**pBufferStreamRef** -- The buffered stream to create the pipe out of.

**Return values**

- **aErrNone** -- Successful creation.
- **aErrParam** -- The bufferStream is invalid.

**Returns**

Function returns aErr values.

*aErr* **aStreamBuffer\_Flush** (*aStreamRef* bufferStreamRef, *aStreamRef* flushStream)

Flush the contents of the buffer.

Flushes the content of the buffer into the flushStream.

**Parameters**

- **bufferStreamRef** -- The buffered stream to flush.
- **flushStream** -- the stream to flush the buffer into.

**Return values**

- **aErrNone** -- The flush succeeded.
- **aErrParam** -- The bufferStream is invalid.
- **aErrIO** -- IO error writing to flushStream.

**Returns**

Function returns aErr values.

*aErr* **aStream\_CreateLogStream** (const *aStreamRef* streamToLog, const *aStreamRef* upStreamLog, const *aStreamRef* downStreamLog, *aStreamRef* \*pLogStreamRef)

Create a Logging stream.

Creates a stream which contains an upstream log stream and a downstream log stream. The logging stream logs reads to the upstream log and writes to the downstream log, while passing all data to and from the pLogStreamRef.

**Parameters**

- **streamToLog** -- The reference to the stream to log.
- **upStreamLog** -- Log stream for reads.
- **downStreamLog** -- Log stream for writes.
- **pLogStreamRef** -- The logged stream reference.

**Return values**

- **aErrNone** -- Successful creation.
- **aErrParam** -- The stream to log is invalid.

**Returns**

Function returns aErr values.

**Returns**

aErrIO - A communication error occurred creating the logging stream.

*aErr* **aStream\_Read** (*aStreamRef* streamRef, uint8\_t \*pBuffer, const size\_t length)

Read a byte array record from a stream.

Read a byte array record from a stream.

#### Parameters

- **streamRef** -- The reference to the stream to read from.
- **pBuffer** -- byte array buffer to read into.
- **length** -- the length of the read buffer.

#### Return values

- **aErrNone** -- Successful read.
- **aErrMode** -- The streamRef is not readable.
- **aErrIO** -- An error occurred reading the data.

#### Returns

Function returns aErr values.

*aErr* **aStream\_Write** (*aStreamRef* streamRef, const uint8\_t \*pBuffer, const size\_t length)

Write a byte array to a Stream.

Write a byte array to a Stream.

#### Parameters

- **streamRef** -- The reference to the stream to write to.
- **pBuffer** -- byte array to write out to the stream.
- **length** -- the byte array length

#### Return values

- **aErrNone** -- Successful write.
- **aErrMode** -- The streamRef is not writable.
- **aErrIO** -- An error occurred writing the data.

#### Returns

Function returns aErr values.

*aErr* **aStream\_ReadRecord** (*aStreamRef* streamRef, uint8\_t \*pBuffer, size\_t \*lengthRead, const size\_t maxLength, const uint8\_t \*recordTerminator, const size\_t terminatorLength)

Read a byte array record from a stream with a record terminator.

Read a byte array record from a stream with a record terminator.

#### Parameters

- **streamRef** -- The reference to the stream to read from.
- **pBuffer** -- Byte array buffer to read into.
- **lengthRead** -- The length of the read buffer.
- **maxLength** -- The Maximum record length.
- **recordTerminator** -- The byte array representing the record terminator.
- **terminatorLength** -- The length of the record terminator.

**Return values**

**aErrNone** -- Successful read.

**Returns**

Function returns aErr values.

**Returns**

**aErrMode** - The streamRef is not readable.

**Returns**

**aErrIO** - An error occurred reading the data.

*aErr* **aStream\_WriteRecord** (*aStreamRef* streamRef, const uint8\_t \*pBuffer, const size\_t bufferSize, const uint8\_t \*recordTerminator, const size\_t terminatorLength)

Write a byte array with a record terminator to a Stream.

Write a byte array with a record terminator to a Stream.

**Parameters**

- **streamRef** -- The reference to the stream to write to.
- **pBuffer** -- byte array to write out to the stream.
- **bufferLength** -- the byte array length
- **recordTerminator** -- the byte array representing the record terminator
- **terminatorLength** -- the length of the record terminator.

**Return values**

- **aErrNone** -- Successful write.
- **aErrMode** -- The streamRef is not writable.
- **aErrIO** -- An error occurred writing the data.

**Returns**

Function returns aErr values.

*aErr* **aStream\_ReadCString** (*aStreamRef* streamRef, char \*pBuffer, const size\_t maxLength)

Read a null terminated string from Stream.

Read a null terminated string from Stream.

**Parameters**

- **streamRef** -- The reference to the stream to read from.
- **pBuffer** -- Character array buffer to read into.
- **maxLength** -- The maximum length of the string.

**Return values**

- **aErrNone** -- Successful read.
- **aErrMode** -- The streamRef is not readable.
- **aErrIO** -- An error occurred reading the data.

**Returns**

Function returns aErr values.

*aErr* **aStream\_WriteCString** (*aStreamRef* streamRef, const char \*pBuffer)

Write a null terminated string.

Write a null terminated string.

#### Parameters

- **streamRef** - - The reference to the stream to write to.
- **pBuffer** - - character array to write.

#### Return values

- **aErrNone** - - Successful write.
- **aErrMode** - - The streamRef is not writable.
- **aErrIO** - - An error occurred writing the data.

#### Returns

Function returns aErr values.

*aErr* **aStream\_ReadCStringRecord** (*aStreamRef* streamRef, char \*pBuffer, const size\_t maxLength, const char \*recordTerminator)

Read a null terminated string with a record terminator to pBuffer.

Read a null terminated string with a record terminator to pBuffer.

#### Parameters

- **streamRef** - - The reference to the stream to read to.
- **pBuffer** - - character array to read to.
- **maxLength** - - The maximum number of characters to read.
- **recordTerminator** - - The record terminator to read to.

#### Return values

- **aErrNone** - - Successful read.
- **aErrMode** - - The streamRef is not readable.
- **aErrIO** - - An error occurred reading the data.

#### Returns

Function returns aErr values.

*aErr* **aStream\_WriteCStringRecord** (*aStreamRef* streamRef, const char \*pBuffer, const char \*recordTerminator)

Write a null terminated string with a record terminator to the stream.

Write a null terminated string with a record terminator to the stream.

#### Parameters

- **streamRef** - - The reference to the stream to be written to.
- **pBuffer** - - Null terminated string to write to the stream.
- **recordTerminator** - - The record terminator to write after the contents.

#### Return values

- **aErrNone** - - Successful write.
- **aErrMode** - - The streamRef is not writable.

- **aErrIO** – - An error occurred writing the data.

**Returns**

Function returns aErr values.

*aErr* **aStream\_Flush** (*aStreamRef* inStreamRef, *aStreamRef* outStreamRef)

Flush contents of inStream into outStream.

Flush the entire current content of the instream into the outstream.

**Parameters**

- **inStreamRef** – - The reference to the stream to be flushed into the outstream.
- **outStreamRef** – - The reference to the stream instream is flushed into.

**Return values**

- **aErrNone** – - Successful Flush.
- **aErrMode** – - The outstream is not writable or instream is not readable.
- **aErrIO** – - An error occurred flushing the data.

**Returns**

Function returns aErr values.

*aErr* **aStream\_Destroy** (*aStreamRef* \*pStreamRef)

Destroy a Stream.

Safely destroy a stream and deallocate the associated resources.

**Parameters**

**pStreamRef** – - A pointer to a pointer of a valid streamRef. The StreamRef will be set to NULL on successful destruction of the stream.

**Return values**

- **aErrNone** – - The stream was successfully destroyed.
- **aErrParam** – - If the streamRef is invalid.

**Returns**

Function returns aErr values.

### 3.4.10 aTime.h

**group aTime**

Basic Time procedures Sleep and Get process tics.

*aTime.h* provides a platform independent interface for millisecond sleep, and for getting process tics.

unsigned long **aTime\_GetMSTicks** (void)

Get the current tick count in milliseconds.

This call returns a number of milliseconds. Depending on the platform, this can be the number of milliseconds since the last boot, or from the epoc start. As such, this call should not be used as an external reference clock. It is accurate when used as a differential, i.e. internal, measurement only.

**Returns**

unsigned long number of milliseconds elapsed.



*aErr* **aTime\_MSSleep** (const unsigned long msTime)

Sleep the current process for msTime milliseconds.

Sleeps the current process. This is not an active sleep, there are no signals which will “wake” the process.

**Parameters**

**msTime** – Milliseconds to sleep.

**Return values**

- **aErrNone** – The call returned successfully.
- **aErrUnknown** – Um unknown what went wrong.

**Returns**

Function returns aErr values.

### 3.4.11 aUEI.h

*group* **aUEI**

UEI Utilities.

*aUEI.h* Provides structs and utilities for working with UEIs.

enum **dataType**

Typedef Enum *dataType*.

UEI datatype

*Values:*

enumerator **aUEI\_VOID**

Void datatype.

enumerator **aUEI\_BYTE**

Char datatype.

enumerator **aUEI\_SHORT**

Short datatype.

enumerator **aUEI\_INT**

Int datatype.

enumerator **aUEI\_BYTES**

Bytes datatype.

struct **uei**

Typedef Struct *uei*.

UEI data struct.

## Public Members

`uint8_t module`

Module address.

`uint8_t command`

Command code.

`uint8_t option`

option code & UEI operation.

`uint8_t specifier`

Entity index & response specifier.

`uint8_t byteVal`

Char value union member.

`uint16_t shortVal`

Short value union member.

`uint32_t intVal`

Int value union member.

*dataType* type

Union dataType.

`uint16_t aUEI_RetrieveShort (const uint8_t *p)`

Retrieve a short from a UEI.

### Parameters

**p** – Pointer to byte array containing short.

### Returns

`uint16_t` The short value.

`void aUEI_StoreShort (uint8_t *p, uint16_t v)`

Store a short in a UEI.

### Parameters

- **p** – Pointer to uei shortVal.
- **v** – Short value to store.

`uint32_t aUEI_RetrieveInt (const uint8_t *p)`

Retrieve an Int from a UEI.

### Parameters

**p** – Pointer to byte array containing the Int.

### Returns

`uint32_t` The integer value.

void **aUEI\_StoreInt** (uint8\_t \*p, uint32\_t v)

Store an Int in a UEI.

#### Parameters

- **p** – Pointer to the IntVal of a UEI.
- **v** – The value to store.

### 3.4.12 aVersion.h

*group* **aVersion**

Library version interface.

[aVersion.h](#) Provides version information for the BrainStem2 library.

**aVERSION\_MAJOR** 2

Major revision level of library.

Major revision bumps will break compatibility with existing versions and may introduce protocol changes or other fundamental differences.

**aVERSION\_MINOR** 12

Minor revision level of library.

Minor revisions should largely be compatible, however new features may be added with a minor revision change.

**aVERSION\_PATCH** 1

Patch revision level of library.

Patch revisions are bug fixes and small performance changes. They add no significant new features or interfaces.

*group* **Firmware\_version\_parsing**

#### Functions

uint8\_t **aVersion\_ParseMajor** (uint32\_t build)

Parse out the major revision number.

Parses the major revision level from the given uint32.

#### Parameters

**build** – The packed version number returned from the system.getVersion call.

#### Returns

The major revision number.

uint8\_t **aVersion\_ParseMinor** (uint32\_t build)

Parse out the minor revision number.

Parses the minor revision level from the given uint32.

**Parameters**

**build** – The packed version number returned from the system.getVersion call.

**Returns**

The minor revision number.

uint32\_t **aVersion\_ParsePatch** (uint32\_t build)

Parse out the revision patch number.

Parses the revision patch level from the given uint32.

**Parameters**

**build** – The packed version number returned from the system.getVersion call.

**Returns**

The revision patch number.

void **aVersion\_ParseString** (uint32\_t build, char \*string, size\_t len)

Parse the Version number into a human readable format.

Fills the string parameter with a human readable formatted version number.

**Parameters**

- **build** – The packed version number returned from the system.getVersion call.
- **string** – The string to fill with the version string.
- **len** – The length of the filled string, not longer than MAX\_VERSION\_STRING.

bool **aVersion\_IsLegacyFormat** (uint32\_t build)

Check if the given build version is of the legacy packing format.

Parses the revision format from the given uint32.

**Parameters**

**build** – The packed version number returned from the system.getVersion call.

**Returns**

Whether the revision format is the old packing format.

uint8\_t **aVersion\_GetMajor** (void)

Return the major revision number.

**Returns**

The major revision number.

uint8\_t **aVersion\_GetMinor** (void)

Return the minor revision number.

**Returns**

The minor revision number.

uint32\_t **aVersion\_GetPatch** (void)

Return the revision patch number.

**Returns**

The revision patch number.

const char \***aVersion\_GetString** (void)

Return a human readable version string.

**Returns**

char\* human readable version string.

bool **aVersion\_IsAtLeast** (const uint8\_t major, const uint8\_t minor, const uint8\_t patch)

Check that the current software version is at least major.minor.patch.

#### Parameters

- **major** – The major revision level.
- **minor** – The minor revision.
- **patch** – The patch level.

#### Returns

True when current version is at least what is given, false otherwise

char \***aVersion\_GetFeatureList** (void)

Get an array of the features the library supports.

#### Returns

an array of c strings describing the features the library supports.

void **aVersion\_DestroyFeatureList** (char \*\*featureList)

Destroy the feature list.

#### Parameters

**featureList** – pointer to featurelist.

### 3.4.13 PortMapping.h

*group* **PortMapping**

BrainStem Port Mapping Interface.

[\*PortMapping.h\*](#) provides an interface for usb descriptor information of devices downstream of Acroname hub products.

enum **PORT\_SPEED**

Port speed enumeration

*Values:*

enumerator **kPORT\_SPEED\_UNKNOWN**

kPORT\_SPEED\_UNKNOWN (0)

enumerator **kPORT\_SPEED\_LOW**

kPORT\_SPEED\_LOW (1)

enumerator **kPORT\_SPEED\_FULL**

kPORT\_SPEED\_FULL (2)

enumerator **kPORT\_SPEED\_HIGH**

kPORT\_SPEED\_HIGH (3)

enumerator **kPORT\_SPEED\_SUPER**

kPORT\_SPEED\_SUPER (4)

enumerator **kPORT\_SPEED\_SUPER\_PLUS**  
kPORT\_SPEED\_SUPER\_PLUS (5)

struct **DeviceNode**

Device Node Structure - Contains information linking the downstream device to the Acroname Hub.

### Public Members

uint32\_t **hubSerialNumber**

Serial number of the Acroname hub where the device was found.

uint8\_t **hubPort**

Port of the Acroname hub where the device was found.

uint16\_t **idVendor**

Manufactures Vendor ID of the downstream device.

uint16\_t **idProduct**

Manufactures Product ID of the downstream device.

PORT\_SPEED\_t **speed**

The devices downstream device speed.

char **productName**[255]

USB string descriptor

char **serialNumber**[255]

USB string descriptor

char **manufacturer**[255]

USB string descriptor

*aErr* **getDownstreamDevices** (DeviceNode\_t \*buffer, uint32\_t bufferLength, uint32\_t \*devicesFound)

Gets downstream device USB information for all Acroname hubs.

### Parameters

- **buffer** – Pointer to the start of a list/array to be used by the function.
- **bufferLength** – Size of the list/array in DeviceNode\_t's, not bytes.)
- **devicesFound** – The number of DeviceNode\_t's that were populated.

### Return values

- **aErrNone** – on success
- **aErrParam** – Passed in values are not valid. (NULL, size etc).
- **aErrMemory** – No more room in the list
- **aErrNotFound** – No Acroname devices were found.

### 3.4.14 `bs_pd_packet.h`

*group* **BSPDPacket**

BrainStem Power Delivery Packet.

[\*bs\\_pd\\_packet.h\*](#) provides the packet structure which is used with the PDChannelLogger interface.

enum **BS\_PD\_Packet\_Direction**

Packet Direction enumeration

*Values:*

enumerator **kBS\_PD\_Packet\_Direction\_Invalid**

enumerator **kBS\_PD\_Packet\_Direction\_Transmit**

enumerator **kBS\_PD\_Packet\_Direction\_Receive**

enumerator **kBS\_PD\_Packet\_Direction\_Sniff**

enumerator **kBS\_PD\_Packet\_Direction\_UNKNOWN**

enumerator **kBS\_PD\_Packet\_Direction\_LAST**

enum **BS\_PD\_Packet\_SOP**

Packet SOP type enumeration

*Values:*

enumerator **kBS\_PD\_Packet\_SOP**

enumerator **kBS\_PD\_Packet\_SOP\_P**

enumerator **kBS\_PD\_Packet\_SOP\_P\_P**

enumerator **kBS\_PD\_Packet\_SOP\_P\_P\_DEBUG**

enumerator **kBS\_PD\_Packet\_SOP\_P\_P\_P\_DEBUG**

enumerator **kBS\_PD\_Packet\_SOP\_UNKNOWN**

enumerator **kBS\_PD\_Packet\_SOP\_LAST**

struct **BS\_PD\_Packet**

[\*BS\\_PD\\_Packet\*](#) structure - Contains information describing the contained Power Delivery Packet

## Public Members

uint8\_t **channel**

PD Channel this packet refers too.

uint32\_t **seconds**

Seconds since device boot

uint32\_t **uSeconds**

Micro seconds since device boot

BS\_PD\_Packet\_Direction\_t **direction**

PD Communication direction

BS\_PD\_Packet\_SOP\_t **sop**

PD SOP type

std::vector<uint8\_t> **payload**

Raw PD packet

uint32\_t **event**

PD Event type - defined in aProtocolDefs.h

BS\_PD\_Packet\_CC\_Channel\_t **ccChannel**

CC Channel type

uint32\_t **crc**

CRC of payload



## 3.5 RESTful API Reference

Welcome to the BrainStem RESTful API reference documentation. This interface provides access to the BrainStem protocol over HTTP as well as additional information about system versions, attached USB devices, and bulk data transfers.

Use of the RESTful API requires either *BrainD*, or one of the applications built on BrainD, such as *ControlRoom*.

Receiving information from the RESTful interface occurs through an HTTP GET request. Sending or setting information occurs through a PUT interface.

The current version of the RESTful interface is v1. Changes that do not break a RESTful API will not constitute a version change. Removing features or making significant changes will result in a version change. Deploying breaking changes may be necessary for legal, performance, or security reasons. When a new version is released, the current version will remain supported for one year and may become unavailable anytime after this period.

### 3.5.1 API Version v1

- GET `http://<IPADDRESS>:<PORT>/api/v1/<ENDPOINT>/<PARAMETERS>`
- PUT `http://<IPADDRESS>:<PORT>/api/v1/<ENDPOINT>/<PARAMETERS> {BODY}`

Table 19: Endpoint Struture Definition

Parameter	Request Type	Description
IPADDRESS	GET, PUT	IP Address of BrainD server hosting RESTful endpoints.
PORT	GET, PUT	Port that BrainD server is listening for connections. Default is 9005.
ENDPOINT	GET, PUT	RESTful API endpoint to access.
PARAMETERS	GET, PUT	Command parameters for the given ENDPOINT.
BODY	PUT	HTTP PUT payload for the given ENDPOINT and PARAMETERS.

The available options for the `ENDPOINT` parameter are listed below:

Table 20: Available Endpoints

Service	Description
<i>acronameDevices</i>	Enumeration of attached Acroname devices
<i>acronameDevicesState</i>	Bulk Endpoint containing telemetry about all attached Acroname devices
<i>brainstem</i>	Raw access to BrainStem API for a device
<i>devices</i>	List of all USB devices connected to the host computer
<i>version</i>	Software Versions

The response body for all RESTful API calls will be encapsulated in a *transaction envelope*. This envelope will provide error information, request context, and other useful fields about the request and the response payload for the specific API call.

## JSON Schema Version 1

### acronameDevices Endpoint

The `acronameDevices` endpoint enumerates all of the attached Acroname devices on the host system, and provides information about their connection parameters, software licenses, and module information.

There are no input parameters to this endpoint. It will return a JSON array of devices, or error, encapsulated in a *transaction envelope*.

### JSON Schema for Response Object

The following tables list a [JSON Schema](#)<sup>118</sup> for the response object.

Download the raw JSON Schema file for this response: `acroname_devices_response.json`

#### Object Fields of Acroname Devices Response

Name	Type	Mandatory	Description
<code>acronameDevices</code>	Array< <i>Object</i> >	Yes	An array containing all Acroname devices in the system.

#### Object Fields of `acronameDevices[]`

Name	Type	Mandatory	Description
<code>type</code>	<i>v1-type</i>	Yes	Type of connection to device
<code>serialNumber</code>	<i>v1-serialNumber</i>	Yes	Acroname Serial Number
<code>module</code>	<i>v1-uint32</i>	Yes	Brainstem Module address of this device
<code>router</code>	<i>v1-uint32</i>	No	BrainStem network router address
<code>routerSerialNumber</code>	<i>v1-serialNumber</i>	No	BrainStem network router serial number
<code>model</code>	<i>v1-model</i>	Yes	Model Number of device (see <code>aDefs.c</code> for allowed values)
<code>entitlements</code>	Array< <i>Object</i> >	No	An array containing all entitlements for this specific device

<sup>118</sup> <https://datatracker.ietf.org/doc/html/draft-handrews-json-schema-01>

Object Fields of `acronameDevices[] .entitlements[]`

Name	Type	Mandatory	Description
tag	<i>v1-tag</i>	Yes	The entitlement tag associated with this entitlement
version	<i>v1-uint32</i>	Yes	Version field of the specified entitlement

**v1-type**

Name	Value
Type	string
description	Enumeration of all possible USB speeds
Enumerations	INVALID, USB, TCP/IP, SERIAL, NETWORK

**v1-uint32**

Name	Value
Type	integer
description	Unsigned 32-bit integer
minimum	0
maximum	4294967295

**v1-serialNumber**

Name	Value
Type	string
description	Representation of an Acroname device serial number
Regular Expression	<code>^(0x)?[A-Fa-f0-9]{8}\$</code>

**v1-tag**

Name	Value
Type	string
description	Representation of the entitlement tag

**v1-model**

Name	Value
Type	string
de- scrip- tion	Enumeration of all supported Acroname devices.
Enu- mera- tions	USBStem, EtherStem, MTMIOSerial, MTMPM1, MTMEtherStem, MTMUSBStem, USBHub2x4, MTMRelay, USBHub3p, MTMDAQ1, USBCSwitch, MTMDAQ2, MTMLoad1, USBHub3c, Unknown

**Examples****Bash**

```
curl http://127.0.0.1:9005/api/v1/acronameDevices
```

**Python**

```
import requests
import json
response = requests.get('http://127.0.0.1:9005/api/v1/acronameDevices')
json_data = response.json()
print(json.dumps(json_data, indent=4))
```

The output will be similar to the following:

```

1  {
2      "timestamp": "2023-09-20T17:11:54.092Z",
3      "request": {
4          "endpointName": "/api/v1/acronameDevices",
5          "parameters": {}
6      },
7      "response": {
8          "acronameDevices": [
9              {
10                 "type": "USB",
11                 "serialNumber": "3C43352C",
12                 "module": 6,
13                 "model": "USBHub3c",
14                 "entitlements": [
15                     {
16                         "tag": "CONTROL",
17                         "version": 0
18                     }
19                 ]
20             },
21             {
22                 "type": "USB",
23                 "serialNumber": "F7D9AFB6",
24                 "module": 6,
25                 "model": "USBHub3p",

```

(continues on next page)

(continued from previous page)

```

26         "entitlements": [
27             {
28                 "tag": "CONTROL",
29                 "version": 0
30             }
31         ]
32     }
33 ]
34 }
35 }
```

### acronameDevicesState Endpoint

The `acronameDevicesState` endpoint provides telemetry and state information for all of the attached Acroname devices on the host system. It provides USB connection information, custom names, and device version information for each port on the device.

There are no input parameters to this endpoint. It will return a JSON array of devices, or error, encapsulated in a *transaction envelope*.

### JSON Schema for Response Object

The following table lists a [JSON Schema](#)<sup>119</sup> for the response object.

Download the raw JSON Schema file for this response: `acroname_devices_state_response.json`

### Object Fields of Acroname Devices State Response

Name	Type	Mandatory	Description
timestamp	<a href="#">v1-timestamp</a>	Yes	Time and date that this object was created.
sequence	<a href="#">v1-uint32</a>	Yes	Sequence counter that increments on each message sent.
brainstemVersion	<a href="#">v1-version</a>	Yes	Version of the BrainStem library for this object.
acronameDevices	Array< <a href="#">Object</a> >	Yes	Array containing all the available Acroname devices on the system.

<sup>119</sup> <https://datatracker.ietf.org/doc/html/draft-handrews-json-schema-01>

Object Fields of `acronameDevices []`

Name	Type	Mandatory	Description
<code>serialNumber</code>	<i>v1-serialNumber</i>	Yes	Acroname Serial Number
<code>firmwareVersion</code>	<i>v1-version</i>	Yes	Firmware version that is running on the device.
<code>model</code>	<i>v1-model</i>	Yes	Model Name of the device.
<code>customName</code>	string	No	If set, a user-defined name for the device.
<code>upstreamPort</code>	<i>v1-uint8</i>	No	Currently active upstream port index.
<code>upstreamPortSelection-IsAutomatic</code>	boolean	Yes	Is upstream port selected automatically.
<code>ports</code>	Array< <i>Object</i> >	No	Object representing a single port on a device.

Object Fields of `acronameDevices [].ports []`

Name	Type	Mandatory	Description
<code>index</code>	<i>v1-uint8</i>	Yes	Physical Port Number on device. This may include upstream ports, control ports, etc.
<code>physical-Name</code>	string	Yes	Description of the port type and number.
<code>customName</code>	string	No	If set, a user-defined name for the port.
<code>speed</code>	string	No	Current data speed of the port.
<code>roles</code>	Array< <i>v1-dataRole</i> >	Yes	All supported data roles of the port.
<code>current-DataRole</code>	<i>v1-dataRole</i>	Yes	Current data role of the port.
<code>enabled</code>	boolean	No	Whether or not the port is enabled.
<code>voltage</code>	<i>v1-portParam</i>	No	Voltage measurement from this port.
<code>current</code>	<i>v1-portParam</i>	No	Current measurement from this port.
<code>cableInfo</code>	<i>v1-cableInfo</i>	No	If set, the available cable information

**v1-timestamp**

Name	Value
Type	string
description	String containing a ISO8601 timestamp (YYYY-MM-DDTHH:MM:SS.mmmZ
Regular Expression	<code>^[0-9]{4}-[0-9]{2}-[0-9]{2}T[0-9]{2}:[0-9]{2}:[0-9]{2}\.[0-9]{3,6}Z\$</code>

**v1-serialNumber**

Name	Value
Type	string
description	Hexadecimal representation of an Acroname device.
Regular Expression	<code>^(0x)?[A-Fa-f0-9]{8}\$</code>

**v1-version**

Name	Value
Type	<i>Object</i>
description	Object representing a <major>.<minor>.<patch> semantic version.

Name	Type	Mandatory	Description
major	<i>v1-uint8</i>	Yes	
minor	<i>v1-uint8</i>	Yes	
patch	<i>v1-uint8</i>	Yes	

**v1-model**

Name	Value
Type	string
de- scrip- tion	Enumeration of all supported Acroname devices.
Enu- mera- tions	USBStem, EtherStem, MTMIOSerial, MTMPM1, MTMEtherStem, MTMUSBStem, USBHub2x4, MTMRelay, USBHub3p, MTMDAQ1, USBCSwitch, MTMDAQ2, MTMLoad1, USBHub3c, Unknown

**v1-dataRole**

Name	Value
Type	string
description	Enumeration of all supported data roles for a port.
Enumerations	Disabled, Upstream, Downstream, Control, Unknown

**v1-portParam**

Name	Value
Type	<i>Object</i>
description	Object containing a data parameter with units and scale values.

Name	Type	Mandatory	Description
rawValue	number	Yes	Unformatted return value from the device.
value	number	Yes	If appropriate, a user-friendly formatted value.
units	<i>v1-units</i>	Yes	If appropriate, a user-friendly unit string.

**v1-cableInfo**

Name	Value
Type	<i>Object</i>
description	Object containing available cable information

Name	Type	Mandatory	Description
orientation	<i>v1-cableOrientation</i>	No	If available, the current cable orientation
maxSpeed	<i>v1-cableMaxSpeed</i>	No	If available, the maximum speed the cable is capable of
type	<i>v1-cableType</i>	No	If available, the type of cable
maxVoltage	<i>v1-cableMaxVoltage</i>	No	If available, the maximum voltage the cable is capable of
maxCurrent	<i>v1-cableMaxCurrent</i>	No	If available, the maximum current the cable is capable of



**v1-cableOrientation**

Name	Value
Type	string
description	Enumeration of all possible cable orientations
Enumerations	Unknown, CC1, CC2

**v1-cableMaxSpeed**

Name	Value
Type	string
description	Enumeration of all possible cable speeds
Enumerations	Unknown, USB 2.0, USB 3.2 Gen 1, USB 3.2 / USB 4 Gen 2, USB 4.0 Gen 3, USB 4.0 Gen 4

**v1-cableMaxVoltage**

Name	Value
Type	string
description	Enumeration of all possible cable voltage limitations
Enumerations	Unknown, 20V, 30V, 40V, 50V

**v1-cableMaxCurrent**

Name	Value
Type	string
description	Enumeration of all possible cable current limitations
Enumerations	Unknown, 3A, 5A

**v1-cableType**

Name	Value
Type	string
description	Enumeration of all possible cable types
Enumerations	Unknown, Passive, Active

**v1-uint8**

Name	Value
Type	integer
description	Unsigned 8-bit integer
minimum	0
maximum	255

**v1-uint32**

Name	Value
Type	integer
description	Unsigned 32-bit integer
minimum	0
maximum	4294967295

**v1-units**

Name	Value
Type	string
description	Allowed and recognized units for a value.
Enumeration	volts, millivolts, microvolts, amperes, milliamperes, microamperes, coulombs, millicoulombs, microcoulombs, seconds, milliseconds, microseconds, nanoseconds, kilowatts, watts, milliwatts, microwatts, kilowatt-hours, watt-hours, milliwatt-hours, microwatt-hours

**v1-aErr**

Nam	Value
Type	string
de- scrip tion	Enumeration of all possible error results
Enu- mer- a- tions	aErrNone, aErrMemory, aErrParam, aErrNotFound, aErrFileNameLength, aErrBusy, aErrIO, aErrMode, aErrWrite, aErrRead, aErrEOF, aErrNotReady, aErrPermission, aErrRange, aErrSize, aErrOverrun, aErrParse, aErrConfiguration, aErrTime-out, aErrInitialization, aErrVersion, aErrUnimplemented, aErrDuplicate, aErrCancel, aErrPacket, aErrConnection, aErrIndexRange, aErrShortCommand, aErrInvalidEntity, aErrInvalidOption, aErrResource, aErrMedia, aErrAsyncReturn, aErrOperation, aErrUnknown

**v1-error**

Name	Value
Type	<i>Object</i>
description	Error containing an Acroname error

Name	Type	Mandatory	Description
errorCode	<i>v1-aErr</i>	Yes	Acroname error code
errorMes- sage	string	No	A human-readable message to describe the context of the error.

**Examples****Bash**

```
curl http://127.0.0.1:9005/api/v1/acronameDevicesState
```

**Python**

```
import requests
import json
response = requests.get('http://127.0.0.1:9005/api/v1/acronameDevicesState')
json_data = response.json()
print(json.dumps(json_data, indent=4))
```

The output will be similar to the following:

```

1  {
2      "timestamp": "2023-09-20T17:24:24.428Z",
3      "request": {
4          "endpointName": "/api/v1/acronameDevicesState",
5          "parameters": {}
6      },
7      "response": {
8          "timestamp": "2023-09-20T17:24:24.108Z",
9          "sequence": 2563,
10         "brainstemVersion": {
11             "major": 2,
12             "minor": 10,
13             "patch": 0
14         },
15         "acronameDevices": [
16             {
17                 "serialNumber": "0x3C43352C",
18                 "firmwareVersion": {
19                     "major": 2,
20                     "minor": 10,
21                     "patch": 0
22                 },
23                 "model": "USBHub3c",
24                 "upstreamPort": 0,
25                 "upstreamPortSelectionIsAutomatic": true,
26                 "ports": [
27                     {
28                         "index": 0,
29                         "physicalName": "Port 0",
30                         "speed": "5 Gbps",
31                         "roles": [
32                             "Upstream",
33                             "Downstream"
34                         ],
35                         "currentDataRole": "Upstream",
36                         "enabled": true,
37                         "voltage": {
38                             "value": 5.207519,
39                             "units": "volts",
40                             "rawValue": 5207519
41                         },
42                         "current": {
43                             "value": 0.00061,
44                             "units": "amperes",
45                             "rawValue": 610
46                         }
47                     },
48                     {
49                         "index": 1,
50                         "physicalName": "Port 1",
51                         "speed": "Unknown",
52                         "roles": [
53                             "Upstream",
54                             "Downstream"
55                         ],
56                         "currentDataRole": "Downstream",
57                         "enabled": true,

```

(continues on next page)

(continued from previous page)

```

58         "voltage": {
59             "value": 0.0,
60             "units": "volts",
61             "rawValue": 0
62         },
63         "current": {
64             "value": 0.000305,
65             "units": "amperes",
66             "rawValue": 305
67         }
68     },
69     <additional ports ...>
70 ]
71 }
72 ]
73 }
74 }
```

### devices Endpoint

The `devices` endpoint provides a list of all USB devices attached to the host system, including device information, port path, capabilities, and mappings to Acroname devices.

There are no input parameters to this endpoint. It will return a JSON array of devices, encapsulated in a *transaction envelope*.

### JSON Schema for Response Object

The following table lists a [JSON Schema](#)<sup>120</sup> for the response object.

Download the raw JSON Schema file for this response: `devices_response.json`

### Object Fields of Devices Response

Name	Type	Mandatory	Description
usb	Array< <a href="#">Object</a> >	Yes	An array containing all USB devices in the system

<sup>120</sup> <https://datatracker.ietf.org/doc/html/draft-handrews-json-schema-01>

**Object Fields of `usb []`**

Name	Type	Mandatory	Description
vendorId	<i>v1-vidPid</i>	Yes	Vendor Identifier
productId	<i>v1-vidPid</i>	Yes	Product Identifier
speedActual	<i>v1-speed</i>	Yes	Current enumerated speed
maxSpeed	<i>v1-speed</i>	Yes	Maximum supported speed
serialNumber	<i>v1-name</i>	Yes	Vendor-provided serial number
manufacturer	<i>v1-name</i>	Yes	Vendor-provided manufacturer name
productName	<i>v1-name</i>	Yes	Vendor-provided product name
deviceClass	<i>v1-classCode</i>	Yes	Device Class Code
interfaces	<i>Array&lt;Object&gt;</i>	Yes	List of all interfaces provided by device
portPath	<i>Array&lt;v1-uint8&gt;</i>	Yes	List of the logical IDs of each parent node, starting with the controller ID and followed by the port ID for each parent device.
acronameDevice	<i>Object</i>	No	If an Acroname device is detected in this device's parent tree, information about the Acroname device.
bulkCapability	<i>v1-capability</i>	Yes	Capability information for Bulk Transfers
isochronousCapability	<i>v1-capability</i>	Yes	Capability information for Isochronous Transfers
interruptCapability	<i>v1-capability</i>	Yes	Capability information for Interrupt Transfers

**Object Fields of `usb [].interfaces []`**

Name	Type	Mandatory	Description
interfaceIndex	<i>v1-uint8</i>	Yes	Interface Index within this device
entryIndex	<i>v1-uint8</i>	Yes	Alternate Setting Index within this interface
kClass	<i>v1-classCode</i>	Yes	USB-IF class code for this interface
kSubclass	<i>v1-classCode</i>	Yes	USB-IF subclass code for this interface, qualified by the kClass code
kProtocol	<i>v1-uint8</i>	Yes	USB-IF protocol code for this interface, qualified by the kClass and kSubclass codes

**Object Fields of `usb[] . acronameDevice`**

Name	Type	Mandatory	Description
serialNumber	<i>v1-serialNumber</i>	Yes	Acroname Serial Number
port	<i>v1-uint8</i>	Yes	Physical port number on the Acroname device
distance	<i>v1-uint8</i>	Yes	Number of parent tiers between Acroname device and this device

**v1-vidPid**

Name	Value
Type	string
description	Representation of a USB Device or Vendor ID
Regular Expression	<code>^(0x)?[A-Fa-f0-9]{4}\$</code>

**v1-serialNumber**

Name	Value
Type	string
description	Representation of an Acroname device serial number
Regular Expression	<code>^(0x)?[A-Fa-f0-9]{8}\$</code>

**v1-speed**

Name	Value
Type	string
description	Enumeration of all possible USB speeds
Enumerations	Unknown, 1.5 Mbps, 12 Mbps, 480 Mbps, 5 Gbps, 10 Gbps

**v1-name**

Name	Value
Type	string
description	USB-IF Compliant Name Field
Maximum # of Glyphs	126

**v1-classCode**

Name	Value
Type	integer
description	Enumeration of all possible USB device/interface classes ( <a href="https://vovkos.github.io/doxyrest/samples/libusb/enum_libusb_class_code.html">https://vovkos.github.io/doxyrest/samples/libusb/enum_libusb_class_code.html</a> )
Enumerations	0, 1, 2, 3, 5, 6, 7, 8, 9, 10, 11, 13, 14, 15, 220, 224, 254, 255

**v1-uint8**

Name	Value
Type	integer
description	Unsigned 8-bit integer
minimum	0
maximum	255

**v1-capability**

Name	Value
Type	<i>Object</i>
description	Description for a capability of a device

Name	Type	Mandatory	Description
isDoing	boolean	Yes	Whether the device is currently using this capability
isCapable	boolean	Yes	Whether the device is capable of using this capability



**v1-aErr**

Nam	Value
Type	string
de- scrip tion	Enumeration of all possible error results
Enu- mer- a- tions	aErrNone, aErrMemory, aErrParam, aErrNotFound, aErrFileNameLength, aErrBusy, aErrIO, aErrMode, aErrWrite, aErrRead, aErrEOF, aErrNotReady, aErrPermission, aErrRange, aErrSize, aErrOverrun, aErrParse, aErrConfiguration, aErrTime-out, aErrInitialization, aErrVersion, aErrUnimplemented, aErrDuplicate, aErrCancel, aErrPacket, aErrConnection, aErrIndexRange, aErrShortCommand, aErrInvalidEntity, aErrInvalidOption, aErrResource, aErrMedia, aErrAsyncReturn, aErrOperation, aErrUnknown

**v1-error**

Name	Value
Type	<i>Object</i>
description	Error containing an Acroname error

Name	Type	Mandatory	Description
errorCode	<i>v1-aErr</i>	Yes	Acroname error code
errorMes- sage	string	No	A human-readable message to describe the context of the error.

**Examples****Bash**

```
curl http://127.0.0.1:9005/api/v1/devices
```

**Python**

```
import requests
import json
response = requests.get('http://127.0.0.1:9005/api/v1/devices')
json_data = response.json()
print(json.dumps(json_data, indent=4))
```

The output will be similar to the following:

```

1 {
2   "timestamp": "2023-09-20T17:36:15.359Z",
3   "request": {
4     "endpointName": "/api/v1/devices",
5     "parameters": {}
6   },
7   "response": {
8     "usb": [
9       {
10        "vendorId": "0x067B",
11        "productId": "0x2303",
12        "speedActual": "12 Mbps",
13        "maxSpeed": "12 Mbps",
14        "productName": "USB-Serial Controller",
15        "serialNumber": "",
16        "manufacturer": "Prolific Technology Inc.",
17        "deviceClass": 0,
18        "interfaces": [
19          {
20            "interfaceIndex": 0,
21            "entryIndex": 0,
22            "kClass": 255,
23            "kSubclass": 0,
24            "kProtocol": 0
25          }
26        ],
27        "portPath": [
28          4,
29          3,
30          1
31        ],
32        "acronameDevice": {
33          "serialNumber": "0xF7D9AFB6",
34          "port": 0,
35          "distance": 0
36        },
37        "bulkCapability": {
38          "isDoing": true,
39          "isCapable": true
40        },
41        "isochronousCapability": {
42          "isDoing": false,
43          "isCapable": false
44        },
45        "interruptCapability": {
46          "isDoing": true,
47          "isCapable": true
48        }
49      },
50      {
51        "vendorId": "0x2188",
52        "productId": "0x0747",
53        "speedActual": "5 Gbps",
54        "maxSpeed": "5 Gbps",
55        "productName": "Card Reader ",
56        "serialNumber": "000000000010",
57        "manufacturer": "CalDigit",

```

(continues on next page)

(continued from previous page)

```

58     "deviceClass": 0,
59     "interfaces": [
60         {
61             "interfaceIndex": 0,
62             "entryIndex": 0,
63             "kClass": 8,
64             "kSubclass": 6,
65             "kProtocol": 80
66         }
67     ],
68     "portPath": [
69         4,
70         8
71     ],
72     "bulkCapability": {
73         "isDoing": true,
74         "isCapable": true
75     },
76     "isochronousCapability": {
77         "isDoing": false,
78         "isCapable": false
79     },
80     "interruptCapability": {
81         "isDoing": false,
82         "isCapable": false
83     }
84 }
85 ]
86 }
87 }

```

## brainstem Endpoint

This reference builds on understanding of the BrainStem system. If you would like to get started using BrainStem, please see the following sections of the Reference documentation:

- [BrainStem Overview](#)
- [BrainStem Terminology](#)
- [Getting Started with the BrainStem.](#)

BrainStem GET commands are implemented with HTTP `GET` calls, and SET commands are implemented with HTTP `PUT` calls. The entity and operation fields are mapped directly to BrainStem API calls, minus the `get` and `set` prefixes on the operations.

The parameters for the command are given as slash-separated path entries:

- GET `http://<IPADDRESS>:<PORT>/api/v1/brainstem/<SERIALNUM>/<ENTITY>/<INDEX>/<COMMAND>`
- GET `http://<IPADDRESS>:<PORT>/api/v1/brainstem/<SERIALNUM>/<ENTITY>/<INDEX>/<COMMAND> {BODY}`

Table 21: BrainStem Request Parameters

Parameter	Request Type	Description
IPAD-DRESS	GET, PUT	IP Address of BrainD server hosting RESTful endpoints.
PORT	GET, PUT	Port that BrainD server is listening for connections. Default is 9005.
SERIAL-NUM	GET, PUT	Serial Number of the BrainStem device being accessed
ENTITY	GET, PUT	<i>BrainStem Entity</i> , e.g. system, temperature, digital.
INDEX	GET, PUT	Entity Index
COM-MAND	GET, PUT	Operation to perform on entity without <code>get</code> or <code>set</code> prefix, e.g. <code>inputvoltage</code> , <code>currentlimit</code> , <code>name</code> .
BODY	PUT	HTTP <code>PUT</code> payload, matching <i>PUT Request JSON Schema</i>

**Note:** The following BrainStem Entities are unsupported at this time: `app`, `i2c`, `powerDelivery`

## Analog Endpoint

Interface to analog entities on BrainStem modules.

Analog entities may be configured as a input or output depending on hardware capabilities.

Some modules are capable of providing actual voltage readings, while other simply return the raw analog-to-digital converter (ADC) output value.

The resolution of the voltage or number of useful bits is also hardware dependent.

See the *Analog Entity* for generic information.

**GET** `/api/v1/brainstem/ (serial_num) /analog/ index/value`

Get the raw ADC output value in bits.

See *JSON Schema for Response Object*

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /analog/ index/voltage`

Get the scaled micro volt value with reference to ground.

See *JSON Schema for Response Object*

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/range

Get the analog input range.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/enable

Get the analog output enable status.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/value

Set the value of an analog output (DAC) in bits.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 16-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/voltage

Set the voltage level of an analog output (DAC) in microvolts.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/range

Set the analog input range.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/enable

Set the analog output enable state.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*boolean*) – Boolean value to set.

May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/configuration

Set the analog configuration.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/configuration

Get the analog configuration.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/bulkcapturesamplerate

Set the sample rate for this analog when bulk capturing.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /analog/  
*index/bulkcapturesamplerate*

Get the current sample rate setting for this analog when bulk capturing.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /analog/  
*index/bulkcapturenumberofsamples*

Set the number of samples to capture for this analog when bulk capturing.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /analog/  
*index/bulkcapturenumberofsamples*

Get the current number of samples setting for this analog when bulk capturing.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.



- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/bulkcapture

Initiate a BulkCapture on this analog.

Captured measurements are stored in the module's RAM store (RAM\_STORE) slot 0.

Data is stored in a contiguous byte array with each sample stored in two consecutive bytes, LSB first.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**GET** /api/v1/brainstem/ (*serial\_num*) /analog/  
index/bulkcapturestate

Get the current bulk capture state for this analog.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## App Endpoint

Used to send a cmdAPP packet to the BrainStem network.

These commands are used for either host-to-stem or stem-to-stem interactions.

BrainStem modules can implement a reflex origin to complete an action when a cmdAPP packet is addressed to the module.

See the [App Entity](#) for generic information.

**PUT** /api/v1/brainstem/ (*serial\_num*) /app/  
index/execute

Execute the app reflex on the module.

Doesn't wait for a return value from the execute call; this call returns immediately upon execution of the module's reflex.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

### Clock Endpoint

Provides an interface to a real-time clock entity on a BrainStem module.

The clock entity may be used to get and set the real time of the system.

The clock entity has a one second resolution.

See the [Clock Entity](#) for generic information.

**GET** /api/v1/brainstem/ (*serial\_num*) /clock/  
*index/year*

Get the four digit year value (0-4095).

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /clock/  
*index/year*

Set the four digit year value (0-4095).

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 16-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /clock/  
index/month

Get the two digit month value (1-12).

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /clock/  
index/month

Set the two digit month value (1-12).

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /clock/  
index/day

Get the two digit day of month value (1-28, 29, 30 or 31 depending on the month).

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /clock/  
index/day

Set the two digit day of month value (1-28, 29, 30 or 31 depending on the month).

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /clock/  
*index*/hour

Get the two digit hour value (0-23).

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /clock/  
*index*/hour

Set the two digit hour value (0-23).

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /clock/  
index/minute

Get the two digit minute value (0-59).

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /clock/  
index/minute

Set the two digit minute value (0-59).

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /clock/  
index/second

Get the two digit second value (0-59).

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /clock/  
index/second

Set the two digit second value (0-59).

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

### Digital Endpoint

Interface to digital entities on BrainStem modules.

Digital entities have the following 5 possibilities: Digital Input, Digital Output, RCServo Input, RCServo Output, and HighZ.

Other capabilities may be available and not all pins support all configurations. Please see the product datasheet.

See the [Digital Entity](#) for generic information.

**PUT** `/api/v1/brainstem/ (serial_num) /digital/  
index/configuration`

Set the digital configuration to one of the available 5 states.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /digital/  
index/configuration`

Get the digital configuration.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /digital/  
index/state

Set the logical state.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /digital/  
index/state

Get the state.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /digital/  
index/stateall

Sets the logical state of all available digitals based on the bit mapping.

Number of digitals varies across BrainStem modules.

Refer to the datasheet for the capabilities of your module.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /digital/  
*index/stateall*

Gets the logical state of all available digitals in a bit mapped representation.

Number of digitals varies across BrainStem modules.

Refer to the datasheet for the capabilities of your module.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /digital/  
*index/value*

Set the expected value of the digital pin.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object



- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /digital/  
index/value

Get the expected value of the digital pin.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /digital/  
index/linkchannel

Set the link channel (entity index) for linking digital entities.

Two digital entities will link when one is configured as LinkInput, one as LinkOutput, and both have each others linkChannel indexes.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.
- May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /digital/  
index/linkchannel

Get the link channel (entity index) for linking digital entities.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

### Equalizer Endpoint

Provides receiver and transmitter gain/boost/emphasis settings for some of Acroname's products.

Please see product documentation for further details.

See the [Equalizer Entity](#) for generic information.

**PUT** /api/v1/brainstem/ (*serial\_num*) /equalizer/  
index/receiverconfig/channel

Sets the receiver configuration for a given channel.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The equalizer receiver channel.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /equalizer/  
index/receiverconfig/channel

Gets the receiver configuration for a given channel.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The equalizer receiver channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /equalizer/  
index/transmitterconfig

Sets the transmitter configuration

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /equalizer/  
index/transmitterconfig

Gets the transmitter configuration

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## Ethernet Endpoint

IP configuration. MAC info. BrainD port.

See the [Ethernet Entity](#) for generic information.

**PUT** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/enabled

Sets the Ethernet’s interface to enabled/disabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.

May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/enabled

Gets the current enable value of the Ethernet interface.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/networkconfiguration

Get the method in which IP Address is assigned to this device

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/networkconfiguration

Get the method in which IP Address is assigned to this device

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.
- May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/staticipv4address

Get the expected IPv4 address of this device, when networkConfiguration == STATIC

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/staticipv4address

Set the desired IPv4 address of this device, if NetworkConfiguration == STATIC.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*list*) – List of 8-bit values to set.  
May be specified as: \* String (formatted as "Hello", "x40x41", etc.) \* List of integers \*  
List of strings (formatted as "0x40", "40", etc.)

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/staticipv4netmask

Get the expected IPv4 netmask of this device, when networkConfiguration == STATIC

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string

- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/staticip4netmask

Set the desired IPv4 address of this device, if NetworkConfiguration == STATIC

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*list*) – List of 8-bit values to set.

May be specified as: \* String (formatted as “Hello”, “x40x41”, etc.) \* List of integers \* List of strings (formatted as “0x40”, “40”, etc.)

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/staticip4gateway

Get the expected IPv4 gateway of this device, when networkConfiguration == STATIC

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/staticip4gateway

Set the desired IPv4 gateway of this device, if NetworkConfiguration == STATIC

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*list*) – List of 8-bit values to set.

May be specified as: \* String (formatted as “Hello”, “x40x41”, etc.) \* List of integers \* List of strings (formatted as “0x40”, “40”, etc.)

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list (integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/ipv4address

Get the effective IP address of this device.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list (integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/ipv4netmask

Get the effective IP netmask of this device.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list (integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/ipv4gateway

Get the effective IP gateway of this device.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list (integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/staticipv4dnsaddress

Set IPv4 DNS Addresses (plural), if NetworkConfiguration == STATIC

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*list*) – List of 8-bit values to set.  
May be specified as: \* String (formatted as “Hello”, “x40x41”, etc.) \* List of integers \* List of strings (formatted as “0x40”, “40”, etc.)

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/staticipv4dnsaddress

Get IPv4 DNS addresses (plural), when NetworkConfiguration == STATIC

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/ipv4dnsaddress

Get effective IPv4 DNS addresses, for the current NetworkConfiguration

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/hostname



Set hostname that's requested when this device sends a DHCP request.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*list*) – List of 8-bit values to set.  
May be specified as: \* String (formatted as "Hello", "x40x41", etc.) \* List of integers \* List of strings (formatted as "0x40", "40", etc.)

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/hostname

Get hostname that's requested when this device sends a DHCP request.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/macaddress

Get the MAC address of the Ethernet interface.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/interfaceport/service

Set the port of a TCPIP service on the device.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **service** – The index of the service to set the port for.

#### Request JSON Object

- **value** (*integer*) – 16-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /ethernet/  
index/interfaceport/service

Get the port of a TCPIP service on the device.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **service** – The index of the service to get the port for.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## HDBaseT Endpoint

This entity is only available on certain modules, and provides information on HDBaseT extenders.

See the [HDBaseT Entity](#) for generic information.

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/serialnumber

Gets the serial number of the HDBaseT device (6 bytes)

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/firmwareversion

Gets the firmware version of the HDBaseT device

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/state

Gets the current state of the HDBaseT link

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/cablelength

Gets the perceived cable length

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/msea

Gets the Mean Squared Error (MSE) for channel A

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/mseb

Gets the Mean Squared Error (MSE) for channel B

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/retransmissionrate

Gets the number of successful messages between retransmission

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/linkutilization

Gets the current link utilization

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/encodingstate

Gets the current encoding state.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/usb2devicetree

Gets the USB2 tree at the HDBaseT device.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/usb3devicetree

Gets the USB3 tree at the HDBaseT device.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
index/linkrole

Gets the current link role

In the case of “Auto” the getState API will provide the current role.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /hdbaset/  
*index/linkrole*

Sets the active link role

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## I2C Endpoint

Interface the I2C buses on BrainStem modules.

The class provides a way to send read and write commands to I2C devices on the entities bus.

See the [I2C Entity](#) for generic information.

## Mux Endpoint

A MUX is a multiplexer that takes one or more similar inputs (bus, connection, or signal) and allows switching to one or more outputs.

An analogy would be the switchboard of a telephone operator.

Calls (inputs) come in and by re-connecting the input to an output, the operator (multiplexer) can direct that input to one or more outputs.

One possible output is to not connect the input to anything which essentially disables that input's connection to anything.

Not every MUX has multiple inputs; some may simply be a single input that can be enabled (connected to a single output) or disabled (not connected to anything).

See the [Mux Entity](#) for generic information.

**GET** `/api/v1/brainstem/ (serial_num) /mux/ index/enable`

Get the mux enable/disable status

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /mux/ index/enable`

Enable the mux.

See [JSON Schema for Request Object](#) and [Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as "True", "FALSE", "1", etc.)

### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /mux/ index/channel`

Get the current selected mux channel.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /mux/  
index/channel

Set the current mux channel.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /mux/  
index/voltage/channel

Get the voltage of the indicated mux channel.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The channel in which voltage was requested.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /mux/  
index/config



Get the configuration of the mux.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /mux/  
index/config

Set the configuration of the mux.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /mux/  
index/split

Get the current split mode mux configuration.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /mux/  
index/split

Sets the mux’s split mode configuration.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PoE Endpoint**

This entity is only available on certain modules, and provides a Power over Ethernet control ability.

See the [PoE Entity](#) for generic information.

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairenabled/pair

Gets the current enable value of the indicated POE pair.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairenabled/pair

Enables or disables the indicated POE pair.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2

– 1 = Pair 3/4

### Request JSON Object

- **value** (*boolean*) – Boolean value to set.

May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/powermode

Gets the power mode of the device

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/powermode

Sets the power mode of the device

See [JSON Schema for Request Object](#) and [Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.
- May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/powerstate

Gets the power state of the device

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairsourcingclass/pair

Gets the sourcing class for a given pair.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairsourcingclass/pair

Sets the sourcing class for a given pair.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairrequestedclass/pair

Gets the requested class for a given pair.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairdiscoveredclass/pair

Gets the discovered class for a given pair.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairdetectionstatus/pair

Gets detected status of the POE connection for a given pair.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairvoltage/pair

Gets the Voltage for a given pair.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/paircurrent/pair

Gets the Current for a given pair.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairresistance/pair

Gets the Resistance for a given pair.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/paircapacitance/pair

Gets the Capacitance for a given pair

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairpower/pair

Get the instantaneous power consumption for a given pair

The equivalent of Voltage x Current

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/totalpower

Gets the total instantaneous power consumption

The equivalent of  $\text{Pair1}(\text{Voltage} \times \text{Current}) + \text{Pair2}(\text{Voltage} \times \text{Current})$

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairaccumulatedpower/pair

Gets the accumulated power for a given pair.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/pairaccumulatedpower/pair

Sets the accumulated power for a given pair.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

#### Request JSON Object



- **value** (*integer*) – 32-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/totalaccumulatedpower

Gets the total Accumulated Power

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /poe/  
index/totalaccumulatedpower

Sets the total accumulated power

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.
- May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## Pointer Endpoint

Allows access to the reflex scratchpad from a host computer.

The Pointers access the pad which is a shared memory area on a BrainStem module.

The interface allows the use of the BrainStem scratchpad from the host, and provides a mechanism for allowing the host application and BrainStem relexes to communicate.

The Pointer allows access to the pad in a similar manner as a file pointer accesses the underlying file.

The cursor position can be set via `setOffset`. A read of a character short or int can be made from that cursor position.

In addition the mode of the pointer can be set so that the cursor position automatically increments or set so that it does not this allows for multiple reads of the same pad value, or reads of multi-record values, via an incrementing pointer.

See the [Pointer Entity](#) for generic information.

**GET** `/api/v1/brainstem/ (serial_num) /pointer/  
index/offset`

Get the offset of the pointer

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /pointer/  
index/offset`

Set the offset of the pointer

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 16-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /pointer/  
index/mode`

Get the mode of the pointer

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /pointer/  
index/mode

Set the mode of the pointer

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /pointer/  
index/transferstore

Get the handle to the store.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /pointer/  
index/transferstore

Set the handle to the store.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /pointer/  
*index*/transfertostore

Transfer data to the store.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /pointer/  
*index*/transfertostore

Transfer data from the store.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /pointer/  
*index*/char

Get a char (1 byte) value from the pointer at this object’s index, where elements are 1 byte long.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /pointer/  
index/char

Set a char (1 byte) value to the pointer at this object's element index, where elements are 1 byte long.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /pointer/  
index/short

Get a short (2 byte) value from the pointer at this objects index, where elements are 2 bytes long

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /pointer/  
index/short

Set a short (2 bytes) value to the pointer at this object's element index, where elements are 2 bytes long.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 16-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /pointer/  
index/int

Get an int (4 bytes) value from the pointer at this objects index, where elements are 4 bytes long

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /pointer/  
index/int

Set an int (4 bytes) value from the pointer at this objects index, where elements are 4 bytes long

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## Port Endpoint

The Port Entity provides software control over the most basic items related to a USB Port.

This includes everything from the complete enable and disable of the entire port to the individual control of specific pins.

Voltage and Current measurements are also included for devices which support the Port Entity.

See the [Port Entity](#) for generic information.

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vbusvoltage

Gets the Vbus Voltage

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vbuscurrent

Gets the Vbus Current

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vconnvoltage

Gets the Vconn Voltage

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vconncurrent

Gets the Vconn Current

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer

- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/powermode

Gets the Port Power Mode: Convenience Function of get/setPortMode

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/powermode

Sets the Port Power Mode: Convenience Function of get/setPortMode

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/portenabled

Gets the current enable value of the port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/portenabled



Enables or disables the entire port.

See *JSON Schema for Request Object* and *Response Object*

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/dataenabled*

Gets the current enable value of the data lines.

Sub-component (Data) of getEnabled.

See *JSON Schema for Response Object*

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/dataenabled*

Enables or disables the data lines.

Sub-component (Data) of setEnabled.

See *JSON Schema for Request Object* and *Response Object*

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datahsenabled

Gets the current enable value of the High Speed (HS) data lines.

Sub-component of getDataEnabled.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datahsenabled

Enables or disables the High Speed (HS) data lines.

Sub-component of setDataEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as "True", "FALSE", "1", etc.)

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datahs1enabled

Gets the current enable value of the High Speed A side (HSA) data lines.

Sub-component of getDataHSEnabled.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datahs1enabled

Enables or disables the High Speed A side (HSA) data lines.

Sub-component of setDataHSEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as "True", "FALSE", "1", etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datahs2enabled

Gets the current enable value of the High Speed B side (HSB) data lines.

Sub-component of getDataHSEnabled.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datahs2enabled

Enables or disables the High Speed B side (HSB) data lines.

Sub-component of setDataHSEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/datassenabled*

Gets the current enable value of the Super Speed (SS) data lines.

Sub-component of getDataEnabled.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/datassenabled*

Enables or disables the Super Speed (SS) data lines.

Sub-component of setDataEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/datass1enabled*

Gets the current enable value of the Super Speed A side (SSA) data lines.

Sub-component of getDataSSEnabled.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datass1enabled

Enables or disables the Super Speed A side (SSA) data lines.

Sub-component of setDataEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datass2enabled

Gets the current enable value of the Super Speed B side (SSB) data lines.

Sub-component of getDataSSEnabled.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /port/  
index/datass2enabled`

Enables or disables the Super Speed B side (SSB) data lines.

Sub-component of setDataSSEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /port/  
index/powerenabled`

Gets the current enable value of the power lines. Sub-component (Power) of getEnabled.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /port/  
index/powerenabled`

Enables or Disables the power lines. Sub-component (Power) of setEnable.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datarole

Gets the Port Data Role.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vconnenabled

Gets the current enable value of the Vconn lines.

Sub-component (Vconn) of getEnabled.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vconnenabled

Enables or disables the Vconn lines.

Sub-component (Vconn) of setEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as "True", "FALSE", "1", etc.)

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vconn1enabled

Gets the current enable value of the Vconn1 lines.

Sub-component of getVconnEnabled.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vconn1enabled

Enables or disables the Vconn1 lines.

Sub-component of setVconnEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as "True", "FALSE", "1", etc.)

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vconn2enabled

Gets the current enable value of the Vconn2 lines.

Sub-component of getVconnEnabled.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.



- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vconn2enabled

Enables or disables the Vconn2 lines.

Sub-component of setVconnEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/ccenabled

Gets the current enable value of the CC lines.

Sub-component (CC) of getEnabled.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/ccenabled

Enables or disables the CC lines.

Sub-component (CC) of setEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/cc1enabled

Gets the current enable value of the CC1 lines.

Sub-component of getCCEnabled.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/cc1enabled

Enables or disables the CC1 lines.

Sub-component of setCCEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/cc2enabled

Gets the current enable value of the CC2 lines.

Sub-component of getCCEnabled.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/cc2enabled

Enables or disables the CC2 lines.

Sub-component of setCCEnabled.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/voltagesetpoint

Gets the current voltage setpoint value for the port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/voltagesetpoint

Sets the current voltage setpoint value for the port.

See *JSON Schema for Request Object* and *Response Object*

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/portstate

A bit mapped representation of the current state of the port.

Reflects what the port IS which may differ from what was requested.

See *JSON Schema for Response Object*

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/dataspeed

Gets the speed of the enumerated device.

See *JSON Schema for Response Object*

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/portmode

Gets current mode of the port

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/portmode

Sets the mode of the port

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/errors

Returns any errors that are present on the port.

Calling this function will clear the current errors. If the error persists it will be set again.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/currentlimit

Gets the current limit of the port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/currentlimit*

Sets the current limit of the port.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/currentlimitmode*

Gets the current limit mode.

The mode determines how the port will react to an over current condition.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/currentlimitmode*

Sets the current limit mode.

The mode determines how the port will react to an over current condition.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/availablepower*

Gets the current available power.

This value is determined by the power manager which is responsible for budgeting the systems available power envelope.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/allocatedpower*

Gets the currently allocated power

This value is determined by the power manager which is responsible for budgeting the systems available power envelope.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer

- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/powerlimit

Gets the user defined power limit for the port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/powerlimit

Sets a user defined power limit for the port.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/powerlimitmode

Gets the power limit mode.

The mode determines how the port will react to an over power condition.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/powerlimitmode



Sets the power limit mode.

The mode determines how the port will react to an over power condition.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/name*

Gets a user defined name of the port.

Helpful for identifying ports/devices in a static environment.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/name*

Sets a user defined name of the port.

Helpful for identifying ports/devices in a static environment.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*list*) – List of 8-bit values to set.  
May be specified as: \* String (formatted as “Hello”, “x40x41”, etc.) \* List of integers \*  
List of strings (formatted as “0x40”, “40”, etc.)

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list (integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/cccurrentlimit

Gets the CC Current Limit Resistance

The CC Current limit is the value that's set for the pull up resistance on the CC lines for basic USB-C negotiations.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/cccurrentlimit

Sets the CC Current Limit Resistance

The CC Current limit is the value that's set for the pull up resistance on the CC lines for basic USB-C negotiations.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datahsroutingbehavior

Gets the HighSpeed Data Routing Behavior.

The mode determines how the port will route the data lines.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datahsroutingbehavior

Sets the HighSpeed Data Routing Behavior.

The mode determines how the port will route the data lines.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datassroutingbehavior

Gets the SuperSpeed Data Routing Behavior.

The mode determines how the port will route the data lines.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/datassroutingbehavior

Sets the SuperSpeed Data Routing Behavior.

The mode determines how the port will route the data lines.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/vbusaccumulatedpower*

Gets the Vbus Accumulated Power

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/vbusaccumulatedpower*

Sets the Vbus Accumulated Power

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/resetvbusaccumulatedpower*

Resets the Vbus Accumulated Power to zero.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vconnaccumulatedpower

Gets the Vconn Accumulated Power

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/vconnaccumulatedpower

Sets the Vconn Accumulated Power

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/resetvconnaccumulatedpower

Resets the Vconn Accumulated Power to zero.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/hsboost

Sets the ports USB 2.0 High Speed Boost Settings

The setting determines how much additional drive the USB 2.0 signal will have in High Speed mode.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/hsboost

Gets the ports USB 2.0 High Speed Boost Settings

The setting determines how much additional drive the USB 2.0 signal will have in High Speed mode.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index*/cc1state

Gets the current CC1 Strapping on local and remote

The state is a bit packed value where the upper byte is used to represent the remote or partner device attached to the ports resistance and the lower byte is used to represent the local or hubs resistance.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /port/  
index/cc2state`

Gets the current CC2 Strapping on local and remote

The state is a bit packed value where the upper byte is used to represent the remote or partner device attached to the ports resistance and the lower byte is used to represent the local or hubs resistance.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /port/  
index/sbu1voltage`

Get the voltage of SBU1 for a port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /port/  
index/sbu2voltage`

Get the voltage of SBU2 for a port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /port/  
index/cc1voltage`

Get the voltage of CC1 for a port.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/cc2voltage*

Get the voltage of CC2 for a port.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/cc1current*

Get the current through the CC1 for a port.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
*index/cc2current*

Get the current through the CC2 for a port.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer



- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/cc1accumulatedpower

Gets the CC1 Accumulated Power

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/cc1accumulatedpower

Sets the CC1 Accumulated Power

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /port/  
index/cc2accumulatedpower

Gets the CC2 Accumulated Power

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /port/  
index/cc2accumulatedpower

Sets the CC2 Accumulated Power

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

### PowerDelivery Endpoint

Power Delivery or PD is a power specification which allows more charging options and device behaviors within the USB interface.

This Entity will allow you to directly access the vast landscape of PD.

See the [PowerDelivery Entity](#) for generic information.

**GET** `/api/v1/brainstem/ (serial_num) /powerdelivery/  
index/connectionstate`

Gets the current state of the connection in the form of an enumeration.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /powerdelivery/  
index/numberofpowerdataobjects/partner/powerRole`

Gets the number of Power Data Objects (PDOs) for a given partner and power role.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/powerdataobject/partner/powerRole/ruleIndex

Gets the Power Data Object (PDO) for the requested partner, powerRole and index.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/powerdataobject/powerRole/ruleIndex

Sets the Power Data Object (PDO) of the local partner for a given power role and index.

See [JSON Schema for Request Object](#) and [Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink

- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/resetpowerdataobjecttodefault/powerRole/ruleIndex

Resets the Power Data Object (PDO) of the Local partner for a given power role and index.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/powerdataobjectlist

Gets all Power Data Objects (PDOs).

Equivalent to calling PowerDeliveryClass::getPowerDataObject() on all partners, power roles, and index's.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /powerdelivery/  
index/powerdataobjectenabled/powerRole/ruleIndex`

Gets the enabled state of the Local Power Data Object (PDO) for a given power role and index.

Enabled refers to whether the PDO will be advertised when a PD connection is made.

This does not indicate the currently active rule index. This information can be found in Request Data Object (RDO).

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /powerdelivery/  
index/powerdataobjectenabled/powerRole/ruleIndex`

Sets the enabled state of the Local Power Data Object (PDO) for a given powerRole and index.

Enabled refers to whether the PDO will be advertised when a PD connection is made.

This does not indicate the currently active rule index. This information can be found in Request Data Object (RDO).

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean

- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/powerdataobjectenabledlist/powerRole

Gets all Power Data Object enables for a given power role.

Equivalent of calling PowerDeliveryClass::getPowerDataObjectEnabled() for all indexes.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/requestdataobject/partner

Gets the current Request Data Object (RDO) for a given partner.

RDOs are provided by the sinking device and exist only after a successful PD negotiation (Otherwise zero).

Only one RDO can exist at a time. i.e. Either the Local or Remote partner RDO

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/requestdataobject

Sets the current Request Data Object (RDO) for a given partner.

Only the local partner can be changed.

RDOs are provided by the sinking device and exist only after a successful PD negotiation (Otherwise zero).

Only one RDO can exist at a time. i.e. Either the Local or Remote partner RDO

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/linkstate

Gets the current state of the connection in the form of a bitmask.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/attachtimeelapsed

Gets the length of time that the port has been in the attached state.

Returned as a list of two unsigned integers, first seconds, then microseconds.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/powerrolecapabilities

Gets the power roles that may be advertised by the local partner. (CC Strapping).

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/powerrole

Gets the power role that is currently being advertised by the local partner. (CC Strapping).

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/powerrole

Set the current power role to be advertised by the Local partner. (CC Strapping).

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/powerrolepreferred

Gets the preferred power role currently being advertised by the Local partner. (CC Strapping).

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.



- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/powerrolepreferred

Set the preferred power role to be advertised by the Local partner (CC Strapping).

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/datarolecapabilities

Gets the data roles that may be advertised by the local partner.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/cablevoltagegmax

Gets the maximum voltage capability reported by the e-mark of the attached cable.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer

- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/cablecurrentmax

Gets the maximum current capability report by the e-mark of the attached cable.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/cablespeedmax

Gets the maximum data rate capability reported by the e-mark of the attached cable.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/cabletype

Gets the cable type reported by the e-mark of the attached cable.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/cableorientation

Gets the current orientation being used for PD communication

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/requestcommand

Requests an action of the Remote partner.

Actions are not guaranteed to occur.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/requeststatus

Gets the status of the last request command sent.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/override

Gets the current enabled overrides

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/override

Sets the current enabled overrides

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/flagmode/flag

Gets the current mode of the local partner flag/advertisement.

These flags are apart of the first Local Power Data Object and must be managed in order to accurately represent the system to other PD devices.

This API allows overriding of that feature. Overriding may lead to unexpected behaviors.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **flag** – Flag/Advertisement to be modified

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/flagmode/flag

Sets how the local partner flag/advertisement is managed.

These flags are apart of the first Local Power Data Object and must be managed in order to accurately represent the system to other PD devices.

This API allows overriding of that feature. Overriding may lead to unexpected behaviors.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **flag** – Flag/Advertisement to be modified

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/peakcurrentconfiguration

Gets the Peak Current Configuration for the Local Source.

The peak current configuration refers to the allowable tolerance/overload capabilities in regards to the devices max current.

This tolerance includes a maximum value and a time unit.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/peakcurrentconfiguration

Sets the Peak Current Configuration for the Local Source.

The peak current configuration refers to the allowable tolerance/overload capabilities in regards to the devices max current.

This tolerance includes a maximum value and a time unit.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/fastroleswapcurrent

Gets the Fast Role Swap Current

The fast role swap current refers to the amount of current required by the Local Sink in order to successfully preform the swap.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /powerdelivery/  
index/fastroleswapcurrent

Sets the Fast Role Swap Current

The fast role swap current refers to the amount of current required by the Local Sink in order to successfully preform the swap.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## RCServo Endpoint

Interface to servo entities on BrainStem modules.

Servo entities are built upon the digital input/output pins and therefore can also be inputs or outputs.

Please see the product datasheet on the configuration limitations.

See the [RCServo Entity](#) for generic information.

**PUT** `/api/v1/brainstem/ (serial_num) /servo/  
index/enable`

Enable the servo channel

See [JSON Schema for Request Object](#) and [Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /servo/  
index/enable`

Get the enable status of the servo channel.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /servo/  
index/position`

Set the position of the servo channel

See [JSON Schema for Request Object](#) and [Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /servo/  
*index/position*

Get the position of the servo channel

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /servo/  
*index/reverse*

Set the output to be reversed on the servo channel

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.

May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /servo/  
*index/reverse*

Get the reverse status of the servo channel

See [JSON Schema for Response Object](#)

#### Parameters



- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

### Rail Endpoint

Provides power rail functionality on certain modules.

The RailClass can be used to control power to downstream devices.

It has the ability to take current and voltage measurements, and depending on hardware, may have additional modes and capabilities.

See the [Rail Entity](#) for generic information.

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/current

Get the rail current.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/currentsetpoint

Set the rail supply current. Rail current control capabilities vary between modules.

Refer to the module datasheet for definition of the rail current capabilities.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer

- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/currentsetpoint

Get the rail setpoint current. Rail current control capabilities vary between modules.

Refer to the module datasheet for definition of the rail current capabilities.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/currentlimit

Set the rail current limit setting. (Check product datasheet to see if this feature is available)

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/currentlimit

Get the rail current limit setting. (Check product datasheet to see if this feature is available)

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/temperature

Get the rail temperature.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/enable

Get the state of the external rail switch. Not all rails can be switched on and off.

Refer to the module datasheet for capability specification of the rails.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/enable

Set the state of the external rail switch.

Not all rails can be switched on and off. Refer to the module datasheet for capability specification of the rails.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /rail/  
index/voltage`

Get the rail supply voltage.

Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /rail/  
index/voltagesetpoint`

Set the rail supply voltage.

Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /rail/  
index/voltagesetpoint`

Get the rail setpoint voltage.

Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/voltageminlimit

Set the rail voltage minimum limit setting. (Check product datasheet to see if this feature is available)

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/voltageminlimit

Get the rail voltage minimum limit setting. (Check product datasheet to see if this feature is available)

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/voltagemaxlimit

Set the rail voltage maximum limit setting. (Check product datasheet to see if this feature is available)

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/voltagemaxlimit

Get the rail voltage maximum limit setting. (Check product datasheet to see if this feature is available)

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/power

Get the rail supply power.

Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/powersetpoint

Set the rail supply power.

Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/powersetpoint

Get the rail setpoint power.

Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/powerlimit

Set the rail power maximum limit setting. (Check product datasheet to see if this feature is available)

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/powerlimit

Get the rail power maximum limit setting. (Check product datasheet to see if this feature is available)

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/resistance

Get the rail load resistance.

Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/resistancesetpoint

Set the rail load resistance.

Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/resistancesetpoint

Get the rail setpoint resistance.

Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.



- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/kelvinsensingenable

Enable or Disable kelvin sensing on the module.

Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as "True", "FALSE", "1", etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/kelvinsensingenable

Determine whether kelvin sensing is enabled or disabled.

Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/kelvinsensingstate

Determine whether kelvin sensing has been disabled by the system.

Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/operationalmode

Set the operational mode of the rail.

Refer to the module datasheet for definition of the rail operational capabilities.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/operationalmode

Determine the current operational mode of the system.

Refer to the module datasheet for definition of the rail operational mode capabilities.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/operationalstate

Determine the current operational state of the system.

Refer to the module datasheet for definition of the rail operational states.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /rail/  
index/clearfaults

Clears the current fault state of the rail.

Refer to the module datasheet for definition of the rail faults.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Relay Endpoint

Interface to relay entities on BrainStem modules.

Relay entities can be set, and the voltage read.

Other capabilities may be available, please see the product datasheet.

See the [Relay Entity](#) for generic information.

**PUT** /api/v1/brainstem/ (*serial\_num*) /relay/  
index/enable

Set the enable/disable state.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /relay/  
index/enable

Get the state.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /relay/  
*index/voltage*

Get the scaled micro volt value with reference to ground.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

### Signal Endpoint

Interface to digital pins configured to produce square wave signals.

This class is designed to allow for square waves at various frequencies and duty cycles.

Control is defined by specifying the wave period as (T3Time) and the active portion of the cycle as (T2Time).

See the entity overview section of the reference for more detail regarding the timing.

See the [Signal Entity](#) for generic information.

**PUT** /api/v1/brainstem/ (*serial\_num*) /signal/  
*index/enable*

Enable/Disable the signal output.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.

May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /signal/  
index/enable

Get the Enable/Disable of the signal.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /signal/  
index/invert

Invert the signal output.

Normal mode is High on t0 then low at t2.

Inverted mode is Low at t0 on period start and high at t2.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.
- May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /signal/  
index/invert

Get the invert status the signal output.

Normal mode is High on t0 then low at t2.

Inverted mode is Low at t0 on period start and high at t2.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /signal/  
index/t3time

Set the signal period or T3 in nanoseconds.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /signal/  
index/t3time

Get the signal period or T3 in nanoseconds.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /signal/  
index/t2time

Set the signal active period or T2 in nanoseconds.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /signal/  
index/t2time

Get the signal active period or T2 in nanoseconds.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## Store Endpoint

The store provides a flat file system on modules that have storage capacity.

Files are referred to as slots and they have simple zero-based numbers for access.

Store slots can be used for generalized storage and commonly contain compiled reflex code (files ending in .map) or templates used by the system.

Slots simply contain bytes with no expected organization but the code or use of the slot may impose a structure.

Stores have fixed indices based on type.

Not every module contains a store of each type. Consult the module datasheet for details on which specific stores are implemented, if any, and the capacities of implemented stores.

See the [Store Entity](#) for generic information.

**GET** /api/v1/brainstem/ (*serial\_num*) /store/  
index/slotstate/slot

Get slot state.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.
- **slot** – The slot number.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /store/  
index/slotenable

Enable slot.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.
- May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /store/  
index/slotdisable

Disable slot.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.
- May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /store/  
index/lock/slot

Gets the current lock state of the slot

Allows for write protection on a slot.

See [JSON Schema for Response Object](#)



**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **slot** – The slot number

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /store/  
index/lock/slot

Sets the locked state of the slot

Allows for write protection on a slot.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **slot** – The slot number

**Request JSON Object**

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**System Endpoint**

The System class provides access to the core settings, configuration and system information of the BrainStem module.

The class provides access to the model type, serial number and other static information as well as the ability to set boot reflexes, toggle the user LED, as well as affect module and router addresses etc.

See the [System Entity](#) for generic information.

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/module

Get the current address the module uses on the BrainStem network.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
*index/modulebaseaddress*

Get the base address of the module.

Software offsets and hardware offsets are added to this base address to produce the effective module address.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /system/  
*index/router*

Set the router address the module uses to communicate with the host and heartbeat to in order to establish the BrainStem network.

This setting must be saved and the board reset before the setting becomes active.

Warning: changing the router address may cause the module to “drop off” the BrainStem network if the new router address is not in use by a BrainStem module.

Please review the BrainStem network fundamentals before modifying the router address.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
*index/router*

Get the router address the module uses to communicate with the host and heartbeat to in order to establish the BrainStem network.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /system/  
index/hbinterval

Set the delay between heartbeat packets which are sent from the module.

For link modules, these these heartbeat are sent to the host.

For non-link modules, these heartbeats are sent to the router address.

Interval values are in 25.6 millisecond increments

Valid values are 1-255; default is 10 (256 milliseconds).

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/hbinterval

Get the delay between heartbeat packets which are sent from the module.

For link modules, these these heartbeat are sent to the host.

For non-link modules, these heartbeats are sent to the router address.

Interval values are in 25.6 millisecond increments.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /system/  
index/led

Set the system LED state. Most modules have a blue system LED.

Refer to the module datasheet for details on the system LED location and color.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/led

Get the system LED state. Most modules have a blue system LED.

Refer to the module datasheet for details on the system LED location and color.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /system/  
index/ledmaxbrightness

Sets the scaling factor for the brightness of all LEDs on the system.

The brightness is set to the ratio of this value compared to 255 (maximum).

The colors of each LED may be inconsistent at low brightness levels.

Note that if the brightness is set to zero and the settings are saved, then the LEDs will no longer indicate whether the system is powered on.

When troubleshooting, the user configuration may need to be manually reset in order to view the LEDs again.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/ledmaxbrightness

Gets the scaling factor for the brightness of all LEDs on the system.

The brightness is set to the ratio of this value compared to 255 (maximum).

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /system/  
index/bootslot

Set a store slot to be mapped when the module boots.

The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command.

Set the slot to 255 to disable mapping on boot.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/bootslot

Get the store slot which is mapped when the module boots.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/version

Get the modules firmware version number.

The version number is packed into the return value.

Utility functions in the aVersion module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/build

Get the modules firmware build number

The build number is a unique hash assigned to a specific firmware.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer

- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/model

Get the module's model enumeration.

A subset of the possible model enumerations is defined in BrainStem.h under "BrainStem model codes".

Other codes are be used by Acroname for proprietary module types.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/hardwareversion

Get the module's hardware revision information.

The content of the hardware version is specific to each Acroname product and used to indicate behavioral differences between product revisions.

The codes are not well defined and may change at any time.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/serialnumber

Get the module's serial number.

The serial number is a unique 32 bit integer which is usually communicated in hexadecimal format.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer

- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/save

Save the system operating parameters to the persistent module flash memory.

Operating parameters stored in the system flash will be loaded after the module reboots.

Operating parameters include: heartbeat interval, module address, module router address.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/reset

Reset the system.

A return value of aErrTimeout indicates a successful reset, as the system resets immediately, which tears down the USB-link immediately, thus preventing an affirmative response.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/logevents

Saves system log events to a slot defined by the module (usually ram slot 0).

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/uptime

Get the module's accumulated uptime in minutes

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value



**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/temperature

Get the module's current temperature in micro-C

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/mintemperature

Get the module's minimum temperature ever recorded in micro-C (uC).

This value will persists through a power cycle.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/maxtemperature

Get the module's maximum temperature ever recorded in micro-C (uC).

This value will persists through a power cycle.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/inputvoltage

Get the module's input voltage.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/inputcurrent

Get the module’s input current.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/modulehardwareoffset

Get the module hardware address offset. This is added to the base address to allow the module address to be configured in hardware.

Not all modules support the hardware module address offset. Refer to the module datasheet.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /system/  
index/modulesoftwareoffset

Set the software address offset.

This software offset is added to the module base address, and potentially a module hardware address to produce the final module address.

You must save the system settings and restart for this to take effect.

Please review the BrainStem network fundamentals before modifying the module address.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/modulesoftwareoffset

Get the software address offset.

This software offset is added to the module base address, and potentially a module hardware address to produce the final module address.

You must save the system settings and restart for this to take effect.

Please review the BrainStem network fundamentals before modifying the module address.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/routeraddresssetting

Get the router address system setting.

This setting may not be the same as the current router address if the router setting was set and saved but no reset has occurred.

Please review the BrainStem network fundamentals before modifying the module address.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /system/  
index/routetome`

Enables/Disables the route to me function.

This function allows for easy networking of BrainStem modules.

Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device.

Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /system/  
index/powerlimit`

Reports the amount of power the system has access to and thus how much power can be budgeted to sinking devices.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /system/  
index/powerlimitmax`

Gets the user defined maximum power limit for the system.

Provides mechanism for defining an unregulated power supplies capability.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /system/  
index/powerlimitmax

Sets a user defined maximum power limit for the system.

Provides mechanism for defining an unregulated power supplies capability.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/powerlimitstate

Gets a bit mapped representation of the factors contributing to the power limit.

Active limit can be found through PowerDeliverClass::getPowerLimit().

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/unregulatedvoltage

Gets the voltage present at the unregulated port.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/unregulatedcurrent

Gets the current passing through the unregulated port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/inputpowersource

Provides the source of the current power source in use.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/inputpowerbehavior

Gets the systems input power behavior.

This behavior refers to where the device sources its power from and what happens if that power source goes away.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /system/  
index/inputpowerbehavior

Sets the systems input power behavior.

This behavior refers to where the device sources its power from and what happens if that power source goes away.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/inputpowerbehaviorconfig

Gets the input power behavior configuration

Certain behaviors use a list of ports to determine priority when budgeting power.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /system/  
index/inputpowerbehaviorconfig

Sets the input power behavior configuration

Certain behaviors use a list of ports to determine priority when budgeting power.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*list*) – List of 32-bit values to set.  
May be specified as: \* List of integers \* List of strings (formatted as “0x40”, “40”, etc.)

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/name

Gets a user defined name of the device.

Helpful for identifying ports/devices in a static environment.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /system/  
index/name

Sets a user defined name for the device.

Helpful for identification when multiple devices of the same type are present in a system.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*list*) – List of 8-bit values to set.  
May be specified as: \* String (formatted as "Hello", "x40x41", etc.) \* List of integers \*  
List of strings (formatted as "0x40", "40", etc.)

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a string
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/resetdevicetofactorydefaults

Resets the device to it factory default configuration.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.



**GET** `/api/v1/brainstem/ (serial_num) /system/  
index/linkinterface`

Gets the link interface configuration.

This refers to which interface is being used for control by the device.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /system/  
index/linkinterface`

Sets the link interface configuration.

This refers to which interface is being used for control by the device.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /system/  
index/errors`

Gets any system level errors.

Calling this function will clear the current errors. If the error persists it will be set again.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /system/  
index/protocolfeatures

Gets the firmware protocol features

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

### Temperature Endpoint

This entity is only available on certain modules, and provides a temperature reading in microcelsius.

See the [Temperature Entity](#) for generic information.

**GET** /api/v1/brainstem/ (*serial\_num*) /temperature/  
index/microcelsius

Get the modules temperature in micro-C

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /temperature/  
index/minimummicrocelsius

Get the module’s minimum temperature in micro-C since the last power cycle.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /temperature/  
index/maximummicrocelsius

Get the module's maximum temperature in micro-C since the last power cycle.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

### Timer Endpoint

The Timer Class provides access to a simple scheduler.

The timer can set to fire only once, or to repeat at a certain interval.

Additionally, a timer entity can execute custom Reflex routines upon firing.

See the [Timer Entity](#) for generic information.

**GET** /api/v1/brainstem/ (*serial\_num*) /timer/  
index/expiration

Get the currently set expiration time in microseconds.

This is not a "live" timer. That is, it shows the expiration time originally set with setExpiration; it does not "tick down" to show the time remaining before expiration.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /timer/  
index/expiration

Set the expiration time for the timer entity.

When the timer expires, it will fire the associated timer[index]() reflex.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /timer/  
*index*/mode

Get the mode of the timer which is either single or repeat mode.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /timer/  
*index*/mode

Set the mode of the timer which is either single or repeat mode.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## UART Endpoint

A UART is a “Universal Asynchronous Receiver/Transmitter. Many times referred to as a COM (communication), Serial, or TTY (teletypewriter) port.

The UART Class allows the enabling and disabling of the UART data lines.

See the [UART Entity](#) for generic information.

**PUT** `/api/v1/brainstem/ (serial_num) /uart/  
index/enable`

Enable the UART channel.

See [JSON Schema for Request Object](#) and [Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /uart/  
index/enable`

Get the enabled state of the uart.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /uart/  
index/baudrate`

Set the UART baud rate.

If zero, automatic baud rate selection is used.

See [JSON Schema for Request Object](#) and [Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /uart/  
*index*/baudrate

Get the UART baud rate.

If zero, automatic baud rate selection is used.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /uart/  
*index*/protocol

Set the UART protocol.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /uart/  
*index*/protocol

Get the UART protocol.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /uart/  
index/linkchannel

Set the index of another UART Entity that should be linked to this UART.

If set to the index of this entity, the channel will not be linked.

If set to the index of another UART entity, data will be sent between the two UART entities with no additional processing.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /uart/  
index/linkchannel

Gets the index of the UART Entity that this entity is linked to.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /uart/  
index/stopbits

Set the UART stop bit configuration

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /uart/  
*index/stopbits*

Set the UART stop bit configuration

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /uart/  
*index/parity*

Set the UART parity.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /uart/  
*index/parity*

Get the UART parity.

See [JSON Schema for Response Object](#)

#### Parameters



- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /uart/  
index/databits

Set the number of bits per character

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /uart/  
index/databits

Get the number of bits per character

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /uart/  
index/flowcontrol

Set the UART flow control configuration

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /uart/  
*index*/flowcontrol

Set the UART flow control configuration

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /uart/  
*index*/capableprotocols

Returns a bitmask containing a list of protocols that this UART entity is allowed to select.

This does not guarantee that selecting a protocol with “setProtocol” will have an available resource.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /uart/  
*index*/availableprotocols

Returns a bitmask containing a list of protocols that this UART entity is capable of selecting, and has an available protocol resource to assign.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## USB Endpoint

The USB class provides methods to interact with a USB hub and USB switches.

Different USB hub products have varying support; check the datasheet to understand the capabilities of each product.

See the [USB Entity](#) for generic information.

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/portenable

Enable both power and data lines for a port.

See [JSON Schema for Request Object](#) and [Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/portdisable

Disable both power and data lines for a port.

See [JSON Schema for Request Object](#) and [Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/dataenable

Enable the only the data lines for a port without changing the state of the power line.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index/datadisable*

Disable only the data lines for a port without changing the state of the power line.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index/hispeeddataenable*

Enable the only the data lines for a port without changing the state of the power line, Hi-Speed (2.0) only.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/hispeeddatadisable

Disable only the data lines for a port without changing the state of the power line, Hi- Speed (2.0) only.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/superspeeddataenable

Enable the only the data lines for a port without changing the state of the power line, SuperSpeed (3.0) only.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/superspeeddatadisable

Disable only the data lines for a port without changing the state of the power line, SuperSpeed (3.0) only.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.

- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index*/powerenable

Enable only the power line for a port without changing the state of the data lines.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index*/powerdisable

Disable only the power line for a port without changing the state of the data lines.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index*/portcurrent/channel

Get the current through the power line for a port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/portvoltage/channel

Get the voltage on the power line for a port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/hubmode

Get a bit mapped representation of the hubs mode; see the product datasheet for mode mapping and meaning.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/hubmode

Set a bit mapped hub state; see the product datasheet for state mapping and meaning.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index*/portclearerrorstatus

Clear the error status for the given port.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index*/upstreammode

Get the upstream switch mode for the USB upstream ports. Returns auto, port 0 or port 1.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index*/upstreammode



Set the upstream switch mode for the USB upstream ports. Values are `usbUpstreamModeAuto`, `usbUpstreamModePort0`, `usbUpstreamModePort1`, and `usbUpstreamModeNone`.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /usb/ index/upstreamstate`

Get the upstream switch state for the USB upstream ports.

Returns 2 if no ports plugged in, 0 if the mode is set correctly and a cable is plugged into port 0, and 1 if the mode is set correctly and a cable is plugged into port 1.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /usb/ index/hubenumerationdelay`

Set the inter-port enumeration delay in milliseconds.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index/hubenumerationdelay*

Get the inter-port enumeration delay in milliseconds.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index/portcurrentlimit/channel*

Set the current limit for the port.

If the set limit is not achievable, devices will round down to the nearest available current limit setting.

This setting can be saved with a `stem.system.save()` call.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – USB downstream channel to limit.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index/portcurrentlimit/channel*

Get the current limit for the port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – USB downstream channel to limit.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/portmode/channel

Set the mode for the Port.

The mode is a bitmapped representation of the capabilities of the usb port.

These capabilities change for each of the BrainStem devices which implement the usb entity.

See your device reference page for a complete list of capabilities.

Some devices use a common bit mapping for port mode, as sub-definitions of usbPortMode.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – USB downstream channel to set the mode on.

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/portmode/channel

Get the current mode for the Port.

The mode is a bitmapped representation of the capabilities of the usb port.

These capabilities change for each of the BrainStem devices which implement the usb entity.

See your device reference page for a complete list of capabilities.

Some devices use a common bit mapping for port mode, as sub-definitions of usbPortMode.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – USB downstream channel.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /usb/  
index/portstate/channel`

Get the current State for the Port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – USB downstream channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /usb/  
index/porterror/channel`

Get the current error for the Port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – USB downstream channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /usb/  
index/upstreamboostmode`

Set the upstream boost mode.

Boost mode increases the drive strength of the USB data signals (power signals are not changed).

Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through “pogo” pins.

Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost.

This setting is not applied until a `stem.system.save()` call and power cycle of the hub.

Setting is then persistent until changed or the hub is reset.

After reset, default value of 0% boost is restored.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/downstreamboostmode

Set the downstream boost mode.

Boost mode increases the drive strength of the USB data signals (power signals are not changed).

Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through “pogo” pins.

Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost.

This setting is not applied until a stem.system.save() call and power cycle of the hub.

Setting is then persistent until changed or the hub is reset.

After reset, default value of 0% boost is restored.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/upstreamboostmode

Get the upstream boost mode.

Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer

- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index*/downstreamboostmode

Get the downstream boost mode.

Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index*/downstreamdataspeed/*channel*

Get the current data transfer speed for the downstream port.

The data speed can be Hi-Speed (2.0) or SuperSpeed (3.0) depending on what the downstream device attached is using

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – USB downstream channel to check.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index*/connectmode/*channel*

Sets the connect mode of the switch.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/connectmode/channel

Gets the connect mode of the switch.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/cc1enable/channel

Set Enable/Disable on the CC1 line.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – USB channel.

**Request JSON Object**

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as "True", "FALSE", "1", etc.)

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/cc1enable/channel

Get Enable/Disable on the CC1 line.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

- **channel** – USB channel.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/cc2enable/channel

Set Enable/Disable on the CC2 line.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – USB channel.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/cc2enable/channel

Get Enable/Disable on the CC2 line.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – USB channel.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/cc1current/channel

Get the current through the CC1 for a port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.



- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/cc2current/channel

Get the current through the CC2 for a port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/cc1voltage/channel

Get the voltage of CC1 for a port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/cc2voltage/channel

Get the voltage of CC2 for a port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/sbuenable/channel

Enable/Disable only the SBU1/2 based on the configuration of the usbPortMode settings.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Request JSON Object

- **value** (*boolean*) – Boolean value to set.  
May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/sbuenable/channel

Get the Enable/Disable status of the SBU

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Response JSON Object

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/cableflip/channel

Set Cable flip. This will flip SBU, CC and SS data lines.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

**Request JSON Object**

- **value** (*boolean*) – Boolean value to set.

May be specified as a boolean, integer, or a string (formatted as “True”, “FALSE”, “1”, etc.)

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/cableflip/channel

Get Cable flip setting.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

**Response JSON Object**

- **response.value** (*boolean*) – Value formatted as a boolean
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/altmode/channel

Set USB Alt Mode Configuration.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
index/altmode/channel

Get USB Alt Mode Configuration.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index/sbu1voltage/channel*

Get the voltage of SBU1 for a port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usb/  
*index/sbu2voltage/channel*

Get the voltage of SBU2 for a port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **channel** – The USB sub channel.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

## USBSystem Endpoint

The USBSystem class provides high level control of the lower level Port Class.

See the [USBSystem Entity](#) for generic information.

**GET** `/api/v1/brainstem/ (serial_num) /usbsystem/  
index/upstreamport`

Gets the upstream port.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** `/api/v1/brainstem/ (serial_num) /usbsystem/  
index/upstreamport`

Sets the upstream port.

See [JSON Schema for Request Object](#) and [Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** `/api/v1/brainstem/ (serial_num) /usbsystem/  
index/enumerationdelay`

Gets the inter-port enumeration delay in milliseconds.

Delay is applied upon hub enumeration.

See [JSON Schema for Response Object](#)

### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/enumerationdelay

Sets the inter-port enumeration delay in milliseconds.

Delay is applied upon hub enumeration.

See *JSON Schema for Request Object* and *Response Object*

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/datarolelist

Gets the data role of all ports with a single call

Equivalent to calling PortClass::getDataRole() on each individual port.

See *JSON Schema for Response Object*

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/enabledlist

Gets the current enabled status of all ports with a single call.

Equivalent to calling PortClass::setEnabled() on each port.

See *JSON Schema for Response Object*

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/enabledlist

Sets the enabled status of all ports with a single call.

Equivalent to calling PortClass::setEnabled() on each port.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as "123", "0x12", etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/modelist

Gets the current mode of all ports with a single call.

Equivalent to calling PortClass::getMode() on each port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/modelist

Sets the mode of all ports with a single call.

Equivalent to calling PortClass::setMode() on each port

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*list*) – List of 32-bit values to set.

May be specified as: \* List of integers \* List of strings (formatted as “0x40”, “40”, etc.)

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/statelist

Gets the state for all ports with a single call.

Equivalent to calling PortClass::getState() on each port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/powerbehavior

Gets the behavior of the power manager.

The power manager is responsible for budgeting the power of the system, i.e. What happens when requested power greater than available power.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/powerbehavior

Sets the behavior of how available power is managed, i.e. What happens when requested power is greater than available power.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.



**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.

May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/powerbehaviorconfig

Gets the current power behavior configuration.

Certain power behaviors use a list of ports to determine priority when budgeting power.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/powerbehaviorconfig

Sets the current power behavior configuration.

Certain power behaviors use a list of ports to determine priority when budgeting power.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*list*) – List of 32-bit values to set.

May be specified as: \* List of integers \* List of strings (formatted as “0x40”, “40”, etc.)

**Response JSON Object**

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/databehavior

Gets the behavior of how upstream and downstream ports are determined, i.e. How do you manage requests for data role swaps and new upstream connections.

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbssystem/  
index/databehavior

Sets the behavior of how upstream and downstream ports are determined, i.e. How do you manage requests for data role swaps and new upstream connections.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbssystem/  
index/databehaviorconfig

Gets the current data role behavior configuration.

Certain data role behaviors use a list of ports to determine priority host priority.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbssystem/  
index/databehaviorconfig

Sets the current data role behavior configuration.

Certain data role behaviors use a list of ports to determine host priority.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*list*) – List of 32-bit values to set.  
May be specified as: \* List of integers \* List of strings (formatted as “0x40”, “40”, etc.)

#### Response JSON Object

- **response.value** (*string*) – Value formatted as a list of integers
- **response.rawValue** (*list(integer)*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/selectormode

Gets the current mode of the selector input.

This mode determines what happens and in what order when the external selector input is used.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/selectormode

Sets the current mode of the selector input.

This mode determines what happens and in what order when the external selector input is used.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/upstreamhsport

Gets the USB HighSpeed upstream port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/upstreamhsport

Sets the USB HighSpeed upstream port.

See [JSON Schema for Request Object](#) and [Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Request JSON Object

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/upstreamssport

Gets the USB SuperSpeed upstream port.

See [JSON Schema for Response Object](#)

#### Parameters

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

#### Response JSON Object

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
index/upstreamssport

Sets the USB SuperSpeed upstream port.

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 8-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
*index/override*

Gets the current enabled overrides

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
*index/override*

Sets the current enabled overrides

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
*index/datahsmaxdata rate*

Sets the USB HighSpeed Max data rate

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
*index/dataahsmaxdatarate*

Gets the USB HighSpeed Max datarate

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**PUT** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
*index/datassmaxdatarate*

Sets the USB SuperSpeed Max datarate

See [JSON Schema for Request Object](#) and [Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. “0x1234ABCD”). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Request JSON Object**

- **value** (*integer*) – 32-bit Integer value to set.  
May be specified as an integer or a string (formatted as “123”, “0x12”, etc.)

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**GET** /api/v1/brainstem/ (*serial\_num*) /usbsystem/  
*index/datassmaxdatarate*

Gets the USB SuperSpeed Max datarate

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.

**Response JSON Object**

- **response.value** (*integer*) – Value formatted as an integer
- **response.rawValue** (*integer*) – Unformatted value

**UserConfig Endpoint**

Interface for saving individual entity instances to non-volatile storage.

**GET** /api/v1/brainstem/ (*serial\_num*) /userconfig/  
index/saveentitytostore/command/index

Saves the given entity to the Store

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **command** – Protocol Definition for Entity Command (i.e. value of cmdSOMETHING)
- **index** – Index of Entity to access

**GET** /api/v1/brainstem/ (*serial\_num*) /userconfig/  
index/resetentitytofactorydefaults/command/index

Resets the given entity to factory defaults

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **command** – Protocol Definition for Entity Command (i.e. value of cmdSOMETHING)
- **index** – Index of Entity to access

**GET** /api/v1/brainstem/ (*serial\_num*) /userconfig/  
index/loadentityfromstore/command/index

Restores the saved configuration of the given entity

See [JSON Schema for Response Object](#)

**Parameters**

- **serial\_num** – Serial Number of device to access. Formatted as a hex string (e.g. "0x1234ABCD"). Optional on embedded REST server.
- **index** – Index of entity to access. Default is 0.
- **command** – Protocol Definition for Entity Command (i.e. value of cmdSOMETHING)

- **index** – Index of Entity to access

## Examples

### GET Command

#### Bash

```
curl http://127.0.0.1:9005/api/v1/brainstem/3C43352C/system/0/inputvoltage
```

#### Python

```
import requests
import json
response = requests.get('http://127.0.0.1:9005/api/v1/brainstem/3C43352C/system/0/
↳inputvoltage')
json_data = response.json()
print(json.dumps(json_data, indent=4))
```

The output will be similar to the following:

```
1 {
2   "timestamp": "2023-09-20T17:53:32.480Z",
3   "request": {
4     "endpointName": "/api/v1/brainstem/3C43352C/system/0/inputvoltage",
5     "parameters": {}
6   },
7   "response": {
8     "value": 22974139,
9     "rawValue": 22974139
10  }
11 }
```

### SET Command

#### Bash

```
curl -X PUT -d '{"value": "New Port Name"}' http://127.0.0.1:9005/api/v1/brainstem/
↳3C43352C/port/2/name
```

#### Python

```
import requests
import json

payload = {}
payload['value'] = 'New Port Name'

response = requests.put('http://127.0.0.1:9005/api/v1/brainstem/3C43352C/port/2/name',
↳ json=payload)
json_data = response.json()
print(json.dumps(json_data, indent=4))
```

The output will be similar to the following:



```

1 {
2   "timestamp": "2023-09-20T17:55:15.134Z",
3   "request": {
4     "endpointName": "/api/v1/brainstem/3C43352C/port/2/name",
5     "parameters": {
6       "value": "New Port Name"
7     }
8   },
9   "response": {}
10 }

```

## GET Command with no response

### Bash

```
curl http://127.0.0.1:9005/api/v1/brainstem/3C43352C/system/0/save
```

### Python

```

import requests
import json
response = requests.get('http://127.0.0.1:9005/api/v1/brainstem/3C43352C/system/0/save
↳')
json_data = response.json()
print(json.dumps(json_data, indent=4))

```

The output will be similar to the following:

```

1 {
2   "timestamp": "2023-09-20T17:57:05.245Z",
3   "request": {
4     "endpointName": "/api/v1/brainstem/3C43352C/system/0/save",
5     "parameters": {}
6   },
7   "response": {}
8 }

```

## JSON Schema for GET Response Object

The following table lists a [JSON Schema](#)<sup>121</sup> for the response object.

Download the raw JSON Schema file for this response: `get_brainstem_response.json`

<sup>121</sup> <https://datatracker.ietf.org/doc/html/draft-handrews-json-schema-01>

## Object Fields of Get Brainstem Response

Name	Type	Mandatory	Description
rawValue	<i>v1-rawValue</i>	Yes	
value	string <i>or</i> number	No	If appropriate, a user-friendly formatted value.
units	<i>v1-units</i>	No	

## v1-aErr

Nam	Value
Type	string
de- scrip- tion	Enumeration of all possible error results
Enu- mer- a- tions	aErrNone, aErrMemory, aErrParam, aErrNotFound, aErrFileNameLength, aErrBusy, aErrIO, aErrMode, aErrWrite, aErrRead, aErrEOF, aErrNotReady, aErrPermission, aErrRange, aErrSize, aErrOverrun, aErrParse, aErrConfiguration, aErrTimeout, aErrInitialization, aErrVersion, aErrUnimplemented, aErrDuplicate, aErrCancel, aErrPacket, aErrConnection, aErrIndexRange, aErrShortCommand, aErrInvalidEntity, aErrInvalidOption, aErrResource, aErrMedia, aErrAsyncReturn, aErrOperation, aErrUnknown

## v1-units

Nam	Value
Type	string
de- scrip- tion	Allowed and recognized units for a value.
Enu- mer- a- tions	volts, millivolts, microvolts, amperes, milliamperes, microamperes, coulombs, millicoulombs, microcoulombs, seconds, milliseconds, microseconds, nanoseconds, kilowatts, watts, milliwatts, microwatts, kilowatt-hours, watt-hours, milliwatt-hours, microwatt-hours

**v1-uint32**

Name	Value
Type	integer
description	Unsigned 32-bit integer
minimum	0
maximum	4294967295

**v1-rawValue**

Name	Value
Type	<a href="#">v1-uint32</a> or Array< <a href="#">v1-uint32</a> >
description	Unformatted return value from the device.

**v1-error**

Name	Value
Type	<i>Object</i>
description	Error containing an acronym error

Name	Type	Mandatory	Description
errorCode	<a href="#">v1-aErr</a>	Yes	Acronym error code
errorMessage	string	No	A human-readable message to describe the context of the error.

**JSON Schema for PUT Request Object**

The following table lists a [JSON Schema](#)<sup>122</sup> for the response object.

Download the raw JSON Schema file for this response: `put_brainstem_payload_v1.json`

<sup>122</sup> <https://datatracker.ietf.org/doc/html/draft-handrews-json-schema-01>

## Object Fields of Put BrainStem Payload (v1)

Name	Type	Mandatory	Description
value	integer or string or boolean or Array<integer or string>	Yes	Value to set on the Device.

## JSON Schema for PUT Response Object

The following table lists a [JSON Schema](#)<sup>123</sup> for the response object.

Download the raw JSON Schema file for this response: `put_brainstem_response.json`

## Object Fields of Put BrainStem Response

Name	Type	Mandatory	Description
errorCode	v1-aErr	Yes	Acroname error code
errorMessage	string	No	A human-readable message to describe the context of the error.
- or -			
thisMessageLeftIntentionallyBlank	null	No	

## v1-aErr

Nam	Value
Type	string
de- scrip tion	Enumeration of all possible error results
Enum- er- a- tions	aErrNone, aErrMemory, aErrParam, aErrNotFound, aErrFileNameLength, aErrBusy, aErrIO, aErrMode, aErrWrite, aErrRead, aErrEOF, aErrNotReady, aErrPermission, aErrRange, aErrSize, aErrOverrun, aErrParse, aErrConfiguration, aErrTimeout, aErrInitialization, aErrVersion, aErrUnimplemented, aErrDuplicate, aErrCancel, aErrPacket, aErrConnection, aErrIndexRange, aErrShortCommand, aErrInvalidEntity, aErrInvalidOption, aErrResource, aErrMedia, aErrAsyncReturn, aErrOperation, aErrUnknown

<sup>123</sup> <https://datatracker.ietf.org/doc/html/draft-handrews-json-schema-01>

**v1-error**

Name	Value
Type	<i>Object</i>
description	Error containing an Acroname error

Name	Type	Mandatory	Description
errorCode	<i>v1-aErr</i>	Yes	Acroname error code
errorMessage	string	No	A human-readable message to describe the context of the error.

**version Endpoint**

The `version` endpoint shows version information for various software components, including BrainStem version, BrainD version, and build information.

There are no input parameters to this endpoint. It will return a JSON object as described below. This endpoint does not use a transaction envelope. Contents are returned exactly as described in the schema below.

**JSON Schema for Response Object**

The following table lists a [JSON Schema](#)<sup>124</sup> for the response object.

Download the raw JSON Schema file for this response: `get_version_response.json`

**Object Fields of Get Version Response**

Name	Type	Mandatory	Description
braind	<i>v1-buildInfo</i>	Yes	Version and Build Information for the braind daemon.
brainstem	<i>v1-buildInfo</i>	Yes	Version and Build Information for the BrainStem library.
control-Room	<i>v1-buildInfo</i>	No	Version and Build Information for the Control Room application.

<sup>124</sup> <https://datatracker.ietf.org/doc/html/draft-handrews-json-schema-01>

**v1-version**

Name	Value
Type	<i>Object</i>
description	Object representing a <major>.<minor>.<patch> semantic version.

Name	Type	Mandatory	Description
major	<i>v1-uint8</i>	Yes	
minor	<i>v1-uint8</i>	Yes	
patch	<i>v1-uint8</i>	Yes	

**v1-buildInfo**

Name	Value
Type	<i>Object</i>
description	Version and Build Information for an arbitrary software component.

Name	Type	Mandatory	Description
version	<i>v1-version</i>	Yes	
buildDate	string	No	Date and Time that this software component was built.
buildHash	string	No	Hexadecimal Git commit ID that was used for this build.

**v1-uint8**

Name	Value
Type	integer
description	Unsigned 8-bit integer
minimum	0
maximum	255

## Examples

### Bash

```
curl http://127.0.0.1:9005/api/v1/version
```

### Python

```
import requests
import json
response = requests.get('http://127.0.0.1:9005/api/v1/version')
json_data = response.json()
print(json.dumps(json_data, indent=4))
```

The output will be similar to the following:

```
1 {
2     "braind": {
3         "version": {
4             "major": 1,
5             "minor": 0,
6             "patch": 1
7         },
8         "buildDate": "Wed Aug 23 13:35:12 2023",
9         "buildHash": "b1ba5c6153b7fbbb65c868b65c8ac70bb3d7b7dd"
10    },
11    "brainstem": {
12        "version": {
13            "major": 2,
14            "minor": 10,
15            "patch": 0
16        },
17        "buildDate": "2023-09-11T17:14:25Z",
18        "buildHash": "7af9c07e44601d6987fe3dab0ea201a13609683e"
19    }
20 }
```

## Transaction Envelope

Most RESTful Endpoints respond with this JSON object, where `response` is populated by an endpoint-specific schema. The Transaction Envelope schema enables providing error information, request context, and other useful fields about the request and response payload for the specific API call.

The *Acroname Devices*, *Acroname Devices State endpoint*, *Devices*, and *BrainStem* endpoints use this schema as an envelope.

The *Version* endpoint does not use this envelope.

## JSON Schema for Transaction Envelope

The following table lists a [JSON Schema](#)<sup>125</sup>.

Download the raw JSON Schema file: `transaction_envelope.json`

### Object Fields of BrainD V1 Transaction Envelope

Name	Type	Mandatory	Description
request	<i>Object</i>	Yes	
response	<i>v1-error</i> or boolean or object or array or number or string	Yes	
developer-Notes	Array<null>	No	
timestamp	<i>v1-timestamp</i>	Yes	When the call completed, in ISO8601 time.

### Object Fields of request

Name	Type	Mandatory	Description
endpointName	string	Yes	Path-section of the URL
params	<i>Object</i>	No	Parameters decoded from the HTTP body.

### Object Fields of request.params

Name	Type	Mandatory	Description

---

<sup>125</sup> <https://datatracker.ietf.org/doc/html/draft-handrews-json-schema-01>



**v1-aErr**

Name Value	
Type	string
description	Enumeration of all possible error results
Enumerations	aErrNone, aErrMemory, aErrParam, aErrNotFound, aErrFileNameLength, aErrBusy, aErrIO, aErrMode, aErrWrite, aErrRead, aErrEOF, aErrNotReady, aErrPermission, aErrRange, aErrSize, aErrOverrun, aErrParse, aErrConfiguration, aErrTimeout, aErrInitialization, aErrVersion, aErrUnimplemented, aErrDuplicate, aErrCancel, aErrPacket, aErrConnection, aErrIndexRange, aErrShortCommand, aErrInvalidEntity, aErrInvalidOption, aErrResource, aErrMedia, aErrAsyncReturn, aErrOperation, aErrUnknown

**v1-error**

Name	Value
Type	<i>Object</i>
description	Error containing an Acroname error

Name	Type	Mandatory	Description
errorCode	<a href="#">v1-aErr</a>	Yes	Acroname error code
errorMessage	string	No	A human-readable message to describe the context of the error.

**v1-timestamp**

Name	Value
Type	string
description	String containing a ISO8601 timestamp (YYYY-MM-DDTHH:MM:SS.mmmZ
Regular Expression	<code>^[0-9]{4}-[0-9]{2}-[0-9]{2}T[0-9]{2}:[0-9]{2}:[0-9]{2}\.[0-9]{3,6}Z\$</code>

## Examples

These are examples of payloads for endpoints that use a transaction envelope. These examples closely follow the examples on every endpoint's reference page, but include the envelope for verbosity.

### Acroname Devices

The success-case of `response` is detailed in *Acroname Devices endpoint* page.

Bash

```
curl http://127.0.0.1:9005/api/v1/acronameDevices
```

A reasonable output in the expected case:

```
1 {
2   "timestamp": "2023-09-20T17:11:54.092Z",
3   "request": {
4     "endpointName": "/api/v1/acronameDevices",
5     "parameters": {}
6   },
7   "response": {
8     "acronameDevices": [
9       {
10        "type": "USB",
11        "serialNumber": "3C43352C",
12        "module": 6,
13        "model": "USBHub3c",
14        "entitlements": [
15          {
16            "tag": "CONTROL",
17            "version": 0
18          }
19        ]
20      },
21      {
22        "type": "USB",
23        "serialNumber": "F7D9AFB6",
24        "module": 6,
25        "model": "USBHub3p",
26        "entitlements": [
27          {
28            "tag": "CONTROL",
29            "version": 0
30          }
31        ]
32      }
33    ]
34  }
35 }
```

The Acroname Device endpoint does not emit errors. But if it did, it might look something like:

```
1 {
2   "timestamp": "2023-10-05T18:34:30.200Z",
3   "request": {
```

(continues on next page)

(continued from previous page)

```

4     "endpointName": "/api/v1/acronameDevices",
5     "parameters": {}
6 },
7 "response": {
8     "errorCode": "aErrUnknown",
9     "errorMessage": "Unhandled exception while gathering device names."
10 }
11 }

```

## Acroname Devices State

The success-case of `response` is detailed in [Acroname Devices State endpoint](#) page.

Bash

```
curl http://127.0.0.1:9005/api/v1/acronameDevicesState
```

A reasonable output in the expected case:

```

1 {
2   "timestamp": "2023-09-20T17:24:24.428Z",
3   "request": {
4     "endpointName": "/api/v1/acronameDevicesState",
5     "parameters": {}
6   },
7   "response": {
8     "timestamp": "2023-09-20T17:24:24.108Z",
9     "sequence": 2563,
10    "brainstemVersion": {
11      "major": 2,
12      "minor": 10,
13      "patch": 0
14    },
15    "acronameDevices": [
16      {
17        "serialNumber": "0x3C43352C",
18        "firmwareVersion": {
19          "major": 2,
20          "minor": 10,
21          "patch": 0
22        },
23        "model": "USBHub3c",
24        "upstreamPort": 0,
25        "upstreamPortSelectionIsAutomatic": true,
26        "ports": [
27          {
28            "index": 0,
29            "physicalName": "Port 0",
30            "speed": "5 Gbps",
31            "roles": [
32              "Upstream",
33              "Downstream"
34            ],
35            "currentDataRole": "Upstream",
36            "enabled": true,

```

(continues on next page)

(continued from previous page)

```

37         "voltage": {
38             "value": 5.207519,
39             "units": "volts",
40             "rawValue": 5207519
41         },
42         "current": {
43             "value": 0.00061,
44             "units": "amperes",
45             "rawValue": 610
46         }
47     },
48     {
49         "index": 1,
50         "physicalName": "Port 1",
51         "speed": "Unknown",
52         "roles": [
53             "Upstream",
54             "Downstream"
55         ],
56         "currentDataRole": "Downstream",
57         "enabled": true,
58         "voltage": {
59             "value": 0.0,
60             "units": "volts",
61             "rawValue": 0
62         },
63         "current": {
64             "value": 0.000305,
65             "units": "amperes",
66             "rawValue": 305
67         }
68     },
69     <additional ports ...>
70 ]
71 }
72 ]
73 }
74 }

```

The *Acroname Devices State endpoint* emits an error in the case where licenses were not found.

```

1  {
2      "timestamp": "2023-10-05T18:57:49.317Z",
3      "request": {
4          "endpointName": "/api/v1/acronameDevicesState",
5          "parameters": {}
6      },
7      "response": {
8          "errorCode": "aErrPermission",
9          "errorMessage": "The call is not allowed, check permissions and licenses_
↵associated with this call"
10     }
11 }

```

## Devices

The success-case of response is detailed in the *Devices endpoint* page.

Bash

```
curl http://127.0.0.1:9005/api/v1/devices
```

A reasonable output in the expected case:

```

1 {
2   "timestamp": "2023-09-20T17:36:15.359Z",
3   "request": {
4     "endpointName": "/api/v1/devices",
5     "parameters": {}
6   },
7   "response": {
8     "usb": [
9       {
10        "vendorId": "0x067B",
11        "productId": "0x2303",
12        "speedActual": "12 Mbps",
13        "maxSpeed": "12 Mbps",
14        "productName": "USB-Serial Controller",
15        "serialNumber": "",
16        "manufacturer": "Prolific Technology Inc.",
17        "deviceClass": 0,
18        "interfaces": [
19          {
20            "interfaceIndex": 0,
21            "entryIndex": 0,
22            "kClass": 255,
23            "kSubclass": 0,
24            "kProtocol": 0
25          }
26        ],
27        "portPath": [
28          4,
29          3,
30          1
31        ],
32        "acronameDevice": {
33          "serialNumber": "0xF7D9AFB6",
34          "port": 0,
35          "distance": 0
36        },
37        "bulkCapability": {
38          "isDoing": true,
39          "isCapable": true
40        },
41        "isochronousCapability": {
42          "isDoing": false,
43          "isCapable": false
44        },
45        "interruptCapability": {
46          "isDoing": true,
47          "isCapable": true
48        }
49      }
50    ]
51  }

```

(continues on next page)

(continued from previous page)

```

49     },
50     {
51         "vendorId": "0x2188",
52         "productId": "0x0747",
53         "speedActual": "5 Gbps",
54         "maxSpeed": "5 Gbps",
55         "productName": "Card Reader ",
56         "serialNumber": "000000000010",
57         "manufacturer": "CalDigit",
58         "deviceClass": 0,
59         "interfaces": [
60             {
61                 "interfaceIndex": 0,
62                 "entryIndex": 0,
63                 "kClass": 8,
64                 "kSubclass": 6,
65                 "kProtocol": 80
66             }
67         ],
68         "portPath": [
69             4,
70             8
71         ],
72         "bulkCapability": {
73             "isDoing": true,
74             "isCapable": true
75         },
76         "isochronousCapability": {
77             "isDoing": false,
78             "isCapable": false
79         },
80         "interruptCapability": {
81             "isDoing": false,
82             "isCapable": false
83         }
84     }
85 ]
86 }
87 }

```

The *Devices endpoint* emits an error in the case where licenses were not found.

```

1  {
2      "timestamp": "2023-10-05T19:11:51.113Z",
3      "request": {
4          "endpointName": "/api/v1/devices",
5          "parameters": {}
6      },
7      "response": {
8          "errorCode": "aErrPermission",
9          "errorMessage": "The call is not allowed, check permissions and licenses_
↪ associated with this call"
10     }
11 }

```

## BrainStem

The success-case of response is detailed in *BrainStem Endpoint* page.

Bash

```
curl http://127.0.0.1:9005/api/v1/brainstem/3C43352C/system/0/inputvoltage
```

A reasonable output in the expected case:

```
1 {
2   "timestamp": "2023-09-20T17:53:32.480Z",
3   "request": {
4     "endpointName": "/api/v1/brainstem/3C43352C/system/0/inputvoltage",
5     "parameters": {}
6   },
7   "response": {
8     "value": 22974139,
9     "rawValue": 22974139
10  }
11 }
```

The *BrainStem endpoint* will emit errors specific to malformed requests, or hardware exceptions.

Example: Invalid value field supplied

```
1 {
2   "timestamp": "2023-10-05T20:11:55.218Z",
3   "request": {
4     "endpointName": "/api/v1/brainstem/F2C3B5AC/port/5/Enabled/",
5     "parameters": {
6       "value": "a"
7     }
8   },
9   "response": {
10    "errorCode": "aErrParse",
11    "errorMessage": "Value can not be converted to an integer value."
12  }
13 }
```

Example: 8-port hardware does not support index 9

```
1 {
2   "timestamp": "2023-10-05T20:13:16.954Z",
3   "request": {
4     "endpointName": "/api/v1/brainstem/F2C3B5AC/port/9/Enabled/",
5     "parameters": {
6       "value": "1"
7     }
8   },
9   "response": {
10    "errorCode": "aErrUnimplemented",
11    "errorMessage": "Functionality unimplemented"
12  }
13 }
```

## 3.6 .NET API Reference

### 3.6.1 BrainStem2 CLI Types

```
enum class Acroname : BrainStem2CLI : aErr
```

*Values:*

enumerator **aErrNone**

0 - Success, no error.

enumerator **aErrMemory**

1 - Memory allocation.

enumerator **aErrParam**

2 - Invalid parameter.

enumerator **aErrNotFound**

3 - Not found.

enumerator **aErrFileNameLength**

4 - File name too long.

enumerator **aErrBusy**

5 - Resource busy.

enumerator **aErrIO**

6 - Input/Output error.

enumerator **aErrMode**

7 - Invalid Mode.

enumerator **aErrWrite**

8 - Write error.

enumerator **aErrRead**

9 - Read error.

enumerator **aErrEOF**

10 - End of file.

enumerator **aErrNotReady**

11 - Not ready, no bytes available.

enumerator **aErrPermission**

12 - Insufficient permissions.



enumerator **aErrRange**

13 - Value out of range.

enumerator **aErrSize**

14 - Invalid Size.

enumerator **aErrOverrun**

15 - Buffer/queue overrun.

enumerator **aErrParse**

16 - Parse error.

enumerator **aErrConfiguration**

17 - Configuration error.

enumerator **aErrTimeout**

18 - Timeout occurred.

enumerator **aErrInitialization**

19 - Initialization error.

enumerator **aErrVersion**

20 - Invalid version.

enumerator **aErrUnimplemented**

21 - Functionality unimplemented.

enumerator **aErrDuplicate**

22 - Duplicate request.

enumerator **aErrCancel**

23 - Cancellation occurred, or did not complete.

enumerator **aErrPacket**

24 - Packet unsigned char invalid.

enumerator **aErrConnection**

25 - Connection error.

enumerator **aErrIndexRange**

26 - Index out of range.

enumerator **aErrShortCommand**

27 - BrainStem command too short.

enumerator **aErrInvalidEntity**

28 - Invalid entity error.

enumerator **aErrInvalidOption**

29 - Invalid option code.

enumerator **aErrResource**

30 - Resource unavailable.

enumerator **aErrMedia**

31 - Media error.

enumerator **aErrAsyncReturn**

32 - Asynchronous return.

enumerator **aErrStreamStale**

33 - Stream value is stale.

enumerator **aErrUnknown**

34 - Unknown error.

### 3.6.2 Port Mapping

enum class Acroname::BrainStem2CLI::PORT\_SPEED

Port speed enumeration

*Values:*

enumerator **kPORT\_SPEED\_UNKNOWN**

kPORT\_SPEED\_UNKNOWN (0)

enumerator **kPORT\_SPEED\_LOW**

kPORT\_SPEED\_LOW (1)

enumerator **kPORT\_SPEED\_FULL**

kPORT\_SPEED\_FULL (2)

enumerator **kPORT\_SPEED\_HIGH**

kPORT\_SPEED\_HIGH (3)

enumerator **kPORT\_SPEED\_SUPER**

kPORT\_SPEED\_SUPER (4)

enumerator **kPORT\_SPEED\_SUPER\_PLUS**

kPORT\_SPEED\_SUPER\_PLUS (5)

**class DeviceNode**

Device Node Structure - Contains information linking the downstream device to the Acroname Hub.

**Public Functions**

**DeviceNode** (DeviceNode\_t&)

Constructor.

**~DeviceNode** ()

Destructor.

**!DeviceNode** ()

Finalizer.

**Public Members**

const unsigned int **hubSerialNumber**

Acroname Device Information.

Serial number of the Acroname hub where the device was found.

const unsigned int **hubPort**

Port of the Acroname hub where the device was found.

const unsigned short **idVendor**

Downstream device information.

Manufactures Vendor ID of the downstream device.

const unsigned short **idProduct**

Manufactures Product ID of the downstream device.

const *PORT\_SPEED* **speed**

The devices downstream device speed.

const String ^ **productName**

USB string descriptor

const String ^ **serialNumber**

USB string descriptor

const String ^ **manufacturer**

USB string descriptor

**class PortMapping**

The *PortMapping* Gets downstream device USB information for all Acroname hubs.

### Public Functions

#### **PortMapping()**

Constructor. Calls “update” on construction. The error can be accessed through the “lastError” member.

#### **~PortMapping()**

Destructor.

#### **!PortMapping()**

Finalizer.

#### *aErr* **update**(void)

Updates the current device list. Calls the underlying C function getDownstreamDevices

### Public Members

#### **cli::array< DeviceNode^> ^ deviceList**

List of all devices found downstream of an Acroname hub.

#### *aErr* **lastError**

Provides access to error code of update on construction.

## 3.6.3 Module Class

#### **class ModuleClass**

*ModuleClass*. Provides a generic interface to a BrainStem hardware module. The Module class is the parent class for all BrainStem modules. Each module inherits from Module and implements its hardware specific features.

### Public Functions

#### **ModuleClass**(const unsigned char address, const unsigned char model)

Constructors.

#### **~ModuleClass()**

Destructor.

#### **!ModuleClass()**

Finalizer.

#### BrainStem2CLI::*aErr* **discoverAndConnect**(m\_linkType transport)

A discovery-based connect. This member function will attempt to connect to the first BrainStem module found. If this module does not match the object type the connection will fail.

#### **Parameters**

**transport** -- Transport on which to search for available BrainStem link modules. See the m\_linkType “transport” enum for supported transports.

**Returns**

aErr::aErrBusy - if the module is already in use.

**Returns**

aErr::aErrParam - if the transport type is undefined.

**Returns**

aErr::aErrNotFound - if the module cannot be found.

**Returns**

aErr::aErrNone If the connect was successful.

BrainStem2CLI::aErr discoverAndConnect (m\_linkType transport, unsigned int serialNum)

A discovery-based connect. This member function will connect to the first available BrainStem found on the given transport. If the serial number is passed, it will only connect to the module with that serial number. Passing 0 as the serial number will create a link to the first link module found on the specified transport. If a link module is found on the specified transport, a connection will

**Parameters**

- **transport** - - Transport on which to search for available BrainStem link modules. See the m\_linkType “transport” enum for supported transports.
- **serialNum** - - Specify a serial number to connect to a specific link module. Use 0 to connect to the first link module found.

**Returns**

aErr::aErrBusy - if the module is already in use.

**Returns**

aErr::aErrParam - if the transport type is undefined.

**Returns**

aErr::aErrNotFound - if the module cannot be found.

**Returns**

aErr::aErrNone If the connect was successful.

BrainStem2CLI::aErr connectFromSpec (m\_linkSpec spec)

Connect to a link with a fully defined specifier.

**Parameters**

**spec** - - Connect to module with specifier.

**Returns**

aErr::aErrInitialization - If there is currently no link object.

**Returns**

aErr::aErrBusy - If the link is currently connected.

**Returns**

aErr::aErrParam - if the specifier is incorrect.

**Returns**

aErr::aErrNotFound - if the module cannot be found.

**Returns**

aErr::aErrNone If the connect was successful.

BrainStem2CLI::aErr connect (m\_linkType transport)

Connect using the current link specifier.

**Parameters**

**transport** - - Transport on which to search for available BrainStem link modules. See the m\_linkType “transport” enum for supported transports.

**Returns**

aErr::aErrBusy - if the module is already in use.

**Returns**

aErr::aErrParam - if the type is incorrect or serialNum is not specified

**Returns**

aErr::aErrNotFound - if the module cannot be found.

**Returns**

aErr::aErrNone If the connect was successful.

BrainStem2CLI::aErr connect (m\_linkType transport, unsigned int serialNum)

Connect using the current link specifier.

**Parameters**

- **transport** - - Transport on which to search for available BrainStem link modules. See the m\_linkType “transport” enum for supported transports.
- **serialNum** - - Specify a serial number to connect to a specific link module. Use 0 to connect to the first link module found.

**Returns**

aErr::aErrBusy - if the module is already in use.

**Returns**

aErr::aErrParam - if the type is incorrect or serialNum is not specified

**Returns**

aErr::aErrNotFound - if the module cannot be found.

**Returns**

aErr::aErrNone If the connect was successful.

BrainStem2CLI::aErr connectThroughLinkModule (BrainStem2CLI::ModuleClass  
^module)

Connect using link from another Module. This member function will connect to the same BrainStem used by given Module. If a link module is found on the specified transport, a connection will

**Parameters**

**module** - - Pointer to a valid Module class object.

**Returns**

aErr::aErrParam - if the module is undefined.

**Returns**

aErr::aErrNone - if the connect was successful.

BrainStem2CLI::aErr disconnect ()

Disconnect from the BrainStem module.

**Returns**

aErr::aErrResource - If the there is no valid connection.

**Returns**

aErr::aErrConnection - If the disconnect failed, due to a communication issue.

**Returns**

aErr::aErrNone If the disconnect was successful.

BrainStem2CLI::aErr reconnect ()

Reconnect using the current link specifier.

**Returns**

aErr::aErrBusy - if the module is already in use.

**Returns**

aErr::aErrParam - if the specifier is incorrect.

**Returns**

aErr::aErrNotFound - if the module cannot be found.

**Returns**

aErr::aErrNone If the connect was successful.

bool isConnected ()

Is the link connected to the BrainStem Module.

BrainStem2CLI::linkStatus **getStatus** ()

Check the status of the module connection.

**Returns**

linkStatus (see aLink.h for status values)

BrainStem2CLI::aErr **getConfig** (BrainStem2CLI::aEtherConfig ^config)

Gets the links current aEther configuration

**Parameters**

**config** – Variable to be filled with the config

**Returns**

aErrNone on success. aErrNotReady if the module does not have a link aErrParam if config is NULL

cli::array<unsigned int> **getIPv4Interfaces** (void)

Populates a list with all of the available IPv4 Interfaces.

**Returns**

An array of network interfaces.

BrainStem2CLI::aErr **setConfig** (BrainStem2CLI::aEtherConfig ^config)

Sets the links aEther configuration. Configuration must be applied BEFORE connecting

**Parameters**

**config** – Configuration to be applied

**Returns**

aErrNone on success. aErrPermission if the module is currently connected. aErrNotReady if the module does not have a link

void **setModuleAddress** (const unsigned char address)

Accessor to set the address of the BrainStem module associated with the instance on the host machine. (Not to be confused with the System entity which effects the device hardware.)

**Parameters**

**address** – The module address.

unsigned char **getModuleAddress** ()

Accessor to get the address of the BrainStem module associated with the instance on the host machine. (Not to be confused with the System entity which effects the device hardware.)

**Returns**

The module address.

BrainStem2CLI::aErr **getBuild** (unsigned int% build)

Get the modules firmware build number The build number is a unique hash assigned to a specific firmware.

**Parameters**

**build** – Variable the build will be placed in.

BrainStem2CLI::aErr **hasUEI** (const unsigned char command, const unsigned char option, const unsigned char index, const unsigned char flags)

Queries the module to determine if it implements a UEI. Each UEI has a command, option or variant, index and flag. The hasUEI method queries for a fully specified UEI. Returns aErrNone if the variation is supported and an appropriate error if not. This call is blocking for up to the nMSTimeout period.

**Parameters**

- **command** – One of the UEI commands (cmdXXX).
- **option** – The option or variant of the command.

- **index** – The entity index.
- **flags** – The flags (ueiOPTION\_SET or ueiOPTION\_GET).

**BrainStem2CLI::aErr classQuantity (const unsigned char command, unsigned char% count)**

Queries the module to determine how many entities of the specified class are implemented by the module. Zero is a valid return value. For example, calling classQuantity with the command parameter of cmdANALOG would return the number of analog entities implemented by the module.

**Parameters**

- **command** – One of UEI commands (cmdXXX).
- **count** – When the request is successful count is updated with the number of entities found.

**BrainStem2CLI::aErr subClassQuantity (const unsigned char command, const unsigned char index, unsigned char% count)**

Queries the module to determine how many subclass entities of the specified class are implemented by the module for a given entity index. This is used for entities which may be 2-dimensional. E.g. cmdMUX subclasses are the number of channels supported by a particular mux type (index); as a specific example, a module may support 4 UART channels, so subClassQuantity(cmdMUX, aMUX\_UART...) could return 4. Zero is a valid return value.

**Parameters**

- **command** – One of the UEI commands (cmdXXX).
- **index** – The entity index.
- **count** – The number of subclasses found.

**BrainStem2CLI::aErr entityGroup (const unsigned char command, const unsigned char index, unsigned char% group)**

Queries the module the group assigned to an entity and index. Entities groups are used to specify when certain hardware features are fundamentally related. E.g. certain hardware modules may have some digital pins associated with an adjustable voltage rail; these digitals would be in the same group as the rail. Zero is the default group.

**Parameters**

- **command** – One of the UEI commands (cmdXXX).
- **index** – The entity index.
- **group** – Upon success, group is filled with the entities group value.

**void setNetworkingMode (const bool mode)**

Sets the networking mode of the module object. By default the module object is configured to automatically adjust its address based on the device's current module address. So that, if the device has a software or hardware offset it will still be able to communicate with the device. If advanced networking is required the auto networking mode can be turned off.

**Parameters**

**mode** – True/1 for Auto Networking, False/0 for manual networking



## Public Static Functions

```
static BrainStem2CLI::m_linkSpec findFirstModule (Brain-
Stem2CLI::m_linkType type, [Optional] Nullable< un-
signed int > networkInterface)
```

Finds the first module found on the given transport

### Parameters

**type** – The transport type on which to search for devices. Valid m\_linkType “linktypes” are accepted.

### Returns

If found, the linkspec will be populated with the devices information. Values will be all zeros otherwise.

```
static BrainStem2CLI::m_linkSpec findModule (Brain-
Stem2CLI::m_linkType type, unsigned int serialNum, [Optional] Nul-
lable< unsigned int > networkInterface)
```

Finds the module with the given serial number on the given transport type.

### Parameters

- **type** – The transport type on which search for devices. Valid m\_linkType “linktypes” are accepted
- **serialNum** – Specify a serial number to connect to a specific link module. Use 0 to connect to the first link module found.

### Returns

If found the linkspec will be populated with the devices information. Values will be all zeros otherwise.

```
static BrainStem2CLI::aErr sDiscover (Brain-
Stem2CLI::m_linkType type, List< m_linkSpec > **specList, [Op-
tional] Nullable< unsigned int > networkInterface)
```

Discover is called with a specified transport to search for link modules on that transport. The devices list is filled with device specifiers. sDiscover returns aErrNone if the discovery process is successful, regardless of whether any links are found. An error is only returned if the link discovery process fails. Discovery can take some time.

### Parameters

- **type** – Transport to search for available BrainStem link modules on. See the m\_linkType “transport” enum for supported transports.
- **specList** – an empty list of specifiers that will be filled in.

### Returns

aErr::aErrNotFound if no devices were found.

### Returns

aErr::aErrNone on success.

### 3.6.4 Analog Class

See the [Analog Entity](#) for generic information.

class **AnalogClass** : public Acroname::BrainStem2CLI::EntityClass

*AnalogClass*: Interface to analog entities on BrainStem modules. Analog entities may be configured as a input or output depending on hardware capabilities. Some modules are capable of providing actual voltage readings, while other simply return the raw analog-to-digital converter (ADC) output value. The resolution of the voltage or number of useful bits is also hardware dependent.

#### Public Functions

**AnalogClass** ()

Constructors.

**~AnalogClass** ()

Destructor.

**!AnalogClass** ()

Finalizer.

**void init** (BrainStem2CLI::ModuleClass^ module, const unsigned char index)

Initializes the class. Should only be called when manually creating classes.

#### Parameters

- **pModule** – The module.
- **index** – The cmdANALOG index to be addressed.

*aErr* **getValue** (unsigned short %value)

Get the raw ADC output value in bits.

---

**Note:** Not all modules are provide 16 useful bits; this value's least significant bits are zero-padded to 16 bits. Refer to the module's datasheet to determine analog bit depth and reference voltage.

---

#### Parameters

**value** – 16 bit analog reading with 0 corresponding to the negative analog voltage reference and 0xFFFF corresponding to the positive analog voltage reference.

#### Returns

Returns *common entity* return values

*aErr* **getVoltage** (int %microvolts)

Get the scaled micro volt value with reference to ground.

---

**Note:** Not all modules provide 32 bits of accuracy. Refer to the module's datasheet to determine the analog bit depth and reference voltage.

---

**Parameters**

**microvolts** – 32 bit signed integer (in microvolts) based on the board's ground and reference voltages.

**Returns**

Returns *common entity* return values

*aErr* **getRange** (unsigned char %range)

Get the analog input range.

**Parameters**

**range** – 8 bit value corresponding to a discrete range option

**Returns**

Returns *common entity* return values

*aErr* **getEnable** (unsigned char %enable)

Get the analog output enable status.

**Parameters**

**enable** – 0 if disabled 1 if enabled.

**Returns**

Returns *common entity* return values

*aErr* **setValue** (const unsigned short value)

Set the value of an analog output (DAC) in bits.

---

**Note:** Not all modules are provide 16 useful bits; the least significant bits are discarded. E.g. for a 10 bit DAC, 0xFFC0 to 0x0040 is the useful range. Refer to the module's datasheet to determine analog bit depth and reference voltage.

---

**Parameters**

**value** – 16 bit analog set point with 0 corresponding to the negative analog voltage reference and 0xFFFF corresponding to the positive analog voltage reference.

**Returns**

Returns *common entity* return values

*aErr* **setVoltage** (const int microvolts)

Set the voltage level of an analog output (DAC) in microvolts.

---

**Note:** Voltage range is dependent on the specific DAC channel range.

---

**Parameters**

**microvolts** – 32 bit signed integer (in microvolts) based on the board's ground and reference voltages.

**Returns**

Returns *common entity* return values

*aErr* **setRange** (const unsigned char range)

Set the analog input range.

**Parameters**

**range** – 8 bit value corresponding to a discrete range option

**Returns**

Returns *common entity* return values

*aErr* **setEnabled** (const unsigned char enable)

Set the analog output enable state.

**Parameters**

**enable** – set 1 to enable or 0 to disable.

**Returns**

Returns *common entity* return values

*aErr* **setConfiguration** (const unsigned char configuration)

Set the analog configuration.

**Parameters**

**configuration** – bitAnalogConfigurationOutput configures the analog entity as an output.

**Returns**

Returns *common entity* return values

*aErr* **getConfiguration** (unsigned char %configuration)

Get the analog configuration.

**Parameters**

**configuration** – Current configuration of the analog entity.

**Returns**

Returns *common entity* return values

*aErr* **setBulkCaptureSampleRate** (const unsigned int value)

Set the sample rate for this analog when bulk capturing.

**Parameters**

**value** – sample rate in samples per second (Hertz).

- Minimum rate: 7,000 Hz
- Maximum rate: 200,000 Hz

**Returns**

Returns *common entity* return values

*aErr* **getBulkCaptureSampleRate** (unsigned int %value)

Get the current sample rate setting for this analog when bulk capturing.

**Parameters**

**value** – upon success filled with current sample rate in samples per second (Hertz).

**Returns**

Returns *common entity* return values

*aErr* **setBulkCaptureNumberOfSamples** (const unsigned int value)

Set the number of samples to capture for this analog when bulk capturing.

**Parameters**

**value** – number of samples.

- Minimum # of Samples: 0

- Maximum # of Samples:  $(\text{BRAINSTEM\_RAM\_SLOT\_SIZE} / 2) = (3\text{FFF} / 2) = 1\text{FFF} = 8191$

**Returns**

Returns *common entity* return values

*aErr* **getBulkCaptureNumberOfSamples** (unsigned int %value)

Get the current number of samples setting for this analog when bulk capturing.

**Parameters**

**value** – number of samples.

**Returns**

Returns *common entity* return values

*aErr* **initiateBulkCapture** ()

Initiate a BulkCapture on this analog. Captured measurements are stored in the module's RAM store (RAM\_STORE) slot 0. Data is stored in a contiguous byte array with each sample stored in two consecutive bytes, LSB first.

---

**Note:** When the bulk capture is complete *getBulkCaptureState()* will return either bulkCaptureFinished or bulkCaptureError.

---

**Returns**

Returns *common entity* return values

*aErr* **getBulkCaptureState** (unsigned char %state)

Get the current bulk capture state for this analog.

**Parameters**

**state** – the state of bulk capture.

- Idle: bulkCaptureIdle = 0
- Pending: bulkCapturePending = 1
- Finished: bulkCaptureFinished = 2
- Error: bulkCaptureError = 3

**Returns**

Returns *common entity* return values

### 3.6.5 App Class

See the *App Entity* for generic information.

```
class AppClass : public Acroname::BrainStem2CLI::EntityClass
```

*AppClass*: Used to send a cmdAPP packet to the BrainStem network. These commands are used for either host-to-stem or stem-to-stem interactions. BrainStem modules can implement a reflex origin to complete an action when a cmdAPP packet is addressed to the module.

## Public Functions

**AppClass ()**

Constructors.

**~AppClass ()**

Destructor.

**!AppClass ()**

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

### Parameters

- **pModule** – The module.
- **index** – The cmdAPP index to be addressed.

**aErr execute (const unsigned int appParam)**

Execute the app reflex on the module. Doesn't wait for a return value from the execute call; this call returns immediately upon execution of the module's reflex.

### Parameters

**appParam** – The app parameter handed to the reflex.

### Return values

- **aErrNone** – success.
- **aErrTimeout** – The request timed out waiting to start execution.
- **aErrConnection** – No active link connection.
- **aErrNotFound** – the app reflex was not found or not enabled on the module.

**aErr execute (const unsigned int appParam, unsigned int %returnVal)**

Execute the app reflex on the module. Waits for a return from the reflex execution for msTimeout milliseconds. This method will block for up to msTimeout.

### Parameters

- **appParam** – The app parameter handed to the reflex.
- **returnVal** – The return value filled in from the result of executing the reflex routine.

### Return values

- **aErrNone** – - success.
- **aErrTimeout** – - The request timed out waiting for a response.
- **aErrConnection** – - No active link connection.
- **aErrNotFound** – - the app reflex was not found or not enabled on the module.

**aErr execute (const unsigned int appParam, unsigned int %returnVal, const unsigned int msTimeout)**

Execute the app reflex on the module. Waits for a return from the reflex execution for msTimeout milliseconds. This method will block for up to msTimeout.

### Parameters

- **appParam** – The app parameter handed to the reflex.
- **returnVal** – The return value filled in from the result of executing the reflex routine.
- **msTimeout** – The amount of time to wait for the return value from the reflex routine. The default value is 1000 milliseconds if not specified.

#### Return values

- **aErrNone** – - success.
- **aErrTimeout** – - The request timed out waiting for a response.
- **aErrConnection** – - No active link connection.
- **aErrNotFound** – - the app reflex was not found or not enabled on the module.

### 3.6.6 Clock Class

See the [Clock Entity](#) for generic information.

class **ClockClass** : public Acroname::BrainStem2CLI::EntityClass

*ClockClass*: Provides an interface to a real-time clock entity on a BrainStem module. The clock entity may be used to get and set the real time of the system. The clock entity has a one second resolution.

---

**Note:** Clock time must be reset if power to the BrainStem module is lost.

---

#### Public Functions

**ClockClass** ()

Constructors.

**~ClockClass** ()

Destructor.

**!ClockClass** ()

Finalizer.

**void init** (BrainStem2CLI::ModuleClass^ module, const unsigned char index)

Initializes the class. Should only be called when manually creating classes.

#### Parameters

- **pModule** – The module.
- **index** – The cmdCLOCK index to be addressed.

*aErr* **getYear** (unsigned short %year)

Get the four digit year value (0-4095).

#### Parameters

**year** – Get the year portion of the real-time clock value.

#### Returns

Returns [common entity](#) return values

*aErr* **setYear** (const unsigned short year)

Set the four digit year value (0-4095).

**Parameters**

**year** – Set the year portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **getMonth** (unsigned char %month)

Get the two digit month value (1-12).

**Parameters**

**month** – The two digit month portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **setMonth** (const unsigned char month)

Set the two digit month value (1-12).

**Parameters**

**month** – The two digit month portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **getDay** (unsigned char %day)

Get the two digit day of month value (1-28, 29, 30 or 31 depending on the month).

**Parameters**

**day** – The two digit day portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **setDay** (const unsigned char day)

Set the two digit day of month value (1-28, 29, 30 or 31 depending on the month).

**Parameters**

**day** – The two digit day portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **getHour** (unsigned char %hour)

Get the two digit hour value (0-23).

**Parameters**

**hour** – The two digit hour portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **setHour** (const unsigned char hour)

Set the two digit hour value (0-23).

**Parameters**

**hour** – The two digit hour portion of the real-time clock value.

**Returns**

Returns *common entity* return values



*aErr* **getMinute** (unsigned char %minute)

Get the two digit minute value (0-59).

**Parameters**

**minute** – The two digit minute portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **setMinute** (const unsigned char minute)

Set the two digit minute value (0-59).

**Parameters**

**minute** – The two digit minute portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **getSecond** (unsigned char %second)

Get the two digit second value (0-59).

**Parameters**

**second** – The two digit second portion of the real-time clock value.

**Returns**

Returns *common entity* return values

*aErr* **setSecond** (const unsigned char second)

Set the two digit second value (0-59).

**Parameters**

**second** – The two digit second portion of the real-time clock value.

**Returns**

Returns *common entity* return values

### 3.6.7 Digital Class

See the *Digital Entity* for generic information.

class **DigitalClass** : public Acroname::BrainStem2CLI::EntityClass

*DigitalClass*: Interface to digital entities on BrainStem modules. Digital entities have the following 5 possibilities: Digital Input, Digital Output, RCServo Input, RCServo Output, and HighZ. Other capabilities may be available and not all pins support all configurations. Please see the product datasheet.

#### Public Functions

**DigitalClass** ()

Constructors.

**~DigitalClass** ()

Destructor.

**!DigitalClass** ()

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdDIGITAL index to be addressed.

**aErr setConfiguration (const unsigned char configuration)**

Set the digital configuration to one of the available 5 states.

---

**Note:** Some configurations are only supported on specific pins.

---

**Parameters**

**configuration** – The configuration to be applied

- Digital Input: digitalConfigurationInput = 0
- Digital Output: digitalConfigurationOutput = 1
- RCServo Input: digitalConfigurationRCServoInput = 2
- RCServo Output: digitalConfigurationRCServoOutput = 3
- High Z State: digitalConfigurationHiZ = 4
- Digital Input: digitalConfigurationInputPullUp = 0
- Digital Input: digitalConfigurationInputNoPull = 4
- Digital Input: digitalConfigurationInputPullDown = 5

**Returns**

Returns *common entity* return values

**aErr getConfiguration (unsigned char %configuration)**

Get the digital configuration.

**Parameters**

**configuration** – Current configuration of the digital entity.

**Returns**

Returns *common entity* return values

**aErr setState (const unsigned char state)**

Set the logical state.

**Parameters**

**state** – The state to be set. 0 is logic low, 1 is logic high.

**Returns**

Returns *common entity* return values

**aErr getState (unsigned char %state)**

Get the state.

---

**Note:** If in high Z state an error will be returned.

---

**Parameters**

**state** – The current state of the digital entity. 0 is logic low, 1 is logic high.

**Returns**

Returns *common entity* return values

*aErr* **setStateAll** (const unsigned int state)

Sets the logical state of all available digitals based on the bit mapping. Number of digitals varies across BrainStem modules. Refer to the datasheet for the capabilities of your module.

**Parameters**

**state** – The state to be set for all digitals in a bit mapped representation. 0 is logic low, 1 is logic high. Where bit 0 = digital 0, bit 1 = digital 1 etc.

**Returns**

Returns *common entity* return values

*aErr* **getStateAll** (unsigned int %state)

Gets the logical state of all available digitals in a bit mapped representation. Number of digitals varies across BrainStem modules. Refer to the datasheet for the capabilities of your module.

**Parameters**

**state** – The state of all digitals where bit 0 = digital 0, bit 1 = digital 1 etc. 0 is logic low, 1 is logic high.

**Returns**

Returns *common entity* return values

*aErr* **setValue** (const unsigned char value)

Set the expected value of the digital pin.

**Parameters**

**value** – The expected value of the digital pin. 0 is logic low, 1 is logic high.

**Returns**

Returns *common entity* return values

*aErr* **getValue** (unsigned char %value)

Get the expected value of the digital pin.

**Parameters**

**value** – The expected value of the digital pin. 0 is logic low, 1 is logic high.

**Returns**

Returns *common entity* return values

*aErr* **setLinkChannel** (const unsigned char linkChannel)

Set the link channel (entity index) for linking digital entities. Two digital entities will link when one is configured as LinkInput, one as LinkOutput, and both have each others linkChannel indexes.

**Parameters**

**linkChannel** – The link channel (entity index) value. Entities with matching linkChannel values can be linked.

**Returns**

Returns *common entity* return values

*aErr* **getLinkChannel** (unsigned char %linkChannel)

Get the link channel (entity index) for linking digital entities.

**Parameters**

**linkChannel** – The current link channel (entity index) value.

**Returns**

Returns *common entity* return values

### 3.6.8 Equalizer Class

See the *Equalizer Entity* for generic information.

class **EqualizerClass** : public Acroname::BrainStem2CLI::EntityClass

*EqualizerClass*: Provides receiver and transmitter gain/boost/emphasis settings for some of Acroname's products. Please see product documentation for further details.

**Public Functions**

**EqualizerClass()**

Constructors.

**~EqualizerClass()**

Destructor.

**!EqualizerClass()**

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdEQUALIZER index to be addressed.

*aErr* **setReceiverConfig** (const unsigned char channel, const unsigned char config)

Sets the receiver configuration for a given channel.

**Parameters**

- **channel** – The equalizer receiver channel.
- **config** – Configuration to be applied to the receiver.

**Returns**

Returns *common entity* return values

*aErr* **getReceiverConfig** (const unsigned char channel, unsigned char %config)

Gets the receiver configuration for a given channel.

**Parameters**

- **channel** – The equalizer receiver channel.
- **config** – Configuration of the receiver.

**Returns**

Returns *common entity* return values

*aErr* **setTransmitterConfig** (const unsigned char config)

Sets the transmitter configuration

**Parameters**

**config** – Configuration to be applied to the transmitter.

**Returns**

Returns *common entity* return values

*aErr* **getTransmitterConfig** (unsigned char %config)

Gets the transmitter configuration

**Parameters**

**config** – Configuration of the Transmitter.

**Returns**

Returns *common entity* return values

### 3.6.9 Ethernet Class

See the *Ethernet Entity* for generic information.

class **EthernetClass** : public Acroname::BrainStem2CLI::EntityClass

*EthernetClass*: IP configuration. MAC info. BrainD port.

**Public Functions**

**EthernetClass** ()

Constructors.

**~EthernetClass** ()

Destructor.

**!EthernetClass** ()

Finalizer.

**void init** (BrainStem2CLI::ModuleClass^ module, const unsigned char index)

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdETHERNET index to be addressed.

*aErr* **setEnabled** (const unsigned char enabled)

Sets the Ethernet's interface to enabled/disabled.

**Parameters**

**enabled** – 1 = enabled; 0 = disabled

**Returns**

Returns *common entity* return values

*aErr* **getEnabled** (unsigned char %enabled)

Gets the current enable value of the Ethernet interface.

**Parameters**

**enabled** – 1 = Fully enabled network connectivity; 0 = Ethernet MAC is disabled.

**Returns**

Returns *common entity* return values

*aErr* **getNetworkConfiguration** (unsigned char %addressStyle)

Get the method in which IP Address is assigned to this device

**Parameters**

**addressStyle** – Method used. Current methods

- NONE = 0
- STATIC = 1
- DHCP = 2

**Returns**

Returns *common entity* return values

*aErr* **setNetworkConfiguration** (const unsigned char addressStyle)

Get the method in which IP Address is assigned to this device

**Parameters**

**addressStyle** – Method to use. See getNetworkConfiguration for addressStyle enumerations.

**Returns**

Returns *common entity* return values

*aErr* **getStaticIPv4Address** (unsigned char %buffer, const unsigned int bufferSize, unsigned int %unloadedLength)

Get the expected IPv4 address of this device, when networkConfiguration == STATIC

---

**Note:** The functional IPv4 address of The Module will differ if NetworkConfiguration != STATIC.

---

**Parameters**

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

**Returns**

Returns *common entity* return values

*aErr* **setStaticIPv4Address** (const unsigned char %buffer, const unsigned int bufferSize)

Set the desired IPv4 address of this device, if NetworkConfiguration == STATIC.

**Parameters**

- **buffer** – alias to an array of uint8\_t[4] with an IP address
- **bufferLength** – size of buffer. Should be 4.

**Returns**

Returns *common entity* return values

*aErr* **getStaticIPv4Netmask** (unsigned char %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Get the expected IPv4 netmask of this device, when networkConfiguration == STATIC

---

**Note:** The functional IPv4 netmask of The Module will differ if NetworkConfiguration != STATIC.

---

**Parameters**

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

**Returns**

Returns *common entity* return values

*aErr* **setStaticIPv4Netmask** (const unsigned char %buffer, const unsigned int bufferLength)

Set the desired IPv4 address of this device, if NetworkConfiguration == STATIC

**Parameters**

- **buffer** – alias to an array of uint8\_t[4] with an IP address
- **bufferLength** – size of buffer. Should be 4.

**Returns**

Returns *common entity* return values

*aErr* **getStaticIPv4Gateway** (unsigned char %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Get the expected IPv4 gateway of this device, when networkConfiguration == STATIC

**Parameters**

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

**Returns**

Returns *common entity* return values

*aErr* **setStaticIPv4Gateway** (const unsigned char %buffer, const unsigned int bufferLength)

Set the desired IPv4 gateway of this device, if NetworkConfiguration == STATIC

**Parameters**

- **buffer** – alias to an array of uint8\_t[4] with an IP address
- **bufferLength** – size of buffer. Should be 4. setStaticIPv4Gateway([192, 168, 1, 1], 4) would equate with address “192.168.1.1”

**Returns**

Returns *common entity* return values

*aErr* **getIPv4Address** (unsigned char %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Get the effective IP address of this device.

#### Parameters

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

#### Returns

Returns *common entity* return values

*aErr* **getIPv4Netmask** (unsigned char %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Get the effective IP netmask of this device.

#### Parameters

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

#### Returns

Returns *common entity* return values

*aErr* **getIPv4Gateway** (unsigned char %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Get the effective IP gateway of this device.

#### Parameters

- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.
- **unloadedLength** – occupied bytes in buffer, Should be 4 post-call.

#### Returns

Returns *common entity* return values

*aErr* **setStaticIPv4DNSAddress** (const unsigned char %buffer, const unsigned int bufferLength)

Set IPv4 DNS Addresses (plural), if NetworkConfiguration == STATIC

#### Parameters

- **buffer** – alias to an array of uint8\_t[N][4]
- **bufferLength** – Total array length in bytes. Must be a multiple of 4.

#### Returns

Returns *common entity* return values

*aErr* **getStaticIPv4DNSAddress** (unsigned char %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Get IPv4 DNS addresses (plural), when NetworkConfiguration == STATIC

#### Parameters

- **buffer** – alias to an array of uint8\_t[N][4]



- **bufferLength** – Maximum length of array, in bytes.
- **unloadedLength** – Length of occupied bytes of buffer, after the call.

**Returns**

Returns *common entity* return values

*aErr* **getIPv4DNSAddress** (unsigned char %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Get effective IPv4 DNS addresses, for the current NetworkConfiguration

**Parameters**

- **buffer** – alias to an array of uint8\_t[N][4]
- **bufferLength** – Maximum length of array, in bytes.
- **unloadedLength** – Length of occupied bytes of buffer, after the call.

**Returns**

Returns *common entity* return values

*aErr* **setHostname** (const unsigned char %buffer, const unsigned int bufferLength)

Set hostname that's requested when this device sends a DHCP request.

**Parameters**

- **buffer** – alias to an array of uint8\_t[N]
- **bufferLength** – N, for N bytes.

**Returns**

Returns *common entity* return values

*aErr* **getHostname** (unsigned char %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Get hostname that's requested when this device sends a DHCP request.

**Parameters**

- **buffer** – alias to an array of uint8\_t[N]
- **bufferLength** – N, for N bytes.
- **unloadedLength** – Length of occupied bytes of buffer, after the call.

**Returns**

Returns *common entity* return values

*aErr* **getMACAddress** (unsigned char %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Get the MAC address of the Ethernet interface.

**Parameters**

- **buffer** – alias to an array of uint8\_t[6]
- **bufferLength** – length of buffer that's writeable, should be > 6.
- **unloadedLength** – Length of occupied bytes of buffer, after the call.

**Returns**

Returns *common entity* return values

*aErr* **setInterfacePort** (const unsigned char service, const unsigned short port)

Set the port of a TCPIP service on the device.

**Parameters**

- **service** – The index of the service to set the port for.
- **port** – The port to be used for the TCPIP server.

**Returns**

Returns *common entity* return values

*aErr* **getInterfacePort** (const unsigned char service, unsigned short %port)

Get the port of a TCPIP service on the device.

**Parameters**

- **service** – The index of the service to get the port for.
- **port** – The port of the TCPIP server.

**Returns**

Returns *common entity* return values

### 3.6.10 HDBaseT Class

See the *HDBaseT Entity* for generic information.

class **HDBaseTClass** : public Acroname::BrainStem2CLI::EntityClass

*HDBaseTClass*: This entity is only available on certain modules, and provides information on HDBaseT extenders.

**Public Functions**

**HDBaseTClass** ()

Constructors.

**~HDBaseTClass** ()

Destructor.

**!HDBaseTClass** ()

Finalizer.

**void init** (BrainStem2CLI::ModuleClass^ module, const unsigned char index)

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdHDBASET index to be addressed.

*aErr* **getSerialNumber** (unsigned char %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Gets the serial number of the HDBaseT device (6 bytes)

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **getFirmwareVersion** (unsigned int %firmwareVersion)

Gets the firmware version of the HDBaseT device

**Parameters**

**firmwareVersion** – A bit packet representation of the firmware version Major: Bits 24-31; Minor: Bits 16-23; Patch: Bits 8-15; Build: Bits 0-7

**Returns**

Returns *common entity* return values

*aErr* **getState** (unsigned int %state)

Gets the current state of the HDBaseT link

**Parameters**

**state** – Bit packeted representation of the state.

**Returns**

Returns *common entity* return values

*aErr* **getCableLength** (unsigned int %cableLength)

Gets the perceived cable length

**Parameters**

**cableLength** – Cable length in micro-meters

**Returns**

Returns *common entity* return values

*aErr* **getMSEA** (int %mseA)

Gets the Mean Squared Error (MSE) for channel A

**Parameters**

**mseA** – The current MSE for channel A in micro-dB

**Returns**

Returns *common entity* return values

*aErr* **getMSEB** (int %mseB)

Gets the Mean Squared Error (MSE) for channel B

**Parameters**

**mseB** – The current MSE for channel B in micro-dB

**Returns**

Returns *common entity* return values

*aErr* **getRetransmissionRate** (unsigned int %retransmissionRate)

Gets the number of successful messages between retransmission

**Parameters**

**retransmissionRate** – Instantaneous number of successful messages between retransmission. To be interpreted as: 1 / retransmissionRate for rate interpretation. If the value is 0, there have been no retransmissions, otherwise higher is better..

**Returns**

Returns *common entity* return values

*aErr* **getLinkUtilization** (unsigned int %linkUtilization)

Gets the current link utilization

**Parameters**

**linkUtilization** – Utilization in milli-percent

**Returns**

Returns *common entity* return values

*aErr* **getEncodingState** (unsigned char %encodingState)

Gets the current encoding state.

**Parameters**

**encodingState** – Signal modulation encoding type.

**Returns**

Returns *common entity* return values

*aErr* **getUSB2DeviceTree** (unsigned char %buffer, const unsigned int bufferSize, unsigned int %unloadedLength)

Gets the USB2 tree at the HDBaseT device.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **getUSB3DeviceTree** (unsigned char %buffer, const unsigned int bufferSize, unsigned int %unloadedLength)

Gets the USB3 tree at the HDBaseT device.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **getLinkRole** (unsigned char %role)

Gets the current link role In the case of “Auto” the getState API will provide the current role.

**Parameters**

**role** – Link role

**Returns**

Returns *common entity* return values

*aErr* **setLinkRole** (const unsigned char role)

Sets the active link role

**Parameters**

**role** – The role to be set.

**Returns**

Returns *common entity* return values

**3.6.11 I2C Class**

See the *I2C Entity* for generic information.

class **I2CClass** : public Acroname::BrainStem2CLI::EntityClass

*I2CClass*: Interface the I2C buses on BrainStem modules. The class provides a way to send read and write commands to I2C devices on the entities bus.

**Public Functions**

**I2CClass** ()

Constructors.

**~I2CClass** ()

Destructor.

**!I2CClass** ()

Finalizer.

**void init** (BrainStem2CLI::ModuleClass^ module, const unsigned char index)

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdI2C index to be addressed.

*aErr* **read** (const unsigned char address, const unsigned char readLength, unsigned char %buffer)

Read from a device on this I2C bus.

**Parameters**

- **address** – The I2C address (7bit <XXXX-XXX0>) of the device to read.
- **readLength** – The length of the data to read in bytes.
- **buffer** – The array of bytes that will be filled with the result, upon success. This array should be larger or equivalent to aBRAINSTEM\_MAXPACKETBYTES - 5

**Returns**

Returns *common entity* return values

*aErr* **write** (const unsigned char address, const unsigned char bufferLength, const unsigned char %buffer)

Write to a device on this I2C bus.

**Parameters**

- **address** – The I2C address (7bit <XXXX-XXX0>) of the device to write.

- **bufferLength** – The length of the data to write in bytes.
- **buffer** – The data to send to the device This array should be no larger than aBRAINSTEM\_MAXPACKETBYTES - 5

**Returns**

Returns *common entity* return values

*aErr* **setPullup** (const unsigned char enable)

Set bus pull-up state. This call only works with stems that have software controlled pull-ups. Check the datasheet for more information. This parameter is saved when system.save is called.

**Parameters**

**enable** – true enables pull-ups false disables them.

**Returns**

Returns *common entity* return values

*aErr* **setSpeed** (const unsigned char speed)

Set I2C bus speed.

This call sets the communication speed for I2C transactions through this API. Speed is an enumeration value which can take the following values: 1 - 100Khz 2 - 400Khz 3 - 1MHz

**Parameters**

**speed** – The speed setting value.

**Returns**

Returns *common entity* return values

*aErr* **getSpeed** (unsigned char %speed)

Get I2C bus speed.

This call gets the communication speed for I2C transactions through this API. Speed is an enumeration value which can take the following values: 1 - 100Khz 2 - 400Khz 3 - 1MHz

**Parameters**

**speed** – The speed setting value.

**Returns**

Returns *common entity* return values

### 3.6.12 Mux Class

See the *Mux Entity* for generic information.

class **MuxClass** : public Acroname::BrainStem2CLI::EntityClass

*MuxClass*: A MUX is a multiplexer that takes one or more similar inputs (bus, connection, or signal) and allows switching to one or more outputs. An analogy would be the switchboard of a telephone operator. Calls (inputs) come in and by re-connecting the input to an output, the operator (multiplexer) can direct that input to one or more outputs. One possible output is to not connect the input to anything which essentially disables that input's connection to anything. Not every MUX has multiple inputs; some may simply be a single input that can be enabled (connected to a single output) or disabled (not connected to anything).

## Public Functions

**MuxClass ()**

Constructors.

**~MuxClass ()**

Destructor.

**!MuxClass ()**

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

### Parameters

- **pModule** – The module.
- **index** – The cmdMUX index to be addressed.

**aErr getEnable (unsigned char %enabled)**

Get the mux enable/disable status

### Parameters

**enabled** – true: mux is enabled, false: the mux is disabled.

### Returns

Returns *common entity* return values

**aErr setEnable (const unsigned char enable)**

Enable the mux.

### Parameters

**enable** – true: enables the mux for the selected channel.

### Returns

Returns *common entity* return values

**aErr getChannel (unsigned char %channel)**

Get the current selected mux channel.

### Parameters

**channel** – Indicates which channel is selected.

### Returns

Returns *common entity* return values

**aErr setChannel (const unsigned char channel)**

Set the current mux channel.

### Parameters

**channel** – mux channel to select.

### Returns

Returns *common entity* return values

*aErr* **getChannelVoltage** (const unsigned char channel, int %microvolts)

Get the voltage of the indicated mux channel.

---

**Note:** Not all modules provide 32 bits of accuracy; Refer to the module's datasheet to determine the analog bit depth and reference voltage.

---

#### Parameters

- **channel** – The channel in which voltage was requested.
- **microvolts** – 32 bit signed integer (in microvolts) based on the board's ground and reference voltages.

#### Returns

Returns *common entity* return values

*aErr* **getConfiguration** (int %config)

Get the configuration of the mux.

#### Parameters

**config** – integer representing the mux configuration either default, or split-mode.

#### Returns

Returns *common entity* return values

*aErr* **setConfiguration** (const int config)

Set the configuration of the mux.

#### Parameters

**config** – integer representing the mux configuration either muxConfig\_default, or mux-Config\_splitMode.

#### Returns

Returns *common entity* return values

*aErr* **getSplitMode** (int %splitMode)

Get the current split mode mux configuration.

#### Parameters

**splitMode** – integer representing the channel selection for each sub-channel within the mux. See the data-sheet for the device for specific information.

#### Returns

Returns *common entity* return values

*aErr* **setSplitMode** (const int splitMode)

Sets the mux's split mode configuration.

#### Parameters

**splitMode** – integer representing the channel selection for each sub-channel within the mux. See the data-sheet for the device for specific information.

#### Returns

Returns *common entity* return values



### 3.6.13 PoE Class

See the *PoE Entity* for generic information.

class **PoEClass** : public Acroname::BrainStem2CLI::EntityClass

*PoEClass*: This entity is only available on certain modules, and provides a Power over Ethernet control ability.

#### Public Functions

**PoEClass** ()

Constructors.

**~PoEClass** ()

Destructor.

**!PoEClass** ()

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

#### Parameters

- **pModule** – The module.
- **index** – The cmdPOE index to be addressed.

*aErr* **getPairEnabled** (const unsigned char pair, unsigned char %enable)

Gets the current enable value of the indicated POE pair.

#### Parameters

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **enable** – 1 = Enabled; 0 = Disabled;

#### Returns

Returns *common entity* return values

*aErr* **setPairEnabled** (const unsigned char pair, const unsigned char enable)

Enables or disables the indicated POE pair.

#### Parameters

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **enable** – 1 = Enable port; 0 = Disable port.

#### Returns

Returns *common entity* return values

*aErr* **getPowerMode** (unsigned char %value)

Gets the power mode of the device

**Parameters**

**value** – The power mode (PD, PSE, Auto, Off).

**Returns**

Returns *common entity* return values

*aErr* **setPowerMode** (const unsigned char value)

Sets the power mode of the device

**Parameters**

**value** – The power mode (PD, PSE, Auto, Off).

**Returns**

Returns *common entity* return values

*aErr* **getPowerState** (unsigned char %value)

Gets the power state of the device

**Parameters**

**value** – The power state (PD, PSE, Off).

**Returns**

Returns *common entity* return values

*aErr* **getPairSourcingClass** (const unsigned char pair, unsigned char %value)

Gets the sourcing class for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** – The POE class being offered by the device (PSE).

**Returns**

Returns *common entity* return values

*aErr* **setPairSourcingClass** (const unsigned char pair, const unsigned char value)

Sets the sourcing class for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** – The POE class being offered by the device (PSE).

**Returns**

Returns *common entity* return values

*aErr* **getPairRequestedClass** (const unsigned char pair, unsigned char %value)

Gets the requested class for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access

- 0 = Pair 1/2
- 1 = Pair 3/4
- **value** – The requested POE class by the device (PD).

**Returns**

Returns *common entity* return values

*aErr* **getPairDiscoveredClass** (const unsigned char pair, unsigned char %value)

Gets the discovered class for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** – The negotiated POE class by the device (PSE/PD).

**Returns**

Returns *common entity* return values

*aErr* **getPairDetectionStatus** (const unsigned char pair, unsigned char %value)

Gets detected status of the POE connection for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** – The current detected status of the pairs.

**Returns**

Returns *common entity* return values

*aErr* **getPairVoltage** (const unsigned char pair, int %microvolts)

Gets the Voltage for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **microvolts** – The voltage in microvolts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getPairCurrent** (const unsigned char pair, int %microamps)

Gets the Current for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

- **microamps** – The current in microamps (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getPairResistance** (const unsigned char pair, int %milliohms)

Gets the Resistance for a given pair.

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **milliohms** – The resistance in milliohms (1 == 1e-3Z).

**Returns**

Returns *common entity* return values

*aErr* **getPairCapacitance** (const unsigned char pair, int %nanofarads)

Gets the Capacitance for a given pair

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **nanofarads** – The capacitance in nanofarads (1 == 1e-9F).

**Returns**

Returns *common entity* return values

*aErr* **getPairPower** (const unsigned char pair, int %power)

Get the instantaneous power consumption for a given pair The equivalent of Voltage x Current

**Parameters**

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **power** – Variable to be filled with the pairs power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getTotalPower** (int %power)

Gets the total instantaneous power consumption The equivalent of Pair1(Voltage x Current) + Pair2(Voltage x Current)

**Parameters**

**power** – Variable to be filled with the total POE power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getPairAccumulatedPower** (const unsigned char pair, int %power)

Gets the accumulated power for a given pair.

#### Parameters

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **power** – Variable to be filled with the total accumulated POE power in milli-watts (mW).

#### Returns

Returns *common entity* return values

*aErr* **setPairAccumulatedPower** (const unsigned char pair, const int power)

Sets the accumulated power for a given pair.

#### Parameters

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **power** – The power accumulator value to be set in milli-watts (mW).

#### Returns

Returns *common entity* return values

*aErr* **getTotalAccumulatedPower** (int %power)

Gets the total Accumulated Power

#### Parameters

**power** – Variable to be filled with the total accumulated POE power in milli-watts (mW).

#### Returns

Returns *common entity* return values

*aErr* **setTotalAccumulatedPower** (const int power)

Sets the total accumulated power

#### Parameters

**power** – The power accumulator value to be set in milli-watts (mW).

#### Returns

Returns *common entity* return values

## 3.6.14 Pointer Class

See the *Pointer Entity* for generic information.

class **PointerClass** : public Acroname::BrainStem2CLI::EntityClass

*PointerClass*: Allows access to the reflex scratchpad from a host computer.

The Pointers access the pad which is a shared memory area on a BrainStem module. The interface allows the use of the BrainStem scratchpad from the host, and provides a mechanism for allowing the host application and BrainStem relexes to communicate.

The Pointer allows access to the pad in a similar manner as a file pointer accesses the underlying file. The cursor position can be set via `setOffset`. A read of a character short or int can be made from that cursor position.

In addition the mode of the pointer can be set so that the cursor position automatically increments or set so that it does not this allows for multiple reads of the same pad value, or reads of multi-record values, via an incrementing pointer.

## Public Functions

**PointerClass ()**

Constructors.

**~PointerClass ()**

Destructor.

**!PointerClass ()**

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

### Parameters

- **pModule** – The module.
- **index** – The cmdPOINTER index to be addressed.

**aErr getOffset (unsigned short %offset)**

Get the offset of the pointer

### Parameters

**offset** – The value of the offset.

### Returns

Returns *common entity* return values

**aErr setOffset (const unsigned short offset)**

Set the offset of the pointer

### Parameters

**offset** – The value of the offset.

### Returns

Returns *common entity* return values

**aErr getMode (unsigned char %mode)**

Get the mode of the pointer

### Parameters

**mode** – The mode: `aPOINTER_MODE_STATIC` or `aPOINTER_MODE_AUTO_INCREMENT`.

### Returns

Returns *common entity* return values

***aErr* setMode** (const unsigned char mode)

Set the mode of the pointer

**Parameters**

**mode** – The mode: aPOINTER\_MODE\_STATIC or aPOINTER\_MODE\_AUTO\_INCREMENT.

**Returns**

Returns *common entity* return values

***aErr* getTransferStore** (unsigned char %handle)

Get the handle to the store.

**Parameters**

**handle** – The handle of the store.

**Returns**

Returns *common entity* return values

***aErr* setTransferStore** (const unsigned char handle)

Set the handle to the store.

**Parameters**

**handle** – The handle of the store.

**Returns**

Returns *common entity* return values

***aErr* initiateTransferToStore** (const unsigned char transferLength)

Transfer data to the store.

**Parameters**

**transferLength** – The length of the data transfer.

**Returns**

Returns *common entity* return values

***aErr* initiateTransferFromStore** (const unsigned char transferLength)

Transfer data from the store.

**Parameters**

**transferLength** – The length of the data transfer.

**Returns**

Returns *common entity* return values

***aErr* getChar** (unsigned char %value)

Get a char (1 byte) value from the pointer at this object's index, where elements are 1 byte long.

**Parameters**

**value** – The value of a single character (1 byte) stored in the pointer.

**Returns**

Returns *common entity* return values

***aErr* setChar** (const unsigned char value)

Set a char (1 byte) value to the pointer at this object's element index, where elements are 1 byte long.

**Parameters**

**value** – The single char (1 byte) value to be stored in the pointer.

**Returns**

Returns *common entity* return values

*aErr* **getShort** (unsigned short %value)

Get a short (2 byte) value from the pointer at this objects index, where elements are 2 bytes long

**Parameters**

**value** – The value of a single short (2 byte) stored in the pointer.

**Returns**

Returns *common entity* return values

*aErr* **setShort** (const unsigned short value)

Set a short (2 bytes) value to the pointer at this object's element index, where elements are 2 bytes long.

**Parameters**

**value** – The single short (2 byte) value to be set in the pointer.

**Returns**

Returns *common entity* return values

*aErr* **getInt** (unsigned int %value)

Get an int (4 bytes) value from the pointer at this objects index, where elements are 4 bytes long

**Parameters**

**value** – The value of a single int (4 byte) stored in the pointer.

**Returns**

Returns *common entity* return values

*aErr* **setInt** (const unsigned int value)

Set an int (4 bytes) value from the pointer at this objects index, where elements are 4 bytes long

**Parameters**

**value** – The single int (4 byte) value to be stored in the pointer.

**Returns**

Returns *common entity* return values

### 3.6.15 Port Class

See the *Port Entity* for generic information.

```
class PortClass : public Acroname::BrainStem2CLI::EntityClass
```

*PortClass*: The Port Entity provides software control over the most basic items related to a USB Port. This includes everything from the complete enable and disable of the entire port to the individual control of specific pins. Voltage and Current measurements are also included for devices which support the Port Entity.



## Public Functions

**PortClass ()**

Constructors.

**~PortClass ()**

Destructor.

**!PortClass ()**

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

### Parameters

- **pModule** – The module.
- **index** – The cmdPORT index to be addressed.

**aErr getVbusVoltage (int %microvolts)**

Gets the Vbus Voltage

### Parameters

**microvolts** – The voltage in microvolts (1 == 1e-6V) currently present on Vbus.

### Returns

Returns *common entity* return values

**aErr getVbusCurrent (int %microamps)**

Gets the Vbus Current

### Parameters

**microamps** – The current in microamps (1 == 1e-6A) currently present on Vbus.

### Returns

Returns *common entity* return values

**aErr getVconnVoltage (int %microvolts)**

Gets the Vconn Voltage

### Parameters

**microvolts** – The voltage in microvolts (1 == 1e-6V) currently present on Vconn.

### Returns

Returns *common entity* return values

**aErr getVconnCurrent (int %microamps)**

Gets the Vconn Current

### Parameters

**microamps** – The current in microamps (1 == 1e-6A) currently present on Vconn.

### Returns

Returns *common entity* return values

**aErr getPowerMode (unsigned char %powerMode)**

Gets the Port Power Mode: Convenience Function of get/setPortMode

**Parameters**

**powerMode** – The current power mode.

**Returns**

Returns *common entity* return values

*aErr* **setPowerMode** (const unsigned char powerMode)

Sets the Port Power Mode: Convenience Function of get/setPortMode

**Parameters**

**powerMode** – The power mode to be set.

**Returns**

Returns *common entity* return values

*aErr* **getEnabled** (unsigned char %enable)

Gets the current enable value of the port.

**Parameters**

**enable** – 1 = Fully enabled port; 0 = One or more disabled components.

**Returns**

Returns *common entity* return values

*aErr* **setEnabled** (const unsigned char enable)

Enables or disables the entire port.

**Parameters**

**enable** – 1 = Fully enable port; 0 = Fully disable port.

**Returns**

Returns *common entity* return values

*aErr* **getDataEnabled** (unsigned char %enable)

Gets the current enable value of the data lines. Sub-component (Data) of getEnabled.

**Parameters**

**enable** – 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

*aErr* **setDataEnabled** (const unsigned char enable)

Enables or disables the data lines. Sub-component (Data) of setEnabled.

**Parameters**

**enable** – 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getDataHSEnabled** (unsigned char %enable)

Gets the current enable value of the High Speed (HS) data lines. Sub-component of getDataEnabled.

**Parameters**

**enable** – 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

***aErr* setDataHSEnabled** (const unsigned char enable)

Enables or disables the High Speed (HS) data lines. Sub-component of setDataEnabled.

**Parameters**

**enable** – 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

***aErr* getDataHSEnabled** (unsigned char %enable)

Gets the current enable value of the High Speed A side (HSA) data lines. Sub-component of getDataHSEnabled.

**Parameters**

**enable** – 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

***aErr* setDataHSEnabled** (const unsigned char enable)

Enables or disables the High Speed A side (HSA) data lines. Sub-component of setDataHSEnabled.

**Parameters**

**enable** – 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

***aErr* getDataHSEnabled** (unsigned char %enable)

Gets the current enable value of the High Speed B side (HSB) data lines. Sub-component of getDataHSEnabled.

**Parameters**

**enable** – 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

***aErr* setDataHSEnabled** (const unsigned char enable)

Enables or disables the High Speed B side (HSB) data lines. Sub-component of setDataHSEnabled.

**Parameters**

**enable** – 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

***aErr* setDataSSEnabled** (unsigned char %enable)

Gets the current enable value of the Super Speed (SS) data lines. Sub-component of setDataEnabled.

**Parameters**

**enable** – 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

***aErr* setDataSSEnabled** (const unsigned char enable)

Enables or disables the Super Speed (SS) data lines. Sub-component of setDataEnabled.

**Parameters**

**enable** – 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getDataSS1Enabled** (unsigned char %enable)

Gets the current enable value of the Super Speed A side (SSA) data lines. Sub-component of `getDataSSEnabled`.

**Parameters**

**enable** – 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

*aErr* **setDataSS1Enabled** (const unsigned char enable)

Enables or disables the Super Speed A side (SSA) data lines. Sub-component of `setDataEnabled`.

**Parameters**

**enable** – 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getDataSS2Enabled** (unsigned char %enable)

Gets the current enable value of the Super Speed B side (SSB) data lines. Sub-component of `getDataSSEnabled`.

**Parameters**

**enable** – 1 = Data enabled; 0 = Data disabled.

**Returns**

Returns *common entity* return values

*aErr* **setDataSS2Enabled** (const unsigned char enable)

Enables or disables the Super Speed B side (SSB) data lines. Sub-component of `setDataSSEnabled`.

**Parameters**

**enable** – 1 = Enable data; 0 = Disable data.

**Returns**

Returns *common entity* return values

*aErr* **getPowerEnabled** (unsigned char %enable)

Gets the current enable value of the power lines. Sub-component (Power) of `getEnabled`.

**Parameters**

**enable** – 1 = Power enabled; 0 = Power disabled.

**Returns**

Returns *common entity* return values

*aErr* **setPowerEnabled** (const unsigned char enable)

Enables or Disables the power lines. Sub-component (Power) of `setEnabled`.

**Parameters**

**enable** – 1 = Enable power; 0 = Disable disable.

**Returns**

Returns *common entity* return values

*aErr* **getDataRole** (unsigned char %dataRole)

Gets the Port Data Role.

**Parameters**

**dataRole** – The data role to be set. See datasheet for details.

**Returns**

Returns *common entity* return values

*aErr* **getVconnEnabled** (unsigned char %enable)

Gets the current enable value of the Vconn lines. Sub-component (Vconn) of getEnabled.

**Parameters**

**enable** – 1 = Vconn enabled; 0 = Vconn disabled.

**Returns**

Returns *common entity* return values

*aErr* **setVconnEnabled** (const unsigned char enable)

Enables or disables the Vconn lines. Sub-component (Vconn) of setEnabled.

**Parameters**

**enable** – 1 = Enable Vconn lines; 0 = Disable Vconn lines.

**Returns**

Returns *common entity* return values

*aErr* **getVconn1Enabled** (unsigned char %enable)

Gets the current enable value of the Vconn1 lines. Sub-component of getVconnEnabled.

**Parameters**

**enable** – 1 = Vconn1 enabled; 0 = Vconn1 disabled.

**Returns**

Returns *common entity* return values

*aErr* **setVconn1Enabled** (const unsigned char enable)

Enables or disables the Vconn1 lines. Sub-component of setVconnEnabled.

**Parameters**

**enable** – 1 = Enable Vconn1 lines; 0 = Disable Vconn1 lines.

**Returns**

Returns *common entity* return values

*aErr* **getVconn2Enabled** (unsigned char %enable)

Gets the current enable value of the Vconn2 lines. Sub-component of getVconnEnabled.

**Parameters**

**enable** – 1 = Vconn2 enabled; 0 = Vconn2 disabled.

**Returns**

Returns *common entity* return values

*aErr* **setVconn2Enabled** (const unsigned char enable)

Enables or disables the Vconn2 lines. Sub-component of setVconnEnabled.

**Parameters**

**enable** – 1 = Enable Vconn2 lines; 0 = Disable Vconn2 lines.

**Returns**

Returns *common entity* return values

*aErr* **getCCEnabled** (unsigned char %enable)

Gets the current enable value of the CC lines. Sub-component (CC) of getEnabled.

**Parameters**

**enable** – 1 = CC enabled; 0 = CC disabled.

**Returns**

Returns *common entity* return values

*aErr* **setCCEnabled** (const unsigned char enable)

Enables or disables the CC lines. Sub-component (CC) of setEnabled.

**Parameters**

**enable** – 1 = Enable CC lines; 0 = Disable CC lines.

**Returns**

Returns *common entity* return values

*aErr* **getCC1Enabled** (unsigned char %enable)

Gets the current enable value of the CC1 lines. Sub-component of getCCEnabled.

**Parameters**

**enable** – 1 = CC1 enabled; 0 = CC1 disabled.

**Returns**

Returns *common entity* return values

*aErr* **setCC1Enabled** (const unsigned char enable)

Enables or disables the CC1 lines. Sub-component of setCCEnabled.

**Parameters**

**enable** – 1 = Enable CC1 lines; 0 = Disable CC1 lines.

**Returns**

Returns *common entity* return values

*aErr* **getCC2Enabled** (unsigned char %enable)

Gets the current enable value of the CC2 lines. Sub-component of getCCEnabled.

**Parameters**

**enable** – 1 = CC2 enabled; 0 = CC2 disabled.

**Returns**

Returns *common entity* return values

*aErr* **setCC2Enabled** (const unsigned char enable)

Enables or disables the CC2 lines. Sub-component of setCCEnabled.

**Parameters**

**enable** – 1 = Enable CC2 lines; 0 = Disable CC2 lines.

**Returns**

Returns *common entity* return values

*aErr* **getVoltageSetpoint** (unsigned int %value)

Gets the current voltage setpoint value for the port.

**Parameters**

**value** – the voltage setpoint of the port in uV.

**Returns**

Returns *common entity* return values

***aErr* setVoltageSetpoint** (const unsigned int value)

Sets the current voltage setpoint value for the port.

**Parameters**

**value** – the voltage setpoint of the port in uV.

**Returns**

Returns *common entity* return values

***aErr* getState** (unsigned int %state)

A bit mapped representation of the current state of the port. Reflects what the port IS which may differ from what was requested.

**Parameters**

**state** – Variable to be filled with the current state.

**Returns**

Returns *common entity* return values

***aErr* getDataSpeed** (unsigned char %speed)

Gets the speed of the enumerated device.

**Parameters**

**speed** – Bit mapped value representing the devices speed. See “Devices” reference for details.

**Returns**

Returns *common entity* return values

***aErr* getMode** (unsigned int %mode)

Gets current mode of the port

**Parameters**

**mode** – Bit mapped value representing the ports mode. See “Devices” reference for details.

**Returns**

Returns *common entity* return values

***aErr* setMode** (const unsigned int mode)

Sets the mode of the port

**Parameters**

**mode** – Port mode to be set. See “Devices” documentation for details.

**Returns**

Returns *common entity* return values

***aErr* getErrors** (unsigned int %errors)

Returns any errors that are present on the port. Calling this function will clear the current errors. If the error persists it will be set again.

**Parameters**

**errors** – Bit mapped field representing the current errors of the ports

**Returns**

Returns *common entity* return values

***aErr* getCurrentLimit** (unsigned int %limit)

Gets the current limit of the port.

**Parameters**

**limit** – Variable to be filled with the limit in microAmps (uA).

**Returns**

Returns *common entity* return values

*aErr* **setCurrentLimit** (const unsigned int limit)

Sets the current limit of the port.

**Parameters**

**limit** – Current limit to be applied in microAmps (uA).

**Returns**

Returns *common entity* return values

*aErr* **getCurrentLimitMode** (unsigned char %mode)

Gets the current limit mode. The mode determines how the port will react to an over current condition.

**Parameters**

**mode** – Variable to be filled with an enumerated representation of the current limit mode. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **setCurrentLimitMode** (const unsigned char mode)

Sets the current limit mode. The mode determines how the port will react to an over current condition.

**Parameters**

**mode** – An enumerated representation of the current limit mode. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getAvailablePower** (unsigned int %power)

Gets the current available power. This value is determined by the power manager which is responsible for budgeting the systems available power envelope.

**Parameters**

**power** – Variable to be filled with the available power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getAllocatedPower** (int %power)

Gets the currently allocated power This value is determined by the power manager which is responsible for budgeting the systems available power envelope.

**Parameters**

**power** – Variable to be filled with the allocated power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getPowerLimit** (unsigned int %limit)

Gets the user defined power limit for the port.

**Parameters**

**limit** – Variable to be filled with the power limit in milli-watts (mW).



**Returns**

Returns *common entity* return values

*aErr* **setPowerLimit** (const unsigned int limit)

Sets a user defined power limit for the port.

**Parameters**

**limit** – Power limit to be applied in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getPowerLimitMode** (unsigned char %mode)

Gets the power limit mode. The mode determines how the port will react to an over power condition.

**Parameters**

**mode** – Variable to be filled with an enumerated representation of the power limit mode. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **setPowerLimitMode** (const unsigned char mode)

Sets the power limit mode. The mode determines how the port will react to an over power condition.

**Parameters**

**mode** – An enumerated representation of the power limit mode to be applied Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getName** (unsigned char %buffer, const unsigned int bufferSize, unsigned int %unloadedLength)

Gets a user defined name of the port. Helpful for identifying ports/devices in a static environment.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setName** (const unsigned char %buffer, const unsigned int bufferSize)

Sets a user defined name of the port. Helpful for identifying ports/devices in a static environment.

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

*aErr* **getCCCurrentLimit** (unsigned char %value)

Gets the CC Current Limit Resistance The CC Current limit is the value that's set for the pull up resistance on the CC lines for basic USB-C negotiations.

**Parameters**

**value** – Variable to be filled with an enumerated representation of the CC Current limit.

- 0 = None
- 1 = Default (500/900mA)
- 2 = 1.5A
- 3 = 3.0A

**Returns**

Returns *common entity* return values

*aErr* **setCCCurrentLimit** (const unsigned char value)

Sets the CC Current Limit Resistance The CC Current limit is the value that's set for the pull up resistance on the CC lines for basic USB-C negotiations.

**Parameters**

**value** – Variable to be filled with an enumerated representation of the CC Current limit.

- 0 = None
- 1 = Default (500/900mA)
- 2 = 1.5A
- 3 = 3.0A

**Returns**

Returns *common entity* return values

*aErr* **getDataHSRoutingBehavior** (unsigned char %mode)

Gets the HighSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Parameters**

**mode** – Variable to be filled with an enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **setDataHSRoutingBehavior** (const unsigned char mode)

Sets the HighSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Parameters**

**mode** – An enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getDataSSRoutingBehavior** (unsigned char %mode)

Gets the SuperSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Parameters**

**mode** – Variable to be filled with an enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **setDataSSRoutingBehavior** (const unsigned char mode)

Sets the SuperSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

**Parameters**

**mode** – An enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getVbusAccumulatedPower** (int %milliwatthours)

Gets the Vbus Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vbus in milliwatt-hours.

**Returns**

Returns *common entity* return values

*aErr* **setVbusAccumulatedPower** (const int milliwatthours)

Sets the Vbus Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vbus in milliwatt-hours to be set.

**Returns**

Returns *common entity* return values

*aErr* **resetVbusAccumulatedPower** ()

Resets the Vbus Accumulated Power to zero.

*Deprecated:*

Replace with setVbusAccumulatedPower(0)

**Returns**

Returns *common entity* return values

*aErr* **getVconnAccumulatedPower** (int %milliwatthours)

Gets the Vconn Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn in milliwatt-hours.

**Returns**

Returns *common entity* return values

*aErr* **setVconnAccumulatedPower** (const int milliwatthours)

Sets the Vconn Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn to be set.

**Returns**

Returns *common entity* return values

*aErr* **resetVconnAccumulatedPower** ( )

Resets the Vconn Accumulated Power to zero.

*Deprecated:*

Replace with `setVconnAccumulatedPower(0)`

**Returns**

Returns *common entity* return values

*aErr* **setHSBoost** (const unsigned char boost)

Sets the ports USB 2.0 High Speed Boost Settings The setting determines how much additional drive the USB 2.0 signal will have in High Speed mode.

**Parameters**

**boost** – An enumerated representation of the boost range. Available value are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getHSBoost** (unsigned char %boost)

Gets the ports USB 2.0 High Speed Boost Settings The setting determines how much additional drive the USB 2.0 signal will have in High Speed mode.

**Parameters**

**boost** – An enumerated representation of the boost range. Available modes are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getCC1State** (unsigned short %value)

Gets the current CC1 Strapping on local and remote The state is a bit packed value where the upper byte is used to represent the remote or partner device attached to the ports resistance and the lower byte is used to represent the local or hubs resistance.

**Parameters**

**value** – Variable to be filled with an packed enumerated representation of the CC state. Enumeration values for each byte are as follows:

- None = 0 = portCC1State\_None
- Invalid = 1 = portCC1State\_Invalid
- Rp (default) = 2 = portCC1State\_RpDefault
- Rp (1.5A) = 3 = portCC1State\_Rp1p5
- Rp (3A) = 4 = portCC1State\_Rp3p0
- Rd = 5 = portCC1State\_Rd
- Ra = 6 = portCC1State\_Ra
- Managed by controller = 7 = portCC1State\_Managed
- Unknown = 8 = portCC1State\_Unknown

**Returns**

Returns *common entity* return values

*aErr* **getCC2State** (unsigned short %value)

Gets the current CC2 Strapping on local and remote The state is a bit packed value where the upper byte is used to represent the remote or partner device attached to the ports resistance and the lower byte is used to represent the local or hubs resistance.

#### Parameters

**value** – Variable to be filled with an packed enumerated representation of the CC state. Enumeration values for each byte are as follows:

- None = 0 = portCC2State\_None
- Invalid = 1 = portCC2State\_Invalid
- Rp (default) = 2 = portCC2State\_RpDefault
- Rp (1.5A) = 3 = portCC2State\_Rp1p5
- Rp (3A) = 4 = portCC2State\_Rp3p0
- Rd = 5 = portCC2State\_Rd
- Ra = 6 = portCC2State\_Ra
- Managed by controller = 7 = portCC2State\_Managed
- Unknown = 8 = portCC2State\_Unknown

#### Returns

Returns *common entity* return values

*aErr* **getSBU1Voltage** (int %microvolts)

Get the voltage of SBU1 for a port.

#### Parameters

**microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

#### Returns

Returns *common entity* return values

*aErr* **getSBU2Voltage** (int %microvolts)

Get the voltage of SBU2 for a port.

#### Parameters

**microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

#### Returns

Returns *common entity* return values

*aErr* **getCC1Voltage** (int %microvolts)

Get the voltage of CC1 for a port.

#### Parameters

**microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

#### Returns

Returns *common entity* return values

*aErr* **getCC2Voltage** (int %microvolts)

Get the voltage of CC2 for a port.

#### Parameters

**microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getCC1Current** (int %microamps)

Get the current through the CC1 for a port.

**Parameters**

**microamps** – The USB channel current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getCC2Current** (int %microamps)

Get the current through the CC2 for a port.

**Parameters**

**microamps** – The USB channel current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getCC1AccumulatedPower** (int %milliwatthours)

Gets the CC1 Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn in milliwatt-hours.

**Returns**

Returns *common entity* return values

*aErr* **setCC1AccumulatedPower** (const int milliwatthours)

Sets the CC1 Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn to be set.

**Returns**

Returns *common entity* return values

*aErr* **getCC2AccumulatedPower** (int %milliwatthours)

Gets the CC2 Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn in milliwatt-hours.

**Returns**

Returns *common entity* return values

*aErr* **setCC2AccumulatedPower** (const int milliwatthours)

Sets the CC2 Accumulated Power

**Parameters**

**milliwatthours** – The accumulated power on Vconn to be set.

**Returns**

Returns *common entity* return values

### 3.6.16 PowerDelivery Class

See the [PowerDelivery Entity](#) for generic information.

class **PowerDeliveryClass** : public Acroname::BrainStem2CLI::EntityClass

[PowerDeliveryClass](#): Power Delivery or PD is a power specification which allows more charging options and device behaviors within the USB interface. This Entity will allow you to directly access the vast landscape of PD.

#### Public Functions

**PowerDeliveryClass** ()

Constructors.

**~PowerDeliveryClass** ()

Destructor.

**!PowerDeliveryClass** ()

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

#### Parameters

- **pModule** – The module.
- **index** – The cmdPOWERDELIVERY index to be addressed.

[aErr](#) **getConnectionState** (unsigned char %state)

Gets the current state of the connection in the form of an enumeration.

#### Parameters

**state** – Pointer to be filled with the current connection state.

#### Returns

Returns [common entity](#) return values

[aErr](#) **getNumberOfPowerDataObjects** (const unsigned char partner, const unsigned char powerRole, unsigned char %numRules)

Gets the number of Power Data Objects (PDOs) for a given partner and power role.

#### Parameters

- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **numRules** – Variable to be filled with the number of PDOs.

**Returns**

Returns *common entity* return values

*aErr* **getPowerDataObject** (const unsigned char partner, const unsigned char powerRole, const unsigned char ruleIndex, unsigned int %pdo)

Gets the Power Data Object (PDO) for the requested partner, powerRole and index.

**Parameters**

- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.
- **pdo** – Variable to be filled with the requested power rule.

**Returns**

Returns *common entity* return values

*aErr* **setPowerDataObject** (const unsigned char powerRole, const unsigned char ruleIndex, const unsigned int pdo)

Sets the Power Data Object (PDO) of the local partner for a given power role and index.

**Parameters**

- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.
- **pdo** – Power Data Object to be set.

**Returns**

Returns *common entity* return values

*aErr* **resetPowerDataObjectToDefault** (const unsigned char powerRole, const unsigned char ruleIndex)

Resets the Power Data Object (PDO) of the Local partner for a given power role and index.

**Parameters**

- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.

**Returns**

Returns *common entity* return values



*aErr* **getPowerDataObjectList** (unsigned int %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Gets all Power Data Objects (PDOs). Equivalent to calling *PowerDeliveryClass::getPowerDataObject()* on all partners, power roles, and index's.

#### Parameters

- **buffer** – pointer to the start of a c style buffer to be filled The order of which is:
  - Rules 1-7 Local Source
  - Rules 1-7 Local Sink
  - Rules 1-7 Partner Source
  - Rules 1-7 Partner Sink.
- **bufferLength** – Length of the buffer to be filed
- **unloadedLength** – Length that was actually received and filled. On success this value should be 28 (7 rules \* 2 partners \* 2 power roles)

#### Returns

Returns *common entity* return values

*aErr* **getPowerDataObjectEnabled** (const unsigned char powerRole, const unsigned char ruleIndex, unsigned char %enabled)

Gets the enabled state of the Local Power Data Object (PDO) for a given power role and index. Enabled refers to whether the PDO will be advertised when a PD connection is made. This does not indicate the currently active rule index. This information can be found in Request Data Object (RDO).

#### Parameters

- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.
- **enabled** – Variable to be filled with enabled state.

#### Returns

Returns *common entity* return values

*aErr* **setPowerDataObjectEnabled** (const unsigned char powerRole, const unsigned char ruleIndex, const unsigned char enabled)

Sets the enabled state of the Local Power Data Object (PDO) for a given powerRole and index. Enabled refers to whether the PDO will be advertised when a PD connection is made. This does not indicate the currently active rule index. This information can be found in Request Data Object (RDO).

#### Parameters

- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.
- **enabled** – The state to be set.

**Returns**

Returns *common entity* return values

*aErr* **getPowerDataObjectEnabledList** (const unsigned char powerRole, unsigned char %enabledList)

Gets all Power Data Object enables for a given power role. Equivalent of calling *PowerDeliveryClass::getPowerDataObjectEnabled()* for all indexes.

**Parameters**

- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **enabledList** – Variable to be filled with a mapped representation of the enabled PDOs for a given power role. Values align with a given rule index (bits 1-7, bit 0 is invalid)

**Returns**

Returns *common entity* return values

*aErr* **getRequestDataObject** (const unsigned char partner, unsigned int %rdo)

Gets the current Request Data Object (RDO) for a given partner. RDOs are provided by the sinking device and exist only after a successful PD negotiation (Otherwise zero). Only one RDO can exist at a time. i.e. Either the Local or Remote partner RDO

**Parameters**

- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **rdo** – Variable to be filled with the current RDO. Zero indicates the RDO is not active.

**Returns**

Returns *common entity* return values

*aErr* **setRequestDataObject** (const unsigned int rdo)

Sets the current Request Data Object (RDO) for a given partner. Only the local partner can be changed. RDOs are provided by the sinking device and exist only after a successful PD negotiation (Otherwise zero). Only one RDO can exist at a time. i.e. Either the Local or Remote partner RDO

**Parameters**

**rdo** – Request Data Object to be set.

**Returns**

Returns *common entity* return values

*aErr* **getLinkState** (unsigned int %state)

Gets the current state of the connection in the form of a bitmask.

**Parameters**

**state** – Pointer to be filled with the current connection state bits.

**Returns**

Returns *common entity* return values

***aErr* getAttachTimeElapsed** (unsigned int %secondsAndMicroseconds, const unsigned int bufferLength, unsigned int %unloadedLength)

Gets the length of time that the port has been in the attached state. Returned as a list of two unsigned integers, first seconds, then microseconds.

#### Parameters

- **secondsAndMicroseconds** – Pointer to list of unsigned integers to fill with attach time elapsed
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

#### Returns

Returns *common entity* return values

***aErr* getPowerRoleCapabilities** (unsigned char %powerRole)

Gets the power roles that may be advertised by the local partner. (CC Strapping).

#### Parameters

**powerRole** – Variable to be filled with the power role

- None = 0 = pdPowerRoleCapabilities\_None
- Source = 1 = pdPowerRoleCapabilities\_Source
- Sink = 2 = pdPowerRoleCapabilities\_Sink
- Source/Sink = 3 = pdPowerRoleCapabilities\_DualRole (Dual Role Port)

#### Returns

Returns *common entity* return values

***aErr* getPowerRole** (unsigned char %powerRole)

Gets the power role that is currently being advertised by the local partner. (CC Strapping).

#### Parameters

**powerRole** – Variable to be filled with the power role

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink
- Source/Sink = 3 = powerdeliveryPowerRoleSourceSink (Dual Role Port)

#### Returns

Returns *common entity* return values

***aErr* setPowerRole** (const unsigned char powerRole)

Set the current power role to be advertised by the Local partner. (CC Strapping).

#### Parameters

**powerRole** – Value to be applied.

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink
- Source/Sink = 3 = powerdeliveryPowerRoleSourceSink (Dual Role Port)

**Returns**

Returns *common entity* return values

*aErr* **getPowerRolePreferred** (unsigned char %powerRole)

Gets the preferred power role currently being advertised by the Local partner. (CC Strapping).

**Parameters**

**powerRole** – Value to be applied.

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink

**Returns**

Returns *common entity* return values

*aErr* **setPowerRolePreferred** (const unsigned char powerRole)

Set the preferred power role to be advertised by the Local partner (CC Strapping).

**Parameters**

**powerRole** – Value to be applied.

- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink

**Returns**

Returns *common entity* return values

*aErr* **getDataRoleCapabilities** (unsigned char %dataRole)

Gets the data roles that may be advertised by the local partner.

**Parameters**

**dataRole** – Variable to be filled with the data role

- None = 0 = pdDataRoleCapabilities\_None
- DFP = 1 = pdDataRoleCapabilities\_DFP
- UFP = 2 = pdDataRoleCapabilities\_UFP
- DFP/UFP = 3 = pdDataRoleCapabilities\_DualRole (Dual Role Port)

**Returns**

Returns *common entity* return values

*aErr* **getCableVoltageMax** (unsigned char %maxVoltage)

Gets the maximum voltage capability reported by the e-mark of the attached cable.

**Parameters**

**maxVoltage** – Variable to be filled with an enumerated representation of voltage.

- Unknown/Unattached (0)
- 20 Volts DC (1)
- 30 Volts DC (2)
- 40 Volts DC (3)
- 50 Volts DC (4)

**Returns**

Returns *common entity* return values

*aErr* **getCableCurrentMax** (unsigned char %maxCurrent)

Gets the maximum current capability report by the e-mark of the attached cable.

**Parameters**

**maxCurrent** – Variable to be filled with an enumerated representation of current.

- Unknown/Unattached (0)
- 3 Amps (1)
- 5 Amps (2)

**Returns**

Returns *common entity* return values

*aErr* **getCableSpeedMax** (unsigned char %maxSpeed)

Gets the maximum data rate capability reported by the e-mark of the attached cable.

**Parameters**

**maxSpeed** – Variable to be filled with an enumerated representation of data speed.

- Unknown/Unattached (0)
- USB 2.0 (1)
- USB 3.2 gen 1 (2)
- USB 3.2 / USB 4 gen 2 (3)
- USB 4 gen 3 (4)

**Returns**

Returns *common entity* return values

*aErr* **getCableType** (unsigned char %type)

Gets the cable type reported by the e-mark of the attached cable.

**Parameters**

**type** – Variable to be filled with an enumerated representation of the cable type.

- Invalid, no e-mark and not Vconn powered (0)
- Passive cable with e-mark (1)
- Active cable (2)

**Returns**

Returns *common entity* return values

*aErr* **getCableOrientation** (unsigned char %orientation)

Gets the current orientation being used for PD communication

**Parameters**

**orientation** – Variable filled with an enumeration of the orientation.

- Unconnected (0)
- CC1 (1)
- CC2 (2)

**Returns**

Returns *common entity* return values

*aErr* **request** (const unsigned char request)

Requests an action of the Remote partner. Actions are not guaranteed to occur.

**Parameters**

**request** – Request to be issued to the remote partner

- pdRequestHardReset (0)
- pdRequestSoftReset (1)
- pdRequestDataReset (2)
- pdRequestPowerRoleSwap (3)
- pdRequestPowerFastRoleSwap (4)
- pdRequestDataRoleSwap (5)
- pdRequestVconnSwap (6)
- pdRequestSinkGoToMinimum (7)
- pdRequestRemoteSourcePowerDataObjects (8)
- pdRequestRemoteSinkPowerDataObjects (9)

**Returns**

Returns *common entity* return values

*aErr* **requestStatus** (unsigned int %status)

Gets the status of the last request command sent.

**Parameters**

**status** – Variable to be filled with the status

**Returns**

Returns *common entity* return values

*aErr* **getOverride** (unsigned int %overrides)

Gets the current enabled overrides

**Parameters**

**overrides** – Bit mapped representation of the current override configuration.

**Returns**

Returns *common entity* return values

*aErr* **setOverride** (const unsigned int overrides)

Sets the current enabled overrides

**Parameters**

**overrides** – Overrides to be set in a bit mapped representation.

**Returns**

Returns *common entity* return values

*aErr* **getFlagMode** (const unsigned char flag, unsigned char %mode)

Gets the current mode of the local partner flag/advertisement. These flags are apart of the first Local Power Data Object and must be managed in order to accurately represent the system to other PD devices. This API allows overriding of that feature. Overriding may lead to unexpected behaviors.

**Parameters**

- **flag** – Flag/Advertisement to be modified

- **mode** – Variable to be filled with the current mode.
  - Disabled (0)
  - Enabled (1)
  - Auto (2) default

**Returns**

Returns *common entity* return values

*aErr* **setFlagMode** (const unsigned char flag, const unsigned char mode)

Sets how the local partner flag/advertisement is managed. These flags are apart of the first Local Power Data Object and must be managed in order to accurately represent the system to other PD devices. This API allows overriding of that feature. Overriding may lead to unexpected behaviors.

**Parameters**

- **flag** – Flag/Advertisement to be modified
- **mode** – Value to be applied.
  - Disabled (0)
  - Enabled (1)
  - Auto (2) default

**Returns**

Returns *common entity* return values

*aErr* **getPeakCurrentConfiguration** (unsigned char %configuration)

Gets the Peak Current Configuration for the Local Source. The peak current configuration refers to the allowable tolerance/overload capabilities in regards to the devices max current. This tolerance includes a maximum value and a time unit.

**Parameters**

**configuration** – An enumerated value referring to the current configuration.

- Allowable values are 0 - 4

**Returns**

Returns *common entity* return values

*aErr* **setPeakCurrentConfiguration** (const unsigned char configuration)

Sets the Peak Current Configuration for the Local Source. The peak current configuration refers to the allowable tolerance/overload capabilities in regards to the devices max current. This tolerance includes a maximum value and a time unit.

**Parameters**

**configuration** – An enumerated value referring to the configuration to be set

- Allowable values are 0 - 4

**Returns**

Returns *common entity* return values

*aErr* **getFastRoleSwapCurrent** (unsigned char %swapCurrent)

Gets the Fast Role Swap Current The fast role swap current refers to the amount of current required by the Local Sink in order to successfully preform the swap.

**Parameters**

**swapCurrent** – An enumerated value referring to current swap value.

- 0A (0)
- 900mA (1)
- 1.5A (2)
- 3A (3)

**Returns**

Returns *common entity* return values

*aErr* **setFastRoleSwapCurrent** (const unsigned char swapCurrent)

Sets the Fast Role Swap Current The fast role swap current refers to the amount of current required by the Local Sink in order to successfully preform the swap.

**Parameters**

**swapCurrent** – An enumerated value referring to value to be set.

- 0A (0)
- 900mA (1)
- 1.5A (2)
- 3A (3)

**Returns**

Returns *common entity* return values

**Public Static Functions**

static *aErr* **packDataObjectAttributes** (unsigned char %attributes, const unsigned char partner, const unsigned char powerRole, const unsigned char ruleIndex)

Helper function for packing Data Object attributes. This value is used as a subindex for all Data Object calls with the BrainStem Protocol.

**Parameters**

- **attributes** – Variable to be filled with packed values.
- **partner** – Indicates which side of the PD connection.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – Data object index.

**Returns**

Returns *common entity* return values

static *aErr* **unpackDataObjectAttributes** (const unsigned char attributes, unsigned char %partner, unsigned char %powerRole, unsigned char %ruleIndex)

Helper function for unpacking Data Object attributes. This value is used as a subindex for all Data Object calls with the BrainStem Protocol.



**Parameters**

- **attributes** – Variable to be filled with packed values.
- **partner** – Indicates which side of the PD connection.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – Data object index.

**Returns**

Returns *common entity* return values

**3.6.17 RCServo Class**

See the *RCServo Entity* for generic information.

class **RCServoClass** : public Acroname::BrainStem2CLI::EntityClass

*RCServoClass*: Interface to servo entities on BrainStem modules. Servo entities are built upon the digital input/output pins and therefore can also be inputs or outputs. Please see the product datasheet on the configuration limitations.

**Public Functions**

**RCServoClass** ()

Constructors.

**~RCServoClass** ()

Destructor.

**!RCServoClass** ()

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdSERVO index to be addressed.

*aErr* **setEnabled** (const unsigned char enable)

Enable the servo channel

**Parameters**

**enable** – The state to be set. 0 is disabled, 1 is enabled.

**Returns**

Returns *common entity* return values

*aErr* **getEnable** (unsigned char %enable)

Get the enable status of the servo channel.

**Parameters**

**enable** – The current enable status of the servo entity. 0 is disabled, 1 is enabled.

**Returns**

Returns *common entity* return values

*aErr* **setPosition** (const unsigned char position)

Set the position of the servo channel

**Parameters**

**position** – The position to be set. Default 64 = a 1ms pulse and 192 = a 2ms pulse.

**Returns**

Returns *common entity* return values

*aErr* **getPosition** (unsigned char %position)

Get the position of the servo channel

**Parameters**

**position** – The current position of the servo channel. Default 64 = a 1ms pulse and 192 = a 2ms pulse.

**Returns**

Returns *common entity* return values

*aErr* **setReverse** (const unsigned char reverse)

Set the output to be reversed on the servo channel

**Parameters**

**reverse** – Reverses the value set by “setPosition”. For example, if the position is set to 64 (1ms pulse) the output will now be 192 (2ms pulse), however “getPosition” will return the set value of 64. 0 = not reversed, 1 = reversed.

**Returns**

Returns *common entity* return values

*aErr* **getReverse** (unsigned char %reverse)

Get the reverse status of the servo channel

**Parameters**

**reverse** – The current reverse status of the servo entity. 0 = not reversed, 1 = reversed.

**Returns**

Returns *common entity* return values

### 3.6.18 Rail Class

See the *Rail Entity* for generic information.

class **RailClass** : public Acroname::BrainStem2CLI::EntityClass

*RailClass*: Provides power rail functionality on certain modules. The *RailClass* can be used to control power to downstream devices. It has the ability to take current and voltage measurements, and depending on hardware, may have additional modes and capabilities.

## Public Functions

**RailClass()**

Constructors.

**~RailClass()**

Destructor.

**!RailClass()**

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

### Parameters

- **pModule** – The module.
- **index** – The cmdRAIL index to be addressed.

**aErr getCurrent (int %microamps)**

Get the rail current.

### Parameters

**microamps** – The current in micro-amps (1 == 1e-6A).

### Returns

Returns *common entity* return values

**aErr setCurrentSetpoint (const int microamps)**

Set the rail supply current. Rail current control capabilities vary between modules. Refer to the module datasheet for definition of the rail current capabilities.

### Parameters

**microamps** – The current in micro-amps (1 == 1e-6A) to be supply by the rail.

### Returns

Returns *common entity* return values

**aErr getCurrentSetpoint (int %microamps)**

Get the rail setpoint current. Rail current control capabilities vary between modules. Refer to the module datasheet for definition of the rail current capabilities.

### Parameters

**microamps** – The current in micro-amps (1 == 1e-6A) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setCurrent interface. Refer to the module datasheet to determine if this is a measured or stored value.

### Returns

Returns *common entity* return values

**aErr setCurrentLimit (const int microamps)**

Set the rail current limit setting. (Check product datasheet to see if this feature is available)

### Parameters

**microamps** – The current in micro-amps (1 == 1e-6A).

### Returns

Returns *common entity* return values

*aErr* **getCurrentLimit** (int %microamps)

Get the rail current limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microamps** – The current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getTemperature** (int %microcelsius)

Get the rail temperature.

**Parameters**

**microcelsius** – The measured temperature associated with the rail in micro-Celsius (1 == 1e-6°C). The temperature may be associated with the module's internal rail circuitry or an externally connected temperature sensors. Refer to the module datasheet for definition of the temperature measurement location and specific capabilities.

**Returns**

Returns *common entity* return values

*aErr* **getEnable** (unsigned char %enable)

Get the state of the external rail switch. Not all rails can be switched on and off. Refer to the module datasheet for capability specification of the rails.

**Parameters**

**enable** – true: enabled: connected to the supply rail voltage; false: disabled: disconnected from the supply rail voltage

**Returns**

Returns *common entity* return values

*aErr* **setEnable** (const unsigned char enable)

Set the state of the external rail switch. Not all rails can be switched on and off. Refer to the module datasheet for capability specification of the rails.

**Parameters**

**enable** – true: enable and connect to the supply rail voltage; false: disable and disconnect from the supply rail voltage

**Returns**

Returns *common entity* return values

*aErr* **getVoltage** (int %microvolts)

Get the rail supply voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V) currently supplied by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setVoltage interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setVoltageSetpoint** (const int microvolts)

Set the rail supply voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V) to be supplied by the rail.

**Returns**

Returns *common entity* return values

*aErr* **getVoltageSetpoint** (int %microvolts)

Get the rail setpoint voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setVoltage interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setVoltageMinLimit** (const int microvolts)

Set the rail voltage minimum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getVoltageMinLimit** (int %microvolts)

Get the rail voltage minimum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **setVoltageMaxLimit** (const int microvolts)

Set the rail voltage maximum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getVoltageMaxLimit** (int %microvolts)

Get the rail voltage maximum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**microvolts** – The voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getPower** (int %milliwatts)

Get the rail supply power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

**Parameters**

**milliwatts** – The power in milli-watts (1 == 1e-3W) currently supplied by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setPower interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setPowerSetpoint** (const int milliwatts)

Set the rail supply power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

**Parameters**

**milliwatts** – The power in milli-watts (1 == 1e-3W) to be supplied by the rail.

**Returns**

Returns *common entity* return values

*aErr* **getPowerSetpoint** (int %milliwatts)

Get the rail setpoint power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

**Parameters**

**milliwatts** – The power in milli-watts (1 == 1e-3W) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setPower interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setPowerLimit** (const int milliwatts)

Set the rail power maximum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**milliwatts** – The power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getPowerLimit** (int %milliwatts)

Get the rail power maximum limit setting. (Check product datasheet to see if this feature is available)

**Parameters**

**milliwatts** – The power in milli-watts (mW).

**Returns**

Returns *common entity* return values

*aErr* **getResistance** (int %milliohms)

Get the rail load resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

**Parameters**

**milliohms** – The resistance in milli-ohms (1 == 1e-3Ohms) currently drawn by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setResistance interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setResistanceSetpoint** (const int milliohms)

Set the rail load resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

**Parameters**

**milliohms** – The resistance in milli-ohms (1 == 1e-3Ohms) to be drawn by the rail.

**Returns**

Returns *common entity* return values

*aErr* **getResistanceSetpoint** (int %milliohms)

Get the rail setpoint resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

**Parameters**

**milliohms** – The resistance in milli-ohms (1 == 1e-3Ohms) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setResistance interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Returns**

Returns *common entity* return values

*aErr* **setKelvinSensingEnable** (const unsigned char enable)

Enable or Disable kelvin sensing on the module. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

**Parameters**

**enable** – enable or disable kelvin sensing.

**Returns**

Returns *common entity* return values

*aErr* **getKelvinSensingEnable** (unsigned char %enable)

Determine whether kelvin sensing is enabled or disabled. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

**Parameters**

**enable** – Kelvin sensing is enabled or disabled.

**Returns**

Returns *common entity* return values

*aErr* **getKelvinSensingState** (unsigned char %state)

Determine whether kelvin sensing has been disabled by the system. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

**Parameters**

**state** – Kelvin sensing is enabled or disabled.

**Returns**

Returns *common entity* return values

*aErr* **setOperationalMode** (const unsigned char mode)

Set the operational mode of the rail. Refer to the module datasheet for definition of the rail operational capabilities.

**Parameters**

**mode** – The operational mode to employ.

**Returns**

Returns *common entity* return values

*aErr* **getOperationalMode** (unsigned char %mode)

Determine the current operational mode of the system. Refer to the module datasheet for definition of the rail operational mode capabilities.

**Parameters**

**mode** – The current operational mode setting.

**Returns**

Returns *common entity* return values

*aErr* **getOperationalState** (unsigned int %state)

Determine the current operational state of the system. Refer to the module datasheet for definition of the rail operational states.

**Parameters**

**state** – The current operational state, hardware configuration, faults, and operating mode.

**Returns**

Returns *common entity* return values

*aErr* **clearFaults** ()

Clears the current fault state of the rail. Refer to the module datasheet for definition of the rail faults.

**Returns**

Returns *common entity* return values

### 3.6.19 Relay Class

See the *Relay Entity* for generic information.

class **RelayClass** : public Acroname::BrainStem2CLI::EntityClass

*RelayClass*: Interface to relay entities on BrainStem modules. Relay entities can be set, and the voltage read. Other capabilities may be available, please see the product datasheet.

**Public Functions**

**RelayClass** ()

Constructors.

**~RelayClass** ()

Destructor.

**!RelayClass** ()

Finalizer.

**void init** (BrainStem2CLI::ModuleClass^ module, const unsigned char index)

Initializes the class. Should only be called when manually creating classes.



**Parameters**

- **pModule** – The module.
- **index** – The cmdRELAY index to be addressed.

*aErr* **setEnabled** (const unsigned char enable)

Set the enable/disable state.

**Parameters**

**enable** – False or 0 = Disabled, True or 1 = Enabled

**Returns**

Returns *common entity* return values

*aErr* **getEnabled** (unsigned char %enabled)

Get the state.

**Parameters**

**enabled** – False or 0 = Disabled, True or 1 = Enabled

**Returns**

Returns *common entity* return values

*aErr* **getVoltage** (int %microvolts)

Get the scaled micro volt value with reference to ground.

---

**Note:** Not all modules provide 32 bits of accuracy. Refer to the module's datasheet to determine the analog bit depth and reference voltage.

---

**Parameters**

**microvolts** – 32 bit signed integer (in micro Volts) based on the boards ground and reference voltages.

**Returns**

Returns *common entity* return values

### 3.6.20 Signal Class

See the *Signal Entity* for generic information.

```
class SignalClass : public Acroname::BrainStem2CLI::EntityClass
```

*SignalClass*: Interface to digital pins configured to produce square wave signals. This class is designed to allow for square waves at various frequencies and duty cycles. Control is defined by specifying the wave period as (T3Time) and the active portion of the cycle as (T2Time). See the entity overview section of the reference for more detail regarding the timing.

## Public Functions

**SignalClass()**

Constructors.

**~SignalClass()**

Destructor.

**!SignalClass()**

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

### Parameters

- **pModule** – The module.
- **index** – The cmdSIGNAL index to be addressed.

**aErr setEnable (const unsigned char enable)**

Enable/Disable the signal output.

### Parameters

**enable** – True to enable, false to disable

### Returns

Returns *common entity* return values

**aErr getEnable (unsigned char %enable)**

Get the Enable/Disable of the signal.

### Parameters

**enable** – True to enable, false to disable

### Returns

Returns *common entity* return values

**aErr setInvert (const unsigned char invert)**

Invert the signal output.

Normal mode is High on t0 then low at t2. Inverted mode is Low at t0 on period start and high at t2.

### Parameters

**invert** – True to invert, false for normal mode.

### Returns

Returns *common entity* return values

**aErr getInvert (unsigned char %invert)**

Get the invert status the signal output.

Normal mode is High on t0 then low at t2. Inverted mode is Low at t0 on period start and high at t2.

### Parameters

**invert** – True to invert, false for normal mode.

### Returns

Returns *common entity* return values

*aErr* **setT3Time** (const unsigned int t3\_nsec)

Set the signal period or T3 in nanoseconds.

**Parameters**

**t3\_nsec** – Integer not larger than unsigned 32 bit max value representing the wave period in nanoseconds.

**Returns**

Returns *common entity* return values

*aErr* **getT3Time** (unsigned int %t3\_nsec)

Get the signal period or T3 in nanoseconds.

**Parameters**

**t3\_nsec** – Integer not larger than unsigned 32 bit max value representing the wave period in nanoseconds.

**Returns**

Returns *common entity* return values

*aErr* **setT2Time** (const unsigned int t2\_nsec)

Set the signal active period or T2 in nanoseconds.

**Parameters**

**t2\_nsec** – Integer not larger than unsigned 32 bit max value representing the wave active period in nanoseconds.

**Returns**

Returns *common entity* return values

*aErr* **getT2Time** (unsigned int %t2\_nsec)

Get the signal active period or T2 in nanoseconds.

**Parameters**

**t2\_nsec** – Integer not larger than unsigned 32 bit max value representing the wave active period in nanoseconds.

**Returns**

Returns *common entity* return values

### 3.6.21 Store Class

See the *Store Entity* for generic information.

class **StoreClass** : public Acroname::BrainStem2CLI::EntityClass

*StoreClass*: The store provides a flat file system on modules that have storage capacity. Files are referred to as slots and they have simple zero-based numbers for access. Store slots can be used for generalized storage and commonly contain compiled reflex code (files ending in .map) or templates used by the system. Slots simply contain bytes with no expected organization but the code or use of the slot may impose a structure. Stores have fixed indices based on type. Not every module contains a store of each type. Consult the module datasheet for details on which specific stores are implemented, if any, and the capacities of implemented stores.

## Public Functions

**StoreClass ()**

Constructors.

**~StoreClass ()**

Destructor.

**!StoreClass ()**

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

### Parameters

- **pModule** – The module.
- **index** – The cmdSTORE index to be addressed.

*aErr* **getSlotState** (const unsigned char slot, unsigned char %state)

Get slot state.

### Parameters

- **slot** – The slot number.
- **state** – true: enabled, false: disabled.

### Returns

Returns *common entity* return values

*aErr* **loadSlot** (const unsigned char slot, const unsigned char %buffer, const unsigned short  
bufferLength)

Load the slot.

### Parameters

- **slot** – The slot number.
- **buffer** – The data.
- **bufferLength** – The data length.

### Returns

Returns *common entity* return values

*aErr* **unloadSlot** (const unsigned char slot, const unsigned int bufferLength, unsigned char %buffer,  
unsigned int %unloadedLength)

Unload the slot data.

### Parameters

- **slot** – The slot number.
- **bufferLength** – The length of buffer buffer in bytes. This is the maximum number of bytes that should be unloaded.
- **buffer** – Byte array that the unloaded data will be placed into.
- **unloadedLength** – Length of data that was unloaded. Unloaded length will never be larger than dataLength.

**Returns**

Returns *common entity* return values

*aErr* **slotEnable** (const unsigned char slot)

Enable slot.

**Parameters**

**slot** – The slot number.

**Returns**

Returns *common entity* return values

*aErr* **slotDisable** (const unsigned char slot)

Disable slot.

**Parameters**

**slot** – The slot number.

**Returns**

Returns *common entity* return values

*aErr* **getSlotCapacity** (const unsigned char slot, unsigned int %capacity)

Get the slot capacity. Returns the Capacity of the slot, i.e. The number of bytes it can hold.

**Parameters**

- **slot** – The slot number.
- **capacity** – The slot capacity.

**Returns**

Returns *common entity* return values

*aErr* **getSlotSize** (const unsigned char slot, unsigned int %size)

Get the slot size. The slot size represents the size of the data currently filling the slot in bytes.

**Parameters**

- **slot** – The slot number.
- **size** – The slot size.

**Returns**

Returns *common entity* return values

*aErr* **getSlotLocked** (const unsigned char slot, unsigned char %lock)

Gets the current lock state of the slot Allows for write protection on a slot.

**Parameters**

- **slot** – The slot number
- **lock** – Variable to be filled with the locked state.

**Returns**

Returns *common entity* return values

*aErr* **setSlotLocked** (const unsigned char slot, const unsigned char lock)

Sets the locked state of the slot Allows for write protection on a slot.

**Parameters**

- **slot** – The slot number
- **lock** – state to be set.

**Returns**

Returns *common entity* return values

### 3.6.22 System Class

See the *System Entity* for generic information.

class **SystemClass** : public Acroname::BrainStem2CLI::EntityClass

*SystemClass*: The System class provides access to the core settings, configuration and system information of the BrainStem module. The class provides access to the model type, serial number and other static information as well as the ability to set boot reflexes, toggle the user LED, as well as affect module and router addresses etc.

**Public Functions**

**SystemClass** ()

Constructors.

**~SystemClass** ()

Destructor.

**!SystemClass** ()

Finalizer.

**void init** (BrainStem2CLI::ModuleClass^ module, const unsigned char index)

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdSYSTEM index to be addressed.

*aErr* **getModule** (unsigned char %address)

Get the current address the module uses on the BrainStem network.

**Parameters**

**address** – The address the module is using on the BrainStem network.

**Returns**

Returns *common entity* return values

*aErr* **getModuleBaseAddress** (unsigned char %address)

Get the base address of the module. Software offsets and hardware offsets are added to this base address to produce the effective module address.

**Parameters**

**address** – The address the module is using on the BrainStem network.

**Returns**

Returns *common entity* return values

***aErr* setRouter** (const unsigned char address)

Set the router address the module uses to communicate with the host and heartbeat to in order to establish the BrainStem network. This setting must be saved and the board reset before the setting becomes active. Warning: changing the router address may cause the module to “drop off” the BrainStem network if the new router address is not in use by a BrainStem module. Please review the BrainStem network fundamentals before modifying the router address.

**Parameters**

**address** – The router address to be used.

**Returns**

Returns *common entity* return values

***aErr* getRouter** (unsigned char %address)

Get the router address the module uses to communicate with the host and heartbeat to in order to establish the BrainStem network.

**Parameters**

**address** – The address.

**Returns**

Returns *common entity* return values

***aErr* setHBInterval** (const unsigned char interval)

Set the delay between heartbeat packets which are sent from the module. For link modules, these these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments Valid values are 1-255; default is 10 (256 milliseconds).

**Parameters**

**interval** – The desired heartbeat delay.

**Returns**

Returns *common entity* return values

***aErr* getHBInterval** (unsigned char %interval)

Get the delay between heartbeat packets which are sent from the module. For link modules, these these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments.

**Parameters**

**interval** – The current heartbeat delay.

**Returns**

Returns *common entity* return values

***aErr* setLED** (const unsigned char ledOn)

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

**Parameters**

**ledOn** – true: turn the LED on, false: turn LED off.

**Returns**

Returns *common entity* return values

***aErr* getLED** (unsigned char %ledOn)

Get the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

**Parameters**

**ledOn** – true: LED on, false: LED off.

**Returns**

Returns *common entity* return values

*aErr* **setLEDMaxBrightness** (const unsigned char brightness)

Sets the scaling factor for the brightness of all LEDs on the system. The brightness is set to the ratio of this value compared to 255 (maximum). The colors of each LED may be inconsistent at low brightness levels. Note that if the brightness is set to zero and the settings are saved, then the LEDs will no longer indicate whether the system is powered on. When troubleshooting, the user configuration may need to be manually reset in order to view the LEDs again.

**Parameters**

**brightness** – Brightness value relative to 255

**Returns**

Returns *common entity* return values

*aErr* **getLEDMaxBrightness** (unsigned char %brightness)

Gets the scaling factor for the brightness of all LEDs on the system. The brightness is set to the ratio of this value compared to 255 (maximum).

**Parameters**

**brightness** – Brightness value relative to 255

**Returns**

Returns *common entity* return values

*aErr* **setBootSlot** (const unsigned char slot)

Set a store slot to be mapped when the module boots. The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

**Parameters**

**slot** – The slot number in aSTORE\_INTERNAL to be marked as a boot slot.

**Returns**

Returns *common entity* return values

*aErr* **getBootSlot** (unsigned char %slot)

Get the store slot which is mapped when the module boots.

**Parameters**

**slot** – The slot number in aSTORE\_INTERNAL that is mapped after the module boots.

**Returns**

Returns *common entity* return values

*aErr* **getVersion** (unsigned int %build)

Get the modules firmware version number. The version number is packed into the return value. Utility functions in the aVersion module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

**Parameters**

**build** – The build version date code.

**Returns**

Returns *common entity* return values



**aErr** **getBuild** (unsigned int %build)

Get the modules firmware build number. The build number is a unique hash assigned to a specific firmware.

**Parameters**

**build** – Variable to be filled with build.

**Returns**

Returns *common entity* return values

**aErr** **getModel** (unsigned char %model)

Get the module's model enumeration. A subset of the possible model enumerations is defined in BrainStem.h under "BrainStem

model codes". Other codes are be used by Acroname for proprietary module types.

**Parameters**

**model** – The module's model enumeration.

**Returns**

Returns *common entity* return values

**aErr** **getHardwareVersion** (unsigned int %hardwareVersion)

Get the module's hardware revision information. The content of the hardware version is specific to each Acroname product and used to indicate behavioral differences between product revisions. The codes are not well defined and may change at any time.

**Parameters**

**hardwareVersion** – The module's hardware version information.

**Returns**

Returns *common entity* return values

**aErr** **getSerialNumber** (unsigned int %serialNumber)

Get the module's serial number. The serial number is a unique 32 bit integer which is usually communicated in hexadecimal format.

**Parameters**

**serialNumber** – The module's serial number.

**Returns**

Returns *common entity* return values

**aErr** **save** ()

Save the system operating parameters to the persistent module flash memory. Operating parameters stored in the system flash will be loaded after the module reboots. Operating parameters include: heartbeat interval, module address, module router address.

**Returns**

Returns *common entity* return values

**aErr** **reset** ()

Reset the system. A return value of aErrTimeout indicates a successful reset, as the system resets immediately, which tears down the USB-link immediately, thus preventing an affirmative response.

**Returns**

Returns *common entity* return values

***aErr* logEvents ()**

Saves system log events to a slot defined by the module (usually ram slot 0).

**Returns**

Returns *common entity* return values

***aErr* getUptime (unsigned int %uptimeCounter)**

Get the module's accumulated uptime in minutes

**Parameters**

**uptimeCounter** – The module's accumulated uptime in minutes.

**Returns**

Returns *common entity* return values

***aErr* getTemperature (int %temperature)**

Get the module's current temperature in micro-C

**Parameters**

**temperature** – The module's system temperature in micro-C

**Returns**

Returns *common entity* return values

***aErr* getMinimumTemperature (int %minTemperature)**

Get the module's minimum temperature ever recorded in micro-C (uC). This value will persists through a power cycle.

**Parameters**

**minTemperature** – The module's minimum system temperature in micro-C

**Returns**

Returns *common entity* return values

***aErr* getMaximumTemperature (int %maxTemperature)**

Get the module's maximum temperature ever recorded in micro-C (uC). This value will persists through a power cycle.

**Parameters**

**maxTemperature** – The module's maximum system temperature in micro-C

**Returns**

Returns *common entity* return values

***aErr* getInputVoltage (unsigned int %inputVoltage)**

Get the module's input voltage.

**Parameters**

**inputVoltage** – The module's input voltage reported in microvolts.

**Returns**

Returns *common entity* return values

***aErr* getInputCurrent (unsigned int %inputCurrent)**

Get the module's input current.

**Parameters**

**inputCurrent** – The module's input current reported in microamps.

**Returns**

Returns *common entity* return values

***aErr* getModuleHardwareOffset** (unsigned char %offset)

Get the module hardware address offset. This is added to the base address to allow the module address to be configured in hardware. Not all modules support the hardware module address offset. Refer to the module datasheet.

**Parameters**

**offset** – The module address offset.

**Returns**

Returns *common entity* return values

***aErr* setModuleSoftwareOffset** (const unsigned char address)

Set the software address offset. This software offset is added to the module base address, and potentially a module hardware address to produce the final module address. You must save the system settings and restart for this to take effect. Please review the BrainStem network fundamentals before modifying the module address.

**Parameters**

**address** – The address for the module. Value must be even from 0-254.

**Returns**

Returns *common entity* return values

***aErr* getModuleSoftwareOffset** (unsigned char %address)

Get the software address offset. This software offset is added to the module base address, and potentially a module hardware address to produce the final module address. You must save the system settings and restart for this to take effect. Please review the BrainStem network fundamentals before modifying the module address.

**Parameters**

**address** – The address for the module. Value must be even from 0-254.

**Returns**

Returns *common entity* return values

***aErr* getRouterAddressSetting** (unsigned char %address)

Get the router address system setting. This setting may not be the same as the current router address if the router setting was set and saved but no reset has occurred. Please review the BrainStem network fundamentals before modifying the module address.

**Parameters**

**address** – The address for the module. Value must be even from 0-254.

**Returns**

Returns *common entity* return values

***aErr* routeToMe** (const unsigned char enable)

Enables/Disables the route to me function. This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

**Parameters**

**enable** – Enable or disable of the route to me function 1 = enable.

**Returns**

Returns *common entity* return values

***aErr* getPowerLimit** (unsigned int %power)

Reports the amount of power the system has access to and thus how much power can be budgeted to sinking devices.

**Parameters**

**power** – The available power in milli-Watts (mW, 1 t)

**Returns**

Returns *common entity* return values

***aErr* getPowerLimitMax** (unsigned int %power)

Gets the user defined maximum power limit for the system. Provides mechanism for defining an unregulated power supplies capability.

**Parameters**

**power** – Variable to be filled with the power limit in milli-Watts (mW)

**Returns**

Returns *common entity* return values

***aErr* setPowerLimitMax** (const unsigned int power)

Sets a user defined maximum power limit for the system. Provides mechanism for defining an unregulated power supplies capability.

**Parameters**

**power** – Limit in milli-Watts (mW) to be set.

**Returns**

Returns *common entity* return values

***aErr* getPowerLimitState** (unsigned int %state)

Gets a bit mapped representation of the factors contributing to the power limit. Active limit can be found through PowerDeliverClass::getPowerLimit().

**Parameters**

**state** – Variable to be filled with the state.

**Returns**

Returns *common entity* return values

***aErr* getUnregulatedVoltage** (int %voltage)

Gets the voltage present at the unregulated port.

**Parameters**

**voltage** – Variable to be filled with the voltage in micro-Volts (uV).

**Returns**

Returns *common entity* return values

***aErr* getUnregulatedCurrent** (int %current)

Gets the current passing through the unregulated port.

**Parameters**

**current** – Variable to be filled with the current in micro-Amps (uA).

**Returns**

Returns *common entity* return values

***aErr* getInputPowerSource** (unsigned char %source)

Provides the source of the current power source in use.

**Parameters**

**source** – Variable to be filled with enumerated representation of the source.

**Returns**

Returns *common entity* return values

*aErr* **getInputPowerBehavior** (unsigned char %behavior)

Gets the systems input power behavior. This behavior refers to where the device sources its power from and what happens if that power source goes away.

**Parameters**

**behavior** – Variable to be filled with an enumerated value representing behavior.

**Returns**

Returns *common entity* return values

*aErr* **setInputPowerBehavior** (const unsigned char behavior)

Sets the systems input power behavior. This behavior refers to where the device sources its power from and what happens if that power source goes away.

**Parameters**

**behavior** – An enumerated representation of behavior to be set.

**Returns**

Returns *common entity* return values

*aErr* **getInputPowerBehaviorConfig** (unsigned int %buffer, const unsigned int bufferSize, unsigned int %unloadedLength)

Gets the input power behavior configuration Certain behaviors use a list of ports to determine priority when budgeting power.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setInputPowerBehaviorConfig** (const unsigned int %buffer, const unsigned int bufferSize)

Sets the input power behavior configuration Certain behaviors use a list of ports to determine priority when budgeting power.

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

*aErr* **getName** (unsigned char %buffer, const unsigned int bufferSize, unsigned int %unloadedLength)

Gets a user defined name of the device. Helpful for identifying ports/devices in a static environment.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled

- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setName** (const unsigned char %buffer, const unsigned int bufferLength)

Sets a user defined name for the device. Helpful for identification when multiple devices of the same type are present in a system.

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

*aErr* **resetDeviceToFactoryDefaults** ()

Resets the device to it factory default configuration.

**Returns**

Returns *common entity* return values

*aErr* **getLinkInterface** (unsigned char %linkInterface)

Gets the link interface configuration. This refers to which interface is being used for control by the device.

**Parameters**

**linkInterface** – Variable to be filled with an enumerated value representing interface.

- 0 = Auto= systemLinkAuto
- 1 = Control Port = systemLinkUSBControl
- 2 = Hub Upstream Port = systemLinkUSBHub

**Returns**

Returns *common entity* return values

*aErr* **setLinkInterface** (const unsigned char linkInterface)

Sets the link interface configuration. This refers to which interface is being used for control by the device.

**Parameters**

**linkInterface** – An enumerated representation of interface to be set.

- 0 = Auto= systemLinkAuto
- 1 = Control Port = systemLinkUSBControl
- 2 = Hub Upstream Port = systemLinkUSBHub

**Returns**

Returns *common entity* return values

*aErr* **getErrors** (unsigned int %errors)

Gets any system level errors. Calling this function will clear the current errors. If the error persists it will be set again.

**Parameters**

**errors** – Bit mapped field representing the devices errors

**Returns**

Returns *common entity* return values

*aErr* **getProtocolFeatures** (unsigned int %features)

Gets the firmware protocol features

**Parameters**

**features** – Value representing the firmware protocol features

**Returns**

Returns *common entity* return values

### 3.6.23 Temperature Class

See the *Temperature Entity* for generic information.

class **TemperatureClass** : public Acroname::BrainStem2CLI::EntityClass

*TemperatureClass*: This entity is only available on certain modules, and provides a temperature reading in microcelsius.

**Public Functions**

**TemperatureClass** ()

Constructors.

**~TemperatureClass** ()

Destructor.

**!TemperatureClass** ()

Finalizer.

**void init** (BrainStem2CLI::ModuleClass^ module, const unsigned char index)

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdTEMPERATURE index to be addressed.

*aErr* **getValue** (int %temp)

Get the modules temperature in micro-C

**Parameters**

**temp** – The temperature in micro-Celsius (1 == 1e-6C).

**Returns**

Returns *common entity* return values

*aErr* **getValueMin** (int %minTemp)

Get the module's minimum temperature in micro-C since the last power cycle.

**Parameters**

**minTemp** – The module's minimum temperature in micro-C

**Returns**

Returns *common entity* return values

*aErr* **getValueMax** (int %maxTemp)

Get the module's maximum temperature in micro-C since the last power cycle.

**Parameters**

**maxTemp** – The module's maximum temperature in micro-C

**Returns**

Returns *common entity* return values

### 3.6.24 Timer Class

See the *Timer Entity* for generic information.

class **TimerClass** : public Acroname::BrainStem2CLI::EntityClass

*TimerClass*: The Timer Class provides access to a simple scheduler. The timer can set to fire only once, or to repeat at a certain interval. Additionally, a timer entity can execute custom Reflex routines upon firing.

**Public Functions**

**TimerClass** ()

Constructors.

**~TimerClass** ()

Destructor.

**!TimerClass** ()

Finalizer.

**void init** (BrainStem2CLI::ModuleClass^ module, const unsigned char index)

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdTIMER index to be addressed.

*aErr* **getExpiration** (unsigned int %usecDuration)

Get the currently set expiration time in microseconds. This is not a “live” timer. That is, it shows the expiration time originally set with setExpiration; it does not “tick down” to show the time remaining before expiration.

**Parameters**

**usecDuration** – The timer expiration duration in microseconds.

**Returns**

Returns *common entity* return values



*aErr* **setExpiration** (const unsigned int usecDuration)

Set the expiration time for the timer entity. When the timer expires, it will fire the associated timer[index]() reflex.

**Parameters**

**usecDuration** – The duration before timer expiration in microseconds.

**Returns**

Returns *common entity* return values

*aErr* **getMode** (unsigned char %mode)

Get the mode of the timer which is either single or repeat mode.

**Parameters**

**mode** – The mode of the time. aTIMER\_MODE\_REPEAT or aTIMER\_MODE\_SINGLE.

**Returns**

Returns *common entity* return values

*aErr* **setMode** (const unsigned char mode)

Set the mode of the timer which is either single or repeat mode.

**Parameters**

**mode** – The mode of the timer. aTIMER\_MODE\_REPEAT or aTIMER\_MODE\_SINGLE.

**Returns**

Returns *common entity* return values

### 3.6.25 UART Class

See the *UART Entity* for generic information.

class **UARTClass** : public Acroname::BrainStem2CLI::EntityClass

*UARTClass*: A UART is a “Universal Asynchronous Receiver/Transmitter. Many times referred to as a COM (communication), Serial, or TTY (teletypewriter) port. The UART Class allows the enabling and disabling of the UART data lines.

**Public Functions**

**UARTClass ()**

Constructors.

**~UARTClass ()**

Destructor.

**!UARTClass ()**

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdUART index to be addressed.

*aErr* **setEnable** (const unsigned char enabled)

Enable the UART channel.

**Parameters**

**enabled** – true: enabled, false: disabled.

**Returns**

Returns *common entity* return values

*aErr* **getEnable** (unsigned char %enabled)

Get the enabled state of the uart.

**Parameters**

**enabled** – true: enabled, false: disabled.

**Returns**

Returns *common entity* return values

*aErr* **setBaudRate** (const unsigned int rate)

Set the UART baud rate. If zero, automatic baud rate selection is used.

**Parameters**

**rate** – baud rate.

**Returns**

Returns *common entity* return values

*aErr* **getBaudRate** (unsigned int %rate)

Get the UART baud rate. If zero, automatic baud rate selection is used.

**Parameters**

**rate** – Pointer variable to be filled with baud rate.

**Returns**

Returns *common entity* return values

*aErr* **setProtocol** (const unsigned char protocol)

Set the UART protocol.

**Parameters**

**protocol** – An enumeration of serial protocols.

**Returns**

Returns *common entity* return values

*aErr* **getProtocol** (unsigned char %protocol)

Get the UART protocol.

**Parameters**

**protocol** – Pointer to where result is placed.

**Returns**

Returns *common entity* return values

*aErr* **setLinkChannel** (const unsigned char channel)

Set the index of another UART Entity that should be linked to this UART.

If set to the index of this entity, the channel will not be linked. If set to the index of another UART entity, data will be sent between the two UART entities with no additional processing.

**Parameters**

**channel** – Index of the UART Entity to link

**Returns**

Returns *common entity* return values

*aErr* **getLinkChannel** (unsigned char %channel)

Gets the index of the UART Entity that this entity is linked to.

**Parameters**

**channel** – Pointer to where result is placed.

**Returns**

Returns *common entity* return values

*aErr* **setStopBits** (const unsigned char stopBits)

Set the UART stop bit configuration

**Parameters**

**stopBits** – Stop Bits of UART Channel. Allowed options:

- uartStopBits\_1\_Value
- uartStopBits\_1p5\_Value
- uartStopBits\_2\_Value

**Returns**

Returns *common entity* return values

*aErr* **getStopBits** (unsigned char %stopBits)

Set the UART stop bit configuration

**Parameters**

**stopBits** – Pointer to where result is placed. Possible values:

- uartStopBits\_1\_Value
- uartStopBits\_1p5\_Value
- uartStopBits\_2\_Value

**Returns**

Returns *common entity* return values

*aErr* **setParity** (const unsigned char parity)

Set the UART parity.

**Parameters**

**parity** – Parity of UART Channel. Allowed options:

- uartParity\_None\_Value
- uartParity\_Odd\_Value
- uartParity\_Even\_Value
- uartParity\_Mark\_Value
- uartParity\_Space\_Value

**Returns**

Returns *common entity* return values

*aErr* **getParity** (unsigned char %parity)

Get the UART parity.

**Parameters**

**parity** – Pointer variable to be filled with value. Possible values:

- uartParity\_None\_Value
- uartParity\_Odd\_Value
- uartParity\_Even\_Value
- uartParity\_Mark\_Value
- uartParity\_Space\_Value

**Returns**

Returns *common entity* return values

*aErr* **setDataBits** (const unsigned char dataBits)

Set the number of bits per character

**Parameters**

**dataBits** – Data Bits of UART Channel.

**Returns**

Returns *common entity* return values

*aErr* **getDataBits** (unsigned char %dataBits)

Get the number of bits per character

**Parameters**

**dataBits** – Pointer to where result is placed.

**Returns**

Returns *common entity* return values

*aErr* **setFlowControl** (const unsigned char flowControl)

Set the UART flow control configuration

**Parameters**

**flowControl** – Flow Control of UART Channel as a bitmask. Allowed bits:

- uartFlowControl\_RTS\_CTS\_Bit
- uartFlowControl\_DSR\_DTR\_Bit
- uartFlowControl\_XON\_XOFF\_Bit

**Returns**

Returns *common entity* return values

*aErr* **getFlowControl** (unsigned char %flowControl)

Set the UART flow control configuration

**Parameters**

**flowControl** – Pointer to bitmask where result is placed. Possible bits:

- uartFlowControl\_RTS\_CTS\_Bit
- uartFlowControl\_DSR\_DTR\_Bit
- uartFlowControl\_XON\_XOFF\_Bit

**Returns**

Returns *common entity* return values

*aErr* **getCapableProtocols** (unsigned int %protocols)

Returns a bitmask containing a list of protocols that this UART entity is allowed to select. This does not guarantee that selecting a protocol with “setProtocol” will have an available resource.

**Parameters**

**protocols** – Bitmask containing list of protocols that may be selected. The value of the uartProtocol is mapped to the bit index (e.g. uartProtocol\_Undefined is bit 0, uartProtocol\_ExtronResponder\_Value is bit 1, etc.)

**Returns**

Returns *common entity* return values

*aErr* **getAvailableProtocols** (unsigned int %protocols)

Returns a bitmask containing a list of protocols that this UART entity is capable of selecting, and has an available protocol resource to assign.

**Parameters**

**protocols** – Bitmask containing list of protocols that are available to select. The value of the uartProtocol is mapped to the bit index (e.g. uartProtocol\_Undefined is bit 0, uartProtocol\_ExtronResponder\_Value is bit 1, etc.)

**Returns**

Returns *common entity* return values

### 3.6.26 USB Class

See the *USB Entity* for generic information.

class **USBClass** : public Acroname::BrainStem2CLI::EntityClass

*USBClass*: The USB class provides methods to interact with a USB hub and USB switches. Different USB hub products have varying support; check the datasheet to understand the capabilities of each product.

**Public Functions**

**USBClass** ()

Constructors.

**~USBClass** ()

Destructor.

**!USBClass** ()

Finalizer.

**void init** (BrainStem2CLI::ModuleClass^ module, const unsigned char index)

Initializes the class. Should only be called when manually creating classes.

**Parameters**

- **pModule** – The module.
- **index** – The cmdUSB index to be addressed.

*aErr* **setPortEnable** (const unsigned char channel)

Enable both power and data lines for a port.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setPortDisable** (const unsigned char channel)

Disable both power and data lines for a port.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setDataEnable** (const unsigned char channel)

Enable the only the data lines for a port without changing the state of the power line.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setDataDisable** (const unsigned char channel)

Disable only the data lines for a port without changing the state of the power line.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setHiSpeedDataEnable** (const unsigned char channel)

Enable the only the data lines for a port without changing the state of the power line, Hi-Speed (2.0) only.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setHiSpeedDataDisable** (const unsigned char channel)

Disable only the data lines for a port without changing the state of the power line, Hi-Speed (2.0) only.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setSuperSpeedDataEnable** (const unsigned char channel)

Enable the only the data lines for a port without changing the state of the power line, SuperSpeed (3.0) only.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setSuperSpeedDataDisable** (const unsigned char channel)

Disable only the data lines for a port without changing the state of the power line, SuperSpeed (3.0) only.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setPowerEnable** (const unsigned char channel)

Enable only the power line for a port without changing the state of the data lines.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **setPowerDisable** (const unsigned char channel)

Disable only the power line for a port without changing the state of the data lines.

**Parameters**

**channel** – The USB sub channel.

**Returns**

Returns *common entity* return values

*aErr* **getPortCurrent** (const unsigned char channel, int %microamps)

Get the current through the power line for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microamps** – The USB channel current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getPortVoltage** (const unsigned char channel, int %microvolts)

Get the voltage on the power line for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microvolts** – The USB channel voltage in microvolts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getHubMode** (unsigned int %mode)

Get a bit mapped representation of the hubs mode; see the product datasheet for mode mapping and meaning.

**Parameters**

**mode** – The USB hub mode.

**Returns**

Returns *common entity* return values

*aErr* **setHubMode** (const unsigned int mode)

Set a bit mapped hub state; see the product datasheet for state mapping and meaning.

**Parameters**

**mode** – The USB hub mode.

**Returns**

Returns *common entity* return values

*aErr* **clearPortErrorStatus** (const unsigned char channel)

Clear the error status for the given port.

**Parameters**

**channel** – The port to clear error status for.

**Returns**

Returns *common entity* return values

*aErr* **getUpstreamMode** (unsigned char %mode)

Get the upstream switch mode for the USB upstream ports. Returns auto, port 0 or port 1.

**Parameters**

**mode** – The Upstream port mode.

**Returns**

Returns *common entity* return values

*aErr* **setUpstreamMode** (const unsigned char mode)

Set the upstream switch mode for the USB upstream ports. Values are usbUpstreamModeAuto, usbUpstreamModePort0, usbUpstreamModePort1, and usbUpstreamModeNone.

**Parameters**

**mode** – The Upstream port mode.

**Returns**

Returns *common entity* return values

*aErr* **getUpstreamState** (unsigned char %state)

Get the upstream switch state for the USB upstream ports. Returns 2 if no ports plugged in, 0 if the mode is set correctly and a cable is plugged into port 0, and 1 if the mode is set correctly and a cable is plugged into port 1.

**Parameters**

**state** – The Upstream port state.

**Returns**

Returns *common entity* return values

*aErr* **setEnumerationDelay** (const unsigned int ms\_delay)

Set the inter-port enumeration delay in milliseconds.

**Parameters**

**ms\_delay** – Millisecond delay in 100mS increments (100, 200, 300 etc.)

**Returns**

Returns *common entity* return values

*aErr* **getEnumerationDelay** (unsigned int %ms\_delay)

Get the inter-port enumeration delay in milliseconds.

**Parameters**

**ms\_delay** – Millisecond delay in 100mS increments (100, 200, 300 etc.)



**Returns**

Returns *common entity* return values

*aErr* **setPortCurrentLimit** (const unsigned char channel, const unsigned int microamps)

Set the current limit for the port. If the set limit is not achievable, devices will round down to the nearest available current limit setting. This setting can be saved with a `stem.system.save()` call.

**Parameters**

- **channel** – USB downstream channel to limit.
- **microamps** – The current limit setting.

**Returns**

Returns *common entity* return values

*aErr* **getPortCurrentLimit** (const unsigned char channel, unsigned int %microamps)

Get the current limit for the port.

**Parameters**

- **channel** – USB downstream channel to limit.
- **microamps** – The current limit setting.

**Returns**

Returns *common entity* return values

*aErr* **setPortMode** (const unsigned char channel, const unsigned int mode)

Set the mode for the Port. The mode is a bitmapped representation of the capabilities of the usb port. These capabilities change for each of the BrainStem devices which implement the usb entity. See your device reference page for a complete list of capabilities. Some devices use a common bit mapping for port mode, as sub-definitions of `usbPortMode`.

**Parameters**

- **channel** – USB downstream channel to set the mode on.
- **mode** – The port mode setting as packed bit field.

**Returns**

Returns *common entity* return values

*aErr* **getPortMode** (const unsigned char channel, unsigned int %mode)

Get the current mode for the Port. The mode is a bitmapped representation of the capabilities of the usb port. These capabilities change for each of the BrainStem devices which implement the usb entity. See your device reference page for a complete list of capabilities. Some devices use a common bit mapping for port mode, as sub-definitions of `usbPortMode`.

**Parameters**

- **channel** – USB downstream channel.
- **mode** – The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

**Returns**

Returns *common entity* return values

*aErr* **getPortState** (const unsigned char channel, unsigned int %state)

Get the current State for the Port.

**Parameters**

- **channel** – USB downstream channel.
- **state** – The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

**Returns**

Returns *common entity* return values

*aErr* **getPortError** (const unsigned char channel, unsigned int %error)

Get the current error for the Port.

**Parameters**

- **channel** – USB downstream channel.
- **error** – The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

**Returns**

Returns *common entity* return values

*aErr* **setUpstreamBoostMode** (const unsigned char setting)

Set the upstream boost mode. Boost mode increases the drive strength of the USB data signals (power signals are not changed). Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through "pogo" pins. Possible modes are 0 - no boost, 1 - 4\* boost, 2 - 8\* boost, 3 - 12\* boost. This setting is not applied until a `stem.system.save()` call and power cycle of the hub. Setting is then persistent until changed or the hub is reset. After reset, default value of 0\* boost is restored.

**Parameters**

**setting** – Upstream boost setting 0, 1, 2, or 3.

**Returns**

Returns *common entity* return values

*aErr* **setDownstreamBoostMode** (const unsigned char setting)

Set the downstream boost mode. Boost mode increases the drive strength of the USB data signals (power signals are not changed). Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through "pogo" pins. Possible modes are 0 - no boost, 1 - 4\* boost, 2 - 8\* boost, 3 - 12\* boost. This setting is not applied until a `stem.system.save()` call and power cycle of the hub. Setting is then persistent until changed or the hub is reset. After reset, default value of 0\* boost is restored.

**Parameters**

**setting** – Downstream boost setting 0, 1, 2, or 3.

**Returns**

Returns *common entity* return values

*aErr* **getUpstreamBoostMode** (unsigned char %setting)

Get the upstream boost mode. Possible modes are 0 - no boost, 1 - 4\* boost, 2 - 8\* boost, 3 - 12\* boost.

**Parameters**

**setting** – The current Upstream boost setting 0, 1, 2, or 3.

**Returns**

Returns *common entity* return values

*aErr* **getDownstreamBoostMode** (unsigned char %setting)

Get the downstream boost mode. Possible modes are 0 - no boost, 1 - 4\* boost, 2 - 8\* boost, 3 - 12\* boost.

**Parameters**

**setting** – The current Downstream boost setting 0, 1, 2, or 3.

**Returns**

Returns *common entity* return values

*aErr* **getDownstreamDataSpeed** (const unsigned char channel, unsigned char %speed)

Get the current data transfer speed for the downstream port. The data speed can be Hi-Speed (2.0) or SuperSpeed (3.0) depending on what the downstream device attached is using

**Parameters**

- **channel** – USB downstream channel to check.
- **speed** – Filled with the current port data speed
  - N/A: usbDownstreamDataSpeed\_na = 0
  - Hi Speed: usbDownstreamDataSpeed\_hs = 1
  - SuperSpeed: usbDownstreamDataSpeed\_ss = 2

**Returns**

Returns *common entity* return values

*aErr* **setConnectMode** (const unsigned char channel, const unsigned char mode)

Sets the connect mode of the switch.

**Parameters**

- **channel** – The USB sub channel.
- **mode** – The connect mode
  - usbManualConnect = 0
  - usbAutoConnect = 1

**Returns**

Returns *common entity* return values

*aErr* **getConnectMode** (const unsigned char channel, unsigned char %mode)

Gets the connect mode of the switch.

**Parameters**

- **channel** – The USB sub channel.
- **mode** – The current connect mode

**Returns**

Returns *common entity* return values

*aErr* **setCC1Enable** (const unsigned char channel, const unsigned char enable)

Set Enable/Disable on the CC1 line.

**Parameters**

- **channel** – USB channel.
- **enable** – State to be set

- Disabled: 0
- Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **getCC1Enable** (const unsigned char channel, unsigned char %pEnable)

Get Enable/Disable on the CC1 line.

**Parameters**

- **channel** – USB channel.
- **pEnable** – State to be filled
  - Disabled: 0
  - Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **setCC2Enable** (const unsigned char channel, const unsigned char enable)

Set Enable/Disable on the CC2 line.

**Parameters**

- **channel** – USB channel.
- **enable** – State to be filled
  - Disabled: 0
  - Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **getCC2Enable** (const unsigned char channel, unsigned char %pEnable)

Get Enable/Disable on the CC2 line.

**Parameters**

- **channel** – USB channel.
- **pEnable** – State to be filled
  - Disabled: 0
  - Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **getCC1Current** (const unsigned char channel, int %microamps)

Get the current through the CC1 for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microamps** – The USB channel current in micro-amps (1 == 1e-6A).

**Returns**

Returns *common entity* return values

*aErr* **getCC2Current** (const unsigned char channel, int %microamps)

Get the current through the CC2 for a port.

#### Parameters

- **channel** – The USB sub channel.
- **microamps** – The USB channel current in micro-amps (1 == 1e-6A).

#### Returns

Returns *common entity* return values

*aErr* **getCC1Voltage** (const unsigned char channel, int %microvolts)

Get the voltage of CC1 for a port.

#### Parameters

- **channel** – The USB sub channel.
- **microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

#### Returns

Returns *common entity* return values

*aErr* **getCC2Voltage** (const unsigned char channel, int %microvolts)

Get the voltage of CC2 for a port.

#### Parameters

- **channel** – The USB sub channel.
- **microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

#### Returns

Returns *common entity* return values

*aErr* **setSBUEnable** (const unsigned char channel, const unsigned char enable)

Enable/Disable only the SBU1/2 based on the configuration of the usbPortMode settings.

#### Parameters

- **channel** – The USB sub channel.
- **enable** – The state to be set
  - Disabled: 0
  - Enabled: 1

#### Returns

Returns *common entity* return values

*aErr* **getSBUEnable** (const unsigned char channel, unsigned char %pEnable)

Get the Enable/Disable status of the SBU

#### Parameters

- **channel** – The USB sub channel.
- **pEnable** – The enable/disable status of the SBU

#### Returns

Returns *common entity* return values

*aErr* **setCableFlip** (const unsigned char channel, const unsigned char enable)

Set Cable flip. This will flip SBU, CC and SS data lines.

**Parameters**

- **channel** – The USB sub channel.
- **enable** – The state to be set The state to be set
  - Disabled: 0
  - Enabled: 1

**Returns**

Returns *common entity* return values

*aErr* **getCableFlip** (const unsigned char channel, unsigned char %pEnable)

Get Cable flip setting.

**Parameters**

- **channel** – The USB sub channel.
- **pEnable** – The enable/disable status of cable flip.

**Returns**

Returns *common entity* return values

*aErr* **setAltModeConfig** (const unsigned char channel, const unsigned int configuration)

Set USB Alt Mode Configuration.

**Parameters**

- **channel** – The USB sub channel
- **configuration** – The USB configuration to be set for the given channel.

**Returns**

Returns *common entity* return values

*aErr* **getAltModeConfig** (const unsigned char channel, unsigned int %configuration)

Get USB Alt Mode Configuration.

**Parameters**

- **channel** – The USB sub channel
- **configuration** – The USB configuration for the given channel.

**Returns**

Returns *common entity* return values

*aErr* **getSBU1Voltage** (const unsigned char channel, int %microvolts)

Get the voltage of SBU1 for a port.

**Parameters**

- **channel** – The USB sub channel.
- **microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

**Returns**

Returns *common entity* return values

*aErr* **getSBU2Voltage** (const unsigned char channel, int %microvolts)

Get the voltage of SBU2 for a port.

#### Parameters

- **channel** – The USB sub channel.
- **microvolts** – The USB channel voltage in micro-volts (1 == 1e-6V).

#### Returns

Returns *common entity* return values

### 3.6.27 USBSystem Class

See the *USBSystem Entity* for generic information.

class **USBSystemClass** : public Acroname::BrainStem2CLI::EntityClass

*USBSystemClass*: The USBSystem class provides high level control of the lower level Port Class.

Subclassed by Acroname::BrainStem2CLI::MTMIOSerial::HubClass, Acroname::BrainStem2CLI::USBHub2x4::HubClass, Acroname::BrainStem2CLI::USBHub3c::HubClass, Acroname::BrainStem2CLI::USBHub3p::HubClass

#### Public Functions

**USBSystemClass ()**

Constructors.

**~USBSystemClass ()**

Destructor.

**!USBSystemClass ()**

Finalizer.

**void init (BrainStem2CLI::ModuleClass^ module, const unsigned char index)**

Initializes the class. Should only be called when manually creating classes.

#### Parameters

- **pModule** – The module.
- **index** – The cmdUSBSYSTEM index to be addressed.

*aErr* **getUpstream** (unsigned char %port)

Gets the upstream port.

#### Parameters

**port** – The current upstream port.

#### Returns

Returns *common entity* return values

*aErr* **setUpstream** (const unsigned char port)

Sets the upstream port.

#### Parameters

**port** – The upstream port to set.

**Returns**

Returns *common entity* return values

*aErr* **getEnumerationDelay** (unsigned int %msDelay)

Gets the inter-port enumeration delay in milliseconds. Delay is applied upon hub enumeration.

**Parameters**

**msDelay** – the current inter-port delay in milliseconds.

**Returns**

Returns *common entity* return values

*aErr* **setEnumerationDelay** (const unsigned int msDelay)

Sets the inter-port enumeration delay in milliseconds. Delay is applied upon hub enumeration.

**Parameters**

**msDelay** – The delay in milliseconds to be applied between port enables

**Returns**

Returns *common entity* return values

*aErr* **getDataRoleList** (unsigned int %roleList)

Gets the data role of all ports with a single call Equivalent to calling *PortClass::getDataRole()* on each individual port.

**Parameters**

**roleList** – A bit packed representation of the data role for all ports.

**Returns**

Returns *common entity* return values

*aErr* **getEnabledList** (unsigned int %enabledList)

Gets the current enabled status of all ports with a single call. Equivalent to calling *PortClass::setEnabled()* on each port.

**Parameters**

**enabledList** – Bit packed representation of the enabled status for all ports.

**Returns**

Returns *common entity* return values

*aErr* **setEnabledList** (const unsigned int enabledList)

Sets the enabled status of all ports with a single call. Equivalent to calling *PortClass::setEnabled()* on each port.

**Parameters**

**enabledList** – Bit packed representation of the enabled status for all ports to be applied.

**Returns**

Returns *common entity* return values

*aErr* **getModeList** (unsigned int %buffer, const unsigned int bufferSize, unsigned int %unloadedLength)

Gets the current mode of all ports with a single call. Equivalent to calling *PortClass::getMode()* on each port.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled



- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setModeList** (const unsigned int %buffer, const unsigned int bufferLength)

Sets the mode of all ports with a single call. Equivalent to calling *PortClass::setMode()* on each port

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

*aErr* **getStateList** (unsigned int %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Gets the state for all ports with a single call. Equivalent to calling *PortClass::getState()* on each port.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **getPowerBehavior** (unsigned char %behavior)

Gets the behavior of the power manager. The power manager is responsible for budgeting the power of the system, i.e. What happens when requested power greater than available power.

**Parameters**

**behavior** – Variable to be filled with an enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **setPowerBehavior** (const unsigned char behavior)

Sets the behavior of how available power is managed, i.e. What happens when requested power is greater than available power.

**Parameters**

**behavior** – An enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getPowerBehaviorConfig** (unsigned int %buffer, const unsigned int bufferLength, unsigned int %unloadedLength)

Gets the current power behavior configuration. Certain power behaviors use a list of ports to determine priority when budgeting power.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled

- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setPowerBehaviorConfig** (const unsigned int %buffer, const unsigned int bufferSize)

Sets the current power behavior configuration. Certain power behaviors use a list of ports to determine priority when budgeting power.

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

*aErr* **getDataRoleBehavior** (unsigned char %behavior)

Gets the behavior of how upstream and downstream ports are determined, i.e. How do you manage requests for data role swaps and new upstream connections.

**Parameters**

**behavior** – Variable to be filled with an enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **setDataRoleBehavior** (const unsigned char behavior)

Sets the behavior of how upstream and downstream ports are determined, i.e. How do you manage requests for data role swaps and new upstream connections.

**Parameters**

**behavior** – An enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

**Returns**

Returns *common entity* return values

*aErr* **getDataRoleBehaviorConfig** (unsigned int %buffer, const unsigned int bufferSize, unsigned int %unloadedLength)

Gets the current data role behavior configuration. Certain data role behaviors use a list of ports to determine priority host priority.

**Parameters**

- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled
- **unloadedLength** – Length that was actually received and filled.

**Returns**

Returns *common entity* return values

*aErr* **setDataRoleBehaviorConfig** (const unsigned int %buffer, const unsigned int bufferSize)

Sets the current data role behavior configuration. Certain data role behaviors use a list of ports to determine host priority.

**Parameters**

- **buffer** – Pointer to the start of a c style buffer to be transferred.

- **bufferLength** – Length of the buffer to be transferred.

**Returns**

Returns *common entity* return values

*aErr* **getSelectorMode** (unsigned char %mode)

Gets the current mode of the selector input. This mode determines what happens and in what order when the external selector input is used.

**Parameters**

**mode** – Variable to be filled with the selector mode

**Returns**

Returns *common entity* return values

*aErr* **setSelectorMode** (const unsigned char mode)

Sets the current mode of the selector input. This mode determines what happens and in what order when the external selector input is used.

**Parameters**

**mode** – Mode to be set.

**Returns**

Returns *common entity* return values

*aErr* **getUpstreamHS** (unsigned char %port)

Gets the USB HighSpeed upstream port.

**Parameters**

**port** – The current upstream port.

**Returns**

Returns *common entity* return values

*aErr* **setUpstreamHS** (const unsigned char port)

Sets the USB HighSpeed upstream port.

**Parameters**

**port** – The upstream port to set.

**Returns**

Returns *common entity* return values

*aErr* **getUpstreamSS** (unsigned char %port)

Gets the USB SuperSpeed upstream port.

**Parameters**

**port** – The current upstream port.

**Returns**

Returns *common entity* return values

*aErr* **setUpstreamSS** (const unsigned char port)

Sets the USB SuperSpeed upstream port.

**Parameters**

**port** – The upstream port to set.

**Returns**

Returns *common entity* return values

*aErr* **getOverride** (unsigned int %overrides)

Gets the current enabled overrides

**Parameters**

**overrides** – Bit mapped representation of the current override configuration.

**Returns**

Returns *common entity* return values

*aErr* **setOverride** (const unsigned int overrides)

Sets the current enabled overrides

**Parameters**

**overrides** – Overrides to be set in a bit mapped representation.

**Returns**

Returns *common entity* return values

*aErr* **setDataHSMMaxDatarate** (const unsigned int datarate)

Sets the USB HighSpeed Max datarate

**Parameters**

**datarate** – Maximum datarate for the USB HighSpeed signals.

**Returns**

Returns *common entity* return values

*aErr* **getDataHSMMaxDatarate** (unsigned int %datarate)

Gets the USB HighSpeed Max datarate

**Parameters**

**datarate** – Current maximum datarate for the USB HighSpeed signals.

**Returns**

Returns *common entity* return values

*aErr* **setDataSSMaxDatarate** (const unsigned int datarate)

Sets the USB SuperSpeed Max datarate

**Parameters**

**datarate** – Maximum datarate for the USB SuperSpeed signals.

**Returns**

Returns *common entity* return values

*aErr* **getDataSSMaxDatarate** (unsigned int %datarate)

Gets the USB SuperSpeed Max datarate

**Parameters**

**datarate** – Current maximum datarate for the USB SuperSpeed signals.

**Returns**

Returns *common entity* return values

## 3.7 CCA API Reference

### 3.7.1 Analog Entity

See the [Analog Entity](#) for generic information.

#### group **AnalogEntity**

Interface to analog entities on BrainStem modules. Analog entities may be configured as a input or output depending on hardware capabilities. Some modules are capable of providing actual voltage readings, while other simply return the raw analog-to-digital converter (ADC) output value. The resolution of the voltage or number of useful bits is also hardware dependent.

void **analog\_getValue** (unsigned int \*id, struct Result \*result, const int index)

Get the raw ADC output value in bits.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: 16 bit analog reading with 0 corresponding to the negative analog voltage reference and 0xFFFF corresponding to the positive analog voltage reference.

---

**Note:** Not all modules are provide 16 useful bits; this value's least significant bits are zero-padded to 16 bits. Refer to the module's datasheet to determine analog bit depth and reference voltage.

---

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **analog\_getVoltage** (unsigned int \*id, struct Result \*result, const int index)

Get the scaled micro volt value with reference to ground.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: 32 bit signed integer (in microvolts) based on the board's ground and reference voltages.

---

**Note:** Not all modules provide 32 bits of accuracy. Refer to the module's datasheet to determine the analog bit depth and reference voltage.

---

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **analog\_getRange** (unsigned int \*id, struct Result \*result, const int index)

Get the analog input range.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 8 bit value corresponding to a discrete range option

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **analog\_getEnable** (unsigned int \*id, struct Result \*result, const int index)

Get the analog output enable status.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 0 if disabled 1 if enabled.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **analog\_setValue** (unsigned int \*id, struct Result \*result, const int index, const unsigned short value)

Set the value of an analog output (DAC) in bits.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

---

**Note:** Not all modules are provide 16 useful bits; the least significant bits are discarded. E.g. for a 10 bit DAC, 0xFFC0 to 0x0040 is the useful range. Refer to the module’s datasheet to determine analog bit depth and reference voltage.

---

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **value** – 16 bit analog set point with 0 corresponding to the negative analog voltage reference and 0xFFFF corresponding to the positive analog voltage reference.

void **analog\_setVoltage** (unsigned int \*id, struct Result \*result, const int index, const int microvolts)

Set the voltage level of an analog output (DAC) in microvolts.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

---

**Note:** Voltage range is dependent on the specific DAC channel range.

---

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **microvolts** – 32 bit signed integer (in microvolts) based on the board’s ground and reference voltages.

void **analog\_setRange** (unsigned int \*id, struct Result \*result, const int index, const unsigned char range)

Set the analog input range.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **range** – 8 bit value corresponding to a discrete range option

void **analog\_setEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Set the analog output enable state.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – set 1 to enable or 0 to disable.

void **analog\_setConfiguration** (unsigned int \*id, struct Result \*result, const int index, const unsigned char configuration)

Set the analog configuration.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **configuration** – bitAnalogConfigurationOutput configures the analog entity as an output.

void **analog\_getConfiguration** (unsigned int \*id, struct Result \*result, const int index)

Get the analog configuration.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Current configuration of the analog entity.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **analog\_setBulkCaptureSampleRate** (unsigned int \*id, struct Result \*result, const int index, const unsigned int value)

Set the sample rate for this analog when bulk capturing.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **value** – sample rate in samples per second (Hertz).
  - Minimum rate: 7,000 Hz
  - Maximum rate: 200,000 Hz

void **analog\_getBulkCaptureSampleRate** (unsigned int \*id, struct Result \*result, const int index)

Get the current sample rate setting for this analog when bulk capturing.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: upon success filled with current sample rate in samples per second (Hertz).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.



void **analog\_setBulkCaptureNumberOfSamples** (unsigned int \*id, struct Result \*result, const int index, const unsigned int value)

Set the number of samples to capture for this analog when bulk capturing.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **value** – number of samples.
  - Minimum # of Samples: 0
  - Maximum # of Samples:  $(\text{BRAINSTEM\_RAM\_SLOT\_SIZE} / 2) = (3\text{FFF} / 2) = 1\text{FFF} = 8191$

void **analog\_getBulkCaptureNumberOfSamples** (unsigned int \*id, struct Result \*result, const int index)

Get the current number of samples setting for this analog when bulk capturing.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: number of samples.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **analog\_initiateBulkCapture** (unsigned int \*id, struct Result \*result, const int index)

Initiate a BulkCapture on this analog. Captured measurements are stored in the module’s RAM store (RAM\_STORE) slot 0. Data is stored in a contiguous byte array with each sample stored in two consecutive bytes, LSB first.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

---

**Note:** When the bulk capture is complete `getBulkCaptureState()` will return either `bulkCaptureFinished` or `bulkCaptureError`.

---

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

void **analog\_getBulkCaptureState** (unsigned int \*id, struct Result \*result, const int index)

Get the current bulk capture state for this analog.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: the state of bulk capture.
- Idle: bulkCaptureIdle = 0
- Pending: bulkCapturePending = 1
- Finished: bulkCaptureFinished = 2
- Error: bulkCaptureError = 3

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

### 3.7.2 App Entity

See the *App Entity* for generic information.

#### group **AppEntity**

Used to send a cmdAPP packet to the BrainStem network. These commands are used for either host-to-stem or stem-to-stem interactions. BrainStem modules can implement a reflex origin to complete an action when a cmdAPP packet is addressed to the module.

void **app\_execute** (unsigned int \*id, struct Result \*result, const int index, const unsigned int appParam)

Execute the app reflex on the module. Doesn't wait for a return value from the execute call; this call returns immediately upon execution of the module's reflex.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **appParam** – The app parameter handed to the reflex.

void **app\_executeAndReturn** (unsigned int \*id, struct Result \*result, const int index, const unsigned int appParam, const unsigned int msTimeout)

Execute the app reflex on the module. Waits for a return from the reflex execution for msTimeout milliseconds. This method will block for up to msTimeout.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

- **value**: The return value filled in from the result of executing the reflex routine.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **appParam** – The app parameter handed to the reflex.
- **msTimeout** – The amount of time to wait for the return value from the reflex routine. The default value is 1000 milliseconds if not specified.

### 3.7.3 Clock Entity

See the [Clock Entity](#) for generic information.

#### *group* ClockEntity

Provides an interface to a real-time clock entity on a BrainStem module. The clock entity may be used to get and set the real time of the system. The clock entity has a one second resolution.

void **clock\_getYear** (unsigned int \*id, struct Result \*result, const int index)

Get the four digit year value (0-4095).

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value
- **value**: Get the year portion of the real-time clock value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **clock\_setYear** (unsigned int \*id, struct Result \*result, const int index, const unsigned short year)

Set the four digit year value (0-4095).

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **year** – Set the year portion of the real-time clock value.

void **clock\_getMonth** (unsigned int \*id, struct Result \*result, const int index)

Get the two digit month value (1-12).

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The two digit month portion of the real-time clock value.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **clock\_setMonth** (unsigned int \*id, struct Result \*result, const int index, const unsigned char month)

Set the two digit month value (1-12).

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **month** – The two digit month portion of the real-time clock value.

void **clock\_getDay** (unsigned int \*id, struct Result \*result, const int index)

Get the two digit day of month value (1-28, 29, 30 or 31 depending on the month).

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The two digit day portion of the real-time clock value.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **clock\_setDay** (unsigned int \*id, struct Result \*result, const int index, const unsigned char day)

Set the two digit day of month value (1-28, 29, 30 or 31 depending on the month).

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.

- **index** – The index of the entity in question.
- **day** – The two digit day portion of the real-time clock value.

void **clock\_getHour** (unsigned int \*id, struct Result \*result, const int index)

Get the two digit hour value (0-23).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The two digit hour portion of the real-time clock value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **clock\_setHour** (unsigned int \*id, struct Result \*result, const int index, const unsigned char hour)

Set the two digit hour value (0-23).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **hour** – The two digit hour portion of the real-time clock value.

void **clock\_getMinute** (unsigned int \*id, struct Result \*result, const int index)

Get the two digit minute value (0-59).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The two digit minute portion of the real-time clock value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **clock\_setMinute** (unsigned int \*id, struct Result \*result, const int index, const unsigned char minute)

Set the two digit minute value (0-59).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **minute** – The two digit minute portion of the real-time clock value.

void **clock\_getSecond** (unsigned int \*id, struct Result \*result, const int index)

Get the two digit second value (0-59).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The two digit second portion of the real-time clock value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **clock\_setSecond** (unsigned int \*id, struct Result \*result, const int index, const unsigned char second)

Set the two digit second value (0-59).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **second** – The two digit second portion of the real-time clock value.

### 3.7.4 Digital Entity

See the *Digital Entity* for generic information.

#### group **DigitalEntity**

Interface to digital entities on BrainStem modules. Digital entities have the following 5 possibilities: Digital Input, Digital Output, RCServo Input, RCServo Output, and HighZ. Other capabilities may be available and not all pins support all configurations. Please see the product datasheet.

void **digital\_setConfiguration** (unsigned int \*id, struct Result \*result, const int index, const unsigned char configuration)

Set the digital configuration to one of the available 5 states.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

---

**Note:** Some configurations are only supported on specific pins.

---

### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **configuration** – The configuration to be applied
  - Digital Input: digitalConfigurationInput = 0
  - Digital Output: digitalConfigurationOutput = 1
  - RCServo Input: digitalConfigurationRCServoInput = 2
  - RCServo Output: digitalConfigurationRCServoOutput = 3
  - High Z State: digitalConfigurationHiZ = 4
  - Digital Input: digitalConfigurationInputPullUp = 0
  - Digital Input: digitalConfigurationInputNoPull = 4
  - Digital Input: digitalConfigurationInputPullDown = 5

void **digital\_getConfiguration** (unsigned int \*id, struct Result \*result, const int index)

Get the digital configuration.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Current configuration of the digital entity.

### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **digital\_setState** (unsigned int \*id, struct Result \*result, const int index, const unsigned char state)

Set the logical state.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **state** – The state to be set. 0 is logic low, 1 is logic high.

void **digital\_getState** (unsigned int \*id, struct Result \*result, const int index)

Get the state.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current state of the digital entity. 0 is logic low, 1 is logic high.

---

**Note:** If in high Z state an error will be returned.

---

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **digital\_setStateAll** (unsigned int \*id, struct Result \*result, const int index, const unsigned int state)

Sets the logical state of all available digitals based on the bit mapping. Number of digitals varies across BrainStem modules. Refer to the datasheet for the capabilities of your module.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **state** – The state to be set for all digitals in a bit mapped representation. 0 is logic low, 1 is logic high. Where bit 0 = digital 0, bit 1 = digital 1 etc.

void **digital\_getStateAll** (unsigned int \*id, struct Result \*result, const int index)

Gets the logical state of all available digitals in a bit mapped representation. Number of digitals varies across BrainStem modules. Refer to the datasheet for the capabilities of your module.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The state of all digitals where bit 0 = digital 0, bit 1 = digital 1 etc. 0 is logic low, 1 is logic high.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.



void **digital\_setValue** (unsigned int \*id, struct Result \*result, const int index, const unsigned char value)

Set the expected value of the digital pin.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **value** – The expected value of the digital pin. 0 is logic low, 1 is logic high.

void **digital\_getValue** (unsigned int \*id, struct Result \*result, const int index)

Get the expected value of the digital pin.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The expected value of the digital pin. 0 is logic low, 1 is logic high.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **digital\_setLinkChannel** (unsigned int \*id, struct Result \*result, const int index, const unsigned char linkChannel)

Set the link channel (entity index) for linking digital entities. Two digital entities will link when one is configured as LinkInput, one as LinkOutput, and both have each others linkChannel indexes.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **linkChannel** – The link channel (entity index) value. Entities with matching linkChannel values can be linked.

void **digital\_getLinkChannel** (unsigned int \*id, struct Result \*result, const int index)

Get the link channel (entity index) for linking digital entities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current link channel (entity index) value.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

### 3.7.5 Equalizer Entity

See the [Equalizer Entity](#) for generic information.

**group EqualizerEntity**

Provides receiver and transmitter gain/boost/emphasis settings for some of Acroname’s products. Please see product documentation for further details.

void **equalizer\_setReceiverConfig** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel, const unsigned char config)

Sets the receiver configuration for a given channel.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The equalizer receiver channel.
- **config** – Configuration to be applied to the receiver.

void **equalizer\_getReceiverConfig** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Gets the receiver configuration for a given channel.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Configuration of the receiver.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The equalizer receiver channel.

void **equalizer\_setTransmitterConfig** (unsigned int \*id, struct Result \*result, const int index, const unsigned char config)

Sets the transmitter configuration

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **config** – Configuration to be applied to the transmitter.

void **equalizer\_getTransmitterConfig** (unsigned int \*id, struct Result \*result, const int index)

Gets the transmitter configuration

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Configuration of the Transmitter.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

### 3.7.6 Ethernet Entity

See the [Ethernet Entity](#) for generic information.

group **EthernetEntity**

IP configuration. MAC info. BrainD port.

void **ethernet\_setEnabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enabled)

Sets the Ethernet’s interface to enabled/disabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enabled** – 1 = enabled; 0 = disabled

void **ethernet\_getEnabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the Ethernet interface.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 1 = Fully enabled network connectivity; 0 = Ethernet MAC is disabled.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **ethernet\_getNetworkConfiguration** (unsigned int \*id, struct Result \*result, const int index)

Get the method in which IP Address is assigned to this device

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Method used. Current methods
- NONE = 0
- STATIC = 1
- DHCP = 2

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **ethernet\_setNetworkConfiguration** (unsigned int \*id, struct Result \*result, const int index,  
const unsigned char addressStyle)

Get the method in which IP Address is assigned to this device

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **addressStyle** – Method to use. See getNetworkConfiguration for addressStyle enumerations.

void **ethernet\_getStaticIPv4Address** (unsigned int \*id, struct Result \*result, const int index, unsigned  
char \*buffer, const unsigned int bufferLength)

Get the expected IPv4 address of this device, when networkConfiguration == STATIC

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: occupied bytes in buffer, Should be 4 post-call.

---

**Note:** The functional IPv4 address of The Module will differ if NetworkConfiguration != STATIC.

---

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.

void **ethernet\_setStaticIPv4Address** (unsigned int \*id, struct Result \*result, const int index, const unsigned char \*buffer, const unsigned int bufferLength)

Set the desired IPv4 address of this device, if NetworkConfiguration == STATIC.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[4] with an IP address
- **bufferLength** – size of buffer. Should be 4.

void **ethernet\_getStaticIPv4Netmask** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Get the expected IPv4 netmask of this device, when networkConfiguration == STATIC

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: occupied bytes in buffer, Should be 4 post-call.

---

**Note:** The functional IPv4 netmask of The Module will differ if NetworkConfiguration != STATIC.

---

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.

void **ethernet\_setStaticIPv4Netmask** (unsigned int \*id, struct Result \*result, const int index, const unsigned char \*buffer, const unsigned int bufferLength)

Set the desired IPv4 address of this device, if NetworkConfiguration == STATIC

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[4] with an IP address
- **bufferLength** – size of buffer. Should be 4.

void **ethernet\_getStaticIPv4Gateway** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Get the expected IPv4 gateway of this device, when networkConfiguration == STATIC

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: occupied bytes in buffer, Should be 4 post-call.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.

void **ethernet\_setStaticIPv4Gateway** (unsigned int \*id, struct Result \*result, const int index, const unsigned char \*buffer, const unsigned int bufferLength)

Set the desired IPv4 gateway of this device, if NetworkConfiguration == STATIC

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[4] with an IP address
- **bufferLength** – size of buffer. Should be 4. setStaticIPv4Gateway([192, 168, 1, 1], 4) would equate with address “192.168.1.1”

void **ethernet\_getIPv4Address** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Get the effective IP address of this device.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: occupied bytes in buffer, Should be 4 post-call.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.

void **ethernet\_getIPv4Netmask** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Get the effective IP netmask of this device.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: occupied bytes in buffer, Should be 4 post-call.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.

void **ethernet\_getIPv4Gateway** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Get the effective IP gateway of this device.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: occupied bytes in buffer, Should be 4 post-call.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[4] for returned output
- **bufferLength** – size of buffer. Should be 4.

void **ethernet\_setStaticIPv4DNSAddress** (unsigned int \*id, struct Result \*result, const int index, const unsigned char \*buffer, const unsigned int bufferLength)

Set IPv4 DNS Addresses (plural), if NetworkConfiguration == STATIC

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[N][4]
- **bufferLength** – Total array length in bytes. Must be a multiple of 4.

void **ethernet\_getStaticIPv4DNSAddress** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Get IPv4 DNS addresses (plural), when NetworkConfiguration == STATIC

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Length of occupied bytes of buffer, after the call.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[N][4]
- **bufferLength** – Maximum length of array, in bytes.

void **ethernet\_getIPv4DNSAddress** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Get effective IPv4 DNS addresses, for the current NetworkConfiguration

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Length of occupied bytes of buffer, after the call.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[N][4]
- **bufferLength** – Maximum length of array, in bytes.



void **ethernet\_setHostname** (unsigned int \*id, struct Result \*result, const int index, const unsigned char \*buffer, const unsigned int bufferLength)

Set hostname that's requested when this device sends a DHCP request.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[N]
- **bufferLength** – N, for N bytes.

void **ethernet\_getHostname** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Get hostname that's requested when this device sends a DHCP request.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Length of occupied bytes of buffer, after the call.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[N]
- **bufferLength** – N, for N bytes.

void **ethernet\_getMACAddress** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Get the MAC address of the Ethernet interface.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Length of occupied bytes of buffer, after the call.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – alias to an array of uint8\_t[6]
- **bufferLength** – length of buffer that's writeable, should be > 6.

void **ethernet\_setInterfacePort** (unsigned int \*id, struct Result \*result, const int index, const unsigned char service, const unsigned short port)

Set the port of a TCPIP service on the device.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **service** – The index of the service to set the port for.
- **port** – The port to be used for the TCPIP server.

void **ethernet\_getInterfacePort** (unsigned int \*id, struct Result \*result, const int index, const unsigned char service)

Get the port of a TCPIP service on the device.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The port of the TCPIP server.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **service** – The index of the service to get the port for.

### 3.7.7 HDBaseT Entity

See the [HDBaseT Entity](#) for generic information.

#### group **HDBaseTEntity**

This entity is only available on certain modules, and provides information on HDBaseT extenders.

void **hdbaset\_getSerialNumber** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Gets the serial number of the HDBaseT device (6 bytes)

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Length that was actually received and filled.

#### Parameters

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled

void **hdbaset\_getFirmwareVersion** (unsigned int \*id, struct Result \*result, const int index)

Gets the firmware version of the HDBaseT device

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: A bit packet representation of the firmware version Major: Bits 24-31; Minor: Bits 16-23; Patch: Bits 8-15; Build: Bits 0-7

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **hdbaset\_getState** (unsigned int \*id, struct Result \*result, const int index)

Gets the current state of the HDBaseT link

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Bit packeted representation of the state.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **hdbaset\_getCableLength** (unsigned int \*id, struct Result \*result, const int index)

Gets the perceived cable length

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Cable length in micro-meters

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **hdbaset\_getMSEA** (unsigned int \*id, struct Result \*result, const int index)

Gets the Mean Squared Error (MSE) for channel A

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current MSE for channel A in micro-dB

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **hdbaset\_getMSEB** (unsigned int \*id, struct Result \*result, const int index)

Gets the Mean Squared Error (MSE) for channel B

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current MSE for channel B in micro-dB

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **hdbaset\_getRetransmissionRate** (unsigned int \*id, struct Result \*result, const int index)

Gets the number of successful messages between retransmission

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Instantaneous number of successful messages between retransmission. To be interpreted as: 1 / retransmissionRate for rate interpretation. If the value is 0, there have been no retransmissions, otherwise higher is better..

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **hdbaset\_getLinkUtilization** (unsigned int \*id, struct Result \*result, const int index)

Gets the current link utilization

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Utilization in milli-percent

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **hdbaset\_getEncodingState** (unsigned int \*id, struct Result \*result, const int index)

Gets the current encoding state.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Signal modulation encoding type.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **hdbaset\_getUSB2DeviceTree** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Gets the USB2 tree at the HDBaseT device.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Length that was actually received and filled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled

void **hdbaset\_getUSB3DeviceTree** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Gets the USB3 tree at the HDBaseT device.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Length that was actually received and filled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled

- **bufferLength** – Length of the buffer to be filed

void **hdbaset\_getLinkRole** (unsigned int \*id, struct Result \*result, const int index)

Gets the current link role In the case of “Auto” the getState API will provide the current role.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Link role

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **hdbaset\_setLinkRole** (unsigned int \*id, struct Result \*result, const int index, const unsigned char role)

Sets the active link role

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **role** – The role to be set.

### 3.7.8 I2C Entity

See the [I2C Entity](#) for generic information.

#### group **I2CEntity**

Interface the I2C buses on BrainStem modules. The class provides a way to send read and write commands to I2C devices on the entities bus.

void **i2c\_read** (unsigned int \*id, struct Result \*result, const int index, const unsigned char address, const unsigned char readLength, unsigned char \*buffer)

Read from a device on this I2C bus.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

- **address** – The I2C address (7bit <XXXX-XXX0>) of the device to read.
- **readLength** – The length of the data to read in bytes.
- **buffer** – The array of bytes that will be filled with the result, upon success. This array should be larger or equivalent to `aBRAINSTEM_MAXPACKETBYTES` - 5

`void i2c_write (unsigned int *id, struct Result *result, const int index, const unsigned char address, const unsigned char bufferLength, const unsigned char *buffer)`

Write to a device on this I2C bus.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **address** – The I2C address (7bit <XXXX-XXX0>) of the device to write.
- **bufferLength** – The length of the data to write in bytes.
- **buffer** – The data to send to the device This array should be no larger than `aBRAINSTEM_MAXPACKETBYTES` - 5

`void i2c_setPullup (unsigned int *id, struct Result *result, const int index, const unsigned char enable)`

Set bus pull-up state. This call only works with stems that have software controlled pull-ups. Check the datasheet for more information. This parameter is saved when `system.save` is called.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – true enables pull-ups false disables them.

`void i2c_setSpeed (unsigned int *id, struct Result *result, const int index, const unsigned char speed)`

Set I2C bus speed.

This call sets the communication speed for I2C transactions through this API. Speed is an enumeration value which can take the following values: 1 - 100Khz 2 - 400Khz 3 - 1MHz

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.

- **index** – The index of the entity in question.
- **speed** – The speed setting value.

void **i2c\_getSpeed** (unsigned int \*id, struct Result \*result, const int index)

Get I2C bus speed.

This call gets the communication speed for I2C transactions through this API. Speed is an enumeration value which can take the following values: 1 - 100Khz 2 - 400Khz 3 - 1MHz

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The speed setting value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

### 3.7.9 Mux Entity

See the [Mux Entity](#) for generic information.

#### group **MuxEntity**

A MUX is a multiplexer that takes one or more similar inputs (bus, connection, or signal) and allows switching to one or more outputs. An analogy would be the switchboard of a telephone operator. Calls (inputs) come in and by re-connecting the input to an output, the operator (multiplexer) can direct that input to on or more outputs. One possible output is to not connect the input to anything which essentially disables that input's connection to anything. Not every MUX has multiple inputs; some may simply be a single input that can be enabled (connected to a single output) or disabled (not connected to anything).

void **mux\_getEnable** (unsigned int \*id, struct Result \*result, const int index)

Get the mux enable/disable status

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: true: mux is enabled, false: the mux is disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **mux\_setEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enable the mux.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value



**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – true: enables the mux for the selected channel.

void **mux\_getChannel** (unsigned int \*id, struct Result \*result, const int index)

Get the current selected mux channel.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Indicates which channel is selected.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **mux\_setChannel** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Set the current mux channel.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – mux channel to select.

void **mux\_getChannelVoltage** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the voltage of the indicated mux channel.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: 32 bit signed integer (in microvolts) based on the board’s ground and reference voltages.

---

**Note:** Not all modules provide 32 bits of accuracy; Refer to the module’s datasheet to determine the analog bit depth and reference voltage.

---

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.

- **index** – The index of the entity in question.
- **channel** – The channel in which voltage was requested.

void **mux\_getConfiguration** (unsigned int \*id, struct Result \*result, const int index)

Get the configuration of the mux.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: integer representing the mux configuration either default, or split-mode.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **mux\_setConfiguration** (unsigned int \*id, struct Result \*result, const int index, const int config)

Set the configuration of the mux.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **config** – integer representing the mux configuration either muxConfig\_default, or muxConfig\_splitMode.

void **mux\_getSplitMode** (unsigned int \*id, struct Result \*result, const int index)

Get the current split mode mux configuration.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: integer representing the channel selection for each sub-channel within the mux. See the data-sheet for the device for specific information.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **mux\_setSplitMode** (unsigned int \*id, struct Result \*result, const int index, const int splitMode)

Sets the mux’s split mode configuration.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **splitMode** – integer representing the channel selection for each sub-channel within the mux. See the data-sheet for the device for specific information.

**3.7.10 PoE Entity**

See the [PoE Entity](#) for generic information.

*group* **PoEEntity**

This entity is only available on certain modules, and provides a Power over Ethernet control ability.

void **poe\_getPairEnabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Gets the current enable value of the indicated POE pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: 1 = Enabled; 0 = Disabled;

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_setPairEnabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair, const unsigned char enable)

Enables or disables the indicated POE pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2

– 1 = Pair 3/4

- **enable** – 1 = Enable port; 0 = Disable port.

void **poe\_getPowerMode** (unsigned int \*id, struct Result \*result, const int index)

Gets the power mode of the device

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The power mode (PD, PSE, Auto, Off).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **poe\_setPowerMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char value)

Sets the power mode of the device

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **value** – The power mode (PD, PSE, Auto, Off).

void **poe\_getPowerState** (unsigned int \*id, struct Result \*result, const int index)

Gets the power state of the device

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The power state (PD, PSE, Off).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **poe\_getPairSourcingClass** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Gets the sourcing class for a given pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The POE class being offered by the device (PSE).

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_setPairSourcingClass** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair, const unsigned char value)

Sets the sourcing class for a given pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **value** – The POE class being offered by the device (PSE).

void **poe\_getPairRequestedClass** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Gets the requested class for a given pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The requested POE class by the device (PD).

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_getPairDiscoveredClass** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Gets the discovered class for a given pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The negotiated POE class by the device (PSE/PD).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_getPairDetectionStatus** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Gets detected status of the POE connection for a given pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current detected status of the pairs.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_getPairVoltage** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Gets the Voltage for a given pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The voltage in microvolts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_getPairCurrent** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Gets the Current for a given pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current in microamps (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_getPairResistance** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Gets the Resistance for a given pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The resistance in milliohms (1 == 1e-3Z).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_getPairCapacitance** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Gets the Capacitance for a given pair

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The capacitance in nanofarads (1 == 1e-9F).

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_getPairPower** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Get the instantaneous power consumption for a given pair The equivalent of Voltage x Current

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the pairs power in milli-watts (mW).

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_getTotalPower** (unsigned int \*id, struct Result \*result, const int index)

Gets the total instantaneous power consumption The equivalent of Pair1(Voltage x Current) + Pair2(Voltage x Current)

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the total POE power in milli-watts (mW).

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **poe\_getPairAccumulatedPower** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair)

Gets the accumulated power for a given pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the total accumulated POE power in milli-watts (mW).



**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4

void **poe\_setPairAccumulatedPower** (unsigned int \*id, struct Result \*result, const int index, const unsigned char pair, const int power)

Sets the accumulated power for a given pair.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **pair** – Selects PoE pair to access
  - 0 = Pair 1/2
  - 1 = Pair 3/4
- **power** – The power accumulator value to be set in milli-watts (mW).

void **poe\_getTotalAccumulatedPower** (unsigned int \*id, struct Result \*result, const int index)

Gets the total Accumulated Power

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the total accumulated POE power in milli-watts (mW).

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **poe\_setTotalAccumulatedPower** (unsigned int \*id, struct Result \*result, const int index, const int power)

Sets the total accumulated power

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **power** – The power accumulator value to be set in milli-watts (mW).

### 3.7.11 Pointer Entity

See the [Pointer Entity](#) for generic information.

#### *group* **PointerEntity**

Allows access to the reflex scratchpad from a host computer.

The Pointers access the pad which is a shared memory area on a BrainStem module. The interface allows the use of the BrainStem scratchpad from the host, and provides a mechanism for allowing the host application and BrainStem relexes to communicate.

The Pointer allows access to the pad in a similar manner as a file pointer accesses the underlying file. The cursor position can be set via `setOffset`. A read of a character short or int can be made from that cursor position.

In addition the mode of the pointer can be set so that the cursor position automatically increments or set so that it does not this allows for multiple reads of the same pad value, or reads of multi-record values, via an incrementing pointer.

void **pointer\_getOffset** (unsigned int \*id, struct Result \*result, const int index)

Get the offset of the pointer

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The value of the offset.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **pointer\_setOffset** (unsigned int \*id, struct Result \*result, const int index, const unsigned short offset)

Set the offset of the pointer

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **offset** – The value of the offset.

void **pointer\_getMode** (unsigned int \*id, struct Result \*result, const int index)

Get the mode of the pointer

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The mode: aPOINTER\_MODE\_STATIC or aPOINTER\_MODE\_AUTO\_INCREMENT.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **pointer\_setMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char mode)

Set the mode of the pointer

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **mode** – The mode: aPOINTER\_MODE\_STATIC or aPOINTER\_MODE\_AUTO\_INCREMENT.

void **pointer\_getTransferStore** (unsigned int \*id, struct Result \*result, const int index)

Get the handle to the store.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The handle of the store.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **pointer\_setTransferStore** (unsigned int \*id, struct Result \*result, const int index, const unsigned char handle)

Set the handle to the store.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **handle** – The handle of the store.

void **pointer\_initiateTransferToStore** (unsigned int \*id, struct Result \*result, const int index, const unsigned char transferLength)

Transfer data to the store.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **transferLength** – The length of the data transfer.

void **pointer\_initiateTransferFromStore** (unsigned int \*id, struct Result \*result, const int index, const unsigned char transferLength)

Transfer data from the store.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **transferLength** – The length of the data transfer.

void **pointer\_getChar** (unsigned int \*id, struct Result \*result, const int index)

Get a char (1 byte) value from the pointer at this object’s index, where elements are 1 byte long.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The value of a single character (1 byte) stored in the pointer.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **pointer\_setChar** (unsigned int \*id, struct Result \*result, const int index, const unsigned char value)

Set a char (1 byte) value to the pointer at this object's element index, where elements are 1 byte long.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **value** – The single char (1 byte) value to be stored in the pointer.

void **pointer\_getShort** (unsigned int \*id, struct Result \*result, const int index)

Get a short (2 byte) value from the pointer at this objects index, where elements are 2 bytes long

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The value of a single short (2 byte) stored in the pointer.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **pointer\_setShort** (unsigned int \*id, struct Result \*result, const int index, const unsigned short value)

Set a short (2 bytes) value to the pointer at this object's element index, where elements are 2 bytes long.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **value** – The single short (2 byte) value to be set in the pointer.

void **pointer\_getInt** (unsigned int \*id, struct Result \*result, const int index)

Get an int (4 bytes) value from the pointer at this objects index, where elements are 4 bytes long

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The value of a single int (4 byte) stored in the pointer.

#### Parameters

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **pointer\_setInt** (unsigned int \*id, struct Result \*result, const int index, const unsigned int value)

Set an int (4 bytes) value from the pointer at this objects index, where elements are 4 bytes long

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **value** – The single int (4 byte) value to be stored in the pointer.

### 3.7.12 Port Entity

See the [Port Entity](#) for generic information.

#### group **PortEntity**

The Port Entity provides software control over the most basic items related to a USB Port. This includes everything from the complete enable and disable of the entire port to the individual control of specific pins. Voltage and Current measurements are also included for devices which support the Port Entity.

void **port\_getVbusVoltage** (unsigned int \*id, struct Result \*result, const int index)

Gets the Vbus Voltage

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The voltage in microvolts (1 == 1e-6V) currently present on Vbus.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getVbusCurrent** (unsigned int \*id, struct Result \*result, const int index)

Gets the Vbus Current

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current in microamps (1 == 1e-6A) currently present on Vbus.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.

- **index** – The index of the entity in question.

void **port\_getVconnVoltage** (unsigned int \*id, struct Result \*result, const int index)

Gets the Vconn Voltage

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The voltage in microvolts (1 == 1e-6V) currently present on Vconn.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getVconnCurrent** (unsigned int \*id, struct Result \*result, const int index)

Gets the Vconn Current

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current in microamps (1 == 1e-6A) currently present on Vconn.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getPowerMode** (unsigned int \*id, struct Result \*result, const int index)

Gets the Port Power Mode: Convenience Function of get/setPortMode

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current power mode.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setPowerMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char powerMode)

Sets the Port Power Mode: Convenience Function of get/setPortMode

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **powerMode** – The power mode to be set.

void **port\_getEnabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the port.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 1 = Fully enabled port; 0 = One or more disabled components.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setEnabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the entire port.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Fully enable port; 0 = Fully disable port.

void **port\_getDataEnabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the data lines. Sub-component (Data) of getEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 1 = Data enabled; 0 = Data disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setDataEnabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the data lines. Sub-component (Data) of setEnabled.

The result parameter will output the following fields:



- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable data; 0 = Disable data.

void **port\_getDataHSEnabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the High Speed (HS) data lines. Sub-component of getDataEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 1 = Data enabled; 0 = Data disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setDataHSEnabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the High Speed (HS) data lines. Sub-component of setDataEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable data; 0 = Disable data.

void **port\_getDataHS1Enabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the High Speed A side (HSA) data lines. Sub-component of getDataHSEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 1 = Data enabled; 0 = Data disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setDataHS1Enabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the High Speed A side (HSA) data lines. Sub-component of setDataHSEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable data; 0 = Disable data.

void **port\_getDataHS2Enabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the High Speed B side (HSB) data lines. Sub-component of getDataHSEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: 1 = Data enabled; 0 = Data disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setDataHS2Enabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the High Speed B side (HSB) data lines. Sub-component of setDataHSEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable data; 0 = Disable data.

void **port\_getDataSSEnabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the Super Speed (SS) data lines. Sub-component of getDataEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: 1 = Data enabled; 0 = Data disabled.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setDataSSEnabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the Super Speed (SS) data lines. Sub-component of setDataEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable data; 0 = Disable data.

void **port\_getDataSS1Enabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the Super Speed A side (SSA) data lines. Sub-component of getDataSSEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 1 = Data enabled; 0 = Data disabled.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setDataSS1Enabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the Super Speed A side (SSA) data lines. Sub-component of setDataEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable data; 0 = Disable data.

void **port\_getDataSS2Enabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the Super Speed B side (SSB) data lines. Sub-component of get-DataSSEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: 1 = Data enabled; 0 = Data disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setDataSS2Enabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the Super Speed B side (SSB) data lines. Sub-component of setDataSSEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable data; 0 = Disable data.

void **port\_getPowerEnabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the power lines. Sub-component (Power) of getEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: 1 = Power enabled; 0 = Power disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setPowerEnabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or Disables the power lines. Sub-component (Power) of setEnable.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable power; 0 = Disable disable.

void **port\_getDataRole** (unsigned int \*id, struct Result \*result, const int index)

Gets the Port Data Role.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The data role to be set. See datasheet for details.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getVconnEnabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the Vconn lines. Sub-component (Vconn) of getEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 1 = Vconn enabled; 0 = Vconn disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setVconnEnabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the Vconn lines. Sub-component (Vconn) of setEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable Vconn lines; 0 = Disable Vconn lines.

void **port\_getVconn1Enabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the Vconn1 lines. Sub-component of getVconnEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: 1 = Vconn1 enabled; 0 = Vconn1 disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setVconn1Enabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the Vconn1 lines. Sub-component of setVconnEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable Vconn1 lines; 0 = Disable Vconn1 lines.

void **port\_getVconn2Enabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the Vconn2 lines. Sub-component of getVconnEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: 1 = Vconn2 enabled; 0 = Vconn2 disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setVconn2Enabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the Vconn2 lines. Sub-component of setVconnEnabled.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable Vconn2 lines; 0 = Disable Vconn2 lines.

void **port\_getCCEnabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the CC lines. Sub-component (CC) of getEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 1 = CC enabled; 0 = CC disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setCCEnabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the CC lines. Sub-component (CC) of setEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable CC lines; 0 = Disable CC lines.

void **port\_getCC1Enabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the CC1 lines. Sub-component of getCCEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 1 = CC1 enabled; 0 = CC1 disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setCC1Enabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the CC1 lines. Sub-component of setCCEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable CC1 lines; 0 = Disable CC1 lines.

void **port\_getCC2Enabled** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enable value of the CC2 lines. Sub-component of getCCEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 1 = CC2 enabled; 0 = CC2 disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setCC2Enabled** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables or disables the CC2 lines. Sub-component of setCCEnabled.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – 1 = Enable CC2 lines; 0 = Disable CC2 lines.

void **port\_getVoltageSetpoint** (unsigned int \*id, struct Result \*result, const int index)

Gets the current voltage setpoint value for the port.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: the voltage setpoint of the port in uV.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.



void **port\_setVoltageSetpoint** (unsigned int \*id, struct Result \*result, const int index, const unsigned int value)

Sets the current voltage setpoint value for the port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **value** – the voltage setpoint of the port in uV.

void **port\_getState** (unsigned int \*id, struct Result \*result, const int index)

A bit mapped representation of the current state of the port. Reflects what the port IS which may differ from what was requested.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the current state.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getDataSpeed** (unsigned int \*id, struct Result \*result, const int index)

Gets the speed of the enumerated device.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Bit mapped value representing the devices speed. See “Devices” reference for details.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getMode** (unsigned int \*id, struct Result \*result, const int index)

Gets current mode of the port

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Bit mapped value representing the ports mode. See “Devices” reference for details.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned int mode)

Sets the mode of the port

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **mode** – Port mode to be set. See “Devices” documentation for details.

void **port\_getErrors** (unsigned int \*id, struct Result \*result, const int index)

Returns any errors that are present on the port. Calling this function will clear the current errors. If the error persists it will be set again.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Bit mapped field representing the current errors of the ports

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getCurrentLimit** (unsigned int \*id, struct Result \*result, const int index)

Gets the current limit of the port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the limit in microAmps (uA).

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setCurrentLimit** (unsigned int \*id, struct Result \*result, const int index, const unsigned int limit)

Sets the current limit of the port.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **limit** – Current limit to be applied in microAmps (uA).

void **port\_getCurrentLimitMode** (unsigned int \*id, struct Result \*result, const int index)

Gets the current limit mode. The mode determines how the port will react to an over current condition.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with an enumerated representation of the current limit mode. Available modes are product specific. See the reference documentation.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setCurrentLimitMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char mode)

Sets the current limit mode. The mode determines how the port will react to an over current condition.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **mode** – An enumerated representation of the current limit mode. Available modes are product specific. See the reference documentation.

void **port\_getAvailablePower** (unsigned int \*id, struct Result \*result, const int index)

Gets the current available power. This value is determined by the power manager which is responsible for budgeting the systems available power envelope.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with the available power in milli-watts (mW).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.

- **index** – The index of the entity in question.

void **port\_getAllocatedPower** (unsigned int \*id, struct Result \*result, const int index)

Gets the currently allocated power. This value is determined by the power manager which is responsible for budgeting the systems available power envelope.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the allocated power in milli-watts (mW).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getPowerLimit** (unsigned int \*id, struct Result \*result, const int index)

Gets the user defined power limit for the port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the power limit in milli-watts (mW).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setPowerLimit** (unsigned int \*id, struct Result \*result, const int index, const unsigned int limit)

Sets a user defined power limit for the port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **limit** – Power limit to be applied in milli-watts (mW).

void **port\_getPowerLimitMode** (unsigned int \*id, struct Result \*result, const int index)

Gets the power limit mode. The mode determines how the port will react to an over power condition.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with an enumerated representation of the power limit mode. Available modes are product specific. See the reference documentation.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setPowerLimitMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char mode)

Sets the power limit mode. The mode determines how the port will react to an over power condition.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **mode** – An enumerated representation of the power limit mode to be applied Available modes are product specific. See the reference documentation.

void **port\_getName** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferSize)

Gets a user defined name of the port. Helpful for identifying ports/devices in a static environment.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Length that was actually received and filled.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled

void **port\_setName** (unsigned int \*id, struct Result \*result, const int index, const unsigned char \*buffer, const unsigned int bufferSize)

Sets a user defined name of the port. Helpful for identifying ports/devices in a static environment.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

void **port\_getCCCurrentLimit** (unsigned int \*id, struct Result \*result, const int index)

Gets the CC Current Limit Resistance The CC Current limit is the value that's set for the pull up resistance on the CC lines for basic USB-C negotiations.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with an enumerated representation of the CC Current limit.
- 0 = None
- 1 = Default (500/900mA)
- 2 = 1.5A
- 3 = 3.0A

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setCCCurrentLimit** (unsigned int \*id, struct Result \*result, const int index, const unsigned char value)

Sets the CC Current Limit Resistance The CC Current limit is the value that's set for the pull up resistance on the CC lines for basic USB-C negotiations.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **value** – Variable to be filled with an enumerated representation of the CC Current limit.
  - 0 = None
  - 1 = Default (500/900mA)
  - 2 = 1.5A
  - 3 = 3.0A

void **port\_getDataHSRoutingBehavior** (unsigned int \*id, struct Result \*result, const int index)

Gets the HighSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

- **value**: Variable to be filled with an enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setDataHSRoutingBehavior** (unsigned int \*id, struct Result \*result, const int index, const unsigned char mode)

Sets the HighSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **mode** – An enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

void **port\_getDataSSRoutingBehavior** (unsigned int \*id, struct Result \*result, const int index)

Gets the SuperSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value
- **value**: Variable to be filled with an enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setDataSSRoutingBehavior** (unsigned int \*id, struct Result \*result, const int index, const unsigned char mode)

Sets the SuperSpeed Data Routing Behavior. The mode determines how the port will route the data lines.

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.

- **index** – The index of the entity in question.
- **mode** – An enumerated representation of the routing behavior. Available modes are product specific. See the reference documentation.

void **port\_getVbusAccumulatedPower** (unsigned int \*id, struct Result \*result, const int index)

Gets the Vbus Accumulated Power

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The accumulated power on Vbus in milliwatt-hours.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setVbusAccumulatedPower** (unsigned int \*id, struct Result \*result, const int index, const int milliwatthours)

Sets the Vbus Accumulated Power

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **milliwatthours** – The accumulated power on Vbus in milliwatt-hours to be set.

void **port\_resetVbusAccumulatedPower** (unsigned int \*id, struct Result \*result, const int index)

Resets the Vbus Accumulated Power to zero.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

*Deprecated:*

Replace with setVbusAccumulatedPower(0)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

void **port\_getVconnAccumulatedPower** (unsigned int \*id, struct Result \*result, const int index)

Gets the Vconn Accumulated Power

The result parameter will output the following fields:



- error: *Common EntityClass Return Values* common entity return value
- value: The accumulated power on Vconn in milliwatt-hours.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setVconnAccumulatedPower** (unsigned int \*id, struct Result \*result, const int index, const int milliwatthours)

Sets the Vconn Accumulated Power

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **milliwatthours** – The accumulated power on Vconn to be set.

void **port\_resetVconnAccumulatedPower** (unsigned int \*id, struct Result \*result, const int index)

Resets the Vconn Accumulated Power to zero.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

*Deprecated:*

Replace with setVconnAccumulatedPower(0)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

void **port\_setHSBoost** (unsigned int \*id, struct Result \*result, const int index, const unsigned char boost)

Sets the ports USB 2.0 High Speed Boost Settings The setting determines how much additional drive the USB 2.0 signal will have in High Speed mode.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

- **boost** – An enumerated representation of the boost range. Available value are product specific. See the reference documentation.

void **port\_getHSBoost** (unsigned int \*id, struct Result \*result, const int index)

Gets the ports USB 2.0 High Speed Boost Settings The setting determines how much additional drive the USB 2.0 signal will have in High Speed mode.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: An enumerated representation of the boost range. Available modes are product specific. See the reference documentation.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getCC1State** (unsigned int \*id, struct Result \*result, const int index)

Gets the current CC1 Strapping on local and remote The state is a bit packed value where the upper byte is used to represent the remote or partner device attached to the ports resistance and the lower byte is used to represent the local or hubs resistance.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with an packed enumerated representation of the CC state. Enumeration values for each byte are as follows:
- None = 0 = portCC1State\_None
- Invalid = 1 = portCC1State\_Invalid
- Rp (default) = 2 = portCC1State\_RpDefault
- Rp (1.5A) = 3 = portCC1State\_Rp1p5
- Rp (3A) = 4 = portCC1State\_Rp3p0
- Rd = 5 = portCC1State\_Rd
- Ra = 6 = portCC1State\_Ra
- Managed by controller = 7 = portCC1State\_Managed
- Unknown = 8 = portCC1State\_Unknown

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getCC2State** (unsigned int \*id, struct Result \*result, const int index)

Gets the current CC2 Strapping on local and remote The state is a bit packed value where the upper byte is used to represent the remote or partner device attached to the ports resistance and the lower byte is used to represent the local or hubs resistance.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with an packed enumerated representation of the CC state. Enumeration values for each byte are as follows:
  - None = 0 = portCC2State\_None
  - Invalid = 1 = portCC2State\_Invalid
  - Rp (default) = 2 = portCC2State\_RpDefault
  - Rp (1.5A) = 3 = portCC2State\_Rp1p5
  - Rp (3A) = 4 = portCC2State\_Rp3p0
  - Rd = 5 = portCC2State\_Rd
  - Ra = 6 = portCC2State\_Ra
  - Managed by controller = 7 = portCC2State\_Managed
  - Unknown = 8 = portCC2State\_Unknown

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getSBU1Voltage** (unsigned int \*id, struct Result \*result, const int index)

Get the voltage of SBU1 for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB channel voltage in micro-volts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getSBU2Voltage** (unsigned int \*id, struct Result \*result, const int index)

Get the voltage of SBU2 for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB channel voltage in micro-volts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getCC1Voltage** (unsigned int \*id, struct Result \*result, const int index)

Get the voltage of CC1 for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB channel voltage in micro-volts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getCC2Voltage** (unsigned int \*id, struct Result \*result, const int index)

Get the voltage of CC2 for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB channel voltage in micro-volts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getCC1Current** (unsigned int \*id, struct Result \*result, const int index)

Get the current through the CC1 for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB channel current in micro-amps (1 == 1e-6A).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getCC2Current** (unsigned int \*id, struct Result \*result, const int index)

Get the current through the CC2 for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

- **value**: The USB channel current in micro-amps (1 == 1e-6A).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_getCC1AccumulatedPower** (unsigned int \*id, struct Result \*result, const int index)

Gets the CC1 Accumulated Power

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value
- **value**: The accumulated power on Vconn in milliwatt-hours.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setCC1AccumulatedPower** (unsigned int \*id, struct Result \*result, const int index, const int milliwatthours)

Sets the CC1 Accumulated Power

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **milliwatthours** – The accumulated power on Vconn to be set.

void **port\_getCC2AccumulatedPower** (unsigned int \*id, struct Result \*result, const int index)

Gets the CC2 Accumulated Power

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value
- **value**: The accumulated power on Vconn in milliwatt-hours.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **port\_setCC2AccumulatedPower** (unsigned int \*id, struct Result \*result, const int index, const int milliwatthours)

Sets the CC2 Accumulated Power

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **milliwatthours** – The accumulated power on Vconn to be set.

### 3.7.13 PowerDelivery Entity

See the [PowerDelivery Entity](#) for generic information.

#### group **PowerDeliveryEntity**

Power Delivery or PD is a power specification which allows more charging options and device behaviors within the USB interface. This Entity will allow you to directly access the vast landscape of PD.

void **powerdelivery\_getConnectionState** (unsigned int \*id, struct Result \*result, const int index)

Gets the current state of the connection in the form of an enumeration.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Pointer to be filled with the current connection state.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_getNumberOfPowerDataObjects** (unsigned int \*id, struct Result \*result, const int index, const unsigned char partner, const unsigned char powerRole)

Gets the number of Power Data Objects (PDOs) for a given partner and power role.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the number of PDOs.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink

void **powerdelivery\_getPowerDataObject** (unsigned int \*id, struct Result \*result, const int index, const unsigned char partner, const unsigned char powerRole, const unsigned char ruleIndex)

Gets the Power Data Object (PDO) for the requested partner, powerRole and index.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with the requested power rule.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.

void **powerdelivery\_setPowerDataObject** (unsigned int \*id, struct Result \*result, const int index, const unsigned char powerRole, const unsigned char ruleIndex, const unsigned int pdo)

Sets the Power Data Object (PDO) of the local partner for a given power role and index.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource

- Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.
- **pdo** – Power Data Object to be set.

void **powerdelivery\_resetPowerDataObjectToDefault** (unsigned int \*id, struct Result \*result, const int index, const unsigned char powerRole, const unsigned char ruleIndex)

Resets the Power Data Object (PDO) of the Local partner for a given power role and index.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.

void **powerdelivery\_getPowerDataObjectList** (unsigned int \*id, struct Result \*result, const int index, unsigned int \*buffer, const unsigned int bufferLength)

Gets all Power Data Objects (PDOs). Equivalent to calling PowerDeliveryClass::getPowerDataObject() on all partners, power roles, and index's.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Length that was actually received and filled. On success this value should be 28 (7 rules \* 2 partners \* 2 power roles)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled The order of which is:
  - Rules 1-7 Local Source
  - Rules 1-7 Local Sink
  - Rules 1-7 Partner Source
  - Rules 1-7 Partner Sink.
- **bufferLength** – Length of the buffer to be filled



```
void powerdelivery_getPowerDataObjectEnabled (unsigned int *id, struct Result *result, const int
                                             index, const unsigned char powerRole, const
                                             unsigned char ruleIndex)
```

Gets the enabled state of the Local Power Data Object (PDO) for a given power role and index. Enabled refers to whether the PDO will be advertised when a PD connection is made. This does not indicate the currently active rule index. This information can be found in Request Data Object (RDO).

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with enabled state.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.

```
void powerdelivery_setPowerDataObjectEnabled (unsigned int *id, struct Result *result, const int
                                             index, const unsigned char powerRole, const
                                             unsigned char ruleIndex, const unsigned char
                                             enabled)
```

Sets the enabled state of the Local Power Data Object (PDO) for a given powerRole and index. Enabled refers to whether the PDO will be advertised when a PD connection is made. This does not indicate the currently active rule index. This information can be found in Request Data Object (RDO).

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – The index of the PDO in question. Valid index are 1-7.
- **enabled** – The state to be set.

```
void powerdelivery_getPowerDataObjectEnabledList (unsigned int *id, struct Result *result, const
                                                  int index, const unsigned char powerRole)
```

Gets all Power Data Object enables for a given power role. Equivalent of calling `PowerDeliveryClass::getPowerDataObjectEnabled()` for all indexes.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with a mapped representation of the enabled PDOs for a given power role. Values align with a given rule index (bits 1-7, bit 0 is invalid)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **powerRole** – Indicates which power role of PD connection is in question.
  - Source = 1 = `powerdeliveryPowerRoleSource`
  - Sink = 2 = `powerdeliveryPowerRoleSink`

void **powerdelivery\_getRequestDataObject** (unsigned int \*id, struct Result \*result, const int index, const unsigned char partner)

Gets the current Request Data Object (RDO) for a given partner. RDOs are provided by the sinking device and exist only after a successful PD negotiation (Otherwise zero). Only one RDO can exist at a time. i.e. Either the Local or Remote partner RDO

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with the current RDO. Zero indicates the RDO is not active.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **partner** – Indicates which side of the PD connection is in question.
  - Local = 0 = `powerdeliveryPartnerLocal`
  - Remote = 1 = `powerdeliveryPartnerRemote`

void **powerdelivery\_setRequestDataObject** (unsigned int \*id, struct Result \*result, const int index, const unsigned int rdo)

Sets the current Request Data Object (RDO) for a given partner. Only the local partner can be changed. RDOs are provided by the sinking device and exist only after a successful PD negotiation (Otherwise zero). Only one RDO can exist at a time. i.e. Either the Local or Remote partner RDO

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **rdo** – Request Data Object to be set.

void **powerdelivery\_getLinkState** (unsigned int \*id, struct Result \*result, const int index)

Gets the current state of the connection in the form of a bitmask.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Pointer to be filled with the current connection state bits.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_getAttachTimeElapsed** (unsigned int \*id, struct Result \*result, const int index,  
unsigned int \*secondsAndMicroseconds, const  
unsigned int bufferLength)

Gets the length of time that the port has been in the attached state. Returned as a list of two unsigned integers, first seconds, then microseconds.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Length that was actually received and filled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **secondsAndMicroseconds** – Pointer to list of unsigned integers to fill with attach time elapsed
- **bufferLength** – Length of the buffer to be filled

void **powerdelivery\_getPowerRoleCapabilities** (unsigned int \*id, struct Result \*result, const int  
index)

Gets the power roles that may be advertised by the local partner. (CC Strapping).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with the power role
- None = 0 = pdPowerRoleCapabilities\_None
- Source = 1 = pdPowerRoleCapabilities\_Source
- Sink = 2 = pdPowerRoleCapabilities\_Sink
- Source/Sink = 3 = pdPowerRoleCapabilities\_DualRole (Dual Role Port)

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_getPowerRole** (unsigned int \*id, struct Result \*result, const int index)

Gets the power role that is currently being advertised by the local partner. (CC Strapping).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with the power role
- Disabled = 0 = powerdeliveryPowerRoleDisabled
- Source = 1 = powerdeliveryPowerRoleSource
- Sink = 2 = powerdeliveryPowerRoleSink
- Source/Sink = 3 = powerdeliveryPowerRoleSourceSink (Dual Role Port)

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_setPowerRole** (unsigned int \*id, struct Result \*result, const int index, const unsigned char powerRole)

Set the current power role to be advertised by the Local partner. (CC Strapping).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **powerRole** – Value to be applied.
  - Disabled = 0 = powerdeliveryPowerRoleDisabled
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
  - Source/Sink = 3 = powerdeliveryPowerRoleSourceSink (Dual Role Port)

void **powerdelivery\_getPowerRolePreferred** (unsigned int \*id, struct Result \*result, const int index)

Gets the preferred power role currently being advertised by the Local partner. (CC Strapping).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

- **value:** Value to be applied.
- **Disabled** = 0 = `powerdeliveryPowerRoleDisabled`
- **Source** = 1 = `powerdeliveryPowerRoleSource`
- **Sink** = 2 = `powerdeliveryPowerRoleSink`

#### Parameters

- **id** – ID assigned through “`module_createStem`”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_setPowerRolePreferred** (unsigned int \*id, struct Result \*result, const int index, const unsigned char powerRole)

Set the preferred power role to be advertised by the Local partner (CC Strapping).

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “`module_createStem`”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **powerRole** – Value to be applied.
  - **Disabled** = 0 = `powerdeliveryPowerRoleDisabled`
  - **Source** = 1 = `powerdeliveryPowerRoleSource`
  - **Sink** = 2 = `powerdeliveryPowerRoleSink`

void **powerdelivery\_getDataRoleCapabilities** (unsigned int \*id, struct Result \*result, const int index)

Gets the data roles that may be advertised by the local partner.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- **value:** Variable to be filled with the data role
- **None** = 0 = `pdDataRoleCapabilities_None`
- **DFP** = 1 = `pdDataRoleCapabilities_DFP`
- **UFP** = 2 = `pdDataRoleCapabilities_UFP`
- **DFP/UFP** = 3 = `pdDataRoleCapabilities_DualRole` (Dual Role Port)

#### Parameters

- **id** – ID assigned through “`module_createStem`”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_getCableVoltageMax** (unsigned int \*id, struct Result \*result, const int index)

Gets the maximum voltage capability reported by the e-mark of the attached cable.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with an enumerated representation of voltage.
- Unknown/Unattached (0)
- 20 Volts DC (1)
- 30 Volts DC (2)
- 40 Volts DC (3)
- 50 Volts DC (4)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_getCableCurrentMax** (unsigned int \*id, struct Result \*result, const int index)

Gets the maximum current capability report by the e-mark of the attached cable.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with an enumerated representation of current.
- Unknown/Unattached (0)
- 3 Amps (1)
- 5 Amps (2)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_getCableSpeedMax** (unsigned int \*id, struct Result \*result, const int index)

Gets the maximum data rate capability reported by the e-mark of the attached cable.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with an enumerated representation of data speed.
- Unknown/Unattached (0)
- USB 2.0 (1)
- USB 3.2 gen 1 (2)
- USB 3.2 / USB 4 gen 2 (3)

- USB 4 gen 3 (4)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_getCableType** (unsigned int \*id, struct Result \*result, const int index)

Gets the cable type reported by the e-mark of the attached cable.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with an enumerated representation of the cable type.
- Invalid, no e-mark and not Vconn powered (0)
- Passive cable with e-mark (1)
- Active cable (2)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_getCableOrientation** (unsigned int \*id, struct Result \*result, const int index)

Gets the current orientation being used for PD communication

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable filled with an enumeration of the orientation.
- Unconnected (0)
- CC1 (1)
- CC2 (2)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_request** (unsigned int \*id, struct Result \*result, const int index, const unsigned char request)

Requests an action of the Remote partner. Actions are not guaranteed to occur.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **request** – Request to be issued to the remote partner
  - pdRequestHardReset (0)
  - pdRequestSoftReset (1)
  - pdRequestDataReset (2)
  - pdRequestPowerRoleSwap (3)
  - pdRequestPowerFastRoleSwap (4)
  - pdRequestDataRoleSwap (5)
  - pdRequestVconnSwap (6)
  - pdRequestSinkGoToMinimum (7)
  - pdRequestRemoteSourcePowerDataObjects (8)
  - pdRequestRemoteSinkPowerDataObjects (9)

void **powerdelivery\_requestStatus** (unsigned int \*id, struct Result \*result, const int index)

Gets the status of the last request command sent.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with the status

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_getOverride** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enabled overrides

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Bit mapped representation of the current override configuration.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.



void **powerdelivery\_setOverride** (unsigned int \*id, struct Result \*result, const int index, const unsigned int overrides)

Sets the current enabled overrides

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **overrides** – Overrides to be set in a bit mapped representation.

void **powerdelivery\_getFlagMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char flag)

Gets the current mode of the local partner flag/advertisement. These flags are apart of the first Local Power Data Object and must be managed in order to accurately represent the system to other PD devices. This API allows overriding of that feature. Overriding may lead to unexpected behaviors.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the current mode.
- Disabled (0)
- Enabled (1)
- Auto (2) default

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **flag** – Flag/Advertisement to be modified

void **powerdelivery\_setFlagMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char flag, const unsigned char mode)

Sets how the local partner flag/advertisement is managed. These flags are apart of the first Local Power Data Object and must be managed in order to accurately represent the system to other PD devices. This API allows overriding of that feature. Overriding may lead to unexpected behaviors.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

- **flag** – Flag/Advertisement to be modified
- **mode** – Value to be applied.
  - Disabled (0)
  - Enabled (1)
  - Auto (2) default

void **powerdelivery\_getPeakCurrentConfiguration** (unsigned int \*id, struct Result \*result, const int index)

Gets the Peak Current Configuration for the Local Source. The peak current configuration refers to the allowable tolerance/overload capabilities in regards to the devices max current. This tolerance includes a maximum value and a time unit.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: An enumerated value referring to the current configuration.
- Allowable values are 0 - 4

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_setPeakCurrentConfiguration** (unsigned int \*id, struct Result \*result, const int index, const unsigned char configuration)

Sets the Peak Current Configuration for the Local Source. The peak current configuration refers to the allowable tolerance/overload capabilities in regards to the devices max current. This tolerance includes a maximum value and a time unit.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **configuration** – An enumerated value referring to the configuration to be set
  - Allowable values are 0 - 4

void **powerdelivery\_getFastRoleSwapCurrent** (unsigned int \*id, struct Result \*result, const int index)

Gets the Fast Role Swap Current The fast role swap current refers to the amount of current required by the Local Sink in order to successfully preform the swap.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

- **value**: An enumerated value referring to current swap value.
- 0A (0)
- 900mA (1)
- 1.5A (2)
- 3A (3)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **powerdelivery\_setFastRoleSwapCurrent** (unsigned int \*id, struct Result \*result, const int index, const unsigned char swapCurrent)

Sets the Fast Role Swap Current The fast role swap current refers to the amount of current required by the Local Sink in order to successfully preform the swap.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **swapCurrent** – An enumerated value referring to value to be set.
  - 0A (0)
  - 900mA (1)
  - 1.5A (2)
  - 3A (3)

void **powerdelivery\_packDataObjectAttributes** (struct Result \*result, const unsigned char partner, const unsigned char powerRole, const unsigned char ruleIndex)

Helper function for packing Data Object attributes. This value is used as a subindex for all Data Object calls with the BrainStem Protocol.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with packed values.

#### Parameters

- **result** – Output object containing result code and the requested value if successful.
- **partner** – Indicates which side of the PD connection.
  - Local = 0 = powerdeliveryPartnerLocal

- Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – Data object index.

void **powerdelivery\_unpackDataObjectAttributes** (struct Result \*result, const unsigned char attributes, unsigned char \*partner, unsigned char \*powerRole, unsigned char \*ruleIndex)

Helper function for unpacking Data Object attributes. This value is used as a subindex for all Data Object calls with the BrainStem Protocol.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **result** – Output object containing result code.
- **attributes** – Variable to be filled with packed values.
- **partner** – Indicates which side of the PD connection.
  - Local = 0 = powerdeliveryPartnerLocal
  - Remote = 1 = powerdeliveryPartnerRemote
- **powerRole** – Indicates which power role of PD connection.
  - Source = 1 = powerdeliveryPowerRoleSource
  - Sink = 2 = powerdeliveryPowerRoleSink
- **ruleIndex** – Data object index.

### 3.7.14 RCServo Entity

See the *RCServo Entity* for generic information.

#### group **RCServoEntity**

Interface to servo entities on BrainStem modules. Servo entities are built upon the digital input/output pins and therefore can also be inputs or outputs. Please see the product datasheet on the configuration limitations.

void **rcservo\_setEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enable the servo channel

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – The state to be set. 0 is disabled, 1 is enabled.

void **rcservo\_getEnable** (unsigned int \*id, struct Result \*result, const int index)

Get the enable status of the servo channel.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current enable status of the servo entity. 0 is disabled, 1 is enabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rcservo\_setPosition** (unsigned int \*id, struct Result \*result, const int index, const unsigned char position)

Set the position of the servo channel

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **position** – The position to be set. Default 64 = a 1ms pulse and 192 = a 2ms pulse.

void **rcservo\_getPosition** (unsigned int \*id, struct Result \*result, const int index)

Get the position of the servo channel

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current position of the servo channel. Default 64 = a 1ms pulse and 192 = a 2ms pulse.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rcservo\_setReverse** (unsigned int \*id, struct Result \*result, const int index, const unsigned char reverse)

Set the output to be reversed on the servo channel

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **reverse** – Reverses the value set by “setPosition”. For example, if the position is set to 64 (1ms pulse) the output will now be 192 (2ms pulse), however “getPostion” will return the set value of 64. 0 = not reversed, 1 = reversed.

void **rcservo\_getReverse** (unsigned int \*id, struct Result \*result, const int index)

Get the reverse status of the servo channel

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current reverse status of the servo entity. 0 = not reversed, 1 = reversed.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

### 3.7.15 Rail Entity

See the [Rail Entity](#) for generic information.

#### group **RailEntity**

Provides power rail functionality on certain modules. The RailClass can be used to control power to downstream devices. It has the ability to take current and voltage measurements, and depending on hardware, may have additional modes and capabilities.

void **rail\_getCurrent** (unsigned int \*id, struct Result \*result, const int index)

Get the rail current.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current in micro-amps (1 == 1e-6A).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setCurrentSetpoint** (unsigned int \*id, struct Result \*result, const int index, const int microamps)

Set the rail supply current. Rail current control capabilities vary between modules. Refer to the module datasheet for definition of the rail current capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **microamps** – The current in micro-amps (1 == 1e-6A) to be supply by the rail.

void **rail\_getCurrentSetpoint** (unsigned int \*id, struct Result \*result, const int index)

Get the rail setpoint current. Rail current control capabilities vary between modules. Refer to the module datasheet for definition of the rail current capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current in micro-amps (1 == 1e-6A) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setCurrent interface. Refer to the module datasheet to determine if this is a measured or stored value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setCurrentLimit** (unsigned int \*id, struct Result \*result, const int index, const int microamps)

Set the rail current limit setting. (Check product datasheet to see if this feature is available)

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **microamps** – The current in micro-amps (1 == 1e-6A).

void **rail\_getCurrentLimit** (unsigned int \*id, struct Result \*result, const int index)

Get the rail current limit setting. (Check product datasheet to see if this feature is available)

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

- **value**: The current in micro-amps (1 == 1e-6A).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_getTemperature** (unsigned int \*id, struct Result \*result, const int index)

Get the rail temperature.

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value
- **value**: The measured temperature associated with the rail in micro-Celsius (1 == 1e-6°C). The temperature may be associated with the module’s internal rail circuitry or an externally connected temperature sensors. Refer to the module datasheet for definition of the temperature measurement location and specific capabilities.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_getEnable** (unsigned int \*id, struct Result \*result, const int index)

Get the state of the external rail switch. Not all rails can be switched on and off. Refer to the module datasheet for capability specification of the rails.

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value
- **value**: true: enabled: connected to the supply rail voltage; false: disabled: disconnected from the supply rail voltage

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Set the state of the external rail switch. Not all rails can be switched on and off. Refer to the module datasheet for capability specification of the rails.

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.



- **index** – The index of the entity in question.
- **enable** – true: enable and connect to the supply rail voltage; false: disable and disconnect from the supply rail voltage

void **rail\_getVoltage** (unsigned int \*id, struct Result \*result, const int index)

Get the rail supply voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The voltage in micro-volts (1 == 1e-6V) currently supplied by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setVoltage interface. Refer to the module datasheet to determine if this is a measured or stored value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setVoltageSetpoint** (unsigned int \*id, struct Result \*result, const int index, const int microvolts)

Set the rail supply voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **microvolts** – The voltage in micro-volts (1 == 1e-6V) to be supplied by the rail.

void **rail\_getVoltageSetpoint** (unsigned int \*id, struct Result \*result, const int index)

Get the rail setpoint voltage. Rail voltage control capabilities vary between modules. Refer to the module datasheet for definition of the rail voltage capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The voltage in micro-volts (1 == 1e-6V) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setVoltage interface. Refer to the module datasheet to determine if this is a measured or stored value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setVoltageMinLimit** (unsigned int \*id, struct Result \*result, const int index, const int microvolts)

Set the rail voltage minimum limit setting. (Check product datasheet to see if this feature is available)

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **microvolts** – The voltage in micro-volts (1 == 1e-6V).

void **rail\_getVoltageMinLimit** (unsigned int \*id, struct Result \*result, const int index)

Get the rail voltage minimum limit setting. (Check product datasheet to see if this feature is available)

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The voltage in micro-volts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setVoltageMaxLimit** (unsigned int \*id, struct Result \*result, const int index, const int microvolts)

Set the rail voltage maximum limit setting. (Check product datasheet to see if this feature is available)

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **microvolts** – The voltage in micro-volts (1 == 1e-6V).

void **rail\_getVoltageMaxLimit** (unsigned int \*id, struct Result \*result, const int index)

Get the rail voltage maximum limit setting. (Check product datasheet to see if this feature is available)

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The voltage in micro-volts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_getPower** (unsigned int \*id, struct Result \*result, const int index)

Get the rail supply power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The power in milli-watts (1 == 1e-3W) currently supplied by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setPower interface. Refer to the module datasheet to determine if this is a measured or stored value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setPowerSetpoint** (unsigned int \*id, struct Result \*result, const int index, const int milliwatts)

Set the rail supply power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **milliwatts** – The power in milli-watts (1 == 1e-3W) to be supplied by the rail.

void **rail\_getPowerSetpoint** (unsigned int \*id, struct Result \*result, const int index)

Get the rail setpoint power. Rail power control capabilities vary between modules. Refer to the module datasheet for definition of the rail power capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The power in milli-watts (1 == 1e-3W) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setPower interface. Refer to the module datasheet to determine if this is a measured or stored value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setPowerLimit** (unsigned int \*id, struct Result \*result, const int index, const int milliwatts)

Set the rail power maximum limit setting. (Check product datasheet to see if this feature is available)

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **milliwatts** – The power in milli-watts (mW).

void **rail\_getPowerLimit** (unsigned int \*id, struct Result \*result, const int index)

Get the rail power maximum limit setting. (Check product datasheet to see if this feature is available)

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The power in milli-watts (mW).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_getResistance** (unsigned int \*id, struct Result \*result, const int index)

Get the rail load resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The resistance in milli-ohms (1 == 1e-3Ohms) currently drawn by the rail. On some modules this is a measured value so it may not exactly match what was previously set via the setResistance interface. Refer to the module datasheet to determine if this is a measured or stored value.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setResistanceSetpoint** (unsigned int \*id, struct Result \*result, const int index, const int milliohms)

Set the rail load resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **milliohms** – The resistance in milli-ohms (1 == 1e-3Ohms) to be drawn by the rail.

void **rail\_getResistanceSetpoint** (unsigned int \*id, struct Result \*result, const int index)

Get the rail setpoint resistance. Rail resistance control capabilities vary between modules. Refer to the module datasheet for definition of the rail resistance capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The resistance in milli-ohms (1 == 1e-3Ohms) the rail is trying to achieve. On some modules this is a measured value so it may not exactly match what was previously set via the setResistance interface. Refer to the module datasheet to determine if this is a measured or stored value.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setKelvinSensingEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enable or Disable kelvin sensing on the module. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – enable or disable kelvin sensing.

void **rail\_getKelvinSensingEnable** (unsigned int \*id, struct Result \*result, const int index)

Determine whether kelvin sensing is enabled or disabled. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Kelvin sensing is enabled or disabled.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.

- **index** – The index of the entity in question.

void **rail\_getKelvinSensingState** (unsigned int \*id, struct Result \*result, const int index)

Determine whether kelvin sensing has been disabled by the system. Refer to the module datasheet for definition of the rail kelvin sensing capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Kelvin sensing is enabled or disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_setOperationalMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char mode)

Set the operational mode of the rail. Refer to the module datasheet for definition of the rail operational capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **mode** – The operational mode to employ.

void **rail\_getOperationalMode** (unsigned int \*id, struct Result \*result, const int index)

Determine the current operational mode of the system. Refer to the module datasheet for definition of the rail operational mode capabilities.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current operational mode setting.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_getOperationalState** (unsigned int \*id, struct Result \*result, const int index)

Determine the current operational state of the system. Refer to the module datasheet for definition of the rail operational states.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The current operational state, hardware configuration, faults, and operating mode.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **rail\_clearFaults** (unsigned int \*id, struct Result \*result, const int index)

Clears the current fault state of the rail. Refer to the module datasheet for definition of the rail faults.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

### 3.7.16 Relay Entity

See the *Relay Entity* for generic information.

#### group **RelayEntity**

Interface to relay entities on BrainStem modules. Relay entities can be set, and the voltage read. Other capabilities may be available, please see the product datasheet.

void **relay\_setEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Set the enable/disable state.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – False or 0 = Disabled, True or 1 = Enabled

void **relay\_getEnable** (unsigned int \*id, struct Result \*result, const int index)

Get the state.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: False or 0 = Disabled, True or 1 = Enabled

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **relay\_getVoltage** (unsigned int \*id, struct Result \*result, const int index)

Get the scaled micro volt value with reference to ground.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: 32 bit signed integer (in micro Volts) based on the boards ground and reference voltages.

---

**Note:** Not all modules provide 32 bits of accuracy. Refer to the module’s datasheet to determine the analog bit depth and reference voltage.

---

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

### 3.7.17 Signal Entity

See the *Signal Entity* for generic information.

*group* **SignalEntity**

Interface to digital pins configured to produce square wave signals. This class is designed to allow for square waves at various frequencies and duty cycles. Control is defined by specifying the wave period as (T3Time) and the active portion of the cycle as (T2Time). See the entity overview section of the reference for more detail regarding the timing.

void **signal\_setEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enable/Disable the signal output.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – True to enable, false to disable



void **signal\_getEnable** (unsigned int \*id, struct Result \*result, const int index)

Get the Enable/Disable of the signal.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: True to enable, false to disable

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **signal\_setInvert** (unsigned int \*id, struct Result \*result, const int index, const unsigned char invert)

Invert the signal output.

Normal mode is High on t0 then low at t2. Inverted mode is Low at t0 on period start and high at t2.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **invert** – True to invert, false for normal mode.

void **signal\_getInvert** (unsigned int \*id, struct Result \*result, const int index)

Get the invert status the signal output.

Normal mode is High on t0 then low at t2. Inverted mode is Low at t0 on period start and high at t2.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: True to invert, false for normal mode.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **signal\_setT3Time** (unsigned int \*id, struct Result \*result, const int index, const unsigned int t3\_nsec)

Set the signal period or T3 in nanoseconds.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **t3\_nsec** – Integer not larger than unsigned 32 bit max value representing the wave period in nanoseconds.

void **signal\_getT3Time** (unsigned int \*id, struct Result \*result, const int index)

Get the signal period or T3 in nanoseconds.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Integer not larger than unsigned 32 bit max value representing the wave period in nanoseconds.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **signal\_setT2Time** (unsigned int \*id, struct Result \*result, const int index, const unsigned int t2\_nsec)

Set the signal active period or T2 in nanoseconds.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **t2\_nsec** – Integer not larger than unsigned 32 bit max value representing the wave active period in nanoseconds.

void **signal\_getT2Time** (unsigned int \*id, struct Result \*result, const int index)

Get the signal active period or T2 in nanoseconds.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Integer not larger than unsigned 32 bit max value representing the wave active period in nanoseconds.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

### 3.7.18 Store Entity

See the [Store Entity](#) for generic information.

#### *group* StoreEntity

The store provides a flat file system on modules that have storage capacity. Files are referred to as slots and they have simple zero-based numbers for access. Store slots can be used for generalized storage and commonly contain compiled reflex code (files ending in .map) or templates used by the system. Slots simply contain bytes with no expected organization but the code or use of the slot may impose a structure. Stores have fixed indices based on type. Not every module contains a store of each type. Consult the module datasheet for details on which specific stores are implemented, if any, and the capacities of implemented stores.

void **store\_getSlotState** (unsigned int \*id, struct Result \*result, const int index, const unsigned char slot)

Get slot state.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: true: enabled, false: disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **slot** – The slot number.

void **store\_loadSlot** (unsigned int \*id, struct Result \*result, const int index, const unsigned char slot, const unsigned char \*buffer, const unsigned short bufferLength)

Load the slot.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **slot** – The slot number.
- **buffer** – The data.
- **bufferLength** – The data length.

void **store\_unloadSlot** (unsigned int \*id, struct Result \*result, const int index, const unsigned char slot, unsigned char \*buffer, const unsigned int bufferLength)

Unload the slot data.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Length of data that was unloaded. Unloaded length will never be larger than dataLength.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **slot** – The slot number.
- **bufferLength** – The length of buffer buffer in bytes. This is the maximum number of bytes that should be unloaded.
- **buffer** – Byte array that the unloaded data will be placed into.

void **store\_slotEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char slot)  
Enable slot.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **slot** – The slot number.

void **store\_slotDisable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char slot)  
Disable slot.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **slot** – The slot number.

void **store\_getSlotCapacity** (unsigned int \*id, struct Result \*result, const int index, const unsigned char slot)

Get the slot capacity. Returns the Capacity of the slot, i.e. The number of bytes it can hold.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The slot capacity.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **slot** – The slot number.

void **store\_getSlotSize** (unsigned int \*id, struct Result \*result, const int index, const unsigned char slot)

Get the slot size. The slot size represents the size of the data currently filling the slot in bytes.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The slot size.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **slot** – The slot number.

void **store\_getSlotLocked** (unsigned int \*id, struct Result \*result, const int index, const unsigned char slot)

Gets the current lock state of the slot Allows for write protection on a slot.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the locked state.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **slot** – The slot number

void **store\_setSlotLocked** (unsigned int \*id, struct Result \*result, const int index, const unsigned char slot, const unsigned char lock)

Sets the locked state of the slot Allows for write protection on a slot.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **slot** – The slot number

- **lock** – state to be set.

### 3.7.19 System Entity

See the [System Entity](#) for generic information.

#### *group* **SystemEntity**

The System class provides access to the core settings, configuration and system information of the BrainStem module. The class provides access to the model type, serial number and other static information as well as the ability to set boot reflexes, toggle the user LED, as well as affect module and router addresses etc.

void **system\_getModule** (unsigned int \*id, struct Result \*result, const int index)

Get the current address the module uses on the BrainStem network.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The address the module is using on the BrainStem network.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getModuleBaseAddress** (unsigned int \*id, struct Result \*result, const int index)

Get the base address of the module. Software offsets and hardware offsets are added to this base address to produce the effective module address.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The address the module is using on the BrainStem network.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_setRouter** (unsigned int \*id, struct Result \*result, const int index, const unsigned char address)

Set the router address the module uses to communicate with the host and heartbeat to in order to establish the BrainStem network. This setting must be saved and the board reset before the setting becomes active. Warning: changing the router address may cause the module to “drop off” the BrainStem network if the new router address is not in use by a BrainStem module. Please review the BrainStem network fundamentals before modifying the router address.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **address** – The router address to be used.

void **system\_getRouter** (unsigned int \*id, struct Result \*result, const int index)

Get the router address the module uses to communicate with the host and heartbeat to in order to establish the BrainStem network.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The address.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_setHBInterval** (unsigned int \*id, struct Result \*result, const int index, const unsigned char interval)

Set the delay between heartbeat packets which are sent from the module. For link modules, these these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments Valid values are 1-255; default is 10 (256 milliseconds).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **interval** – The desired heartbeat delay.

void **system\_getHBInterval** (unsigned int \*id, struct Result \*result, const int index)

Get the delay between heartbeat packets which are sent from the module. For link modules, these these heartbeat are sent to the host. For non-link modules, these heartbeats are sent to the router address. Interval values are in 25.6 millisecond increments.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The current heartbeat delay.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.

- **index** – The index of the entity in question.

void **system\_setLED** (unsigned int \*id, struct Result \*result, const int index, const unsigned char ledOn)

Set the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **ledOn** – true: turn the LED on, false: turn LED off.

void **system\_getLED** (unsigned int \*id, struct Result \*result, const int index)

Get the system LED state. Most modules have a blue system LED. Refer to the module datasheet for details on the system LED location and color.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: true: LED on, false: LED off.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_setLEDMaxBrightness** (unsigned int \*id, struct Result \*result, const int index, const unsigned char brightness)

Sets the scaling factor for the brightness of all LEDs on the system. The brightness is set to the ratio of this value compared to 255 (maximum). The colors of each LED may be inconsistent at low brightness levels. Note that if the brightness is set to zero and the settings are saved, then the LEDs will no longer indicate whether the system is powered on. When troubleshooting, the user configuration may need to be manually reset in order to view the LEDs again.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **brightness** – Brightness value relative to 255



void **system\_getLEDMaxBrightness** (unsigned int \*id, struct Result \*result, const int index)

Gets the scaling factor for the brightness of all LEDs on the system. The brightness is set to the ratio of this value compared to 255 (maximum).

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Brightness value relative to 255

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_setBootSlot** (unsigned int \*id, struct Result \*result, const int index, const unsigned char slot)

Set a store slot to be mapped when the module boots. The boot slot will be mapped after the module boots from powers up, receives a reset signal on its reset input, or is issued a software reset command. Set the slot to 255 to disable mapping on boot.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **slot** – The slot number in aSTORE\_INTERNAL to be marked as a boot slot.

void **system\_getBootSlot** (unsigned int \*id, struct Result \*result, const int index)

Get the store slot which is mapped when the module boots.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The slot number in aSTORE\_INTERNAL that is mapped after the module boots.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getVersion** (unsigned int \*id, struct Result \*result, const int index)

Get the modules firmware version number. The version number is packed into the return value. Utility functions in the aVersion module can unpack the major, minor and patch numbers from the version number which looks like M.m.p.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

- **value:** The build version date code.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getBuild** (unsigned int \*id, struct Result \*result, const int index)

Get the modules firmware build number The build number is a unique hash assigned to a specific firmware.

The result parameter will output the following fields:

- **error:** [Common EntityClass Return Values](#) common entity return value
- **value:** Variable to be filled with build.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getModel** (unsigned int \*id, struct Result \*result, const int index)

Get the module’s model enumeration. A subset of the possible model enumerations is defined in BrainStem.h under “BrainStem

model codes”. Other codes are be used by Acroname for proprietary module types.

The result parameter will output the following fields:

- **error:** [Common EntityClass Return Values](#) common entity return value
- **value:** The module’s model enumeration.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getHardwareVersion** (unsigned int \*id, struct Result \*result, const int index)

Get the module’s hardware revision information. The content of the hardware version is specific to each Acroname product and used to indicate behavioral differences between product revisions. The codes are not well defined and may change at any time.

The result parameter will output the following fields:

- **error:** [Common EntityClass Return Values](#) common entity return value
- **value:** The module’s hardware version information.

#### Parameters

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getSerialNumber** (unsigned int \*id, struct Result \*result, const int index)

Get the module's serial number. The serial number is a unique 32 bit integer which is usually communicated in hexadecimal format.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The module's serial number.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_save** (unsigned int \*id, struct Result \*result, const int index)

Save the system operating parameters to the persistent module flash memory. Operating parameters stored in the system flash will be loaded after the module reboots. Operating parameters include: heart-beat interval, module address, module router address.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

void **system\_reset** (unsigned int \*id, struct Result \*result, const int index)

Reset the system. A return value of aErrTimeout indicates a successful reset, as the system resets immediately, which tears down the USB-link immediately, thus preventing an affirmative response.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

void **system\_logEvents** (unsigned int \*id, struct Result \*result, const int index)

Saves system log events to a slot defined by the module (usually ram slot 0).

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

void **system\_getUptime** (unsigned int \*id, struct Result \*result, const int index)

Get the module’s accumulated uptime in minutes

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The module’s accumulated uptime in minutes.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getTemperature** (unsigned int \*id, struct Result \*result, const int index)

Get the module’s current temperature in micro-C

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The module’s system temperature in micro-C

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getMinimumTemperature** (unsigned int \*id, struct Result \*result, const int index)

Get the module’s minimum temperature ever recorded in micro-C (uC). This value will persists through a power cycle.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The module’s minimum system temperature in micro-C

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getMaximumTemperature** (unsigned int \*id, struct Result \*result, const int index)

Get the module's maximum temperature ever recorded in micro-C (uC). This value will persist through a power cycle.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The module's maximum system temperature in micro-C

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getInputVoltage** (unsigned int \*id, struct Result \*result, const int index)

Get the module's input voltage.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The module's input voltage reported in microvolts.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getInputCurrent** (unsigned int \*id, struct Result \*result, const int index)

Get the module's input current.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The module's input current reported in microamps.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getModuleHardwareOffset** (unsigned int \*id, struct Result \*result, const int index)

Get the module hardware address offset. This is added to the base address to allow the module address to be configured in hardware. Not all modules support the hardware module address offset. Refer to the module datasheet.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The module address offset.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_setModuleSoftwareOffset** (unsigned int \*id, struct Result \*result, const int index, const unsigned char address)

Set the software address offset. This software offset is added to the module base address, and potentially a module hardware address to produce the final module address. You must save the system settings and restart for this to take effect. Please review the BrainStem network fundamentals before modifying the module address.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **address** – The address for the module. Value must be even from 0-254.

void **system\_getModuleSoftwareOffset** (unsigned int \*id, struct Result \*result, const int index)

Get the software address offset. This software offset is added to the module base address, and potentially a module hardware address to produce the final module address. You must save the system settings and restart for this to take effect. Please review the BrainStem network fundamentals before modifying the module address.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The address for the module. Value must be even from 0-254.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getRouterAddressSetting** (unsigned int \*id, struct Result \*result, const int index)

Get the router address system setting. This setting may not be the same as the current router address if the router setting was set and saved but no reset has occurred. Please review the BrainStem network fundamentals before modifying the module address.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The address for the module. Value must be even from 0-254.

**Parameters**

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_routeToMe** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enable)

Enables/Disables the route to me function. This function allows for easy networking of BrainStem modules. Enabling (1) this function will send an I2C General Call to all devices on the network and request that they change their router address to the of the calling device. Disabling (0) will cause all devices on the BrainStem network to revert to their default address.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enable** – Enable or disable of the route to me function 1 = enable.

void **system\_getPowerLimit** (unsigned int \*id, struct Result \*result, const int index)

Reports the amount of power the system has access to and thus how much power can be budgeted to sinking devices.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The available power in milli-Watts (mW, 1 t)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getPowerLimitMax** (unsigned int \*id, struct Result \*result, const int index)

Gets the user defined maximum power limit for the system. Provides mechanism for defining an unregulated power supplies capability.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Variable to be filled with the power limit in milli-Watts (mW)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_setPowerLimitMax** (unsigned int \*id, struct Result \*result, const int index, const unsigned int power)

Sets a user defined maximum power limit for the system. Provides mechanism for defining an unregulated power supplies capability.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **power** – Limit in milli-Watts (mW) to be set.

void **system\_getPowerLimitState** (unsigned int \*id, struct Result \*result, const int index)

Gets a bit mapped representation of the factors contributing to the power limit. Active limit can be found through PowerDeliverClass::getPowerLimit().

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the state.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getUnregulatedVoltage** (unsigned int \*id, struct Result \*result, const int index)

Gets the voltage present at the unregulated port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the voltage in micro-Volts (uV).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getUnregulatedCurrent** (unsigned int \*id, struct Result \*result, const int index)

Gets the current passing through the unregulated port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the current in micro-Amps (uA).



**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getInputPowerSource** (unsigned int \*id, struct Result \*result, const int index)

Provides the source of the current power source in use.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with enumerated representation of the source.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getInputPowerBehavior** (unsigned int \*id, struct Result \*result, const int index)

Gets the systems input power behavior. This behavior refers to where the device sources its power from and what happens if that power source goes away.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with an enumerated value representing behavior.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_setInputPowerBehavior** (unsigned int \*id, struct Result \*result, const int index, const unsigned char behavior)

Sets the systems input power behavior. This behavior refers to where the device sources its power from and what happens if that power source goes away.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **behavior** – An enumerated representation of behavior to be set.

void **system\_getInputPowerBehaviorConfig** (unsigned int \*id, struct Result \*result, const int index, unsigned int \*buffer, const unsigned int bufferLength)

Gets the input power behavior configuration. Certain behaviors use a list of ports to determine priority when budgeting power.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Length that was actually received and filled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled

void **system\_setInputPowerBehaviorConfig** (unsigned int \*id, struct Result \*result, const int index, const unsigned int \*buffer, const unsigned int bufferLength)

Sets the input power behavior configuration. Certain behaviors use a list of ports to determine priority when budgeting power.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

void **system\_getName** (unsigned int \*id, struct Result \*result, const int index, unsigned char \*buffer, const unsigned int bufferLength)

Gets a user defined name of the device. Helpful for identifying ports/devices in a static environment.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Length that was actually received and filled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled

- **bufferLength** – Length of the buffer to be filed

void **system\_setName** (unsigned int \*id, struct Result \*result, const int index, const unsigned char \*buffer, const unsigned int bufferLength)

Sets a user defined name for the device. Helpful for identification when multiple devices of the same type are present in a system.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

void **system\_resetDeviceToFactoryDefaults** (unsigned int \*id, struct Result \*result, const int index)

Resets the device to it factory default configuration.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

void **system\_getLinkInterface** (unsigned int \*id, struct Result \*result, const int index)

Gets the link interface configuration. This refers to which interface is being used for control by the device.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with an enumerated value representing interface.
- 0 = Auto= systemLinkAuto
- 1 = Control Port = systemLinkUSBControl
- 2 = Hub Upstream Port = systemLinkUSBHub

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_setLinkInterface** (unsigned int \*id, struct Result \*result, const int index, const unsigned char linkInterface)

Sets the link interface configuration. This refers to which interface is being used for control by the device.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **linkInterface** – An enumerated representation of interface to be set.
  - 0 = Auto= systemLinkAuto
  - 1 = Control Port = systemLinkUSBControl
  - 2 = Hub Upstream Port = systemLinkUSBHub

void **system\_getErrors** (unsigned int \*id, struct Result \*result, const int index)

Gets any system level errors. Calling this function will clear the current errors. If the error persists it will be set again.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Bit mapped field representing the devices errors

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **system\_getProtocolFeatures** (unsigned int \*id, struct Result \*result, const int index)

Gets the firmware protocol features

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Value representing the firmware protocol features

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

### 3.7.20 Temperature Entity

See the [Temperature Entity](#) for generic information.

#### *group* TemperatureEntity

This entity is only available on certain modules, and provides a temperature reading in microcelsius.

void **temperature\_getValue** (unsigned int \*id, struct Result \*result, const int index)

Get the modules temperature in micro-C

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The temperature in micro-Celsius (1 == 1e-6C).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **temperature\_getValueMin** (unsigned int \*id, struct Result \*result, const int index)

Get the module’s minimum temperature in micro-C since the last power cycle.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The module’s minimum temperature in micro-C

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **temperature\_getValueMax** (unsigned int \*id, struct Result \*result, const int index)

Get the module’s maximum temperature in micro-C since the last power cycle.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The module’s maximum temperature in micro-C

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

### 3.7.21 Timer Entity

See the *Timer Entity* for generic information.

#### *group* **TimerEntity**

The Timer Class provides access to a simple scheduler. The timer can set to fire only once, or to repeat at a certain interval. Additionally, a timer entity can execute custom Reflex routines upon firing.

void **timer\_getExpiration** (unsigned int \*id, struct Result \*result, const int index)

Get the currently set expiration time in microseconds. This is not a “live” timer. That is, it shows the expiration time originally set with `setExpiration`; it does not “tick down” to show the time remaining before expiration.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The timer expiration duration in microseconds.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **timer\_setExpiration** (unsigned int \*id, struct Result \*result, const int index, const unsigned int usecDuration)

Set the expiration time for the timer entity. When the timer expires, it will fire the associated `timer[index]()` reflex.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **usecDuration** – The duration before timer expiration in microseconds.

void **timer\_getMode** (unsigned int \*id, struct Result \*result, const int index)

Get the mode of the timer which is either single or repeat mode.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The mode of the time. `aTIMER_MODE_REPEAT` or `aTIMER_MODE_SINGLE`.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **timer\_setMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char mode)

Set the mode of the timer which is either single or repeat mode.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **mode** – The mode of the timer.      aTIMER\_MODE\_REPEAT   or  
aTIMER\_MODE\_SINGLE.

### 3.7.22 UART Entity

See the [UART Entity](#) for generic information.

#### group **UARTEntity**

A UART is a “Universal Asynchronous Receiver/Transmitter. Many times referred to as a COM (communication), Serial, or TTY (teletypewriter) port. The UART Class allows the enabling and disabling of the UART data lines.

void **uart\_setEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char enabled)

Enable the UART channel.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enabled** – true: enabled, false: disabled.

void **uart\_getEnable** (unsigned int \*id, struct Result \*result, const int index)

Get the enabled state of the uart.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: true: enabled, false: disabled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **uart\_setBaudRate** (unsigned int \*id, struct Result \*result, const int index, const unsigned int rate)

Set the UART baud rate. If zero, automatic baud rate selection is used.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **rate** – baud rate.

void **uart\_getBaudRate** (unsigned int \*id, struct Result \*result, const int index)

Get the UART baud rate. If zero, automatic baud rate selection is used.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Pointer variable to be filled with baud rate.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **uart\_setProtocol** (unsigned int \*id, struct Result \*result, const int index, const unsigned char protocol)

Set the UART protocol.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **protocol** – An enumeration of serial protocols.

void **uart\_getProtocol** (unsigned int \*id, struct Result \*result, const int index)

Get the UART protocol.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Pointer to where result is placed.

#### Parameters

- **id** – ID assigned through “module\_createStem”



- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **uart\_setLinkChannel** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Set the index of another UART Entity that should be linked to this UART.

If set to the index of this entity, the channel will not be linked. If set to the index of another UART entity, data will be sent between the two UART entities with no additional processing.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – Index of the UART Entity to link

void **uart\_getLinkChannel** (unsigned int \*id, struct Result \*result, const int index)

Gets the index of the UART Entity that this entity is linked to.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Pointer to where result is placed.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **uart\_setStopBits** (unsigned int \*id, struct Result \*result, const int index, const unsigned char stopBits)

Set the UART stop bit configuration

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **stopBits** – Stop Bits of UART Channel. Allowed options:
  - uartStopBits\_1\_Value
  - uartStopBits\_1p5\_Value
  - uartStopBits\_2\_Value

void **uart\_getStopBits** (unsigned int \*id, struct Result \*result, const int index)

Set the UART stop bit configuration

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Pointer to where result is placed. Possible values:
- uartStopBits\_1\_Value
- uartStopBits\_1p5\_Value
- uartStopBits\_2\_Value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **uart\_setParity** (unsigned int \*id, struct Result \*result, const int index, const unsigned char parity)

Set the UART parity.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **parity** – Parity of UART Channel. Allowed options:
  - uartParity\_None\_Value
  - uartParity\_Odd\_Value
  - uartParity\_Even\_Value
  - uartParity\_Mark\_Value
  - uartParity\_Space\_Value

void **uart\_getParity** (unsigned int \*id, struct Result \*result, const int index)

Get the UART parity.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Pointer variable to be filled with value. Possible values:
- uartParity\_None\_Value
- uartParity\_Odd\_Value
- uartParity\_Even\_Value
- uartParity\_Mark\_Value

- `uartParity_Space_Value`

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **uart\_setDataBits** (unsigned int \*id, struct Result \*result, const int index, const unsigned char dataBits)

Set the number of bits per character

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **dataBits** – Data Bits of UART Channel.

void **uart\_getDataBits** (unsigned int \*id, struct Result \*result, const int index)

Get the number of bits per character

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Pointer to where result is placed.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **uart\_setFlowControl** (unsigned int \*id, struct Result \*result, const int index, const unsigned char flowControl)

Set the UART flow control configuration

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **flowControl** – Flow Control of UART Channel as a bitmask. Allowed bits:
  - `uartFlowControl_RTS_CTS_Bit`

- `uartFlowControl_DSR_DTR_Bit`
- `uartFlowControl_XON_XOFF_Bit`

void **uart\_getFlowControl** (unsigned int \*id, struct Result \*result, const int index)

Set the UART flow control configuration

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Pointer to bitmask where result is placed. Possible bits:
- `uartFlowControl_RTS_CTS_Bit`
- `uartFlowControl_DSR_DTR_Bit`
- `uartFlowControl_XON_XOFF_Bit`

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **uart\_getCapableProtocols** (unsigned int \*id, struct Result \*result, const int index)

Returns a bitmask containing a list of protocols that this UART entity is allowed to select. This does not guarantee that selecting a protocol with “setProtocol” will have an available resource.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Bitmask containing list of protocols that may be selected. The value of the `uartProtocol` is mapped to the bit index (e.g. `uartProtocol_Undefined` is bit 0, `uartProtocol_ExtronResponder_Value` is bit 1, etc.)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **uart\_getAvailableProtocols** (unsigned int \*id, struct Result \*result, const int index)

Returns a bitmask containing a list of protocols that this UART entity is capable of selecting, and has an available protocol resource to assign.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Bitmask containing list of protocols that are available to select. The value of the `uartProtocol` is mapped to the bit index (e.g. `uartProtocol_Undefined` is bit 0, `uartProtocol_ExtronResponder_Value` is bit 1, etc.)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.

- **index** – The index of the entity in question.

### 3.7.23 USB Entity

See the [USB Entity](#) for generic information.

#### group **USBEntity**

The USB class provides methods to interact with a USB hub and USB switches. Different USB hub products have varying support; check the datasheet to understand the capabilities of each product.

void **usb\_setPortEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Enable both power and data lines for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setPortDisable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Disable both power and data lines for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setDataEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Enable the only the data lines for a port without changing the state of the power line.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.

- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setDataDisable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Disable only the data lines for a port without changing the state of the power line.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setHiSpeedDataEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Enable the only the data lines for a port without changing the state of the power line, Hi-Speed (2.0) only.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setHiSpeedDataDisable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Disable only the data lines for a port without changing the state of the power line, Hi- Speed (2.0) only.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setSuperSpeedDataEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Enable the only the data lines for a port without changing the state of the power line, SuperSpeed (3.0) only.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setSuperSpeedDataDisable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Disable only the data lines for a port without changing the state of the power line, SuperSpeed (3.0) only.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setPowerEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Enable only the power line for a port without changing the state of the data lines.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setPowerDisable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Disable only the power line for a port without changing the state of the data lines.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_getPortCurrent** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the current through the power line for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB channel current in micro-amps (1 == 1e-6A).

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_getPortVoltage** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the voltage on the power line for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB channel voltage in microvolts (1 == 1e-6V).

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_getHubMode** (unsigned int \*id, struct Result \*result, const int index)

Get a bit mapped representation of the hubs mode; see the product datasheet for mode mapping and meaning.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB hub mode.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.



- **index** – The index of the entity in question.

void **usb\_setHubMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned int mode)

Set a bit mapped hub state; see the product datasheet for state mapping and meaning.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **mode** – The USB hub mode.

void **usb\_clearPortErrorStatus** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Clear the error status for the given port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The port to clear error status for.

void **usb\_getUpstreamMode** (unsigned int \*id, struct Result \*result, const int index)

Get the upstream switch mode for the USB upstream ports. Returns auto, port 0 or port 1.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The Upstream port mode.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usb\_setUpstreamMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char mode)

Set the upstream switch mode for the USB upstream ports. Values are usbUpstreamModeAuto, usbUpstreamModePort0, usbUpstreamModePort1, and usbUpstreamModeNone.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **mode** – The Upstream port mode.

void **usb\_getUpstreamState** (unsigned int \*id, struct Result \*result, const int index)

Get the upstream switch state for the USB upstream ports. Returns 2 if no ports plugged in, 0 if the mode is set correctly and a cable is plugged into port 0, and 1 if the mode is set correctly and a cable is plugged into port 1.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The Upstream port state.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usb\_setEnumerationDelay** (unsigned int \*id, struct Result \*result, const int index, const unsigned int ms\_delay)

Set the inter-port enumeration delay in milliseconds.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **ms\_delay** – Millisecond delay in 100mS increments (100, 200, 300 etc.)

void **usb\_getEnumerationDelay** (unsigned int \*id, struct Result \*result, const int index)

Get the inter-port enumeration delay in milliseconds.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Millisecond delay in 100mS increments (100, 200, 300 etc.)

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usb\_setPortCurrentLimit** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel, const unsigned int microamps)

Set the current limit for the port. If the set limit is not achievable, devices will round down to the nearest available current limit setting. This setting can be saved with a `stem.system.save()` call.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – USB downstream channel to limit.
- **microamps** – The current limit setting.

void **usb\_getPortCurrentLimit** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the current limit for the port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current limit setting.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – USB downstream channel to limit.

void **usb\_setPortMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel, const unsigned int mode)

Set the mode for the Port. The mode is a bitmapped representation of the capabilities of the usb port. These capabilities change for each of the BrainStem devices which implement the usb entity. See your device reference page for a complete list of capabilities. Some devices use a common bit mapping for port mode, as sub-definitions of `usbPortMode`.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – USB downstream channel to set the mode on.
- **mode** – The port mode setting as packed bit field.

void **usb\_getPortMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the current mode for the Port. The mode is a bitmapped representation of the capabilities of the usb port. These capabilities change for each of the BrainStem devices which implement the usb entity. See your device reference page for a complete list of capabilities. Some devices use a common bit mapping for port mode, as sub-definitions of usbPortMode.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – USB downstream channel.

void **usb\_getPortState** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the current State for the Port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – USB downstream channel.

void **usb\_getPortError** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the current error for the Port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The port mode setting. Mode will be filled with the current setting. Mode bits that are not used will be marked as don't care.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

- **channel** – USB downstream channel.

void **usb\_setUpstreamBoostMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char setting)

Set the upstream boost mode. Boost mode increases the drive strength of the USB data signals (power signals are not changed). Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through “pogo” pins. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost. This setting is not applied until a `stem.system.save()` call and power cycle of the hub. Setting is then persistent until changed or the hub is reset. After reset, default value of 0% boost is restored.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **setting** – Upstream boost setting 0, 1, 2, or 3.

void **usb\_setDownstreamBoostMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char setting)

Set the downstream boost mode. Boost mode increases the drive strength of the USB data signals (power signals are not changed). Boosting the data signal strength may help to overcome connectivity issues when using long cables or connecting through “pogo” pins. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost. This setting is not applied until a `stem.system.save()` call and power cycle of the hub. Setting is then persistent until changed or the hub is reset. After reset, default value of 0% boost is restored.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **setting** – Downstream boost setting 0, 1, 2, or 3.

void **usb\_getUpstreamBoostMode** (unsigned int \*id, struct Result \*result, const int index)

Get the upstream boost mode. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current Upstream boost setting 0, 1, 2, or 3.

#### Parameters

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usb\_getDownstreamBoostMode** (unsigned int \*id, struct Result \*result, const int index)

Get the downstream boost mode. Possible modes are 0 - no boost, 1 - 4% boost, 2 - 8% boost, 3 - 12% boost.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current Downstream boost setting 0, 1, 2, or 3.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usb\_getDownstreamDataSpeed** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the current data transfer speed for the downstream port. The data speed can be Hi-Speed (2.0) or SuperSpeed (3.0) depending on what the downstream device attached is using

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Filled with the current port data speed
- N/A: usbDownstreamDataSpeed\_na = 0
- Hi Speed: usbDownstreamDataSpeed\_hs = 1
- SuperSpeed: usbDownstreamDataSpeed\_ss = 2

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – USB downstream channel to check.

void **usb\_setConnectMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel, const unsigned char mode)

Sets the connect mode of the switch.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.

- **channel** – The USB sub channel.
- **mode** – The connect mode
  - usbManualConnect = 0
  - usbAutoConnect = 1

void **usb\_getConnectMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Gets the connect mode of the switch.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: The current connect mode

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setCC1Enable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel, const unsigned char enable)

Set Enable/Disable on the CC1 line.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – USB channel.
- **enable** – State to be set
  - Disabled: 0
  - Enabled: 1

void **usb\_getCC1Enable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get Enable/Disable on the CC1 line.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: State to be filled
- Disabled: 0
- Enabled: 1

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – USB channel.

void **usb\_setCC2Enable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel, const unsigned char enable)

Set Enable/Disable on the CC2 line.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – USB channel.
- **enable** – State to be filled
  - Disabled: 0
  - Enabled: 1

void **usb\_getCC2Enable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get Enable/Disable on the CC2 line.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: State to be filled
- Disabled: 0
- Enabled: 1

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – USB channel.

void **usb\_getCC1Current** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the current through the CC1 for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value



- **value**: The USB channel current in micro-amps (1 == 1e-6A).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_getCC2Current** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the current through the CC2 for a port.

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value
- **value**: The USB channel current in micro-amps (1 == 1e-6A).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_getCC1Voltage** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the voltage of CC1 for a port.

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value
- **value**: The USB channel voltage in micro-volts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_getCC2Voltage** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the voltage of CC2 for a port.

The result parameter will output the following fields:

- **error**: [Common EntityClass Return Values](#) common entity return value
- **value**: The USB channel voltage in micro-volts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setSBUEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel, const unsigned char enable)

Enable/Disable only the SBU1/2 based on the configuration of the usbPortMode settings.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.
- **enable** – The state to be set
  - Disabled: 0
  - Enabled: 1

void **usb\_getSBUEnable** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the Enable/Disable status of the SBU

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The enable/disable status of the SBU

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setCableFlip** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel, const unsigned char enable)

Set Cable flip. This will flip SBU, CC and SS data lines.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”

- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.
- **enable** – The state to be set The state to be set
  - Disabled: 0
  - Enabled: 1

void **usb\_getCableFlip** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get Cable flip setting.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The enable/disable status of cable flip.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_setAltModeConfig** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel, const unsigned int configuration)

Set USB Alt Mode Configuration.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel
- **configuration** – The USB configuration to be set for the given channel.

void **usb\_getAltModeConfig** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get USB Alt Mode Configuration.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB configuration for the given channel.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel

void **usb\_getSBU1Voltage** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the voltage of SBU1 for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB channel voltage in micro-volts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

void **usb\_getSBU2Voltage** (unsigned int \*id, struct Result \*result, const int index, const unsigned char channel)

Get the voltage of SBU2 for a port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The USB channel voltage in micro-volts (1 == 1e-6V).

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **channel** – The USB sub channel.

### 3.7.24 USBSystem Entity

See the [USBSystem Entity](#) for generic information.

#### group **USBSystemEntity**

The USBSystem class provides high level control of the lower level Port Class.

void **usbssystem\_getUpstream** (unsigned int \*id, struct Result \*result, const int index)

Gets the upstream port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

- **value**: The current upstream port.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_setUpstream** (unsigned int \*id, struct Result \*result, const int index, const unsigned char port)

Sets the upstream port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **port** – The upstream port to set.

void **usbsystem\_getEnumerationDelay** (unsigned int \*id, struct Result \*result, const int index)

Gets the inter-port enumeration delay in milliseconds. Delay is applied upon hub enumeration.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- **value**: the current inter-port delay in milliseconds.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_setEnumerationDelay** (unsigned int \*id, struct Result \*result, const int index, const unsigned int msDelay)

Sets the inter-port enumeration delay in milliseconds. Delay is applied upon hub enumeration.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **msDelay** – The delay in milliseconds to be applied between port enables

void **usbsystem\_getDataRoleList** (unsigned int \*id, struct Result \*result, const int index)

Gets the data role of all ports with a single call Equivalent to calling PortClass::getDataRole() on each individual port.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: A bit packed representation of the data role for all ports.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_getEnabledList** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enabled status of all ports with a single call. Equivalent to calling PortClass::setEnabled() on each port.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Bit packed representation of the enabled status for all ports.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_setEnabledList** (unsigned int \*id, struct Result \*result, const int index, const unsigned int enabledList)

Sets the enabled status of all ports with a single call. Equivalent to calling PortClass::setEnabled() on each port.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **enabledList** – Bit packed representation of the enabled status for all ports to be applied.

void **usbsystem\_getModeList** (unsigned int \*id, struct Result \*result, const int index, unsigned int \*buffer, const unsigned int bufferLength)

Gets the current mode of all ports with a single call. Equivalent to calling PortClass::getMode() on each port.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Length that was actually received and filled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filed

void **usbsystem\_setModeList** (unsigned int \*id, struct Result \*result, const int index, const unsigned int \*buffer, const unsigned int bufferLength)

Sets the mode of all ports with a single call. Equivalent to calling PortClass::setMode() on each port

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

void **usbsystem\_getStateList** (unsigned int \*id, struct Result \*result, const int index, unsigned int \*buffer, const unsigned int bufferLength)

Gets the state for all ports with a single call. Equivalent to calling PortClass::getState() on each port.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Length that was actually received and filled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filed

void **usbsystem\_getPowerBehavior** (unsigned int \*id, struct Result \*result, const int index)

Gets the behavior of the power manager. The power manager is responsible for budgeting the power of the system, i.e. What happens when requested power greater than available power.

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

- **value**: Variable to be filled with an enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_setPowerBehavior** (unsigned int \*id, struct Result \*result, const int index, const unsigned char behavior)

Sets the behavior of how available power is managed, i.e. What happens when requested power is greater than available power.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **behavior** – An enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

void **usbsystem\_getPowerBehaviorConfig** (unsigned int \*id, struct Result \*result, const int index, unsigned int \*buffer, const unsigned int bufferLength)

Gets the current power behavior configuration. Certain power behaviors use a list of ports to determine priority when budgeting power.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Length that was actually received and filled.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filled

void **usbsystem\_setPowerBehaviorConfig** (unsigned int \*id, struct Result \*result, const int index, const unsigned int \*buffer, const unsigned int bufferLength)

Sets the current power behavior configuration. Certain power behaviors use a list of ports to determine priority when budgeting power.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value



**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

void **usbsystem\_getDataRoleBehavior** (unsigned int \*id, struct Result \*result, const int index)

Gets the behavior of how upstream and downstream ports are determined, i.e. How do you manage requests for data role swaps and new upstream connections.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with an enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_setDataRoleBehavior** (unsigned int \*id, struct Result \*result, const int index, const unsigned char behavior)

Sets the behavior of how upstream and downstream ports are determined, i.e. How do you manage requests for data role swaps and new upstream connections.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **behavior** – An enumerated representation of behavior. Available behaviors are product specific. See the reference documentation.

void **usbsystem\_getDataRoleBehaviorConfig** (unsigned int \*id, struct Result \*result, const int index, unsigned int \*buffer, const unsigned int bufferLength)

Gets the current data role behavior configuration. Certain data role behaviors use a list of ports to determine priority host priority.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Length that was actually received and filled.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.
- **buffer** – pointer to the start of a c style buffer to be filled
- **bufferLength** – Length of the buffer to be filed

void **usbsystem\_setDataRoleBehaviorConfig** (unsigned int \*id, struct Result \*result, const int index, const unsigned int \*buffer, const unsigned int bufferLength)

Sets the current data role behavior configuration. Certain data role behaviors use a list of ports to determine host priority.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **buffer** – Pointer to the start of a c style buffer to be transferred.
- **bufferLength** – Length of the buffer to be transferred.

void **usbsystem\_getSelectorMode** (unsigned int \*id, struct Result \*result, const int index)

Gets the current mode of the selector input. This mode determines what happens and in what order when the external selector input is used.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Variable to be filled with the selector mode

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_setSelectorMode** (unsigned int \*id, struct Result \*result, const int index, const unsigned char mode)

Sets the current mode of the selector input. This mode determines what happens and in what order when the external selector input is used.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.

- **index** – The index of the entity in question.
- **mode** – Mode to be set.

void **usbsystem\_getUpstreamHS** (unsigned int \*id, struct Result \*result, const int index)

Gets the USB HighSpeed upstream port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current upstream port.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_setUpstreamHS** (unsigned int \*id, struct Result \*result, const int index, const unsigned char port)

Sets the USB HighSpeed upstream port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **port** – The upstream port to set.

void **usbsystem\_getUpstreamSS** (unsigned int \*id, struct Result \*result, const int index)

Gets the USB SuperSpeed upstream port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: The current upstream port.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_setUpstreamSS** (unsigned int \*id, struct Result \*result, const int index, const unsigned char port)

Sets the USB SuperSpeed upstream port.

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **port** – The upstream port to set.

void **usbsystem\_getOverride** (unsigned int \*id, struct Result \*result, const int index)

Gets the current enabled overrides

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value
- value: Bit mapped representation of the current override configuration.

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_setOverride** (unsigned int \*id, struct Result \*result, const int index, const unsigned int overrides)

Sets the current enabled overrides

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **overrides** – Overrides to be set in a bit mapped representation.

void **usbsystem\_setDataHSMaxDatarate** (unsigned int \*id, struct Result \*result, const int index, const unsigned int datarate)

Sets the USB HighSpeed Max datarate

The result parameter will output the following fields:

- error: [Common EntityClass Return Values](#) common entity return value

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **datarate** – Maximum datarate for the USB HighSpeed signals.

void **usbsystem\_getDataHSMaxDatarate** (unsigned int \*id, struct Result \*result, const int index)

Gets the USB HighSpeed Max datarate

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Current maximum datarate for the USB HighSpeed signals.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

void **usbsystem\_setDataSSMaxDatarate** (unsigned int \*id, struct Result \*result, const int index, const unsigned int datarate)

Sets the USB SuperSpeed Max datarate

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code.
- **index** – The index of the entity in question.
- **datarate** – Maximum datarate for the USB SuperSpeed signals.

void **usbsystem\_getDataSSMaxDatarate** (unsigned int \*id, struct Result \*result, const int index)

Gets the USB SuperSpeed Max datarate

The result parameter will output the following fields:

- error: *Common EntityClass Return Values* common entity return value
- value: Current maximum datarate for the USB SuperSpeed signals.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Output object containing result code and the requested value if successful.
- **index** – The index of the entity in question.

### 3.7.25 Module Entity

#### *group* **ModuleEntity**

The Module Entity provides a generic interface to a BrainStem hardware module. The Module Class is the parent class for all BrainStem modules. Each module inherits from Module and implements its hardware specific features.

void **module\_createStem** (unsigned int \*id, struct Result \*result, unsigned char moduleAddress, bool autoNetworking, unsigned char model)

Creates a brainstem object that the library will manage internally and creates a unique identifier that will be used for other function calls in this library.

#### **Parameters**

- **id** – Unique identifier for the internally created stem.
- **result** – object, containing NO\_ERROR or a non zero Error code.

void **module\_disconnectAndDestroyStem** (unsigned int \*id, struct Result \*result)

Disconnects from device defined by the ID and will destroy any internal memory associated with the Device.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – object, containing NO\_ERROR or a non zero Error code.

void **module\_discoverAndConnect** (unsigned int \*id, struct Result \*result, int transport, unsigned int serialNumber)

Finds and connects to the first device found on the given transport. If a serial number was provided when module\_createStem was called then it will only connect to that specific id.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – object, containing NO\_ERROR or a non zero Error code.
- **transport** – Defines what connection method should be searched for BrainStem devices. (i.e. USB, TCPIP, etc.)

void **module\_sDiscover** (unsigned int \*id, struct Result \*result, struct [linkSpec\\_CCA](#) \*stemList, int listLength, unsigned int networkInterface, int transport)

Discovers all of the BrainStem devices on a given transport. The return list is filled with device specifiers which contains information about the device.

#### **Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – object, containing NO\_ERROR or a non zero Error code.
- **stemList** – List of device specifiers for each of the discovered devices
- **listLength** – Indicates how long the list is.
- **networkInterface** – Defines the network interface to use when multiple are present. A value of 0 or LOCALHOST\_IP\_ADDRESS will result in local searches only. Values other than this will have firewall implications.

- **transport** – Defines what connection method should be searched for BrainStem devices. (i.e. USB, TCPIP, etc.)

void **module\_disconnect** (unsigned int \*id, struct Result \*result)

Disconnects device, but does not destroy underlying object. i.e. “module\_reconnect” could be called without calling “module\_createStem” again.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – object, containing NO\_ERROR or a non zero Error code.

void **module\_reconnect** (unsigned int \*id, struct Result \*result)

Reestablishes a connection with a preexisting stem object. The original stem would of been created with “module\_createStem”.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – object, containing NO\_ERROR or a non zero Error code.

void **module\_connectThroughLinkModule** (unsigned int \*id, unsigned int \*id\_linkStem, struct Result \*result)

Establishes connection through another stems link/connection (i.e. transport: USB, TCPIP). Refer to BrainStem Networking at [www.acroname.com/support](http://www.acroname.com/support)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **id\_linkStem** – The link stem’s id assigned through “module\_createStem” (The stem providing the connection.)
- **result** – object, containing NO\_ERROR or a non zero Error code.

void **module\_setModuleAddress** (unsigned int \*id, struct Result \*result, int address)

Changes the module address of the stem object that was created via “module\_createStem”. Refer to BrainStem Networking at [www.acroname.com/support](http://www.acroname.com/support)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – object, containing NO\_ERROR or a non zero Error code.
- **address** – New address to be set.

void **module\_getModuleAddress** (unsigned int \*id, struct Result \*result)

Retrieves the module address of the stem object that was created via “module\_createStem”. Refer to BrainStem Networking at [www.acroname.com/support](http://www.acroname.com/support)

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – object, containing NO\_ERROR and the module/stems current module address or a non zero Error code.

void **module\_isConnected** (unsigned int \*id, struct Result \*result)

Returns the current state of the module/stem’s connection. Refer to BrainStem Networking at [www.acroname.com/support](http://www.acroname.com/support)

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – object, containing NO\_ERROR and the status of the connection or a non zero Error code. (0 = disconnected; 1 = connected.)

void **module\_setNetworkingMode** (unsigned int \*id, struct Result \*result, int mode)

Changes the networking mode of the stem object. Auto mode is enabled by default which allows automatic adjustment of the module/stems networking configuration. Refer to BrainStem Networking at [www.acroname.com/support](http://www.acroname.com/support)

**Parameters**

- **id** – ID assigned through “module\_createStem”
- **result** – object, containing NO\_ERROR or a non zero Error code.
- **mode** – New mode to be set.

void **module\_clearAllStems** ()

Disconnects and destroys all modules/stems. During development the dll doesn't always “detach” between runs. This can create problematic scenarios if there are not subsequent disconnect and destroy calls for every create call made. This function can be a helpful post-execution/tear-down process when bringing up new BrainStem Networks. However, not required if connections are handles correctly. Refer to BrainStem Networking at [www.acroname.com/support](http://www.acroname.com/support)

### 3.7.26 Link Entity

*group* **LinkEntity**

The Link class provides link level access to streaming information.

struct **linkSpec\_CCA**

CCA linkSpec structure - It contains the necessary information for connecting to a BrainStem module.

**Public Members**

unsigned int **type**

The transport type of this spec.

unsigned int **serial\_num**

The serial number of the module

unsigned int **module**

The module address

unsigned int **router**

The BrainStem network router address

unsigned int **router\_serial\_num**

The BrainStem network router serial number



unsigned int **model**  
The model type

unsigned int **usb\_id**  
The usb\_id of the BrainStem module.

unsigned int **ip\_address**  
The IP4 address of the module.

unsigned int **ip\_port**  
The TCP port for socket connection on the module.

unsigned int **baudrate**  
The serial port baudrate

char **port**[100]  
The serial port path or name

struct **StreamStatusEntry\_CCA**

StreamStatusEntry structure - It contains members of streaming entries in the form of key value pairs. Keys are comprised of the devices module address, command, option, index, and subindex API values.

### Public Members

unsigned long long **key**  
The stream key (64bit).

unsigned int **value**  
The value associated with the key (32bit).

void **link\_enableStream** (unsigned int \*id, struct Result \*result, const unsigned char moduleAddress, const unsigned char cmd, const unsigned char option, const unsigned char index, const bool enable)

Enables streaming for the supplied criteria.

### Parameters

- **id** – Unique identifier for the internally created stem.
- **result** – object, containing NO\_ERROR or a non zero Error code.
- **moduleAddress** – Address to filter on.
- **cmd** – cmd to filter by (supports Wildcards)
- **option** – option to filter by (supports Wildcards)
- **index** – index to filter by (supports Wildcards)
- **enable** – True - Enables streaming; False - disables streaming

void **link\_getLinkSpecifier** (unsigned int \*id, struct Result \*result, struct *linkSpec\_CCA* \*spec)  
Get linkSpecifier

**Parameters**

- **id** – Unique identifier for the internally created stem.
- **result** – object, containing NO\_ERROR or a non zero Error code.
- **spec** – - allocated linkspec struct will be filled with spec.

void **link\_registerStreamCallback** (unsigned int \*id, struct Result \*result, const unsigned char moduleAddress, const unsigned char cmd, const unsigned char option, const unsigned char index, const bool enable, cStreamCallback\_t cb, void \*pRef)

Registers a callback function based on a specific module, cmd, option, and index.

::aErrNotFound - Item not found (uninstalling only)

::aErrNone - success

**Parameters**

- **id** – Unique identifier for the internally created stem.
- **result** – object, containing NO\_ERROR or a non zero Error code.
- **cmd** – cmd to filter by (supports Wildcards)
- **option** – option to filter by (supports Wildcards)
- **index** – index to filter by (supports Wildcards)
- **enable** – True - installs/updates callback and ref; False - uninstalls callback
- **cb** – Callback to be executed when a new packet matching the criteria is received.
- **pRef** – Pointer to user reference for use inside the callback function.

void **link\_getStreamStatus** (unsigned int \*id, struct Result \*result, const unsigned char moduleAddress, const unsigned char cmd, const unsigned char option, const unsigned char index, const unsigned char subindex, struct *StreamStatusEntry\_CCA* \*buffer, const unsigned int bufferLength)

Gets all available stream values based on the search criteria.

::aErrParam if status or unloadedSize is null

::aErrNone - success

**Parameters**

- **id** – Unique identifier for the internally created stem.
- **result** – object, containing NO\_ERROR or a non zero Error code.
- **moduleAddress** – Address to filter on (supports Wildcards)
- **cmd** – cmd to filter by (supports Wildcards)
- **option** – option to filter by (supports Wildcards)
- **index** – index to filter by (supports Wildcards)
- **subindex** – subindex to filter by (supports Wildcards)

- **buffer** – Buffer of user allocated memory to be filled with stream data Note: Link::getStreamKeyElement should be used to decode the keys
- **bufferLength** – Number of elements the buffer can hold.

void **link\_getStreamKeyElement** (struct Result \*result, const unsigned long long key, const unsigned char element)

Convenience function to unpack a stream key.

#### Parameters

- **key** – The key to be unpacked
- **element** – The element to unpack from the key.

### 3.7.27 PDChannelLogger

*group* **PDChannelLogger**

PDChannelLogger: Provides an interface for managing BrainStem Power Delivery Packets. Packets are accepted and decoded asynchronously. Pay careful attention to packet cleanup. Portions of the structure do not belong to the caller.

struct **BS\_PD\_Packet\_CCA**

BrainStem Power Delivery Packet Structure - Contains information representing a Power Delivery packet along with contextual device information

#### Public Members

unsigned char **channel**

Channel/Index

unsigned int **seconds**

Seconds in device time since power on.

unsigned int **uSeconds**

Micro Seconds in device time since power on .

unsigned char **direction**

Direction of packet transmission relative to the device.

unsigned char **sop**

See bs\_pd\_packet.h for more details

unsigned int **event**

Packet type - See powerdeliveryLogEvent in aProtocolDefs.h

unsigned int **payloadSize**

Length of the payload.

unsigned char \***payload**  
Raw PD Packet data

unsigned char **ccChannel**  
CC Channel type

unsigned int **crc**  
CRC of payload

void **PDChannelLogger\_create** (unsigned int \*id, struct Result \*result, const int index, const unsigned int  
bufferLength)

Creates internal object for managing BrainStem Power Delivery logging packets.

Returns *common entity* return values

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Object containing aErrNone and the requested value on success. Non-zero error code on failure. The current upstream port.
- **index** – The index of the entity in question.
- **bufferLength** – Number of packets the class should queue before dropping.

void **PDChannelLogger\_destroy** (unsigned int \*id, struct Result \*result, const int index)

Destroys internal object for managing BrainStem Power Delivery logging packets.

Returns *common entity* return values

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Object containing aErrNone and the requested value on success. Non-zero error code on failure. The current upstream port.
- **index** – The index of the entity in question.

void **PDChannelLogger\_setEnabled** (unsigned int \*id, struct Result \*result, const int index, const bool  
enable)

Enables Power Delivery logging.

True on success.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Object containing aErrNone and the requested value on success. Non-zero error code on failure. The current upstream port.
- **index** – The index of the entity in question.
- **enable** – True enables logging; False disables logging

void **PDChannelLogger\_getPacket** (unsigned int \*id, struct Result \*result, const int index, struct *BS\_PD\_Packet\_CCA* \*packet)

Attempts to takes a packet from the internal buffer.

True if the function successfully acquired any number of packets. False if no packets were available.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Object containing aErrNone and the requested value on success. Non-zero error code on failure. The current upstream port.
- **index** – The index of the entity in question.
- **packet** – Reference to a packet to be filled by the function.

void **PDChannelLogger\_getPackets** (unsigned int \*id, struct Result \*result, const int index, struct *BS\_PD\_Packet\_CCA* \*packetBuffer, const unsigned int bufferLength)

Attempts to take a multiple packets (up to a maximum) from the internal buffer.

True if the function successfully acquired any number of packets. False if no packets were available.

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Object containing aErrNone and the requested value on success. Non-zero error code on failure. The current upstream port.
- **index** – The index of the entity in question.
- **packetBuffer** – pointer to a buffer to be filled
- **bufferLength** – The length of the buffer provided.

void **PDChannelLogger\_freePayloadBuffer** (unsigned int \*id, struct Result \*result, struct *BS\_PD\_Packet\_CCA* \*packet)

Releases the internal memory contained within the payload parameter.

Returns *common entity* return values

#### Parameters

- **id** – ID assigned through “module\_createStem”
- **result** – Object containing aErrNone and the requested value on success. Non-zero error code on failure. The current upstream port.
- **packet** – Reference to a packet to have its memory freed.

### 3.7.28 PortMapping

#### *group* **PortMapping**

PortMapping Class: Provides an interface for usb descriptor information of devices downstream of Acroname hub products.

#### struct **DeviceNode\_CCA**

Device Node Structure - Contains information linking the downstream device to the Acroname Hub.

#### **Public Members**

unsigned int **hubSerialNumber**

Serial number of the Acroname hub where the device was found.

unsigned char **hubPort**

Port of the Acroname hub where the device was found.

unsigned short **idVendor**

Manufactures Vendor ID of the downstream device.

unsigned short **idProduct**

Manufactures Product ID of the downstream device.

unsigned char **speed**

The devices downstream device speed. (PORT\_SPEED\_CCA\_t)

char **productName**[255]

USB string descriptor

char **serialNumber**[255]

USB string descriptor

char **manufacturer**[255]

USB string descriptor

void **portMapping\_getDownstreamDevices** (struct Result \*result, struct *DeviceNode\_CCA* \*buffer, const unsigned int bufferSize)

Gets downstream device USB information for all Acroname hubs.

::aErrNone on success

::aErrParam: Passed in values are not valid. (NULL, size etc).

::aErrMemory: No more room in the list

::aErrNotFound: No Acroname devices were found.

#### **Parameters**

- **result** – Object containing aErrNone and the requested value on success. Non-zero error code on failure. The number of devices found.
- **buffer** – Pointer to the start of a list/array to be used by the function.
- **bufferLength** – Size of the list/array in *DeviceNode\_CCA*'s, not bytes.

### 3.7.29 Version

#### *group* Version

Functions for getting and comparing software and firmware version.

void **version\_ParseMajor** (struct Result \*result, unsigned int build)

Parses the major revision level from the given build number.

#### Parameters

- **result** – object, containing NO\_ERROR or a non zero Error code.
- **build** – The packed version number returned from the system.getVersion call.

void **version\_ParseMinor** (struct Result \*result, unsigned int build)

Parses the minor revision level from the given build number.

#### Parameters

- **result** – object, containing NO\_ERROR or a non zero Error code.
- **build** – The packed version number returned from the system.getVersion call.

void **version\_ParsePatch** (struct Result \*result, unsigned int build)

Parses the revision patch level from the given build number.

#### Parameters

- **result** – object, containing NO\_ERROR or a non zero Error code.
- **build** – The packed version number returned from the system.getVersion call.

void **version\_IsLegacyFormat** (struct Result \*result, unsigned int build)

Check if the given build version is of the legacy packing format

#### Parameters

- **result** – object, containing NO\_ERROR or a non zero Error code.
- **build** – The packed version number returned from the system.getVersion call.

void **version\_GetMajor** (struct Result \*result)

Return the major revision number for the software package.

#### Parameters

**result** – Object containing aErrNone and the requested value on success.

void **version\_GetMinor** (struct Result \*result)

Return the minor revision number for the software package.

#### Parameters

**result** – Object containing aErrNone and the requested value on success.

void **version\_GetPatch** (struct Result \*result)

Return the patch revision number for the software package.

**Parameters**

**result** – Object containing aErrNone and the requested value on success.

void **version\_IsAtLeast** (struct Result \*result, unsigned int major, unsigned int minor, unsigned int patch)

Check that the current software version is at least major.minor.patch

**Parameters**

- **result** – Object containing aErrNone and the requested value on success.
- **major** – The major revision level.
- **minor** – The minor revision level.
- **patch** – The patch revision level.

void **version\_IsAtLeastCompare** (struct Result \*result, unsigned int major\_lhs, unsigned int minor\_lhs, unsigned int patch\_lhs, unsigned int major\_rhs, unsigned int minor\_rhs, unsigned int patch\_rhs)

Check that the supplied left hand side (lhs) version is at least ( $\geq$ ) the right hand side (rhs).

**Parameters**

- **result** – Object containing aErrNone and the requested value on success.
- **major\_lhs** – The lhs major revision level.
- **minor\_lhs** – The lhs minor revision level.
- **patch\_lhs** – The lhs patch revision level.
- **major\_rhs** – The rhs major revision level.
- **minor\_rhs** – The rhs minor revision level.
- **patch\_rhs** – The rhs patch revision level.

void **version\_Pack** (struct Result \*result, unsigned int major, unsigned int minor, unsigned int patch)

Packs the given version into a single integer

**Parameters**

- **result** – Object containing aErrNone and the requested value on success.
- **major** – The major revision level.
- **minor** – The minor revision level.
- **patch** – The patch revision level.



## 3.8 LabVIEW API Reference

The LabVIEW API has been renamed to the CCA API. Generally speaking the functionality is the same with some exceptions which are outlined in the 2.11.x release notes. Please refer to the CCA API reference for information regarding the LabVIEW API.

*[CCA API Reference](#)*

## 3.9 Q-Sys API Reference

Welcome to the BrainStem Q-Sys API reference documentation. This interface provides access to the BrainStem software interfaces.

Changes that do not break a Q-Sys API will not constitute a major version change. Removing features or making significant changes will result in a minor version change. Deploying breaking changes may be necessary for legal, performance, or security reasons. When a new version is released, the current version will remain supported for one year and may become unavailable anytime after this period.

### 3.9.1 Product Plugins

Table 22: Plugin Product Availability

Product	USBHub3c
<i>usbhub3c</i>	RS232 interface for control and telemetry

#### USBHub3c Interfaces

##### Release Notes


```
# 1.0.0.0
- Initial Release
  - Upstream port switching control
  - Downstream port enable and disable
  - Port enable status
  - USBHub3c firmware version and model information
```

#### Interface Requirements

A valid Acroname USBHub3c with the Serial Control add-on software feature must be installed. For additional information is available [USBHub3c](#).


#### Downstream Connection Status

The downstream connection status interface indicates whether a port is enabled or disabled. The return value is “true” when a USB device is connected, and “false” when disconnected. An active host is required for USB devices to be connected.

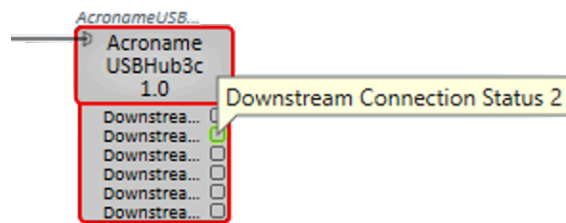


### Example Read of Downstream Connection Status Information

Reading the downstream connection status information passed into debugger logger demonstrates reading the model value. Arg1 shows the model read information into the Event Logger.

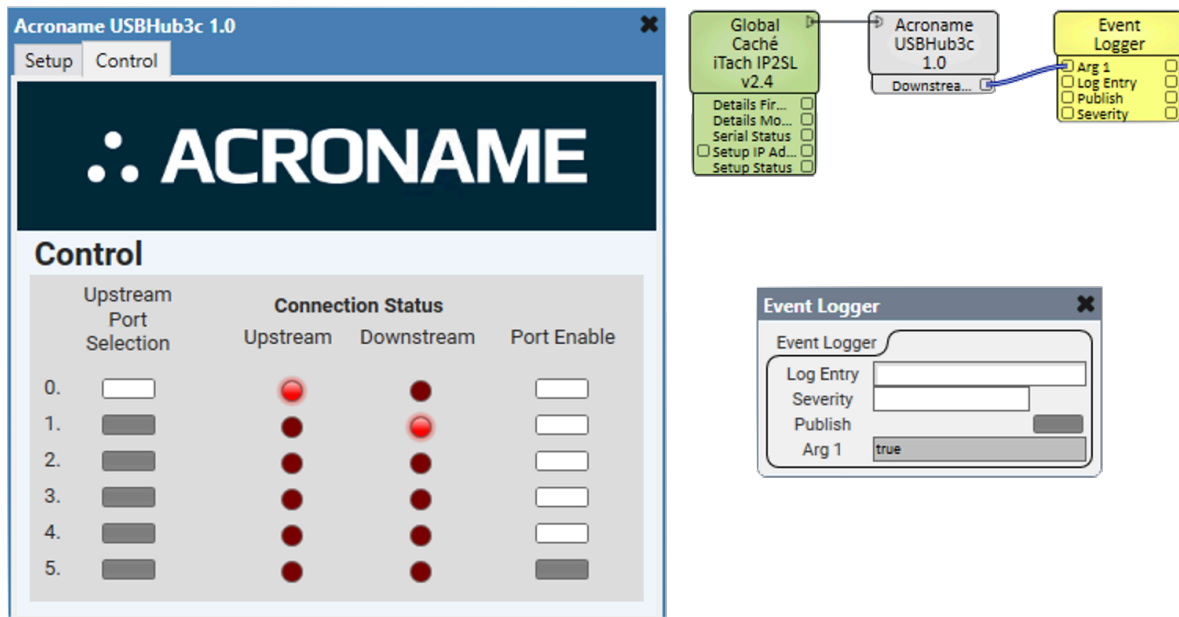

## Firmware Information

Current firmware information can be retrieved as a string with a format of `MAJOR.MINOR.PATCH.REVISION`. The value is equivalent of calling the *Module Entities* BrainStem System Entity call for `get Version`.

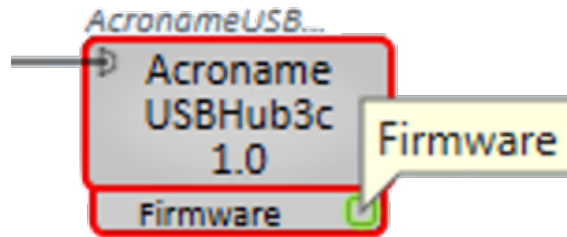


## Model Information

Model information can be retrieved as a string with a format of `S99-USBHUB-3C-PRO` or `S99-USBHUB-3C-LAB`.


## Example Read of Model Information

Reading the model information passed into debugger logger demonstrates reading the model value. Arg1 shows the model read information into the Event Logger.

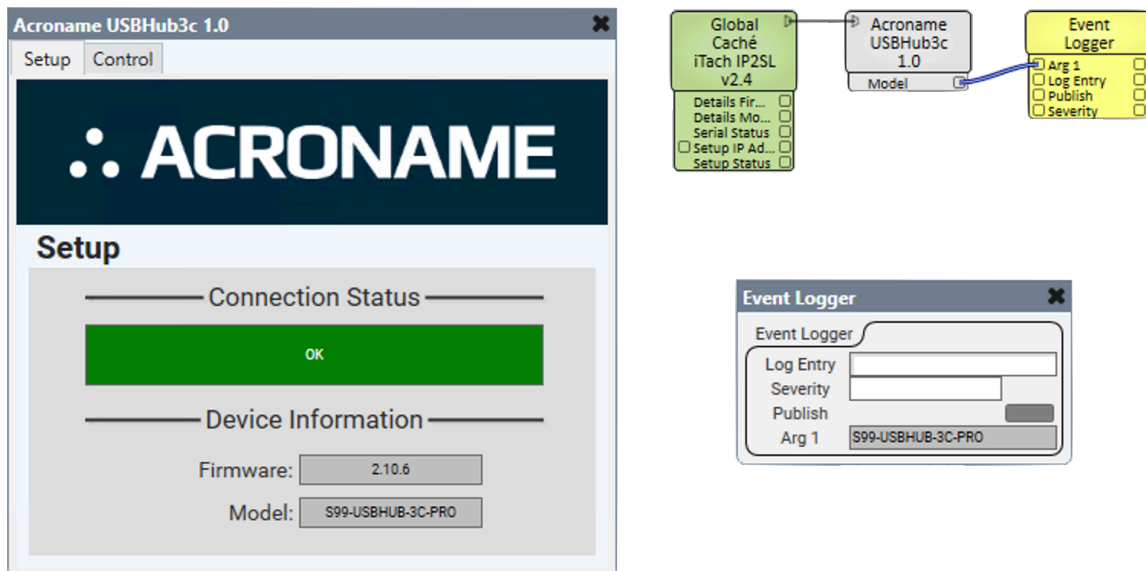


## Port Enable

The “port-enable” interfaces enable turning a specific port on or off. When a port is enabled, both power and data lines become active. Conversely, power and data lines get disconnected when the port is disabled, simulating the removal of a USB cable. Note that for USB-C ports, the CC line will be activated to negotiate the appropriate power level for Vbus power. Vbus will not be active until proper CC negotiation has occurred.

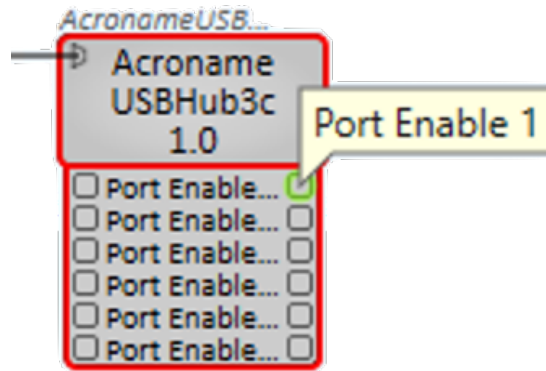

## Status

Indication of the plugin connection status to the USBHub3c.

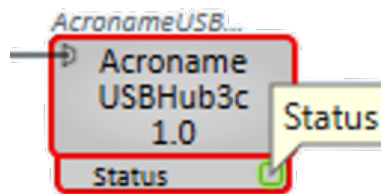


## Status Codes

The following is a list of all status codes the USBHub3c supports with descriptions.

Status	Description
0	Connection established or data is received successfully and everything is OK.
1	Compromised connection.
2	Connection or data received with an error indicating a fault.
3	Missing serial port to connect to device.
4	Plugin initializing.


## Upstream Connection Status

The “upstream connection status” indicates that a valid USB host is connected to the device. If the connection is established, the output value of the plugin will be “true”, which means the device is ready to communicate with the host. However, if the upstream host connection is removed, the output value will be “false”, indicating that the communication between the device and the host is no longer available.

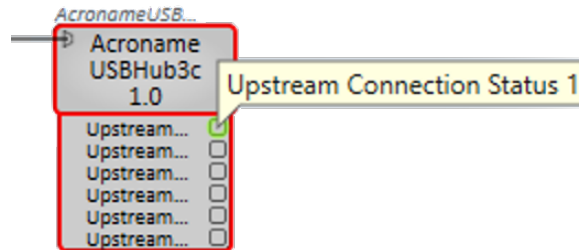


## Example Read of Upstream Connection Status Information

Reading the upstream connection status information passed into debugger logger demonstrates reading the model value. Arg1 shows the model read information into the Event Logger.

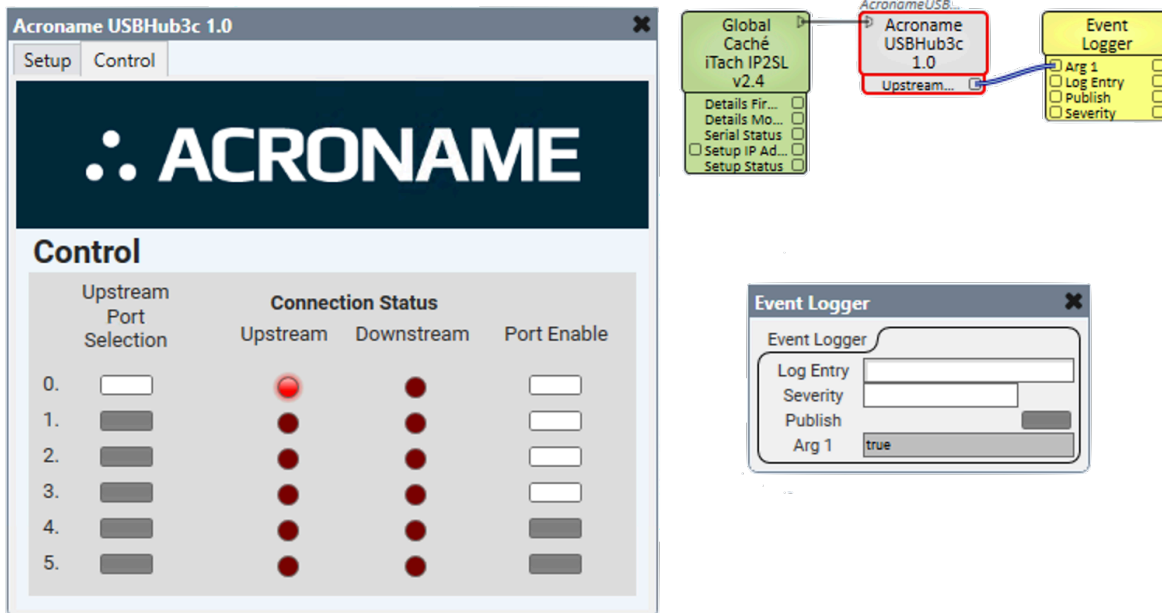

## Upstream Port Selection

The interface for selecting the upstream port determines which port to use as an upstream interface. When calling the function, any input value below 0 will be set to 0.

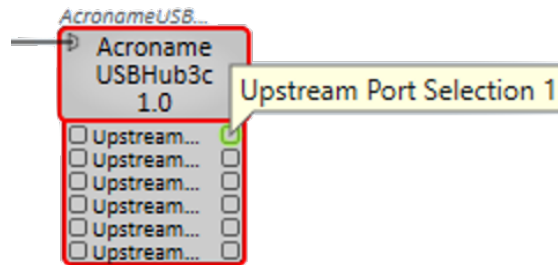

## Version

The `version` endpoint shows version information for the Q-Sys plugin version.





## 4.1 What is BrainStem

Acroname's BrainStem technology is a foundational tool for bridging the gap between hardware and software systems. BrainStem controllers gather and relay peripheral information to other systems, which may be a host computer, additional microcontrollers or an array of sensors and testing equipment. The core BrainStem concept is metaphorically based on the human nervous system's data gathering, interpreting and transmitting processes.

### 4.1.1 Scalable

BrainStem modules are the ideal controllers for hierarchical control and autonomous systems. Using a robust networking protocol, BrainStem devices relay information across industry standardized interfaces such as serial, I2C, USB, Ethernet and BlueTooth. Each controller has an embedded virtual machine kernel that allows for rich embedded application execution, reflexive software creation and direct hardware access using a structured packet format. The BrainStem network can support more than 100 microcontrollers, and each microcontroller can have several subordinate networks of devices, sensors or interfaces.

### 4.1.2 Usable

The BrainStem platform and associated APIs provide powerful desktop computer access to sensors and actuators. Since these devices exist across such a wide application range, BrainStem modules are designed to be as generalized and adaptable as possible. This includes cross platform interface software, defining and publishing interconnect standards and protocols, selecting a common form factor and focusing on expandability.

### 4.1.3 Next Steps

The best place to get started with your new BrainStem hardware is by checking out the [Getting Started](#) section of our documentation.

## 4.2 aEther

### 4.2.1 Overview

#### What is it?

aEther is a software feature that encapsulates the BrainStem software object and provides synchronization across multiple threads, processes and computers by way of a client-server model.

#### How does aEther help me utilize Acroname hardware?


1. **Simplified Synchronization:** Tired of working with Mutexes? Simply create and connect to an object for each thread and we will handle the rest.
2. **Improved Debugging:** Want to know what's going on with Acroname hardware while your application is running or paused on a break point? No problem, just open up HubTool and monitor the devices state.
3. **Remote Access:** Is remote desktop too sluggish or overkill? With the proper network configuration you can access your devices from the other side of the world.

### 4.2.2 Communication Models

Models define a specific pattern or behavior. These behaviors have different attributes that might be more applicable for specific situations. The BrainStem protocol supports multiple communications models. By default the Client-Server model (aEther) is used because it is the most user friendly and adaptable.

#### Client-Server Model (aEther)

The Client-Server model works by routing all traffic through the operating systems socket layer. When the first connection is made a "server" and "client" pair will be created. All subsequent connections will be "clients" only. Note that the server is owned by the first user to connect to the device. Deletion of that object will result in ALL clients being disconnected. The server encapsulates the device by way of the direct connection model (discussed below). By doing this the server can manage simultaneous access of many clients.

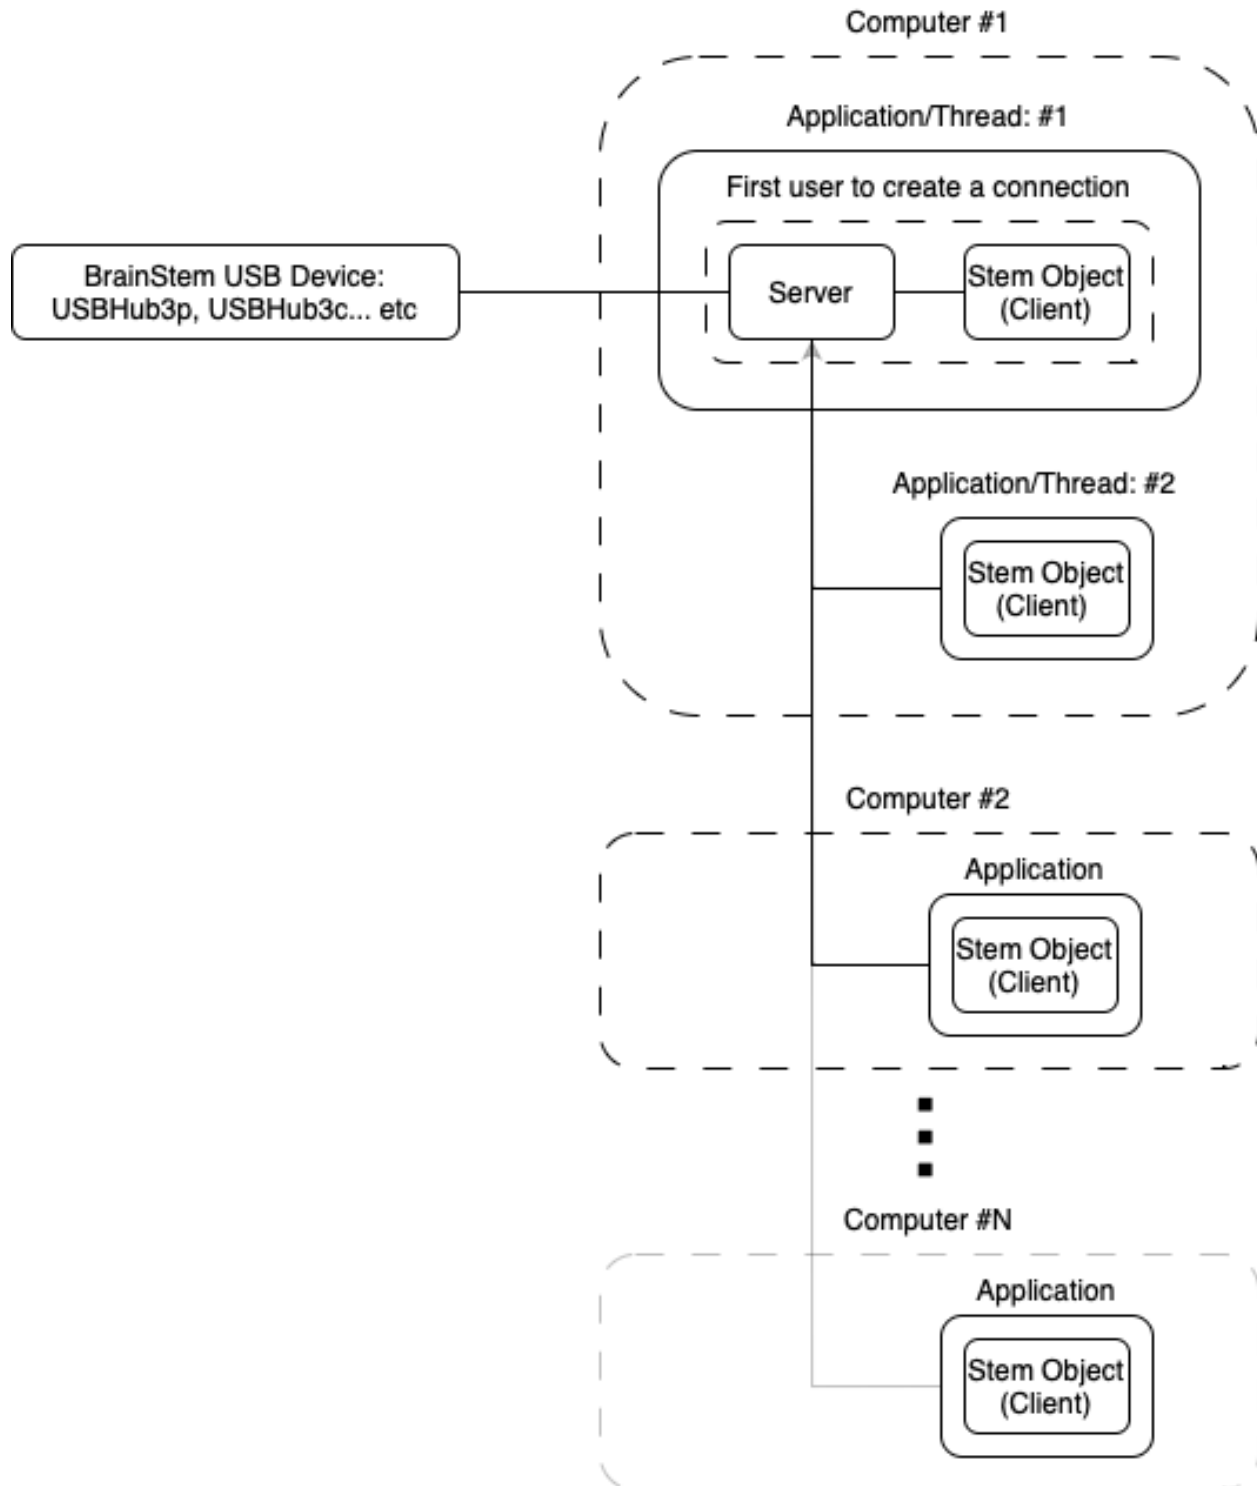

## Configuring the device for external exposure

By default all sockets are restricted to the localhost. In other words, by default these sockets do NOT have access to the outside world and therefore should not trigger any firewall warnings. In the event you do want the device to be accessible remotely it simply needs to be enabled. Generally speaking this only exposes it to your local network; further exposure to the internet will depend on configurations outside of BrainStem.

C++

```
#include "BrainStem2/BrainStem-all.h"

USBHub3c stem;
Acroname::BrainStem::aEtherConfig config;
stem.getConfig(&config);
config.localOnly = false;

//NOTE: This must be done before connection
stem.setConfig(config);

stem.discoverAndConnect(USB)
```

Python

```
import brainstem

stem = brainstem.stem.USBHub3c()
config = stem.getConfig()
config.localOnly = False

#NOTE: This must be done before connection
stem.setConfig(config)

stem.discoverAndConnect(brainstem.link.Spec.USB)
```

## Configuring the device for a specific network adapter

Sometimes it is necessary to define the network interface you would like to use. If your system has many network adapters (including virtual ones) you might need to programmatically configure this setting. Typically, this is only common for the following cases.

1. Hosting a device for external access (localOnly = False) - By default the first interface will be used. Typically, this is the default interface. If the default is not the desired interface you will need to configure it as shown below.
2. Discovery - By default discovery will search the localhost only; however, if you provide a valid network interface it will search that instead. This is particularly important if using stem.discoverAndConnect() for a remote device that is not directly connected to the computer. The network interface of the module must be set before calling a connect function as shown below.

Note that you can programmatically request the available interfaces on your machine through “aDiscovery\_GetIPv4Interfaces”

C++

```
#include "BrainStem2/BrainStem-all.h"
```

(continues on next page)

(continued from previous page)

```

USBHub3c stem;
Acroname::BrainStem::aEtherConfig config;
stem.getConfig(&config);
config.networkInterface = 0xA00A8C0; //Example: 192.168.0.10 (network byte order)
config.localOnly = false;

//NOTE: This must be done before connection
stem.setConfig(config);

stem.discoverAndConnect(USB)

```

## Python

```

import brainstem

stem = brainstem.stem.USBHub3c()
config = stem.getConfig()
config.networkInterface = 0xA00A8C0 #Example: 192.168.0.10 (network byte order)
config.localOnly = False

#NOTE: This must be done before connection
stem.setConfig(config)

stem.discoverAndConnect(brainstem.link.Spec.USB)

```

## Disabling auto fallback

In order to make a more pleasant user experience, the “discoverAndConnect” process will automatically check other transport types for devices if a device is unavailable with the given transport type. For instance, we want to create 2x BrainStem software objects that connect to the same USB module (ie USBHub3p etc). The first caller should use the transport type “USB” while the second should use “AETHER”. When fallback is enabled, this can be ignored and the underlying software will automatically determine the appropriate transport for you. If you use the “USB” transport and it is determined that someone is already connected to this device it will automatically try the “AETHER” transport next. Depending on your situation you might not want this behavior. If so, it can be disabled through the NetworkConfig.

## C++

```

#include "BrainStem2/BrainStem-all.h"

USBHub3c stem;
Acroname::BrainStem::aEtherConfig config;
stem.getConfig(&config);
config.fallback = false;

//NOTE: This must be done before connection
stem.setConfig(config);

stem.discoverAndConnect(USB)

```

## Python

```

import brainstem

```

(continues on next page)

(continued from previous page)

```
stem = brainstem.stem.USBHub3c()
config = stem.getConfig()
config.fallback = False

#NOTE: This must be done before connection
stem.setConfig(config)

stem.discoverAndConnect(brainstem.link.Spec.USB)
```

## Disabling the Client-Server model

There might be specific situations in which you want to disable the client-server model and revert to the previous direct connection model paradigm. This is very simply done through the aEtherConfig structure.

### C++

```
#include "BrainStem2/BrainStem-all.h"

USBHub3c stem;
Acroname::BrainStem::aEtherConfig config;
stem.getConfig(&config);
config.enabled = false;

//NOTE: This must be done before connection
stem.setConfig(config);

stem.discoverAndConnect(USB)
```

### Python

```
import brainstem


stem = brainstem.stem.USBHub3c()
config = stem.getConfig()
config.enabled = False

#NOTE: This must be done before connection
stem.setConfig(config)

stem.discoverAndConnect(brainstem.link.Spec.USB)
```

## Direct Connection Model

The direct connect model is Acroname's original model and is the core of the server in the client-server model. In this model the BrainStem software object owns the device communications path and is generally thread safe. When using this model the device is NOT accessible in any other processes nor is it accessible by another computer. This model is slightly faster, but more restrictive.

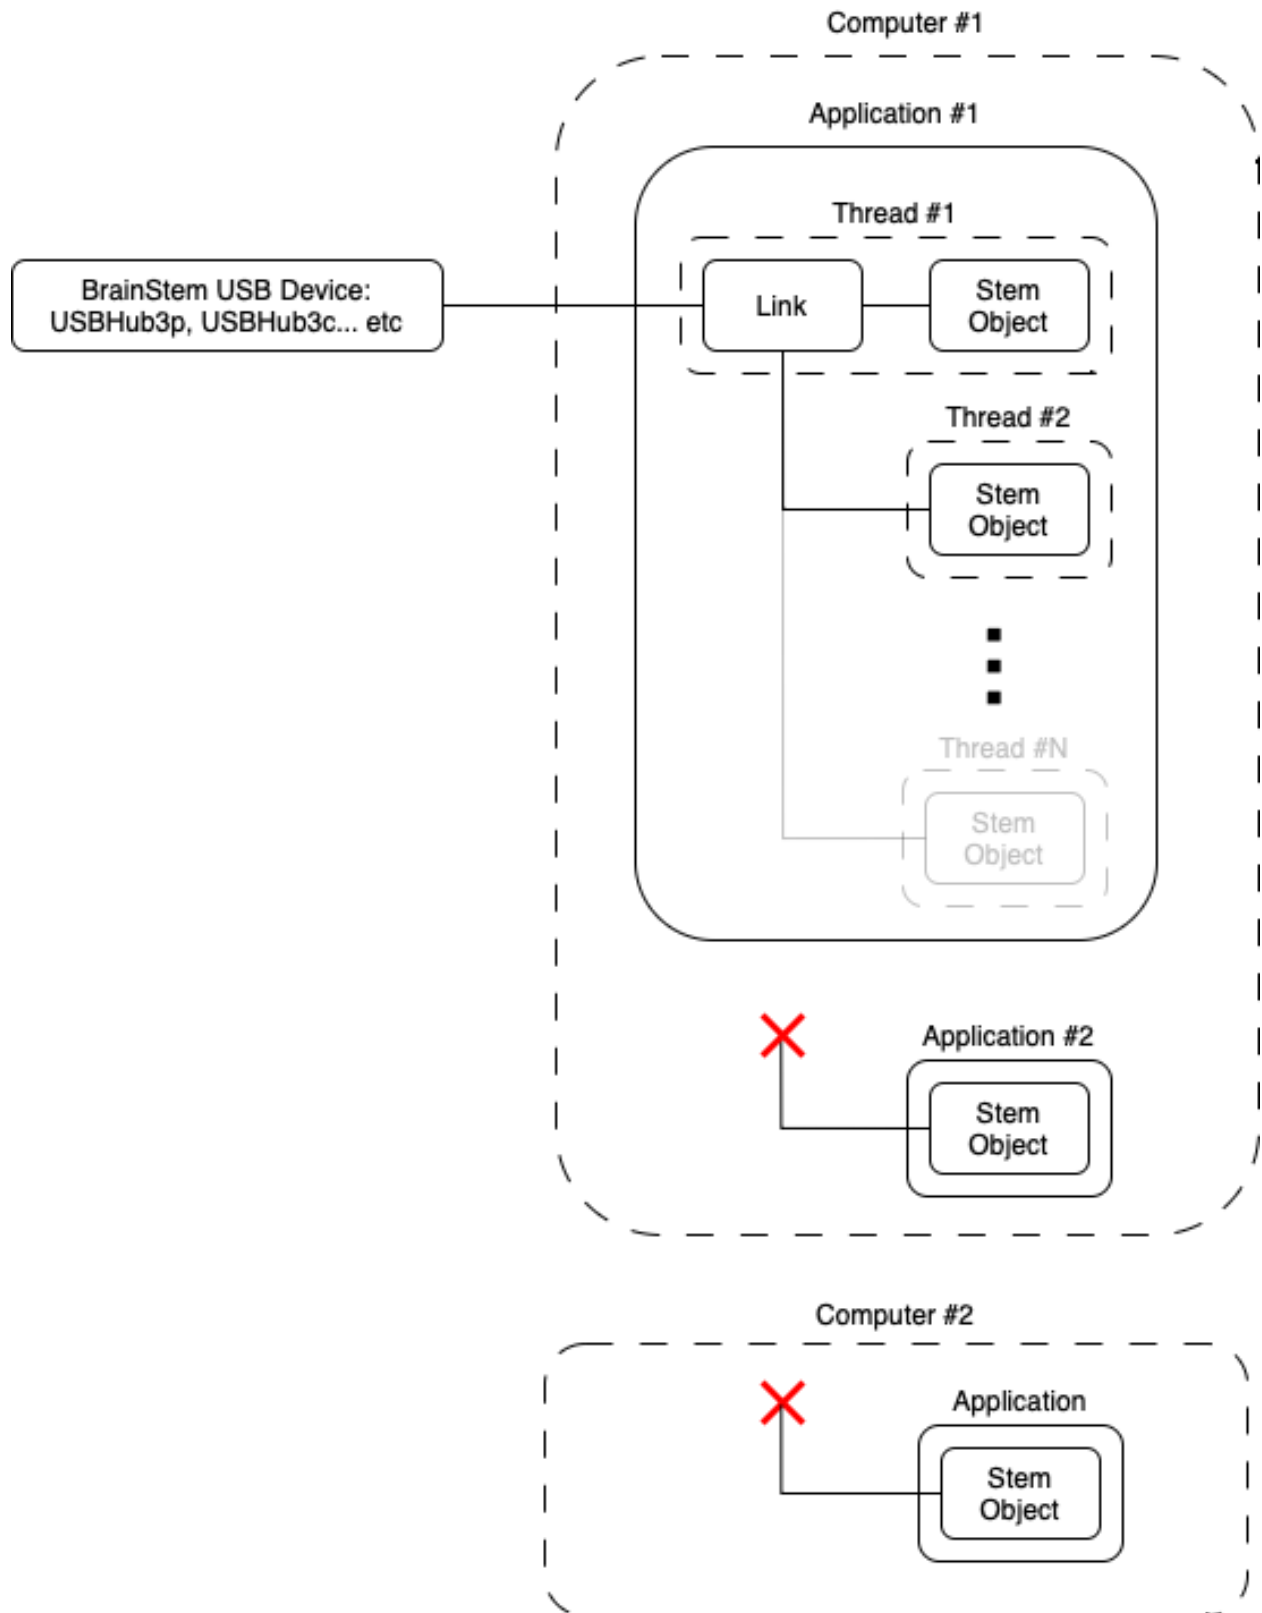

To select this configuration it must be done through the aEtherConfig structure.

C++

```
#include "BrainStem2/BrainStem-all.h"

USBHub3c stem;
Acroname::BrainStem::aEtherConfig config;
stem.getConfig(&config);
config.enabled = false;

//NOTE: This must be done before connection
stem.setConfig(config);

stem.discoverAndConnect(USB)
```

## Python

```
import brainstem

stem = brainstem.stem.USBHub3c()
config = stem.getConfig()
config.enabled = False

#NOTE: This must be done before connection
stem.setConfig(config)

stem.discoverAndConnect(brainstem.link.Spec.USB)
```

## 4.3 Getting Started

Before you begin you'll need to collect the following items.

- A BrainStem Module with development board or an Acroname Hub/Switch.
- A Link Transport Cable (Ethernet or USB).
- The BrainStem Support software package.

BrainStem Devices and Development boards can be purchased from the [Acroname Products](#).

The latest version of the [BrainStem Development Kit \(BDK\)](#)<sup>126</sup> or [HubTool](#)<sup>127</sup> can be downloaded from the [Acroname Download Page](#). Extract the package to the location of your choice when the download has finished.

### 4.3.1 Do I need Drivers?

Acroname kernel drivers are no longer required for most modern operating systems; However, if you are running Windows 7 or Linux, please read the [BrainStem USB installation instructions](#) for your particular operating system.

---


<sup>126</sup> <https://acroname.com/api>

<sup>127</sup> <https://acroname.com/hubtool>



### 4.3.2 Connecting to a BrainStem Device

With the exception of our Hubs/Switches most BrainStem devices must be plugged into the BrainStem Development Board to receive power. Once the device has been plugged into a development board it is safe to insert the link transport cable. The red power LED should be on and the green heartbeat LED should flicker rapidly when power is first applied. If you are using a Hub/Switch connect the supplied power adapter to the device.

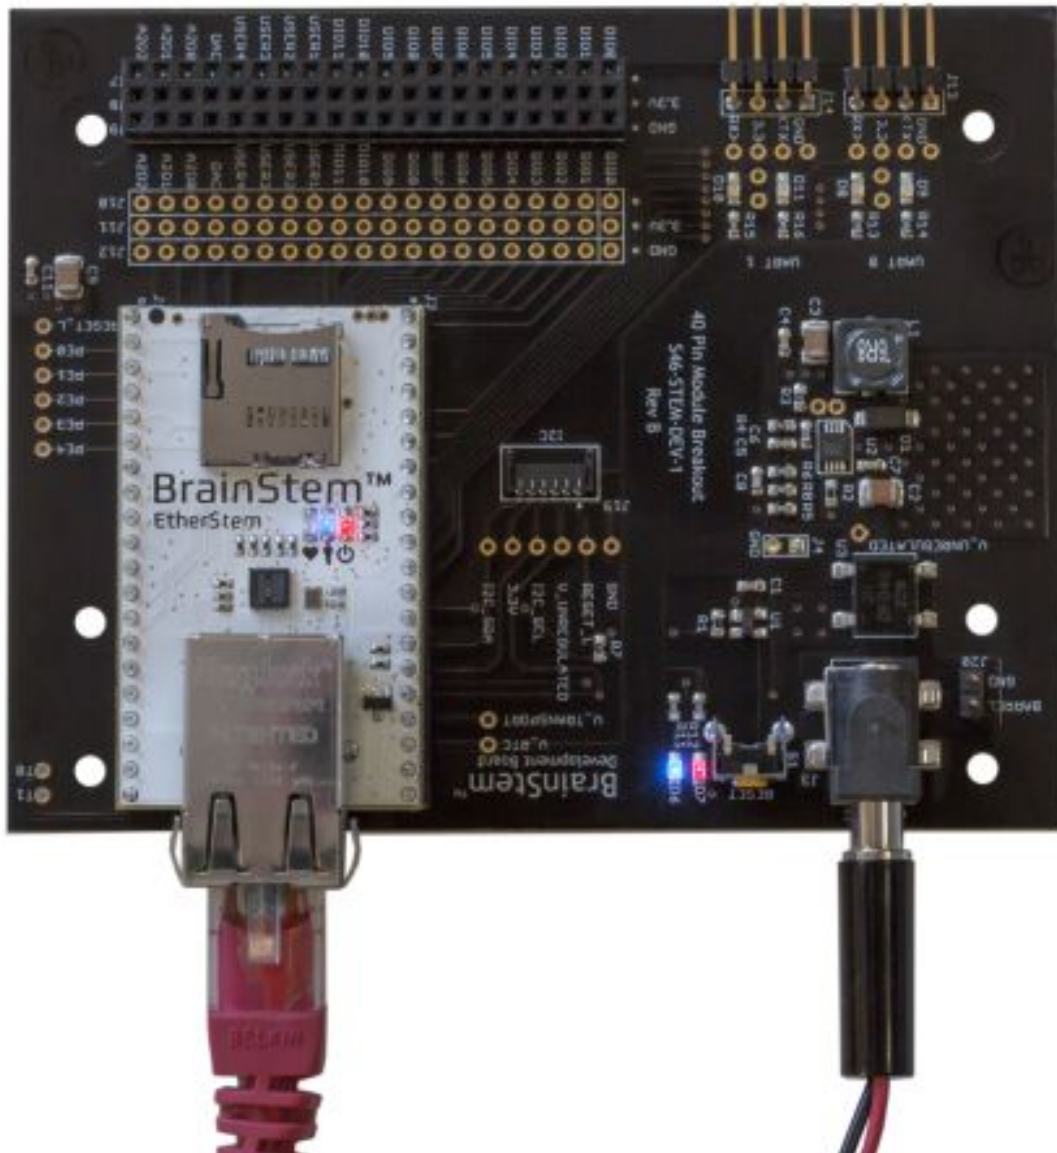

### 4.3.3 Launch HubTool

For BrainStem devices and Hubs navigate to the bin folder of the BrainStem Development Kit to find HubTool.

### 4.3.4 Toggling the LED

HubTool will periodically search for connected devices and display them in the lower right corner. Selecting your device will cause a UI to be created for that device based on its capabilities. Click the LED button and observe the illumination of the user LED on the device.

#### Updating your module firmware with Updater.

We are constantly fixing bugs and improving our products. It's good practice to keep your modules up-to-date with the latest firmware. Please see the [BrainStem Firmware Management](#) to update your firmware.

#### Introduction to the C++ API.

Interested in communicating with your BrainStem module from a host computer via the [C++ API](#)? See the [Getting Started C++ guide](#)

#### Introduction to the Python API.

Want to work with Python? See the [Python API](#) section of this reference to get started.

## 4.4 Firmware Management

### 4.4.1 Updating Firmware via HubTool

BrainStem firmware can be loaded using the HubTool application, which is available as a separate download package. HubTool can be downloaded from the [Software page](#) on Acroname's website.

When HubTool is opened, click the "Firmware Management" button to switch to the Updater window:

When the Updater window is opened, it will automatically populate with a list of all attached Acroname devices. If a new device is attached after this window is open, the "Discover" button will refresh the device list.

Each device entry in the Updater shows the model name, the serial number, the current firmware version, the firmware version to update to, and the status of the update. The update version will automatically select the most recent release. To select a different version, click the Target version field and click the desired version:

When the correct target version for a device has been selected, press the "Update" button for that device:

While the device is updating, the process will be shown in the right-most column.


---


**Note:** Do not quit HubTool during the update. This may cause the device firmware to become corrupted, requiring a separate firmware recovery.


---


If the update was successful, the device that was updated will show the current version and "Update Success" in the right-most column.


Click "Exit Firmware Management" in the lower-right corner to return to the main HubTool application.

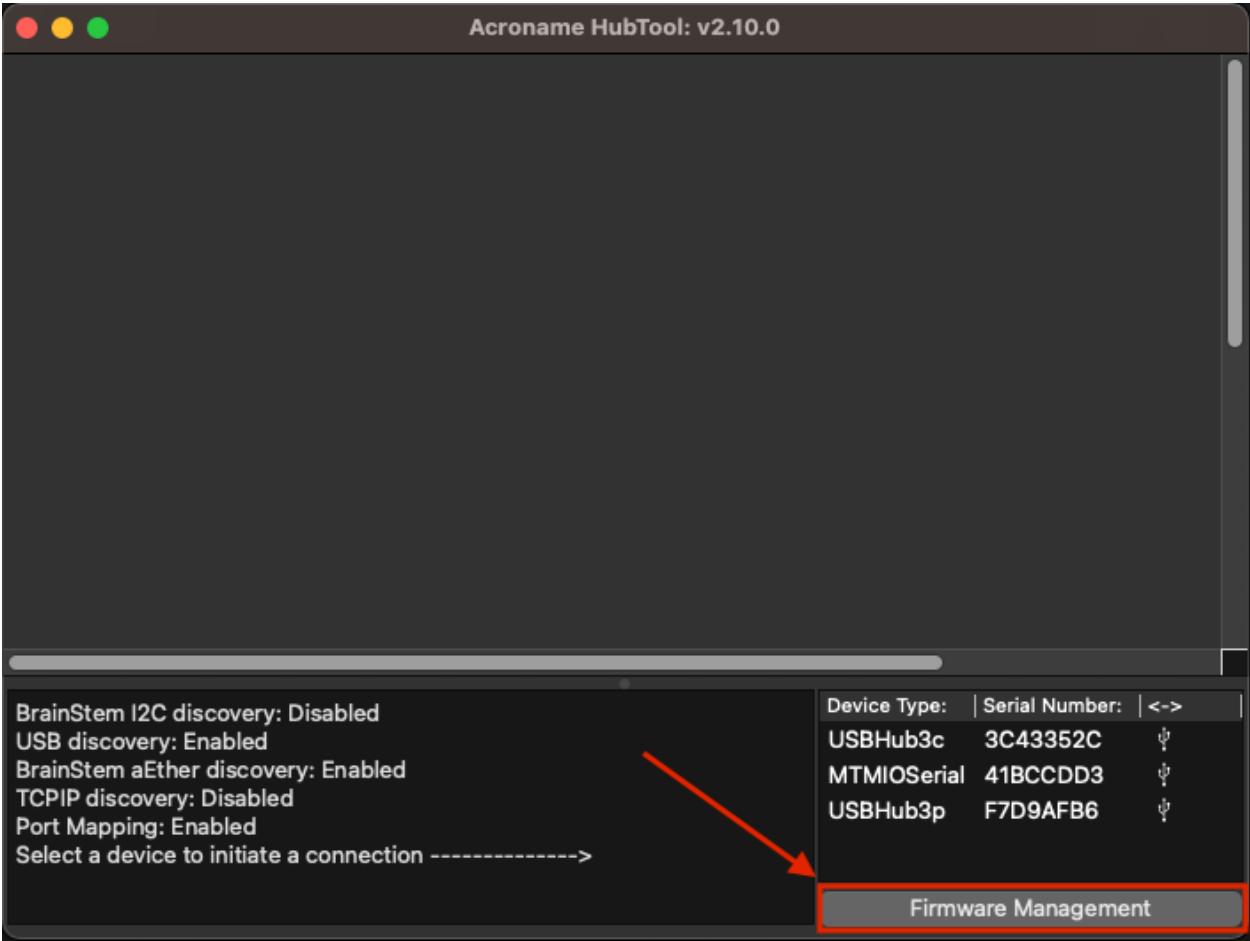

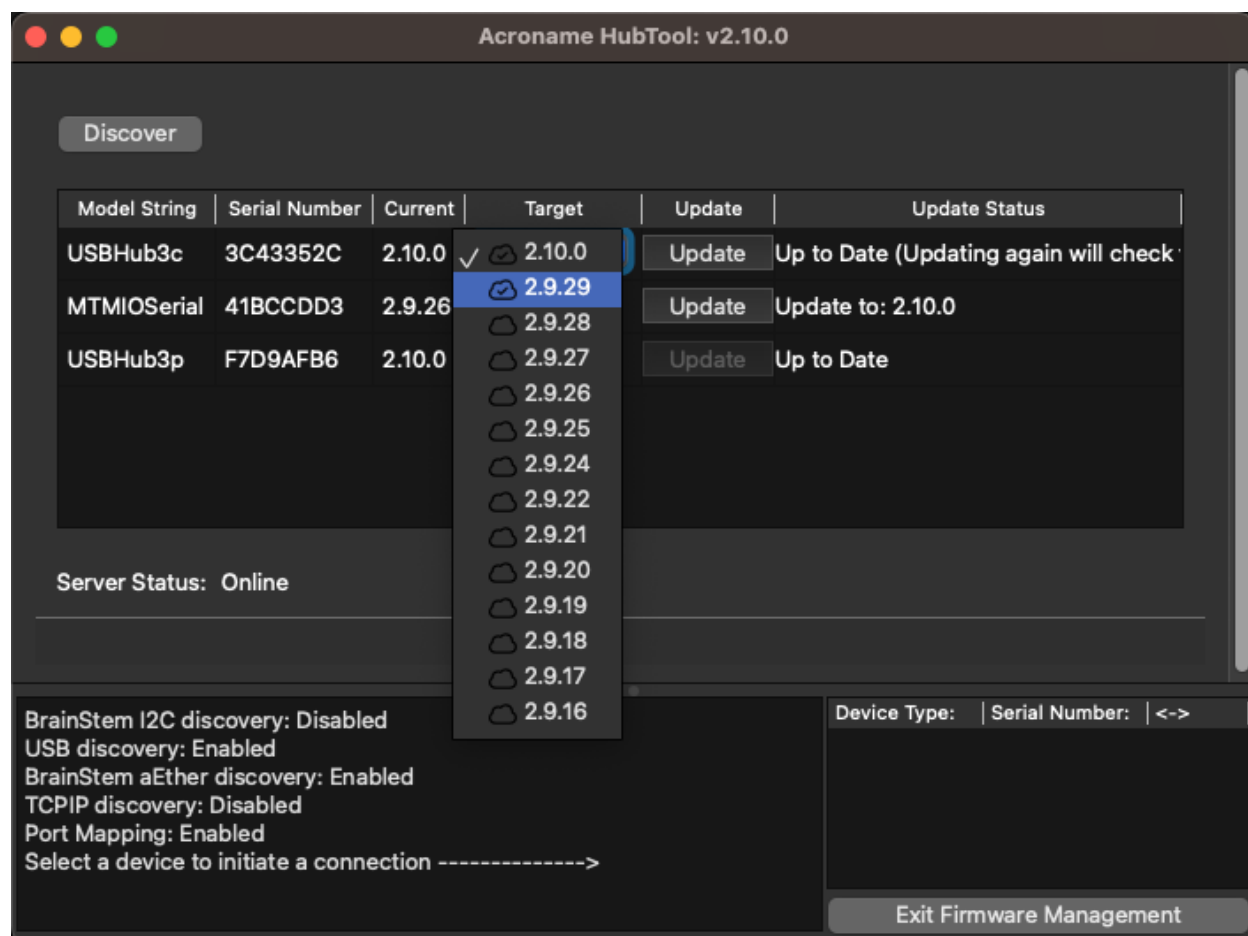

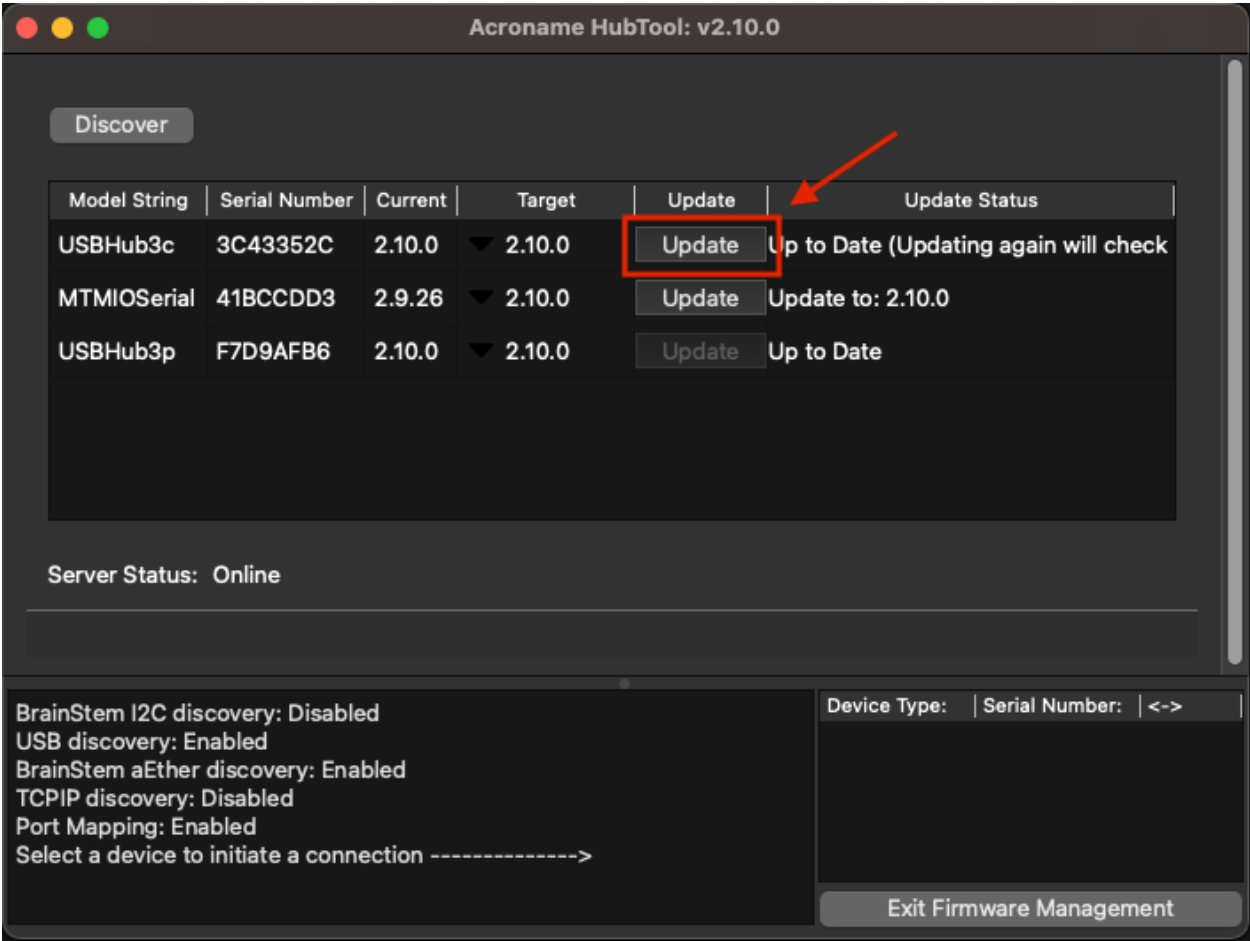

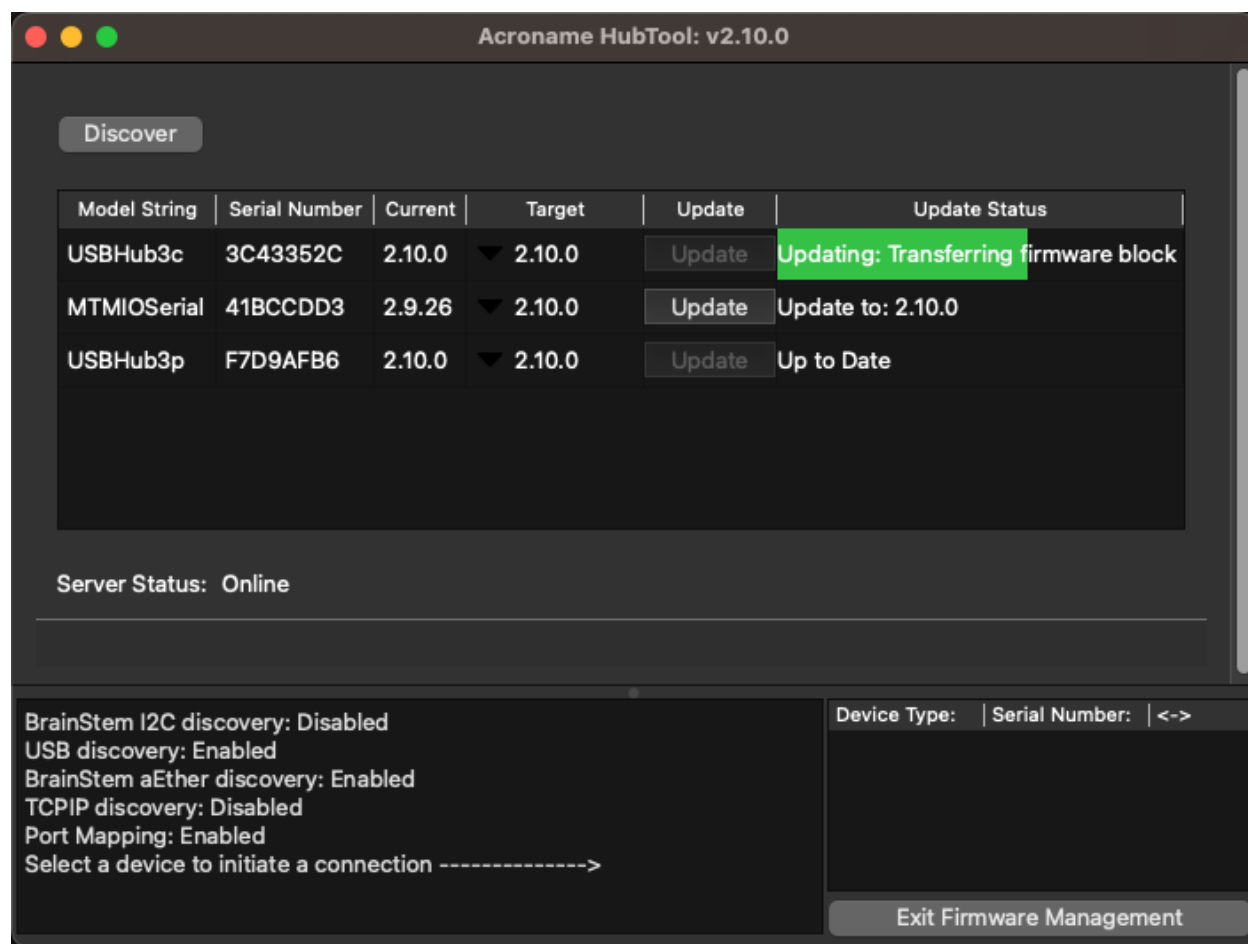

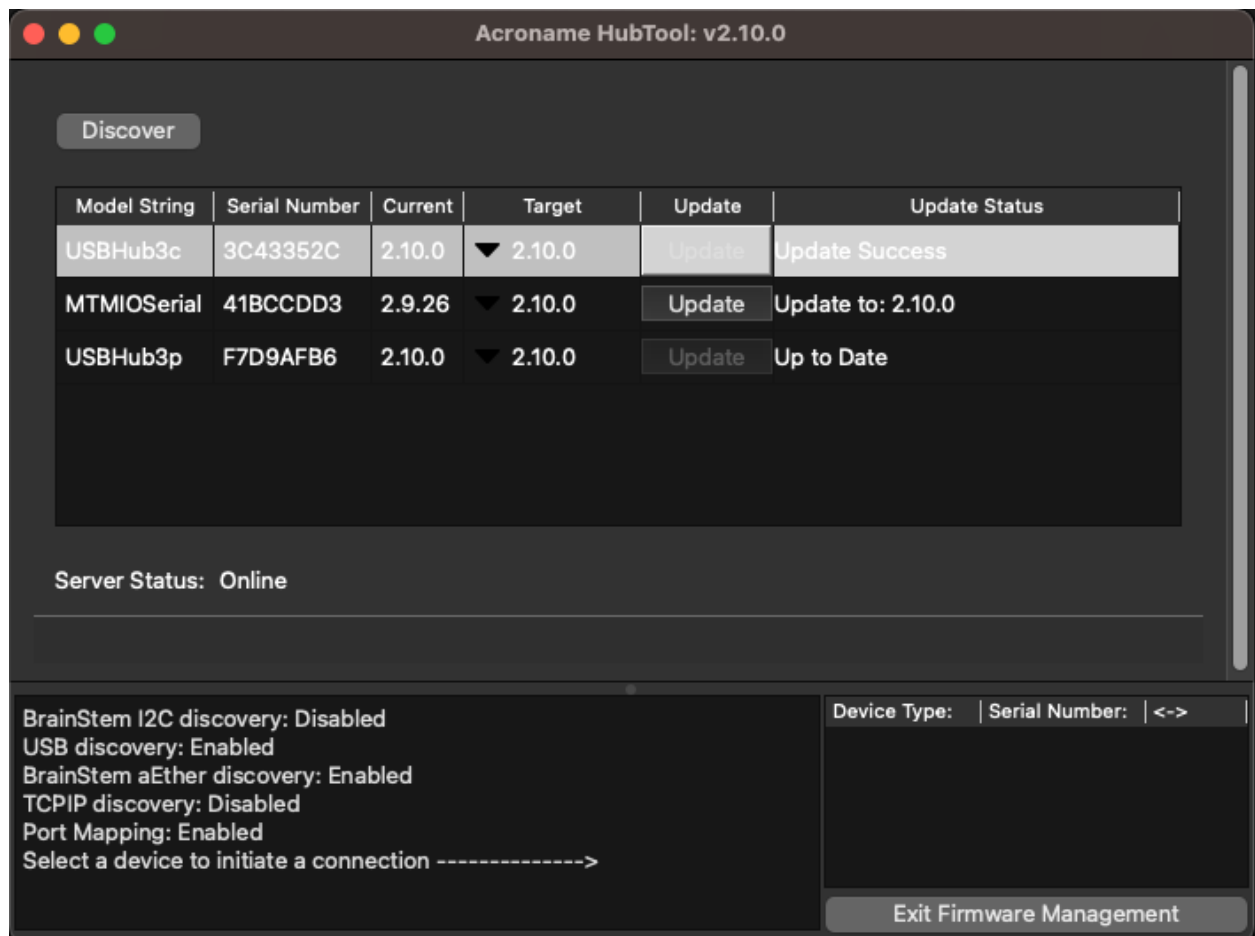

## 4.4.2 Updating Firmware via CLI

BrainStem firmware can be modified using the Updater CLI utility. This method is often very useful in remote installations and large scale automation systems as it is easily invoked with a simple script. Using your computer's operating systems terminal interface, navigate to the "cli" folder located in the Brainstem Dev Kit download. Downloads for all of Acroname's products can be found at [Software page](#) on Acroname's website.

Parameters and commands available for the Updater may be found by running the utility without any commands or arguments (When running Updater on a Mac or Linux you will need to use ".". Windows does not require this).

Note: The following examples will be preformed from a Mac.

```
$> ./Updater
```

If you would like additional help information, including examples you can use the -H command.

```
$> ./Updater -H
```

```
Updater (Version: 2.10.1 Sep 28 2023)
(Copyright (C) 1994-2023, Acroname Inc.)

Application Usage:
Updater <-B | -D | -G | -U > [-Hh | --help] [-b build_num]
    [-d serial_num]
    [-t transport] [-r router_serial]
    [-s serial_port] [-o baud_rate]

BrainStem Update and Maintenance Application
-H -h or --help for full usage information.

Parameters to commands:
    -b <build number>          - Build version of the firmware to transfer.
                                [Default: latest version available].
    -d <device>                - Device serial number of the device to access.
    -t <transport type>        - communications method [USB,TCP,RECOVER].
    -r <router serial>         - indirect connection through router device
    -s <serial port>           - name of serial port to use for recovery
    -o <baud rate>             - baud rate for serial port (2400, 4800, 9600,
                                19200, 38400, 57600, 115200, 230400)

Commands:
    -B                          - list the Builds available for given device.
    -D                          - Discover devices that are currently connected.
    -G                          - Get build file from the Acroname server and
                                store on local machine for download to device.
                                Must specify a specific device ["-d" option].
                                Default is to obtain the latest build for the
                                given device, override with "-b" option.
    -U                          - Update the firmware on device specified.
                                Must specify a specific device ["-d" option].
                                Default is to download the latest build for the
                                given device, override with "-b" option or
                                specify specific BIRD file using "-f" option.
    -H or -h                   - Display extended usage information.
```

(continues on next page)



(continued from previous page)

Sample usage:

-D	Discover <b>all</b> devices connected by either USB <b>or</b> TCPIP. Records the device information into the settings <b>for</b> that device.
-D -t USB	Discover <b>all</b> the devices connected by USB. Records the device information into the settings <b>for</b> that device.
-D -t USB -d 0F5849A ↳number 0x40F5849A)	Discover settings of the specific device (serial number 0x40F5849A)
-G -d 40F5849A ↳device directory.	Get the latest firmware <b>for</b> the given device. Downloads the firmware file into the updater specific device directory.
-U -d 40F5849A ↳the device.	Update the firmware on the specific device. Without other options, this command will <b>try</b> to locate the latest firmware version to be used <b>for</b> updating.
-G -d 40F5849A -b 99528558 ↳device.	Get the specified build's firmware for the given device. Downloads the firmware file into the updater's specific device directory <b>with</b> the build number <b>as</b> the filename.
-G -U -d 40F5849A	Get the latest firmware <b>for</b> the given device. Downloads the firmware file into the updater specific device directory. After download, update the firmware using the latest release.
-U -t RECOVER -s /dev/serial ↳serial interface ↳firmware.	Update the firmware <b>as</b> described above, but uses the serial interface <b>in</b> communicating <b>with</b> the device to install the latest firmware.

Sample usage **for** network discovery **and** updates:

-D -r D272031D ↳network	Discover <b>all</b> devices connected to the I2C BrainStem of the given routing device D272031D.
-G -U -d 2181F0EE -r D272031D ↳2181F0EE	Get <b>and</b> Update to the latest firmware <b>for</b> device indirectly through routing device D272031D.

As you can see there are a lot of options for customizing the Updater utility to meet your needs; however, there are just a few basic command that will fit the needs of most users.

Next we will look at a few examples of how to use the updater.

### Example: Updating to the Latest Firmware

In this example we will go through the steps required to update our BrainStem module. We will be using a 40pin USBStem module throughout this excersize; however, the other modules work in a similar way.

Make sure your device is connected and has power. Refer to the [Getting Started](#) page for additional information.

#### Checking for connected devices:

This command will check for USB devices connected to your machine.

```
$> ./Updater -D
```

Looking at the output below you can see that two devices were discovered, one USBHub3+ and one USB-Hub3c. In this example we will be using the USBHub3c information. This information will be handy in the next step as we will need the serial number of our device in order to update it.

```
Updater (Version: 2.10.1 Sep 28 2023)
Searching for BrainStem devices
Discovered Devices: (USB)
  Device      Module  Router  Model      Firmware Version (Build)
  3C43352C    06       06      USBHub3c    2.10.2 (1234567890)
  F7D9AFB6    06       06      USBHub3p    2.10.2 (4101717688)
```

#### Getting the latest firmware from Acroname's servers:

Using the serial number for the relevant device above, we will construct the following command. The "-G" will pull the most recent firmware from Acroname's server for the given device serial number ("-d").

```
$> ./Updater -G -d 0x3C43352C
```

```
Updater (Version: 2.10.1 Sep 28 2023)
Retrieving firmware for device with serial number 3C43352C
No build specified
Using Latest build
Retrieving build 1256480617
Validating build 1256480617 with server
Build 1256480617 is valid
```

#### Loading the latest firmware:

Now that we have successfully pulled the most up to date firmware we now need to apply it to the device. The following code will apply the most up to date firmware to the given device.

```
$> ./Updater -U -d 0x3C43352C
```

```
Updater (Version: 2.10.1 Sep 28 2023)
Updating from Birdfile: /Users/cgoss/.acroname/updater/3C43352C/1256480617.bird
Transferring loader to device
Transferring loader block 1 of 3, 65540 bytes
Transferring loader block 2 of 3, 50068 bytes
```

(continues on next page)

(continued from previous page)

```

Transferring loader block 3 of 3, 12288 bytes
Transferred 3 blocks, 127896 total bytes
Starting Load on Device
Transferring firmware block 1 of 20, 65540 bytes
Transferring firmware block 2 of 20, 65540 bytes
Transferring firmware block 3 of 20, 65540 bytes
Transferring firmware block 4 of 20, 65540 bytes
Transferring firmware block 5 of 20, 65540 bytes
Transferring firmware block 6 of 20, 65540 bytes
Transferring firmware block 7 of 20, 65540 bytes
Transferring firmware block 8 of 20, 49268 bytes
Transferring firmware block 9 of 20, 57348 bytes
Transferring firmware block 10 of 20, 65540 bytes
Transferring firmware block 11 of 20, 65540 bytes
Transferring firmware block 12 of 20, 65540 bytes
Transferring firmware block 13 of 20, 65540 bytes
Transferring firmware block 14 of 20, 65540 bytes
Transferring firmware block 15 of 20, 65540 bytes
Transferring firmware block 16 of 20, 49268 bytes
Transferring firmware block 17 of 20, 3924 bytes
Transferring firmware block 18 of 20, 3924 bytes
Transferring firmware block 19 of 20, 4104 bytes
Transferring firmware block 20 of 20, 8 bytes
Transferred 20 blocks, 1019864 total bytes
Update time: 57.5460 sec

```

At this point the firmware has been downloaded to the device and the device has reset and is running with the new firmware.

### Example: Reverting to a Previous Version

In our next example we are going to assume that we have just updated to the 2.1.5 firmware; however, for some reason we are not satisfied with how the device is behaving and we want to return back to 2.1.4. With the Updater utility this is easy to do.

Before we begin let's make sure your device is connected and has power. Refer to the [Getting Started](#) page for additional information.

### Locating the previous firmware:

Using the '-B' command we can request the available builds for a given device. Since firmware is specific to each device we must also supply the device's serial number with the '-d' parameter.

```
$> ./Updater -B -d 0x3C43352C
```

Below you will see what was printed on my machine<sup>128</sup>. All we need to do is take note of the specific build number that is associated with the version we would like to revert to.

```

Updater (Version: 2.10.1 Sep 28 2023)
Build List for device [3C43352C]:

```

(continues on next page)

<sup>128</sup> This output was spliced in to reflect the changes in Updaters output. Therefore, the build numbers will not align with the rest of the example.

(continued from previous page)

Build	Version
910961995	2.10.0
3592403412	2.10.1
1256480617	2.10.2
287855797	2.9.16
273238664	2.9.17
3802420316	2.9.18
804960244	2.9.19
3723629684	2.9.20
526817175	2.9.21
3401723282	2.9.22
619738343	2.9.24
2286324745	2.9.25
3108222154	2.9.26
2422939150	2.9.27
227123222	2.9.28
2425394894	2.9.29

### Applying a specific build to a device:

As previously explained we are hypothetically having issues with our device after updating and we want to revert to a previous version. Now that we have located the previous build number lets apply it by adding the “-b” parameter to the last command in the example before.

```
$> ./Updater -G -U -d 0x3C43352C -b 227123222
```

You should see something similar to the below output.

```
Updater (Version: 2.10.1 Sep 28 2023)
Retrieving firmware for device with serial number 3C43352C
Retrieving firmware build 227123222
Retrieving build 227123222
Validating build 227123222 with server
Build 227123222 is valid
Updating firmware with build: 227123222
Transferring loader to device
Transferring loader block 1 of 3, 65540 bytes
Transferring loader block 2 of 3, 50068 bytes
Transferring loader block 3 of 3, 12288 bytes
Transferred 3 blocks, 127896 total bytes
Starting Load on Device
Transferring firmware block 1 of 20, 65540 bytes
Transferring firmware block 2 of 20, 65540 bytes
Transferring firmware block 3 of 20, 65540 bytes
Transferring firmware block 4 of 20, 65540 bytes
Transferring firmware block 5 of 20, 65540 bytes
Transferring firmware block 6 of 20, 65540 bytes
Transferring firmware block 7 of 20, 65540 bytes
Transferring firmware block 8 of 20, 49268 bytes
Transferring firmware block 9 of 20, 57348 bytes
Transferring firmware block 10 of 20, 65540 bytes
Transferring firmware block 11 of 20, 65540 bytes
Transferring firmware block 12 of 20, 65540 bytes
Transferring firmware block 13 of 20, 65540 bytes
```

(continues on next page)

(continued from previous page)

```
Transferring firmware block 14 of 20, 65540 bytes
Transferring firmware block 15 of 20, 65540 bytes
Transferring firmware block 16 of 20, 49268 bytes
Transferring firmware block 17 of 20, 3924 bytes
Transferring firmware block 18 of 20, 3924 bytes
Transferring firmware block 19 of 20, 4104 bytes
Transferring firmware block 20 of 20, 8 bytes
Transferred 20 blocks, 1019864 total bytes
Update time: 57.5460 sec
```

### Confirm that you have successfully restored the old firmware:

Just to be safe let's confirm that we have successfully restored the old firmware. This can be done by issuing the discover command.

```
$> ./Updater -D
```

As you can see the device is now running the 2.9.28 firmware.

```
Updater (Version: 2.10.1 Sep 28 2023)
Searching for BrainStem devices
Discovered Devices: (USB)
  Device   Module  Router  Model          Firmware Version (Build)
  3C43352C  06       06      USBHub3c       2.9.28 (227123222)
  F7D9AFB6  06       06      USBHub3p       2.10.2 (4101717688)
```

## 4.4.3 Updating Software Licenses

Software licenses (also known as software features or entitlements) control which features and capabilities are available on your BrainStem device. These licenses are embedded within the firmware image and are automatically loaded when you update your device's firmware through either HubTool or the Updater CLI.

**Note:** Software licenses are tied to your device's serial number and are automatically included in firmware updates when available from Acroname's servers. Please allow 1-2 business days for new license purchases to be processed and activated in our system. If you have any questions or concerns, please contact Acroname support.

### How Software Licenses Work

When you purchase additional features or capabilities for your BrainStem device, the corresponding software licenses are associated with your device's serial number in Acroname's licensing system. These licenses are then automatically embedded into the firmware image that is served to your device during firmware updates.

The license update process works as follows:

1. **License Assignment:** Licenses are assigned to your device's serial number in Acroname's server system after purchase and processing
2. **Firmware Generation:** When you request a firmware update, the server generates a custom firmware image that includes your device's specific licenses

3. **Firmware Update:** The licensed firmware is downloaded and installed on your device
4. **Feature Activation:** Once the firmware update completes, the new features become available on your device

### Updating Licenses via HubTool

The easiest way to update your software licenses is through HubTool's Firmware Management interface. When you update your firmware through HubTool, any new licenses associated with your device will be automatically included.

For detailed instructions on using HubTool for firmware updates, see [HubTool](#).

### Updating Licenses via Updater CLI

For automated systems or remote installations, you can update software licenses using the Updater CLI utility. The CLI approach works the same way as HubTool - licenses are automatically included when you update to the latest firmware.

For detailed instructions on using the Updater CLI for firmware updates, see [CLI](#).

### Verifying License Updates

After updating your firmware (and licenses), you can verify that the new features are available by:

1. **Checking firmware version:** Use the discover command to confirm the new firmware version is installed
2. **Testing licensed features:** Attempt to use the newly licensed features through your application or HubTool

#### Verify via CLI:

```
$> ./Updater -D
```

This will show your device's current firmware version and confirm the update was successful.

### Troubleshooting License Updates

If you're not seeing your expected licensed features after a firmware update:

1. **Verify license assignment:** Contact Acroname support to confirm your licenses are properly assigned to your device's serial number
2. **Check firmware version:** Ensure you're running the latest firmware version
3. **Network connectivity:** Ensure your device has internet connectivity during firmware updates to download the licensed firmware image

---

**Note:** If you continue to experience issues with licensed features, contact Acroname support with your device's serial number for assistance.

---

## Important Notes

- **Serial Number Dependency:** Licenses are tied to your device's serial number.
- **Automatic Inclusion:** Licenses are automatically included in all firmware updates no separate license installation step is required.
- **Server-Side Processing:** License embedding happens on Acroname's servers when you request firmware updates.
- **Firmware Version:** Always ensure you're running the latest firmware version to have access to all your licensed features.
- **Old Firmware:** Licenses will also be loaded into old firmware versions but some features may not be available.

### 4.4.4 Updating Firmware without an Internet Connection

In order for the Updater to retrieve a firmware image from the Acroname servers, a connection to the public internet is required. However, in certain circumstances, a BrainStem device may be used on a system which is unable to access the external internet. In this case, some additional steps are necessary to retrieve the required firmware image for a product.

Using your computer's operating systems terminal interface, navigate to the "cli" folder located in the Brainstem Dev Kit download. Downloads for all of Acroname's products can be found at [Software page](#) on Acroname's website.

Make sure your device is connected and has power. Refer to the [Getting Started](#) page for additional information.

#### Retrieve the Serial Number for the device to be updated

This command will check for USB devices connected to your machine:

```
$> ./Updater -D
```

Looking at the output below you can see that two devices were discovered, one USBHub3+ and one USB-Hub3c. In this example we will be using the USBHub3c information. This information will be handy in the next step as we will need the serial number of our device in order to update it.

```
Updater (Version: 2.10.1 Sep 28 2023)
Searching for BrainStem devices
Discovered Devices: (USB)
```

Device	Module	Router	Model	Firmware Version (Build)
3C43352C	06	06	USBHub3c	2.10.2 (1234567890)
F7D9AFB6	06	06	USBHub3p	2.10.2 (4101717688)

## Getting the latest firmware from Acroname's servers

Using the serial number for the relevant device above, we will construct the following command. The “-G” will pull the most recent firmware from Acroname’s server for the given device serial number (“-d”).

```
$> ./Updater -G -d 0x3C43352C
```

```
Updater (Version: 2.10.1 Sep 28 2023)
Retrieving firmware for device with serial number 3C43352C
No build specified
Using Latest build
Retrieving build 1256480617
Validating build 1256480617 with server
Build 1256480617 is valid
```

The firmware files will be stored in a hidden directory in the user’s home directory:

1. Windows: \Users\\.acroname\updater\\
2. Mac/Linux: ~/.acroname/updater/<serial number>/

The directory for each serial number will have at least one <build number>.bird file; these files are the firmware image to be flashed onto the device. The build number in the filename corresponds to the build number in the output of the Updater command.

These files can be copied to the offline computer that is attached to the device that is to be updated.

---

**Note:** The downloaded firmware files are specific to one serial number; a .bird file that was downloaded for one serial number cannot be installed onto a different device.

---

## Loading the firmware files

After the firmware files for the hub to be updated are copied to the offline host computer, the following command will apply the firmware file to the given device.

```
$> ./Updater -U -d 0x3C43352C -f <path to .bird file>
```

```
Updater (Version: 2.10.1 Sep 28 2023)
Updating from Birdfile: /Users/cgoss/.acroname/updater/3C43352C/1256480617.bird
Transferring loader to device
Transferring loader block 1 of 3, 65540 bytes
Transferring loader block 2 of 3, 50068 bytes
Transferring loader block 3 of 3, 12288 bytes
Transferred 3 blocks, 127896 total bytes
Starting Load on Device
Transferring firmware block 1 of 20, 65540 bytes
Transferring firmware block 2 of 20, 65540 bytes
Transferring firmware block 3 of 20, 65540 bytes
Transferring firmware block 4 of 20, 65540 bytes
Transferring firmware block 5 of 20, 65540 bytes
Transferring firmware block 6 of 20, 65540 bytes
Transferring firmware block 7 of 20, 65540 bytes
Transferring firmware block 8 of 20, 49268 bytes
Transferring firmware block 9 of 20, 57348 bytes
```

(continues on next page)



(continued from previous page)

```

Transferring firmware block 10 of 20, 65540 bytes
Transferring firmware block 11 of 20, 65540 bytes
Transferring firmware block 12 of 20, 65540 bytes
Transferring firmware block 13 of 20, 65540 bytes
Transferring firmware block 14 of 20, 65540 bytes
Transferring firmware block 15 of 20, 65540 bytes
Transferring firmware block 16 of 20, 49268 bytes
Transferring firmware block 17 of 20, 3924 bytes
Transferring firmware block 18 of 20, 3924 bytes
Transferring firmware block 19 of 20, 4104 bytes
Transferring firmware block 20 of 20, 8 bytes
Transferred 20 blocks, 1019864 total bytes
Update time: 57.5460 sec

```

At this point the firmware has been downloaded to the device and the device has reset and is running with the new firmware.

#### 4.4.5 Updating a Brainstem Module via the Brainstem Network.

The new updater utility also has the ability to update devices via the *BrainStem network*. This can be very handy when you have multiple BrainStem products connected to a single host computer.

#### Transport vs Brainstem Network

Before digging in it is important to know the difference between a transport and the Brainstem network.

##### *“Transport”*

When we refer to transport we are speaking of the interface between devices and more specifically we are referring to the hardware. Acroname currently offers three transports mediums; TCPIP, USB and I2C. While all are capable of trafficking the Brainstem network only TCPIP and USB are directly available to the user. Although I2C is technically a transport when it comes to the Brainstem network it is handled internally. This is not to be confused with the *I2C Entity* which allows communication to third party devices.

##### *“Brainstem Network”*

Keeping in mind that the transport is at the hardware level the Brainstem network is at the software level. It is what handles all communication between Brainstem devices. One thing that makes the Brainstem network particularly interesting and useful is the fact that it can transition between transports. Additionally, this transition is handled internally. For more information see *BrainStem networking* located in the appendix of our support documentation. There it will explain the details of how it works and how to configure your devices.

In this example we will be using the TCPIP transport to communicate via the Brainstem network from our host machine, through our local network, to an *MTM-EtherStem*<sup>129</sup> where it will then be converted to the I2C transport and sent to a *MTM-PM1*<sup>130</sup> module.

Before we begin let's make sure your device is connected and has power. Refer to the *Getting Started* page for additional information.

<sup>129</sup> <https://acroname.com/store/s67-mtm-etherstem>

<sup>130</sup> <https://acroname.com/products/ACRONAME-MTM-1-CHANNEL-POWER-MODULE>

## Discovery

Since we will be updating a device through another device we will need to know the serial number of the device we will be communicating through. To find the serial number we can simply use the '-D' discover command.

```
$> ./Updater -D
```

```
Updater [Version 0.2 Dec 28 2015 13:54:37] [Copyright (C) 1994-2015, Acroname Inc.]

Discovering Devices [USB]:
  Device      Module  Router  Model                      Firmware Version
Discovering Devices [TCPIP]:
  Device      Module  Router  Model                      Firmware Version  [IP address]
D272031D    04      04      0F [MTMEtherStem]         2.2.0 (0)         [10.128.38.159]
856C1C03    02      02      05 [EtherStem ]          2.1.4 (99528558)  [10.128.38.122]

Completed processing: Updater [Version 0.2 Dec 28 2015 13:54:37] [Copyright (C) 1994-
↳2015,
Acroname Inc.]
```

## Brainstem Network Discovery

From the discovery we found a MTM-EtherStem with serial number D272031D. We will need this number in order to preform a Brainstem network discovery. To preform the indirect discovery we will need to use the '-r' parameter. The '-r' is for router and this tells Updater to look for anything at that devices router level and below.

```
$> ./Updater -D -r 0xD272031D
```

```
Updater [Version: 1.0 Dec 30 2015 15:59:07] [BrainStem Release:2.1.5] [Copyright (C)
1994-2015, Acroname Inc.]

Discovering Network Devices from [D272031D] via [TCPIP]:
  Device      Module  Router  Model                      Firmware Version  [IP address]
D272031D    04      04      0F [MTMEtherStem]         2.2.0 (0)         [10.128.38.159]
2181F0EE    06      04      0E [MTMPM ]              2.1.4 (239384838) [10.128.38.159]
CA6A1B05    08      04      0D [MTMIOSerial ]        2.2.0 (0)         [10.128.38.159]

Completed processing: Updater [Version: 1.0 Dec 30 2015 15:59:07] [BrainStem↳
↳Release:2.1.5]
[Copyright (C) 1994-2015, Acroname Inc.]
```

As you can see Updater returned 3 devices, One of which being the router device that we specified in the discovery. In other words Updater has returned all of the devices on the MTM-EtherStem's I2C [BrainStem network](#).

## Updating via the Brainstem Network.

Now that we have the serial number of the Brainstem network device we can form our final command to update the device. The command is very similar to the previous one with the exception of swapping out '-D' (discovery) for '-GU' (get and update). Additionally, we will need to add the '-d' (device) parameter so that it knows which device to update.

```
$> ./Updater -G -U -r 0xD272031D -d 0x2181F0EE
```

```
Updater [Version: 1.0 Dec 30 2015 15:59:07] [BrainStem Release:2.1.5] [Copyright
(C) 1994-2015, Acroname Inc.]

Latest firmware for [2181F0EE][aMTMPM1] is build [264993366].
Getting firmware build [264993366] for [2181F0EE][aMTMPM1].
Downloaded firmware into local file [/Users/Mitch/.acroname/updater/2181F0EE/264993366
.bird] VERIFIED.
Network Update of device [2181F0EE] via [D272031D][00]
Discovering Module # of Network Device [2181F0EE] thru [D272031D]
Using Module #[06] for Network Device
Update using firmware file [/Users/Mitch/.acroname/updater/2181F0EE/264993366.bird].
Transferring loader to device
Transferring loader block 0, 8800 bytes
Transferred 1 blocks, 8800 total bytes
Transferring firmware to device [/Users/Mitch/.acroname/updater/2181F0EE/264993366.
.bird]
Transferring firmware block 0, 772 bytes

(4 of 772 bytes (0%) of firmware block transferred.
(772 of 772 bytes (100%) of firmware block transferred.
Transferring firmware block 1, 33528 bytes

(4 of 33528 bytes (0%) of firmware block transferred.
(1028 of 33528 bytes (3%) of firmware block transferred.
(2052 of 33528 bytes (6%) of firmware block transferred.
(3076 of 33528 bytes (9%) of firmware block transferred.
(4100 of 33528 bytes (12%) of firmware block transferred.
(5124 of 33528 bytes (15%) of firmware block transferred.
(6148 of 33528 bytes (18%) of firmware block transferred.
(7172 of 33528 bytes (21%) of firmware block transferred.
(8196 of 33528 bytes (24%) of firmware block transferred.
(9220 of 33528 bytes (27%) of firmware block transferred.
(10244 of 33528 bytes (30%) of firmware block transferred.
(11268 of 33528 bytes (33%) of firmware block transferred.
(12292 of 33528 bytes (36%) of firmware block transferred.
(13316 of 33528 bytes (39%) of firmware block transferred.
(14340 of 33528 bytes (42%) of firmware block transferred.
(15364 of 33528 bytes (45%) of firmware block transferred.
(16388 of 33528 bytes (48%) of firmware block transferred.
(17412 of 33528 bytes (51%) of firmware block transferred.
(18436 of 33528 bytes (54%) of firmware block transferred.
(19460 of 33528 bytes (58%) of firmware block transferred.
(20484 of 33528 bytes (61%) of firmware block transferred.
(21508 of 33528 bytes (64%) of firmware block transferred.
(22532 of 33528 bytes (67%) of firmware block transferred.
(23556 of 33528 bytes (70%) of firmware block transferred.
(24580 of 33528 bytes (73%) of firmware block transferred.
(25604 of 33528 bytes (76%) of firmware block transferred.
```

(continues on next page)

(continued from previous page)

```

(26628 of 33528 bytes (79%) of firmware block transferred.
(27652 of 33528 bytes (82%) of firmware block transferred.
(28676 of 33528 bytes (85%) of firmware block transferred.
(29700 of 33528 bytes (88%) of firmware block transferred.
(30724 of 33528 bytes (91%) of firmware block transferred.
(31748 of 33528 bytes (94%) of firmware block transferred.
(32772 of 33528 bytes (97%) of firmware block transferred.
(33528 of 33528 bytes (100%) of firmware block transferred.
Transferred 2 blocks, 34300 total bytes
Resetting router number of device:[04:2181f0ee] with module# of router[D272031D]
Device [2181F0EE] may need a physical reset before router number can be reset.
Completed updating firmware on device [2181F0EE]
Sending Reset to device [2181F0EE]

Completed processing: Updater [Version: 1.0 Dec 30 2015 15:59:07] [BrainStem
->Release:2.1.5]
[Copyright (C) 1994-2015, Acroname Inc.]

```

**Please note that the Updater utility may appear to hang after it has transferred the firmware. This is because the device is waiting for the device to reset so that it can try and return all the previous BrainStem network settings (ie router and module addresses) for a seamless update process; however, with some updates a hard reset will be required. Simply press the reset button on the development board or power cycle the device.**

#### 4.4.6 Recovering BrainStem Firmware via CLI

In rare circumstances, a BrainStem device may become unresponsive after a failed firmware update (aka: “Bricked”). Several Acroname devices have the capability to be recovered in the field, using the `Updater` CLI utility.

Using your computer’s terminal interface, navigate to the “cli” folder within the Brainstem Software Development Kit. This directory contains the *Updater CLI utility* that will be used for recovery. Downloads for all of Acroname’s products can be found at [Software page](#) on Acroname’s website.

##### USBHub3c

In order to recover a USBHub3c, you will need the following equipment on hand:

1. USB-C to USB-C cable or USB-C to USB-A cable
2. A pen or other sharp object to press the recessed Reset button.

Execute the following procedure to recover to a working firmware image:

1. Unplug everything from the USBHub3c, including all the USB-C ports and the DC power input.
2. On the bottom of the hub, press and hold the recessed Reset button.
3. While holding the reset button, insert the USB-C cable into the Control port.
4. After 5 seconds, release the Reset button.
5. Run the following updater command: `./Updater -U -t RECOVER -s USB`
6. After all the lights turn off, unplug everything from the hub.

---

**Note:** If Updater cannot find the device, try flipping the USB-C connector on the Control port and repeat the process over again.

---

If you are still experiencing issues, contact [Acroname<sup>131</sup>](https://acroname.com/contact-us) for assistance.

### USBHub3p

In order to recover a USBHub3p, you will need the following equipment on hand:

1. DC Power Supply
2. USB-B cable
3. A pen or other sharp object to press the recessed Reset button.

Execute the following procedure to recover to a working firmware image:

1. Unplug everything from the USBHub3p, including all the USB-C ports and the DC power input.
2. Connect the DC Power Supply to the hub
3. Connect the USB-B cable to the “Up0” port.
4. On the side of the hub, press and hold the recessed Reset button for at least 5 seconds, and then release.
5. *Identify the recovery Serial Port for the hub*
6. Run the following updater command:

1. Windows: `./Updater -U -t RECOVER -s COM#` where # is the number of the COM port
2. Mac/Linux: `./Updater -U -t RECOVER -s /dev/tty<NAME>` where <NAME> is the full TTY file path.

If you are still experiencing issues, contact [Acroname<sup>132</sup>](https://acroname.com/contact-us) for assistance.

### USBCSwitchPro

In order to recover a USBCSwitchPro, you will need the following equipment on hand:

1. USB-C to USB-C cable or USB-C to USB-A cable
2. A pen or other sharp object to press the recessed Reset button.

Execute the following procedure to recover to a working firmware image:

1. Unplug everything from the USBCSwitchPro, including all the USB-C ports and the DC power input.
2. On the bottom of the hub, press and hold the recessed Reset button.
3. While holding the reset button, insert the USB-C cable into the Control port.
4. After 5 seconds, release the Reset button.
5. Run the following updater command: `./Updater -U -t RECOVER -s USB`
6. After all the lights turn off, unplug everything from the hub.

If you are still experiencing issues, contact [Acroname<sup>133</sup>](https://acroname.com/contact-us) for assistance.

---

<sup>131</sup> <https://acroname.com/contact-us>

<sup>132</sup> <https://acroname.com/contact-us>

<sup>133</sup> <https://acroname.com/contact-us>

## USBCSwitch

**Note:** The USBCSwitch is unable to be recovered in the field. Contact [Acroname<sup>134</sup>](#) for more information.

## USBHub2x4

**Note:** The USBHub2x4 is unable to be recovered in the field. Contact [Acroname<sup>135</sup>](#) for more information.

### 4.4.7 Recovering MTM Module Firmware via CLI


Lets take a look at how we can recover a BrainStem module after it has become unresponsive (aka: “Bricked”). This is also very helpful when dealing with old devices with a firmware version that might not be compatible with the new Updater utility.

In order to preform this recovery process you will need a [USB to Serial Module<sup>136</sup>](#). There are many other devices that will also work; however, this one is equipped with a connector that easily connects to the UART port on our [breakout boards<sup>137</sup>](#).

Before starting make sure your device is connected and has power. Refer to the [Getting Started](#) page for additional information.

#### Preparing Device for Recovery

Using the image below for reference make the UART connection as show. Additionally, you will need to press and hold the reset button for 5 seconds; This will prepare the device to be programmed via the UART port.

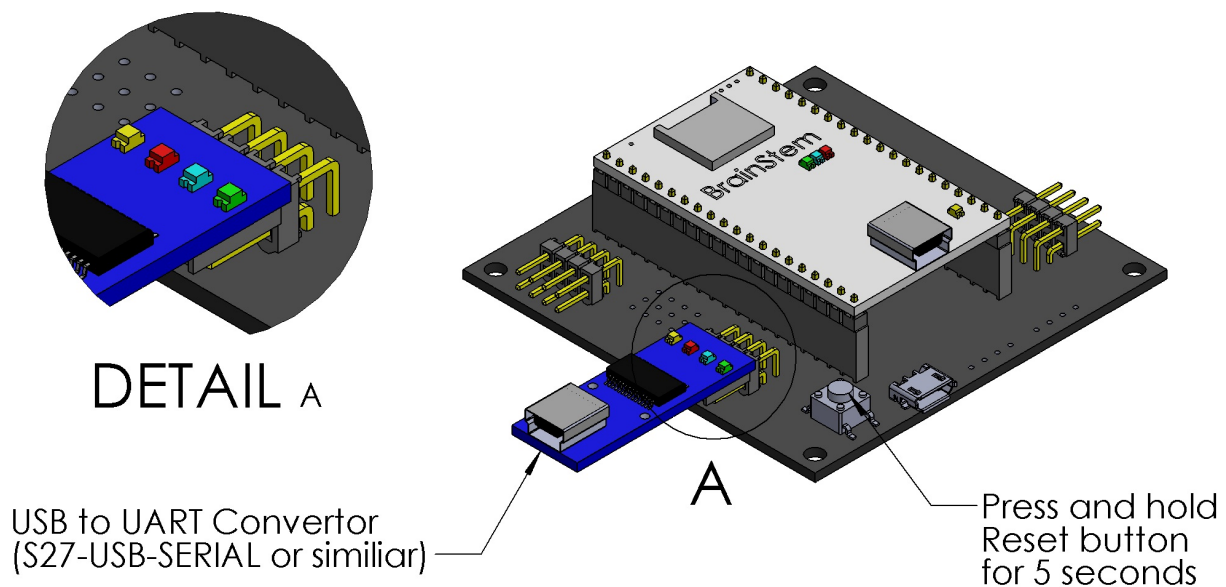

<sup>134</sup> <https://acroname.com/contact-us>

<sup>135</sup> <https://acroname.com/contact-us>


<sup>136</sup> <https://acroname.com/store/serial-converter-s27-usb-serial>

<sup>137</sup> <https://acroname.com/site-search/dev>

## **Finding your Communications Port**

### ***Windows***

The communications port (COM) on Windows can be found by navigating to the Device Manager and expanding the “Ports (COM & LPT)” section. If you do not immediately recognize your device you can open each and inspect the details or you can simply disconnect and reconnect the device and monitor which one disappears and then reappears (You may need to select Action > Scan for hardware changes between the disconnect and reconnect).

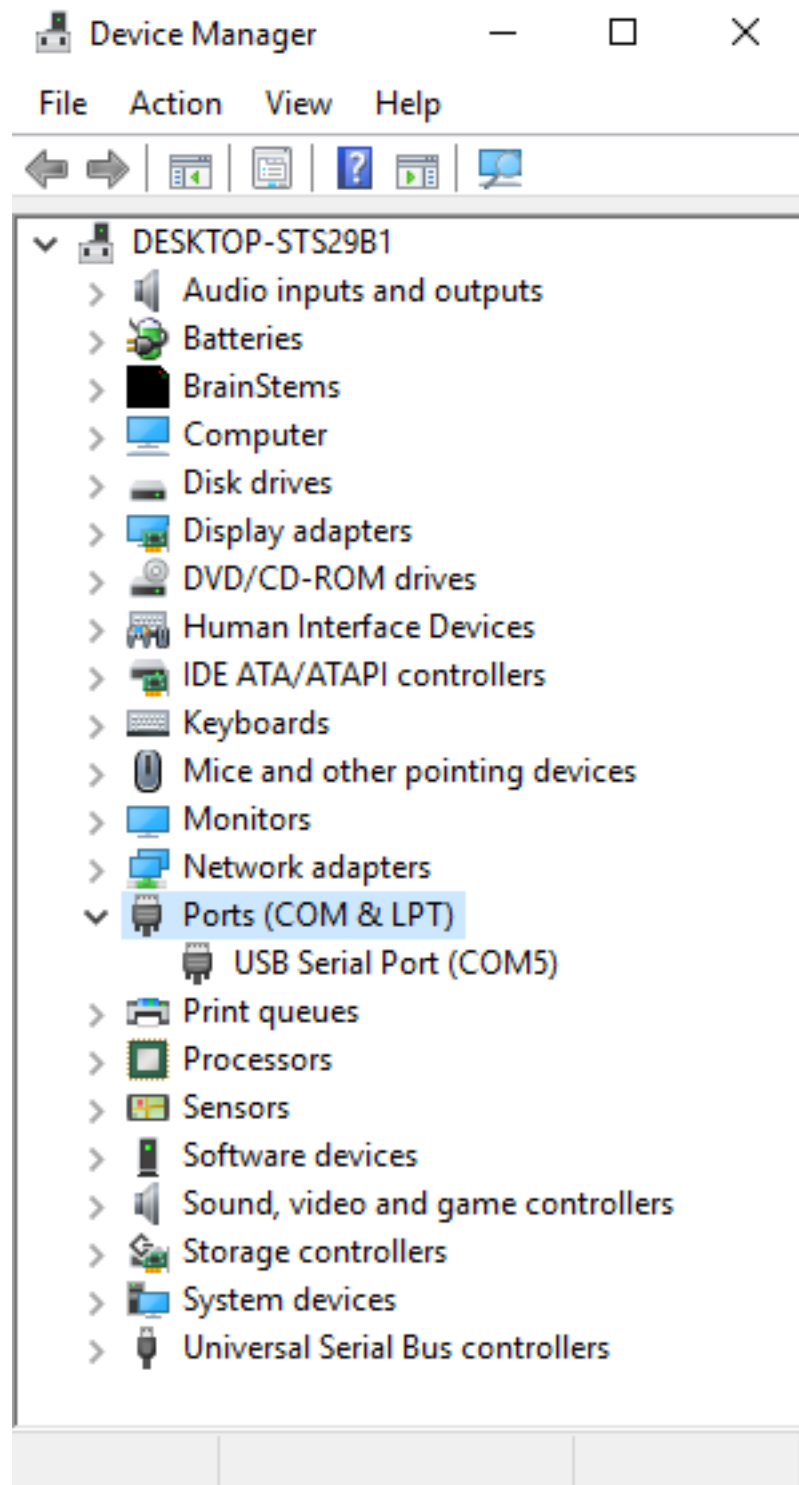

Once you have figured out which device is yours make note of the port number. In my case it would be "COM5"



## Mac/Linux

Open terminal and type in the following command (root access is required).

```
$> ls /dev/tty.*
```

This command will return all the serial devices connected to your machine. Locate the one you are wanting to work with. If you are not sure which serial device to use you can run the command twice. Once with the device connected and once without. The one that changes is the device you are interested in.

```
/dev/tty.Bluetooth-Incoming-Port
/dev/tty.Bluetooth-Modem
/dev/tty.usbserial-A601R8QJ
```

On my machine the device I am interested in is: `"/dev/tty.usbserial-A601R8QJ"`. Make note of your device as it will be needed later.

## Recovering your Device with Updater

Finally, we are ready to recover the device. Below you will see the command required to recover the device. We will be using the communications port we found [above](#) and don't forget to [configure](#) your device for recovery.

If you have forgotten some of the commands please see [Using Updater via CLI](#) where we explained how to use the `-H` command to find more information about the Updater utility including examples.

## Windows

```
$> ./Updater -U -t RECOVER -s COM5
```

## Mac/Linux

```
$> ./Updater -U -t RECOVER -s /dev/tty.usbserial-A601R8QJ
```

After the recover process has completed you will need to press the reset button twice to put the device back into normal operating mode. Whether you are using a Mac, Linux or Windows your output should look similar to the following.

```
Home directory:[/Users/Mitch]

Application parameters:[Updater]
    [Updater]
    [-U]
    [-t]
    [RECOVER]
    [-s]
    [/dev/tty.usbserial-A601R8QJ]
Updater [Version 0.2 Dec  9 2015 14:14:42] [Copyright (C) 1994-2015, Acroname Inc.]

Firmware_Recovery via Serial Interface:

    Sync to Device:
```

(continues on next page)

(continued from previous page)

```

    Get Info from Device:
Device responded with version: 2.4
Device responded with part number: 637615927
Device ID: [ 05005006 AE061446 508B34C6 F5001E43 ]
Device [05005006 AE061446 508B34C6 F5001E43] ==> Serial#:71E3928C, Build=130702287
GetBuild BIRD [/Users/Mitch/.acroname/updater/71E3928C/130702287.bird] VERIFIED.

```

```

    Unlock Memory:
Device ID: [ 05005006 AE061446 508B34C6 F5001E43 ]
Transferring firmware to device from [/Users/Mitch/.acroname/updater/71E3928C/
→130702287.bird]
Transferring firmware block 0, 772 bytes
Transferred 768 of 768 bytes (100%)
Transferring firmware block 1, 49668 bytes
Transferred 4096 of 49664 bytes (8%)
Transferred 8192 of 49664 bytes (16%)
Transferred 12288 of 49664 bytes (25%)
Transferred 16384 of 49664 bytes (33%)
Transferred 20480 of 49664 bytes (41%)
Transferred 24576 of 49664 bytes (49%)
Transferred 28672 of 49664 bytes (58%)
Transferred 32768 of 49664 bytes (66%)
Transferred 36864 of 49664 bytes (74%)
Transferred 40960 of 49664 bytes (82%)
Transferred 45056 of 49664 bytes (91%)
Transferred 49152 of 49664 bytes (99%)
Transferred 49664 of 49664 bytes (100%)
Transferred 2 blocks, 50432 total bytes
Rebooting Device

```


END of Firmware\_Recovery via Serial Interface

Completed processing: Updater [Version 0.2 Dec 9 2015 14:14:42] [Copyright (C) 1994-2015, Acroname Inc.]

## 4.5 Terminology

### 4.5.1 BrainStem® Network

The BrainStem is a network of devices that offer rich I/O capabilities and comprehensive interactions. The hardware comes primarily in the form of modules and that can be combined to accomplished I/O specific tasks. These hardware devices all share a common backbone network called the BrainStem Network that uses the I2C bus to exchange and route information around the system. A host or hosts can be employed using a link to then inject information or receive information from this BrainStem network of hardware modules.

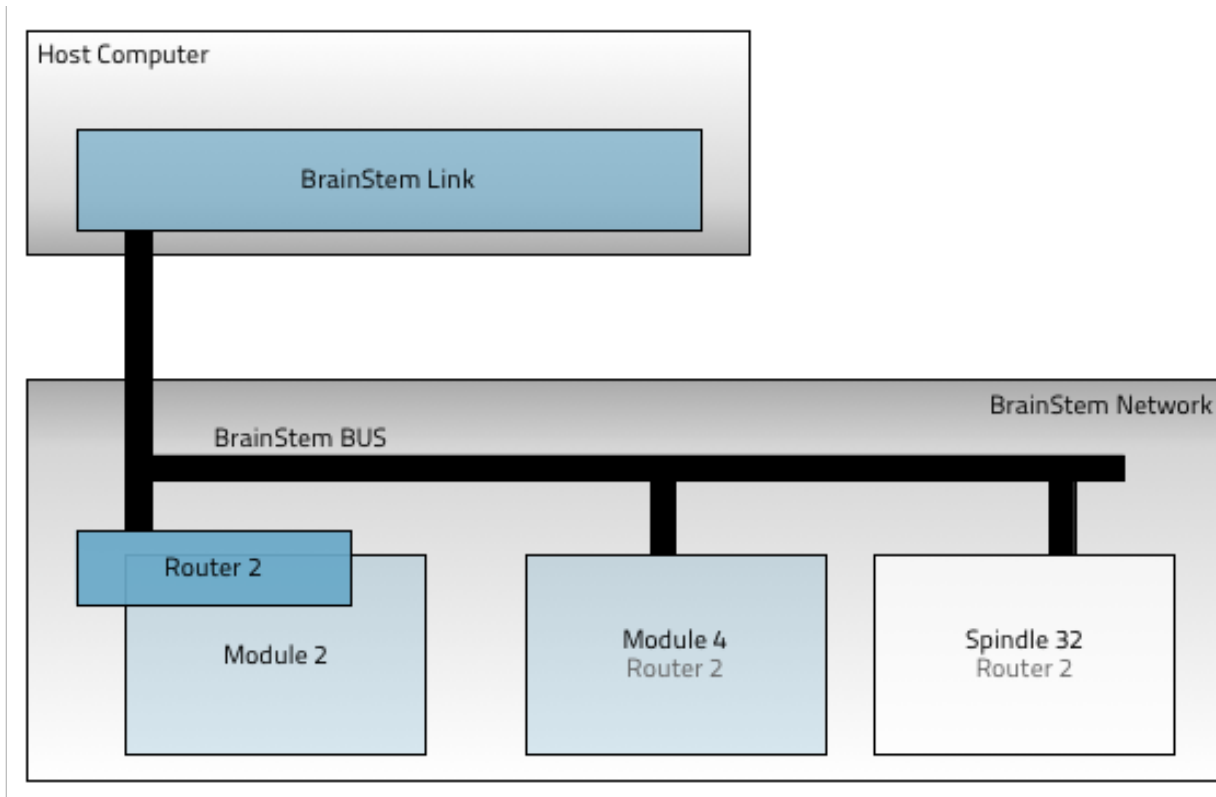

### 4.5.2 BrainStem® Bus

The BrainStem Bus is the network backbone of the BrainStem network. For existing BrainStem modules, the bus uses I2C<sup>138</sup> as the hardware transport. The brainstem network is a multiple master I2C fast mode plus network. Traffic on this bus generally follows the specification of the BrainStem protocol. Third party devices can be connected to this network, but it is most common to connect I2C peripherals to the BrainStem Module's peripheral I2C ports.

### 4.5.3 Routing

Each module in the BrainStem Network has a unique I2C address. When a link is employed, it connects through a specific transport to one of the modules in the BrainStem Network. If the host wants to send information to a module or 3rd-party device in the network, it uses the address to send the information over the link. If the linked module is not the recipient, it acts as the router to relay the information from the link's transport to the destination module over the BrainStem Network's I2C bus.

Modules can interact with one another on the BrainStem Network as peers where each can manipulate one-another's I/O. From the I2C parlance, this means the BrainStem Network has multiple masters.

When a module needs to communicate back to the host (if present), the module can send the information to the router and the router will take care of relaying that information back across the link transport to the host.

<sup>138</sup> <http://i2c.info/i2c-bus-specification>

#### 4.5.4 Module

Modules are the heart of the BrainStem architecture. Each is a self-contained hardware solution that employs the BrainStem OS and can communicate with other modules over the BrainStem Network. Additionally, all modules have a link transport that enables them to talk with a host computer outside the BrainStem Network. Examples of link transports a module may use are TCP/IP, Bluetooth, USB, or other industry standards. Available BrainStem modules are listed in the [BrainStem Products](#)<sup>139</sup> webpage.

#### 4.5.5 Host

The host is typically a larger computer or compute environment. These are most often desktop, mobile, or embedded processors running MacOS, Windows, or Linux operating systems. The protocols and transports are well documented so there is no practical restriction on what the host is running or how it works, it simply must be able to support the industry standard transport link mechanism. Many tools are provided for the above mentioned operating systems to allow control, configuration, and updating of the BrainStem modules across the host's link to the BrainStem Network.

#### 4.5.6 Entity

An Entity provides a way to interact with a type of Hardware I/O within a BrainStem module. Entities include Digital inputs and outputs, analog inputs and outputs, I<sup>2</sup>C bus', Serial UARTS, system components, and other specialized hardware classes. Entities are the fundamental building blocks of interaction between BrainStem 'clients' and the hardware that BrainStems interact with. See the reference section on [Entities](#) for more in-depth discussion.

#### 4.5.7 Discovery

The BrainStem API provides a mechanism for discovering the devices that are currently connected to the Host computer. This is part of the [C API](#) on the C/C++ library, and part of the discovery module within the [Python package](#). The Discovery API provides methods to find connection details for a specific module, as well as methods to list all connected modules. The Discovery methods return Spec objects which represent the required connection details for the device, as well as the Device's [model number](#). The list of model numbers is provided on the [C API](#) page and the [Python API](#) page.

### 4.6 USB Drivers

Acroname has removed the need for kernel drivers for BrainStem devices across all of the platforms that we support. There is no longer a need to install drivers. However, both Linux and Windows 7 have steps that are required to allow BrainStem devices to work properly.

---

<sup>139</sup> [https://acroname.com/store-grid/field\\_manufacturer/acroname](https://acroname.com/store-grid/field_manufacturer/acroname)

### 4.6.1 Mac OS X

On Mac OSX there are no installation procedures required.

### 4.6.2 Linux Ubuntu

On Linux systems, users must run a script to properly set ownership and permissions for BrainStem devices. The script is located within the `brainstem_linux_driverless` folder, and is called `udev.sh`.

```
$> cd /path/to/brainstem_linux_driverless
$> ./udev.sh
```

**Note:** Executing the commands within `udev.sh` requires `sudo` privileges. You will be prompted for your login password when you execute the script. Once you execute the script, you may have to log out and back in.

In addition to setting the `udev` rules, Linux operating systems require system packages to be installed:

- **x86\_64 Ubuntu LTS 16.04, 18.04, 20.04, 22.04, 24.04**
  - Required dependencies: `apt install xcb*`
- **x86\_64 Red Hat 8**
  - Required dependencies: `dnf install qt5-qtbase-gui`
- **x86\_64 Red Hat 9**
  - Required dependencies: `dnf install qt6-qtbase-gui`
- **arm64v8 Ubuntu LTS 16.04, 18.04, 20.04, 22.04, 24.04**
  - Required dependencies: `apt install xcb*`
- **i686 Ubuntu LTS 16.04**
  - Required dependencies: `apt install xcb*`

### 4.6.3 Windows 7 USB Driverless Installation

On the Windows 7 OS an installation is required to allow BrainStem devices to be recognized by the system. BrainStem devices use the Microsoft provided WinUSB device drivers to communicate with the brainstem. On Windows 7 operating systems the WinUSB driver is not installed automatically. On more modern versions of Windows newer than 7 this process is automatic and BrainStem devices need no install.

There is a `windows_driver_installation.pdf`, within the Drivers folder of the [BrainStem Development Kit \(BDK\)](#)<sup>140</sup>, that describes the process for installing the WinUSB Driver on Windows 7 OS.

<sup>140</sup> <https://acroname.com/api>

## 4.7 Appendix

### 4.7.1 Appendix I: BrainStem Universal Entity Interface (UEI)

Most of the BrainStem 2.0 functionality is represented by abstract entities. These entities are things like battery voltage, the module address, or an analog voltage. These entities are accessed in a common command interface called a UEI. These UEIs allow various clients to access module entities both locally and over the BrainStem's network. Clients include the Host, and Reflex code running on the module or on another module in the network.

#### How UEI's Work

UEI's allow the setting and getting of entity information. This information can be in empty, byte, 2-byte, 4-byte, or N-byte data sizes and the UEI's allow a common mechanism for either reading or writing these entity values. UEI Values of 2-byte and 4-byte are stored in big endian format. Some entities are limited to strictly reading (getting) or writing (setting), based on the underlying entity properties. For instance, an A2D input on a BrainStem module can be queried (read) but not written. An empty write is used to trigger an entity on the module, much like a void parameter to a routine in C.

The mechanism for both reads and writes is performed with an exchange of two UEI's. Reads use a GET/VAL pair where the entity value is requested (GET) and a value is sent back as the reply (VAL). Writes use a SET/ACK pair where the write employs a SET UEI and then an optional ACK response can be sent to learn the status of the SET operation.

There is one other mode of operation which is called streaming. When streaming has been enabled, the device will automatically send new values to the requestor by asynchronously generating and sending a VAL payload.

#### UEI Classes

Each UEI is part of a group or class of UEI's that share a common subsystem within the BrainStem 2.0 architecture. These classes directly correspond to underlying command structures within the protocols on the link and BrainStem network. The classes also logically group common functionality for various entities.

#### Example UEI Classes

- System - These are system global values like the module's serial number, I2C rate, etc. Not all modules will have all possible system UEI's available, based upon functionality.
- Servo - This class collects all the common functionality around a servo input/output for modules supporting servos. These may include things like enable, reverse, and position UEI's along with others.
- Analog - Both A2D and DAC channels are grouped in this class of UEI's as they often share functionality or are conceptually similar.
- Port - The class used for USB Port manipulation, enabling/disabling data or power.

## The GET/VAL UEI Transaction

The UEI GET/VAL transaction is a back-and-forth between the requestor (client) and the BrainStem 2.0 module (server) where the entity being read is located. There are several client types including the host, another module, a virtual machine running on the network's modules, or a third-party device on the BrainStem network. The requestor first identifies the full entity and specifies a GET operation. The requestor also is responsible for identifying where the response (VAL operation) should be sent. Both of these operations are asynchronous commands.

Breaking this down further, lets first consider the GET UEI from the client requestor. This specifies 5 or 6 specific pieces of information:

### UEI GET Request

- Command - The command that groups the class of UEI's in which the entity is included (This is part of BrainStem 2.0 command structure).
- Operation - the operation of the UEI which is GET in the case where the possible operations are VAL (0), GET (1), SET (2), or ACK (3)
- Option - The specific option code within the class of UEI's
- Reply - Identifies the requestor so the response returns to that requestor where the possible options include Host (1), I2C (2), or Reflex (3).
- Index - The array index of the class. This allows for multiple groups of classes like ports, servos, motion channels, etc.
- Subindex (optional) - The subindex of a specific index of the class. This allows for there to be sub-components of a class like setting/getting the configuration for a channel of an equalizer class.
- ReplyID (optional) - For reply values that require more information, this information is include such as the Reflex Machine thread identifier or the remote module's address over I2C where the response will be sent. If the reply specifies the host, no additional replyID information is needed so it will not be present.

The above information is packed into a sequence of bytes for transmission to the module from the requestor. These packed bytes overlay the normal BrainStem 2.0 command structure so they are essentially a generalized set of commands for accessing entities.

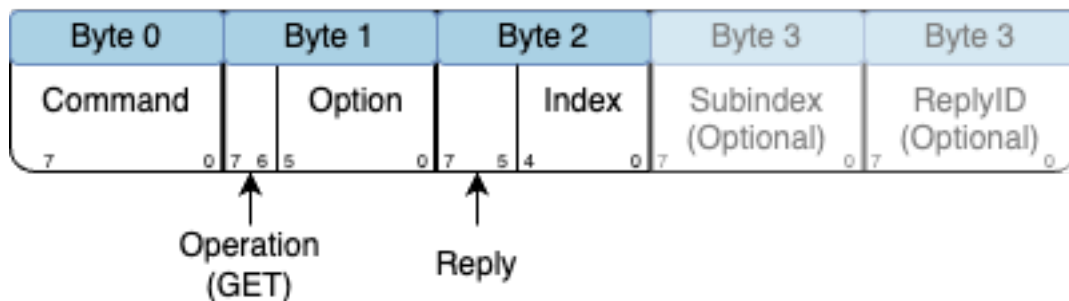


Fig. 1: Packed Byte GET UEI Structure

Once this UEI command payload is received by the module where the entity resides, the bytes are converted to the UEI information which is then validated. Provided all the information checks out and the entity can be read, a response is constructed and returned to the requestor as specified in the GET UEI information. The value may be a single byte, 2-byte, 4-byte, or N-byte value, depending on the entities native size. There are then four possible return packet structures, one for each size.



The information returned in the VAL response is identical to the GET with the following exceptions. First, the responder address identifies the entity where the entity lives which is not necessarily that of the requestor. Second, the operation is VAL. Third, subindex is not transmitted back to the requestor in the VAL. Finally, the data (1-N bytes) follows the index and there is no replyID.

### UEI VAL Reply

- Command - The command that groups the class of UEI's in which the entity is included (This is part of BrainStem 2.0 command structure).
- Operation - The operation of the UIE which is VAL in this case where the possible operations are VAL (0), GET (1), SET (2), or ACK (3).
- Option - The specific option code within the class of UEI's
- State - Identifies the response state. If no errors occurred, this value is zero. If an error occurred the high bit (7) of this byte will be set.
- Stream - Identifies if this is a streaming payload or not. If the payload is a normal GET/VAL, this value is zero. If the payload is streamed asynchronously bit (6) of this byte will be set.
- Index - The array index of the class. This allows for multiple groups of classes like ports, servos, motion channels, etc.
- Data - 1, 2, 4, or N bytes for the entity value that was read. If an error occurred, the error bit is set in the state and the data is always a 1-byte error value describing the error.
- Continue - Identifies if there are subsequent payloads after this one that should be used in conjunction or if this is the last payload for the value.
- Sequence - Used to identify the payload index for a multi-payload response.
- Responder Address - The responding entity's module address so the requestor can potentially match the initial request with this response. For replies to the host, this responder address is implicit in the inbound packet protocol so the responder address is not sent in host responses.

### UEI VAL Error Handling

In some cases, the UEI GET request may be incorrect, refer to a non-existent entity, or have some type of mode error like reading from a write-only entity. If the request cannot be fulfilled for some such reason, a response is still sent but the response simply contains an error state and [error code](#).

### The SET/ACK UEI Transaction

Much like GET/VAL transactions which are request/response, the SET/ACK is a request/acknowledge pair of commands. The SET sends a payload of data to write to the entity and the ACK offers acknowledgment and possibly an error code. The ACK is optional so a requestor can "set and forget" if the acknowledgement is not desired. Typically the ACK is used to synchronize behavior on the requesting side to ensure that the value has been written before proceeding. When this synchronizing is not needed, the ACK needn't be requested.

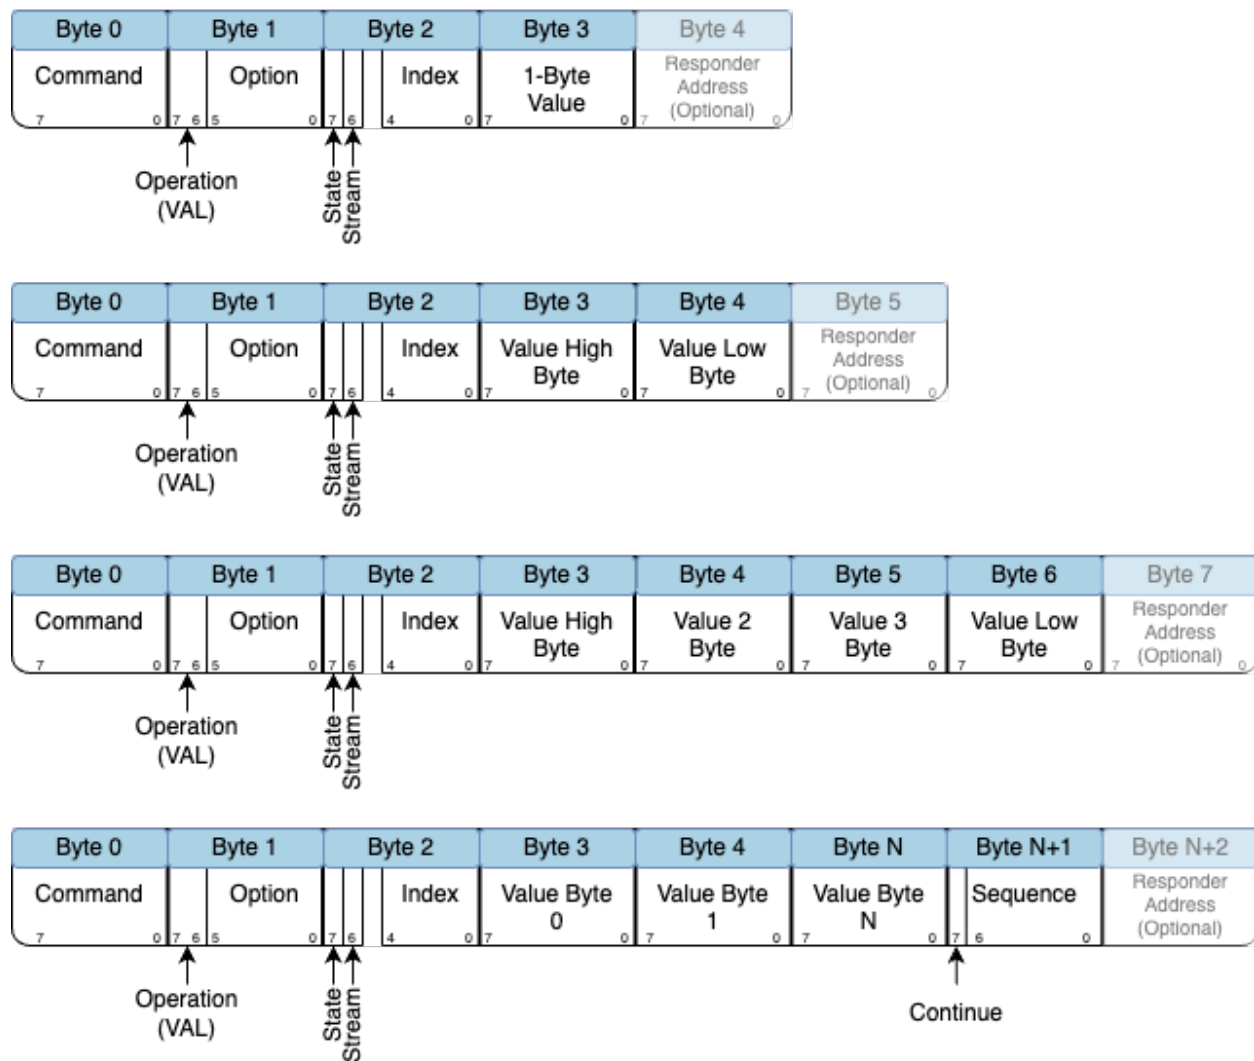


Fig. 2: Packed Byte VAL UEI Structure 1, 2, 4, and N Byte Values

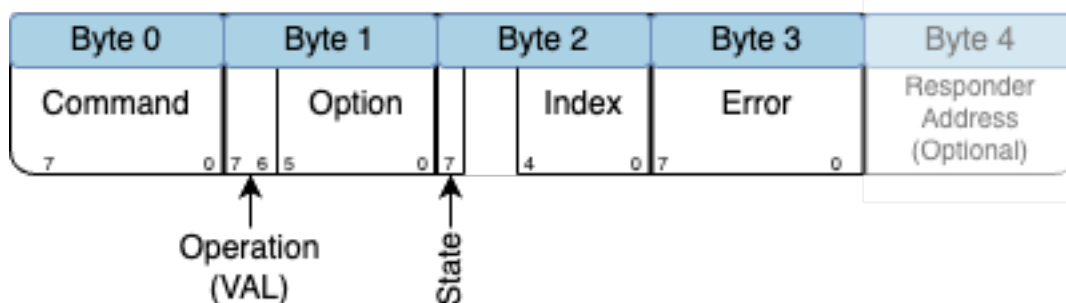


Fig. 3: Packed Byte VAL UEI Error Structure

## UEI SET Request

- Command - The command that groups the class of UEI's in which the entity is included (This is part of BrainStem 2.0 command structure).
- Operation - The operation of the UEI which is SET in this case where the possible operations are VAL (0), GET (1), SET (2), or ACK (3).
- Option - The specific option code within the class of UEI's
- Reply - Identifies the requestor so the acknowledgement returns to that requestor where the possible options include none (no acknowledgement), Host (1), I2C (2), or Reflex (3).
- Index - The array index of the class. This allows for multiple groups of classes like ports, servos, motion channels, etc.
- Subindex (optional) - The subindex of a specific index of the class. This allows for there to be sub-components of a class like setting/getting the configuration for a channel of an equalizer class.
- Data - empty, 1, 2, 4, or N bytes for the entity value or trigger being written.
- Continue - Identifies if there are subsequent payloads after this one that should be used in conjunction or if this is the last payload for the value.
- Sequence - Used to identify the payload number for a multi-payload response. If the value is greater than what can fit in 1 payload, the continue bit will be set and there will be multiple payloads each with an incrementing sequence number until the last payload in which the continue bit will be set low.
- ReplyID (optional) - For reply values that require more information, this information is include such as the Reflex Machine thread identifier or the remote module's address over I2C where the response will be sent. If the reply specifies the host, no additional replyID information is needed so it will not be present.

Once a SET is performed, the module responds to the reply location if one was specified. The response is an ACK operation which indicates success or an error. Again, if a reply of "none" was specified, there is no ACK sent anywhere.

## UEI ACK Reply

- Command - The command that groups the class of UEI's in which the entity is included (This is part of BrainStem 2.0 command structure).
- Operation - The operation of the UIE which is ACK in this case where the possible operations are VAL (0), GET (1), SET (2), or ACK (3).
- Option - The specific option code within the class of UEI's
- State - Identifies the response state. If no errors occurred, this value is zero. If an error occurred the high bit (7) of this byte will be set.
- Index - The array index of the class. This allows for multiple groups of classes like ports, servos, motion channels, etc.
- Responder Address - The module address from where the ACK is being sent. This helps the requestor verify the completion status of the SET command. When replies are sent to the host, the responder address is implicit in the link protocol so it is not included host acknowledgements.

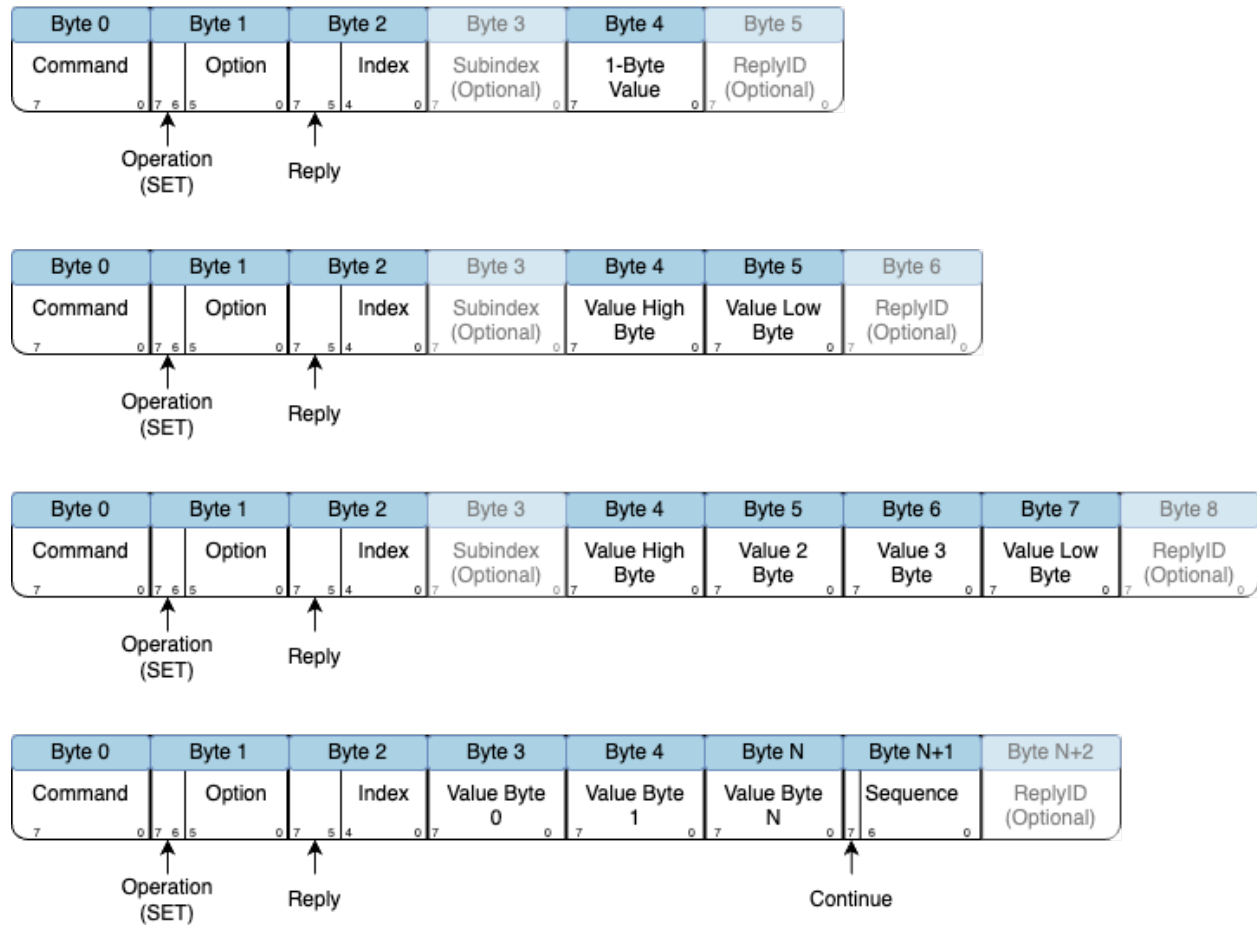


Fig. 4: Packed Byte SET UEI Structure 1, 2, 4, and N Byte Values

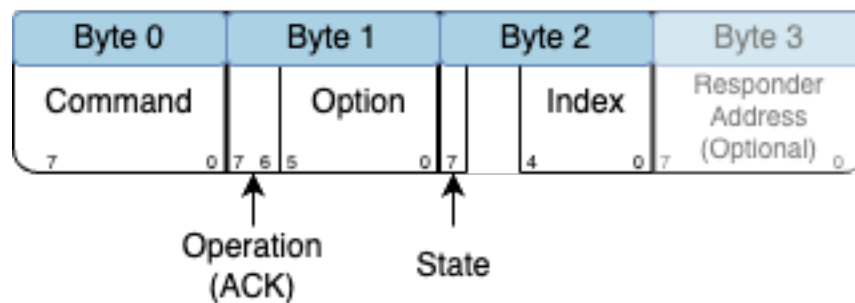


Fig. 5: Packed Byte ACK UEI Structure

## UEI ACK Error Handling

In the event of an error such as invalid entity index, configuration, etc., the error bit is set in the ACK state and an *error code* is added to the ACK further describing the error to the SET requestor.



Fig. 6: Packed Byte ACK UEI Error Structure

## The Streaming VAL UEI Transaction

There is also a way to configure the device to asynchronously create UEI update payloads that will stream to the requestor upon change of the value. This is very useful for capturing all the voltage measurements on a USB port or being notified of a status change so polling isn't required. The appropriate command, index, option combo is configured via the *Link Class* using the Stream Command.

## UEI VAL Streaming

- Command - The command that groups the class of UEI's in which the entity is included (This is part of BrainStem 2.0 command structure).
- Operation - The operation of the UIE which is VAL in this case where the possible operations are VAL (0), GET (1), SET (2), or ACK (3).
- Option - The specific option code within the class of UEI's
- State - Identifies the response state. If no errors occurred, this value is zero. If an error occurred the high bit (7) of this byte will be set.
- Stream - Identifies if this is a streaming payload or not. If the payload is a normal GET/VAL, this value is zero. If the payload is streamed asynchronously bit (6) of this byte will be set.
- Index - The array index of the class. This allows for multiple groups of classes like ports, servos, motion channels, etc.
- Stream Type - Identifies the type of value that will be coming back, 1, 2, 4, or N byte value, with/without Subindex.
- Subindex (optional) - The subindex of a specific index of the class. This allows for there to be sub-components of a class like setting/getting the configuration for a channel of an equalizer class.
- Seconds - The 4 byte value of seconds of uptime for the device.
- uSeconds - The 4 byte value of microseconds of uptime for the device. (To be used in conjunction with seconds of uptime above)
- Data - 1, 2, 4, or N bytes for the entity value that was read. If an error occurred, the error bit is set in the state and the data is always a 1-byte error value describing the error.

- Continue - Identifies if there are subsequent payloads after this one that should be used in conjunction or if this is the last payload for the value.
- Sequence - Used to identify the payload index for a multi-payload response.
- Responder Address - The responding entity's module address so the requestor can potentially match the initial request with this response. For replies to the host, this responder address is implicit in the inbound packet protocol so the responder address is not sent in host responses.

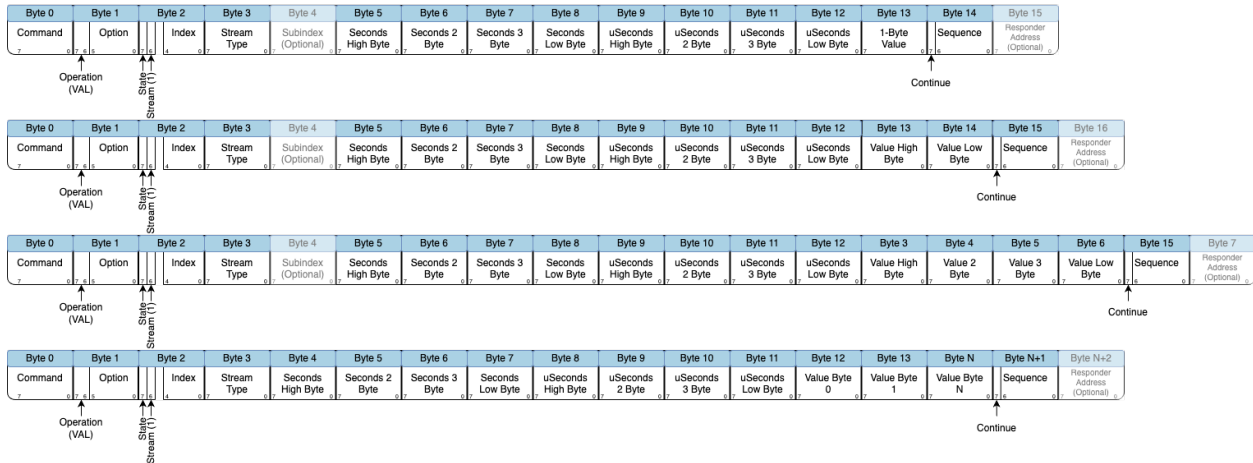


Fig. 7: Packed Byte VAL UEI Stream Structure 1, 2, 4, and N Byte Values

## 4.7.2 Appendix II: BrainStem Communication Protocol

The BrainStem Communication Protocol is a very light weight transport independent binary packet protocol. The protocol simply imposes a max packet length restriction, and designates two bytes of the packet as “header” bytes which contain information used to address, and handle packets.

The BrainStem protocol is a command protocol. Commands are the foundational communication mechanism for BrainStem modules. Every BrainStem command has a similar structure shown in the following diagram.

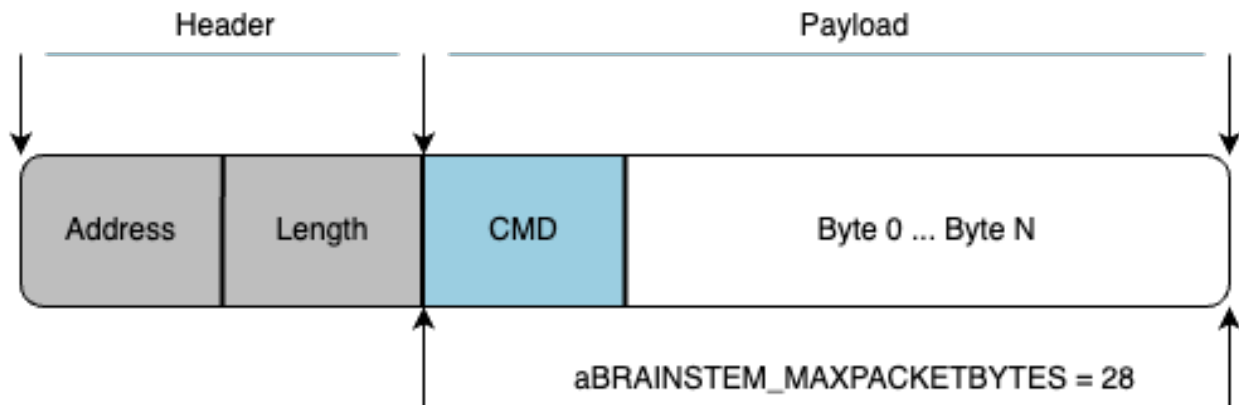


Fig. 8: Typical BrainStem Command Structure

### Packet Structure

- Header - The packet header consists of the module address and length byte.
- Payload - The remainder of the packet is the payload, and consists of the command code followed by data bytes. The packet length cannot exceed aBRAINSTEM\_MAXPACKETBYTES (28 bytes).
- Address - The BrainStem module address that will receive the packet. This value is an even number that can range from the value 2 to 254. BrainStem module types have different default address values (Check your product Datasheet). The module address can be changed by the user, please see the command reference section on the System command for more information.
- Length - The length of the packet Payload in Bytes.
- Command - The command code for the BrainStem command. See the reference section on BrainStem commands for more information.
- Byte 0 .. Byte N - The command data bytes, a command may impose structure on the data portion of the packet. This is documented in the command reference.

## Byte Order

The BrainStem protocol does not specify byte order for the data portion of the packet, but *UEI* datatypes larger than byte are stored in bigEndian byte order.

## Command Interaction

*UEI*'s impose a request response behavior on top of the BrainStem protocol, but the protocol does not itself define a need for a response. Delivery of data is best effort. Some Link transports (TCP/IP) make guarantees about data delivery, this is not part of the BrainStem protocol. Please see specific command documentation to determine whether to expect a response packet.


There are currently two cases when a BrainStem client may receive an error message unrelated to a request. The first case occurs when a module address is given where no such module exists, in this case a cmdMSG packet will be received with a no I2C ack payload. The second case occurs when a Reflex VM exits unexpectedly, a client may receive a cmdMSG packet with a vm exit payload. Please see the Command reference section for more information.



### 4.7.3 Appendix III: BrainStem Networking

The BrainStem bus is the network backbone of the BrainStem network. Most BrainStem modules, including all MTM modules, use an I2C<sup>141</sup> as the hardware transport. The brainstem network is a multiple master I2C fast mode plus (FM+, 1MHz) network. Traffic on this bus generally follows the specification of the BrainStem protocol. Third party devices can be connected to this network, but it is most common to connect I2C peripherals to a BrainStem module's peripheral I2C ports.

BrainStem networks closely mirror standard I2C networks, but aren't necessarily always on an I2C physical network. For example, BrainStem network as described below may use a CAN bus physical network.

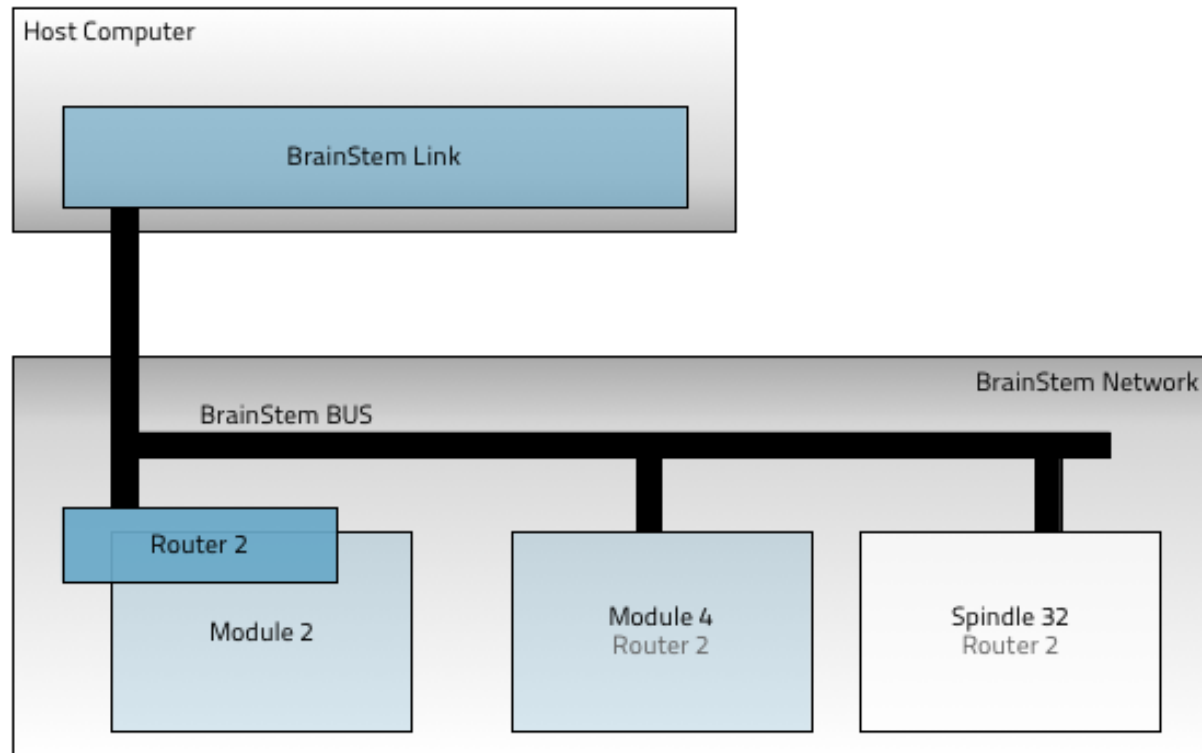

<sup>141</sup> <http://i2c.info/i2c-bus-specification>

## **Module Addresses**

BrainStem devices rely on having a unique module address on the bus that following I2C conventions. The Brainstem module address is a single unsigned-byte, and can take even (non-odd) values from 2 to 254. Each class of BrainStem module has a specific default base address, listed in the table below. A software offset to this address can be set with the BrainStem API, and MTM modules include a set of hardware offset pins which can be used to modify module addresses with external pin connections.

BrainStem Model	Default Base Address
40Pin BrainStems EtherStem USBStem	2
MTM-EtherStem MTM-USBStem	4
MTM-PM-1 USBHub2x4 USBHub3+ USBHub3c USBCSwitch	6
MTM-IO-Serial	8
MTM-DAQ-2	10
MTM-Relay	12
MTM-Load-1	14
USBCSwitchPro	16

## Hardware Offsets

Hardware offset pins are useful when more than one of the same type of module (i.e. modules with the same base address) are installed on a single BrainStem network. Applying a different hardware offset to each module of the same type the modules to seamlessly and automatically be configured on the network for inter-module communication. Further, modules can be simply swapped in and out of the network without needing to pre-configure a module's address before being added to a network. Finally, when a system has more than one of the same type of module in a network, the module's hardware offset can be used to determine the module's physical location and thus its interconnection and intended function.

Each hardware offset pin can be left floating or pulled to ground with a 1k $\Omega$  resistor (or smaller) Pins can also simply be shorted to ground. Pin states are only read when the module boots, either from a power cycle, hardware reset or software reset. The hardware offset pins are treated as an inverted binary number which is multiplied by 2 and added the to the module's base address. The hardware offset calculation is detailed in the following table.

Pin0	Pin1	Pin2	Pin3	Address Offset	Base Address	Final Address
NC	NC	NC	NC	0	4	4
0	NC	NC	NC	2	4	6
NC	0	NC	NC	4	4	8
NC	NC	0	NC	8	4	12
NC	NC	NC	0	16	4	20
0	NC	NC	0	2+16=18	4	22


## Router Addresses

In addition to the module address, each BrainStem device has a network router address. The router address tells the module which BrainStem in the network is connected to the host; i.e. which BrainStem device is acting as the network gateway. If the router address of the module is set to its own module address, then it will send heartbeat traffic and route host-bound traffic from the BrainStem network through its transport link (e.g. USB or Ethernet). If a module's router address is different from it's module address, it will route any communication intended for the host computer to its router's address on the BrainStem network.

By default, each BrainStem's router address is set to its default base address plus any offset. In this way, each module will communicate over its transport link out of the box. In order to have multiple BrainStem modules communicate across a BrainStem network over one transport link, each module needs have its router address configured. The BrainStem API provides a simple mechanism to quickly configure the router address of all modules on the same BrainStem network: `routeToMe`.

## Setting up a BrainStem Network

This section of the appendix will walk you through setting up the network shown in the figure below. This is fairly typical network containing three BrainStem devices since it represents a fully populated MTM development board.

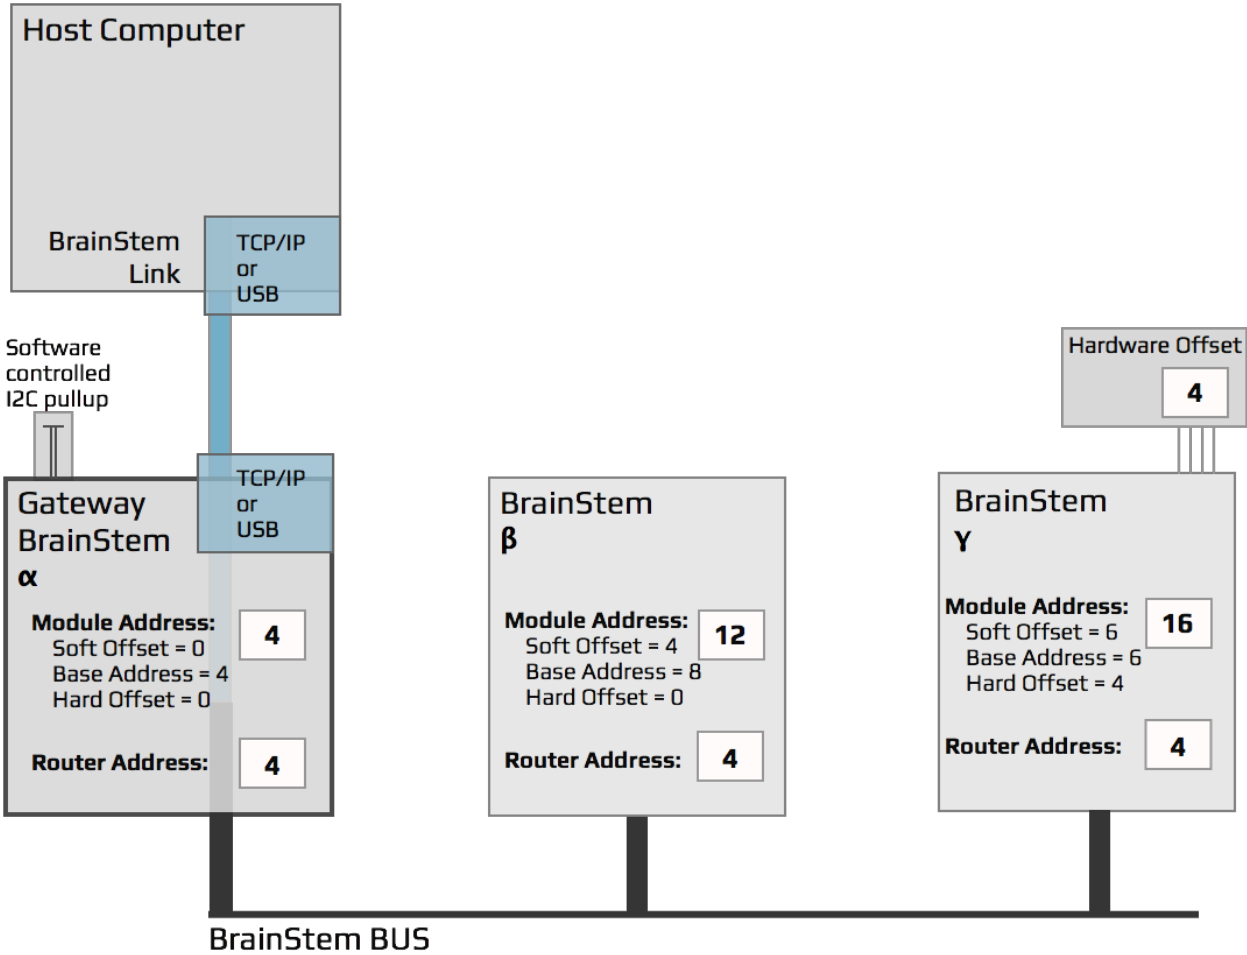

## Out of the Box

In the example above the Routing or Gateway BrainStem ( $\alpha$ ) is set to route through itself; i.e. its module and router addresses are equal. This is the setup that comes with the BrainStem out of the box. To complete the example, two more BrainStem devices are needed and they will have their router and address software offsets changed (described below).

## I2C Pull-ups

Most BrainStem use an I2C physical network. I2C relies on bus pull-ups resistors. BrainStem modules have built-in 330 $\Omega$  pull-ups to 3.3V which should allow for communication at 1Mbps. There should be no other pull-ups on the network.

## Configuring module routers: the quick way

The *system entity* contains the entity `routeToMe`. Calling this from a linked module will temporarily configure all modules on the same BrainStem network to route to the linked module. For example, using the setup from above, we can simply connect to the  $\alpha$  module:

```
>>> import brainstem
>>> alpha = brainstem.stem.MTMUSBStem() # or the appropriate module type
>>> alpha.discoverAndConnect(brainstemlink.Spec.USB)
```

Then we tell all other modules to route their traffic to the  $\alpha$  module:

```
>>> alpha.system.routeToMe(1)
```

After this, all modules in the network will start receiving and sending heartbeat traffic, and can be connected from the host:

```
>>> beta = brainstem.stem.MTMIOSerial()
>>> beta.connectThroughLinkModule(alpha)
```

Similarly, the  $\gamma$  module can be constructed and connected. All features and abilities of the networked modules are now instantly available to the host software as if they were directly linked the host. This powerful networking allows large networks of modules to be controlled from a single host link.

## Setting and saving address offsets and router: the hard(er) way

If it is desirable to configure modules to change their module address or router setting even through power cycles or resets, the BrainStem API provide an interface for directly setting and saving the address offset and the router of each module. This method is more complicated than the `routeToMe` interface, but is available to provide flexibility for complex network setups. Never worry, if a device's router address is saved to a non-default value simply creating a link directly to that module (e.g. via USB) will temporarily re-configure its route to itself so the link can be functional.

The *system entity* contains the options for getting and setting the module offsets and router address of the brainstem module. Module offsets and the router address are applied after a system save and reset. The python interpreter code below sets the module and router addresses for the two modules ( $\beta$  and  $\gamma$ ). The same exercise can be done in C++ with almost the same code. For this example, we will assume that both  $\beta$  (beta) and  $\gamma$  (gamma) are new modules and that are directly connected via a USB cable. To simplify this process,

the modules can be connected and configured one at a time. Importing a few key modules makes the following commands bit shorter:

```
>>> import brainstem
>>> from brainstem import link
>>> from brainstem import discover
>>> from brainstem.stem import MTMIOSerial # or other modules needed
```

Then, connecting to the  $\beta$  module is done with:

```
>>> beta = MTMIOSerial() # or the appropriate module type
>>> beta.connect(discover.findFirstModule(link.Spec.USB)) # connect to beta.
```

Then set and save the router and module software offsets with:

```
>>> beta.system.setModuleSoftwareOffset(4)
>>> beta.system.setRouter(4)
>>> beta.system.save()
>>> beta.system.reset() # beta stops communicating here, and will return a timeout on
↳this call.
>>> beta.disconnect() # good practice to always call disconnect
```

After calling reset, the module will be trying to connect and communicate via the router address we defined. This router address is the module address of  $\alpha$ , the gateway BrainStem. As such, all host-bound communication will be routed to address 4 on the BrainStem network, instead of going through the module's transport link connector.

The following code sets the module software offset and the router settings on  $\gamma$  to match the diagram. Connecting to  $\gamma$  is done in same way as shown above for  $\beta$ , simply changing the module type to the appropriate module being used.

```
>>> gamma.system.setModuleSoftwareOffset(6)
>>> gamma.system.setRouter(4)
>>> gamma.system.save()
>>> gamma.system.reset() # similarly gamma stops communicating.
>>> gamma.disconnect() # good practice to always call disconnect
```

Now the BrainStem network is configured as described in the diagram above. Moving the link cable to be connected to  $\alpha$  will allow the entire network to show up via a single link cable. We can continue to use the same objects created earlier in this process by simply setting the module address to what was configured. This tells the host software what address the module can be reached at:


```
>>> beta.setModuleAddress(12) # Set the Module object's address so that we
↳communicate correctly when we reconnect.
>>> gamma.setModuleAddress(16)
```

Finally we connect directly to the Gateway BrainStem  $\alpha$ , and then connect  $\beta$  and  $\gamma$  through  $\alpha$ 's link. We should now be able to successfully send commands and receive responses on all three brainstems through the single link connection to  $\alpha$ .

```
# Connect to the gateway BrainStem. All three stem heartbeats should be active.
>>> alpha.connect(discover.findFirstModule(link.Spec.USB))
>>> beta.connectThroughLinkModule(alpha) # Now reconnect the beta and gamma through
↳the gateway module.
>>> gamma.connectThroughLinkModule(alpha)
```

## In Practice

The above example is intentionally complex in order to show the interaction of hardware offsets and software offsets within a BrainStem network. In most applications and with the MTM development board, usually the user will prefer to make minimal changes in order to form the brainstem network.

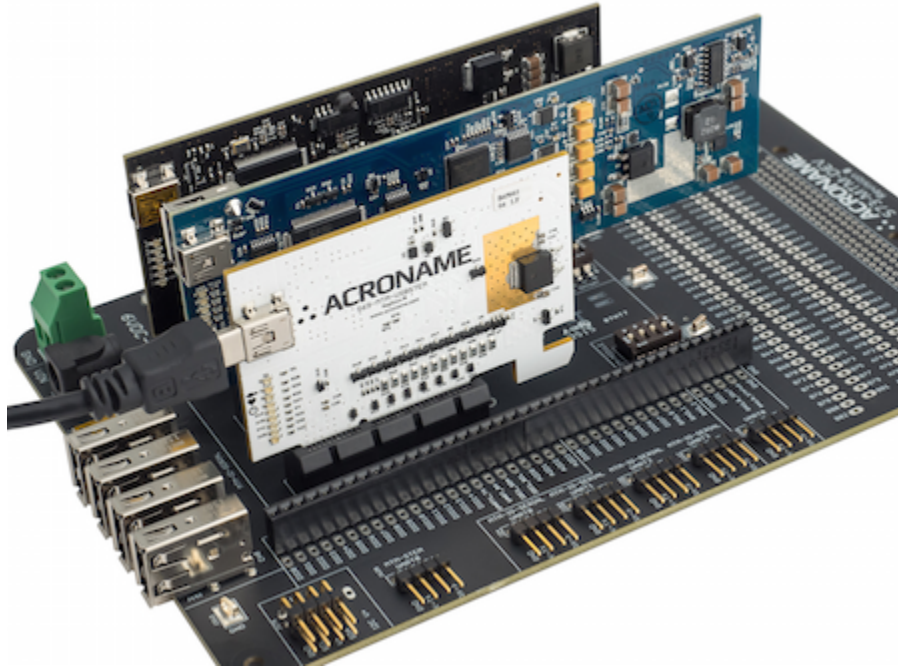

In a real life use case of an MTM-USBStem acting as the Gateway, and an MTM-IO-Serial and MTM-PM-1 boards acting as the other two devices, the only changes that need to be made are to set the router address of the MTM-IO-Serial, and the MTM-PM-1 to match the MTM-USBStem base address of 4. Each of the modules have unique base addresses so there are no software or hardware offsets to apply. Also, the default object instantiation can be used without having to set the module address.

```
>>> beta.setRouter(4)
>>> gamma.setRouter(4)
>>> beta.save()
>>> gamma.save()
>>> beta.reset()
>>> gamma.reset()
>>> beta.disconnect()
>>> gamma.disconnect()
>>> beta.connectThroughLinkModule(alpha)
>>> gamma.connectThroughLinkModule(alpha)
```



## 4.7.4 Appendix IV: Updater File Structure

As we discussed in the “*BrainStem Firmware Management*” section, Updater is our new tool updating and recovering your Brainstem modules. After playing around with it a bit you might have noticed that it keeps a history of all the devices it interacts with. In the following appendix I will be explaining the file structure Updater creates on your in or to make things easier on you.

### Locating Updater’s files on your machine

Updater stores all its files in your home directory under a hidden folder named “.acroname”. In Mac if you would like to find this directory you can open up your terminal window and type the following.

```
$> cd ~/          #Change to your home directory
$> ls -la         #List files, including hidden files
```

Now lets enter the folder and look around.

```
$> cd ~/.acroname/updater
```

You may have noticed that I skipped over a directory and went straight to the updater folder. Currently there are not any other files/folders in this folder; however, feel free to explore around.

Lets have a look at what is in the updater folder.

```
$> ls -lah        #List files, including hidden files and permissions
```

```
total 0
drwxr-xr-x  7 Mitch  staff   238B Dec  4 10:34 .
drwxr-xr-x  3 Mitch  staff   102B Nov 30 11:08 ..
-rw-r--r--  1 Mitch  staff    0B Nov 30 11:10 .history
drwxr-xr-x  5 Mitch  staff   170B Dec  2 11:40 3797E6F8
drwxr-xr-x  4 Mitch  staff   136B Dec  4 10:34 66F4859B
drwxr-xr-x  5 Mitch  staff   170B Dec  2 11:38 71E3928C
drwxr-xr-x  4 Mitch  staff   136B Nov 30 11:08 856C1C03
```

### Exploring the Updater files

Now that we have made it into the Updater file structure lets discuss what we see here. In the example above you will notice that there are 7 items.

- “.” - Standard directory structure: Current directory
- “..” - Standard directory structure: Parent directory
- “.history” - System level history (not current implemented).

The remaining four items are all devices (serial numbers) that the Updater utility has connected too previously.

- 3797E6F8
- 66F4859B
- 71E3928C
- 856C1C03

## Exploring the Updater Device files

Lets look into device/directory 66F4859B

```
$> cd 66F4859B
$> ls -lah           #List files, including hidden files and permissions
```

```
total 344
drwxr-xr-x  7 Mitch  staff   238B Dec  4 10:58 .
drwxr-xr-x  7 Mitch  staff   238B Dec  4 11:00 ..
-rw-r--r--  1 Mitch  staff   1.6K Dec  4 10:58 .history
-rw-r--r--  1 Mitch  staff   228B Dec  4 10:58 .settings
-rw-r--r--  1 Mitch  staff    53K Dec  4 10:58 130702287.bird
-rw-r--r--  1 Mitch  staff    52K Dec  4 10:56 75203177.bird
-rw-r--r--  1 Mitch  staff    52K Dec  4 10:57 99528558.bird
```

You will notice a similar layout from the previous example, but there are a few new items we will dig into. It is important to remember that we are now inside a folder for a specific device. Thus all the items in this folder are related to that device only.

### “.history”

As you would imagine the “.history” file includes a history of the device and all the actions we have preformed on it from within Updater. By default Updater will include basic information; however, you can also add your own messages to the history file by using the “-l” parameter. Please see *“Using Updater via CLI”* for more information. You may also choose to update this file manually. Lets take a look at the “.history” file.

```
$> vi .history
```

```
2015:12:04:17:34:52 | Created device entry
2015:12:04:17:50:56 |      66F4859B  00      02      04 [USBStem  ]   2.1.5
2015:12:04:17:51:48 |      66F4859B  00      02      04 [USBStem  ]   2.1.5
2015:12:04:17:56:36 | Current settings:
2015:12:04:17:56:36 |      Serial#:[66F4859B, 1727301019]
2015:12:04:17:56:36 |      Module#:[02]
2015:12:04:17:56:36 |      Model#:[04, USBStem]
2015:12:04:17:56:36 |      Firmware Version:  2.1.5
2015:12:04:17:56:36 | Updating device from BIRD file: [/Users/Mitch/.acroname/updater/
66F4859B/75203177.bird]
2015:12:04:17:56:37 | Update successful. Transferred 3 blocks, 57664 total bytes
2015:12:04:17:56:50 |      66F4859B  00      06      04 [USBStem  ]   2.1.3
2015:12:04:17:57:39 | Current settings:
2015:12:04:17:57:39 |      Serial#:[66F4859B, 1727301019]
2015:12:04:17:57:39 |      Module#:[06]
2015:12:04:17:57:39 |      Model#:[04, USBStem]
2015:12:04:17:57:39 |      Firmware Version:  2.1.3
2015:12:04:17:57:39 | Updating device from BIRD file: [/Users/Mitch/.acroname/updater/
66F4859B/99528558.bird]
2015:12:04:17:57:42 | Update successful. Transferred 3 blocks, 57844 total bytes
2015:12:04:17:57:52 |      66F4859B  00      02      04 [USBStem  ]   2.1.4
2015:12:04:17:58:03 | Current settings:
2015:12:04:17:58:03 |      Serial#:[66F4859B, 1727301019]
2015:12:04:17:58:03 |      Module#:[02]
2015:12:04:17:58:03 |      Model#:[04, USBStem]
2015:12:04:17:58:03 |      Firmware Version:  2.1.4
```

(continues on next page)

(continued from previous page)

```

2015:12:04:17:58:03 | Updating device from BIRD file: [/Users/Mitch/.acroname/updater/
66F4859B/130702287.bird]
2015:12:04:17:58:05 | Update successful. Transferred 3 blocks, 59292 total bytes
2015:12:04:17:58:12 |      66F4859B  00      02      04 [USBStem    ]    2.1.5

```

***“.settings”***

Just like the “.history” file the “.settings” file is also self explanatory. Here Updater information in which it needs to communication with the brainstem module. Although you have read/write access to this file it is recommended that you do not make any changes to this file. Lets take a look at what type of information is stored in the “.settings” file.

```
$> vi .history
```

```

FIRMWARE= 2.1.5
LAST_TRANSFER_DATE=Fri Dec 4 10:58:05 2015
LAST_TRANSFER_VERSION=/Users/Mitch/.acroname/updater/66F4859B/130702287.bird
LINK_TYPE=USB
MODEL_NUMBER=4
MODULE_NAME=USBStem
MODULE_NUMBER=2
SERIAL_NUMBER=0x66F4859B

```

***“.bird” Files***

The remaining 4 items from the *device files* listed above are called “.bird” files. This is the file type in which we store our firmware. For this particular device I have updated the firmware 3 times and thus have 3 “.bird” files stored under this device.



## A

aBaudRate (*C++ enum*), 945  
 aBaudRate::aBAUD\_115200 (*C++ enumerator*), 945  
 aBaudRate::aBAUD\_19200 (*C++ enumerator*), 945  
 aBaudRate::aBAUD\_230400 (*C++ enumerator*), 945  
 aBaudRate::aBAUD\_2400 (*C++ enumerator*), 945  
 aBaudRate::aBAUD\_38400 (*C++ enumerator*), 945  
 aBaudRate::aBAUD\_4800 (*C++ enumerator*), 945  
 aBaudRate::aBAUD\_57600 (*C++ enumerator*), 945  
 aBaudRate::aBAUD\_9600 (*C++ enumerator*), 945  
 aBRAINSTEM\_MAXPACKETBYTES (*C macro*), 876  
 Acroname::BrainStem2CLI::aErr (*C++ enum*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrAsyncReturn (*C++ enumerator*), 1156  
 Acroname::BrainStem2CLI::aErr::aErrBusy (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrCancel (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrConfiguration (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrConnection (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrDuplicate (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrEOF (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrFileNameLength (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrIndexRange (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrInitialization (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrInvalidEntity (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrInvalidOption (*C++ enumerator*), 1156  
 Acroname::BrainStem2CLI::aErr::aErrIO (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrMedia (*C++ enumerator*), 1156  
 Acroname::BrainStem2CLI::aErr::aErrMemory (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrMode (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrNone (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrNotFound (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrNotReady (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrOverrun (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrPacket (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrParam (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrParse (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrPermission (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrRange (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrRead (*C++ enumerator*), 1154  
 Acroname::BrainStem2CLI::aErr::aErrResource (*C++ enumerator*), 1156  
 Acroname::BrainStem2CLI::aErr::aErrShortCommand (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrSize (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrStreamStale (*C++ enumerator*), 1156  
 Acroname::BrainStem2CLI::aErr::aErrTimeout (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrUnimplemented (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrUnknown (*C++ enumerator*), 1156  
 Acroname::BrainStem2CLI::aErr::aErrVersion (*C++ enumerator*), 1155  
 Acroname::BrainStem2CLI::aErr::aErrWrite (*C++ enumerator*), 1154

Acroname::BrainStem2CLI::AnalogClass (C++ class), 1164  
Acroname::BrainStem2CLI::AnalogClass::~~AnalogClass (C++ function), 1164  
Acroname::BrainStem2CLI::AnalogClass::AnalogClass (C++ function), 1164  
Acroname::BrainStem2CLI::AnalogClass::getBulkCaptureNumberOfSamples (C++ function), 1167  
Acroname::BrainStem2CLI::AnalogClass::getBulkCaptureSampleRate (C++ function), 1166  
Acroname::BrainStem2CLI::AnalogClass::getBulkCaptureState (C++ function), 1167  
Acroname::BrainStem2CLI::AnalogClass::getConfiguration (C++ function), 1166  
Acroname::BrainStem2CLI::AnalogClass::getEnable (C++ function), 1165  
Acroname::BrainStem2CLI::AnalogClass::getRange (C++ function), 1165  
Acroname::BrainStem2CLI::AnalogClass::getValue (C++ function), 1164  
Acroname::BrainStem2CLI::AnalogClass::getVoltage (C++ function), 1164  
Acroname::BrainStem2CLI::AnalogClass::initiateBulkCapture (C++ function), 1167  
Acroname::BrainStem2CLI::AnalogClass::setBulkCaptureNumberOfSamples (C++ function), 1166  
Acroname::BrainStem2CLI::AnalogClass::setBulkCaptureSampleRate (C++ function), 1166  
Acroname::BrainStem2CLI::AnalogClass::setConfiguration (C++ function), 1166  
Acroname::BrainStem2CLI::AnalogClass::setEnable (C++ function), 1166  
Acroname::BrainStem2CLI::AnalogClass::setRange (C++ function), 1165  
Acroname::BrainStem2CLI::AnalogClass::setValue (C++ function), 1165  
Acroname::BrainStem2CLI::AnalogClass::setVoltage (C++ function), 1165  
Acroname::BrainStem2CLI::AppClass (C++ class), 1167  
Acroname::BrainStem2CLI::AppClass::~~AppClass (C++ function), 1168  
Acroname::BrainStem2CLI::AppClass::AppClass (C++ function), 1168  
Acroname::BrainStem2CLI::AppClass::execute (C++ function), 1168  
Acroname::BrainStem2CLI::ClockClass (C++ class), 1169  
Acroname::BrainStem2CLI::ClockClass::~~ClockClass (C++ function), 1169  
Acroname::BrainStem2CLI::ClockClass::ClockClass (C++ function), 1169  
Acroname::BrainStem2CLI::ClockClass::getDay (C++ function), 1170  
Acroname::BrainStem2CLI::ClockClass::getHour (C++ function), 1170  
Acroname::BrainStem2CLI::ClockClass::getMinute (C++ function), 1170  
Acroname::BrainStem2CLI::ClockClass::getMonth (C++ function), 1170  
Acroname::BrainStem2CLI::ClockClass::getSecond (C++ function), 1171  
Acroname::BrainStem2CLI::ClockClass::getYear (C++ function), 1169  
Acroname::BrainStem2CLI::ClockClass::setDay (C++ function), 1170  
Acroname::BrainStem2CLI::ClockClass::setHour (C++ function), 1170  
Acroname::BrainStem2CLI::ClockClass::setMinute (C++ function), 1171  
Acroname::BrainStem2CLI::ClockClass::setMonth (C++ function), 1170  
Acroname::BrainStem2CLI::ClockClass::setSecond (C++ function), 1171  
Acroname::BrainStem2CLI::ClockClass::setYear (C++ function), 1169  
Acroname::BrainStem2CLI::DeviceNode (C++ class), 1156  
Acroname::BrainStem2CLI::DeviceNode::~~DeviceNode (C++ function), 1157  
Acroname::BrainStem2CLI::DeviceNode::DeviceNode (C++ function), 1157  
Acroname::BrainStem2CLI::DeviceNode::hubPort (C++ member), 1157  
Acroname::BrainStem2CLI::DeviceNode::hubSerialNumber (C++ member), 1157  
Acroname::BrainStem2CLI::DeviceNode::idProduct (C++ member), 1157  
Acroname::BrainStem2CLI::DeviceNode::idVendor (C++ member), 1157  
Acroname::BrainStem2CLI::DeviceNode::speed (C++ member), 1157  
Acroname::BrainStem2CLI::DigitalClass (C++ class), 1171  
Acroname::BrainStem2CLI::DigitalClass::~~DigitalClass (C++ function), 1171  
Acroname::BrainStem2CLI::DigitalClass::DigitalClass (C++ function), 1171  
Acroname::BrainStem2CLI::DigitalClass::getConfiguration (C++ function), 1172  
Acroname::BrainStem2CLI::DigitalClass::getLinkChannel (C++ function), 1173  
Acroname::BrainStem2CLI::DigitalClass::getState (C++ function), 1172  
Acroname::BrainStem2CLI::DigitalClass::getStateAll (C++ function), 1173  
Acroname::BrainStem2CLI::DigitalClass::getValue (C++ function), 1173  
Acroname::BrainStem2CLI::DigitalClass::setConfiguration (C++ function), 1172  
Acroname::BrainStem2CLI::DigitalClass::setLinkChannel (C++ function), 1173  
Acroname::BrainStem2CLI::DigitalClass::setState (C++ function), 1172  
Acroname::BrainStem2CLI::DigitalClass::setStateAll (C++ function), 1173  
Acroname::BrainStem2CLI::DigitalClass::setValue (C++ function), 1173  
Acroname::BrainStem2CLI::EqualizerClass (C++ class), 1174  
Acroname::BrainStem2CLI::EqualizerClass::~~EqualizerClass (C++ function), 1174  
Acroname::BrainStem2CLI::EqualizerClass::EqualizerClass (C++ function), 1174  
Acroname::BrainStem2CLI::EqualizerClass::getReceiverConfig (C++ function), 1174  
Acroname::BrainStem2CLI::EqualizerClass::getTransmitterConfig (C++ function), 1175  
Acroname::BrainStem2CLI::EqualizerClass::setReceiverConfig (C++ function), 1174  
Acroname::BrainStem2CLI::EqualizerClass::setTransmitterConfig (C++ function), 1174  
Acroname::BrainStem2CLI::EthernetClass (C++ class), 1175  
Acroname::BrainStem2CLI::EthernetClass::~~EthernetClass (C++ function), 1175

Acroname::BrainStem2CLI::EthernetClass::EthernetClass (C++ function), 1175  
 Acroname::BrainStem2CLI::EthernetClass::getEnabled (C++ function), 1175  
 Acroname::BrainStem2CLI::EthernetClass::getHostname (C++ function), 1179  
 Acroname::BrainStem2CLI::EthernetClass::getInterfacePort (C++ function), 1180  
 Acroname::BrainStem2CLI::EthernetClass::getIPv4Address (C++ function), 1177  
 Acroname::BrainStem2CLI::EthernetClass::getIPv4DNSAddress (C++ function), 1179  
 Acroname::BrainStem2CLI::EthernetClass::getIPv4Gateway (C++ function), 1178  
 Acroname::BrainStem2CLI::EthernetClass::getIPv4Netmask (C++ function), 1178  
 Acroname::BrainStem2CLI::EthernetClass::getMACAddress (C++ function), 1179  
 Acroname::BrainStem2CLI::EthernetClass::getNetworkConfiguration (C++ function), 1176  
 Acroname::BrainStem2CLI::EthernetClass::getStaticIPv4Address (C++ function), 1176  
 Acroname::BrainStem2CLI::EthernetClass::getStaticIPv4DNSAddress (C++ function), 1178  
 Acroname::BrainStem2CLI::EthernetClass::getStaticIPv4Gateway (C++ function), 1177  
 Acroname::BrainStem2CLI::EthernetClass::getStaticIPv4Netmask (C++ function), 1177  
 Acroname::BrainStem2CLI::EthernetClass::setEnabled (C++ function), 1175  
 Acroname::BrainStem2CLI::EthernetClass::setHostname (C++ function), 1179  
 Acroname::BrainStem2CLI::EthernetClass::setInterfacePort (C++ function), 1179  
 Acroname::BrainStem2CLI::EthernetClass::setNetworkConfiguration (C++ function), 1176  
 Acroname::BrainStem2CLI::EthernetClass::setStaticIPv4Address (C++ function), 1176  
 Acroname::BrainStem2CLI::EthernetClass::setStaticIPv4DNSAddress (C++ function), 1178  
 Acroname::BrainStem2CLI::EthernetClass::setStaticIPv4Gateway (C++ function), 1177  
 Acroname::BrainStem2CLI::EthernetClass::setStaticIPv4Netmask (C++ function), 1177  
 Acroname::BrainStem2CLI::HDBaseTClass (C++ class), 1180  
 Acroname::BrainStem2CLI::HDBaseTClass::HDBaseTClass (C++ function), 1180  
 Acroname::BrainStem2CLI::HDBaseTClass::getCableLength (C++ function), 1181  
 Acroname::BrainStem2CLI::HDBaseTClass::getEncodingState (C++ function), 1182  
 Acroname::BrainStem2CLI::HDBaseTClass::getFirmwareVersion (C++ function), 1181  
 Acroname::BrainStem2CLI::HDBaseTClass::getLinkRole (C++ function), 1182  
 Acroname::BrainStem2CLI::HDBaseTClass::getLinkUtilization (C++ function), 1182  
 Acroname::BrainStem2CLI::HDBaseTClass::getMSEA (C++ function), 1181  
 Acroname::BrainStem2CLI::HDBaseTClass::getMSEB (C++ function), 1181  
 Acroname::BrainStem2CLI::HDBaseTClass::getRetransmissionRate (C++ function), 1181  
 Acroname::BrainStem2CLI::HDBaseTClass::getSerialNumber (C++ function), 1180  
 Acroname::BrainStem2CLI::HDBaseTClass::getState (C++ function), 1181  
 Acroname::BrainStem2CLI::HDBaseTClass::getUSB2DeviceTree (C++ function), 1182  
 Acroname::BrainStem2CLI::HDBaseTClass::getUSB3DeviceTree (C++ function), 1182  
 Acroname::BrainStem2CLI::HDBaseTClass::HDBaseTClass (C++ function), 1180  
 Acroname::BrainStem2CLI::HDBaseTClass::setLinkRole (C++ function), 1182  
 Acroname::BrainStem2CLI::I2CClass (C++ class), 1183  
 Acroname::BrainStem2CLI::I2CClass::I2CClass (C++ function), 1183  
 Acroname::BrainStem2CLI::I2CClass::getSpeed (C++ function), 1184  
 Acroname::BrainStem2CLI::I2CClass::I2CClass (C++ function), 1183  
 Acroname::BrainStem2CLI::I2CClass::read (C++ function), 1183  
 Acroname::BrainStem2CLI::I2CClass::setPullup (C++ function), 1184  
 Acroname::BrainStem2CLI::I2CClass::setSpeed (C++ function), 1184  
 Acroname::BrainStem2CLI::I2CClass::write (C++ function), 1183  
 Acroname::BrainStem2CLI::ModuleClass (C++ class), 1158  
 Acroname::BrainStem2CLI::ModuleClass::ModuleClass (C++ function), 1158  
 Acroname::BrainStem2CLI::ModuleClass::connect (C++ function), 1159, 1160  
 Acroname::BrainStem2CLI::ModuleClass::connectFromSpec (C++ function), 1159  
 Acroname::BrainStem2CLI::ModuleClass::connectThroughLinkModule (C++ function), 1160  
 Acroname::BrainStem2CLI::ModuleClass::disconnect (C++ function), 1160  
 Acroname::BrainStem2CLI::ModuleClass::discoverAndConnect (C++ function), 1158, 1159  
 Acroname::BrainStem2CLI::ModuleClass::getConfig (C++ function), 1161  
 Acroname::BrainStem2CLI::ModuleClass::getIPv4Interfaces (C++ function), 1161  
 Acroname::BrainStem2CLI::ModuleClass::getModuleAddress (C++ function), 1161  
 Acroname::BrainStem2CLI::ModuleClass::getStatus (C++ function), 1160  
 Acroname::BrainStem2CLI::ModuleClass::hasUEI (C++ function), 1161  
 Acroname::BrainStem2CLI::ModuleClass::isConnected (C++ function), 1160  
 Acroname::BrainStem2CLI::ModuleClass::ModuleClass (C++ function), 1158  
 Acroname::BrainStem2CLI::ModuleClass::reconnect (C++ function), 1160  
 Acroname::BrainStem2CLI::ModuleClass::setConfig (C++ function), 1161  
 Acroname::BrainStem2CLI::ModuleClass::setModuleAddress (C++ function), 1161  
 Acroname::BrainStem2CLI::ModuleClass::setNetworkingMode (C++ function), 1162  
 Acroname::BrainStem2CLI::MuxClass (C++ class), 1184  
 Acroname::BrainStem2CLI::MuxClass::MuxClass (C++ function), 1185  
 Acroname::BrainStem2CLI::MuxClass::getChannel (C++ function), 1185  
 Acroname::BrainStem2CLI::MuxClass::getChannelVoltage (C++ function), 1185



Acroname::BrainStem2CLI::MuxClass::getConfiguration (C++ function), 1186  
Acroname::BrainStem2CLI::MuxClass::getEnable (C++ function), 1185  
Acroname::BrainStem2CLI::MuxClass::getSplitMode (C++ function), 1186  
Acroname::BrainStem2CLI::MuxClass::MuxClass (C++ function), 1185  
Acroname::BrainStem2CLI::MuxClass::setChannel (C++ function), 1185  
Acroname::BrainStem2CLI::MuxClass::setConfiguration (C++ function), 1186  
Acroname::BrainStem2CLI::MuxClass::setEnable (C++ function), 1185  
Acroname::BrainStem2CLI::MuxClass::setSplitMode (C++ function), 1186  
Acroname::BrainStem2CLI::PoEClass (C++ class), 1187  
Acroname::BrainStem2CLI::PoEClass::~~PoEClass (C++ function), 1187  
Acroname::BrainStem2CLI::PoEClass::getPairAccumulatedPower (C++ function), 1190  
Acroname::BrainStem2CLI::PoEClass::getPairCapacitance (C++ function), 1190  
Acroname::BrainStem2CLI::PoEClass::getPairCurrent (C++ function), 1189  
Acroname::BrainStem2CLI::PoEClass::getPairDetectionStatus (C++ function), 1189  
Acroname::BrainStem2CLI::PoEClass::getPairDiscoveredClass (C++ function), 1189  
Acroname::BrainStem2CLI::PoEClass::getPairEnabled (C++ function), 1187  
Acroname::BrainStem2CLI::PoEClass::getPairPower (C++ function), 1190  
Acroname::BrainStem2CLI::PoEClass::getPairRequestedClass (C++ function), 1188  
Acroname::BrainStem2CLI::PoEClass::getPairResistance (C++ function), 1190  
Acroname::BrainStem2CLI::PoEClass::getPairSourcingClass (C++ function), 1188  
Acroname::BrainStem2CLI::PoEClass::getPairVoltage (C++ function), 1189  
Acroname::BrainStem2CLI::PoEClass::getPowerMode (C++ function), 1187  
Acroname::BrainStem2CLI::PoEClass::getPowerState (C++ function), 1188  
Acroname::BrainStem2CLI::PoEClass::getTotalAccumulatedPower (C++ function), 1191  
Acroname::BrainStem2CLI::PoEClass::getTotalPower (C++ function), 1190  
Acroname::BrainStem2CLI::PoEClass::PoEClass (C++ function), 1187  
Acroname::BrainStem2CLI::PoEClass::setPairAccumulatedPower (C++ function), 1191  
Acroname::BrainStem2CLI::PoEClass::setPairEnabled (C++ function), 1187  
Acroname::BrainStem2CLI::PoEClass::setPairSourcingClass (C++ function), 1188  
Acroname::BrainStem2CLI::PoEClass::setPowerMode (C++ function), 1188  
Acroname::BrainStem2CLI::PoEClass::setTotalAccumulatedPower (C++ function), 1191  
Acroname::BrainStem2CLI::PointerClass (C++ class), 1191  
Acroname::BrainStem2CLI::PointerClass::~~PointerClass (C++ function), 1192  
Acroname::BrainStem2CLI::PointerClass::getChar (C++ function), 1193  
Acroname::BrainStem2CLI::PointerClass::getInt (C++ function), 1194  
Acroname::BrainStem2CLI::PointerClass::getMode (C++ function), 1192  
Acroname::BrainStem2CLI::PointerClass::getOffset (C++ function), 1192  
Acroname::BrainStem2CLI::PointerClass::getShort (C++ function), 1194  
Acroname::BrainStem2CLI::PointerClass::getTransferStore (C++ function), 1193  
Acroname::BrainStem2CLI::PointerClass::initiateTransferFromStore (C++ function), 1193  
Acroname::BrainStem2CLI::PointerClass::initiateTransferToStore (C++ function), 1193  
Acroname::BrainStem2CLI::PointerClass::PointerClass (C++ function), 1192  
Acroname::BrainStem2CLI::PointerClass::setChar (C++ function), 1193  
Acroname::BrainStem2CLI::PointerClass::setInt (C++ function), 1194  
Acroname::BrainStem2CLI::PointerClass::setMode (C++ function), 1192  
Acroname::BrainStem2CLI::PointerClass::setOffset (C++ function), 1192  
Acroname::BrainStem2CLI::PointerClass::setShort (C++ function), 1194  
Acroname::BrainStem2CLI::PointerClass::setTransferStore (C++ function), 1193  
Acroname::BrainStem2CLI::PORT\_SPEED (C++ enum), 1156  
Acroname::BrainStem2CLI::PORT\_SPEED::kPORT\_SPEED\_FULL (C++ enumerator), 1156  
Acroname::BrainStem2CLI::PORT\_SPEED::kPORT\_SPEED\_HIGH (C++ enumerator), 1156  
Acroname::BrainStem2CLI::PORT\_SPEED::kPORT\_SPEED\_LOW (C++ enumerator), 1156  
Acroname::BrainStem2CLI::PORT\_SPEED::kPORT\_SPEED\_SUPER (C++ enumerator), 1156  
Acroname::BrainStem2CLI::PORT\_SPEED::kPORT\_SPEED\_SUPER\_PLUS (C++ enumerator), 1156  
Acroname::BrainStem2CLI::PORT\_SPEED::kPORT\_SPEED\_UNKNOWN (C++ enumerator), 1156  
Acroname::BrainStem2CLI::PortClass (C++ class), 1194  
Acroname::BrainStem2CLI::PortClass::~~PortClass (C++ function), 1195  
Acroname::BrainStem2CLI::PortClass::getAllocatedPower (C++ function), 1202  
Acroname::BrainStem2CLI::PortClass::getAvailablePower (C++ function), 1202  
Acroname::BrainStem2CLI::PortClass::getCC1AccumulatedPower (C++ function), 1208  
Acroname::BrainStem2CLI::PortClass::getCC1Current (C++ function), 1208  
Acroname::BrainStem2CLI::PortClass::getCC1Enabled (C++ function), 1200  
Acroname::BrainStem2CLI::PortClass::getCC1State (C++ function), 1206  
Acroname::BrainStem2CLI::PortClass::getCC1Voltage (C++ function), 1207  
Acroname::BrainStem2CLI::PortClass::getCC2AccumulatedPower (C++ function), 1208  
Acroname::BrainStem2CLI::PortClass::getCC2Current (C++ function), 1208  
Acroname::BrainStem2CLI::PortClass::getCC2Enabled (C++ function), 1200  
Acroname::BrainStem2CLI::PortClass::getCC2State (C++ function), 1206



Acroname::BrainStem2CLI::PortClass::getCC2Voltage (*C++ function*), 1207  
 Acroname::BrainStem2CLI::PortClass::getCCCurrentLimit (*C++ function*), 1203  
 Acroname::BrainStem2CLI::PortClass::getCCEnabled (*C++ function*), 1199  
 Acroname::BrainStem2CLI::PortClass::getCurrentLimit (*C++ function*), 1201  
 Acroname::BrainStem2CLI::PortClass::getCurrentLimitMode (*C++ function*), 1202  
 Acroname::BrainStem2CLI::PortClass::getDataEnabled (*C++ function*), 1196  
 Acroname::BrainStem2CLI::PortClass::getDataHS1Enabled (*C++ function*), 1197  
 Acroname::BrainStem2CLI::PortClass::getDataHS2Enabled (*C++ function*), 1197  
 Acroname::BrainStem2CLI::PortClass::getDataHSEnabled (*C++ function*), 1196  
 Acroname::BrainStem2CLI::PortClass::getDataHSRoutingBehavior (*C++ function*), 1204  
 Acroname::BrainStem2CLI::PortClass::getDataRole (*C++ function*), 1198  
 Acroname::BrainStem2CLI::PortClass::getDataSpeed (*C++ function*), 1201  
 Acroname::BrainStem2CLI::PortClass::getDataSS1Enabled (*C++ function*), 1198  
 Acroname::BrainStem2CLI::PortClass::getDataSS2Enabled (*C++ function*), 1198  
 Acroname::BrainStem2CLI::PortClass::getDataSSEnabled (*C++ function*), 1197  
 Acroname::BrainStem2CLI::PortClass::getDataSSRoutingBehavior (*C++ function*), 1204  
 Acroname::BrainStem2CLI::PortClass::getEnabled (*C++ function*), 1196  
 Acroname::BrainStem2CLI::PortClass::getErrors (*C++ function*), 1201  
 Acroname::BrainStem2CLI::PortClass::getHSBoost (*C++ function*), 1206  
 Acroname::BrainStem2CLI::PortClass::getMode (*C++ function*), 1201  
 Acroname::BrainStem2CLI::PortClass::getName (*C++ function*), 1203  
 Acroname::BrainStem2CLI::PortClass::getPowerEnabled (*C++ function*), 1198  
 Acroname::BrainStem2CLI::PortClass::getPowerLimit (*C++ function*), 1202  
 Acroname::BrainStem2CLI::PortClass::getPowerLimitMode (*C++ function*), 1203  
 Acroname::BrainStem2CLI::PortClass::getPowerMode (*C++ function*), 1195  
 Acroname::BrainStem2CLI::PortClass::getSBU1Voltage (*C++ function*), 1207  
 Acroname::BrainStem2CLI::PortClass::getSBU2Voltage (*C++ function*), 1207  
 Acroname::BrainStem2CLI::PortClass::getState (*C++ function*), 1201  
 Acroname::BrainStem2CLI::PortClass::getVbusAccumulatedPower (*C++ function*), 1205  
 Acroname::BrainStem2CLI::PortClass::getVbusCurrent (*C++ function*), 1195  
 Acroname::BrainStem2CLI::PortClass::getVbusVoltage (*C++ function*), 1195  
 Acroname::BrainStem2CLI::PortClass::getVconn1Enabled (*C++ function*), 1199  
 Acroname::BrainStem2CLI::PortClass::getVconn2Enabled (*C++ function*), 1199  
 Acroname::BrainStem2CLI::PortClass::getVconnAccumulatedPower (*C++ function*), 1205  
 Acroname::BrainStem2CLI::PortClass::getVconnCurrent (*C++ function*), 1195  
 Acroname::BrainStem2CLI::PortClass::getVconnEnabled (*C++ function*), 1199  
 Acroname::BrainStem2CLI::PortClass::getVconnVoltage (*C++ function*), 1195  
 Acroname::BrainStem2CLI::PortClass::getVoltageSetpoint (*C++ function*), 1200  
 Acroname::BrainStem2CLI::PortClass::PortClass (*C++ function*), 1195  
 Acroname::BrainStem2CLI::PortClass::resetVbusAccumulatedPower (*C++ function*), 1205  
 Acroname::BrainStem2CLI::PortClass::resetVconnAccumulatedPower (*C++ function*), 1205  
 Acroname::BrainStem2CLI::PortClass::setCC1AccumulatedPower (*C++ function*), 1208  
 Acroname::BrainStem2CLI::PortClass::setCC1Enabled (*C++ function*), 1200  
 Acroname::BrainStem2CLI::PortClass::setCC2AccumulatedPower (*C++ function*), 1208  
 Acroname::BrainStem2CLI::PortClass::setCC2Enabled (*C++ function*), 1200  
 Acroname::BrainStem2CLI::PortClass::setCCCurrentLimit (*C++ function*), 1204  
 Acroname::BrainStem2CLI::PortClass::setCCEnabled (*C++ function*), 1200  
 Acroname::BrainStem2CLI::PortClass::setCurrentLimit (*C++ function*), 1202  
 Acroname::BrainStem2CLI::PortClass::setCurrentLimitMode (*C++ function*), 1202  
 Acroname::BrainStem2CLI::PortClass::setDataEnabled (*C++ function*), 1196  
 Acroname::BrainStem2CLI::PortClass::setDataHS1Enabled (*C++ function*), 1197  
 Acroname::BrainStem2CLI::PortClass::setDataHS2Enabled (*C++ function*), 1197  
 Acroname::BrainStem2CLI::PortClass::setDataHSEnabled (*C++ function*), 1196  
 Acroname::BrainStem2CLI::PortClass::setDataHSRoutingBehavior (*C++ function*), 1204  
 Acroname::BrainStem2CLI::PortClass::setDataSS1Enabled (*C++ function*), 1198  
 Acroname::BrainStem2CLI::PortClass::setDataSS2Enabled (*C++ function*), 1198  
 Acroname::BrainStem2CLI::PortClass::setDataSSEnabled (*C++ function*), 1197  
 Acroname::BrainStem2CLI::PortClass::setDataSSRoutingBehavior (*C++ function*), 1205  
 Acroname::BrainStem2CLI::PortClass::setEnabled (*C++ function*), 1196  
 Acroname::BrainStem2CLI::PortClass::setHSBoost (*C++ function*), 1206  
 Acroname::BrainStem2CLI::PortClass::setMode (*C++ function*), 1201  
 Acroname::BrainStem2CLI::PortClass::setName (*C++ function*), 1203  
 Acroname::BrainStem2CLI::PortClass::setPowerEnabled (*C++ function*), 1198  
 Acroname::BrainStem2CLI::PortClass::setPowerLimit (*C++ function*), 1203  
 Acroname::BrainStem2CLI::PortClass::setPowerLimitMode (*C++ function*), 1203  
 Acroname::BrainStem2CLI::PortClass::setPowerMode (*C++ function*), 1196  
 Acroname::BrainStem2CLI::PortClass::setVbusAccumulatedPower (*C++ function*), 1205  
 Acroname::BrainStem2CLI::PortClass::setVconn1Enabled (*C++ function*), 1199

Acroname::BrainStem2CLI::PortClass::setVconn2Enabled (C++ function), 1199  
Acroname::BrainStem2CLI::PortClass::setVconnAccumulatedPower (C++ function), 1205  
Acroname::BrainStem2CLI::PortClass::setVconnEnabled (C++ function), 1199  
Acroname::BrainStem2CLI::PortClass::setVoltageSetpoint (C++ function), 1200  
Acroname::BrainStem2CLI::PortMapping (C++ class), 1157  
Acroname::BrainStem2CLI::PortMapping::~~PortMapping (C++ function), 1158  
Acroname::BrainStem2CLI::PortMapping::lastError (C++ member), 1158  
Acroname::BrainStem2CLI::PortMapping::PortMapping (C++ function), 1158  
Acroname::BrainStem2CLI::PortMapping::update (C++ function), 1158  
Acroname::BrainStem2CLI::PowerDeliveryClass (C++ class), 1209  
Acroname::BrainStem2CLI::PowerDeliveryClass::~~PowerDeliveryClass (C++ function), 1209  
Acroname::BrainStem2CLI::PowerDeliveryClass::getAttachTimeElapsed (C++ function), 1212  
Acroname::BrainStem2CLI::PowerDeliveryClass::getCableCurrentMax (C++ function), 1215  
Acroname::BrainStem2CLI::PowerDeliveryClass::getCableOrientation (C++ function), 1215  
Acroname::BrainStem2CLI::PowerDeliveryClass::getCableSpeedMax (C++ function), 1215  
Acroname::BrainStem2CLI::PowerDeliveryClass::getCableType (C++ function), 1215  
Acroname::BrainStem2CLI::PowerDeliveryClass::getCableVoltageMax (C++ function), 1214  
Acroname::BrainStem2CLI::PowerDeliveryClass::getConnectionState (C++ function), 1209  
Acroname::BrainStem2CLI::PowerDeliveryClass::getDataRoleCapabilities (C++ function), 1214  
Acroname::BrainStem2CLI::PowerDeliveryClass::getFastRoleSwapCurrent (C++ function), 1217  
Acroname::BrainStem2CLI::PowerDeliveryClass::getFlagMode (C++ function), 1216  
Acroname::BrainStem2CLI::PowerDeliveryClass::getLinkState (C++ function), 1212  
Acroname::BrainStem2CLI::PowerDeliveryClass::getNumberOfPowerDataObjects (C++ function), 1209  
Acroname::BrainStem2CLI::PowerDeliveryClass::getOverride (C++ function), 1216  
Acroname::BrainStem2CLI::PowerDeliveryClass::getPeakCurrentConfiguration (C++ function), 1217  
Acroname::BrainStem2CLI::PowerDeliveryClass::getPowerDataObject (C++ function), 1210  
Acroname::BrainStem2CLI::PowerDeliveryClass::getPowerDataObjectEnabled (C++ function), 1211  
Acroname::BrainStem2CLI::PowerDeliveryClass::getPowerDataObjectEnabledList (C++ function), 1212  
Acroname::BrainStem2CLI::PowerDeliveryClass::getPowerDataObjectList (C++ function), 1210  
Acroname::BrainStem2CLI::PowerDeliveryClass::getPowerRole (C++ function), 1213  
Acroname::BrainStem2CLI::PowerDeliveryClass::getPowerRoleCapabilities (C++ function), 1213  
Acroname::BrainStem2CLI::PowerDeliveryClass::getPowerRolePreferred (C++ function), 1214  
Acroname::BrainStem2CLI::PowerDeliveryClass::getRequestDataObject (C++ function), 1212  
Acroname::BrainStem2CLI::PowerDeliveryClass::packDataObjectAttributes (C++ function), 1218  
Acroname::BrainStem2CLI::PowerDeliveryClass::PowerDeliveryClass (C++ function), 1209  
Acroname::BrainStem2CLI::PowerDeliveryClass::request (C++ function), 1215  
Acroname::BrainStem2CLI::PowerDeliveryClass::requestStatus (C++ function), 1216  
Acroname::BrainStem2CLI::PowerDeliveryClass::resetPowerDataObjectToDefault (C++ function), 1210  
Acroname::BrainStem2CLI::PowerDeliveryClass::setFastRoleSwapCurrent (C++ function), 1218  
Acroname::BrainStem2CLI::PowerDeliveryClass::setFlagMode (C++ function), 1217  
Acroname::BrainStem2CLI::PowerDeliveryClass::setOverride (C++ function), 1216  
Acroname::BrainStem2CLI::PowerDeliveryClass::setPeakCurrentConfiguration (C++ function), 1217  
Acroname::BrainStem2CLI::PowerDeliveryClass::setPowerDataObject (C++ function), 1210  
Acroname::BrainStem2CLI::PowerDeliveryClass::setPowerDataObjectEnabled (C++ function), 1211  
Acroname::BrainStem2CLI::PowerDeliveryClass::setPowerRole (C++ function), 1213  
Acroname::BrainStem2CLI::PowerDeliveryClass::setPowerRolePreferred (C++ function), 1214  
Acroname::BrainStem2CLI::PowerDeliveryClass::setRequestDataObject (C++ function), 1212  
Acroname::BrainStem2CLI::PowerDeliveryClass::unpackDataObjectAttributes (C++ function), 1218  
Acroname::BrainStem2CLI::RailClass (C++ class), 1220  
Acroname::BrainStem2CLI::RailClass::~~RailClass (C++ function), 1221  
Acroname::BrainStem2CLI::RailClass::clearFaults (C++ function), 1226  
Acroname::BrainStem2CLI::RailClass::getCurrent (C++ function), 1221  
Acroname::BrainStem2CLI::RailClass::getCurrentLimit (C++ function), 1222  
Acroname::BrainStem2CLI::RailClass::getCurrentSetpoint (C++ function), 1221  
Acroname::BrainStem2CLI::RailClass::getEnable (C++ function), 1222  
Acroname::BrainStem2CLI::RailClass::getKelvinSensingEnable (C++ function), 1225  
Acroname::BrainStem2CLI::RailClass::getKelvinSensingState (C++ function), 1225  
Acroname::BrainStem2CLI::RailClass::getOperationalMode (C++ function), 1226  
Acroname::BrainStem2CLI::RailClass::getOperationalState (C++ function), 1226  
Acroname::BrainStem2CLI::RailClass::getPower (C++ function), 1223  
Acroname::BrainStem2CLI::RailClass::getPowerLimit (C++ function), 1224  
Acroname::BrainStem2CLI::RailClass::getPowerSetpoint (C++ function), 1224  
Acroname::BrainStem2CLI::RailClass::getResistance (C++ function), 1224  
Acroname::BrainStem2CLI::RailClass::getResistanceSetpoint (C++ function), 1225  
Acroname::BrainStem2CLI::RailClass::getTemperature (C++ function), 1222  
Acroname::BrainStem2CLI::RailClass::getVoltage (C++ function), 1222  
Acroname::BrainStem2CLI::RailClass::getVoltageMaxLimit (C++ function), 1223  
Acroname::BrainStem2CLI::RailClass::getVoltageMinLimit (C++ function), 1223

Acroname::BrainStem2CLI::RailClass::getVoltageSetpoint (C++ function), 1223  
 Acroname::BrainStem2CLI::RailClass::RailClass (C++ function), 1221  
 Acroname::BrainStem2CLI::RailClass::setCurrentLimit (C++ function), 1221  
 Acroname::BrainStem2CLI::RailClass::setCurrentSetpoint (C++ function), 1221  
 Acroname::BrainStem2CLI::RailClass::setEnabled (C++ function), 1222  
 Acroname::BrainStem2CLI::RailClass::setKelvinSensingEnable (C++ function), 1225  
 Acroname::BrainStem2CLI::RailClass::setOperationalMode (C++ function), 1225  
 Acroname::BrainStem2CLI::RailClass::setPowerLimit (C++ function), 1224  
 Acroname::BrainStem2CLI::RailClass::setPowerSetpoint (C++ function), 1224  
 Acroname::BrainStem2CLI::RailClass::setResistanceSetpoint (C++ function), 1225  
 Acroname::BrainStem2CLI::RailClass::setVoltageMaxLimit (C++ function), 1223  
 Acroname::BrainStem2CLI::RailClass::setVoltageMinLimit (C++ function), 1223  
 Acroname::BrainStem2CLI::RailClass::setVoltageSetpoint (C++ function), 1222  
 Acroname::BrainStem2CLI::RCServoClass (C++ class), 1219  
 Acroname::BrainStem2CLI::RCServoClass::~RCServoClass (C++ function), 1219  
 Acroname::BrainStem2CLI::RCServoClass::getEnable (C++ function), 1219  
 Acroname::BrainStem2CLI::RCServoClass::getPosition (C++ function), 1220  
 Acroname::BrainStem2CLI::RCServoClass::getReverse (C++ function), 1220  
 Acroname::BrainStem2CLI::RCServoClass::RCServoClass (C++ function), 1219  
 Acroname::BrainStem2CLI::RCServoClass::setEnabled (C++ function), 1219  
 Acroname::BrainStem2CLI::RCServoClass::setPosition (C++ function), 1220  
 Acroname::BrainStem2CLI::RCServoClass::setReverse (C++ function), 1220  
 Acroname::BrainStem2CLI::RelayClass (C++ class), 1226  
 Acroname::BrainStem2CLI::RelayClass::~RelayClass (C++ function), 1226  
 Acroname::BrainStem2CLI::RelayClass::getEnable (C++ function), 1227  
 Acroname::BrainStem2CLI::RelayClass::getVoltage (C++ function), 1227  
 Acroname::BrainStem2CLI::RelayClass::RelayClass (C++ function), 1226  
 Acroname::BrainStem2CLI::RelayClass::setEnabled (C++ function), 1227  
 Acroname::BrainStem2CLI::SignalClass (C++ class), 1227  
 Acroname::BrainStem2CLI::SignalClass::~SignalClass (C++ function), 1228  
 Acroname::BrainStem2CLI::SignalClass::getEnable (C++ function), 1228  
 Acroname::BrainStem2CLI::SignalClass::getInvert (C++ function), 1228  
 Acroname::BrainStem2CLI::SignalClass::getT2Time (C++ function), 1229  
 Acroname::BrainStem2CLI::SignalClass::getT3Time (C++ function), 1229  
 Acroname::BrainStem2CLI::SignalClass::setEnabled (C++ function), 1228  
 Acroname::BrainStem2CLI::SignalClass::setInvert (C++ function), 1228  
 Acroname::BrainStem2CLI::SignalClass::setT2Time (C++ function), 1229  
 Acroname::BrainStem2CLI::SignalClass::setT3Time (C++ function), 1228  
 Acroname::BrainStem2CLI::SignalClass::SignalClass (C++ function), 1228  
 Acroname::BrainStem2CLI::StoreClass (C++ class), 1229  
 Acroname::BrainStem2CLI::StoreClass::~StoreClass (C++ function), 1230  
 Acroname::BrainStem2CLI::StoreClass::getSlotCapacity (C++ function), 1231  
 Acroname::BrainStem2CLI::StoreClass::getSlotLocked (C++ function), 1231  
 Acroname::BrainStem2CLI::StoreClass::getSlotSize (C++ function), 1231  
 Acroname::BrainStem2CLI::StoreClass::getSlotState (C++ function), 1230  
 Acroname::BrainStem2CLI::StoreClass::loadSlot (C++ function), 1230  
 Acroname::BrainStem2CLI::StoreClass::setSlotLocked (C++ function), 1231  
 Acroname::BrainStem2CLI::StoreClass::slotDisable (C++ function), 1231  
 Acroname::BrainStem2CLI::StoreClass::slotEnable (C++ function), 1231  
 Acroname::BrainStem2CLI::StoreClass::StoreClass (C++ function), 1230  
 Acroname::BrainStem2CLI::StoreClass::unloadSlot (C++ function), 1230  
 Acroname::BrainStem2CLI::SystemClass (C++ class), 1232  
 Acroname::BrainStem2CLI::SystemClass::~SystemClass (C++ function), 1232  
 Acroname::BrainStem2CLI::SystemClass::getBootSlot (C++ function), 1234  
 Acroname::BrainStem2CLI::SystemClass::getBuild (C++ function), 1234  
 Acroname::BrainStem2CLI::SystemClass::getErrors (C++ function), 1240  
 Acroname::BrainStem2CLI::SystemClass::getHardwareVersion (C++ function), 1235  
 Acroname::BrainStem2CLI::SystemClass::getHBInterval (C++ function), 1233  
 Acroname::BrainStem2CLI::SystemClass::getInputCurrent (C++ function), 1236  
 Acroname::BrainStem2CLI::SystemClass::getInputPowerBehavior (C++ function), 1239  
 Acroname::BrainStem2CLI::SystemClass::getInputPowerBehaviorConfig (C++ function), 1239  
 Acroname::BrainStem2CLI::SystemClass::getInputPowerSource (C++ function), 1238  
 Acroname::BrainStem2CLI::SystemClass::getInputVoltage (C++ function), 1236  
 Acroname::BrainStem2CLI::SystemClass::getLED (C++ function), 1233  
 Acroname::BrainStem2CLI::SystemClass::getLEDMaxBrightness (C++ function), 1234  
 Acroname::BrainStem2CLI::SystemClass::getLinkInterface (C++ function), 1240  
 Acroname::BrainStem2CLI::SystemClass::getMaximumTemperature (C++ function), 1236  
 Acroname::BrainStem2CLI::SystemClass::getMinimumTemperature (C++ function), 1236

Acroname::BrainStem2CLI::SystemClass::getModel (*C++ function*), 1235  
Acroname::BrainStem2CLI::SystemClass::getModule (*C++ function*), 1232  
Acroname::BrainStem2CLI::SystemClass::getModuleBaseAddress (*C++ function*), 1232  
Acroname::BrainStem2CLI::SystemClass::getModuleHardwareOffset (*C++ function*), 1236  
Acroname::BrainStem2CLI::SystemClass::getModuleSoftwareOffset (*C++ function*), 1237  
Acroname::BrainStem2CLI::SystemClass::getName (*C++ function*), 1239  
Acroname::BrainStem2CLI::SystemClass::getPowerLimit (*C++ function*), 1237  
Acroname::BrainStem2CLI::SystemClass::getPowerLimitMax (*C++ function*), 1238  
Acroname::BrainStem2CLI::SystemClass::getPowerLimitState (*C++ function*), 1238  
Acroname::BrainStem2CLI::SystemClass::getProtocolFeatures (*C++ function*), 1241  
Acroname::BrainStem2CLI::SystemClass::getRouter (*C++ function*), 1233  
Acroname::BrainStem2CLI::SystemClass::getRouterAddressSetting (*C++ function*), 1237  
Acroname::BrainStem2CLI::SystemClass::getSerialNumber (*C++ function*), 1235  
Acroname::BrainStem2CLI::SystemClass::getTemperature (*C++ function*), 1236  
Acroname::BrainStem2CLI::SystemClass::getUnregulatedCurrent (*C++ function*), 1238  
Acroname::BrainStem2CLI::SystemClass::getUnregulatedVoltage (*C++ function*), 1238  
Acroname::BrainStem2CLI::SystemClass::getUptime (*C++ function*), 1236  
Acroname::BrainStem2CLI::SystemClass::getVersion (*C++ function*), 1234  
Acroname::BrainStem2CLI::SystemClass::logEvents (*C++ function*), 1235  
Acroname::BrainStem2CLI::SystemClass::reset (*C++ function*), 1235  
Acroname::BrainStem2CLI::SystemClass::resetDeviceToFactoryDefaults (*C++ function*), 1240  
Acroname::BrainStem2CLI::SystemClass::routeToMe (*C++ function*), 1237  
Acroname::BrainStem2CLI::SystemClass::save (*C++ function*), 1235  
Acroname::BrainStem2CLI::SystemClass::setBootSlot (*C++ function*), 1234  
Acroname::BrainStem2CLI::SystemClass::setHBInterval (*C++ function*), 1233  
Acroname::BrainStem2CLI::SystemClass::setInputPowerBehavior (*C++ function*), 1239  
Acroname::BrainStem2CLI::SystemClass::setInputPowerBehaviorConfig (*C++ function*), 1239  
Acroname::BrainStem2CLI::SystemClass::setLED (*C++ function*), 1233  
Acroname::BrainStem2CLI::SystemClass::setLEDMaxBrightness (*C++ function*), 1234  
Acroname::BrainStem2CLI::SystemClass::setLinkInterface (*C++ function*), 1240  
Acroname::BrainStem2CLI::SystemClass::setModuleSoftwareOffset (*C++ function*), 1237  
Acroname::BrainStem2CLI::SystemClass::setName (*C++ function*), 1240  
Acroname::BrainStem2CLI::SystemClass::setPowerLimitMax (*C++ function*), 1238  
Acroname::BrainStem2CLI::SystemClass::setRouter (*C++ function*), 1232  
Acroname::BrainStem2CLI::SystemClass::SystemClass (*C++ function*), 1232  
Acroname::BrainStem2CLI::TemperatureClass (*C++ class*), 1241  
Acroname::BrainStem2CLI::TemperatureClass::~~TemperatureClass (*C++ function*), 1241  
Acroname::BrainStem2CLI::TemperatureClass::getValue (*C++ function*), 1241  
Acroname::BrainStem2CLI::TemperatureClass::getValueMax (*C++ function*), 1242  
Acroname::BrainStem2CLI::TemperatureClass::getValueMin (*C++ function*), 1241  
Acroname::BrainStem2CLI::TemperatureClass::TemperatureClass (*C++ function*), 1241  
Acroname::BrainStem2CLI::TimerClass (*C++ class*), 1242  
Acroname::BrainStem2CLI::TimerClass::~~TimerClass (*C++ function*), 1242  
Acroname::BrainStem2CLI::TimerClass::getExpiration (*C++ function*), 1242  
Acroname::BrainStem2CLI::TimerClass::getMode (*C++ function*), 1243  
Acroname::BrainStem2CLI::TimerClass::setExpiration (*C++ function*), 1242  
Acroname::BrainStem2CLI::TimerClass::setMode (*C++ function*), 1243  
Acroname::BrainStem2CLI::TimerClass::TimerClass (*C++ function*), 1242  
Acroname::BrainStem2CLI::UARTClass (*C++ class*), 1243  
Acroname::BrainStem2CLI::UARTClass::~~UARTClass (*C++ function*), 1243  
Acroname::BrainStem2CLI::UARTClass::getAvailableProtocols (*C++ function*), 1247  
Acroname::BrainStem2CLI::UARTClass::getBaudRate (*C++ function*), 1244  
Acroname::BrainStem2CLI::UARTClass::getCapableProtocols (*C++ function*), 1247  
Acroname::BrainStem2CLI::UARTClass::getDataBits (*C++ function*), 1246  
Acroname::BrainStem2CLI::UARTClass::getEnable (*C++ function*), 1244  
Acroname::BrainStem2CLI::UARTClass::getFlowControl (*C++ function*), 1246  
Acroname::BrainStem2CLI::UARTClass::getLinkChannel (*C++ function*), 1245  
Acroname::BrainStem2CLI::UARTClass::getParity (*C++ function*), 1245  
Acroname::BrainStem2CLI::UARTClass::getProtocol (*C++ function*), 1244  
Acroname::BrainStem2CLI::UARTClass::getStopBits (*C++ function*), 1245  
Acroname::BrainStem2CLI::UARTClass::setBaudRate (*C++ function*), 1244  
Acroname::BrainStem2CLI::UARTClass::setDataBits (*C++ function*), 1246  
Acroname::BrainStem2CLI::UARTClass::setEnable (*C++ function*), 1244  
Acroname::BrainStem2CLI::UARTClass::setFlowControl (*C++ function*), 1246  
Acroname::BrainStem2CLI::UARTClass::setLinkChannel (*C++ function*), 1244  
Acroname::BrainStem2CLI::UARTClass::setParity (*C++ function*), 1245  
Acroname::BrainStem2CLI::UARTClass::setProtocol (*C++ function*), 1244  
Acroname::BrainStem2CLI::UARTClass::setStopBits (*C++ function*), 1245



Acroname::BrainStem2CLI::UARTClass::UARTClass (C++ function), 1243  
 Acroname::BrainStem2CLI::USBCClass (C++ class), 1247  
 Acroname::BrainStem2CLI::USBCClass::~USBCClass (C++ function), 1247  
 Acroname::BrainStem2CLI::USBCClass::clearPortErrorStatus (C++ function), 1250  
 Acroname::BrainStem2CLI::USBCClass::getAltModeConfig (C++ function), 1256  
 Acroname::BrainStem2CLI::USBCClass::getCableFlip (C++ function), 1256  
 Acroname::BrainStem2CLI::USBCClass::getCC1Current (C++ function), 1254  
 Acroname::BrainStem2CLI::USBCClass::getCC1Enable (C++ function), 1254  
 Acroname::BrainStem2CLI::USBCClass::getCC1Voltage (C++ function), 1255  
 Acroname::BrainStem2CLI::USBCClass::getCC2Current (C++ function), 1254  
 Acroname::BrainStem2CLI::USBCClass::getCC2Enable (C++ function), 1254  
 Acroname::BrainStem2CLI::USBCClass::getCC2Voltage (C++ function), 1255  
 Acroname::BrainStem2CLI::USBCClass::getConnectMode (C++ function), 1253  
 Acroname::BrainStem2CLI::USBCClass::getDownstreamBoostMode (C++ function), 1252  
 Acroname::BrainStem2CLI::USBCClass::getDownstreamDataSpeed (C++ function), 1253  
 Acroname::BrainStem2CLI::USBCClass::getEnumerationDelay (C++ function), 1250  
 Acroname::BrainStem2CLI::USBCClass::getHubMode (C++ function), 1249  
 Acroname::BrainStem2CLI::USBCClass::getPortCurrent (C++ function), 1249  
 Acroname::BrainStem2CLI::USBCClass::getPortCurrentLimit (C++ function), 1251  
 Acroname::BrainStem2CLI::USBCClass::getPortError (C++ function), 1252  
 Acroname::BrainStem2CLI::USBCClass::getPortMode (C++ function), 1251  
 Acroname::BrainStem2CLI::USBCClass::getPortState (C++ function), 1251  
 Acroname::BrainStem2CLI::USBCClass::getPortVoltage (C++ function), 1249  
 Acroname::BrainStem2CLI::USBCClass::getSBU1Voltage (C++ function), 1256  
 Acroname::BrainStem2CLI::USBCClass::getSBU2Voltage (C++ function), 1256  
 Acroname::BrainStem2CLI::USBCClass::getSBUEnable (C++ function), 1255  
 Acroname::BrainStem2CLI::USBCClass::getUpstreamBoostMode (C++ function), 1252  
 Acroname::BrainStem2CLI::USBCClass::getUpstreamMode (C++ function), 1250  
 Acroname::BrainStem2CLI::USBCClass::getUpstreamState (C++ function), 1250  
 Acroname::BrainStem2CLI::USBCClass::setAltModeConfig (C++ function), 1256  
 Acroname::BrainStem2CLI::USBCClass::setCableFlip (C++ function), 1255  
 Acroname::BrainStem2CLI::USBCClass::setCC1Enable (C++ function), 1253  
 Acroname::BrainStem2CLI::USBCClass::setCC2Enable (C++ function), 1254  
 Acroname::BrainStem2CLI::USBCClass::setConnectMode (C++ function), 1253  
 Acroname::BrainStem2CLI::USBCClass::setDataDisable (C++ function), 1248  
 Acroname::BrainStem2CLI::USBCClass::setDataEnable (C++ function), 1248  
 Acroname::BrainStem2CLI::USBCClass::setDownstreamBoostMode (C++ function), 1252  
 Acroname::BrainStem2CLI::USBCClass::setEnumerationDelay (C++ function), 1250  
 Acroname::BrainStem2CLI::USBCClass::setHiSpeedDataDisable (C++ function), 1248  
 Acroname::BrainStem2CLI::USBCClass::setHiSpeedDataEnable (C++ function), 1248  
 Acroname::BrainStem2CLI::USBCClass::setHubMode (C++ function), 1250  
 Acroname::BrainStem2CLI::USBCClass::setPortCurrentLimit (C++ function), 1251  
 Acroname::BrainStem2CLI::USBCClass::setPortDisable (C++ function), 1248  
 Acroname::BrainStem2CLI::USBCClass::setPortEnable (C++ function), 1247  
 Acroname::BrainStem2CLI::USBCClass::setPortMode (C++ function), 1251  
 Acroname::BrainStem2CLI::USBCClass::setPowerDisable (C++ function), 1249  
 Acroname::BrainStem2CLI::USBCClass::setPowerEnable (C++ function), 1249  
 Acroname::BrainStem2CLI::USBCClass::setSBUEnable (C++ function), 1255  
 Acroname::BrainStem2CLI::USBCClass::setSuperSpeedDataDisable (C++ function), 1249  
 Acroname::BrainStem2CLI::USBCClass::setSuperSpeedDataEnable (C++ function), 1248  
 Acroname::BrainStem2CLI::USBCClass::setUpstreamBoostMode (C++ function), 1252  
 Acroname::BrainStem2CLI::USBCClass::setUpstreamMode (C++ function), 1250  
 Acroname::BrainStem2CLI::USBCClass::USBCClass (C++ function), 1247  
 Acroname::BrainStem2CLI::USBSysSystemClass (C++ class), 1257  
 Acroname::BrainStem2CLI::USBSysSystemClass::~USBSysSystemClass (C++ function), 1257  
 Acroname::BrainStem2CLI::USBSysSystemClass::getDataHSMMaxDataRate (C++ function), 1262  
 Acroname::BrainStem2CLI::USBSysSystemClass::getDataRoleBehavior (C++ function), 1260  
 Acroname::BrainStem2CLI::USBSysSystemClass::getDataRoleBehaviorConfig (C++ function), 1260  
 Acroname::BrainStem2CLI::USBSysSystemClass::getDataRoleList (C++ function), 1258  
 Acroname::BrainStem2CLI::USBSysSystemClass::getDataSSMaxDataRate (C++ function), 1262  
 Acroname::BrainStem2CLI::USBSysSystemClass::getEnabledList (C++ function), 1258  
 Acroname::BrainStem2CLI::USBSysSystemClass::getEnumerationDelay (C++ function), 1258  
 Acroname::BrainStem2CLI::USBSysSystemClass::getModeList (C++ function), 1258  
 Acroname::BrainStem2CLI::USBSysSystemClass::getOverride (C++ function), 1261  
 Acroname::BrainStem2CLI::USBSysSystemClass::getPowerBehavior (C++ function), 1259  
 Acroname::BrainStem2CLI::USBSysSystemClass::getPowerBehaviorConfig (C++ function), 1259  
 Acroname::BrainStem2CLI::USBSysSystemClass::getSelectorMode (C++ function), 1261  
 Acroname::BrainStem2CLI::USBSysSystemClass::getStateList (C++ function), 1259

Acroname::BrainStem2CLI::USBSystemClass::getUpstream (C++ function), 1257  
Acroname::BrainStem2CLI::USBSystemClass::getUpstreamHS (C++ function), 1261  
Acroname::BrainStem2CLI::USBSystemClass::getUpstreamSS (C++ function), 1261  
Acroname::BrainStem2CLI::USBSystemClass::setDataHSMaxDataRate (C++ function), 1262  
Acroname::BrainStem2CLI::USBSystemClass::setDataRoleBehavior (C++ function), 1260  
Acroname::BrainStem2CLI::USBSystemClass::setDataRoleBehaviorConfig (C++ function), 1260  
Acroname::BrainStem2CLI::USBSystemClass::setDataSSMaxDataRate (C++ function), 1262  
Acroname::BrainStem2CLI::USBSystemClass::setEnabledList (C++ function), 1258  
Acroname::BrainStem2CLI::USBSystemClass::setEnumerationDelay (C++ function), 1258  
Acroname::BrainStem2CLI::USBSystemClass::setModeList (C++ function), 1259  
Acroname::BrainStem2CLI::USBSystemClass::setOverride (C++ function), 1262  
Acroname::BrainStem2CLI::USBSystemClass::setPowerBehavior (C++ function), 1259  
Acroname::BrainStem2CLI::USBSystemClass::setPowerBehaviorConfig (C++ function), 1260  
Acroname::BrainStem2CLI::USBSystemClass::setSelectorMode (C++ function), 1261  
Acroname::BrainStem2CLI::USBSystemClass::setUpstream (C++ function), 1257  
Acroname::BrainStem2CLI::USBSystemClass::setUpstreamHS (C++ function), 1261  
Acroname::BrainStem2CLI::USBSystemClass::setUpstreamSS (C++ function), 1261  
Acroname::BrainStem2CLI::USBSystemClass::USBSystemClass (C++ function), 1257  
Acroname::BrainStem::AnalogClass (C++ class), 744  
Acroname::BrainStem::AnalogClass::~AnalogClass (C++ function), 745  
Acroname::BrainStem::AnalogClass::AnalogClass (C++ function), 745  
Acroname::BrainStem::AnalogClass::getBulkCaptureNumberOfSamples (C++ function), 747  
Acroname::BrainStem::AnalogClass::getBulkCaptureSampleRate (C++ function), 747  
Acroname::BrainStem::AnalogClass::getBulkCaptureState (C++ function), 748  
Acroname::BrainStem::AnalogClass::getConfiguration (C++ function), 747  
Acroname::BrainStem::AnalogClass::getEnable (C++ function), 745  
Acroname::BrainStem::AnalogClass::getRange (C++ function), 745  
Acroname::BrainStem::AnalogClass::getValue (C++ function), 745  
Acroname::BrainStem::AnalogClass::getVoltage (C++ function), 745  
Acroname::BrainStem::AnalogClass::init (C++ function), 745  
Acroname::BrainStem::AnalogClass::initiateBulkCapture (C++ function), 747  
Acroname::BrainStem::AnalogClass::setBulkCaptureNumberOfSamples (C++ function), 747  
Acroname::BrainStem::AnalogClass::setBulkCaptureSampleRate (C++ function), 747  
Acroname::BrainStem::AnalogClass::setConfiguration (C++ function), 746  
Acroname::BrainStem::AnalogClass::setEnable (C++ function), 746  
Acroname::BrainStem::AnalogClass::setRange (C++ function), 746  
Acroname::BrainStem::AnalogClass::setValue (C++ function), 746  
Acroname::BrainStem::AnalogClass::setVoltage (C++ function), 746  
Acroname::BrainStem::AppClass (C++ class), 748  
Acroname::BrainStem::AppClass::~AppClass (C++ function), 748  
Acroname::BrainStem::AppClass::AppClass (C++ function), 748  
Acroname::BrainStem::AppClass::execute (C++ function), 748, 749  
Acroname::BrainStem::AppClass::init (C++ function), 748  
Acroname::BrainStem::ClockClass (C++ class), 749  
Acroname::BrainStem::ClockClass::~ClockClass (C++ function), 750  
Acroname::BrainStem::ClockClass::ClockClass (C++ function), 750  
Acroname::BrainStem::ClockClass::getDay (C++ function), 750  
Acroname::BrainStem::ClockClass::getHour (C++ function), 751  
Acroname::BrainStem::ClockClass::getMinute (C++ function), 751  
Acroname::BrainStem::ClockClass::getMonth (C++ function), 750  
Acroname::BrainStem::ClockClass::getSecond (C++ function), 751  
Acroname::BrainStem::ClockClass::getYear (C++ function), 750  
Acroname::BrainStem::ClockClass::init (C++ function), 750  
Acroname::BrainStem::ClockClass::setDay (C++ function), 750  
Acroname::BrainStem::ClockClass::setHour (C++ function), 751  
Acroname::BrainStem::ClockClass::setMinute (C++ function), 751  
Acroname::BrainStem::ClockClass::setMonth (C++ function), 750  
Acroname::BrainStem::ClockClass::setSecond (C++ function), 751  
Acroname::BrainStem::ClockClass::setYear (C++ function), 750  
Acroname::BrainStem::DigitalClass (C++ class), 752  
Acroname::BrainStem::DigitalClass::~DigitalClass (C++ function), 752  
Acroname::BrainStem::DigitalClass::DigitalClass (C++ function), 752  
Acroname::BrainStem::DigitalClass::getConfiguration (C++ function), 752  
Acroname::BrainStem::DigitalClass::getLinkChannel (C++ function), 754  
Acroname::BrainStem::DigitalClass::getState (C++ function), 753  
Acroname::BrainStem::DigitalClass::getStateAll (C++ function), 753  
Acroname::BrainStem::DigitalClass::getValue (C++ function), 753  
Acroname::BrainStem::DigitalClass::init (C++ function), 752

Acroname::BrainStem::DigitalClass::setConfiguration (C++ function), 752  
 Acroname::BrainStem::DigitalClass::setLinkChannel (C++ function), 754  
 Acroname::BrainStem::DigitalClass::setState (C++ function), 753  
 Acroname::BrainStem::DigitalClass::setStateAll (C++ function), 753  
 Acroname::BrainStem::DigitalClass::setValue (C++ function), 753  
 Acroname::BrainStem::EntityClass (C++ class), 739  
 Acroname::BrainStem::EntityClass::~EntityClass (C++ function), 740  
 Acroname::BrainStem::EntityClass::callUEI (C++ function), 740  
 Acroname::BrainStem::EntityClass::drainUEI (C++ function), 742  
 Acroname::BrainStem::EntityClass::EntityClass (C++ function), 740  
 Acroname::BrainStem::EntityClass::getIndex (C++ function), 742  
 Acroname::BrainStem::EntityClass::getStreamStatus (C++ function), 743  
 Acroname::BrainStem::EntityClass::getUEI16 (C++ function), 741  
 Acroname::BrainStem::EntityClass::getUEI32 (C++ function), 742  
 Acroname::BrainStem::EntityClass::getUEI8 (C++ function), 740  
 Acroname::BrainStem::EntityClass::getUEIBytes (C++ function), 742  
 Acroname::BrainStem::EntityClass::getUEIBytesCheck (C++ function), 742  
 Acroname::BrainStem::EntityClass::getUEIBytesContinue (C++ function), 744  
 Acroname::BrainStem::EntityClass::getUEIBytesSequence (C++ function), 744  
 Acroname::BrainStem::EntityClass::impl (C++ class), 744  
 Acroname::BrainStem::EntityClass::init (C++ function), 740  
 Acroname::BrainStem::EntityClass::loadEntityFromStore (C++ function), 743  
 Acroname::BrainStem::EntityClass::registerOptionCallback (C++ function), 743  
 Acroname::BrainStem::EntityClass::resetEntityToFactoryDefaults (C++ function), 743  
 Acroname::BrainStem::EntityClass::saveEntityToStore (C++ function), 743  
 Acroname::BrainStem::EntityClass::setStreamEnabled (C++ function), 743  
 Acroname::BrainStem::EntityClass::setUEI16 (C++ function), 741  
 Acroname::BrainStem::EntityClass::setUEI32 (C++ function), 741  
 Acroname::BrainStem::EntityClass::setUEI8 (C++ function), 740  
 Acroname::BrainStem::EntityClass::setUEIBytes (C++ function), 742  
 Acroname::BrainStem::EntityClass::sUEIBytesFilter (C++ function), 744  
 Acroname::BrainStem::EqualizerClass (C++ class), 754  
 Acroname::BrainStem::EqualizerClass::~EqualizerClass (C++ function), 754  
 Acroname::BrainStem::EqualizerClass::EqualizerClass (C++ function), 754  
 Acroname::BrainStem::EqualizerClass::getReceiverConfig (C++ function), 755  
 Acroname::BrainStem::EqualizerClass::getTransmitterConfig (C++ function), 755  
 Acroname::BrainStem::EqualizerClass::init (C++ function), 754  
 Acroname::BrainStem::EqualizerClass::setReceiverConfig (C++ function), 754  
 Acroname::BrainStem::EqualizerClass::setTransmitterConfig (C++ function), 755  
 Acroname::BrainStem::EthernetClass (C++ class), 755  
 Acroname::BrainStem::EthernetClass::~EthernetClass (C++ function), 755  
 Acroname::BrainStem::EthernetClass::EthernetClass (C++ function), 755  
 Acroname::BrainStem::EthernetClass::EthernetClass::getEnabled (C++ function), 756  
 Acroname::BrainStem::EthernetClass::getHostname (C++ function), 759  
 Acroname::BrainStem::EthernetClass::getInterfacePort (C++ function), 760  
 Acroname::BrainStem::EthernetClass::getIPv4Address (C++ function), 758  
 Acroname::BrainStem::EthernetClass::getIPv4DNSAddress (C++ function), 759  
 Acroname::BrainStem::EthernetClass::getIPv4Gateway (C++ function), 758  
 Acroname::BrainStem::EthernetClass::getIPv4Netmask (C++ function), 758  
 Acroname::BrainStem::EthernetClass::getMACAddress (C++ function), 759  
 Acroname::BrainStem::EthernetClass::getNetworkConfiguration (C++ function), 756  
 Acroname::BrainStem::EthernetClass::getStaticIPv4Address (C++ function), 756  
 Acroname::BrainStem::EthernetClass::getStaticIPv4DNSAddress (C++ function), 758  
 Acroname::BrainStem::EthernetClass::getStaticIPv4Gateway (C++ function), 757  
 Acroname::BrainStem::EthernetClass::getStaticIPv4Netmask (C++ function), 757  
 Acroname::BrainStem::EthernetClass::init (C++ function), 755  
 Acroname::BrainStem::EthernetClass::setEnabled (C++ function), 755  
 Acroname::BrainStem::EthernetClass::setHostname (C++ function), 759  
 Acroname::BrainStem::EthernetClass::setInterfacePort (C++ function), 759  
 Acroname::BrainStem::EthernetClass::setNetworkConfiguration (C++ function), 756  
 Acroname::BrainStem::EthernetClass::setStaticIPv4Address (C++ function), 756  
 Acroname::BrainStem::EthernetClass::setStaticIPv4DNSAddress (C++ function), 758  
 Acroname::BrainStem::EthernetClass::setStaticIPv4Gateway (C++ function), 757  
 Acroname::BrainStem::EthernetClass::setStaticIPv4Netmask (C++ function), 757  
 Acroname::BrainStem::HDBaseTClass (C++ class), 760  
 Acroname::BrainStem::HDBaseTClass::~HDBaseTClass (C++ function), 760  
 Acroname::BrainStem::HDBaseTClass::getCableLength (C++ function), 761  
 Acroname::BrainStem::HDBaseTClass::getEncodingState (C++ function), 761

Acroname::BrainStem::HDBaseTClass::getFirmwareVersion (C++ function), 760  
Acroname::BrainStem::HDBaseTClass::getLinkRole (C++ function), 762  
Acroname::BrainStem::HDBaseTClass::getLinkUtilization (C++ function), 761  
Acroname::BrainStem::HDBaseTClass::getMSEA (C++ function), 761  
Acroname::BrainStem::HDBaseTClass::getMSEB (C++ function), 761  
Acroname::BrainStem::HDBaseTClass::getRetransmissionRate (C++ function), 761  
Acroname::BrainStem::HDBaseTClass::getSerialNumber (C++ function), 760  
Acroname::BrainStem::HDBaseTClass::getState (C++ function), 761  
Acroname::BrainStem::HDBaseTClass::getUSB2DeviceTree (C++ function), 762  
Acroname::BrainStem::HDBaseTClass::getUSB3DeviceTree (C++ function), 762  
Acroname::BrainStem::HDBaseTClass::HDBaseTClass (C++ function), 760  
Acroname::BrainStem::HDBaseTClass::init (C++ function), 760  
Acroname::BrainStem::HDBaseTClass::setLinkRole (C++ function), 762  
Acroname::BrainStem::I2CClass (C++ class), 762  
Acroname::BrainStem::I2CClass::~I2CClass (C++ function), 763  
Acroname::BrainStem::I2CClass::getSpeed (C++ function), 764  
Acroname::BrainStem::I2CClass::I2CClass (C++ function), 763  
Acroname::BrainStem::I2CClass::init (C++ function), 763  
Acroname::BrainStem::I2CClass::read (C++ function), 763  
Acroname::BrainStem::I2CClass::setPullup (C++ function), 763  
Acroname::BrainStem::I2CClass::setSpeed (C++ function), 763  
Acroname::BrainStem::I2CClass::write (C++ function), 763  
Acroname::BrainStem::Link (C++ class), 840  
Acroname::BrainStem::Link::~Link (C++ function), 842  
Acroname::BrainStem::Link::connect (C++ function), 843  
Acroname::BrainStem::Link::connectThroughLinkModule (C++ function), 843  
Acroname::BrainStem::Link::disablePacketLog (C++ function), 849  
Acroname::BrainStem::Link::disconnect (C++ function), 843  
Acroname::BrainStem::Link::discoverAndConnect (C++ function), 842  
Acroname::BrainStem::Link::dropMatchingUEIPackets (C++ function), 845  
Acroname::BrainStem::Link::enablePacketLog (C++ function), 849  
Acroname::BrainStem::Link::enablePooledPackets (C++ function), 849  
Acroname::BrainStem::Link::enableStream (C++ function), 847  
Acroname::BrainStem::Link::filterActiveStreamKeys (C++ function), 849  
Acroname::BrainStem::Link::getConfig (C++ function), 842  
Acroname::BrainStem::Link::getFactoryData (C++ function), 849  
Acroname::BrainStem::Link::getLinkSpecifier (C++ function), 844  
Acroname::BrainStem::Link::getModuleAddress (C++ function), 844  
Acroname::BrainStem::Link::getName (C++ function), 843  
Acroname::BrainStem::Link::getStatus (C++ function), 843  
Acroname::BrainStem::Link::getStreamKeyElement (C++ function), 851  
Acroname::BrainStem::Link::getStreamPacketType (C++ function), 850  
Acroname::BrainStem::Link::getStreamSample (C++ function), 851  
Acroname::BrainStem::Link::getStreamStatus (C++ function), 848  
Acroname::BrainStem::Link::getStreamValue (C++ function), 848  
Acroname::BrainStem::Link::getTimestampParts (C++ function), 851  
Acroname::BrainStem::Link::impl (C++ class), 852  
Acroname::BrainStem::Link:: isConnected (C++ function), 843  
Acroname::BrainStem::Link::isLinkStreaming (C++ function), 848  
Acroname::BrainStem::Link::isStreamPacket (C++ function), 851  
Acroname::BrainStem::Link::isStreamSample (C++ function), 851  
Acroname::BrainStem::Link::isSubindexType (C++ function), 851  
Acroname::BrainStem::Link::Link (C++ function), 842  
Acroname::BrainStem::Link::linkStreamFilter (C++ function), 852  
Acroname::BrainStem::Link::loadStoreSlot (C++ function), 846  
Acroname::BrainStem::Link::receivePacket (C++ function), 846  
Acroname::BrainStem::Link::receiveUEI (C++ function), 844, 845  
Acroname::BrainStem::Link::registerStreamCallback (C++ function), 848  
Acroname::BrainStem::Link::reset (C++ function), 843  
Acroname::BrainStem::Link::sDiscover (C++ function), 850  
Acroname::BrainStem::Link::sendPacket (C++ function), 845  
Acroname::BrainStem::Link::sendUEI (C++ function), 844  
Acroname::BrainStem::Link::setConfig (C++ function), 842  
Acroname::BrainStem::Link::setFactoryData (C++ function), 849  
Acroname::BrainStem::Link::setLinkSpecifier (C++ function), 844  
Acroname::BrainStem::Link::sFindAll (C++ function), 850  
Acroname::BrainStem::Link::storeSlotCapacity (C++ function), 847  
Acroname::BrainStem::Link::storeSlotSize (C++ function), 847



Acroname::BrainStem::Link::STREAM\_KEY (C++ enum), 841  
 Acroname::BrainStem::Link::STREAM\_KEY::STREAM\_KEY\_CMD (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_KEY::STREAM\_KEY\_INDEX (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_KEY::STREAM\_KEY\_LAST (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_KEY::STREAM\_KEY\_MODULE\_ADDRESS (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_KEY::STREAM\_KEY\_OPTION (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_KEY::STREAM\_KEY\_SUBINDEX (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_KEY\_t (C++ type), 842  
 Acroname::BrainStem::Link::STREAM\_PACKET (C++ enum), 840  
 Acroname::BrainStem::Link::STREAM\_PACKET::kSTREAM\_PACKET\_BYTES (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_PACKET::kSTREAM\_PACKET\_LAST (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_PACKET::kSTREAM\_PACKET\_SUBINDEX\_U16 (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_PACKET::kSTREAM\_PACKET\_SUBINDEX\_U32 (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_PACKET::kSTREAM\_PACKET\_SUBINDEX\_U8 (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_PACKET::kSTREAM\_PACKET\_U16 (C++ enumerator), 840  
 Acroname::BrainStem::Link::STREAM\_PACKET::kSTREAM\_PACKET\_U32 (C++ enumerator), 841  
 Acroname::BrainStem::Link::STREAM\_PACKET::kSTREAM\_PACKET\_U8 (C++ enumerator), 840  
 Acroname::BrainStem::Link::STREAM\_PACKET::kSTREAM\_PACKET\_UNKNOWN (C++ enumerator), 840  
 Acroname::BrainStem::Link::STREAM\_PACKET\_t (C++ type), 841  
 Acroname::BrainStem::Link::streamCallback\_t (C++ type), 841  
 Acroname::BrainStem::Link::StreamStatusEntry (C++ struct), 852  
 Acroname::BrainStem::Link::StreamStatusEntry::key (C++ member), 852  
 Acroname::BrainStem::Link::StreamStatusEntry::value (C++ member), 852  
 Acroname::BrainStem::Link::StreamStatusEntry\_t (C++ type), 841  
 Acroname::BrainStem::Link::unloadStoreSlot (C++ function), 846  
 Acroname::BrainStem::Module (C++ class), 852  
 Acroname::BrainStem::Module::~~Module (C++ function), 853  
 Acroname::BrainStem::Module::classQuantity (C++ function), 855  
 Acroname::BrainStem::Module::connect (C++ function), 853  
 Acroname::BrainStem::Module::connectFromSpec (C++ function), 853  
 Acroname::BrainStem::Module::connectThroughLinkModule (C++ function), 853  
 Acroname::BrainStem::Module::debug (C++ function), 856  
 Acroname::BrainStem::Module::disconnect (C++ function), 854  
 Acroname::BrainStem::Module::discoverAndConnect (C++ function), 853  
 Acroname::BrainStem::Module::entityGroup (C++ function), 856  
 Acroname::BrainStem::Module::getBuild (C++ function), 855  
 Acroname::BrainStem::Module::getConfig (C++ function), 854  
 Acroname::BrainStem::Module::getLink (C++ function), 854  
 Acroname::BrainStem::Module::getLinkSpecifier (C++ function), 855  
 Acroname::BrainStem::Module::getModuleAddress (C++ function), 854  
 Acroname::BrainStem::Module::getStatus (C++ function), 854  
 Acroname::BrainStem::Module::hasUEI (C++ function), 855  
 Acroname::BrainStem::Module::isConnected (C++ function), 854  
 Acroname::BrainStem::Module::Module (C++ function), 853  
 Acroname::BrainStem::Module::reconnect (C++ function), 854  
 Acroname::BrainStem::Module::setConfig (C++ function), 854  
 Acroname::BrainStem::Module::setModuleAddress (C++ function), 855  
 Acroname::BrainStem::Module::setNetworkingMode (C++ function), 856  
 Acroname::BrainStem::Module::subClassQuantity (C++ function), 856  
 Acroname::BrainStem::MuxClass (C++ class), 764  
 Acroname::BrainStem::MuxClass::~~MuxClass (C++ function), 764  
 Acroname::BrainStem::MuxClass::getChannel (C++ function), 765  
 Acroname::BrainStem::MuxClass::getChannelVoltage (C++ function), 765  
 Acroname::BrainStem::MuxClass::getConfiguration (C++ function), 765  
 Acroname::BrainStem::MuxClass::getEnable (C++ function), 764  
 Acroname::BrainStem::MuxClass::getSplitMode (C++ function), 766  
 Acroname::BrainStem::MuxClass::init (C++ function), 764  
 Acroname::BrainStem::MuxClass::MuxClass (C++ function), 764  
 Acroname::BrainStem::MuxClass::setChannel (C++ function), 765  
 Acroname::BrainStem::MuxClass::setConfiguration (C++ function), 765  
 Acroname::BrainStem::MuxClass::setEnable (C++ function), 764  
 Acroname::BrainStem::MuxClass::setSplitMode (C++ function), 766  
 Acroname::BrainStem::PoEClass (C++ class), 766  
 Acroname::BrainStem::PoEClass::~~PoEClass (C++ function), 766  
 Acroname::BrainStem::PoEClass::getPairAccumulatedPower (C++ function), 770  
 Acroname::BrainStem::PoEClass::getPairCapacitance (C++ function), 769  
 Acroname::BrainStem::PoEClass::getPairCurrent (C++ function), 769  
 Acroname::BrainStem::PoEClass::getPairDetectionStatus (C++ function), 768

Acroname::BrainStem::PoEClass::getPairDiscoveredClass (C++ function), 768  
Acroname::BrainStem::PoEClass::getPairEnabled (C++ function), 766  
Acroname::BrainStem::PoEClass::getPairPower (C++ function), 769  
Acroname::BrainStem::PoEClass::getPairRequestedClass (C++ function), 768  
Acroname::BrainStem::PoEClass::getPairResistance (C++ function), 769  
Acroname::BrainStem::PoEClass::getPairSourcingClass (C++ function), 767  
Acroname::BrainStem::PoEClass::getPairVoltage (C++ function), 768  
Acroname::BrainStem::PoEClass::getPowerMode (C++ function), 767  
Acroname::BrainStem::PoEClass::getPowerState (C++ function), 767  
Acroname::BrainStem::PoEClass::getTotalAccumulatedPower (C++ function), 770  
Acroname::BrainStem::PoEClass::getTotalPower (C++ function), 770  
Acroname::BrainStem::PoEClass::init (C++ function), 766  
Acroname::BrainStem::PoEClass::PoEClass (C++ function), 766  
Acroname::BrainStem::PoEClass::setPairAccumulatedPower (C++ function), 770  
Acroname::BrainStem::PoEClass::setPairEnabled (C++ function), 767  
Acroname::BrainStem::PoEClass::setPairSourcingClass (C++ function), 767  
Acroname::BrainStem::PoEClass::setPowerMode (C++ function), 767  
Acroname::BrainStem::PoEClass::setTotalAccumulatedPower (C++ function), 771  
Acroname::BrainStem::PointerClass (C++ class), 771  
Acroname::BrainStem::PointerClass::~~PointerClass (C++ function), 771  
Acroname::BrainStem::PointerClass::getChar (C++ function), 773  
Acroname::BrainStem::PointerClass::getInt (C++ function), 773  
Acroname::BrainStem::PointerClass::getMode (C++ function), 772  
Acroname::BrainStem::PointerClass::getOffset (C++ function), 771  
Acroname::BrainStem::PointerClass::getShort (C++ function), 773  
Acroname::BrainStem::PointerClass::getTransferStore (C++ function), 772  
Acroname::BrainStem::PointerClass::init (C++ function), 771  
Acroname::BrainStem::PointerClass::initiateTransferFromStore (C++ function), 772  
Acroname::BrainStem::PointerClass::initiateTransferToStore (C++ function), 772  
Acroname::BrainStem::PointerClass::PointerClass (C++ function), 771  
Acroname::BrainStem::PointerClass::setChar (C++ function), 773  
Acroname::BrainStem::PointerClass::setInt (C++ function), 773  
Acroname::BrainStem::PointerClass::setMode (C++ function), 772  
Acroname::BrainStem::PointerClass::setOffset (C++ function), 771  
Acroname::BrainStem::PointerClass::setShort (C++ function), 773  
Acroname::BrainStem::PointerClass::setTransferStore (C++ function), 772  
Acroname::BrainStem::PortClass (C++ class), 774  
Acroname::BrainStem::PortClass::~~PortClass (C++ function), 774  
Acroname::BrainStem::PortClass::getAllocatedPower (C++ function), 781  
Acroname::BrainStem::PortClass::getAvailablePower (C++ function), 781  
Acroname::BrainStem::PortClass::getCC1AccumulatedPower (C++ function), 787  
Acroname::BrainStem::PortClass::getCC1Current (C++ function), 787  
Acroname::BrainStem::PortClass::getCC1Enabled (C++ function), 779  
Acroname::BrainStem::PortClass::getCC1State (C++ function), 785  
Acroname::BrainStem::PortClass::getCC1Voltage (C++ function), 786  
Acroname::BrainStem::PortClass::getCC2AccumulatedPower (C++ function), 787  
Acroname::BrainStem::PortClass::getCC2Current (C++ function), 787  
Acroname::BrainStem::PortClass::getCC2Enabled (C++ function), 779  
Acroname::BrainStem::PortClass::getCC2State (C++ function), 786  
Acroname::BrainStem::PortClass::getCC2Voltage (C++ function), 786  
Acroname::BrainStem::PortClass::getCCCCurrentLimit (C++ function), 782  
Acroname::BrainStem::PortClass::getCCEnabled (C++ function), 779  
Acroname::BrainStem::PortClass::getCCCurrentLimit (C++ function), 780  
Acroname::BrainStem::PortClass::getCCCurrentLimitMode (C++ function), 781  
Acroname::BrainStem::PortClass::getDataEnabled (C++ function), 775  
Acroname::BrainStem::PortClass::getDataHS1Enabled (C++ function), 776  
Acroname::BrainStem::PortClass::getDataHS2Enabled (C++ function), 776  
Acroname::BrainStem::PortClass::getDataHSEnabled (C++ function), 775  
Acroname::BrainStem::PortClass::getDataHSRoutingBehavior (C++ function), 783  
Acroname::BrainStem::PortClass::getDataRole (C++ function), 778  
Acroname::BrainStem::PortClass::getDataSpeed (C++ function), 780  
Acroname::BrainStem::PortClass::getDataSS1Enabled (C++ function), 777  
Acroname::BrainStem::PortClass::getDataSS2Enabled (C++ function), 777  
Acroname::BrainStem::PortClass::getDataSSEnabled (C++ function), 776  
Acroname::BrainStem::PortClass::getDataSSRoutingBehavior (C++ function), 783  
Acroname::BrainStem::PortClass::getEnabled (C++ function), 775  
Acroname::BrainStem::PortClass::getErrors (C++ function), 780  
Acroname::BrainStem::PortClass::getHSBoost (C++ function), 785

Acraname::BrainStem::PortClass::getMode (C++ function), 780  
 Acraname::BrainStem::PortClass::getName (C++ function), 782  
 Acraname::BrainStem::PortClass::getPowerEnabled (C++ function), 777  
 Acraname::BrainStem::PortClass::getPowerLimit (C++ function), 781  
 Acraname::BrainStem::PortClass::getPowerLimitMode (C++ function), 782  
 Acraname::BrainStem::PortClass::getPowerMode (C++ function), 775  
 Acraname::BrainStem::PortClass::getSBU1Voltage (C++ function), 786  
 Acraname::BrainStem::PortClass::getSBU2Voltage (C++ function), 786  
 Acraname::BrainStem::PortClass::getState (C++ function), 780  
 Acraname::BrainStem::PortClass::getVbusAccumulatedPower (C++ function), 784  
 Acraname::BrainStem::PortClass::getVbusCurrent (C++ function), 774  
 Acraname::BrainStem::PortClass::getVbusVoltage (C++ function), 774  
 Acraname::BrainStem::PortClass::getVconn1Enabled (C++ function), 778  
 Acraname::BrainStem::PortClass::getVconn2Enabled (C++ function), 778  
 Acraname::BrainStem::PortClass::getVconnAccumulatedPower (C++ function), 784  
 Acraname::BrainStem::PortClass::getVconnCurrent (C++ function), 774  
 Acraname::BrainStem::PortClass::getVconnEnabled (C++ function), 778  
 Acraname::BrainStem::PortClass::getVconnVoltage (C++ function), 774  
 Acraname::BrainStem::PortClass::getVoltageSetpoint (C++ function), 779  
 Acraname::BrainStem::PortClass::init (C++ function), 774  
 Acraname::BrainStem::PortClass::PortClass (C++ function), 774  
 Acraname::BrainStem::PortClass::resetVbusAccumulatedPower (C++ function), 784  
 Acraname::BrainStem::PortClass::resetVconnAccumulatedPower (C++ function), 785  
 Acraname::BrainStem::PortClass::setCC1AccumulatedPower (C++ function), 787  
 Acraname::BrainStem::PortClass::setCC1Enabled (C++ function), 779  
 Acraname::BrainStem::PortClass::setCC2AccumulatedPower (C++ function), 787  
 Acraname::BrainStem::PortClass::setCC2Enabled (C++ function), 779  
 Acraname::BrainStem::PortClass::setCCCurrentLimit (C++ function), 783  
 Acraname::BrainStem::PortClass::setCCEnabled (C++ function), 779  
 Acraname::BrainStem::PortClass::setCurrentLimit (C++ function), 781  
 Acraname::BrainStem::PortClass::setCurrentLimitMode (C++ function), 781  
 Acraname::BrainStem::PortClass::setDataEnabled (C++ function), 775  
 Acraname::BrainStem::PortClass::setDataHS1Enabled (C++ function), 776  
 Acraname::BrainStem::PortClass::setDataHS2Enabled (C++ function), 776  
 Acraname::BrainStem::PortClass::setDataHSEnabled (C++ function), 776  
 Acraname::BrainStem::PortClass::setDataHSRoutingBehavior (C++ function), 783  
 Acraname::BrainStem::PortClass::setDataSS1Enabled (C++ function), 777  
 Acraname::BrainStem::PortClass::setDataSS2Enabled (C++ function), 777  
 Acraname::BrainStem::PortClass::setDataSSEnabled (C++ function), 776  
 Acraname::BrainStem::PortClass::setDataSSRoutingBehavior (C++ function), 784  
 Acraname::BrainStem::PortClass::setEnabled (C++ function), 775  
 Acraname::BrainStem::PortClass::setHSBoost (C++ function), 785  
 Acraname::BrainStem::PortClass::setMode (C++ function), 780  
 Acraname::BrainStem::PortClass::setName (C++ function), 782  
 Acraname::BrainStem::PortClass::setPowerEnabled (C++ function), 777  
 Acraname::BrainStem::PortClass::setPowerLimit (C++ function), 782  
 Acraname::BrainStem::PortClass::setPowerLimitMode (C++ function), 782  
 Acraname::BrainStem::PortClass::setPowerMode (C++ function), 775  
 Acraname::BrainStem::PortClass::setVbusAccumulatedPower (C++ function), 784  
 Acraname::BrainStem::PortClass::setVconn1Enabled (C++ function), 778  
 Acraname::BrainStem::PortClass::setVconn2Enabled (C++ function), 778  
 Acraname::BrainStem::PortClass::setVconnAccumulatedPower (C++ function), 784  
 Acraname::BrainStem::PortClass::setVconnEnabled (C++ function), 778  
 Acraname::BrainStem::PortClass::setVoltageSetpoint (C++ function), 780  
 Acraname::BrainStem::PowerDeliveryClass (C++ class), 788  
 Acraname::BrainStem::PowerDeliveryClass::~PowerDeliveryClass (C++ function), 788  
 Acraname::BrainStem::PowerDeliveryClass::getAttachTimeElapsed (C++ function), 791  
 Acraname::BrainStem::PowerDeliveryClass::getCableCurrentMax (C++ function), 793  
 Acraname::BrainStem::PowerDeliveryClass::getCableOrientation (C++ function), 794  
 Acraname::BrainStem::PowerDeliveryClass::getCableSpeedMax (C++ function), 794  
 Acraname::BrainStem::PowerDeliveryClass::getCableType (C++ function), 794  
 Acraname::BrainStem::PowerDeliveryClass::getCableVoltageMax (C++ function), 793  
 Acraname::BrainStem::PowerDeliveryClass::getConnectionState (C++ function), 788  
 Acraname::BrainStem::PowerDeliveryClass::getDataRoleCapabilities (C++ function), 793  
 Acraname::BrainStem::PowerDeliveryClass::getFastRoleSwapCurrent (C++ function), 796  
 Acraname::BrainStem::PowerDeliveryClass::getFlagMode (C++ function), 795  
 Acraname::BrainStem::PowerDeliveryClass::getLinkState (C++ function), 791  
 Acraname::BrainStem::PowerDeliveryClass::getNumberOfPowerDataObjects (C++ function), 788

Acroname::BrainStem::PowerDeliveryClass::getOverride (C++ function), 795  
Acroname::BrainStem::PowerDeliveryClass::getPeakCurrentConfiguration (C++ function), 796  
Acroname::BrainStem::PowerDeliveryClass::getPowerDataObject (C++ function), 788  
Acroname::BrainStem::PowerDeliveryClass::getPowerDataObjectEnabled (C++ function), 790  
Acroname::BrainStem::PowerDeliveryClass::getPowerDataObjectEnabledList (C++ function), 790  
Acroname::BrainStem::PowerDeliveryClass::getPowerDataObjectList (C++ function), 789  
Acroname::BrainStem::PowerDeliveryClass::getPowerRole (C++ function), 792  
Acroname::BrainStem::PowerDeliveryClass::getPowerRoleCapabilities (C++ function), 792  
Acroname::BrainStem::PowerDeliveryClass::getPowerRolePreferred (C++ function), 792  
Acroname::BrainStem::PowerDeliveryClass::getRequestDataObject (C++ function), 791  
Acroname::BrainStem::PowerDeliveryClass::init (C++ function), 788  
Acroname::BrainStem::PowerDeliveryClass::packDataObjectAttributes (C++ function), 797  
Acroname::BrainStem::PowerDeliveryClass::PowerDeliveryClass (C++ function), 788  
Acroname::BrainStem::PowerDeliveryClass::request (C++ function), 794  
Acroname::BrainStem::PowerDeliveryClass::requestStatus (C++ function), 795  
Acroname::BrainStem::PowerDeliveryClass::resetPowerDataObjectToDefault (C++ function), 789  
Acroname::BrainStem::PowerDeliveryClass::setFastRoleSwapCurrent (C++ function), 796  
Acroname::BrainStem::PowerDeliveryClass::setFlagMode (C++ function), 795  
Acroname::BrainStem::PowerDeliveryClass::setOverride (C++ function), 795  
Acroname::BrainStem::PowerDeliveryClass::setPeakCurrentConfiguration (C++ function), 796  
Acroname::BrainStem::PowerDeliveryClass::setPowerDataObject (C++ function), 789  
Acroname::BrainStem::PowerDeliveryClass::setPowerDataObjectEnabled (C++ function), 790  
Acroname::BrainStem::PowerDeliveryClass::setPowerRole (C++ function), 792  
Acroname::BrainStem::PowerDeliveryClass::setPowerRolePreferred (C++ function), 793  
Acroname::BrainStem::PowerDeliveryClass::setRequestDataObject (C++ function), 791  
Acroname::BrainStem::PowerDeliveryClass::unpackDataObjectAttributes (C++ function), 797  
Acroname::BrainStem::RailClass (C++ class), 799  
Acroname::BrainStem::RailClass::~RailClass (C++ function), 799  
Acroname::BrainStem::RailClass::clearFaults (C++ function), 805  
Acroname::BrainStem::RailClass::getCurrent (C++ function), 800  
Acroname::BrainStem::RailClass::getCurrentLimit (C++ function), 800  
Acroname::BrainStem::RailClass::getCurrentSetpoint (C++ function), 800  
Acroname::BrainStem::RailClass::getEnable (C++ function), 801  
Acroname::BrainStem::RailClass::getKelvinSensingEnable (C++ function), 804  
Acroname::BrainStem::RailClass::getKelvinSensingState (C++ function), 804  
Acroname::BrainStem::RailClass::getOperationalMode (C++ function), 804  
Acroname::BrainStem::RailClass::getOperationalState (C++ function), 804  
Acroname::BrainStem::RailClass::getPower (C++ function), 802  
Acroname::BrainStem::RailClass::getPowerLimit (C++ function), 803  
Acroname::BrainStem::RailClass::getPowerSetpoint (C++ function), 802  
Acroname::BrainStem::RailClass::getResistance (C++ function), 803  
Acroname::BrainStem::RailClass::getResistanceSetpoint (C++ function), 803  
Acroname::BrainStem::RailClass::getTemperature (C++ function), 800  
Acroname::BrainStem::RailClass::getVoltage (C++ function), 801  
Acroname::BrainStem::RailClass::getVoltageMaxLimit (C++ function), 802  
Acroname::BrainStem::RailClass::getVoltageMinLimit (C++ function), 802  
Acroname::BrainStem::RailClass::getVoltageSetpoint (C++ function), 801  
Acroname::BrainStem::RailClass::init (C++ function), 799  
Acroname::BrainStem::RailClass::RailClass (C++ function), 799  
Acroname::BrainStem::RailClass::setCurrentLimit (C++ function), 800  
Acroname::BrainStem::RailClass::setCurrentSetpoint (C++ function), 800  
Acroname::BrainStem::RailClass::setEnable (C++ function), 801  
Acroname::BrainStem::RailClass::setKelvinSensingEnable (C++ function), 804  
Acroname::BrainStem::RailClass::setOperationalMode (C++ function), 804  
Acroname::BrainStem::RailClass::setPowerLimit (C++ function), 803  
Acroname::BrainStem::RailClass::setPowerSetpoint (C++ function), 802  
Acroname::BrainStem::RailClass::setResistanceSetpoint (C++ function), 803  
Acroname::BrainStem::RailClass::setVoltageMaxLimit (C++ function), 802  
Acroname::BrainStem::RailClass::setVoltageMinLimit (C++ function), 801  
Acroname::BrainStem::RailClass::setVoltageSetpoint (C++ function), 801  
Acroname::BrainStem::RCServoClass (C++ class), 798  
Acroname::BrainStem::RCServoClass::~RCServoClass (C++ function), 798  
Acroname::BrainStem::RCServoClass::getEnable (C++ function), 798  
Acroname::BrainStem::RCServoClass::getPosition (C++ function), 799  
Acroname::BrainStem::RCServoClass::getReverse (C++ function), 799  
Acroname::BrainStem::RCServoClass::init (C++ function), 798  
Acroname::BrainStem::RCServoClass::RCServoClass (C++ function), 798  
Acroname::BrainStem::RCServoClass::setEnable (C++ function), 798



Acroname::BrainStem::RCServoClass::setPosition (C++ function), 798  
 Acroname::BrainStem::RCServoClass::setReverse (C++ function), 799  
 Acroname::BrainStem::RelayClass (C++ class), 805  
 Acroname::BrainStem::RelayClass::~~RelayClass (C++ function), 805  
 Acroname::BrainStem::RelayClass::getEnable (C++ function), 805  
 Acroname::BrainStem::RelayClass::getVoltage (C++ function), 805  
 Acroname::BrainStem::RelayClass::init (C++ function), 805  
 Acroname::BrainStem::RelayClass::RelayClass (C++ function), 805  
 Acroname::BrainStem::RelayClass::setEnable (C++ function), 805  
 Acroname::BrainStem::SignalClass (C++ class), 806  
 Acroname::BrainStem::SignalClass::~~SignalClass (C++ function), 806  
 Acroname::BrainStem::SignalClass::getEnable (C++ function), 806  
 Acroname::BrainStem::SignalClass::getInvert (C++ function), 807  
 Acroname::BrainStem::SignalClass::getT2Time (C++ function), 807  
 Acroname::BrainStem::SignalClass::getT3Time (C++ function), 807  
 Acroname::BrainStem::SignalClass::init (C++ function), 806  
 Acroname::BrainStem::SignalClass::setEnable (C++ function), 806  
 Acroname::BrainStem::SignalClass::setInvert (C++ function), 807  
 Acroname::BrainStem::SignalClass::setT2Time (C++ function), 807  
 Acroname::BrainStem::SignalClass::setT3Time (C++ function), 807  
 Acroname::BrainStem::SignalClass::SignalClass (C++ function), 806  
 Acroname::BrainStem::StoreClass (C++ class), 808  
 Acroname::BrainStem::StoreClass::~~StoreClass (C++ function), 808  
 Acroname::BrainStem::StoreClass::getStoreClass::getStoreClass (C++ function), 809  
 Acroname::BrainStem::StoreClass::getSlotLocked (C++ function), 809  
 Acroname::BrainStem::StoreClass::getSlotSize (C++ function), 809  
 Acroname::BrainStem::StoreClass::getSlotState (C++ function), 808  
 Acroname::BrainStem::StoreClass::init (C++ function), 808  
 Acroname::BrainStem::StoreClass::loadSlot (C++ function), 808  
 Acroname::BrainStem::StoreClass::setSlotLocked (C++ function), 810  
 Acroname::BrainStem::StoreClass::slotDisable (C++ function), 809  
 Acroname::BrainStem::StoreClass::slotEnable (C++ function), 809  
 Acroname::BrainStem::StoreClass::StoreClass (C++ function), 808  
 Acroname::BrainStem::StoreClass::unloadSlot (C++ function), 808  
 Acroname::BrainStem::SystemClass (C++ class), 810  
 Acroname::BrainStem::SystemClass::~~SystemClass (C++ function), 810  
 Acroname::BrainStem::SystemClass::getBootSlot (C++ function), 812  
 Acroname::BrainStem::SystemClass::getBuild (C++ function), 813  
 Acroname::BrainStem::SystemClass::getErrors (C++ function), 818  
 Acroname::BrainStem::SystemClass::getHardwareVersion (C++ function), 813  
 Acroname::BrainStem::SystemClass::getHBInterval (C++ function), 811  
 Acroname::BrainStem::SystemClass::getInputCurrent (C++ function), 814  
 Acroname::BrainStem::SystemClass::getInputPowerBehavior (C++ function), 817  
 Acroname::BrainStem::SystemClass::getInputPowerBehaviorConfig (C++ function), 817  
 Acroname::BrainStem::SystemClass::getInputPowerSource (C++ function), 817  
 Acroname::BrainStem::SystemClass::getInputVoltage (C++ function), 814  
 Acroname::BrainStem::SystemClass::getLED (C++ function), 812  
 Acroname::BrainStem::SystemClass::getLEDMaxBrightness (C++ function), 812  
 Acroname::BrainStem::SystemClass::getLinkInterface (C++ function), 818  
 Acroname::BrainStem::SystemClass::getMaximumTemperature (C++ function), 814  
 Acroname::BrainStem::SystemClass::getMinimumTemperature (C++ function), 814  
 Acroname::BrainStem::SystemClass::getModel (C++ function), 813  
 Acroname::BrainStem::SystemClass::getModule (C++ function), 810  
 Acroname::BrainStem::SystemClass::getModuleBaseAddress (C++ function), 810  
 Acroname::BrainStem::SystemClass::getModuleHardwareOffset (C++ function), 815  
 Acroname::BrainStem::SystemClass::getModuleSoftwareOffset (C++ function), 815  
 Acroname::BrainStem::SystemClass::getName (C++ function), 817  
 Acroname::BrainStem::SystemClass::getPowerLimit (C++ function), 816  
 Acroname::BrainStem::SystemClass::getPowerLimitMax (C++ function), 816  
 Acroname::BrainStem::SystemClass::getPowerLimitState (C++ function), 816  
 Acroname::BrainStem::SystemClass::getProtocolFeatures (C++ function), 819  
 Acroname::BrainStem::SystemClass::getRouter (C++ function), 811  
 Acroname::BrainStem::SystemClass::getRouterAddressSetting (C++ function), 815  
 Acroname::BrainStem::SystemClass::getSerialNumber (C++ function), 813  
 Acroname::BrainStem::SystemClass::getTemperature (C++ function), 814  
 Acroname::BrainStem::SystemClass::getUnregulatedCurrent (C++ function), 816  
 Acroname::BrainStem::SystemClass::getUnregulatedVoltage (C++ function), 816  
 Acroname::BrainStem::SystemClass::getUptime (C++ function), 814

Acroname::BrainStem::SystemClass::getVersion (C++ function), 812  
Acroname::BrainStem::SystemClass::init (C++ function), 810  
Acroname::BrainStem::SystemClass::logEvents (C++ function), 814  
Acroname::BrainStem::SystemClass::reset (C++ function), 814  
Acroname::BrainStem::SystemClass::resetDeviceToFactoryDefaults (C++ function), 818  
Acroname::BrainStem::SystemClass::routeToMe (C++ function), 815  
Acroname::BrainStem::SystemClass::save (C++ function), 813  
Acroname::BrainStem::SystemClass::setBootSlot (C++ function), 812  
Acroname::BrainStem::SystemClass::setHBInterval (C++ function), 811  
Acroname::BrainStem::SystemClass::setInputPowerBehavior (C++ function), 817  
Acroname::BrainStem::SystemClass::setInputPowerBehaviorConfig (C++ function), 817  
Acroname::BrainStem::SystemClass::setLED (C++ function), 811  
Acroname::BrainStem::SystemClass::setLEDMaxBrightness (C++ function), 812  
Acroname::BrainStem::SystemClass::setLinkInterface (C++ function), 818  
Acroname::BrainStem::SystemClass::setModuleSoftwareOffset (C++ function), 815  
Acroname::BrainStem::SystemClass::setName (C++ function), 818  
Acroname::BrainStem::SystemClass::setPowerLimitMax (C++ function), 816  
Acroname::BrainStem::SystemClass::setRouter (C++ function), 811  
Acroname::BrainStem::SystemClass::SystemClass (C++ function), 810  
Acroname::BrainStem::TemperatureClass (C++ class), 819  
Acroname::BrainStem::TemperatureClass::~TemperatureClass (C++ function), 819  
Acroname::BrainStem::TemperatureClass::getValue (C++ function), 819  
Acroname::BrainStem::TemperatureClass::getValueMax (C++ function), 820  
Acroname::BrainStem::TemperatureClass::getValueMin (C++ function), 819  
Acroname::BrainStem::TemperatureClass::init (C++ function), 819  
Acroname::BrainStem::TemperatureClass::TemperatureClass (C++ function), 819  
Acroname::BrainStem::TimerClass (C++ class), 820  
Acroname::BrainStem::TimerClass::~TimerClass (C++ function), 820  
Acroname::BrainStem::TimerClass::getExpiration (C++ function), 820  
Acroname::BrainStem::TimerClass::getMode (C++ function), 821  
Acroname::BrainStem::TimerClass::init (C++ function), 820  
Acroname::BrainStem::TimerClass::setExpiration (C++ function), 820  
Acroname::BrainStem::TimerClass::setMode (C++ function), 821  
Acroname::BrainStem::TimerClass::TimerClass (C++ function), 820  
Acroname::BrainStem::UARTClass (C++ class), 821  
Acroname::BrainStem::UARTClass::~UARTClass (C++ function), 821  
Acroname::BrainStem::UARTClass::getAvailableProtocols (C++ function), 824  
Acroname::BrainStem::UARTClass::getBaudRate (C++ function), 822  
Acroname::BrainStem::UARTClass::getCapableProtocols (C++ function), 824  
Acroname::BrainStem::UARTClass::getDataBits (C++ function), 824  
Acroname::BrainStem::UARTClass::getEnable (C++ function), 821  
Acroname::BrainStem::UARTClass::getFlowControl (C++ function), 824  
Acroname::BrainStem::UARTClass::getLinkChannel (C++ function), 822  
Acroname::BrainStem::UARTClass::getParity (C++ function), 823  
Acroname::BrainStem::UARTClass::getProtocol (C++ function), 822  
Acroname::BrainStem::UARTClass::getStopBits (C++ function), 823  
Acroname::BrainStem::UARTClass::init (C++ function), 821  
Acroname::BrainStem::UARTClass::setBaudRate (C++ function), 822  
Acroname::BrainStem::UARTClass::setDataBits (C++ function), 824  
Acroname::BrainStem::UARTClass::setEnable (C++ function), 821  
Acroname::BrainStem::UARTClass::setFlowControl (C++ function), 824  
Acroname::BrainStem::UARTClass::setLinkChannel (C++ function), 822  
Acroname::BrainStem::UARTClass::setParity (C++ function), 823  
Acroname::BrainStem::UARTClass::setProtocol (C++ function), 822  
Acroname::BrainStem::UARTClass::setStopBits (C++ function), 823  
Acroname::BrainStem::UARTClass::UARTClass (C++ function), 821  
Acroname::BrainStem::USBCClass (C++ class), 825  
Acroname::BrainStem::USBCClass::~USBCClass (C++ function), 825  
Acroname::BrainStem::USBCClass::clearPortErrorStatus (C++ function), 827  
Acroname::BrainStem::USBCClass::getAltModeConfig (C++ function), 834  
Acroname::BrainStem::USBCClass::getCableFlip (C++ function), 833  
Acroname::BrainStem::USBCClass::getCC1Current (C++ function), 832  
Acroname::BrainStem::USBCClass::getCC1Enable (C++ function), 831  
Acroname::BrainStem::USBCClass::getCC1Voltage (C++ function), 832  
Acroname::BrainStem::USBCClass::getCC2Current (C++ function), 832  
Acroname::BrainStem::USBCClass::getCC2Enable (C++ function), 832  
Acroname::BrainStem::USBCClass::getCC2Voltage (C++ function), 833  
Acroname::BrainStem::USBCClass::getConnectMode (C++ function), 831

Acroname::BrainStem::USBClass::getDownstreamBoostMode (C++ function), 830  
 Acroname::BrainStem::USBClass::getDownstreamDataSpeed (C++ function), 830  
 Acroname::BrainStem::USBClass::getEnumerationDelay (C++ function), 828  
 Acroname::BrainStem::USBClass::getHubMode (C++ function), 827  
 Acroname::BrainStem::USBClass::getPortCurrent (C++ function), 827  
 Acroname::BrainStem::USBClass::getPortCurrentLimit (C++ function), 829  
 Acroname::BrainStem::USBClass::getPortError (C++ function), 829  
 Acroname::BrainStem::USBClass::getPortMode (C++ function), 829  
 Acroname::BrainStem::USBClass::getPortState (C++ function), 829  
 Acroname::BrainStem::USBClass::getPortVoltage (C++ function), 827  
 Acroname::BrainStem::USBClass::getSBU1Voltage (C++ function), 834  
 Acroname::BrainStem::USBClass::getSBU2Voltage (C++ function), 834  
 Acroname::BrainStem::USBClass::getSBUEnable (C++ function), 833  
 Acroname::BrainStem::USBClass::getUpstreamBoostMode (C++ function), 830  
 Acroname::BrainStem::USBClass::getUpstreamMode (C++ function), 828  
 Acroname::BrainStem::USBClass::getUpstreamState (C++ function), 828  
 Acroname::BrainStem::USBClass::init (C++ function), 825  
 Acroname::BrainStem::USBClass::setAltModeConfig (C++ function), 834  
 Acroname::BrainStem::USBClass::setCableFlip (C++ function), 833  
 Acroname::BrainStem::USBClass::setCC1Enable (C++ function), 831  
 Acroname::BrainStem::USBClass::setCC2Enable (C++ function), 832  
 Acroname::BrainStem::USBClass::setConnectMode (C++ function), 831  
 Acroname::BrainStem::USBClass::setDataDisable (C++ function), 826  
 Acroname::BrainStem::USBClass::setDataEnable (C++ function), 825  
 Acroname::BrainStem::USBClass::setDownstreamBoostMode (C++ function), 830  
 Acroname::BrainStem::USBClass::setEnumerationDelay (C++ function), 828  
 Acroname::BrainStem::USBClass::setHiSpeedDataDisable (C++ function), 826  
 Acroname::BrainStem::USBClass::setHiSpeedDataEnable (C++ function), 826  
 Acroname::BrainStem::USBClass::setHubMode (C++ function), 827  
 Acroname::BrainStem::USBClass::setPortCurrentLimit (C++ function), 828  
 Acroname::BrainStem::USBClass::setPortDisable (C++ function), 825  
 Acroname::BrainStem::USBClass::setPortEnable (C++ function), 825  
 Acroname::BrainStem::USBClass::setPortMode (C++ function), 829  
 Acroname::BrainStem::USBClass::setPowerDisable (C++ function), 827  
 Acroname::BrainStem::USBClass::setPowerEnable (C++ function), 826  
 Acroname::BrainStem::USBClass::setSBUEnable (C++ function), 833  
 Acroname::BrainStem::USBClass::setSuperSpeedDataDisable (C++ function), 826  
 Acroname::BrainStem::USBClass::setSuperSpeedDataEnable (C++ function), 826  
 Acroname::BrainStem::USBClass::setUpstreamBoostMode (C++ function), 830  
 Acroname::BrainStem::USBClass::setUpstreamMode (C++ function), 828  
 Acroname::BrainStem::USBClass::USBClass (C++ function), 825  
 Acroname::BrainStem::USBSysClass (C++ class), 834  
 Acroname::BrainStem::USBSysClass::~USBSysClass (C++ function), 835  
 Acroname::BrainStem::USBSysClass::getDataHSMaxDatarate (C++ function), 839  
 Acroname::BrainStem::USBSysClass::getDataRoleBehavior (C++ function), 837  
 Acroname::BrainStem::USBSysClass::getDataRoleBehaviorConfig (C++ function), 838  
 Acroname::BrainStem::USBSysClass::getDataRoleList (C++ function), 835  
 Acroname::BrainStem::USBSysClass::getDataSSMaxDatarate (C++ function), 840  
 Acroname::BrainStem::USBSysClass::getEnabledList (C++ function), 835  
 Acroname::BrainStem::USBSysClass::getEnumerationDelay (C++ function), 835  
 Acroname::BrainStem::USBSysClass::getModeList (C++ function), 836  
 Acroname::BrainStem::USBSysClass::getOverride (C++ function), 839  
 Acroname::BrainStem::USBSysClass::getPowerBehavior (C++ function), 836  
 Acroname::BrainStem::USBSysClass::getPowerBehaviorConfig (C++ function), 837  
 Acroname::BrainStem::USBSysClass::getSelectorMode (C++ function), 838  
 Acroname::BrainStem::USBSysClass::getStateList (C++ function), 836  
 Acroname::BrainStem::USBSysClass::getUpstream (C++ function), 835  
 Acroname::BrainStem::USBSysClass::getUpstreamHS (C++ function), 838  
 Acroname::BrainStem::USBSysClass::getUpstreamSS (C++ function), 839  
 Acroname::BrainStem::USBSysClass::init (C++ function), 835  
 Acroname::BrainStem::USBSysClass::setDataHSMaxDatarate (C++ function), 839  
 Acroname::BrainStem::USBSysClass::setDataRoleBehavior (C++ function), 837  
 Acroname::BrainStem::USBSysClass::setDataRoleBehaviorConfig (C++ function), 838  
 Acroname::BrainStem::USBSysClass::setDataSSMaxDatarate (C++ function), 840  
 Acroname::BrainStem::USBSysClass::setEnabledList (C++ function), 836  
 Acroname::BrainStem::USBSysClass::setEnumerationDelay (C++ function), 835  
 Acroname::BrainStem::USBSysClass::setModeList (C++ function), 836  
 Acroname::BrainStem::USBSysClass::setOverride (C++ function), 839

Acroname::BrainStem::USBSysClass::setPowerBehavior (C++ function), 837  
Acroname::BrainStem::USBSysClass::setPowerBehaviorConfig (C++ function), 837  
Acroname::BrainStem::USBSysClass::setSelectorMode (C++ function), 838  
Acroname::BrainStem::USBSysClass::setUpstream (C++ function), 835  
Acroname::BrainStem::USBSysClass::setUpstreamHS (C++ function), 839  
Acroname::BrainStem::USBSysClass::setUpstreamSS (C++ function), 839  
Acroname::BrainStem::USBSysClass::USBSysClass (C++ function), 835  
Acroname::BrainStem::Utilities::PDChannelLogger (C++ class), 857  
Acroname::BrainStem::Utilities::PDChannelLogger::getIndex (C++ function), 857  
Acroname::BrainStem::Utilities::PDChannelLogger::getPacket (C++ function), 857  
Acroname::BrainStem::Utilities::PDChannelLogger::getPackets (C++ function), 857  
Acroname::BrainStem::Utilities::PDChannelLogger::PDChannelLogger (C++ function), 857  
Acroname::BrainStem::Utilities::PDChannelLogger::setEnabled (C++ function), 857  
address (brainstem.module.Module property), 568  
aDefs\_GetModelName (C++ function), 859  
aDiscovery\_EnumerateModules (C++ function), 861  
aDiscovery\_FindFirstModule (C++ function), 862  
aDiscovery\_FindModule (C++ function), 861  
aDiscoveryModuleFoundProc (C++ type), 861  
aErr (C++ enum), 863  
aErr::aErrAsyncReturn (C++ enumerator), 865  
aErr::aErrBusy (C++ enumerator), 863  
aErr::aErrCancel (C++ enumerator), 864  
aErr::aErrConfiguration (C++ enumerator), 864  
aErr::aErrConnection (C++ enumerator), 864  
aErr::aErrDuplicate (C++ enumerator), 864  
aErr::aErrEOF (C++ enumerator), 863  
aErr::aErrFileNameLength (C++ enumerator), 863  
aErr::aErrIndexRange (C++ enumerator), 864  
aErr::aErrInitialization (C++ enumerator), 864  
aErr::aErrInvalidEntity (C++ enumerator), 864  
aErr::aErrInvalidOption (C++ enumerator), 865  
aErr::aErrIO (C++ enumerator), 863  
aErr::aErrMedia (C++ enumerator), 865  
aErr::aErrMemory (C++ enumerator), 863  
aErr::aErrMode (C++ enumerator), 863  
aErr::aErrNone (C++ enumerator), 863  
aErr::aErrNotFound (C++ enumerator), 863  
aErr::aErrNotReady (C++ enumerator), 863  
aErr::aErrOverrun (C++ enumerator), 864  
aErr::aErrPacket (C++ enumerator), 864  
aErr::aErrParam (C++ enumerator), 863  
aErr::aErrParse (C++ enumerator), 864  
aErr::aErrPermission (C++ enumerator), 863  
aErr::aErrRange (C++ enumerator), 863  
aErr::aErrRead (C++ enumerator), 863  
aErr::aErrResource (C++ enumerator), 865  
aErr::aErrShortCommand (C++ enumerator), 864  
aErr::aErrSize (C++ enumerator), 864  
aErr::aErrStreamStale (C++ enumerator), 865  
aErr::aErrTimeout (C++ enumerator), 864  
aErr::aErrUnimplemented (C++ enumerator), 864  
aErr::aErrUnknown (C++ enumerator), 865  
aErr::aErrVersion (C++ enumerator), 864  
aErr::aErrWrite (C++ enumerator), 863  
aError\_GetErrorText (C++ function), 865  
AETHER (brainstem.link.Spec attribute), 567  
AETHER\_SERIAL (brainstem.link.Spec attribute), 567  
AETHER\_TCPIP (brainstem.link.Spec attribute), 567  
AETHER\_USB (brainstem.link.Spec attribute), 567  
aEtherConfig (class in brainstem.link), 568  
aFile\_Close (C++ function), 866  
aFile\_Delete (C++ function), 868  
aFile\_Exists (C++ function), 866  
aFile\_GetSize (C++ function), 868  
aFile\_Open (C++ function), 866  
aFile\_Read (C++ function), 867  
aFile\_Seek (C++ function), 867



aFileMode (C++ enum), 865  
 aFileMode::aFileModeAppend (C++ enumerator), 865  
 aFileMode::aFileModeReadOnly (C++ enumerator), 865  
 aFileMode::aFileModeUnknown (C++ enumerator), 866  
 aFileMode::aFileModeWriteOnly (C++ enumerator), 865  
 aFileRef (C++ type), 865  
 aFileSeekMode (C++ enum), 866  
 aFileSeekMode::aSeekCurrent (C++ enumerator), 866  
 aFileSeekMode::aSeekEnd (C++ enumerator), 866  
 aFileSeekMode::aSeekStart (C++ enumerator), 866  
 aLIBEXPORT (C macro), 859  
 aLink\_AwaitFirst (C++ function), 871  
 aLink\_AwaitPacket (C++ function), 871  
 aLink\_CreateTCPIP (C++ function), 870  
 aLink\_CreateUSB (C++ function), 869  
 aLink\_Destroy (C++ function), 870  
 aLink\_DrainPackets (C++ function), 872  
 aLink\_GetFirst (C++ function), 871  
 aLink\_GetPacket (C++ function), 871  
 aLink\_GetStatus (C++ function), 871  
 aLink\_PutPacket (C++ function), 872  
 aLink\_Reset (C++ function), 870  
 aLinkRef (C++ type), 869  
 aLinkSpec\_Create (C++ function), 862  
 aLinkSpec\_Destroy (C++ function), 862  
 aMemPtr (C macro), 859  
 aMTM\_ETHERSTEM\_BULK\_CAPTURE\_MAX\_HZ (C macro), 724  
 aMTM\_ETHERSTEM\_BULK\_CAPTURE\_MIN\_HZ (C macro), 724  
 aMTM\_ETHERSTEM\_MODULE\_BASE\_ADDRESS (C macro), 724  
 aMTM\_ETHERSTEM\_NUM\_A2D (C macro), 724  
 aMTM\_ETHERSTEM\_NUM\_APPS (C macro), 724  
 aMTM\_ETHERSTEM\_NUM\_CLOCK (C macro), 724  
 aMTM\_ETHERSTEM\_NUM\_DIG (C macro), 724  
 aMTM\_ETHERSTEM\_NUM\_I2C (C macro), 725  
 aMTM\_ETHERSTEM\_NUM\_INPUT\_SIGNALS (C macro), 725  
 aMTM\_ETHERSTEM\_NUM\_INTERNAL\_SLOTS (C macro), 724  
 aMTM\_ETHERSTEM\_NUM\_OUTPUT\_SIGNALS (C macro), 725  
 aMTM\_ETHERSTEM\_NUM\_POINTERS (C macro), 725  
 aMTM\_ETHERSTEM\_NUM\_RAM\_SLOTS (C macro), 724  
 aMTM\_ETHERSTEM\_NUM\_SD\_SLOTS (C macro), 724  
 aMTM\_ETHERSTEM\_NUM\_SERVOS (C macro), 725  
 aMTM\_ETHERSTEM\_NUM\_SIGNALS (C macro), 725  
 aMTM\_ETHERSTEM\_NUM\_STORES (C macro), 724  
 aMTM\_ETHERSTEM\_NUM\_TIMERS (C macro), 725  
 aMTM\_STEM\_BULK\_CAPTURE\_MAX\_HZ (C macro), 738  
 aMTM\_STEM\_BULK\_CAPTURE\_MIN\_HZ (C macro), 738  
 aMTM\_STEM\_MODULE\_BASE\_ADDRESS (C macro), 738  
 aMTM\_STEM\_NUM\_A2D (C macro), 738  
 aMTM\_STEM\_NUM\_APPS (C macro), 738  
 aMTM\_STEM\_NUM\_CLOCK (C macro), 738  
 aMTM\_STEM\_NUM\_DIG (C macro), 738  
 aMTM\_STEM\_NUM\_I2C (C macro), 738  
 aMTM\_STEM\_NUM\_INPUT\_SIGNALS (C macro), 739  
 aMTM\_STEM\_NUM\_INTERNAL\_SLOTS (C macro), 739  
 aMTM\_STEM\_NUM\_OUTPUT\_SIGNALS (C macro), 739  
 aMTM\_STEM\_NUM\_POINTERS (C macro), 738  
 aMTM\_STEM\_NUM\_RAM\_SLOTS (C macro), 739  
 aMTM\_STEM\_NUM\_SD\_SLOTS (C macro), 739  
 aMTM\_STEM\_NUM\_SERVOS (C macro), 739  
 aMTM\_STEM\_NUM\_SIGNALS (C macro), 739  
 aMTM\_STEM\_NUM\_STORES (C macro), 739  
 aMTM\_STEM\_NUM\_TIMERS (C macro), 739  
 aMTM\_USBSTEM\_BULK\_CAPTURE\_MAX\_HZ (C macro), 736  
 aMTM\_USBSTEM\_BULK\_CAPTURE\_MIN\_HZ (C macro), 736  
 aMTM\_USBSTEM\_MODULE\_BASE\_ADDRESS (C macro), 736  
 aMTM\_USBSTEM\_NUM\_A2D (C macro), 736  
 aMTM\_USBSTEM\_NUM\_APPS (C macro), 736

aMTM\_USBSTEM\_NUM\_CLOCK (*C macro*), 736  
aMTM\_USBSTEM\_NUM\_DIG (*C macro*), 736  
aMTM\_USBSTEM\_NUM\_I2C (*C macro*), 736  
aMTM\_USBSTEM\_NUM\_INPUT\_SIGNALS (*C macro*), 736  
aMTM\_USBSTEM\_NUM\_INTERNAL\_SLOTS (*C macro*), 737  
aMTM\_USBSTEM\_NUM\_OUTPUT\_SIGNALS (*C macro*), 736  
aMTM\_USBSTEM\_NUM\_POINTERS (*C macro*), 736  
aMTM\_USBSTEM\_NUM\_RAM\_SLOTS (*C macro*), 737  
aMTM\_USBSTEM\_NUM\_SD\_SLOTS (*C macro*), 737  
aMTM\_USBSTEM\_NUM\_SERVOS (*C macro*), 736  
aMTM\_USBSTEM\_NUM\_SIGNALS (*C macro*), 736  
aMTM\_USBSTEM\_NUM\_STORES (*C macro*), 737  
aMTM\_USBSTEM\_NUM\_TIMERS (*C macro*), 737  
aMTMDAQ2 (*C++ class*), 721  
aMTMDAQ2::analog (*C++ member*), 721  
aMTMDAQ2::app (*C++ member*), 721  
aMTMDAQ2::digital (*C++ member*), 721  
aMTMDAQ2::getDifferentialInputRanges (*C++ function*), 722  
aMTMDAQ2::getOutputRanges (*C++ function*), 722  
aMTMDAQ2::getSingleEndedInputRanges (*C++ function*), 722  
aMTMDAQ2::i2c (*C++ member*), 721  
aMTMDAQ2::pointer (*C++ member*), 722  
aMTMDAQ2::store (*C++ member*), 722  
aMTMDAQ2::system (*C++ member*), 722  
aMTMDAQ2::timer (*C++ member*), 722  
aMTMDAQ2\_BULK\_CAPTURE\_MAX\_HZ (*C macro*), 723  
aMTMDAQ2\_BULK\_CAPTURE\_MIN\_HZ (*C macro*), 723  
aMTMDAQ2\_MODULE\_BASE\_ADDRESS (*C macro*), 722  
aMTMDAQ2\_NUM\_ANALOG\_INPUTS (*C macro*), 722  
aMTMDAQ2\_NUM\_ANALOG\_OUTPUTS (*C macro*), 722  
aMTMDAQ2\_NUM\_ANALOGS (*C macro*), 722  
aMTMDAQ2\_NUM\_APPS (*C macro*), 722  
aMTMDAQ2\_NUM\_DIGITALS (*C macro*), 723  
aMTMDAQ2\_NUM\_I2C (*C macro*), 723  
aMTMDAQ2\_NUM\_INTERNAL\_SLOTS (*C macro*), 723  
aMTMDAQ2\_NUM\_POINTERS (*C macro*), 723  
aMTMDAQ2\_NUM\_RAM\_SLOTS (*C macro*), 723  
aMTMDAQ2\_NUM\_STORES (*C macro*), 723  
aMTMDAQ2\_NUM\_TIMERS (*C macro*), 723  
aMTMEtherStem (*C++ class*), 723  
aMTMIOSerial (*C++ class*), 725  
aMTMIOSerial::app (*C++ member*), 726  
aMTMIOSerial::digital (*C++ member*), 726  
aMTMIOSerial::hub (*C++ member*), 726  
aMTMIOSerial::HubClass (*C++ class*), 727  
aMTMIOSerial::i2c (*C++ member*), 726  
aMTMIOSerial::pointer (*C++ member*), 726  
aMTMIOSerial::PORT\_ID (*C++ enum*), 725  
aMTMIOSerial::PORT\_ID::kPORT\_ID\_0 (*C++ enumerator*), 725  
aMTMIOSerial::PORT\_ID::kPORT\_ID\_1 (*C++ enumerator*), 725  
aMTMIOSerial::PORT\_ID::kPORT\_ID\_2 (*C++ enumerator*), 725  
aMTMIOSerial::PORT\_ID::kPORT\_ID\_3 (*C++ enumerator*), 725  
aMTMIOSerial::PORT\_ID::kPORT\_ID\_UP0 (*C++ enumerator*), 726  
aMTMIOSerial::PORT\_ID\_t (*C++ type*), 726  
aMTMIOSerial::rail (*C++ member*), 726  
aMTMIOSerial::servo (*C++ member*), 726  
aMTMIOSerial::signal (*C++ member*), 726  
aMTMIOSerial::store (*C++ member*), 726  
aMTMIOSerial::system (*C++ member*), 726  
aMTMIOSerial::temperature (*C++ member*), 726  
aMTMIOSerial::timer (*C++ member*), 726  
aMTMIOSerial::uart (*C++ member*), 726  
aMTMIOSerial::usb (*C++ member*), 727  
aMTMIOSERIAL\_5VRAIL (*C macro*), 727  
aMTMIOSERIAL\_ADJRAIL1 (*C macro*), 727  
aMTMIOSERIAL\_ADJRAIL2 (*C macro*), 727  
aMTMIOSERIAL\_ERROR\_VBUS\_OVERCURRENT (*C macro*), 729  
aMTMIOSERIAL\_MAX\_MICROVOLTAGE (*C macro*), 727

aMTMIO SERIAL\_MIN\_MICROVOLTAGE (C macro), 727  
 aMTMIO SERIAL\_MODULE\_BASE\_ADDRESS (C macro), 727  
 aMTMIO SERIAL\_NUM\_APPS (C macro), 727  
 aMTMIO SERIAL\_NUM\_DIGITALS (C macro), 727  
 aMTMIO SERIAL\_NUM\_I2C (C macro), 727  
 aMTMIO SERIAL\_NUM\_INPUT\_SIGNALS (C macro), 728  
 aMTMIO SERIAL\_NUM\_INTERNAL\_SLOTS (C macro), 728  
 aMTMIO SERIAL\_NUM\_OUTPUT\_SIGNALS (C macro), 728  
 aMTMIO SERIAL\_NUM\_POINTERS (C macro), 727  
 aMTMIO SERIAL\_NUM\_PORTS (C macro), 728  
 aMTMIO SERIAL\_NUM\_RAILS (C macro), 727  
 aMTMIO SERIAL\_NUM\_RAM\_SLOTS (C macro), 728  
 aMTMIO SERIAL\_NUM\_SERVOS (C macro), 727  
 aMTMIO SERIAL\_NUM\_SIGNALS (C macro), 728  
 aMTMIO SERIAL\_NUM\_STORES (C macro), 728  
 aMTMIO SERIAL\_NUM\_TIMERS (C macro), 728  
 aMTMIO SERIAL\_NUM\_UART (C macro), 728  
 aMTMIO SERIAL\_NUM\_USB (C macro), 728  
 aMTMIO SERIAL\_NUM\_USB\_PORTS (C macro), 728  
 aMTMIO SERIAL\_USB2\_BOOST\_ENABLED (C macro), 729  
 aMTMIO SERIAL\_USB2\_DATA\_ENABLED (C macro), 729  
 aMTMIO SERIAL\_USB\_ERROR\_FLAG (C macro), 729  
 aMTMIO SERIAL\_USB\_NUM\_CHANNELS (C macro), 728  
 aMTMIO SERIAL\_USB\_VBUS\_ENABLED (C macro), 729  
 aMTMLoad1 (C++ class), 729  
 aMTMLoad1::app (C++ member), 730  
 aMTMLoad1::digital (C++ member), 730  
 aMTMLoad1::i2c (C++ member), 730  
 aMTMLoad1::pointer (C++ member), 730  
 aMTMLoad1::rail (C++ member), 730  
 aMTMLoad1::store (C++ member), 730  
 aMTMLoad1::system (C++ member), 730  
 aMTMLoad1::temperature (C++ member), 730  
 aMTMLoad1::timer (C++ member), 730  
 aMTMLoad1\_MAX\_CURRENT\_LIMIT\_MICROAMPS (C macro), 731  
 aMTMLoad1\_MAX\_MICROAMPS (C macro), 731  
 aMTMLoad1\_MAX\_MICROVOLTAGE (C macro), 731  
 aMTMLoad1\_MAX\_MILLIOHMS (C macro), 731  
 aMTMLoad1\_MAX\_MILLIWATTS (C macro), 731  
 aMTMLoad1\_MAX\_POWER\_LIMIT\_MILLIWATTS (C macro), 731  
 aMTMLoad1\_MAX\_VOLTAGE\_LIMIT\_MICROVOLTS (C macro), 731  
 aMTMLoad1\_MIN\_CURRENT\_LIMIT\_MICROAMPS (C macro), 731  
 aMTMLoad1\_MIN\_MICROAMPS (C macro), 731  
 aMTMLoad1\_MIN\_MICROVOLTAGE (C macro), 731  
 aMTMLoad1\_MIN\_MILLIOHMS (C macro), 731  
 aMTMLoad1\_MIN\_MILLIWATTS (C macro), 731  
 aMTMLoad1\_MIN\_POWER\_LIMIT\_MILLIWATTS (C macro), 731  
 aMTMLoad1\_MIN\_VOLTAGE\_LIMIT\_MICROVOLTS (C macro), 731  
 aMTMLoad1\_MODULE\_BASE\_ADDRESS (C macro), 730  
 aMTMLoad1\_NUM\_APPS (C macro), 730  
 aMTMLoad1\_NUM\_DIGITALS (C macro), 730  
 aMTMLoad1\_NUM\_I2C (C macro), 730  
 aMTMLoad1\_NUM\_INTERNAL\_SLOTS (C macro), 732  
 aMTMLoad1\_NUM\_POINTERS (C macro), 730  
 aMTMLoad1\_NUM\_RAILS (C macro), 730  
 aMTMLoad1\_NUM\_RAM\_SLOTS (C macro), 732  
 aMTMLoad1\_NUM\_STORES (C macro), 732  
 aMTMLoad1\_NUM\_TEMPERATURES (C macro), 732  
 aMTMLoad1\_NUM\_TIMERS (C macro), 732  
 aMTMLoad1\_RAIL0 (C macro), 731  
 aMTMPM1 (C++ class), 732  
 aMTMPM1::app (C++ member), 732  
 aMTMPM1::digital (C++ member), 732  
 aMTMPM1::i2c (C++ member), 732  
 aMTMPM1::pointer (C++ member), 732  
 aMTMPM1::rail (C++ member), 732  
 aMTMPM1::store (C++ member), 732  
 aMTMPM1::system (C++ member), 733

aMTMPM1::temperature (*C++ member*), 733  
aMTMPM1::timer (*C++ member*), 733  
aMTMPM1\_MAX\_CURRENT\_LIMIT\_MICROAMPS (*C macro*), 733  
aMTMPM1\_MAX\_MICROVOLTAGE (*C macro*), 733  
aMTMPM1\_MIN\_CURRENT\_LIMIT\_MICROAMPS (*C macro*), 734  
aMTMPM1\_MIN\_MICROVOLTAGE (*C macro*), 733  
aMTMPM1\_MODULE\_BASE\_ADDRESS (*C macro*), 733  
aMTMPM1\_NUM\_APPS (*C macro*), 733  
aMTMPM1\_NUM\_DIGITALS (*C macro*), 733  
aMTMPM1\_NUM\_I2C (*C macro*), 733  
aMTMPM1\_NUM\_INTERNAL\_SLOTS (*C macro*), 734  
aMTMPM1\_NUM\_POINTERS (*C macro*), 733  
aMTMPM1\_NUM\_RAILS (*C macro*), 733  
aMTMPM1\_NUM\_RAM\_SLOTS (*C macro*), 734  
aMTMPM1\_NUM\_STORES (*C macro*), 734  
aMTMPM1\_NUM\_TEMPERATURES (*C macro*), 734  
aMTMPM1\_NUM\_TIMERS (*C macro*), 734  
aMTMPM1\_RAILO (*C macro*), 733  
aMTMPM1\_RAIL1 (*C macro*), 733  
aMTMRelay (*C++ class*), 734  
aMTMRelay::app (*C++ member*), 734  
aMTMRelay::digital (*C++ member*), 734  
aMTMRelay::i2c (*C++ member*), 734  
aMTMRelay::pointer (*C++ member*), 734  
aMTMRelay::relay (*C++ member*), 734  
aMTMRelay::store (*C++ member*), 735  
aMTMRelay::system (*C++ member*), 735  
aMTMRelay::timer (*C++ member*), 735  
aMTMRELAY\_MODULE\_BASE\_ADDRESS (*C macro*), 735  
aMTMRELAY\_NUM\_APPS (*C macro*), 735  
aMTMRELAY\_NUM\_DIGITALS (*C macro*), 735  
aMTMRELAY\_NUM\_I2C (*C macro*), 735  
aMTMRELAY\_NUM\_INTERNAL\_SLOTS (*C macro*), 735  
aMTMRELAY\_NUM\_POINTERS (*C macro*), 735  
aMTMRELAY\_NUM\_RAM\_SLOTS (*C macro*), 735  
aMTMRELAY\_NUM\_RELAYS (*C macro*), 735  
aMTMRELAY\_NUM\_STORES (*C macro*), 735  
aMTMRELAY\_NUM\_TIMERS (*C macro*), 735  
aMTMStemModule (*C++ class*), 737  
aMTMStemModule::analog (*C++ member*), 737  
aMTMStemModule::app (*C++ member*), 737  
aMTMStemModule::clock (*C++ member*), 737  
aMTMStemModule::digital (*C++ member*), 737  
aMTMStemModule::i2c (*C++ member*), 737  
aMTMStemModule::pointer (*C++ member*), 737  
aMTMStemModule::servo (*C++ member*), 738  
aMTMStemModule::signal (*C++ member*), 738  
aMTMStemModule::store (*C++ member*), 738  
aMTMStemModule::system (*C++ member*), 738  
aMTMStemModule::timer (*C++ member*), 738  
aMTMUSBStem (*C++ class*), 736  
aMutex\_Create (*C++ function*), 873  
aMutex\_Destroy (*C++ function*), 873  
aMutex\_Identifier (*C++ function*), 873  
aMutex\_Lock (*C++ function*), 873  
aMutex\_TryLock (*C++ function*), 873  
aMutex\_Unlock (*C++ function*), 874  
aMutexRef (*C++ type*), 872  
Analog (*class in brainstem.entity*), 578  
analog\_getBulkCaptureNumberOfSamples (*C++ function*), 1267  
analog\_getBulkCaptureSampleRate (*C++ function*), 1266  
analog\_getBulkCaptureState (*C++ function*), 1267  
analog\_getConfiguration (*C++ function*), 1266  
analog\_getEnable (*C++ function*), 1264  
analog\_getRange (*C++ function*), 1263  
analog\_getValue (*C++ function*), 1263  
analog\_getVoltage (*C++ function*), 1263  
analog\_Hz\_Maximum (*C macro*), 878

analog\_Hz\_Minimum (*C macro*), 878  
 analog\_initiateBulkCapture (*C++ function*), 1267  
 analog\_setBulkCaptureNumberOfSamples (*C++ function*), 1266  
 analog\_setBulkCaptureSampleRate (*C++ function*), 1266  
 analog\_setConfiguration (*C++ function*), 1265  
 analog\_setEnable (*C++ function*), 1265  
 analog\_setRange (*C++ function*), 1265  
 analog\_setValue (*C++ function*), 1264  
 analog\_setVoltage (*C++ function*), 1264  
 analogBulkCapture (*C macro*), 878  
 analogBulkCaptureNumberOfSamples (*C macro*), 878  
 analogBulkCaptureSampleRate (*C macro*), 878  
 analogBulkCaptureState (*C macro*), 878  
 analogConfiguration (*C macro*), 878  
 analogConfigurationHiZ (*C macro*), 878  
 analogConfigurationInput (*C macro*), 878  
 analogConfigurationOutput (*C macro*), 878  
 analogEnable (*C macro*), 880  
 analogNumberOfOptions (*C macro*), 880  
 analogRange (*C macro*), 879  
 analogRange\_P0V064N0V064 (*C macro*), 879  
 analogRange\_P0V128N0V128 (*C macro*), 879  
 analogRange\_P0V256N0V256 (*C macro*), 879  
 analogRange\_P0V512N0V512 (*C macro*), 879  
 analogRange\_P0V64N0V64 (*C macro*), 879  
 analogRange\_P10V24N0V0 (*C macro*), 879  
 analogRange\_P10V24N10V24 (*C macro*), 879  
 analogRange\_P1V024N1V024 (*C macro*), 879  
 analogRange\_P1V28N0V0 (*C macro*), 879  
 analogRange\_P1V28N1V28 (*C macro*), 879  
 analogRange\_P2V048N0V0 (*C macro*), 880  
 analogRange\_P2V56N0V0 (*C macro*), 879  
 analogRange\_P2V56N2V56 (*C macro*), 879  
 analogRange\_P4V096N0V0 (*C macro*), 880  
 analogRange\_P5V12N0V0 (*C macro*), 879  
 analogRange\_P5V12N5V12 (*C macro*), 879  
 analogValue (*C macro*), 878  
 analogVoltage (*C macro*), 878  
 aPacket (*C++ struct*), 874  
 aPacket\_AddByte (*C++ function*), 875  
 aPacket\_Create (*C++ function*), 875  
 aPacket\_CreateWithData (*C++ function*), 875  
 aPacket\_Destroy (*C++ function*), 876  
 aPacket\_IsComplete (*C++ function*), 875  
 aPacket\_Reset (*C++ function*), 875  
 App (*class in brainstem.entity*), 582  
 app\_execute (*C++ function*), 1268  
 app\_executeAndReturn (*C++ function*), 1268  
 appExecute (*C macro*), 880  
 appReturn (*C macro*), 880  
 aSerial\_Bits (*C++ enum*), 946  
 aSerial\_Bits::aBITS\_7 (*C++ enumerator*), 946  
 aSerial\_Bits::aBITS\_8 (*C++ enumerator*), 946  
 aSerial\_Stop\_bits (*C++ enum*), 946  
 aSerial\_Stop\_bits::aSTOP\_BITS\_1 (*C++ enumerator*), 946  
 aSerial\_Stop\_bits::aSTOP\_BITS\_2 (*C++ enumerator*), 946  
 aSHOWERR (*C macro*), 858  
 aSNPRINTF (*C macro*), 858  
 assignedPort (*brainstem.link.aEtherConfig attribute*), 568  
 aStream\_Create (*C++ function*), 946  
 aStream\_CreateFileInput (*C++ function*), 946  
 aStream\_CreateFileOutput (*C++ function*), 947  
 aStream\_CreateLogStream (*C++ function*), 950  
 aStream\_CreateMemory (*C++ function*), 948  
 aStream\_CreatePipe (*C++ function*), 949  
 aStream\_CreateSerial (*C++ function*), 947  
 aStream\_CreateSocket (*C++ function*), 947  
 aStream\_CreateUSB (*C++ function*), 948

aStream\_Destroy (C++ function), 954  
aStream\_Flush (C++ function), 954  
aStream\_Read (C++ function), 950  
aStream\_ReadCString (C++ function), 952  
aStream\_ReadCStringRecord (C++ function), 953  
aStream\_ReadRecord (C++ function), 951  
aStream\_Write (C++ function), 951  
aStream\_WriteCString (C++ function), 952  
aStream\_WriteCStringRecord (C++ function), 953  
aStream\_WriteRecord (C++ function), 952  
aStreamBuffer\_Create (C++ function), 949  
aStreamBuffer\_Flush (C++ function), 950  
aStreamBuffer\_Get (C++ function), 949  
aStreamDeleteProc (C++ type), 944  
aStreamGetProc (C++ type), 944  
aStreamPutProc (C++ type), 944  
aStreamRef (C++ type), 943  
aStreamWriteProc (C++ type), 945  
aStringCatSafe (C macro), 858  
aStringCopySafe (C macro), 858  
aSystemBootSlotNone (C macro), 926  
aTime\_GetMSTicks (C++ function), 954  
aTime\_MSSleep (C++ function), 954  
aUEI\_RetrieveInt (C++ function), 956  
aUEI\_RetrieveShort (C++ function), 956  
aUEI\_StoreInt (C++ function), 956  
aUEI\_StoreShort (C++ function), 956  
aUSB\_UPSTREAM\_CONFIG\_AUTO (C macro), 728  
aUSB\_UPSTREAM\_CONFIG\_EDGE (C macro), 728  
aUSB\_UPSTREAM\_CONFIG\_ONBOARD (C macro), 728  
aUSB\_UPSTREAM\_EDGE (C macro), 729  
aUSB\_UPSTREAM\_ONBOARD (C macro), 729  
aUSBCSwitch (C++ class), 716  
aUSBCSwitch::daughtercard\_type (C++ enum), 718  
aUSBCSwitch::daughtercard\_type::NO\_DAUGHTERCARD (C++ enumerator), 718  
aUSBCSwitch::daughtercard\_type::PASSIVE\_DAUGHTERCARD (C++ enumerator), 718  
aUSBCSwitch::daughtercard\_type::REDRIVER\_DAUGHTERCARD (C++ enumerator), 718  
aUSBCSwitch::daughtercard\_type::UNKNOWN\_DAUGHTERCARD (C++ enumerator), 718  
aUSBCSwitch::equalizer (C++ member), 719  
aUSBCSwitch::EQUALIZER\_2P0\_RECEIVER\_CONFIGS (C++ enum), 718  
aUSBCSwitch::EQUALIZER\_2P0\_RECEIVER\_CONFIGS::LEVEL\_1\_2P0 (C++ enumerator), 718  
aUSBCSwitch::EQUALIZER\_2P0\_RECEIVER\_CONFIGS::LEVEL\_2\_2P0 (C++ enumerator), 718  
aUSBCSwitch::EQUALIZER\_2P0\_TRANSMITTER\_CONFIGS (C++ enum), 718  
aUSBCSwitch::EQUALIZER\_2P0\_TRANSMITTER\_CONFIGS::TRANSMITTER\_2P0\_0mV (C++ enumerator), 718  
aUSBCSwitch::EQUALIZER\_2P0\_TRANSMITTER\_CONFIGS::TRANSMITTER\_2P0\_40mV (C++ enumerator), 718  
aUSBCSwitch::EQUALIZER\_2P0\_TRANSMITTER\_CONFIGS::TRANSMITTER\_2P0\_60mV (C++ enumerator), 718  
aUSBCSwitch::EQUALIZER\_2P0\_TRANSMITTER\_CONFIGS::TRANSMITTER\_2P0\_80mV (C++ enumerator), 718  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS (C++ enum), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_10\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_11\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_12\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_13\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_14\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_15\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_16\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_1\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_2\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_3\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_4\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_5\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_6\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_7\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_8\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_RECEIVER\_CONFIGS::LEVEL\_9\_3P0 (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS (C++ enum), 716  
aUSBCSwitch::EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS::MUX\_0db\_COM\_0db\_1100mV (C++ enumerator), 716  
aUSBCSwitch::EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS::MUX\_0db\_COM\_0db\_1300mV (C++ enumerator), 717  
aUSBCSwitch::EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS::MUX\_0db\_COM\_0db\_900mV (C++ enumerator), 716



aUSBCSwitch::EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS::MUX\_0db\_COM\_1db\_1100mV (*C++ enumerator*), 717  
 aUSBCSwitch::EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS::MUX\_0db\_COM\_1db\_900mV (*C++ enumerator*), 716  
 aUSBCSwitch::EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS::MUX\_1db\_COM\_0db\_1100mV (*C++ enumerator*), 716  
 aUSBCSwitch::EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS::MUX\_1db\_COM\_0db\_900mV (*C++ enumerator*), 716  
 aUSBCSwitch::EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS::MUX\_1db\_COM\_1db\_900mV (*C++ enumerator*), 716  
 aUSBCSwitch::EQUALIZER\_3P0\_TRANSMITTER\_CONFIGS::MUX\_2db\_COM\_2db\_1100mV (*C++ enumerator*), 717  
 aUSBCSwitch::EQUALIZER\_CHANNELS (*C++ enum*), 718  
 aUSBCSwitch::EQUALIZER\_CHANNELS::BOTH (*C++ enumerator*), 718  
 aUSBCSwitch::EQUALIZER\_CHANNELS::COMMON (*C++ enumerator*), 718  
 aUSBCSwitch::EQUALIZER\_CHANNELS::MUX (*C++ enumerator*), 718  
 aUSBCSwitch::mux (*C++ member*), 719  
 aUSBCSwitch::store (*C++ member*), 719  
 aUSBCSwitch::system (*C++ member*), 719  
 aUSBCSwitch::usb (*C++ member*), 719  
 aUSBCSWITCH\_MODULE (*C macro*), 719  
 aUSBCSWITCH\_NUM\_EQ (*C macro*), 719  
 aUSBCSWITCH\_NUM\_INTERNAL\_SLOTS (*C macro*), 719  
 aUSBCSWITCH\_NUM\_MUX (*C macro*), 719  
 aUSBCSWITCH\_NUM\_MUX\_CHANNELS (*C macro*), 719  
 aUSBCSWITCH\_NUM\_RAM\_SLOTS (*C macro*), 719  
 aUSBCSWITCH\_NUM\_STORES (*C macro*), 719  
 aUSBCSWITCH\_NUM\_USB (*C macro*), 719  
 aUSBCSwitchPro (*C++ class*), 713  
 aUSBCSwitchPro::digital (*C++ member*), 714  
 aUSBCSwitchPro::i2c (*C++ member*), 714  
 aUSBCSwitchPro::mux (*C++ member*), 714  
 aUSBCSwitchPro::pd (*C++ member*), 714  
 aUSBCSwitchPro::PORT\_ID (*C++ enum*), 713  
 aUSBCSwitchPro::PORT\_ID::kPORT\_ID\_0 (*C++ enumerator*), 713  
 aUSBCSwitchPro::PORT\_ID::kPORT\_ID\_1 (*C++ enumerator*), 713  
 aUSBCSwitchPro::PORT\_ID::kPORT\_ID\_2 (*C++ enumerator*), 713  
 aUSBCSwitchPro::PORT\_ID::kPORT\_ID\_3 (*C++ enumerator*), 713  
 aUSBCSwitchPro::PORT\_ID::kPORT\_ID\_COMMON (*C++ enumerator*), 713  
 aUSBCSwitchPro::PORT\_ID::kPORT\_ID\_CONTROL (*C++ enumerator*), 713  
 aUSBCSwitchPro::PORT\_ID\_t (*C++ type*), 713  
 aUSBCSwitchPro::rail (*C++ member*), 714  
 aUSBCSwitchPro::store (*C++ member*), 714  
 aUSBCSwitchPro::system (*C++ member*), 714  
 aUSBCSwitchPro::temperature (*C++ member*), 714  
 aUSBCSwitchPro::uart (*C++ member*), 714  
 aUSBCSwitchPro::usb (*C++ member*), 714  
 aUSBCSWITCHPRO\_MODULE (*C macro*), 714  
 aUSBCSWITCHPRO\_NUM\_DIGITALS (*C macro*), 716  
 aUSBCSWITCHPRO\_NUM\_EEPROM\_SLOTS (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_I2C (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_INTERNAL\_SLOTS (*C macro*), 714  
 aUSBCSWITCHPRO\_NUM\_MUX (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_MUX\_CHANNELS (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_PD\_PORTS (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_PD\_RULES\_PER\_PORT (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_PORTS (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_RAILS (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_RAM\_SLOTS (*C macro*), 714  
 aUSBCSWITCHPRO\_NUM\_STORES (*C macro*), 714  
 aUSBCSWITCHPRO\_NUM\_TEMPERATURES (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_UART (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_USB (*C macro*), 715  
 aUSBCSWITCHPRO\_NUM\_USB\_PORTS (*C macro*), 715  
 aUSBCSWITCHPRO\_STORE\_EEPROM\_INDEX (*C macro*), 715  
 aUSBCSWITCHPRO\_STORE\_INTERNAL\_INDEX (*C macro*), 715  
 aUSBCSWITCHPRO\_STORE\_RAM\_INDEX (*C macro*), 715  
 aUSBHub2x4 (*C++ class*), 710  
 aUSBHub2x4::app (*C++ member*), 711  
 aUSBHub2x4::hub (*C++ member*), 711  
 aUSBHub2x4::HubClass (*C++ class*), 711  
 aUSBHub2x4::pointer (*C++ member*), 711  
 aUSBHub2x4::PORT\_ID (*C++ enum*), 710  
 aUSBHub2x4::PORT\_ID::kPORT\_ID\_0 (*C++ enumerator*), 710

aUSBHub2x4::PORT\_ID::kPORT\_ID\_1 (*C++ enumerator*), 710  
aUSBHub2x4::PORT\_ID::kPORT\_ID\_2 (*C++ enumerator*), 710  
aUSBHub2x4::PORT\_ID::kPORT\_ID\_3 (*C++ enumerator*), 710  
aUSBHub2x4::PORT\_ID::kPORT\_ID\_UP0 (*C++ enumerator*), 710  
aUSBHub2x4::PORT\_ID::kPORT\_ID\_UP1 (*C++ enumerator*), 710  
aUSBHub2x4::PORT\_ID\_t (*C++ type*), 710  
aUSBHub2x4::store (*C++ member*), 711  
aUSBHub2x4::system (*C++ member*), 711  
aUSBHub2x4::temperature (*C++ member*), 711  
aUSBHub2x4::timer (*C++ member*), 711  
aUSBHub2x4::usb (*C++ member*), 711  
aUSBHUB2X4\_CONSTANT\_CURRENT (*C macro*), 712  
aUSBHUB2X4\_DEVICE\_ATTACHED (*C macro*), 712  
aUSBHub2X4\_ERROR\_DISCHARGE (*C macro*), 713  
aUSBHUB2X4\_ERROR\_OVER\_TEMPERATURE (*C macro*), 713  
aUSBHUB2X4\_ERROR\_VBUS\_OVERCURRENT (*C macro*), 713  
aUSBHUB2X4\_MODULE (*C macro*), 711  
aUSBHUB2X4\_NUM\_APPS (*C macro*), 711  
aUSBHUB2X4\_NUM\_INTERNAL\_SLOTS (*C macro*), 711  
aUSBHUB2X4\_NUM\_POINTERS (*C macro*), 711  
aUSBHUB2x4\_NUM\_PORTS (*C macro*), 712  
aUSBHUB2X4\_NUM\_RAM\_SLOTS (*C macro*), 711  
aUSBHUB2X4\_NUM\_STORES (*C macro*), 711  
aUSBHUB2X4\_NUM\_TIMERS (*C macro*), 712  
aUSBHUB2X4\_NUM\_USB (*C macro*), 712  
aUSBHUB2x4\_NUM\_USB\_PORTS (*C macro*), 712  
aUSBHUB2X4\_USB2\_BOOST\_ENABLED (*C macro*), 712  
aUSBHUB2X4\_USB2\_DATA\_ENABLED (*C macro*), 712  
aUSBHUB2X4\_USB\_ERROR\_FLAG (*C macro*), 712  
aUSBHUB2X4\_USB\_VBUS\_ENABLED (*C macro*), 712  
aUSBHub3c (*C++ class*), 704  
aUSBHub3c::hub (*C++ member*), 705  
aUSBHub3c::HubClass (*C++ class*), 705  
aUSBHub3c::i2c (*C++ member*), 705  
aUSBHub3c::pd (*C++ member*), 705  
aUSBHub3c::PORT\_ID (*C++ enum*), 704  
aUSBHub3c::PORT\_ID::kPORT\_ID\_0 (*C++ enumerator*), 704  
aUSBHub3c::PORT\_ID::kPORT\_ID\_1 (*C++ enumerator*), 704  
aUSBHub3c::PORT\_ID::kPORT\_ID\_2 (*C++ enumerator*), 704  
aUSBHub3c::PORT\_ID::kPORT\_ID\_3 (*C++ enumerator*), 704  
aUSBHub3c::PORT\_ID::kPORT\_ID\_4 (*C++ enumerator*), 704  
aUSBHub3c::PORT\_ID::kPORT\_ID\_5 (*C++ enumerator*), 704  
aUSBHub3c::PORT\_ID::kPORT\_ID\_CONTROL (*C++ enumerator*), 704  
aUSBHub3c::PORT\_ID::kPORT\_ID\_POWER\_C (*C++ enumerator*), 704  
aUSBHub3c::PORT\_ID\_t (*C++ type*), 704  
aUSBHub3c::rail (*C++ member*), 705  
aUSBHub3c::store (*C++ member*), 705  
aUSBHub3c::system (*C++ member*), 705  
aUSBHub3c::temperature (*C++ member*), 705  
aUSBHub3c::uart (*C++ member*), 705  
aUSBHub3c::usb (*C++ member*), 705  
aUSBHUB3C\_MODULE (*C macro*), 705  
aUSBHUB3C\_NUM\_I2C (*C macro*), 706  
aUSBHUB3C\_NUM\_INTERNAL\_SLOTS (*C macro*), 705  
aUSBHUB3C\_NUM\_PD\_PORTS (*C macro*), 706  
aUSBHUB3C\_NUM\_PD\_RULES\_PER\_PORT (*C macro*), 706  
aUSBHUB3C\_NUM\_PORTS (*C macro*), 706  
aUSBHUB3C\_NUM\_RAILS (*C macro*), 706  
aUSBHUB3C\_NUM\_RAM\_SLOTS (*C macro*), 705  
aUSBHUB3C\_NUM\_STORES (*C macro*), 705  
aUSBHUB3C\_NUM\_TEMPERATURES (*C macro*), 706  
aUSBHUB3C\_NUM\_UART (*C macro*), 706  
aUSBHUB3C\_NUM\_USB (*C macro*), 706  
aUSBHUB3C\_NUM\_USB\_PORTS (*C macro*), 706  
aUSBHUB3C\_STORE\_EEPROM\_INDEX (*C macro*), 706  
aUSBHUB3C\_STORE\_INTERNAL\_INDEX (*C macro*), 705  
aUSBHUB3C\_STORE\_RAM\_INDEX (*C macro*), 706  
aUSBHub3p (*C++ class*), 706



aUSBHub3p::app (C++ member), 707  
 aUSBHub3p::hub (C++ member), 707  
 aUSBHub3p::HubClass (C++ class), 708  
 aUSBHub3p::pointer (C++ member), 707  
 aUSBHub3p::PORT\_ID (C++ enum), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_0 (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_1 (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_2 (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_3 (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_4 (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_5 (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_6 (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_7 (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_CONTROL (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_DWNA (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_UP0 (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID::kPORT\_ID\_UP1 (C++ enumerator), 707  
 aUSBHub3p::PORT\_ID\_t (C++ type), 707  
 aUSBHub3p::store (C++ member), 707  
 aUSBHub3p::system (C++ member), 708  
 aUSBHub3p::temperature (C++ member), 708  
 aUSBHub3p::timer (C++ member), 708  
 aUSBHub3p::usb (C++ member), 708  
 aUSBHUB3P\_DEVICE\_ATTACHED (C macro), 709  
 aUSBHUB3P\_ERROR\_DISCHARGE\_ERR (C macro), 710  
 aUSBHUB3P\_ERROR\_HUB\_POWER (C macro), 709  
 aUSBHUB3P\_ERROR\_OVER\_TEMPERATURE (C macro), 710  
 aUSBHUB3P\_ERROR\_SHORT\_CIRCUIT (C macro), 710  
 aUSBHUB3P\_ERROR\_VBUS\_BACKDRIVE (C macro), 709  
 aUSBHUB3P\_ERROR\_VBUS\_OVERCURRENT (C macro), 709  
 aUSBHUB3P\_MODULE (C macro), 708  
 aUSBHUB3P\_NUM\_APPS (C macro), 708  
 aUSBHUB3P\_NUM\_INTERNAL\_SLOTS (C macro), 708  
 aUSBHUB3P\_NUM\_POINTERS (C macro), 708  
 aUSBHUB3P\_NUM\_PORTS (C macro), 709  
 aUSBHUB3P\_NUM\_RAM\_SLOTS (C macro), 708  
 aUSBHUB3P\_NUM\_STORES (C macro), 708  
 aUSBHUB3P\_NUM\_TIMERS (C macro), 708  
 aUSBHUB3P\_NUM\_USB (C macro), 708  
 aUSBHUB3P\_NUM\_USB\_PORTS (C macro), 708  
 aUSBHUB3P\_USB2\_BOOST\_ENABLED (C macro), 709  
 aUSBHUB3P\_USB2\_DATA\_ENABLED (C macro), 709  
 aUSBHUB3P\_USB3\_DATA\_ENABLED (C macro), 709  
 aUSBHUB3P\_USB\_ERROR\_FLAG (C macro), 709  
 aUSBHUB3P\_USB\_SPEED\_USB2 (C macro), 709  
 aUSBHUB3P\_USB\_SPEED\_USB3 (C macro), 709  
 aUSBHUB3P\_USB\_VBUS\_ENABLED (C macro), 709  
 aVALIDPACKET (C++ function), 874  
 aVersion\_DestroyFeatureList (C++ function), 959  
 aVersion\_GetFeatureList (C++ function), 959  
 aVersion\_GetMajor (C++ function), 958  
 aVersion\_GetMinor (C++ function), 958  
 aVersion\_GetPatch (C++ function), 958  
 aVersion\_GetString (C++ function), 958  
 aVersion\_IsAtLeast (C++ function), 958  
 aVersion\_IsLegacyFormat (C++ function), 958  
 aVERSION\_MAJOR (C macro), 957  
 aVERSION\_MINOR (C macro), 957  
 aVersion\_ParseMajor (C++ function), 957  
 aVersion\_ParseMinor (C++ function), 957  
 aVersion\_ParsePatch (C++ function), 958  
 aVersion\_ParseString (C++ function), 958  
 aVERSION\_PATCH (C macro), 957

## B

bAutoNetworking (brainstem.module.Module property), 568  
 bContinueSearch (C++ type), 861

bitI2CAck (*C macro*), 891  
bitI2CErrror (*C macro*), 891  
bitSlotError (*C macro*), 924  
brainstem.defs  
    module, 560  
brainstem.discover  
    module, 560  
brainstem.link  
    module, 566  
brainstem.module  
    module, 568  
brainstem.pd\_channel\_logger  
    module, 572  
brainstem.result  
    module, 574  
brainstem.version  
    module, 575  
BS\_PD\_Packet (*C++ struct*), 961  
BS\_PD\_Packet (*class in brainstem.pd\_channel\_logger*), 572  
BS\_PD\_Packet::ccChannel (*C++ member*), 962  
BS\_PD\_Packet::channel (*C++ member*), 962  
BS\_PD\_Packet::crc (*C++ member*), 962  
BS\_PD\_Packet::direction (*C++ member*), 962  
BS\_PD\_Packet::event (*C++ member*), 962  
BS\_PD\_Packet::payload (*C++ member*), 962  
BS\_PD\_Packet::seconds (*C++ member*), 962  
BS\_PD\_Packet::sop (*C++ member*), 962  
BS\_PD\_Packet::uSeconds (*C++ member*), 962  
BS\_PD\_Packet\_CCA (*C++ struct*), 1413  
BS\_PD\_Packet\_CCA::ccChannel (*C++ member*), 1414  
BS\_PD\_Packet\_CCA::channel (*C++ member*), 1413  
BS\_PD\_Packet\_CCA::crc (*C++ member*), 1414  
BS\_PD\_Packet\_CCA::direction (*C++ member*), 1413  
BS\_PD\_Packet\_CCA::event (*C++ member*), 1413  
BS\_PD\_Packet\_CCA::payload (*C++ member*), 1413  
BS\_PD\_Packet\_CCA::payloadSize (*C++ member*), 1413  
BS\_PD\_Packet\_CCA::seconds (*C++ member*), 1413  
BS\_PD\_Packet\_CCA::sop (*C++ member*), 1413  
BS\_PD\_Packet\_CCA::uSeconds (*C++ member*), 1413  
BS\_PD\_Packet\_Direction (*C++ enum*), 961  
BS\_PD\_Packet\_Direction::kBS\_PD\_Packet\_Direction\_Invalid (*C++ enumerator*), 961  
BS\_PD\_Packet\_Direction::kBS\_PD\_Packet\_Direction\_LAST (*C++ enumerator*), 961  
BS\_PD\_Packet\_Direction::kBS\_PD\_Packet\_Direction\_Receive (*C++ enumerator*), 961  
BS\_PD\_Packet\_Direction::kBS\_PD\_Packet\_Direction\_Sniff (*C++ enumerator*), 961  
BS\_PD\_Packet\_Direction::kBS\_PD\_Packet\_Direction\_Transmit (*C++ enumerator*), 961  
BS\_PD\_Packet\_Direction::kBS\_PD\_Packet\_Direction\_UNKNOWN (*C++ enumerator*), 961  
BS\_PD\_Packet\_SOP (*C++ enum*), 961  
BS\_PD\_Packet\_SOP::kBS\_PD\_Packet\_SOP (*C++ enumerator*), 961  
BS\_PD\_Packet\_SOP::kBS\_PD\_Packet\_SOP\_LAST (*C++ enumerator*), 961  
BS\_PD\_Packet\_SOP::kBS\_PD\_Packet\_SOP\_P (*C++ enumerator*), 961  
BS\_PD\_Packet\_SOP::kBS\_PD\_Packet\_SOP\_P\_DEBUG (*C++ enumerator*), 961  
BS\_PD\_Packet\_SOP::kBS\_PD\_Packet\_SOP\_P\_P (*C++ enumerator*), 961  
BS\_PD\_Packet\_SOP::kBS\_PD\_Packet\_SOP\_P\_P\_DEBUG (*C++ enumerator*), 961  
BS\_PD\_Packet\_SOP::kBS\_PD\_Packet\_SOP\_UNKNOWN (*C++ enumerator*), 961  
buffer\_length (*brainstem.pd\_channel\_logger.PDChannelLogger* property), 573  
bulkCaptureError (*C macro*), 878  
bulkCaptureFinished (*C macro*), 878  
bulkCaptureIdle (*C macro*), 878  
bulkCapturePending (*C macro*), 878

## C

call\_UEI() (*brainstem.Entity\_Entity.Entity* method), 562  
capacityBuild (*C macro*), 881  
capacityClassQuantity (*C macro*), 881  
capacityEntityGroup (*C macro*), 881  
capacitySubClassQuantity (*C macro*), 881  
capacitySubClassSize (*C macro*), 881

capacityUEI (*C macro*), 881  
 cca\_spec\_to\_python\_spec() (*brainstem.link.Spec static method*), 567  
 classQuantity() (*brainstem.module.Module method*), 569  
 clearFaults() (*brainstem.entity.Rail method*), 648  
 clearPortErrorStatus() (*brainstem.entity.USB method*), 682  
 Clock (*class in brainstem.entity*), 583  
 clock\_getDay (*C++ function*), 1270  
 clock\_getHour (*C++ function*), 1271  
 clock\_getMinute (*C++ function*), 1271  
 clock\_getMonth (*C++ function*), 1269  
 clock\_getSecond (*C++ function*), 1272  
 clock\_getYear (*C++ function*), 1269  
 clock\_setDay (*C++ function*), 1270  
 clock\_setHour (*C++ function*), 1271  
 clock\_setMinute (*C++ function*), 1271  
 clock\_setMonth (*C++ function*), 1270  
 clock\_setSecond (*C++ function*), 1272  
 clock\_setYear (*C++ function*), 1269  
 clockDay (*C macro*), 882  
 clockHour (*C macro*), 882  
 clockMinute (*C macro*), 882  
 clockMonth (*C macro*), 882  
 clockNumberOfOptions (*C macro*), 882  
 clockSecond (*C macro*), 882  
 clockYear (*C macro*), 882  
 cmdANALOG (*C macro*), 877  
 cmdAPP (*C macro*), 880  
 cmdCAPACITY (*C macro*), 881  
 cmdCLOCK (*C macro*), 882  
 cmdDEBUG (*C macro*), 887  
 cmdDIGITAL (*C macro*), 882  
 cmdEQUALIZER (*C macro*), 884  
 cmdETHERNET (*C macro*), 885  
 cmdHB (*C macro*), 889  
 cmdHDBASET (*C macro*), 887  
 cmdI2C (*C macro*), 890  
 cmdLAST (*C macro*), 887  
 cmdMUX (*C macro*), 891  
 cmdNOTIFY (*C macro*), 887  
 cmdPOE (*C macro*), 892  
 cmdPOINTER (*C macro*), 896  
 cmdPORT (*C macro*), 897  
 cmdPOWERDELIVERY (*C macro*), 907  
 cmdRAIL (*C macro*), 916  
 cmdRELAY (*C macro*), 921  
 cmdSERVO (*C macro*), 921  
 cmdSIGNAL (*C macro*), 922  
 cmdSLOT (*C macro*), 923  
 cmdSTORE (*C macro*), 924  
 cmdSTREAM (*C macro*), 925  
 cmdSYSTEM (*C macro*), 926  
 cmdTEMPERATURE (*C macro*), 930  
 cmdTIMER (*C macro*), 930  
 cmdUART (*C macro*), 931  
 cmdUSB (*C macro*), 934  
 cmdUSBSYSTEM (*C macro*), 940  
 cmdUSERCONFIG (*C macro*), 943  
 command (*brainstem.Entity\_Entity.Entity property*), 562  
 connect() (*brainstem.module.Module method*), 569  
 connect() (*brainstem.stem.EtherStem method*), 556  
 connect() (*brainstem.stem.MTMDAQ1 method*), 555  
 connect() (*brainstem.stem.MTMDAQ2 method*), 547  
 connect() (*brainstem.stem.MTMEtherStem method*), 548  
 connect() (*brainstem.stem.MTMIOSerial method*), 550  
 connect() (*brainstem.stem.MTMLoad1 method*), 551  
 connect() (*brainstem.stem.MTMPM1 method*), 552  
 connect() (*brainstem.stem.MTMRelay method*), 553  
 connect() (*brainstem.stem.MTMUSBStem method*), 554

connect () (*brainstem.stem.USBCSwitch method*), 546  
connect () (*brainstem.stem.USBCSwitchPro method*), 543  
connect () (*brainstem.stem.USBHub2x4 method*), 542  
connect () (*brainstem.stem.USBHub3c method*), 539  
connect () (*brainstem.stem.USBHub3p method*), 541  
connect () (*brainstem.stem.USBStem method*), 558  
connectFromSpec () (*brainstem.module.Module method*), 569  
connectThroughLinkModule () (*brainstem.module.Module method*), 569

## D

dataType (*C++ enum*), 955  
dataType::aUEI\_BYTE (*C++ enumerator*), 955  
dataType::aUEI\_BYTES (*C++ enumerator*), 955  
dataType::aUEI\_INT (*C++ enumerator*), 955  
dataType::aUEI\_SHORT (*C++ enumerator*), 955  
dataType::aUEI\_VOID (*C++ enumerator*), 955  
DefaultOperationalRailMode\_Value (*C macro*), 918  
DefaultTimerMode (*C macro*), 931  
DeviceNode (*C++ struct*), 960  
DeviceNode (*class in brainstem.discover*), 560  
DeviceNode::hubPort (*C++ member*), 960  
DeviceNode::hubSerialNumber (*C++ member*), 960  
DeviceNode::idProduct (*C++ member*), 960  
DeviceNode::idVendor (*C++ member*), 960  
DeviceNode::manufacturer (*C++ member*), 960  
DeviceNode::productName (*C++ member*), 960  
DeviceNode::serialNumber (*C++ member*), 960  
DeviceNode::speed (*C++ member*), 960  
DeviceNode\_CCA (*C++ struct*), 1416  
DeviceNode\_CCA::hubPort (*C++ member*), 1416  
DeviceNode\_CCA::hubSerialNumber (*C++ member*), 1416  
DeviceNode\_CCA::idProduct (*C++ member*), 1416  
DeviceNode\_CCA::idVendor (*C++ member*), 1416  
DeviceNode\_CCA::manufacturer (*C++ member*), 1416  
DeviceNode\_CCA::productName (*C++ member*), 1416  
DeviceNode\_CCA::serialNumber (*C++ member*), 1416  
DeviceNode\_CCA::speed (*C++ member*), 1416  
Digital (*class in brainstem.entity*), 586  
digital\_getConfiguration (*C++ function*), 1273  
digital\_getLinkChannel (*C++ function*), 1275  
digital\_getState (*C++ function*), 1273  
digital\_getStateAll (*C++ function*), 1274  
digital\_getValue (*C++ function*), 1275  
digital\_setConfiguration (*C++ function*), 1272  
digital\_setLinkChannel (*C++ function*), 1275  
digital\_setState (*C++ function*), 1273  
digital\_setStateAll (*C++ function*), 1274  
digital\_setValue (*C++ function*), 1274  
digitalConfiguration (*C macro*), 883  
digitalConfigurationHiZ (*C macro*), 883  
digitalConfigurationInput (*C macro*), 883  
digitalConfigurationInputNoPull (*C macro*), 883  
digitalConfigurationInputPullDown (*C macro*), 883  
digitalConfigurationInputPullUp (*C macro*), 883  
digitalConfigurationLinkInput (*C macro*), 883  
digitalConfigurationLinkOutput (*C macro*), 883  
digitalConfigurationOutput (*C macro*), 883  
digitalConfigurationRCServoInput (*C macro*), 883  
digitalConfigurationRCServoOutput (*C macro*), 883  
digitalConfigurationSignalCounterInput (*C macro*), 883  
digitalConfigurationSignalInput (*C macro*), 883  
digitalConfigurationSignalOutput (*C macro*), 883  
digitalLinkChannel (*C macro*), 884  
digitalNumberOfOptions (*C macro*), 884  
digitalState (*C macro*), 883  
digitalStateAll (*C macro*), 883  
digitalTimeDelay (*C macro*), 884

digitalValue (*C macro*), 884  
 disconnect () (*brainstem.module.Module method*), 569  
 discoverAndConnect () (*brainstem.module.Module method*), 569  
 drain\_UEI () (*brainstem.Entity\_Entity.Entity method*), 562

## E

enabled (*brainstem.link.aEtherConfig attribute*), 568  
 Entity (*class in brainstem.Entity\_Entity*), 562  
 entityGroup () (*brainstem.module.Module method*), 570  
 Equalizer (*class in brainstem.entity*), 589  
 equalizer2p0 (*C macro*), 885  
 equalizer3p0 (*C macro*), 885  
 equalizer\_getReceiverConfig (*C++ function*), 1276  
 equalizer\_getTransmitterConfig (*C++ function*), 1277  
 equalizer\_setReceiverConfig (*C++ function*), 1276  
 equalizer\_setTransmitterConfig (*C++ function*), 1276  
 equalizerManualConfig (*C macro*), 884  
 equalizerNumberOfOptions (*C macro*), 884  
 equalizerReceiverConfig (*C macro*), 884  
 equalizerTransmitterConfig (*C macro*), 884  
 error (*brainstem.result.Result property*), 574  
 Ethernet (*class in brainstem.entity*), 590  
 ethernet\_getEnabled (*C++ function*), 1277  
 ethernet\_getHostname (*C++ function*), 1283  
 ethernet\_getInterfacePort (*C++ function*), 1284  
 ethernet\_getIPv4Address (*C++ function*), 1280  
 ethernet\_getIPv4DNSAddress (*C++ function*), 1282  
 ethernet\_getIPv4Gateway (*C++ function*), 1281  
 ethernet\_getIPv4Netmask (*C++ function*), 1281  
 ethernet\_getMACAddress (*C++ function*), 1283  
 ethernet\_getNetworkConfiguration (*C++ function*), 1278  
 ethernet\_getStaticIPv4Address (*C++ function*), 1278  
 ethernet\_getStaticIPv4DNSAddress (*C++ function*), 1282  
 ethernet\_getStaticIPv4Gateway (*C++ function*), 1280  
 ethernet\_getStaticIPv4Netmask (*C++ function*), 1279  
 ethernet\_setEnabled (*C++ function*), 1277  
 ethernet\_setHostname (*C++ function*), 1282  
 ethernet\_setInterfacePort (*C++ function*), 1283  
 ethernet\_setNetworkConfiguration (*C++ function*), 1278  
 ethernet\_setStaticIPv4Address (*C++ function*), 1279  
 ethernet\_setStaticIPv4DNSAddress (*C++ function*), 1282  
 ethernet\_setStaticIPv4Gateway (*C++ function*), 1280  
 ethernet\_setStaticIPv4Netmask (*C++ function*), 1280  
 ethernetConfigurationDhcp (*C macro*), 885  
 ethernetConfigurationNone (*C macro*), 885  
 ethernetConfigurationStatic (*C macro*), 885  
 ethernetEnabled (*C macro*), 885  
 ethernetHostname (*C macro*), 886  
 ethernetInterfacePort (*C macro*), 886  
 ethernetInterfacePort\_BrainStem\_DiscoveryReply (*C macro*), 886  
 ethernetInterfacePort\_BrainStem\_DiscoveryRequest (*C macro*), 886  
 ethernetInterfacePort\_BrainStem\_TCP (*C macro*), 886  
 ethernetInterfacePort\_Max (*C macro*), 886  
 ethernetInterfacePort\_RestServer\_HTTP (*C macro*), 886  
 ethernetInterfacePort\_RestServer\_HTTPS (*C macro*), 886  
 ethernetIPv4Address (*C macro*), 886  
 ethernetIPv4DNSAddress (*C macro*), 886  
 ethernetIPv4Gateway (*C macro*), 886  
 ethernetIPv4Netmask (*C macro*), 886  
 ethernetMACAddress (*C macro*), 886  
 ethernetNetworkConfiguration (*C macro*), 885  
 ethernetNumberOfOptions (*C macro*), 886  
 ethernetStaticIPv4Address (*C macro*), 885  
 ethernetStaticIPv4DNSAddress (*C macro*), 886  
 ethernetStaticIPv4Gateway (*C macro*), 885  
 ethernetStaticIPv4Netmask (*C macro*), 885  
 EtherStem (*class in brainstem.stem*), 556

`execute()` (*brainstem.entity.App method*), 582  
`executeAndReturn()` (*brainstem.entity.App method*), 582

## F

`fallback` (*brainstem.link.aEtherConfig attribute*), 568  
`findAllModules()` (*in module brainstem.discover*), 561  
`findFirstModule()` (*in module brainstem.discover*), 561  
`findModule()` (*in module brainstem.discover*), 561

## G

`get_UEI16()` (*brainstem.Entity\_Entity.Entity method*), 563  
`get_UEI16_with_subindex()` (*brainstem.Entity\_Entity.Entity method*), 563  
`get_UEI32()` (*brainstem.Entity\_Entity.Entity method*), 563  
`get_UEI32_with_subindex()` (*brainstem.Entity\_Entity.Entity method*), 563  
`get_UEI8()` (*brainstem.Entity\_Entity.Entity method*), 563  
`get_UEI8_with_subindex()` (*brainstem.Entity\_Entity.Entity method*), 564  
`get_UEIBytes()` (*brainstem.Entity\_Entity.Entity method*), 564  
`get_usbPortStateDaughterCard` (*C macro*), 721  
`get_version_string()` (*in module brainstem.version*), 575  
`getAllocatedPower()` (*brainstem.entity.Port method*), 613  
`getAltModeConfig()` (*brainstem.entity.USB method*), 682  
`getAttachTimeElapsed()` (*brainstem.entity.PowerDelivery method*), 633  
`getAvailablePower()` (*brainstem.entity.Port method*), 613  
`getAvailableProtocols()` (*brainstem.entity.UART method*), 677  
`getBaudRate()` (*brainstem.entity.UART method*), 677  
`getBootSlot()` (*brainstem.entity.System method*), 662  
`getBuild()` (*brainstem.entity.System method*), 662  
`getBuild()` (*brainstem.module.Module method*), 570  
`getBulkCaptureNumberOfSamples()` (*brainstem.entity.Analog method*), 578  
`getBulkCaptureSampleRate()` (*brainstem.entity.Analog method*), 578  
`getBulkCaptureState()` (*brainstem.entity.Analog method*), 578  
`getCableCurrentMax()` (*brainstem.entity.PowerDelivery method*), 634  
`getCableFlip()` (*brainstem.entity.USB method*), 684  
`getCableLength()` (*brainstem.entity.HDBaseT method*), 595  
`getCableOrientation()` (*brainstem.entity.PowerDelivery method*), 634  
`getCableSpeedMax()` (*brainstem.entity.PowerDelivery method*), 634  
`getCableType()` (*brainstem.entity.PowerDelivery method*), 635  
`getCableVoltageMax()` (*brainstem.entity.PowerDelivery method*), 635  
`getCapableProtocols()` (*brainstem.entity.UART method*), 677  
`getCC1AccumulatedPower()` (*brainstem.entity.Port method*), 614  
`getCC1Current()` (*brainstem.entity.Port method*), 614  
`getCC1Current()` (*brainstem.entity.USB method*), 682  
`getCC1Enable()` (*brainstem.entity.USB method*), 683  
`getCC1Enabled()` (*brainstem.entity.Port method*), 614  
`getCC1State()` (*brainstem.entity.Port method*), 614  
`getCC1Voltage()` (*brainstem.entity.Port method*), 615  
`getCC1Voltage()` (*brainstem.entity.USB method*), 683  
`getCC2AccumulatedPower()` (*brainstem.entity.Port method*), 615  
`getCC2Current()` (*brainstem.entity.Port method*), 615  
`getCC2Current()` (*brainstem.entity.USB method*), 683  
`getCC2Enable()` (*brainstem.entity.USB method*), 684  
`getCC2Enabled()` (*brainstem.entity.Port method*), 616  
`getCC2State()` (*brainstem.entity.Port method*), 616  
`getCC2Voltage()` (*brainstem.entity.Port method*), 616  
`getCC2Voltage()` (*brainstem.entity.USB method*), 684  
`getCCCurrentLimit()` (*brainstem.entity.Port method*), 617  
`getCCEnabled()` (*brainstem.entity.Port method*), 617  
`getChannel()` (*brainstem.entity.Mux method*), 601  
`getChannelVoltage()` (*brainstem.entity.Mux method*), 601  
`getChar()` (*brainstem.entity.Pointer method*), 610  
`getConfig()` (*brainstem.module.Module method*), 570  
`getConfiguration()` (*brainstem.entity.Analog method*), 579  
`getConfiguration()` (*brainstem.entity.Digital method*), 586  
`getConfiguration()` (*brainstem.entity.Mux method*), 601  
`getConnectionState()` (*brainstem.entity.PowerDelivery method*), 635  
`getConnectMode()` (*brainstem.entity.USB method*), 685  
`getCurrent()` (*brainstem.entity.Rail method*), 649



getCurrentLimit() (*brainstem.entity.Port method*), 617  
 getCurrentLimit() (*brainstem.entity.Rail method*), 649  
 getCurrentLimitMode() (*brainstem.entity.Port method*), 618  
 getCurrentSetpoint() (*brainstem.entity.Rail method*), 649  
 getDataBits() (*brainstem.entity.UART method*), 678  
 getDataEnabled() (*brainstem.entity.Port method*), 618  
 getDataHS1Enabled() (*brainstem.entity.Port method*), 618  
 getDataHS2Enabled() (*brainstem.entity.Port method*), 618  
 getDataHSEnabled() (*brainstem.entity.Port method*), 619  
 getDataHSMaxDataRate() (*brainstem.entity.USBSystem method*), 695  
 getDataHSRoutingBehavior() (*brainstem.entity.Port method*), 619  
 getDataRole() (*brainstem.entity.Port method*), 619  
 getDataRoleBehavior() (*brainstem.entity.USBSystem method*), 696  
 getDataRoleBehaviorConfig() (*brainstem.entity.USBSystem method*), 696  
 getDataRoleCapabilities() (*brainstem.entity.PowerDelivery method*), 636  
 getDataRoleList() (*brainstem.entity.USBSystem method*), 696  
 getDataSpeed() (*brainstem.entity.Port method*), 621  
 getDataSS1Enabled() (*brainstem.entity.Port method*), 619  
 getDataSS2Enabled() (*brainstem.entity.Port method*), 620  
 getDataSSEnabled() (*brainstem.entity.Port method*), 620  
 getDataSSMaxDataRate() (*brainstem.entity.USBSystem method*), 696  
 getDataSSRoutingBehavior() (*brainstem.entity.Port method*), 620  
 getDay() (*brainstem.entity.Clock method*), 583  
 getDownstreamBoostMode() (*brainstem.entity.USB method*), 685  
 getDownstreamDataSpeed() (*brainstem.entity.USB method*), 685  
 getDownstreamDevices (C++ function), 960  
 getDownstreamDevices() (in module *brainstem.discover*), 562  
 getEnable() (*brainstem.entity.Analog method*), 579  
 getEnable() (*brainstem.entity.Mux method*), 602  
 getEnable() (*brainstem.entity.Rail method*), 649  
 getEnable() (*brainstem.entity.RCServo method*), 647  
 getEnable() (*brainstem.entity.Relay method*), 656  
 getEnable() (*brainstem.entity.Signal method*), 657  
 getEnable() (*brainstem.entity.UART method*), 678  
 getEnabled() (*brainstem.entity.Ethernet method*), 590  
 getEnabled() (*brainstem.entity.Port method*), 621  
 getEnabledList() (*brainstem.entity.USBSystem method*), 697  
 getEncodingState() (*brainstem.entity.HDBaseT method*), 596  
 getEnumerationDelay() (*brainstem.entity.USB method*), 686  
 getEnumerationDelay() (*brainstem.entity.USBSystem method*), 697  
 getErrorDescription() (*brainstem.result.Result static method*), 574  
 getErrors() (*brainstem.entity.Port method*), 621  
 getErrors() (*brainstem.entity.System method*), 663  
 getErrorText() (*brainstem.result.Result static method*), 574  
 getExpiration() (*brainstem.entity.Timer method*), 676  
 getFastRoleSwapCurrent() (*brainstem.entity.PowerDelivery method*), 636  
 getFirmwareVersion() (*brainstem.entity.HDBaseT method*), 596  
 getFlagMode() (*brainstem.entity.PowerDelivery method*), 636  
 getFlowControl() (*brainstem.entity.UART method*), 678  
 getHardwareVersion() (*brainstem.entity.System method*), 663  
 getHBInterval() (*brainstem.entity.System method*), 663  
 getHostname() (*brainstem.entity.Ethernet method*), 590  
 getHour() (*brainstem.entity.Clock method*), 583  
 getHSBoost() (*brainstem.entity.Port method*), 621  
 getHubMode() (*brainstem.entity.USB method*), 686  
 getInputCurrent() (*brainstem.entity.System method*), 663  
 getInputPowerBehavior() (*brainstem.entity.System method*), 664  
 getInputPowerBehaviorConfig() (*brainstem.entity.System method*), 664  
 getInputPowerSource() (*brainstem.entity.System method*), 664  
 getInputVoltage() (*brainstem.entity.System method*), 664  
 getInt() (*brainstem.entity.Pointer method*), 610  
 getInterfacePort() (*brainstem.entity.Ethernet method*), 591  
 getInvert() (*brainstem.entity.Signal method*), 658  
 getIPv4Address() (*brainstem.entity.Ethernet method*), 590  
 getIPv4DNSAddress() (*brainstem.entity.Ethernet method*), 591  
 getIPv4Gateway() (*brainstem.entity.Ethernet method*), 591  
 getIPv4Interfaces() (in module *brainstem.discover*), 562  
 getIPv4Netmask() (*brainstem.entity.Ethernet method*), 591

`getKelvinSensingEnable()` (*brainstem.entity.Rail method*), 650  
`getKelvinSensingState()` (*brainstem.entity.Rail method*), 650  
`getLED()` (*brainstem.entity.System method*), 665  
`getLEDMaxBrightness()` (*brainstem.entity.System method*), 665  
`getLinkChannel()` (*brainstem.entity.Digital method*), 586  
`getLinkChannel()` (*brainstem.entity.UART method*), 679  
`getLinkInterface()` (*brainstem.entity.System method*), 665  
`getLinkRole()` (*brainstem.entity.HDBaseT method*), 596  
`getLinkState()` (*brainstem.entity.PowerDelivery method*), 637  
`getLinkUtilization()` (*brainstem.entity.HDBaseT method*), 596  
`getMACAddress()` (*brainstem.entity.Ethernet method*), 592  
`getMajor()` (*in module brainstem.version*), 575  
`getMaximumTemperature()` (*brainstem.entity.System method*), 666  
`getMinimumTemperature()` (*brainstem.entity.System method*), 666  
`getMinor()` (*in module brainstem.version*), 575  
`getMinute()` (*brainstem.entity.Clock method*), 583  
`getMode()` (*brainstem.entity.Pointer method*), 610  
`getMode()` (*brainstem.entity.Port method*), 622  
`getMode()` (*brainstem.entity.Timer method*), 676  
`getModel()` (*brainstem.entity.System method*), 666  
`getModelList()` (*brainstem.entity.USBSystem method*), 697  
`getModule()` (*brainstem.entity.System method*), 666  
`getModuleAddress()` (*brainstem.module.Module method*), 570  
`getModuleBaseAddress()` (*brainstem.entity.System method*), 667  
`getModuleHardwareOffset()` (*brainstem.entity.System method*), 667  
`getModuleSoftwareOffset()` (*brainstem.entity.System method*), 667  
`getMonth()` (*brainstem.entity.Clock method*), 584  
`getMSEA()` (*brainstem.entity.HDBaseT method*), 597  
`getMSEB()` (*brainstem.entity.HDBaseT method*), 597  
`getName()` (*brainstem.entity.Port method*), 622  
`getName()` (*brainstem.entity.System method*), 668  
`getNetworkConfiguration()` (*brainstem.entity.Ethernet method*), 592  
`getNumberOfPowerDataObjects()` (*brainstem.entity.PowerDelivery method*), 637  
`getOffset()` (*brainstem.entity.Pointer method*), 611  
`getOperationalMode()` (*brainstem.entity.Rail method*), 650  
`getOperationalState()` (*brainstem.entity.Rail method*), 651  
`getOverride()` (*brainstem.entity.PowerDelivery method*), 638  
`getOverride()` (*brainstem.entity.USBSystem method*), 697  
`getPacket()` (*brainstem.pd\_channel\_logger.PDChannelLogger method*), 573  
`getPackets()` (*brainstem.pd\_channel\_logger.PDChannelLogger method*), 573  
`getPairAccumulatedPower()` (*brainstem.entity.PoE method*), 603  
`getPairCapacitance()` (*brainstem.entity.PoE method*), 603  
`getPairCurrent()` (*brainstem.entity.PoE method*), 604  
`getPairDetectionStatus()` (*brainstem.entity.PoE method*), 604  
`getPairDiscoveredClass()` (*brainstem.entity.PoE method*), 605  
`getPairEnabled()` (*brainstem.entity.PoE method*), 605  
`getPairPower()` (*brainstem.entity.PoE method*), 605  
`getPairRequestedClass()` (*brainstem.entity.PoE method*), 606  
`getPairResistance()` (*brainstem.entity.PoE method*), 606  
`getPairSourcingClass()` (*brainstem.entity.PoE method*), 606  
`getPairVoltage()` (*brainstem.entity.PoE method*), 607  
`getParity()` (*brainstem.entity.UART method*), 679  
`getPatch()` (*in module brainstem.version*), 575  
`getPeakCurrentConfiguration()` (*brainstem.entity.PowerDelivery method*), 638  
`getPortCurrent()` (*brainstem.entity.USB method*), 686  
`getPortCurrentLimit()` (*brainstem.entity.USB method*), 687  
`getPortError()` (*brainstem.entity.USB method*), 687  
`getPortMode()` (*brainstem.entity.USB method*), 687  
`getPortState()` (*brainstem.entity.USB method*), 688  
`getPortVoltage()` (*brainstem.entity.USB method*), 688  
`getPosition()` (*brainstem.entity.RCServo method*), 647  
`getPower()` (*brainstem.entity.Rail method*), 651  
`getPowerBehavior()` (*brainstem.entity.USBSystem method*), 698  
`getPowerBehaviorConfig()` (*brainstem.entity.USBSystem method*), 698  
`getPowerDataObject()` (*brainstem.entity.PowerDelivery method*), 638  
`getPowerDataObjectEnabled()` (*brainstem.entity.PowerDelivery method*), 639  
`getPowerDataObjectEnabledList()` (*brainstem.entity.PowerDelivery method*), 639  
`getPowerDataObjectList()` (*brainstem.entity.PowerDelivery method*), 640



getPowerEnabled() (*brainstem.entity.Port method*), 622  
 getPowerLimit() (*brainstem.entity.Port method*), 622  
 getPowerLimit() (*brainstem.entity.Rail method*), 651  
 getPowerLimit() (*brainstem.entity.System method*), 668  
 getPowerLimitMax() (*brainstem.entity.System method*), 668  
 getPowerLimitMode() (*brainstem.entity.Port method*), 623  
 getPowerLimitState() (*brainstem.entity.System method*), 668  
 getPowerMode() (*brainstem.entity.PoE method*), 607  
 getPowerMode() (*brainstem.entity.Port method*), 623  
 getPowerRole() (*brainstem.entity.PowerDelivery method*), 640  
 getPowerRoleCapabilities() (*brainstem.entity.PowerDelivery method*), 641  
 getPowerRolePreferred() (*brainstem.entity.PowerDelivery method*), 641  
 getPowerSetpoint() (*brainstem.entity.Rail method*), 651  
 getPowerState() (*brainstem.entity.PoE method*), 607  
 getProtocol() (*brainstem.entity.UART method*), 679  
 getProtocolFeatures() (*brainstem.entity.System method*), 669  
 getRange() (*brainstem.entity.Analog method*), 579  
 getReceiverConfig() (*brainstem.entity.Equalizer method*), 589  
 getRequestDataObject() (*brainstem.entity.PowerDelivery method*), 641  
 getResistance() (*brainstem.entity.Rail method*), 652  
 getResistanceSetpoint() (*brainstem.entity.Rail method*), 652  
 getRetransmissionRate() (*brainstem.entity.HDBaseT method*), 597  
 getReverse() (*brainstem.entity.RCServo method*), 647  
 getRouter() (*brainstem.entity.System method*), 669  
 getRouterAddressSetting() (*brainstem.entity.System method*), 669  
 getSBU1Voltage() (*brainstem.entity.Port method*), 623  
 getSBU1Voltage() (*brainstem.entity.USB method*), 688  
 getSBU2Voltage() (*brainstem.entity.Port method*), 623  
 getSBU2Voltage() (*brainstem.entity.USB method*), 688  
 getSBUEnable() (*brainstem.entity.USB method*), 689  
 getSecond() (*brainstem.entity.Clock method*), 584  
 getSelectorMode() (*brainstem.entity.USBSystem method*), 698  
 getSerialNumber() (*brainstem.entity.HDBaseT method*), 597  
 getSerialNumber() (*brainstem.entity.System method*), 669  
 getShort() (*brainstem.entity.Pointer method*), 611  
 getSlotCapacity() (*brainstem.entity.Store method*), 659  
 getSlotLocked() (*brainstem.entity.Store method*), 660  
 getSlotSize() (*brainstem.entity.Store method*), 660  
 getSlotState() (*brainstem.entity.Store method*), 660  
 getSpeed() (*brainstem.entity.I2C method*), 599  
 getSplitMode() (*brainstem.entity.Mux method*), 602  
 getState() (*brainstem.entity.Digital method*), 586  
 getState() (*brainstem.entity.HDBaseT method*), 598  
 getState() (*brainstem.entity.Port method*), 624  
 getStateAll() (*brainstem.entity.Digital method*), 586  
 getStateList() (*brainstem.entity.USBSystem method*), 699  
 getStaticIPv4Address() (*brainstem.entity.Ethernet method*), 592  
 getStaticIPv4DNSAddress() (*brainstem.entity.Ethernet method*), 593  
 getStaticIPv4Gateway() (*brainstem.entity.Ethernet method*), 593  
 getStaticIPv4Netmask() (*brainstem.entity.Ethernet method*), 593  
 getStatus() (*brainstem.module.Module method*), 570  
 getStopBits() (*brainstem.entity.UART method*), 679  
 getStreamStatus() (*brainstem.Entity.Entity method*), 563  
 getT2Time() (*brainstem.entity.Signal method*), 658  
 getT3Time() (*brainstem.entity.Signal method*), 658  
 getTemperature() (*brainstem.entity.Rail method*), 652  
 getTemperature() (*brainstem.entity.System method*), 670  
 getTotalAccumulatedPower() (*brainstem.entity.PoE method*), 608  
 getTotalPower() (*brainstem.entity.PoE method*), 608  
 getTransferStore() (*brainstem.entity.Pointer method*), 611  
 getTransmitterConfig() (*brainstem.entity.Equalizer method*), 589  
 getUnregulatedCurrent() (*brainstem.entity.System method*), 670  
 getUnregulatedVoltage() (*brainstem.entity.System method*), 670  
 getUpstream() (*brainstem.entity.USBSystem method*), 699  
 getUpstreamBoostMode() (*brainstem.entity.USB method*), 689  
 getUpstreamHS() (*brainstem.entity.USBSystem method*), 699  
 getUpstreamMode() (*brainstem.entity.USB method*), 689  
 getUpstreamSS() (*brainstem.entity.USBSystem method*), 699

getUpstreamState() (*brainstem.entity.USB method*), 690  
getUptime() (*brainstem.entity.System method*), 670  
getUSB2DeviceTree() (*brainstem.entity.HDBaseT method*), 598  
getUSB3DeviceTree() (*brainstem.entity.HDBaseT method*), 598  
getValue() (*brainstem.entity.Analog method*), 579  
getValue() (*brainstem.entity.Digital method*), 587  
getValue() (*brainstem.entity.Temperature method*), 675  
getValueMax() (*brainstem.entity.Temperature method*), 675  
getValueMin() (*brainstem.entity.Temperature method*), 675  
getVbusAccumulatedPower() (*brainstem.entity.Port method*), 624  
getVbusCurrent() (*brainstem.entity.Port method*), 624  
getVbusVoltage() (*brainstem.entity.Port method*), 624  
getVconn1Enabled() (*brainstem.entity.Port method*), 625  
getVconn2Enabled() (*brainstem.entity.Port method*), 625  
getVconnAccumulatedPower() (*brainstem.entity.Port method*), 625  
getVconnCurrent() (*brainstem.entity.Port method*), 625  
getVconnEnabled() (*brainstem.entity.Port method*), 626  
getVconnVoltage() (*brainstem.entity.Port method*), 626  
getVersion() (*brainstem.entity.System method*), 671  
getVoltage() (*brainstem.entity.Analog method*), 580  
getVoltage() (*brainstem.entity.Rail method*), 653  
getVoltage() (*brainstem.entity.Relay method*), 657  
getVoltageMaxLimit() (*brainstem.entity.Rail method*), 653  
getVoltageMinLimit() (*brainstem.entity.Rail method*), 653  
getVoltageSetpoint() (*brainstem.entity.Port method*), 626  
getVoltageSetpoint() (*brainstem.entity.Rail method*), 654  
getYear() (*brainstem.entity.Clock method*), 584

## H

hasUEI() (*brainstem.module.Module method*), 570  
HDBaseT (*class in brainstem.entity*), 595  
hdbaset\_getCableLength (*C++ function*), 1285  
hdbaset\_getEncodingState (*C++ function*), 1287  
hdbaset\_getFirmwareVersion (*C++ function*), 1285  
hdbaset\_getLinkRole (*C++ function*), 1288  
hdbaset\_getLinkUtilization (*C++ function*), 1286  
hdbaset\_getMSEA (*C++ function*), 1285  
hdbaset\_getMSEB (*C++ function*), 1286  
hdbaset\_getRetransmissionRate (*C++ function*), 1286  
hdbaset\_getSerialNumber (*C++ function*), 1284  
hdbaset\_getState (*C++ function*), 1285  
hdbaset\_getUSB2DeviceTree (*C++ function*), 1287  
hdbaset\_getUSB3DeviceTree (*C++ function*), 1287  
hdbaset\_setLinkRole (*C++ function*), 1288  
hdbasetCableLength (*C macro*), 888  
hdbasetEncodingState (*C macro*), 888  
hdbasetEncodingState\_PAM16 (*C macro*), 888  
hdbasetEncodingState\_PAM4 (*C macro*), 889  
hdbasetEncodingState\_PAM8 (*C macro*), 888  
hdbasetEncodingState\_Unknown (*C macro*), 888  
hdbasetFirmwareVersion (*C macro*), 887  
hdbasetLinkRole (*C macro*), 889  
hdbasetLinkRole\_AutoDetect (*C macro*), 889  
hdbasetLinkRole\_Follower (*C macro*), 889  
hdbasetLinkRole\_Leader (*C macro*), 889  
hdbasetLinkUtilization (*C macro*), 888  
hdbasetMSEA (*C macro*), 888  
hdbasetMSEB (*C macro*), 888  
hdbasetNumberOfOptions (*C macro*), 889  
hdbasetRetransmissionRate (*C macro*), 888  
hdbasetSerialNumber (*C macro*), 887  
hdbasetState (*C macro*), 887  
hdbasetState\_devicePresent\_Bit (*C macro*), 887  
hdbasetState\_linkRole\_Follower (*C macro*), 888  
hdbasetState\_linkRole\_Leader (*C macro*), 888  
hdbasetState\_linkRole\_Mask (*C macro*), 888  
hdbasetState\_linkRole\_Offset (*C macro*), 888

hdbasetState\_linkRole\_Unknown (*C macro*), 888  
 hdbasetState\_linkUp\_Bit (*C macro*), 888  
 hdbasetUSB2DeviceTree (*C macro*), 889  
 hdbasetUSB3DeviceTree (*C macro*), 889

## I

i2c (*brainstem.stem.USBHub3c attribute*), 540  
 I2C (*class in brainstem.entity*), 599  
 i2c\_getSpeed (*C++ function*), 1290  
 i2c\_read (*C++ function*), 1288  
 i2c\_setPullup (*C++ function*), 1289  
 i2c\_setSpeed (*C++ function*), 1289  
 i2c\_write (*C++ function*), 1289  
 i2cDefaultSpeed (*C macro*), 890  
 i2cSetPullup (*C macro*), 890  
 i2cSpeed\_1000Khz (*C macro*), 891  
 i2cSpeed\_100Khz (*C macro*), 890  
 i2cSpeed\_400Khz (*C macro*), 890  
 id (*brainstem.module.Module property*), 571  
 index (*brainstem.Entity.Entity property*), 564  
 index (*brainstem.pd\_channel\_logger.PDChannelLogger property*), 573  
 initiateBulkCapture () (*brainstem.entity.Analog method*), 580  
 initiateTransferFromStore () (*brainstem.entity.Pointer method*), 611  
 initiateTransferToStore () (*brainstem.entity.Pointer method*), 611  
 INVALID (*brainstem.link.Spec attribute*), 567  
 isAtLeast () (*in module brainstem.version*), 576  
 isAtLeastCompare () (*in module brainstem.version*), 576  
 isConnected () (*brainstem.module.Module method*), 571  
 isLegacyFormat () (*in module brainstem.version*), 576  
 items () (*brainstem.result.Result method*), 575

## K

kelvinSensingOff\_Value (*C macro*), 917  
 kelvinSensingOn\_Value (*C macro*), 917  
 key (*brainstem.link.StreamStatusEntry property*), 567  
 keys () (*brainstem.result.Result method*), 575

## L

link (*brainstem.module.Module property*), 571  
 link\_enableStream (*C++ function*), 1411  
 link\_getLinkSpecifier (*C++ function*), 1411  
 link\_getStreamKeyElement (*C++ function*), 1413  
 link\_getStreamStatus (*C++ function*), 1412  
 link\_registerStreamCallback (*C++ function*), 1412  
 linkSpec (*C++ struct*), 860  
 linkSpec::model (*C++ member*), 860  
 linkSpec::module (*C++ member*), 860  
 linkSpec::router (*C++ member*), 860  
 linkSpec::router\_serial\_num (*C++ member*), 860  
 linkSpec::serial\_num (*C++ member*), 860  
 linkSpec::t (*C++ member*), 861  
 linkSpec::type (*C++ member*), 860  
 linkSpec\_CCA (*C++ struct*), 1410  
 linkSpec\_CCA::baudrate (*C++ member*), 1411  
 linkSpec\_CCA::ip\_address (*C++ member*), 1411  
 linkSpec\_CCA::ip\_port (*C++ member*), 1411  
 linkSpec\_CCA::model (*C++ member*), 1410  
 linkSpec\_CCA::module (*C++ member*), 1410  
 linkSpec\_CCA::port (*C++ member*), 1411  
 linkSpec\_CCA::router (*C++ member*), 1410  
 linkSpec\_CCA::router\_serial\_num (*C++ member*), 1410  
 linkSpec\_CCA::serial\_num (*C++ member*), 1410  
 linkSpec\_CCA::type (*C++ member*), 1410  
 linkSpec\_CCA::usb\_id (*C++ member*), 1411  
 linkStatus (*C++ enum*), 869  
 linkStatus::INITIALIZING (*C++ enumerator*), 869

linkStatus::INVALID\_LINK\_STREAM (C++ enumerator), 869  
linkStatus::IO\_ERROR (C++ enumerator), 869  
linkStatus::RESETTING (C++ enumerator), 869  
linkStatus::RUNNING (C++ enumerator), 869  
linkStatus::STOPPED (C++ enumerator), 869  
linkStatus::STOPPING (C++ enumerator), 869  
linkStatus::SYNCING (C++ enumerator), 869  
linkStatus::UNKNOWN\_ERROR (C++ enumerator), 869  
linkType (C++ enum), 859  
linkType::AETHER (C++ enumerator), 859  
linkType::AETHER\_SERIAL (C++ enumerator), 860  
linkType::AETHER\_TCPIP (C++ enumerator), 859  
linkType::AETHER\_USB (C++ enumerator), 859  
linkType::INVALID (C++ enumerator), 859  
linkType::SERIAL (C++ enumerator), 859  
linkType::TCPIP (C++ enumerator), 859  
linkType::USB (C++ enumerator), 859  
loadEntityFromSavedValues () (brainstem.Entity.Entity method), 564  
loadSlot () (brainstem.entity.Store method), 661  
localOnly (brainstem.link.aEtherConfig attribute), 568  
logEvents () (brainstem.entity.System method), 671

## M

model (brainstem.module.Module property), 571  
model\_info () (in module brainstem.defs), 560  
model\_name () (in module brainstem.defs), 560  
module  
    brainstem.defs, 560  
    brainstem.discover, 560  
    brainstem.link, 566  
    brainstem.module, 568  
    brainstem.pd\_channel\_logger, 572  
    brainstem.result, 574  
    brainstem.version, 575  
module (brainstem.Entity\_Entity.Entity property), 564  
module (brainstem.pd\_channel\_logger.PDChannelLogger property), 574  
Module (class in brainstem.module), 568  
module\_clearAllStems (C++ function), 1410  
module\_connectThroughLinkModule (C++ function), 1409  
module\_createStem (C++ function), 1408  
module\_disconnect (C++ function), 1409  
module\_disconnectAndDestroyStem (C++ function), 1408  
module\_discoverAndConnect (C++ function), 1408  
module\_getModuleAddress (C++ function), 1409  
module\_isConnected (C++ function), 1409  
module\_reconnect (C++ function), 1409  
module\_sDiscover (C++ function), 1408  
module\_setModuleAddress (C++ function), 1409  
module\_setNetworkingMode (C++ function), 1410  
MTMDAQ1 (class in brainstem.stem), 554  
MTMDAQ2 (class in brainstem.stem), 546  
MTMEtherStem (class in brainstem.stem), 548  
MTMIOSerial (class in brainstem.stem), 549  
MTMIOSerial.Hub (class in brainstem.stem), 550  
MTMLOAD1 (class in brainstem.stem), 550  
MTMPM1 (class in brainstem.stem), 551  
MTMRelay (class in brainstem.stem), 552  
MTMUSBStem (class in brainstem.stem), 553  
Mux (class in brainstem.entity), 601  
mux\_getChannel (C++ function), 1291  
mux\_getChannelVoltage (C++ function), 1291  
mux\_getConfiguration (C++ function), 1292  
mux\_getEnable (C++ function), 1290  
mux\_getSplitMode (C++ function), 1292  
mux\_setChannel (C++ function), 1291  
mux\_setConfiguration (C++ function), 1292  
mux\_setEnable (C++ function), 1290

mux\_setSplitMode (*C++ function*), 1292  
 muxChannel (*C macro*), 891  
 muxConfig (*C macro*), 891  
 muxConfig\_channelpriority (*C macro*), 891  
 muxConfig\_default (*C macro*), 891  
 muxConfig\_splitMode (*C macro*), 891  
 muxEnable (*C macro*), 891  
 muxNumberOfOptions (*C macro*), 892  
 muxSplit (*C macro*), 892  
 muxVoltage (*C macro*), 891

## N

networkInterface (*brainstem.link.aEtherConfig attribute*), 568

## O

OS\_NEW\_LN (*C macro*), 858

## P

pack () (*in module brainstem.version*), 576  
 packDataObjectAttributes () (*brainstem.entity.PowerDelivery static method*), 642  
 parseMajor () (*in module brainstem.version*), 577  
 parseMinor () (*in module brainstem.version*), 577  
 parsePatch () (*in module brainstem.version*), 577  
 pdCableCurrent\_3Amps (*C macro*), 910  
 pdCableCurrent\_5Amps (*C macro*), 910  
 pdCableCurrent\_Invalid (*C macro*), 910  
 pdCableOrientation\_CC1 (*C macro*), 911  
 pdCableOrientation\_CC2 (*C macro*), 911  
 pdCableOrientation\_Invalid (*C macro*), 911  
 pdCableSpeed\_Invalid (*C macro*), 911  
 pdCableSpeed\_USB2p0 (*C macro*), 911  
 pdCableSpeed\_USB3p2\_Gen1 (*C macro*), 911  
 pdCableSpeed\_USB3p2\_USB4p0\_Gen2 (*C macro*), 911  
 pdCableSpeed\_USB4p0\_Gen3 (*C macro*), 911  
 pdCableSpeed\_USB4p0\_Gen4 (*C macro*), 911  
 pdCableType\_Active (*C macro*), 911  
 pdCableType\_Invalid (*C macro*), 911  
 pdCableType\_Passive (*C macro*), 911  
 pdCableVoltage\_20VDC (*C macro*), 910  
 pdCableVoltage\_30VDC (*C macro*), 910  
 pdCableVoltage\_40VDC (*C macro*), 910  
 pdCableVoltage\_50VDC (*C macro*), 910  
 pdCableVoltage\_Invalid (*C macro*), 910  
 PDChannelLogger (*class in brainstem.pd\_channel\_logger*), 573  
 PDChannelLogger\_create (*C++ function*), 1414  
 PDChannelLogger\_destroy (*C++ function*), 1414  
 PDChannelLogger\_freePayloadBuffer (*C++ function*), 1415  
 PDChannelLogger\_getPacket (*C++ function*), 1414  
 PDChannelLogger\_getPackets (*C++ function*), 1415  
 PDChannelLogger\_setEnabled (*C++ function*), 1414  
 pdConnectionState\_AudioAccessory (*C macro*), 908  
 pdConnectionState\_DebugAccessory (*C macro*), 908  
 pdConnectionState\_None (*C macro*), 908  
 pdConnectionState\_PoweredCable (*C macro*), 908  
 pdConnectionState\_PoweredCableWithSink (*C macro*), 908  
 pdConnectionState\_Sink (*C macro*), 908  
 pdConnectionState\_Source (*C macro*), 908  
 pdDataRoleCapabilities\_DFP (*C macro*), 912  
 pdDataRoleCapabilities\_DualRole (*C macro*), 912  
 pdDataRoleCapabilities\_None (*C macro*), 912  
 pdDataRoleCapabilities\_UFP (*C macro*), 912  
 pdEventBistEnter (*C macro*), 915  
 pdEventBistExit (*C macro*), 915  
 pdEventCableResetReceived (*C macro*), 915  
 pdEventCableResetSent (*C macro*), 915  
 pdEventConnect (*C macro*), 915

pdEventDisconnect (*C macro*), 915  
pdEventHardResetReceived (*C macro*), 915  
pdEventHardResetSent (*C macro*), 915  
pdEventInvalidPacket (*C macro*), 916  
pdEventLast (*C macro*), 916  
pdEventMessageTransmitDiscarded (*C macro*), 915  
pdEventMessageTransmitFailed (*C macro*), 915  
pdEventNone (*C macro*), 915  
pdEventPacket (*C macro*), 915  
pdEventPDFunctionDisabled (*C macro*), 915  
pdEventRp1A5 (*C macro*), 915  
pdEventRp3A0 (*C macro*), 915  
pdEventVBUSDisabled (*C macro*), 915  
pdEventVBUSEnabled (*C macro*), 915  
pdEventVCONNDisabled (*C macro*), 915  
pdEventVCONNEnabled (*C macro*), 915  
pdFlagCapabilityMismatch (*C macro*), 914  
pdFlagDualRoleData (*C macro*), 914  
pdFlagDualRolePower (*C macro*), 914  
pdFlagGivebackFlag (*C macro*), 914  
pdFlagHigherCapability (*C macro*), 914  
pdFlagLast (*C macro*), 914  
pdFlagSuspendPossible (*C macro*), 914  
pdFlagUnchunkedMessageSupport (*C macro*), 914  
pdFlagUnconstrainedPower (*C macro*), 914  
pdFlagUSBComPossible (*C macro*), 914  
pdLinkState\_connectionState\_AudioAccessory (*C macro*), 909  
pdLinkState\_connectionState\_DebugAccessory (*C macro*), 909  
pdLinkState\_connectionState\_Mask (*C macro*), 909  
pdLinkState\_connectionState\_None (*C macro*), 909  
pdLinkState\_connectionState\_Offset (*C macro*), 909  
pdLinkState\_connectionState\_PoweredCable (*C macro*), 909  
pdLinkState\_connectionState\_PoweredCableWithSink (*C macro*), 909  
pdLinkState\_connectionState\_Sink (*C macro*), 909  
pdLinkState\_connectionState\_Source (*C macro*), 909  
pdLinkState\_dataRole\_DFP (*C macro*), 909  
pdLinkState\_dataRole\_Mask (*C macro*), 909  
pdLinkState\_dataRole\_None (*C macro*), 909  
pdLinkState\_dataRole\_Offset (*C macro*), 909  
pdLinkState\_dataRole\_UFP (*C macro*), 909  
pdLinkState\_linkType\_EPR (*C macro*), 908  
pdLinkState\_linkType\_Legacy (*C macro*), 908  
pdLinkState\_linkType\_Mask (*C macro*), 908  
pdLinkState\_linkType\_None (*C macro*), 908  
pdLinkState\_linkType\_Offset (*C macro*), 908  
pdLinkState\_linkType\_SPR (*C macro*), 908  
pdLinkState\_powerRole\_Mask (*C macro*), 909  
pdLinkState\_powerRole\_None (*C macro*), 909  
pdLinkState\_powerRole\_Offset (*C macro*), 909  
pdLinkState\_powerRole\_Sink (*C macro*), 909  
pdLinkState\_powerRole\_Source (*C macro*), 909  
pdLinkState\_specRevision\_1 (*C macro*), 910  
pdLinkState\_specRevision\_2 (*C macro*), 910  
pdLinkState\_specRevision\_3 (*C macro*), 910  
pdLinkState\_specRevision\_Mask (*C macro*), 910  
pdLinkState\_specRevision\_Offset (*C macro*), 910  
pdLinkState\_specRevision\_Unknown (*C macro*), 910  
pdLinkState\_vconnState\_Mask (*C macro*), 909  
pdLinkState\_vconnState\_NotSource (*C macro*), 910  
pdLinkState\_vconnState\_Off (*C macro*), 910  
pdLinkState\_vconnState\_Offset (*C macro*), 909  
pdLinkState\_vconnState\_Source (*C macro*), 910  
pdOverrideAutoDiscovery (*C macro*), 912  
pdOverrideCableCurrent (*C macro*), 912  
pdOverridePortPower (*C macro*), 912  
pdPowerRole\_None (*C macro*), 912  
pdPowerRole\_Sink (*C macro*), 912  
pdPowerRole\_Source (*C macro*), 912



pdPowerRole\_SourceSink (*C macro*), 912  
 pdPowerRoleCapabilities\_DualRole (*C macro*), 911  
 pdPowerRoleCapabilities\_None (*C macro*), 911  
 pdPowerRoleCapabilities\_Sink (*C macro*), 911  
 pdPowerRoleCapabilities\_Source (*C macro*), 911  
 pdPowerRolePreferred\_Auto (*C macro*), 912  
 pdPowerRolePreferred\_FollowData (*C macro*), 912  
 pdPowerRolePreferred\_None (*C macro*), 912  
 pdPowerRolePreferred\_Sink (*C macro*), 912  
 pdPowerRolePreferred\_Source (*C macro*), 912  
 pdRequestBatteryCapabilities (*C macro*), 913  
 pdRequestBatteryStatus (*C macro*), 913  
 pdRequestCountryCode (*C macro*), 914  
 pdRequestCountryInfo (*C macro*), 914  
 pdRequestDataReset (*C macro*), 913  
 pdRequestDataRoleSwap (*C macro*), 913  
 pdRequestDiscoverIdentitySop (*C macro*), 913  
 pdRequestDiscoverIdentitySopp (*C macro*), 914  
 pdRequestDiscoverIdentitySoppo (*C macro*), 914  
 pdRequestHardReset (*C macro*), 913  
 pdRequestManufacturerInfoSop (*C macro*), 913  
 pdRequestManufacturerInfoSopp (*C macro*), 913  
 pdRequestManufacturerInfoSoppo (*C macro*), 913  
 pdRequestPowerFastRoleSwap (*C macro*), 913  
 pdRequestPowerRoleSwap (*C macro*), 913  
 pdRequestPPSStatus (*C macro*), 913  
 pdRequestRemoteSinkEPRCapabilities (*C macro*), 914  
 pdRequestRemoteSinkExtendedCapabilities (*C macro*), 913  
 pdRequestRemoteSinkPowerDataObjects (*C macro*), 913  
 pdRequestRemoteSourceEPRCapabilities (*C macro*), 914  
 pdRequestRemoteSourceExtendedCapabilities (*C macro*), 913  
 pdRequestRemoteSourcePowerDataObjects (*C macro*), 913  
 pdRequestRevision (*C macro*), 914  
 pdRequestSinkGoToMinimum (*C macro*), 913  
 pdRequestSoftReset (*C macro*), 913  
 pdRequestSourceInfo (*C macro*), 914  
 pdRequestStatus (*C macro*), 913  
 pdRequestVconnSwap (*C macro*), 913  
 PoE (*class in brainstem.entity*), 603  
 poe\_getPairAccumulatedPower (*C++ function*), 1298  
 poe\_getPairCapacitance (*C++ function*), 1297  
 poe\_getPairCurrent (*C++ function*), 1297  
 poe\_getPairDetectionStatus (*C++ function*), 1296  
 poe\_getPairDiscoveredClass (*C++ function*), 1295  
 poe\_getPairEnabled (*C++ function*), 1293  
 poe\_getPairPower (*C++ function*), 1298  
 poe\_getPairRequestedClass (*C++ function*), 1295  
 poe\_getPairResistance (*C++ function*), 1297  
 poe\_getPairSourcingClass (*C++ function*), 1294  
 poe\_getPairVoltage (*C++ function*), 1296  
 poe\_getPowerMode (*C++ function*), 1294  
 poe\_getPowerState (*C++ function*), 1294  
 poe\_getTotalAccumulatedPower (*C++ function*), 1299  
 poe\_getTotalPower (*C++ function*), 1298  
 poe\_setPairAccumulatedPower (*C++ function*), 1299  
 poe\_setPairEnabled (*C++ function*), 1293  
 poe\_setPairSourcingClass (*C++ function*), 1295  
 poe\_setPowerMode (*C++ function*), 1294  
 poe\_setTotalAccumulatedPower (*C++ function*), 1299  
 poeNumberOfOptions (*C macro*), 896  
 poePairAccumulatedPower (*C macro*), 895  
 poePairCapacitance (*C macro*), 896  
 poePairCurrent (*C macro*), 895  
 poePairDetectionStatus (*C macro*), 895  
 poePairDetectionStatus\_High\_Resistance (*C macro*), 895  
 poePairDetectionStatus\_Low\_Resistance (*C macro*), 895  
 poePairDetectionStatus\_Open\_Circuit (*C macro*), 895  
 poePairDetectionStatus\_Short\_Circuit (*C macro*), 895

poePairDetectionStatus\_Switch\_Failure (*C macro*), 895  
poePairDetectionStatus\_Unknown (*C macro*), 895  
poePairDetectionStatus\_Valid (*C macro*), 895  
poePairDiscoveredClass (*C macro*), 894  
poePairDiscoveredClass\_0 (*C macro*), 894  
poePairDiscoveredClass\_1 (*C macro*), 894  
poePairDiscoveredClass\_2 (*C macro*), 894  
poePairDiscoveredClass\_3 (*C macro*), 894  
poePairDiscoveredClass\_4 (*C macro*), 894  
poePairDiscoveredClass\_4\_PlusType1Limited (*C macro*), 894  
poePairDiscoveredClass\_5\_4PairDualSignature (*C macro*), 894  
poePairDiscoveredClass\_5\_4PairSingleSignature (*C macro*), 894  
poePairDiscoveredClass\_6\_4PairSingleSignature (*C macro*), 895  
poePairDiscoveredClass\_7\_4PairSingleSignature (*C macro*), 895  
poePairDiscoveredClass\_8\_4PairSingleSignature (*C macro*), 895  
poePairDiscoveredClass\_Mismatch (*C macro*), 895  
poePairDiscoveredClass\_OverCurrent (*C macro*), 895  
poePairDiscoveredClass\_Unknown (*C macro*), 894  
poePairEnabled (*C macro*), 893  
poePairPower (*C macro*), 895  
poePairRequestedClass (*C macro*), 893  
poePairRequestedClass\_0 (*C macro*), 893  
poePairRequestedClass\_1 (*C macro*), 893  
poePairRequestedClass\_2 (*C macro*), 894  
poePairRequestedClass\_3 (*C macro*), 894  
poePairRequestedClass\_4 (*C macro*), 894  
poePairRequestedClass\_4\_PlusType1Limited (*C macro*), 894  
poePairRequestedClass\_5\_4PairDualSignature (*C macro*), 894  
poePairRequestedClass\_5\_4PairSingleSignature (*C macro*), 894  
poePairRequestedClass\_6\_4PairSingleSignature (*C macro*), 894  
poePairRequestedClass\_7\_4PairSingleSignature (*C macro*), 894  
poePairRequestedClass\_8\_4PairSingleSignature (*C macro*), 894  
poePairRequestedClass\_Mismatch (*C macro*), 894  
poePairRequestedClass\_OverCurrent (*C macro*), 894  
poePairRequestedClass\_Unknown (*C macro*), 893  
poePairResistance (*C macro*), 896  
poePairSourcingClass (*C macro*), 893  
poePairSourcingClass\_0 (*C macro*), 893  
poePairSourcingClass\_1 (*C macro*), 893  
poePairSourcingClass\_2 (*C macro*), 893  
poePairSourcingClass\_3 (*C macro*), 893  
poePairSourcingClass\_4 (*C macro*), 893  
poePairSourcingClass\_4\_PlusType1Limited (*C macro*), 893  
poePairSourcingClass\_5\_4PairDualSignature (*C macro*), 893  
poePairSourcingClass\_5\_4PairSingleSignature (*C macro*), 893  
poePairSourcingClass\_6\_4PairSingleSignature (*C macro*), 893  
poePairSourcingClass\_7\_4PairSingleSignature (*C macro*), 893  
poePairSourcingClass\_8\_4PairSingleSignature (*C macro*), 893  
poePairSourcingClass\_Mismatch (*C macro*), 893  
poePairSourcingClass\_OverCurrent (*C macro*), 893  
poePairSourcingClass\_Unknown (*C macro*), 893  
poePairVoltage (*C macro*), 895  
poePowerMode (*C macro*), 892  
poePowerMode\_Auto (*C macro*), 892  
poePowerMode\_Off (*C macro*), 892  
poePowerMode\_PD (*C macro*), 892  
poePowerMode\_PSE (*C macro*), 892  
poePowerState (*C macro*), 892  
poePowerState\_Off (*C macro*), 892  
poePowerState\_PD (*C macro*), 892  
poePowerState\_PSE (*C macro*), 892  
poeTotalAccumulatedPower (*C macro*), 895  
poeTotalPower (*C macro*), 895  
Pointer (*class in brainstem.entity*), 610  
pointer\_getChar (*C++ function*), 1302  
pointer\_getInt (*C++ function*), 1303  
pointer\_getMode (*C++ function*), 1301  
pointer\_getOffset (*C++ function*), 1300



pointer\_getShort (*C++ function*), 1303  
 pointer\_getTransferStore (*C++ function*), 1301  
 pointer\_initiateTransferFromStore (*C++ function*), 1302  
 pointer\_initiateTransferToStore (*C++ function*), 1302  
 pointer\_setChar (*C++ function*), 1302  
 pointer\_setInt (*C++ function*), 1304  
 pointer\_setMode (*C++ function*), 1301  
 pointer\_setOffset (*C++ function*), 1300  
 pointer\_setShort (*C++ function*), 1303  
 pointer\_setTransferStore (*C++ function*), 1301  
 pointerChar (*C macro*), 896  
 pointerInt (*C macro*), 897  
 pointerMode (*C macro*), 896  
 pointerModeDefault (*C macro*), 896  
 pointerModeIncrement (*C macro*), 896  
 pointerModeStatic (*C macro*), 896  
 pointerOffset (*C macro*), 896  
 pointerShort (*C macro*), 897  
 pointerTransferFromStore (*C macro*), 897  
 pointerTransferStore (*C macro*), 896  
 pointerTransferToStore (*C macro*), 897  
 Port (*class in brainstem.entity*), 613  
 port\_getAllocatedPower (*C++ function*), 1318  
 port\_getAvailablePower (*C++ function*), 1317  
 port\_getCC1AccumulatedPower (*C++ function*), 1327  
 port\_getCC1Current (*C++ function*), 1326  
 port\_getCC1Enabled (*C++ function*), 1313  
 port\_getCC1State (*C++ function*), 1324  
 port\_getCC1Voltage (*C++ function*), 1326  
 port\_getCC2AccumulatedPower (*C++ function*), 1327  
 port\_getCC2Current (*C++ function*), 1326  
 port\_getCC2Enabled (*C++ function*), 1314  
 port\_getCC2State (*C++ function*), 1324  
 port\_getCC2Voltage (*C++ function*), 1326  
 port\_getCCCCurrentLimit (*C++ function*), 1320  
 port\_getCCEnabled (*C++ function*), 1313  
 port\_getCurrentLimit (*C++ function*), 1316  
 port\_getCurrentLimitMode (*C++ function*), 1317  
 port\_getDataEnabled (*C++ function*), 1306  
 port\_getDataHS1Enabled (*C++ function*), 1307  
 port\_getDataHS2Enabled (*C++ function*), 1308  
 port\_getDataHSEnabled (*C++ function*), 1307  
 port\_getDataHSRoutingBehavior (*C++ function*), 1320  
 port\_getDataRole (*C++ function*), 1311  
 port\_getDataSpeed (*C++ function*), 1315  
 port\_getDataSS1Enabled (*C++ function*), 1309  
 port\_getDataSS2Enabled (*C++ function*), 1309  
 port\_getDataSSEnabled (*C++ function*), 1308  
 port\_getDataSSRoutingBehavior (*C++ function*), 1321  
 port\_getEnabled (*C++ function*), 1306  
 port\_getErrors (*C++ function*), 1316  
 port\_getHSBoost (*C++ function*), 1324  
 port\_getMode (*C++ function*), 1315  
 port\_getName (*C++ function*), 1319  
 port\_getPowerEnabled (*C++ function*), 1310  
 port\_getPowerLimit (*C++ function*), 1318  
 port\_getPowerLimitMode (*C++ function*), 1318  
 port\_getPowerMode (*C++ function*), 1305  
 port\_getSBU1Voltage (*C++ function*), 1325  
 port\_getSBU2Voltage (*C++ function*), 1325  
 port\_getState (*C++ function*), 1315  
 port\_getVbusAccumulatedPower (*C++ function*), 1322  
 port\_getVbusCurrent (*C++ function*), 1304  
 port\_getVbusVoltage (*C++ function*), 1304  
 port\_getVconn1Enabled (*C++ function*), 1311  
 port\_getVconn2Enabled (*C++ function*), 1312  
 port\_getVconnAccumulatedPower (*C++ function*), 1322  
 port\_getVconnCurrent (*C++ function*), 1305

port\_getVconnEnabled (C++ function), 1311  
port\_getVconnVoltage (C++ function), 1305  
port\_getVoltageSetpoint (C++ function), 1314  
port\_resetVbusAccumulatedPower (C++ function), 1322  
port\_resetVconnAccumulatedPower (C++ function), 1323  
port\_setCC1AccumulatedPower (C++ function), 1327  
port\_setCC1Enabled (C++ function), 1313  
port\_setCC2AccumulatedPower (C++ function), 1327  
port\_setCC2Enabled (C++ function), 1314  
port\_setCCCurrentLimit (C++ function), 1320  
port\_setCCEnabled (C++ function), 1313  
port\_setCurrentLimit (C++ function), 1316  
port\_setCurrentLimitMode (C++ function), 1317  
port\_setDataEnabled (C++ function), 1306  
port\_setDataHS1Enabled (C++ function), 1308  
port\_setDataHS2Enabled (C++ function), 1308  
port\_setDataHSEnabled (C++ function), 1307  
port\_setDataHSRoutingBehavior (C++ function), 1321  
port\_setDataSS1Enabled (C++ function), 1309  
port\_setDataSS2Enabled (C++ function), 1310  
port\_setDataSSEnabled (C++ function), 1309  
port\_setDataSSRoutingBehavior (C++ function), 1321  
port\_setEnabled (C++ function), 1306  
port\_setHSBoost (C++ function), 1323  
port\_setMode (C++ function), 1316  
port\_setName (C++ function), 1319  
port\_setPowerEnabled (C++ function), 1310  
port\_setPowerLimit (C++ function), 1318  
port\_setPowerLimitMode (C++ function), 1319  
port\_setPowerMode (C++ function), 1305  
port\_setVbusAccumulatedPower (C++ function), 1322  
port\_setVconn1Enabled (C++ function), 1312  
port\_setVconn2Enabled (C++ function), 1312  
port\_setVconnAccumulatedPower (C++ function), 1323  
port\_setVconnEnabled (C++ function), 1311  
port\_setVoltageSetpoint (C++ function), 1314  
PORT\_SPEED (C++ enum), 959  
PORT\_SPEED::kPORT\_SPEED\_FULL (C++ enumerator), 959  
PORT\_SPEED::kPORT\_SPEED\_HIGH (C++ enumerator), 959  
PORT\_SPEED::kPORT\_SPEED\_LOW (C++ enumerator), 959  
PORT\_SPEED::kPORT\_SPEED\_SUPER (C++ enumerator), 959  
PORT\_SPEED::kPORT\_SPEED\_SUPER\_PLUS (C++ enumerator), 959  
PORT\_SPEED::kPORT\_SPEED\_UNKNOWN (C++ enumerator), 959  
portAllocatedPower (C macro), 904  
portAvailablePower (C macro), 900  
portCC1AccumulatedPower (C macro), 907  
portCC1Current (C macro), 907  
portCC1Enabled (C macro), 898  
portCC1State (C macro), 905  
portCC1State\_Invalid (C macro), 905  
portCC1State\_Managed (C macro), 906  
portCC1State\_None (C macro), 905  
portCC1State\_Ra (C macro), 906  
portCC1State\_Rd (C macro), 906  
portCC1State\_Rp1p5 (C macro), 905  
portCC1State\_Rp3p0 (C macro), 905  
portCC1State\_RpDefault (C macro), 905  
portCC1State\_Unknown (C macro), 906  
portCC1Voltage (C macro), 906  
portCC2AccumulatedPower (C macro), 907  
portCC2Current (C macro), 907  
portCC2Enabled (C macro), 898  
portCC2State (C macro), 906  
portCC2State\_Invalid (C macro), 906  
portCC2State\_Managed (C macro), 906  
portCC2State\_None (C macro), 906  
portCC2State\_Ra (C macro), 906  
portCC2State\_Rd (C macro), 906

portCC2State\_Rp1p5 (*C macro*), 906  
 portCC2State\_Rp3p0 (*C macro*), 906  
 portCC2State\_RpDefault (*C macro*), 906  
 portCC2State\_Unknown (*C macro*), 906  
 portCC2Voltage (*C macro*), 907  
 portCCCCurrentLimit (*C macro*), 900  
 portCCCCurrentLimit\_1p5 (*C macro*), 900  
 portCCCCurrentLimit\_3p0 (*C macro*), 900  
 portCCCCurrentLimit\_Default (*C macro*), 900  
 portCCCCurrentLimit\_None (*C macro*), 900  
 portCCEnabled (*C macro*), 898  
 portCurrentLimit (*C macro*), 900  
 portCurrentLimitMode (*C macro*), 900  
 portDataEnabled (*C macro*), 898  
 portDataHS1Enabled (*C macro*), 898  
 portDataHS2Enabled (*C macro*), 898  
 portDataHSEnabled (*C macro*), 898  
 portDataHSRoutingBehavior (*C macro*), 904  
 portDataHSRoutingBehavior\_FollowCC (*C macro*), 904  
 portDataHSRoutingBehavior\_Shorted (*C macro*), 904  
 portDataHSRoutingBehavior\_Side1 (*C macro*), 904  
 portDataHSRoutingBehavior\_Side2 (*C macro*), 904  
 portDataRole (*C macro*), 901  
 portDataRole\_Control\_Value (*C macro*), 901  
 portDataRole\_Disabled\_Value (*C macro*), 901  
 portDataRole\_Downstream\_Value (*C macro*), 901  
 portDataRole\_Upstream\_Value (*C macro*), 901  
 portDataSpeed (*C macro*), 901  
 portDataSpeed\_Connected\_2p0\_Bit (*C macro*), 902  
 portDataSpeed\_Connected\_3p0\_Bit (*C macro*), 902  
 portDataSpeed\_fs\_12M\_Bit (*C macro*), 901  
 portDataSpeed\_hs\_480M\_Bit (*C macro*), 901  
 portDataSpeed\_ls\_1p5M\_Bit (*C macro*), 901  
 portDataSpeed\_ss\_10G\_Bit (*C macro*), 902  
 portDataSpeed\_ss\_5G\_Bit (*C macro*), 901  
 portDataSS1Enabled (*C macro*), 898  
 portDataSS2Enabled (*C macro*), 898  
 portDataSSEnabled (*C macro*), 898  
 portDataSSRoutingBehavior (*C macro*), 904  
 portDataSSRoutingBehavior\_FollowCC (*C macro*), 904  
 portDataSSRoutingBehavior\_Side1 (*C macro*), 904  
 portDataSSRoutingBehavior\_Side2 (*C macro*), 904  
 portErrors (*C macro*), 900  
 portHSBoost (*C macro*), 904  
 portHSBoost\_m5Percent (*C macro*), 905  
 portHSBoost\_Nominal (*C macro*), 905  
 portHSBoost\_p10Percent (*C macro*), 905  
 portHSBoost\_p15Percent (*C macro*), 905  
 portHSBoost\_p20Percent (*C macro*), 905  
 portHSBoost\_p25Percent (*C macro*), 905  
 portHSBoost\_p30Percent (*C macro*), 905  
 portHSBoost\_p5Percent (*C macro*), 905  
 portMapping\_getDownstreamDevices (*C++ function*), 1416  
 portName (*C macro*), 900  
 portNumberOfOptions (*C macro*), 907  
 portPortEnabled (*C macro*), 897  
 portPortMode (*C macro*), 902  
 portPortMode\_CC1Enabled\_Bit (*C macro*), 902  
 portPortMode\_CC2Enabled\_Bit (*C macro*), 902  
 portPortMode\_CCFlipEnabled\_Bit (*C macro*), 903  
 portPortMode\_cdp\_dcp\_Value (*C macro*), 903  
 portPortMode\_HS1Enabled\_Bit (*C macro*), 902  
 portPortMode\_HS2Enabled\_Bit (*C macro*), 902  
 portPortMode\_HSFlipEnabled\_Bit (*C macro*), 903  
 portPortMode\_KACEEnabled\_Bit (*C macro*), 903  
 portPortMode\_portPowerMode\_Mask (*C macro*), 903  
 portPortMode\_portPowerMode\_none\_Value (*C macro*), 903  
 portPortMode\_portPowerMode\_Offset (*C macro*), 903

portPortMode\_portPowerMode\_pd\_Value (*C macro*), 903  
portPortMode\_portPowerMode\_ps\_Value (*C macro*), 903  
portPortMode\_portPowerMode\_qc\_Value (*C macro*), 903  
portPortMode\_portPowerMode\_sdp\_Value (*C macro*), 903  
portPortMode\_portPowerMode\_usbcb\_Value (*C macro*), 903  
portPortMode\_powerEnabled\_Bit (*C macro*), 902  
portPortMode\_SBU1Enabled\_Bit (*C macro*), 902  
portPortMode\_SBU2Enabled\_Bit (*C macro*), 902  
portPortMode\_SBUFlipEnabled\_Bit (*C macro*), 903  
portPortMode\_SS1Enabled\_Bit (*C macro*), 902  
portPortMode\_SS2Enabled\_Bit (*C macro*), 902  
portPortMode\_SSFlipEnabled\_Bit (*C macro*), 903  
portPortMode\_Vconn1Enabled\_Bit (*C macro*), 902  
portPortMode\_Vconn2Enabled\_Bit (*C macro*), 902  
portPortState (*C macro*), 898  
portPortState\_CC1Enabled\_Bit (*C macro*), 899  
portPortState\_CC2Enabled\_Bit (*C macro*), 899  
portPortState\_CC\_Flipped\_Bit (*C macro*), 899  
portPortState\_HS1Enabled\_Bit (*C macro*), 899  
portPortState\_HS2Enabled\_Bit (*C macro*), 899  
portPortState\_HS\_Flipped\_Bit (*C macro*), 899  
portPortState\_KACEEnabled\_Bit (*C macro*), 899  
portPortState\_powerEnabled\_Bit (*C macro*), 898  
portPortState\_SBU1Enabled\_Bit (*C macro*), 899  
portPortState\_SBU2Enabled\_Bit (*C macro*), 899  
portPortState\_SBU\_Flipped\_Bit (*C macro*), 899  
portPortState\_SS1Enabled\_Bit (*C macro*), 899  
portPortState\_SS2Enabled\_Bit (*C macro*), 899  
portPortState\_SS\_Flipped\_Bit (*C macro*), 899  
portPortState\_Vconn1Enabled\_Bit (*C macro*), 899  
portPortState\_Vconn2Enabled\_Bit (*C macro*), 899  
portPowerEnabled (*C macro*), 897  
portPowerLimit (*C macro*), 900  
portPowerLimitMode (*C macro*), 900  
portPowerMode (*C macro*), 900  
portPowerMode\_cdp\_dcp\_Value (*C macro*), 901  
portPowerMode\_none\_Value (*C macro*), 900  
portPowerMode\_pd\_Value (*C macro*), 901  
portPowerMode\_ps\_Value (*C macro*), 901  
portPowerMode\_qc\_Value (*C macro*), 901  
portPowerMode\_sdp\_Value (*C macro*), 900  
portPowerMode\_usbcb\_Value (*C macro*), 901  
portResetEntityToFactoryDefaults (*C macro*), 905  
portResetVbusAccumulatedPower (*C macro*), 904  
portResetVconnAccumulatedPower (*C macro*), 904  
portSBU1Voltage (*C macro*), 907  
portSBU2Voltage (*C macro*), 907  
portVbusAccumulatedPower (*C macro*), 904  
portVbusCurrent (*C macro*), 897  
portVbusVoltage (*C macro*), 897  
portVconn1Enabled (*C macro*), 898  
portVconn2Enabled (*C macro*), 898  
portVconnAccumulatedPower (*C macro*), 904  
portVconnCurrent (*C macro*), 897  
portVconnEnabled (*C macro*), 898  
portVconnVoltage (*C macro*), 897  
portVoltageSetpoint (*C macro*), 903  
PowerDelivery (*class in brainstem.entity*), 633  
powerdelivery\_getAttachTimeElapsed (*C++ function*), 1333  
powerdelivery\_getCableCurrentMax (*C++ function*), 1336  
powerdelivery\_getCableOrientation (*C++ function*), 1337  
powerdelivery\_getCableSpeedMax (*C++ function*), 1336  
powerdelivery\_getCableType (*C++ function*), 1337  
powerdelivery\_getCableVoltageMax (*C++ function*), 1335  
powerdelivery\_getConnectionState (*C++ function*), 1328  
powerdelivery\_getDataRoleCapabilities (*C++ function*), 1335  
powerdelivery\_getFastRoleSwapCurrent (*C++ function*), 1340  
powerdelivery\_getFlagMode (*C++ function*), 1339

powerdelivery\_getLinkState (*C++ function*), 1333  
 powerdelivery\_getNumberOfPowerDataObjects (*C++ function*), 1328  
 powerdelivery\_getOverride (*C++ function*), 1338  
 powerdelivery\_getPeakCurrentConfiguration (*C++ function*), 1340  
 powerdelivery\_getPowerDataObject (*C++ function*), 1329  
 powerdelivery\_getPowerDataObjectEnabled (*C++ function*), 1330  
 powerdelivery\_getPowerDataObjectEnabledList (*C++ function*), 1331  
 powerdelivery\_getPowerDataObjectList (*C++ function*), 1330  
 powerdelivery\_getPowerRole (*C++ function*), 1334  
 powerdelivery\_getPowerRoleCapabilities (*C++ function*), 1333  
 powerdelivery\_getPowerRolePreferred (*C++ function*), 1334  
 powerdelivery\_getRequestDataObject (*C++ function*), 1332  
 powerdelivery\_packDataObjectAttributes (*C++ function*), 1341  
 powerdelivery\_request (*C++ function*), 1337  
 powerdelivery\_requestStatus (*C++ function*), 1338  
 powerdelivery\_resetPowerDataObjectToDefault (*C++ function*), 1330  
 powerdelivery\_setFastRoleSwapCurrent (*C++ function*), 1341  
 powerdelivery\_setFlagMode (*C++ function*), 1339  
 powerdelivery\_setOverride (*C++ function*), 1338  
 powerdelivery\_setPeakCurrentConfiguration (*C++ function*), 1340  
 powerdelivery\_setPowerDataObject (*C++ function*), 1329  
 powerdelivery\_setPowerDataObjectEnabled (*C++ function*), 1331  
 powerdelivery\_setPowerRole (*C++ function*), 1334  
 powerdelivery\_setPowerRolePreferred (*C++ function*), 1335  
 powerdelivery\_setRequestDataObject (*C++ function*), 1332  
 powerdelivery\_unpackDataObjectAttributes (*C++ function*), 1342  
 powerdeliveryAttachTimeElapsed (*C macro*), 910  
 powerdeliveryCableCurrentMax (*C macro*), 910  
 powerdeliveryCableOrientation (*C macro*), 911  
 powerdeliveryCableSpeedMax (*C macro*), 911  
 powerdeliveryCableType (*C macro*), 911  
 powerdeliveryCableVoltageMax (*C macro*), 910  
 powerdeliveryConnectionState (*C macro*), 908  
 powerdeliveryDataRoleCapabilities (*C macro*), 912  
 powerdeliveryFastRoleSwapCurrent (*C macro*), 912  
 powerdeliveryFlagMode (*C macro*), 914  
 powerdeliveryLinkState (*C macro*), 908  
 powerdeliveryLogEnable (*C macro*), 914  
 powerdeliveryLogEvent (*C macro*), 915  
 powerdeliveryLogPacket (*C macro*), 915  
 powerdeliveryNumberOfOptions (*C macro*), 916  
 powerdeliveryNumberOfPowerDataObjects (*C macro*), 908  
 powerdeliveryOverride (*C macro*), 912  
 powerdeliveryPartnerLocal (*C macro*), 916  
 powerdeliveryPartnerRemote (*C macro*), 916  
 powerdeliveryPeakCurrentConfiguration (*C macro*), 912  
 powerdeliveryPowerDataObject (*C macro*), 908  
 powerdeliveryPowerDataObjectEnabled (*C macro*), 908  
 powerdeliveryPowerDataObjectEnabledList (*C macro*), 908  
 powerdeliveryPowerDataObjectList (*C macro*), 908  
 powerdeliveryPowerRole (*C macro*), 911  
 powerdeliveryPowerRoleCapabilities (*C macro*), 911  
 powerdeliveryPowerRoleDisabled (*C macro*), 916  
 powerdeliveryPowerRolePreferred (*C macro*), 912  
 powerdeliveryPowerRoleSink (*C macro*), 916  
 powerdeliveryPowerRoleSource (*C macro*), 916  
 powerdeliveryPowerRoleSourceSink (*C macro*), 916  
 powerdeliveryRequestCommand (*C macro*), 913  
 powerdeliveryRequestDataObject (*C macro*), 908  
 powerdeliveryRequestStatus (*C macro*), 916  
 powerdeliveryRequestStatus (*C macro*), 914  
 powerdeliveryResetPowerDataObjectToDefault (*C macro*), 910  
 powerdeliveryVDM (*C macro*), 916

## R

Rail (*class in brainstem.entity*), 648  
 rail\_clearFaults (*C++ function*), 1353

`rail_getCurrent` (C++ function), 1344  
`rail_getCurrentLimit` (C++ function), 1345  
`rail_getCurrentSetpoint` (C++ function), 1345  
`rail_getEnable` (C++ function), 1346  
`rail_getKelvinSensingEnable` (C++ function), 1351  
`rail_getKelvinSensingState` (C++ function), 1352  
`rail_getOperationalMode` (C++ function), 1352  
`rail_getOperationalState` (C++ function), 1352  
`rail_getPower` (C++ function), 1349  
`rail_getPowerLimit` (C++ function), 1350  
`rail_getPowerSetpoint` (C++ function), 1349  
`rail_getResistance` (C++ function), 1350  
`rail_getResistanceSetpoint` (C++ function), 1351  
`rail_getTemperature` (C++ function), 1346  
`rail_getVoltage` (C++ function), 1347  
`rail_getVoltageMaxLimit` (C++ function), 1348  
`rail_getVoltageMinLimit` (C++ function), 1348  
`rail_getVoltageSetpoint` (C++ function), 1347  
`rail_setCurrentLimit` (C++ function), 1345  
`rail_setCurrentSetpoint` (C++ function), 1344  
`rail_setEnable` (C++ function), 1346  
`rail_setKelvinSensingEnable` (C++ function), 1351  
`rail_setOperationalMode` (C++ function), 1352  
`rail_setPowerLimit` (C++ function), 1350  
`rail_setPowerSetpoint` (C++ function), 1349  
`rail_setResistanceSetpoint` (C++ function), 1350  
`rail_setVoltageMaxLimit` (C++ function), 1348  
`rail_setVoltageMinLimit` (C++ function), 1348  
`rail_setVoltageSetpoint` (C++ function), 1347  
`railClearFaults` (C macro), 920  
`railCurrent` (C macro), 917  
`railCurrentLimit` (C macro), 917  
`railCurrentSetpoint` (C macro), 919  
`railEnable` (C macro), 917  
`railFactoryReserved` (C macro), 920  
`railFactoryReserved2` (C macro), 920  
`railKelvinSensingEnable` (C macro), 917  
`railKelvinSensingState` (C macro), 917  
`railNumberOfOptions` (C macro), 920  
`railOperationalMode` (C macro), 917  
`railOperationalMode_HardwareConfiguration_Offset` (C macro), 917  
`railOperationalMode_Mode_Offset` (C macro), 918  
`railOperationalModeAuto_Value` (C macro), 917  
`railOperationalModeConstantCurrent_Value` (C macro), 918  
`railOperationalModeConstantPower_Value` (C macro), 918  
`railOperationalModeConstantResistance_Value` (C macro), 918  
`railOperationalModeConstantVoltage_Value` (C macro), 918  
`railOperationalModeFactoryReserved_Value` (C macro), 918  
`railOperationalModeLinear_Value` (C macro), 917  
`railOperationalModeSwitcher_Value` (C macro), 917  
`railOperationalModeSwitcherLinear_Value` (C macro), 917  
`railOperationalState` (C macro), 918  
`railOperationalState_Enabled_Bit` (C macro), 918  
`railOperationalState_Fault_Bit` (C macro), 918  
`railOperationalState_HardwareConfiguration_Offset` (C macro), 918  
`railOperationalState_Initializing_Bit` (C macro), 918  
`railOperationalStateConstantCurrent_Value` (C macro), 919  
`railOperationalStateConstantPower_Value` (C macro), 919  
`railOperationalStateConstantResistance_Value` (C macro), 919  
`railOperationalStateConstantVoltage_Value` (C macro), 919  
`railOperationalStateLinear_Value` (C macro), 918  
`railOperationalStateOperatingMode_Offset` (C macro), 919  
`railOperationalStateOverCurrentFault_Bit` (C macro), 919  
`railOperationalStateOverPowerFault_Bit` (C macro), 919  
`railOperationalStateOverTemperatureFault_Bit` (C macro), 919  
`railOperationalStateOverVoltageFault_Bit` (C macro), 919  
`railOperationalStateReverseCurrentFault_Bit` (C macro), 919  
`railOperationalStateReversePolarityFault_Bit` (C macro), 919



railOperationalStateSwitcher\_Value (C macro), 918  
 railOperationalStateSwitcherLinear\_Value (C macro), 918  
 railOperationalStateUnderVoltageFault\_Bit (C macro), 919  
 railPower (C macro), 920  
 railPowerLimit (C macro), 920  
 railPowerSetpoint (C macro), 920  
 railResistance (C macro), 920  
 railResistanceSetpoint (C macro), 920  
 railTemperature (C macro), 917  
 railValue (C macro), 917  
 railVoltage (C macro), 917  
 railVoltageMaxLimit (C macro), 920  
 railVoltageMinLimit (C macro), 919  
 railVoltageSetpoint (C macro), 919  
 RCServo (class in brainstem.entity), 647  
 rcservo\_getEnable (C++ function), 1343  
 rcservo\_getPosition (C++ function), 1343  
 rcservo\_getReverse (C++ function), 1344  
 rcservo\_setEnable (C++ function), 1342  
 rcservo\_setPosition (C++ function), 1343  
 rcservo\_setReverse (C++ function), 1343  
 read () (brainstem.entity.I2C method), 599  
 reconnect () (brainstem.module.Module method), 571  
 registerOptionCallback () (brainstem.Entity\_Entity.Entity method), 564  
 Relay (class in brainstem.entity), 656  
 relay\_getEnable (C++ function), 1353  
 relay\_getVoltage (C++ function), 1354  
 relay\_setEnable (C++ function), 1353  
 relayEnable (C macro), 921  
 relayNumberOfOptions (C macro), 921  
 relayVoltage (C macro), 921  
 request () (brainstem.entity.PowerDelivery method), 642  
 requestStatus () (brainstem.entity.PowerDelivery method), 643  
 reset () (brainstem.entity.System method), 671  
 resetDeviceToFactoryDefaults () (brainstem.entity.System method), 671  
 resetEntityToFactoryDefaults () (brainstem.Entity\_Entity.Entity method), 565  
 resetPowerDataObjectToDefault () (brainstem.entity.PowerDelivery method), 643  
 resetVbusAccumulatedPower () (brainstem.entity.Port method), 626  
 resetVconnAccumulatedPower () (brainstem.entity.Port method), 627  
 Result (class in brainstem.result), 574  
 routeToMe () (brainstem.entity.System method), 671

## S

save () (brainstem.entity.System method), 672  
 saveEntity () (brainstem.Entity\_Entity.Entity method), 565  
 SERIAL (brainstem.link.Spec attribute), 567  
 servoEnable (C macro), 922  
 servoNumberOfOptions (C macro), 922  
 servoPosition (C macro), 922  
 servoReverse (C macro), 922  
 set\_UEI16 () (brainstem.Entity\_Entity.Entity method), 565  
 set\_UEI16\_with\_subindex () (brainstem.Entity\_Entity.Entity method), 565  
 set\_UEI32 () (brainstem.Entity\_Entity.Entity method), 565  
 set\_UEI32\_with\_subindex () (brainstem.Entity\_Entity.Entity method), 565  
 set\_UEI8 () (brainstem.Entity\_Entity.Entity method), 566  
 set\_UEI8\_with\_subindex () (brainstem.Entity\_Entity.Entity method), 566  
 set\_UEIBytes () (brainstem.Entity\_Entity.Entity method), 566  
 setAltModeConfig () (brainstem.entity.USB method), 690  
 setBaudRate () (brainstem.entity.UART method), 680  
 setBootSlot () (brainstem.entity.System method), 672  
 setBulkCaptureNumberOfSamples () (brainstem.entity.Analog method), 580  
 setBulkCaptureSampleRate () (brainstem.entity.Analog method), 581  
 setCableFlip () (brainstem.entity.USB method), 691  
 setCC1AccumulatedPower () (brainstem.entity.Port method), 627  
 setCC1Enable () (brainstem.entity.USB method), 690  
 setCC1Enabled () (brainstem.entity.Port method), 627  
 setCC2AccumulatedPower () (brainstem.entity.Port method), 627

setCC2Enable() (*brainstem.entity.USB method*), 690  
setCC2Enabled() (*brainstem.entity.Port method*), 627  
setCCCurrentLimit() (*brainstem.entity.Port method*), 628  
setCCEnabled() (*brainstem.entity.Port method*), 628  
setChannel() (*brainstem.entity.Mux method*), 602  
setChar() (*brainstem.entity.Pointer method*), 612  
setConfig() (*brainstem.module.Module method*), 571  
setConfiguration() (*brainstem.entity.Analog method*), 581  
setConfiguration() (*brainstem.entity.Digital method*), 587  
setConfiguration() (*brainstem.entity.Mux method*), 602  
setConnectMode() (*brainstem.entity.USB method*), 691  
setCurrentLimit() (*brainstem.entity.Port method*), 628  
setCurrentLimit() (*brainstem.entity.Rail method*), 654  
setCurrentLimitMode() (*brainstem.entity.Port method*), 628  
setCurrentSetpoint() (*brainstem.entity.Rail method*), 654  
setDataBits() (*brainstem.entity.UART method*), 680  
setDataDisable() (*brainstem.entity.USB method*), 691  
setDataEnable() (*brainstem.entity.USB method*), 692  
setDataEnabled() (*brainstem.entity.Port method*), 628  
setDataHS1Enabled() (*brainstem.entity.Port method*), 629  
setDataHS2Enabled() (*brainstem.entity.Port method*), 629  
setDataHSEnabled() (*brainstem.entity.Port method*), 629  
setDataHSMaxDataRate() (*brainstem.entity.USBSystem method*), 700  
setDataHSRoutingBehavior() (*brainstem.entity.Port method*), 629  
setDataRoleBehavior() (*brainstem.entity.USBSystem method*), 700  
setDataRoleBehaviorConfig() (*brainstem.entity.USBSystem method*), 700  
setDataSS1Enabled() (*brainstem.entity.Port method*), 629  
setDataSS2Enabled() (*brainstem.entity.Port method*), 630  
setDataSSEnabled() (*brainstem.entity.Port method*), 630  
setDataSSMaxDataRate() (*brainstem.entity.USBSystem method*), 700  
setDataSSRoutingBehavior() (*brainstem.entity.Port method*), 630  
setDay() (*brainstem.entity.Clock method*), 584  
setDownstreamBoostMode() (*brainstem.entity.USB method*), 692  
setEnabled() (*brainstem.entity.Analog method*), 581  
setEnabled() (*brainstem.entity.Mux method*), 602  
setEnabled() (*brainstem.entity.Rail method*), 654  
setEnabled() (*brainstem.entity.RCServo method*), 648  
setEnabled() (*brainstem.entity.Relay method*), 657  
setEnabled() (*brainstem.entity.Signal method*), 658  
setEnabled() (*brainstem.entity.UART method*), 680  
setEnabled() (*brainstem.entity.Ethernet method*), 594  
setEnabled() (*brainstem.entity.Port method*), 630  
setEnabled() (*brainstem.pd\_channel\_logger.PDChannelLogger method*), 574  
setEnabledList() (*brainstem.entity.USBSystem method*), 700  
setEnumerationDelay() (*brainstem.entity.USB method*), 692  
setEnumerationDelay() (*brainstem.entity.USBSystem method*), 701  
setExpiration() (*brainstem.entity.Timer method*), 676  
setFastRoleSwapCurrent() (*brainstem.entity.PowerDelivery method*), 643  
setFlagMode() (*brainstem.entity.PowerDelivery method*), 644  
setFlowControl() (*brainstem.entity.UART method*), 680  
setHBInterval() (*brainstem.entity.System method*), 672  
setHiSpeedDataDisable() (*brainstem.entity.USB method*), 692  
setHiSpeedDataEnable() (*brainstem.entity.USB method*), 692  
setHostname() (*brainstem.entity.Ethernet method*), 594  
setHour() (*brainstem.entity.Clock method*), 585  
setHSBoost() (*brainstem.entity.Port method*), 630  
setHubMode() (*brainstem.entity.USB method*), 693  
setInputPowerBehavior() (*brainstem.entity.System method*), 672  
setInputPowerBehaviorConfig() (*brainstem.entity.System method*), 673  
setInt() (*brainstem.entity.Pointer method*), 612  
setInterfacePort() (*brainstem.entity.Ethernet method*), 594  
setInvert() (*brainstem.entity.Signal method*), 659  
setKelvinSensingEnable() (*brainstem.entity.Rail method*), 654  
setLED() (*brainstem.entity.System method*), 673  
setLEDMaxBrightness() (*brainstem.entity.System method*), 673  
setLinkChannel() (*brainstem.entity.Digital method*), 588  
setLinkChannel() (*brainstem.entity.UART method*), 681  
setLinkInterface() (*brainstem.entity.System method*), 673



setLinkRole() (*brainstem.entity.HDBaseT method*), 599  
 setMinute() (*brainstem.entity.Clock method*), 585  
 setMode() (*brainstem.entity.Pointer method*), 612  
 setMode() (*brainstem.entity.Port method*), 631  
 setMode() (*brainstem.entity.Timer method*), 676  
 setModeList() (*brainstem.entity.USBSystem method*), 701  
 setModuleAddress() (*brainstem.module.Module method*), 571  
 setModuleSoftwareOffset() (*brainstem.entity.System method*), 674  
 setMonth() (*brainstem.entity.Clock method*), 585  
 setName() (*brainstem.entity.Port method*), 631  
 setName() (*brainstem.entity.System method*), 674  
 setNetworkConfiguration() (*brainstem.entity.Ethernet method*), 594  
 setNetworkingMode() (*brainstem.module.Module method*), 571  
 setOffset() (*brainstem.entity.Pointer method*), 612  
 setOperationalMode() (*brainstem.entity.Rail method*), 655  
 setOverride() (*brainstem.entity.PowerDelivery method*), 644  
 setOverride() (*brainstem.entity.USBSystem method*), 701  
 setPairAccumulatedPower() (*brainstem.entity.PoE method*), 608  
 setPairEnabled() (*brainstem.entity.PoE method*), 608  
 setPairSourcingClass() (*brainstem.entity.PoE method*), 609  
 setParity() (*brainstem.entity.UART method*), 681  
 setPeakCurrentConfiguration() (*brainstem.entity.PowerDelivery method*), 644  
 setPortCurrentLimit() (*brainstem.entity.USB method*), 693  
 setPortDisable() (*brainstem.entity.USB method*), 693  
 setPortEnable() (*brainstem.entity.USB method*), 693  
 setPortMode() (*brainstem.entity.USB method*), 693  
 setPosition() (*brainstem.entity.RCServo method*), 648  
 setPowerBehavior() (*brainstem.entity.USBSystem method*), 701  
 setPowerBehaviorConfig() (*brainstem.entity.USBSystem method*), 702  
 setPowerDataObject() (*brainstem.entity.PowerDelivery method*), 645  
 setPowerDataObjectEnabled() (*brainstem.entity.PowerDelivery method*), 645  
 setPowerDisable() (*brainstem.entity.USB method*), 694  
 setPowerEnable() (*brainstem.entity.USB method*), 694  
 setPowerEnabled() (*brainstem.entity.Port method*), 631  
 setPowerLimit() (*brainstem.entity.Port method*), 631  
 setPowerLimit() (*brainstem.entity.Rail method*), 655  
 setPowerLimitMax() (*brainstem.entity.System method*), 674  
 setPowerLimitMode() (*brainstem.entity.Port method*), 631  
 setPowerMode() (*brainstem.entity.PoE method*), 609  
 setPowerMode() (*brainstem.entity.Port method*), 632  
 setPowerRole() (*brainstem.entity.PowerDelivery method*), 645  
 setPowerRolePreferred() (*brainstem.entity.PowerDelivery method*), 646  
 setPowerSetpoint() (*brainstem.entity.Rail method*), 655  
 setProtocol() (*brainstem.entity.UART method*), 681  
 setPullup() (*brainstem.entity.I2C method*), 600  
 setRange() (*brainstem.entity.Analog method*), 581  
 setReceiverConfig() (*brainstem.entity.Equalizer method*), 589  
 setRequestDataObject() (*brainstem.entity.PowerDelivery method*), 646  
 setResistanceSetpoint() (*brainstem.entity.Rail method*), 655  
 setReverse() (*brainstem.entity.RCServo method*), 648  
 setRouter() (*brainstem.entity.System method*), 674  
 setSBUEnable() (*brainstem.entity.USB method*), 694  
 setSecond() (*brainstem.entity.Clock method*), 585  
 setSelectorMode() (*brainstem.entity.USBSystem method*), 702  
 setShort() (*brainstem.entity.Pointer method*), 612  
 setSlotLocked() (*brainstem.entity.Store method*), 661  
 setSpeed() (*brainstem.entity.I2C method*), 600  
 setSplitMode() (*brainstem.entity.Mux method*), 603  
 setState() (*brainstem.entity.Digital method*), 588  
 setStateAll() (*brainstem.entity.Digital method*), 588  
 setStaticIPv4Address() (*brainstem.entity.Ethernet method*), 594  
 setStaticIPv4DNSAddress() (*brainstem.entity.Ethernet method*), 595  
 setStaticIPv4Gateway() (*brainstem.entity.Ethernet method*), 595  
 setStaticIPv4Netmask() (*brainstem.entity.Ethernet method*), 595  
 setStopBits() (*brainstem.entity.UART method*), 682  
 setStreamEnabled() (*brainstem.Entity\_Entity.Entity method*), 565  
 setSuperSpeedDataDisable() (*brainstem.entity.USB method*), 694  
 setSuperSpeedDataEnable() (*brainstem.entity.USB method*), 694

setT2Time() (*brainstem.entity.Signal method*), 659  
setT3Time() (*brainstem.entity.Signal method*), 659  
setTotalAccumulatedPower() (*brainstem.entity.PoE method*), 609  
setTransferStore() (*brainstem.entity.Pointer method*), 613  
setTransmitterConfig() (*brainstem.entity.Equalizer method*), 589  
setUpstream() (*brainstem.entity.USBSystem method*), 702  
setUpstreamBoostMode() (*brainstem.entity.USB method*), 695  
setUpstreamHS() (*brainstem.entity.USBSystem method*), 702  
setUpstreamMode() (*brainstem.entity.USB method*), 695  
setUpstreamSS() (*brainstem.entity.USBSystem method*), 702  
setValue() (*brainstem.entity.Analog method*), 581  
setValue() (*brainstem.entity.Digital method*), 588  
setVbusAccumulatedPower() (*brainstem.entity.Port method*), 632  
setVconn1Enabled() (*brainstem.entity.Port method*), 632  
setVconn2Enabled() (*brainstem.entity.Port method*), 632  
setVconnAccumulatedPower() (*brainstem.entity.Port method*), 632  
setVconnEnabled() (*brainstem.entity.Port method*), 633  
setVoltage() (*brainstem.entity.Analog method*), 582  
setVoltageMaxLimit() (*brainstem.entity.Rail method*), 656  
setVoltageMinLimit() (*brainstem.entity.Rail method*), 656  
setVoltageSetpoint() (*brainstem.entity.Port method*), 633  
setVoltageSetpoint() (*brainstem.entity.Rail method*), 656  
setYear() (*brainstem.entity.Clock method*), 585  
Signal (*class in brainstem.entity*), 657  
signal\_getEnable (C++ function), 1354  
signal\_getInvert (C++ function), 1355  
signal\_getT2Time (C++ function), 1356  
signal\_getT3Time (C++ function), 1356  
signal\_setEnable (C++ function), 1354  
signal\_setInvert (C++ function), 1355  
signal\_setT2Time (C++ function), 1356  
signal\_setT3Time (C++ function), 1355  
signalEnable (C macro), 922  
signalInvert (C macro), 922  
signalNumberOfOptions (C macro), 922  
signalT2Time (C macro), 922  
signalT3Time (C macro), 922  
slotCapacity (C macro), 923  
slotClose (C macro), 923  
slotDisable() (*brainstem.entity.Store method*), 661  
slotEnable() (*brainstem.entity.Store method*), 661  
slotNumberOfOptions (C macro), 923  
slotOpenRead (C macro), 923  
slotOpenWrite (C macro), 923  
slotRead (C macro), 923  
slotSeek (C macro), 923  
slotSize (C macro), 923  
slotWrite (C macro), 923  
Spec (*class in brainstem.link*), 566  
Status (*class in brainstem.link*), 567  
Store (*class in brainstem.entity*), 659  
store\_getSlotCapacity (C++ function), 1358  
store\_getSlotLocked (C++ function), 1359  
store\_getSlotSize (C++ function), 1359  
store\_getSlotState (C++ function), 1357  
store\_loadSlot (C++ function), 1357  
store\_setSlotLocked (C++ function), 1359  
store\_slotDisable (C++ function), 1358  
store\_slotEnable (C++ function), 1358  
store\_unloadSlot (C++ function), 1357  
storeCloseSlot (C macro), 924  
storeEEPROMStore (C macro), 925  
storeInternalStore (C macro), 925  
storeLock (C macro), 924  
storeMaxStoreIndex (C macro), 925  
storeNumberOfOptions (C macro), 924  
storeRAMStore (C macro), 925  
storeReadSlot (C macro), 924

storeSDStore (*C macro*), 925  
 storeSlotDisable (*C macro*), 924  
 storeSlotEnable (*C macro*), 924  
 storeSlotState (*C macro*), 924  
 storeWriteSlot (*C macro*), 924  
 streamCapacity (*C macro*), 925  
 streamDisable (*C macro*), 925  
 streamEnable (*C macro*), 925  
 streamNumberOfOptions (*C macro*), 925  
 StreamStatusEntry (*class in brainstem.link*), 567  
 StreamStatusEntry\_CCA (*C++ struct*), 1411  
 StreamStatusEntry\_CCA::key (*C++ member*), 1411  
 StreamStatusEntry\_CCA::value (*C++ member*), 1411  
 subClassQuantity() (*brainstem.module.Module method*), 571  
 System (*class in brainstem.entity*), 662  
 system\_getBootSlot (*C++ function*), 1363  
 system\_getBuild (*C++ function*), 1364  
 system\_getErrors (*C++ function*), 1374  
 system\_getHardwareVersion (*C++ function*), 1364  
 system\_getHBInterval (*C++ function*), 1361  
 system\_getInputCurrent (*C++ function*), 1367  
 system\_getInputPowerBehavior (*C++ function*), 1371  
 system\_getInputPowerBehaviorConfig (*C++ function*), 1371  
 system\_getInputPowerSource (*C++ function*), 1371  
 system\_getInputVoltage (*C++ function*), 1367  
 system\_getLED (*C++ function*), 1362  
 system\_getLEDMaxBrightness (*C++ function*), 1362  
 system\_getLinkInterface (*C++ function*), 1373  
 system\_getMaximumTemperature (*C++ function*), 1366  
 system\_getMinimumTemperature (*C++ function*), 1366  
 system\_getModel (*C++ function*), 1364  
 system\_getModule (*C++ function*), 1360  
 system\_getModuleBaseAddress (*C++ function*), 1360  
 system\_getModuleHardwareOffset (*C++ function*), 1367  
 system\_getModuleSoftwareOffset (*C++ function*), 1368  
 system\_getName (*C++ function*), 1372  
 system\_getPowerLimit (*C++ function*), 1369  
 system\_getPowerLimitMax (*C++ function*), 1369  
 system\_getPowerLimitState (*C++ function*), 1370  
 system\_getProtocolFeatures (*C++ function*), 1374  
 system\_getRouter (*C++ function*), 1361  
 system\_getRouterAddressSetting (*C++ function*), 1368  
 system\_getSerialNumber (*C++ function*), 1365  
 system\_getTemperature (*C++ function*), 1366  
 system\_getUnregulatedCurrent (*C++ function*), 1370  
 system\_getUnregulatedVoltage (*C++ function*), 1370  
 system\_getUptime (*C++ function*), 1366  
 system\_getVersion (*C++ function*), 1363  
 system\_logEvents (*C++ function*), 1365  
 system\_reset (*C++ function*), 1365  
 system\_resetDeviceToFactoryDefaults (*C++ function*), 1373  
 system\_routeToMe (*C++ function*), 1369  
 system\_save (*C++ function*), 1365  
 system\_setBootSlot (*C++ function*), 1363  
 system\_setHBInterval (*C++ function*), 1361  
 system\_setInputPowerBehavior (*C++ function*), 1371  
 system\_setInputPowerBehaviorConfig (*C++ function*), 1372  
 system\_setLED (*C++ function*), 1362  
 system\_setLEDMaxBrightness (*C++ function*), 1362  
 system\_setLinkInterface (*C++ function*), 1373  
 system\_setModuleSoftwareOffset (*C++ function*), 1368  
 system\_setName (*C++ function*), 1373  
 system\_setPowerLimitMax (*C++ function*), 1369  
 system\_setRouter (*C++ function*), 1360  
 systemBootSlot (*C macro*), 926  
 systemBuild (*C macro*), 929  
 systemErrors (*C macro*), 929  
 systemErrors\_OutputPowerProtection\_Bit (*C macro*), 929

systemErrors\_ThermalProtection\_Bit (*C macro*), 929  
systemHardwareVersion (*C macro*), 929  
systemHBInterval (*C macro*), 926  
systemInputCurrent (*C macro*), 927  
systemInputPowerBehavior (*C macro*), 928  
systemInputPowerBehaviorConfig (*C macro*), 928  
systemInputPowerSource (*C macro*), 928  
systemInputVoltage (*C macro*), 927  
systemIPAddress (*C macro*), 927  
systemIPConfiguration (*C macro*), 927  
systemIPModeDefault (*C macro*), 927  
systemIPModeDHCP (*C macro*), 927  
systemIPModeStatic (*C macro*), 927  
systemIPStaticAddressSetting (*C macro*), 927  
systemLED (*C macro*), 926  
systemLEDMaxBrightness (*C macro*), 929  
systemLinkAuto (*C macro*), 929  
systemLinkInterface (*C macro*), 928  
systemLinkUSBA11 (*C macro*), 929  
systemLinkUSBControl (*C macro*), 929  
systemLinkUSBHub (*C macro*), 929  
systemLogEvents (*C macro*), 928  
systemMaxTemperature (*C macro*), 928  
systemMinTemperature (*C macro*), 928  
systemModel (*C macro*), 926  
systemModule (*C macro*), 926  
systemModuleBaseAddress (*C macro*), 927  
systemModuleHardwareOffset (*C macro*), 927  
systemModuleSoftwareOffset (*C macro*), 927  
systemName (*C macro*), 928  
systemNumberOfOptions (*C macro*), 929  
systemPowerLimit (*C macro*), 928  
systemPowerLimitMax (*C macro*), 928  
systemPowerLimitState (*C macro*), 928  
systemProtocolFeatures (*C macro*), 929  
systemProtocolFeatures\_pooledPackets\_Bit (*C macro*), 929  
systemReserved (*C macro*), 929  
systemReset (*C macro*), 927  
systemResetDeviceToFactoryDefaults (*C macro*), 928  
systemResetEntityToFactoryDefaults (*C macro*), 928  
systemRouter (*C macro*), 926  
systemRouterAddressSetting (*C macro*), 927  
systemRouteToMe (*C macro*), 927  
systemSave (*C macro*), 926  
systemSerialNumber (*C macro*), 926  
systemSleep (*C macro*), 926  
systemTemperature (*C macro*), 928  
systemUnregulatedCurrent (*C macro*), 928  
systemUnregulatedVoltage (*C macro*), 928  
systemUptime (*C macro*), 927  
systemVersion (*C macro*), 926

## T

TCPIP (*brainstem.link.Spec attribute*), 567  
Temperature (*class in brainstem.entity*), 675  
temperature\_getValue (*C++ function*), 1375  
temperature\_getValueMax (*C++ function*), 1375  
temperature\_getValueMin (*C++ function*), 1375  
temperatureMaximumMicroCelsius (*C macro*), 930  
temperatureMicroCelsius (*C macro*), 930  
temperatureMinimumMicroCelsius (*C macro*), 930  
temperatureNumberOfOptions (*C macro*), 930  
temperatureResetLoggedValues (*C macro*), 930  
Timer (*class in brainstem.entity*), 676  
timer\_getExpiration (*C++ function*), 1376  
timer\_getMode (*C++ function*), 1376  
timer\_setExpiration (*C++ function*), 1376

timer\_setMode (C++ function), 1377  
 timerExpiration (C macro), 931  
 timerMode (C macro), 931  
 timerModeRepeat (C macro), 931  
 timerModeSingle (C macro), 931  
 timerNumberOfOptions (C macro), 931

## U

UART (class in *brainstem.entity*), 677  
 uart\_getAvailableProtocols (C++ function), 1382  
 uart\_getBaudRate (C++ function), 1378  
 uart\_getCapableProtocols (C++ function), 1382  
 uart\_getDataBits (C++ function), 1381  
 uart\_getEnable (C++ function), 1377  
 uart\_getFlowControl (C++ function), 1382  
 uart\_getLinkChannel (C++ function), 1379  
 uart\_getParity (C++ function), 1380  
 uart\_getProtocol (C++ function), 1378  
 uart\_getStopBits (C++ function), 1380  
 uart\_setBaudRate (C++ function), 1377  
 uart\_setDataBits (C++ function), 1381  
 uart\_setEnable (C++ function), 1377  
 uart\_setFlowControl (C++ function), 1381  
 uart\_setLinkChannel (C++ function), 1379  
 uart\_setParity (C++ function), 1380  
 uart\_setProtocol (C++ function), 1378  
 uart\_setStopBits (C++ function), 1379  
 uartAvailableProtocols (C macro), 933  
 uartBaudRate (C macro), 931  
 uartBaudRate\_Auto\_Value (C macro), 931  
 uartCapableProtocols (C macro), 933  
 uartDataBits (C macro), 933  
 uartEnable (C macro), 931  
 uartFlowControl (C macro), 933  
 uartFlowControl\_DSR\_DTR\_Bit (C macro), 933  
 uartFlowControl\_RTS\_CTS\_Bit (C macro), 933  
 uartFlowControl\_XON\_XOFF\_Bit (C macro), 933  
 uartLinkChannel (C macro), 932  
 uartNumberOfOptions (C macro), 933  
 uartParity (C macro), 932  
 uartParity\_Even\_Value (C macro), 933  
 uartParity\_Mark\_Value (C macro), 933  
 uartParity\_None\_Value (C macro), 932  
 uartParity\_Odd\_Value (C macro), 933  
 uartParity\_Space\_Value (C macro), 933  
 uartProtocol (C macro), 931  
 uartProtocol\_Brainstem\_Value (C macro), 932  
 uartProtocol\_Extron\_Value (C macro), 932  
 uartProtocol\_ExtronInitiator\_Value (C macro), 932  
 uartProtocol\_ExtronResponder\_Value (C macro), 932  
 uartProtocol\_Loopback\_Value (C macro), 932  
 uartProtocol\_Reserved4\_Value (C macro), 932  
 uartProtocol\_Reserved5\_Value (C macro), 932  
 uartProtocol\_Undefined (C macro), 932  
 uartStopBits (C macro), 932  
 uartStopBits\_1\_Value (C macro), 932  
 uartStopBits\_1p5\_Value (C macro), 932  
 uartStopBits\_2\_Value (C macro), 932  
 uei (C++ struct), 955  
 uei::byteVal (C++ member), 956  
 uei::command (C++ member), 956  
 uei::intVal (C++ member), 956  
 uei::module (C++ member), 956  
 uei::option (C++ member), 956  
 uei::shortVal (C++ member), 956  
 uei::specifier (C++ member), 956  
 uei::type (C++ member), 956

ueiBYTES\_CONTINUE (*C macro*), 877  
ueiBYTES\_CONTINUE\_MASK (*C macro*), 877  
ueiOPTION\_ACK (*C macro*), 877  
ueiOPTION\_GET (*C macro*), 877  
ueiOPTION\_MASK (*C macro*), 877  
ueiOPTION\_OP\_MASK (*C macro*), 877  
ueiOPTION\_SET (*C macro*), 877  
ueiOPTION\_VAL (*C macro*), 877  
ueiREPLY\_ERROR (*C macro*), 876  
ueiREPLY\_STREAM (*C macro*), 877  
ueiSPECIFIER\_INDEX\_MASK (*C macro*), 876  
ueiSPECIFIER\_RETURN\_HOST (*C macro*), 876  
ueiSPECIFIER\_RETURN\_I2C (*C macro*), 876  
ueiSPECIFIER\_RETURN\_MASK (*C macro*), 876  
ueiSPECIFIER\_RETURN\_VM (*C macro*), 876  
unloadSlot () (*brainstem.entity.Store method*), 661  
unpack\_version () (*in module brainstem.version*), 577  
unpackDataObjectAttributes () (*brainstem.entity.PowerDelivery static method*), 646  
USB (*brainstem.link.Spec attribute*), 567  
USB (*class in brainstem.entity*), 682  
usb\_clearPortErrorStatus (*C++ function*), 1387  
usb\_getAltModeConfig (*C++ function*), 1397  
usb\_getCableFlip (*C++ function*), 1397  
usb\_getCC1Current (*C++ function*), 1394  
usb\_getCC1Enable (*C++ function*), 1393  
usb\_getCC1Voltage (*C++ function*), 1395  
usb\_getCC2Current (*C++ function*), 1395  
usb\_getCC2Enable (*C++ function*), 1394  
usb\_getCC2Voltage (*C++ function*), 1395  
usb\_getConnectMode (*C++ function*), 1393  
usb\_getDownstreamBoostMode (*C++ function*), 1392  
usb\_getDownstreamDataSpeed (*C++ function*), 1392  
usb\_getEnumerationDelay (*C++ function*), 1388  
usb\_getHubMode (*C++ function*), 1386  
usb\_getPortCurrent (*C++ function*), 1386  
usb\_getPortCurrentLimit (*C++ function*), 1389  
usb\_getPortError (*C++ function*), 1390  
usb\_getPortMode (*C++ function*), 1389  
usb\_getPortState (*C++ function*), 1390  
usb\_getPortVoltage (*C++ function*), 1386  
usb\_getSBU1Voltage (*C++ function*), 1398  
usb\_getSBU2Voltage (*C++ function*), 1398  
usb\_getSBUEnable (*C++ function*), 1396  
usb\_getUpstreamBoostMode (*C++ function*), 1391  
usb\_getUpstreamMode (*C++ function*), 1387  
usb\_getUpstreamState (*C++ function*), 1388  
usb\_setAltModeConfig (*C++ function*), 1397  
usb\_setCableFlip (*C++ function*), 1396  
usb\_setCC1Enable (*C++ function*), 1393  
usb\_setCC2Enable (*C++ function*), 1394  
usb\_setConnectMode (*C++ function*), 1392  
usb\_setDataDisable (*C++ function*), 1384  
usb\_setDataEnable (*C++ function*), 1383  
usb\_setDownstreamBoostMode (*C++ function*), 1391  
usb\_setEnumerationDelay (*C++ function*), 1388  
usb\_setHiSpeedDataDisable (*C++ function*), 1384  
usb\_setHiSpeedDataEnable (*C++ function*), 1384  
usb\_setHubMode (*C++ function*), 1387  
usb\_setPortCurrentLimit (*C++ function*), 1388  
usb\_setPortDisable (*C++ function*), 1383  
usb\_setPortEnable (*C++ function*), 1383  
usb\_setPortMode (*C++ function*), 1389  
usb\_setPowerDisable (*C++ function*), 1385  
usb\_setPowerEnable (*C++ function*), 1385  
usb\_setSBUEnable (*C++ function*), 1396  
usb\_setSuperSpeedDataDisable (*C++ function*), 1385  
usb\_setSuperSpeedDataEnable (*C++ function*), 1384  
usb\_setUpstreamBoostMode (*C++ function*), 1391



usb\_setUpstreamMode (*C++ function*), 1387  
 usbAltMode (*C macro*), 939  
 usbAltMode\_2LaneDP\_ComToHost\_wUSB3 (*C macro*), 939  
 usbAltMode\_2LaneDP\_ComToHost\_wUSB3\_Inverted (*C macro*), 939  
 usbAltMode\_2LaneDP\_MuxToHost\_wUSB3 (*C macro*), 939  
 usbAltMode\_2LaneDP\_MuxToHost\_wUSB3\_Inverted (*C macro*), 939  
 usbAltMode\_4LaneDP\_ComToHost (*C macro*), 939  
 usbAltMode\_4LaneDP\_MuxToHost (*C macro*), 939  
 usbAltMode\_disabled (*C macro*), 939  
 usbAltMode\_normal (*C macro*), 939  
 usbAltMode\_USB4\_ComToHost (*C macro*), 939  
 usbAltMode\_USB4\_ComToHost\_Inverted (*C macro*), 939  
 usbAltMode\_USB4\_MuxToHost (*C macro*), 939  
 usbAltMode\_USB4\_MuxToHost\_Inverted (*C macro*), 939  
 usbAutoConnect (*C macro*), 938  
 usbBoostMode\_0 (*C macro*), 935  
 usbBoostMode\_12 (*C macro*), 936  
 usbBoostMode\_4 (*C macro*), 935  
 usbBoostMode\_8 (*C macro*), 936  
 usbCableFlip (*C macro*), 939  
 usbCC1Current (*C macro*), 938  
 usbCC1Enable (*C macro*), 938  
 usbCC1Voltage (*C macro*), 938  
 usbCC2Current (*C macro*), 938  
 usbCC2Enable (*C macro*), 938  
 usbCC2Voltage (*C macro*), 938  
 usbConnectMode (*C macro*), 938  
 USBCSwitch (*class in brainstem.stem*), 544  
 USBCSwitchPro (*class in brainstem.stem*), 543  
 usbDataDisable (*C macro*), 934  
 usbDataEnable (*C macro*), 934  
 usbDownstreamBoostMode (*C macro*), 935  
 usbDownstreamDataSpeed (*C macro*), 937  
 usbDownstreamDataSpeed\_hs (*C macro*), 938  
 usbDownstreamDataSpeed\_ls (*C macro*), 938  
 usbDownstreamDataSpeed\_na (*C macro*), 937  
 usbDownstreamDataSpeed\_ss (*C macro*), 938  
 usbHiSpeedDataDisable (*C macro*), 937  
 usbHiSpeedDataEnable (*C macro*), 937  
 USBHub2x4 (*class in brainstem.stem*), 541  
 USBHub2x4.Hub (*class in brainstem.stem*), 542  
 USBHub3c (*class in brainstem.stem*), 539  
 USBHub3c.Hub (*class in brainstem.stem*), 539  
 USBHub3p (*class in brainstem.stem*), 540  
 USBHub3p.Hub (*class in brainstem.stem*), 541  
 usbHubEnumerationDelay (*C macro*), 935  
 usbHubMode (*C macro*), 934  
 usbManualConnect (*C macro*), 938  
 usbNumberOfOptions (*C macro*), 940  
 usbPortClearErrorStatus (*C macro*), 934  
 usbPortCurrent (*C macro*), 934  
 usbPortCurrentLimit (*C macro*), 935  
 usbPortDisable (*C macro*), 934  
 usbPortEnable (*C macro*), 934  
 usbPortError (*C macro*), 938  
 usbPortMode (*C macro*), 936  
 usbPortMode\_AutoConnectEnable (*C macro*), 936  
 usbPortMode\_CC1Enable (*C macro*), 937  
 usbPortMode\_CC1InjectEnable (*C macro*), 937  
 usbPortMode\_CC2Enable (*C macro*), 937  
 usbPortMode\_CC2InjectEnable (*C macro*), 937  
 usbPortMode\_CCFlipEnable (*C macro*), 937  
 usbPortMode\_cdp (*C macro*), 936  
 usbPortMode\_charging (*C macro*), 936  
 usbPortMode\_passive (*C macro*), 936  
 usbPortMode\_SBUEnable (*C macro*), 937  
 usbPortMode\_SBUFlipEnable (*C macro*), 937  
 usbPortMode\_sdp (*C macro*), 936

usbPortMode\_SSFlipEnable (*C macro*), 937  
usbPortMode\_SuperSpeed1Enable (*C macro*), 936  
usbPortMode\_SuperSpeed2Enable (*C macro*), 936  
usbPortMode\_USB2AEnable (*C macro*), 936  
usbPortMode\_USB2BEnable (*C macro*), 936  
usbPortMode\_USB2BoostEnable (*C macro*), 936  
usbPortMode\_USB2FlipEnable (*C macro*), 937  
usbPortMode\_USB3BoostEnable (*C macro*), 936  
usbPortMode\_VBusEnable (*C macro*), 936  
usbPortState (*C macro*), 938  
usbPortStateCC1 (*C macro*), 720  
usbPortStateCC1Detect (*C macro*), 721  
usbPortStateCC1Inject (*C macro*), 720  
usbPortStateCC1LogicState (*C macro*), 721  
usbPortStateCC2 (*C macro*), 720  
usbPortStateCC2Detect (*C macro*), 721  
usbPortStateCC2Inject (*C macro*), 720  
usbPortStateCC2LogicState (*C macro*), 721  
usbPortStateCCFlip (*C macro*), 720  
usbPortStateConnectionEstablished (*C macro*), 720  
usbPortStateSBU (*C macro*), 720  
usbPortStateSBUFlip (*C macro*), 720  
usbPortStateSS1 (*C macro*), 720  
usbPortStateSS2 (*C macro*), 720  
usbPortStateSSFlip (*C macro*), 720  
usbPortStateUSB2A (*C macro*), 720  
usbPortStateUSB2B (*C macro*), 720  
usbPortStateUSB2Flip (*C macro*), 720  
usbPortStateVBUS (*C macro*), 720  
usbPortVoltage (*C macro*), 934  
usbPowerDisable (*C macro*), 934  
usbPowerEnable (*C macro*), 934  
usbSBU1Voltage (*C macro*), 939  
usbSBU2Voltage (*C macro*), 940  
usbSBUEnable (*C macro*), 938  
USBStem (*class in brainstem.stem*), 557  
usbSuperSpeedDataDisable (*C macro*), 937  
usbSuperSpeedDataEnable (*C macro*), 937  
USBSysSystem (*class in brainstem.entity*), 695  
usbsystem\_getDataHSMaxDataRate (*C++ function*), 1406  
usbsystem\_getDataRoleBehavior (*C++ function*), 1403  
usbsystem\_getDataRoleBehaviorConfig (*C++ function*), 1403  
usbsystem\_getDataRoleList (*C++ function*), 1399  
usbsystem\_getDataSSMaxDataRate (*C++ function*), 1407  
usbsystem\_getEnabledList (*C++ function*), 1400  
usbsystem\_getEnumerationDelay (*C++ function*), 1399  
usbsystem\_getModeList (*C++ function*), 1400  
usbsystem\_getOverride (*C++ function*), 1406  
usbsystem\_getPowerBehavior (*C++ function*), 1401  
usbsystem\_getPowerBehaviorConfig (*C++ function*), 1402  
usbsystem\_getSelectorMode (*C++ function*), 1404  
usbsystem\_getStateList (*C++ function*), 1401  
usbsystem\_getUpstream (*C++ function*), 1398  
usbsystem\_getUpstreamHS (*C++ function*), 1405  
usbsystem\_getUpstreamSS (*C++ function*), 1405  
usbsystem\_setDataHSMaxDataRate (*C++ function*), 1406  
usbsystem\_setDataRoleBehavior (*C++ function*), 1403  
usbsystem\_setDataRoleBehaviorConfig (*C++ function*), 1404  
usbsystem\_setDataSSMaxDataRate (*C++ function*), 1407  
usbsystem\_setEnabledList (*C++ function*), 1400  
usbsystem\_setEnumerationDelay (*C++ function*), 1399  
usbsystem\_setModeList (*C++ function*), 1401  
usbsystem\_setOverride (*C++ function*), 1406  
usbsystem\_setPowerBehavior (*C++ function*), 1402  
usbsystem\_setPowerBehaviorConfig (*C++ function*), 1402  
usbsystem\_setSelectorMode (*C++ function*), 1404  
usbsystem\_setUpstream (*C++ function*), 1399  
usbsystem\_setUpstreamHS (*C++ function*), 1405



usbsystem\_setUpstreamSS (*C++ function*), 1405  
 usbsystemDataBehavior (*C macro*), 941  
 usbsystemDataBehavior\_FollowPD (*C macro*), 941  
 usbsystemDataBehavior\_HardCoded (*C macro*), 941  
 usbsystemDataBehavior\_LastConnected (*C macro*), 941  
 usbsystemDataBehavior\_PortPriority (*C macro*), 941  
 usbsystemDataBehaviorConfig (*C macro*), 941  
 usbsystemDataHSMaxDataRate (*C macro*), 942  
 usbsystemDataHSMaxDataRate\_FullSpeed (*C macro*), 942  
 usbsystemDataHSMaxDataRate\_HighSpeed (*C macro*), 942  
 usbsystemDataHSMaxDataRate\_LowSpeed (*C macro*), 942  
 usbsystemDataHSMaxDataRate\_None (*C macro*), 942  
 usbsystemDataRoleList (*C macro*), 940  
 usbsystemDataSSMaxDataRate (*C macro*), 942  
 usbsystemDataSSMaxDataRate\_None (*C macro*), 942  
 usbsystemDataSSMaxDataRate\_SuperSpeed (*C macro*), 942  
 usbsystemDataSSMaxDataRate\_SuperSpeedPlus (*C macro*), 942  
 usbsystemEnabledList (*C macro*), 940  
 usbsystemEnumerationDelay (*C macro*), 940  
 usbsystemModeList (*C macro*), 940  
 usbsystemNumberOfOptions (*C macro*), 942  
 usbsystemOverride (*C macro*), 942  
 usbsystemOverride\_AutoVbusToggle\_Bit (*C macro*), 942  
 usbsystemOverride\_VbusDetect\_Bit (*C macro*), 942  
 usbsystemPowerBehavior (*C macro*), 941  
 usbsystemPowerBehavior\_Balancing (*C macro*), 941  
 usbsystemPowerBehavior\_Even (*C macro*), 941  
 usbsystemPowerBehaviorConfig (*C macro*), 941  
 usbsystemPowerDataMode (*C macro*), 940  
 usbsystemResetEntityToFactoryDefaults (*C macro*), 941  
 usbsystemSelectorMode (*C macro*), 941  
 usbsystemSelectorMode\_Disabled (*C macro*), 941  
 usbsystemSelectorMode\_Mux (*C macro*), 941  
 usbsystemSelectorMode\_Upstream (*C macro*), 941  
 usbsystemStateList (*C macro*), 940  
 usbsystemUpstreamHSPort (*C macro*), 942  
 usbsystemUpstreamPort (*C macro*), 940  
 usbsystemUpstreamPortNone (*C macro*), 940  
 usbsystemUpstreamSSPort (*C macro*), 942  
 usbUpstreamBoostMode (*C macro*), 935  
 usbUpstreamMode (*C macro*), 934  
 usbUpstreamModeAuto (*C macro*), 935  
 usbUpstreamModeDefault (*C macro*), 935  
 usbUpstreamModeNone (*C macro*), 935  
 usbUpstreamModePort0 (*C macro*), 935  
 usbUpstreamModePort1 (*C macro*), 935  
 usbUpstreamState (*C macro*), 935  
 usbUpstreamStateNone (*C macro*), 935  
 usbUpstreamStatePort0 (*C macro*), 935  
 usbUpstreamStatePort1 (*C macro*), 935  
 userconfigLoadEntityFromStore (*C macro*), 943  
 userconfigNumberOfOptions (*C macro*), 943  
 userconfigResetEntityToFactoryDefaults (*C macro*), 943  
 userconfigSaveEntityToStore (*C macro*), 943

## V

val\_HB\_H2S\_DOWN (*C macro*), 890  
 val\_HB\_H2S\_UP (*C macro*), 890  
 val\_HB\_M2R\_DOWN (*C macro*), 890  
 val\_HB\_M2R\_UP (*C macro*), 890  
 val\_HB\_S2H\_DOWN (*C macro*), 890  
 val\_HB\_S2H\_UP (*C macro*), 890  
 VALIDPACKET (*C++ member*), 874  
 value (*brainstem.link.StreamStatusEntry property*), 568  
 value (*brainstem.result.Result property*), 575  
 values() (*brainstem.result.Result method*), 575  
 version\_GetMajor (*C++ function*), 1417

`version_GetMinor` (*C++ function*), 1417  
`version_GetPatch` (*C++ function*), 1417  
`version_IsAtLeast` (*C++ function*), 1418  
`version_IsAtLeastCompare` (*C++ function*), 1418  
`version_IsLegacyFormat` (*C++ function*), 1417  
`version_Pack` (*C++ function*), 1418  
`version_ParseMajor` (*C++ function*), 1417  
`version_ParseMinor` (*C++ function*), 1417  
`version_ParsePatch` (*C++ function*), 1417

## W

`write()` (*brainstem.entity.I2C method*), 600